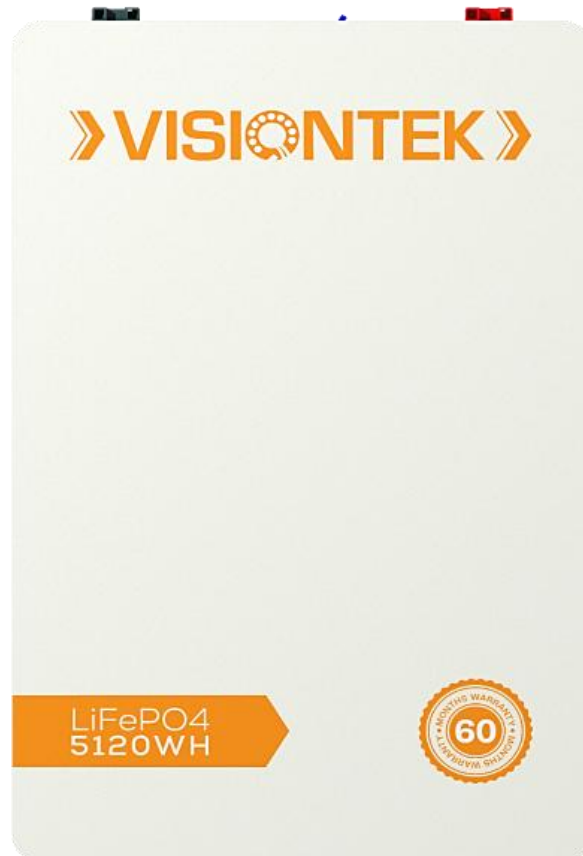


51.2V 100Ah Battery



Dear Customer,

Thank you for choosing the **Visiontek LFP Inverter Battery**. We truly appreciate your trust in our technology and your commitment to reliable, long-lasting power solutions.

Welcome to the Visiontek family—and thank you for choosing innovation that lasts ever. Your satisfaction is our top priority.

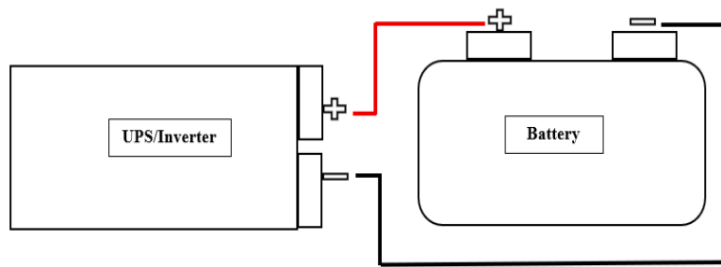
Introduction

The **Visiontek LiFePO₄ Inverter Battery** is engineered with advanced **Lithium Ferro Phosphate (LFP)** technology to deliver reliable, long-lasting, and safe power for all your home. Designed for superior performance and durability, it offers **faster charging, higher efficiency and longer lifespan** compared to traditional lead-acid batteries. With zero maintenance and consistent output, Visiontek LiFePO₄ batteries ensure **uninterrupted power** and peace of mind for years to come.

Specifications

Model	51.2V 100Ah
Battery Data	
Cell Chemistry	LiFePO ₄
Cell Type	Prismatic
Nominal Battery Voltage (V _{DC})	51.2V
Battery Configuration	16S1P
Operating Voltage (V)	45 – 57.6
Life Cycles (till 80% SOH)	>3500
Standard Charging Current (A)	50
Standard Discharging Current (A)	50
Maximum Discharge Current (A)	80
Cont. Discharge Current (A)	80
Charging Temperature (°C)	0 To 45
Discharging Temperature (°C)	-10 To 60
Storage Temperature (°C)	25 To 45
Ingress Protection class	IP20
Battery Dimensions (mm)	625 X 395 X 190
Battery Weight	50 Kg
Communication	
Communication Bus	RS485
Compatibility	Inverters upto 5000VA
Other Features	
Battery Poles	Single pole 100A X M6 Terminal Block
Protections	Cell Over voltage, Under Voltage, Low Temperature, High Temperature, Short Circuit, Reverse Polarity, Over Current Protection.
Additional Protections	125A Circuit Breaker
SOC Indication	NA
Data monitoring	Through Bluetooth

Electrical Connections



- Please follow the above line diagram while connecting the battery to UPS/Inverter
- Ensure that the mains and load are disconnected
- Connecting terminals in reverse will damage the UPS and as well as the battery
- Do not connect both battery (+) and battery (-) together which leads to short circuit of the battery

Selection of modes on UPS/inverter

- Set Manual/Normal mode
- Select Eco/UPS mode based on the loads
- Set the below mode as per the availability:
 1. Li ion
 2. LC
 3. SMF

Note: Please select the above modes as per the availability. If Li ion is available do not consider the other modes, if it is not available select the next priority mode (LC or SMF).

- Set HC mode if current is <50A, If HC is not available choose MC/NC (<50A)



Charge Test:

- Make sure there are no loose contacts in the entire circuit.
- Turn on the mains supply
- Charging LED blinks/remains ON, Mains LED blinks/remains ON in the UPS/Inverter
- Note down the charge voltage
- Note down maximum AC and DC current while charging
- Continue to run for one full charge cycle

Discharge Test:

- Turn off the mains supply and turn on the load
- Note down the discharge voltage value
- Note down the maximum AC and DC load current.

Compatible mode settings with different UPS/Inverters

UPS/ Inverter	Model No	Power rating (VA)	Battery voltage (VDC)	Modes to be selected
Okaya	ATSW 6650 48V	6100	48	Switch must be set to INV/UPS UPS High
Microtek	SINEWAVE MULTI INVERTER	3600	48	
Microtek	UPS JM SW 4000+	3700	48	SMF 20A STD
Luminous	Cruze 3.5KVA	3500	48	REG High
Microtek	SINEWAVE MULTI INVERTER	3700	48	SMF 20A STD
Luminous	LF5000	5000	48	Switch must be set to INV/UPS High
Star	Solar 5KVA	5000	48	AC MCB on Battery MCB on.
Star	Solar	3000	48	Inverter ON

Note: Before installation, customer must reach out our engineer to set the parameters.

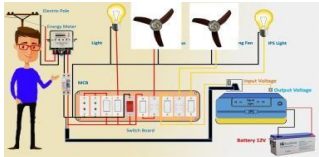
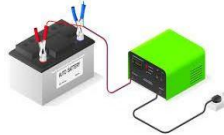
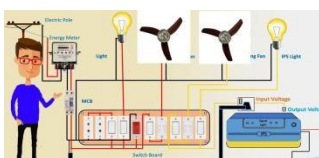
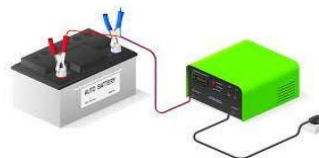
Do's

- Ensure the battery is installed in a dry place where there is no direct contact of sunlight and water.
- Fix the lugs tightly using an appropriate tool (Screw gun/T-Spanner (10)/Torque Wrench).
- Ensure the UPS/Inverter is compatible with battery.
- Read the user manual carefully.
- Take necessary precautions like wearing hand gloves, safety shoes while giving electrical connections.
- Charge the battery frequently.

Don'ts

- Don't connect battery if it is not compatible with the UPS/Inverter
- Don't install the battery where there is direct exposure of sunlight and water
- Avoid reversing the battery terminal connections.
- Don't select the tubular, flat plate mode on inverter side.
- Avoid direct contact of touching AC supply, while battery is in operation
- Don't use a damaged battery, a damaged UPS/Inverter
- Don't store a deep discharged battery not more than for 72 hours without charging
- Don't overload

Troubleshooting

Error	Description	Solution	Image
Battery goes to 0V after connecting it to UPS	Short circuit	1. Disconnect the inverter/UPS and wait until the capacitors of Inverter/UPS gets discharged. 2. Connect +VE terminal of Battery to +VE terminal of inverter/UPS and –VE terminal of battery to –VE terminal of inverter/UPS.	
Backup is not up to the mark	Intended backup time is not being achieved	1. Wait until the battery gets fully charged. 2. Check whether there are any loose contacts.	
Overload	UPS/Inverter displaying overload	1. Check for the load ratings of the UPS/Inverter. 2. Check for max discharge current of the battery	
Low battery	Inverter is displaying low battery indication	Charge the battery	

Note: All images are for reference purpose only. Original product may vary.

Warranty card

Model

S.no

Customer information

Name:

Mobile:

Invoice no:

Date of purchase:

Vendor information:

Name:

Signature & Stamp:

Mobile:

Date of purchase:

Warranty

- We provide standard warranty of 5 years from the date of purchase. Keep your physical warranty card and invoice safe.
- Warranty is applicable for the goods purchased from the authorised dealer also only for the goods having manufacturing defects.
- In case of replacement remaining warranty will be transferred to the replaced goods. No new warranty will be issued.

Warranty Exception clause

Any of the following situations will not be covered by our warranty policy:

- Damage incurred by nature/customer/any third party, Water ingress cases.
- Damage caused by faulty electrical systems, improper handling, servicing by unauthorized dealers/technicians, wilful abuse, destruction by fire, collision.
- Improper usage /additional fitment than specified by the manufacturer. Usage beyond the specification range.
- Breakage of container and cover found to have additives, dopes or anything other than battery degradation.
- Defective parts must be returned to company within 7 working days because they are the property of company.
- Removal, obliteration (or) alteration of original barcode/QR code sticker.
- In case of any battery model being discontinued by the company, company reserves the right to settle warranty with alternate/ equivalent model battery.
- Logistics cost for movement of complaint batteries from Client/Dealer to Visiontek service Centre or to plant under Client Scope and faulty batteries need to reach concerned location without any abuse/damaged conditions.
- Same Logistics for Movement of repaired or replacement batteries from Visiontek Service Centre or Plant to client/Dealer Location under Visiontek Scope.

Integration report

		Battery Installation Data	
S. No	Description	Data	
1.	Date of installation		
2.	Place of installation		
3.	Customer name		
4.	Battery Model		
5.	Battery serial number		
6.	Inverter/UPS brand		
7.	Inverter/UPS Model		
8.	Inverter / UPS Capacity		
9.	Type of load		
10.	Installer Name		
11.	Installer Contact Number		
12.	Warranty Start Date		
13.	Warranty End date		
14.	Charge Voltage (V)		
15.	Discharge Voltage (V)		
16.	Max. current while charging (A)	AC:	DC:
17.	Max. current while discharging (A)	AC load:	DC:
16.	Send Installation Front view photos	☐ Tick the box after sending	
17.	Send Installation Back view photos	☐ Tick the box after sending	
18.	Remarks / Observations		

Installer Signature

Dealer signature/stamp

Customer Signature

- Integration report must be filled after the installation
- Fill all the required details in the integration report and attach the images

Share the filled integration report to WhatsApp: **9966057222** Mail: care@visiontek.co.in



User Manual

Contact Address:

LINKWELL TELESYSTEMS PVT.LTD

B-45&46; Electronic Complex, Kushaiguda,
Hyderabad – 500062.

Telangana, INDIA.

Ph: 040-66388235

For Customer Care Contact:

Ph: 9966057222

Mail: care@visiontek.co.in

Regd Office:

LINKWELL TELESYSTEMS PVT LTD

1-11-252/1B, Behind Shopper's Stop

Begumpet, Hyderabad-500016.

Telangana, India.

Ph: 040-66388000

CIN No: U26205TG1993PTC015875

www.visiontek.co.in

55101521-0352