





powergui

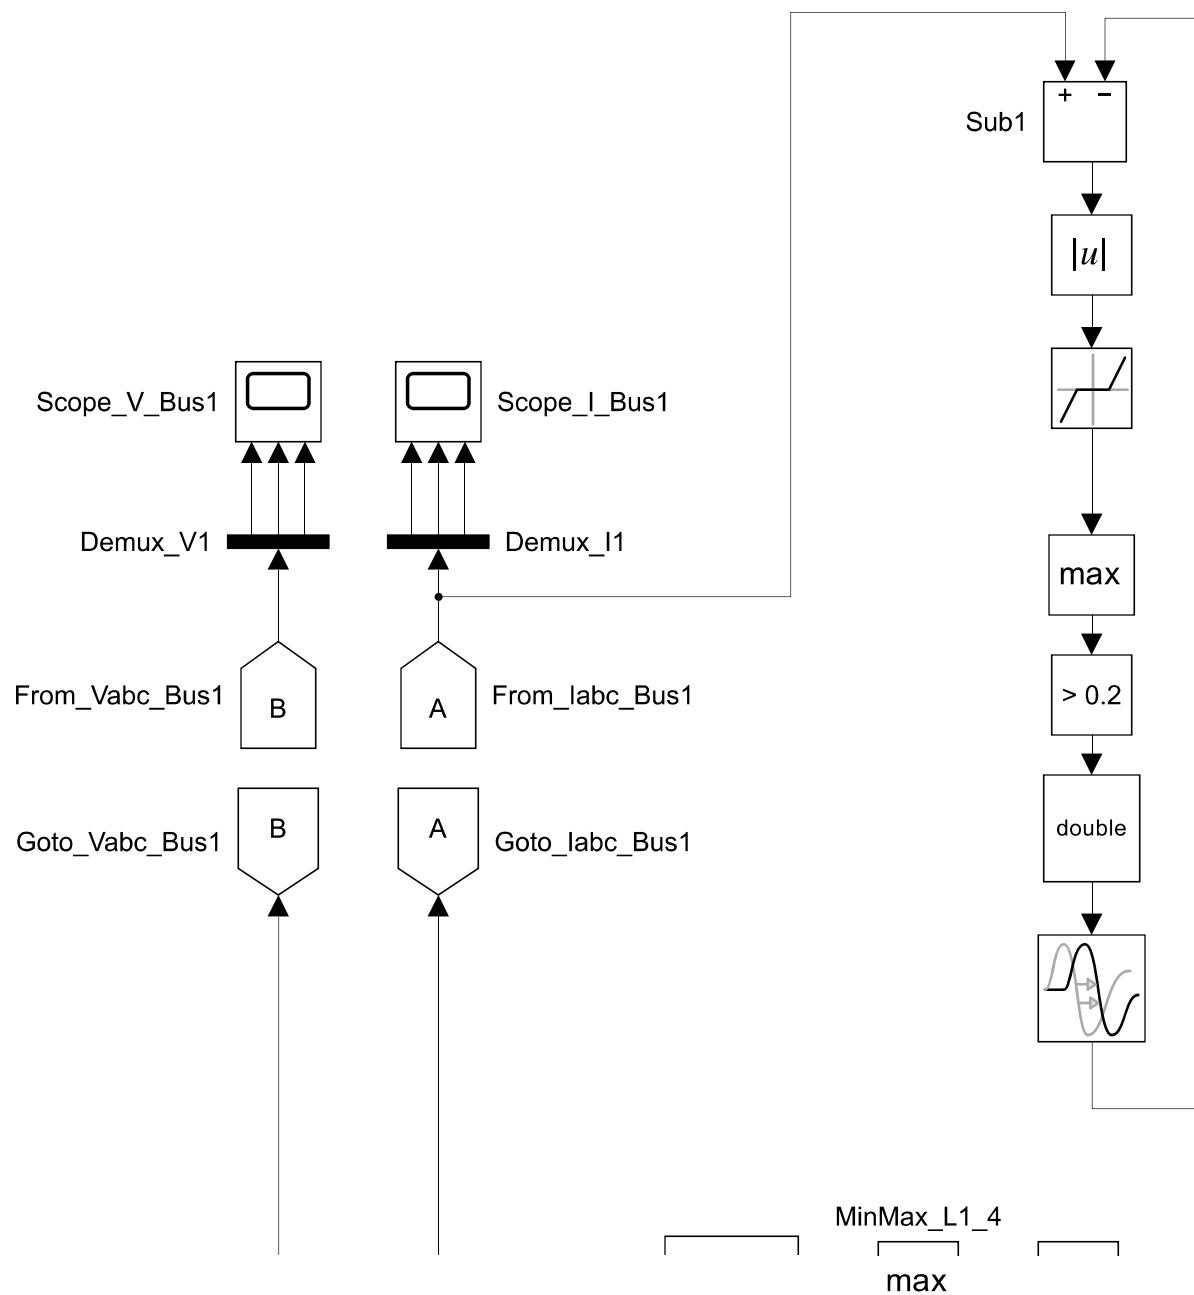

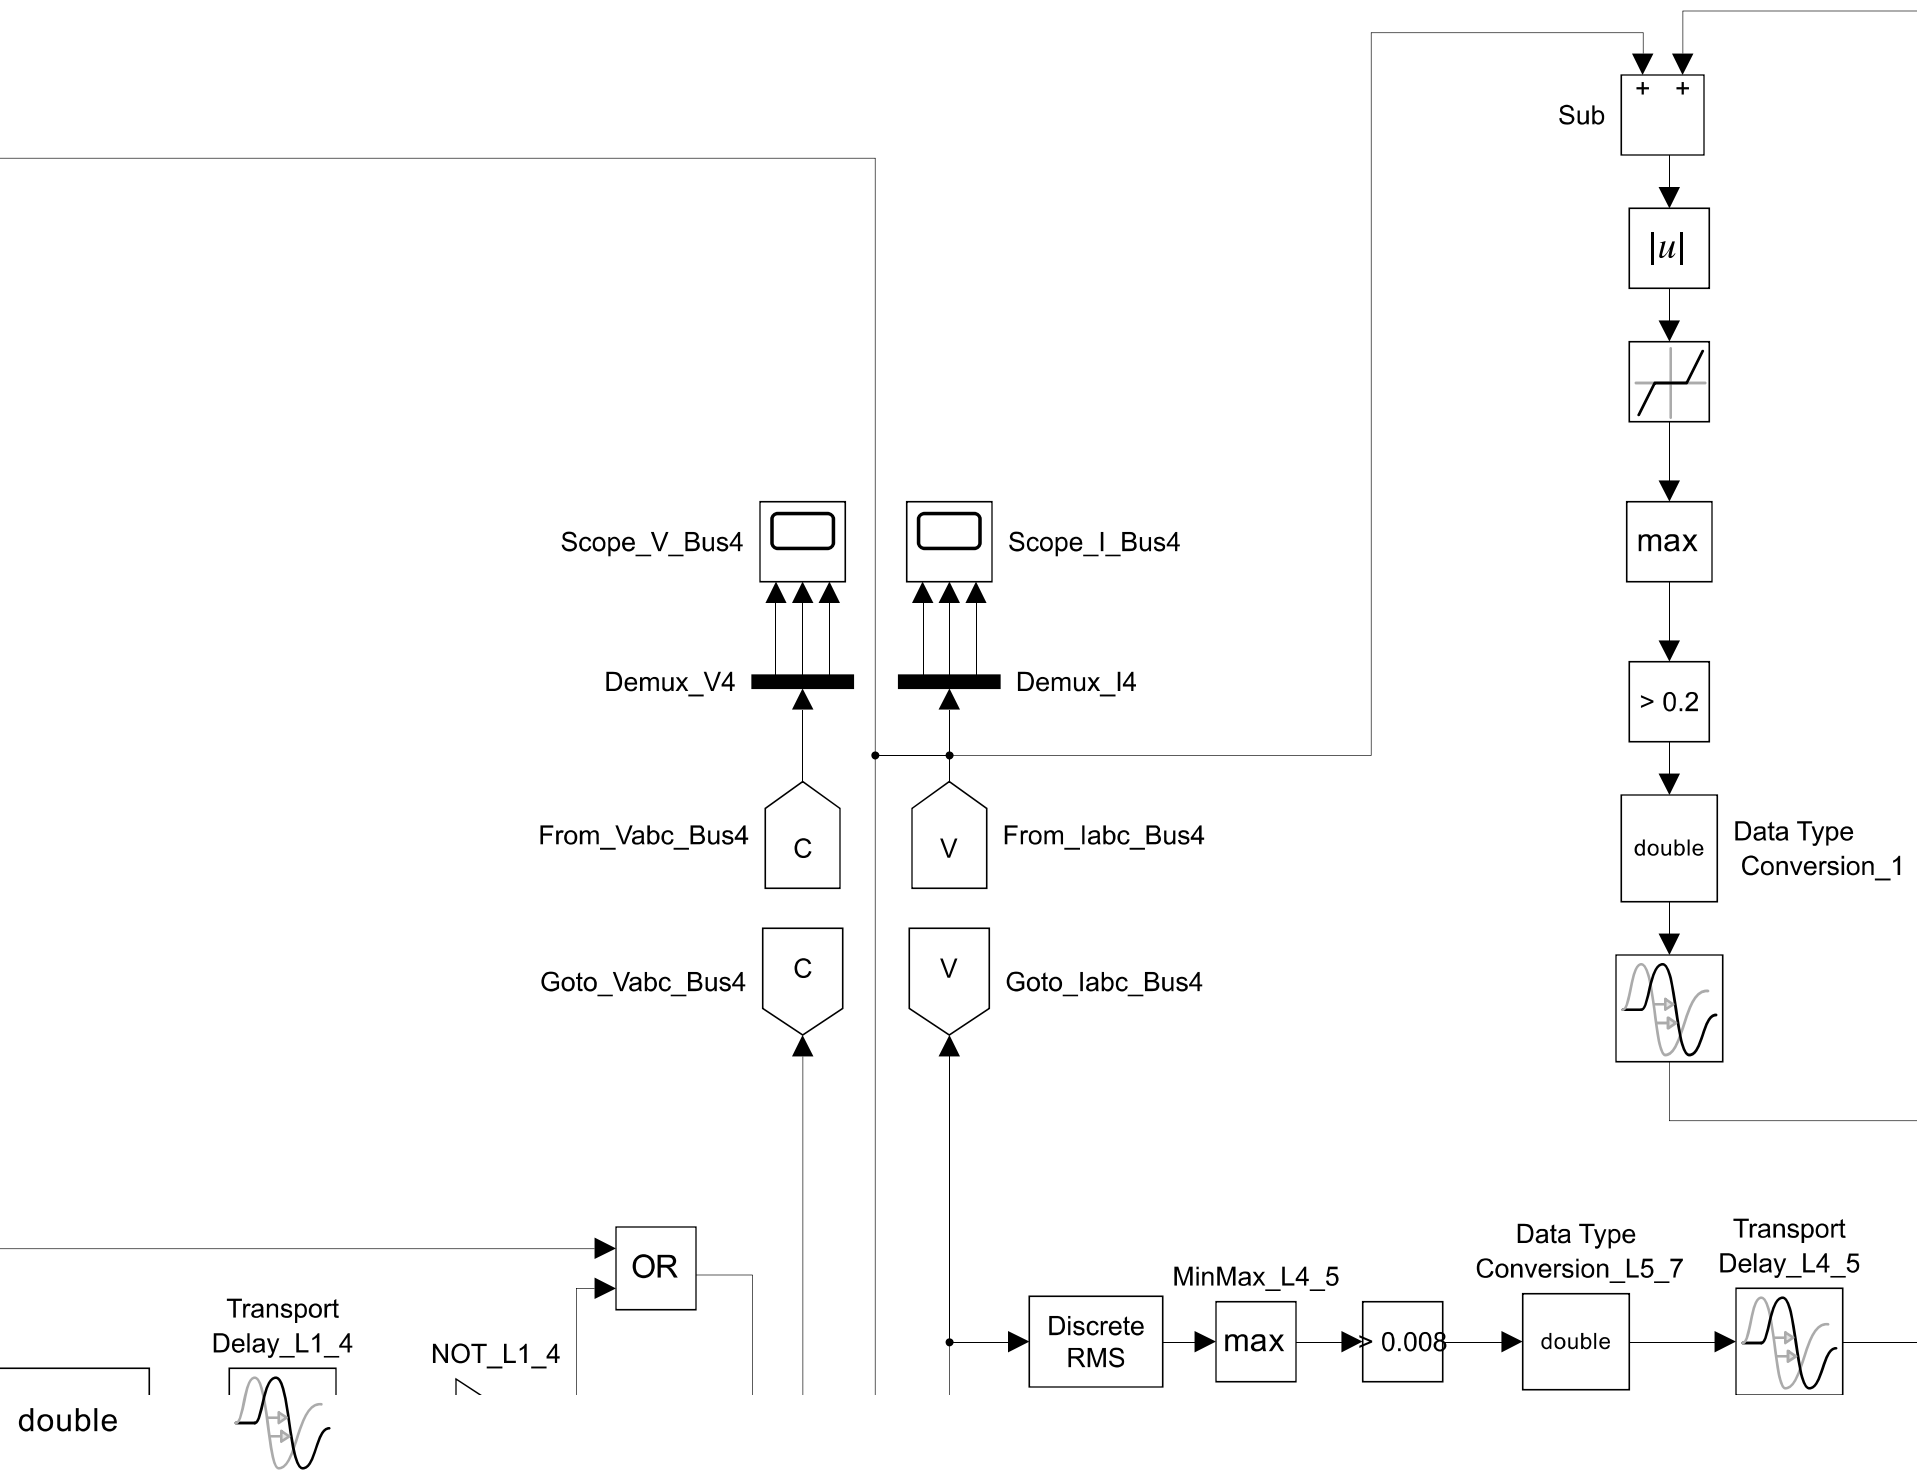

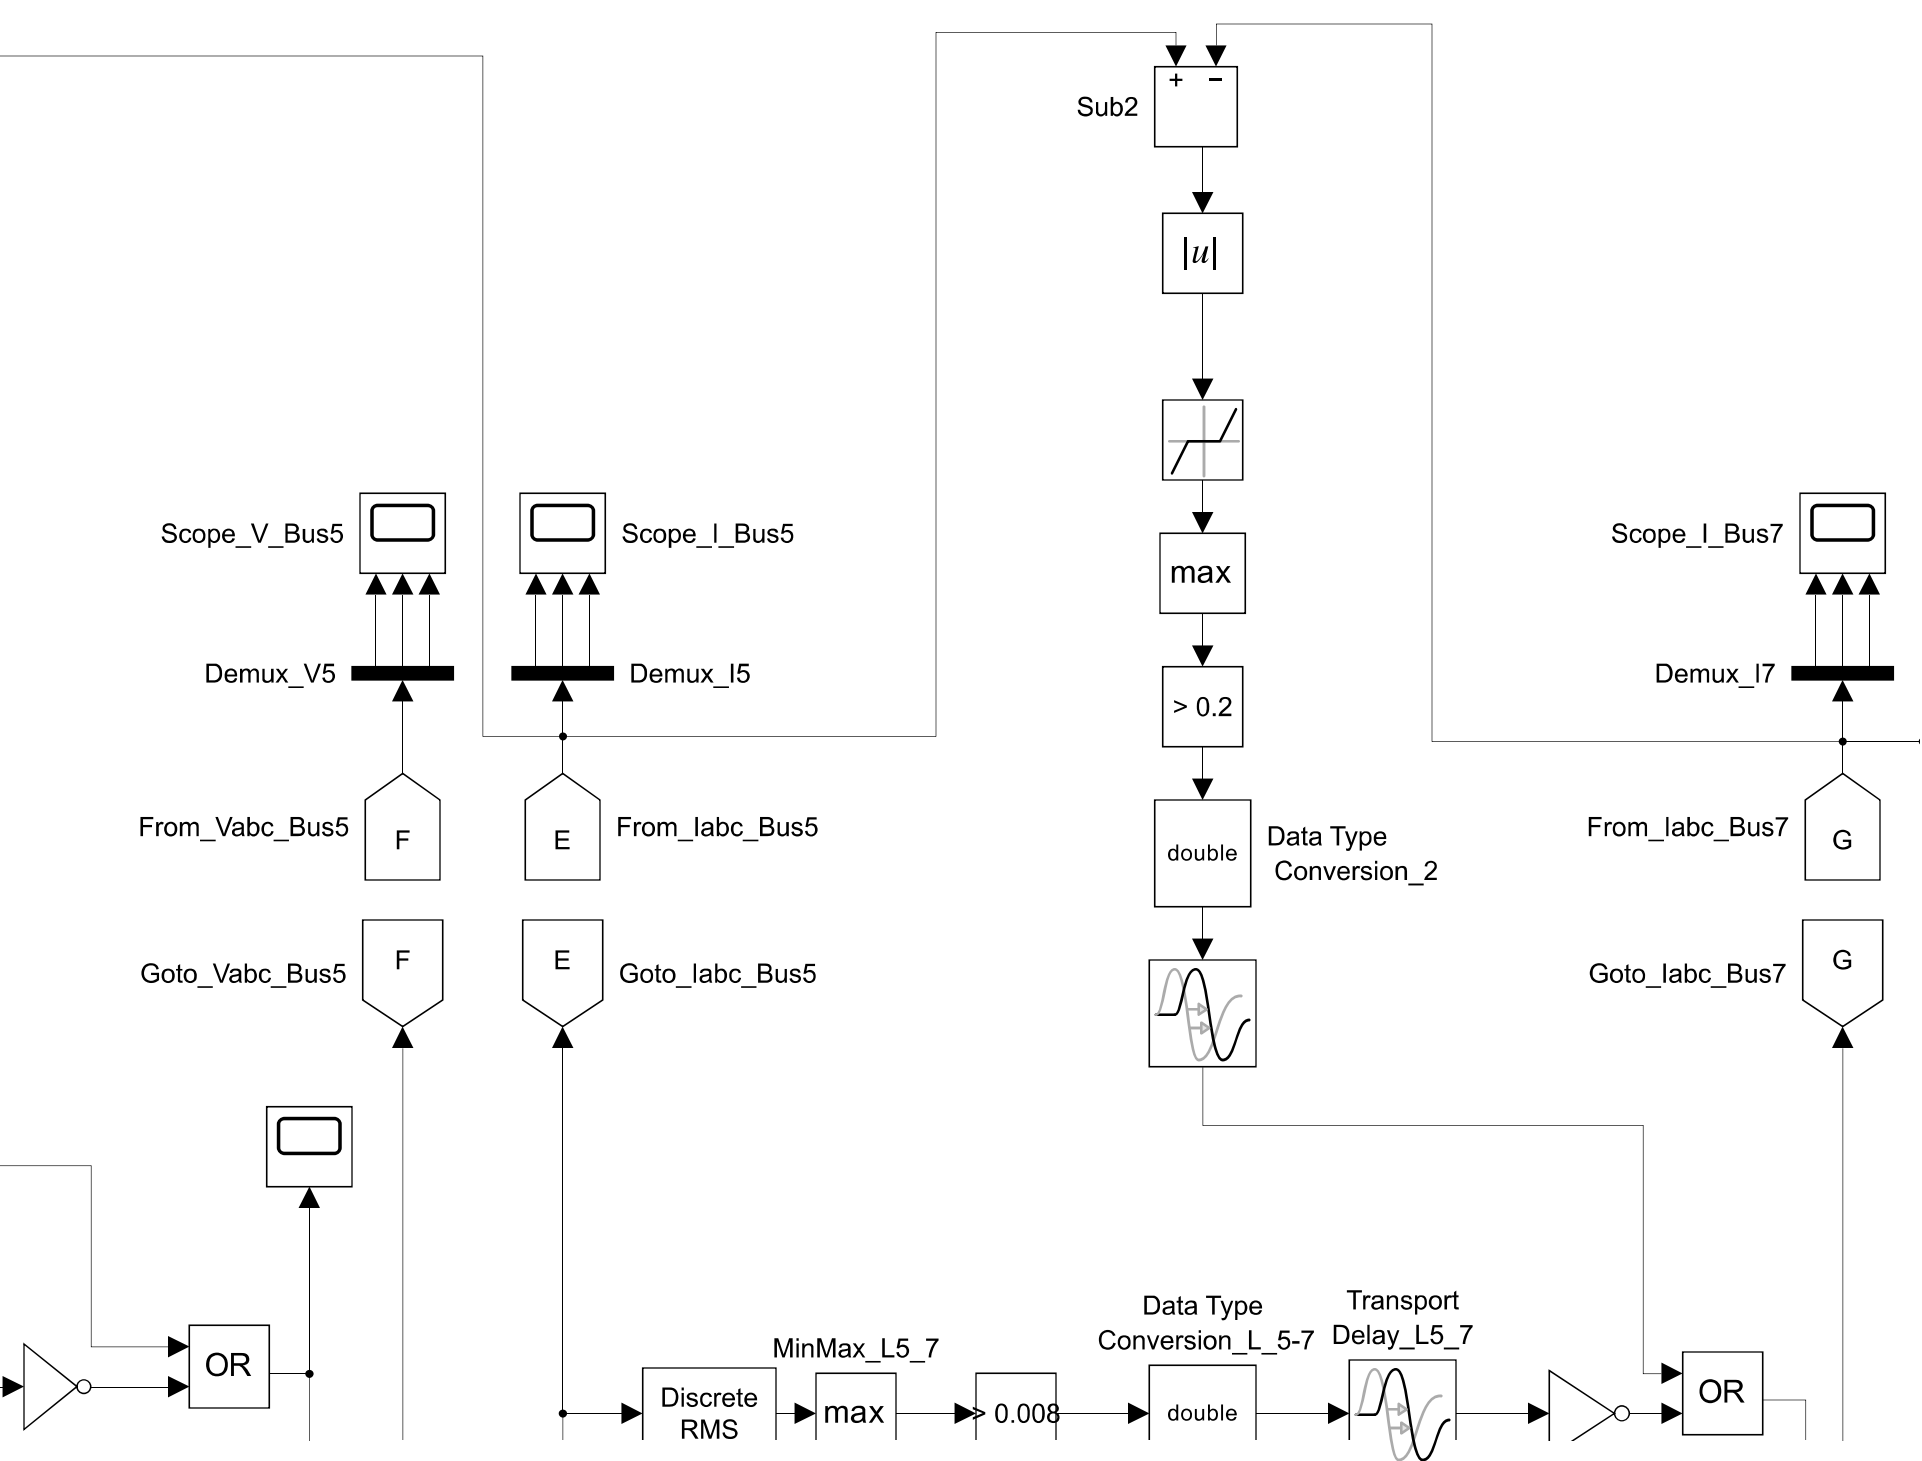


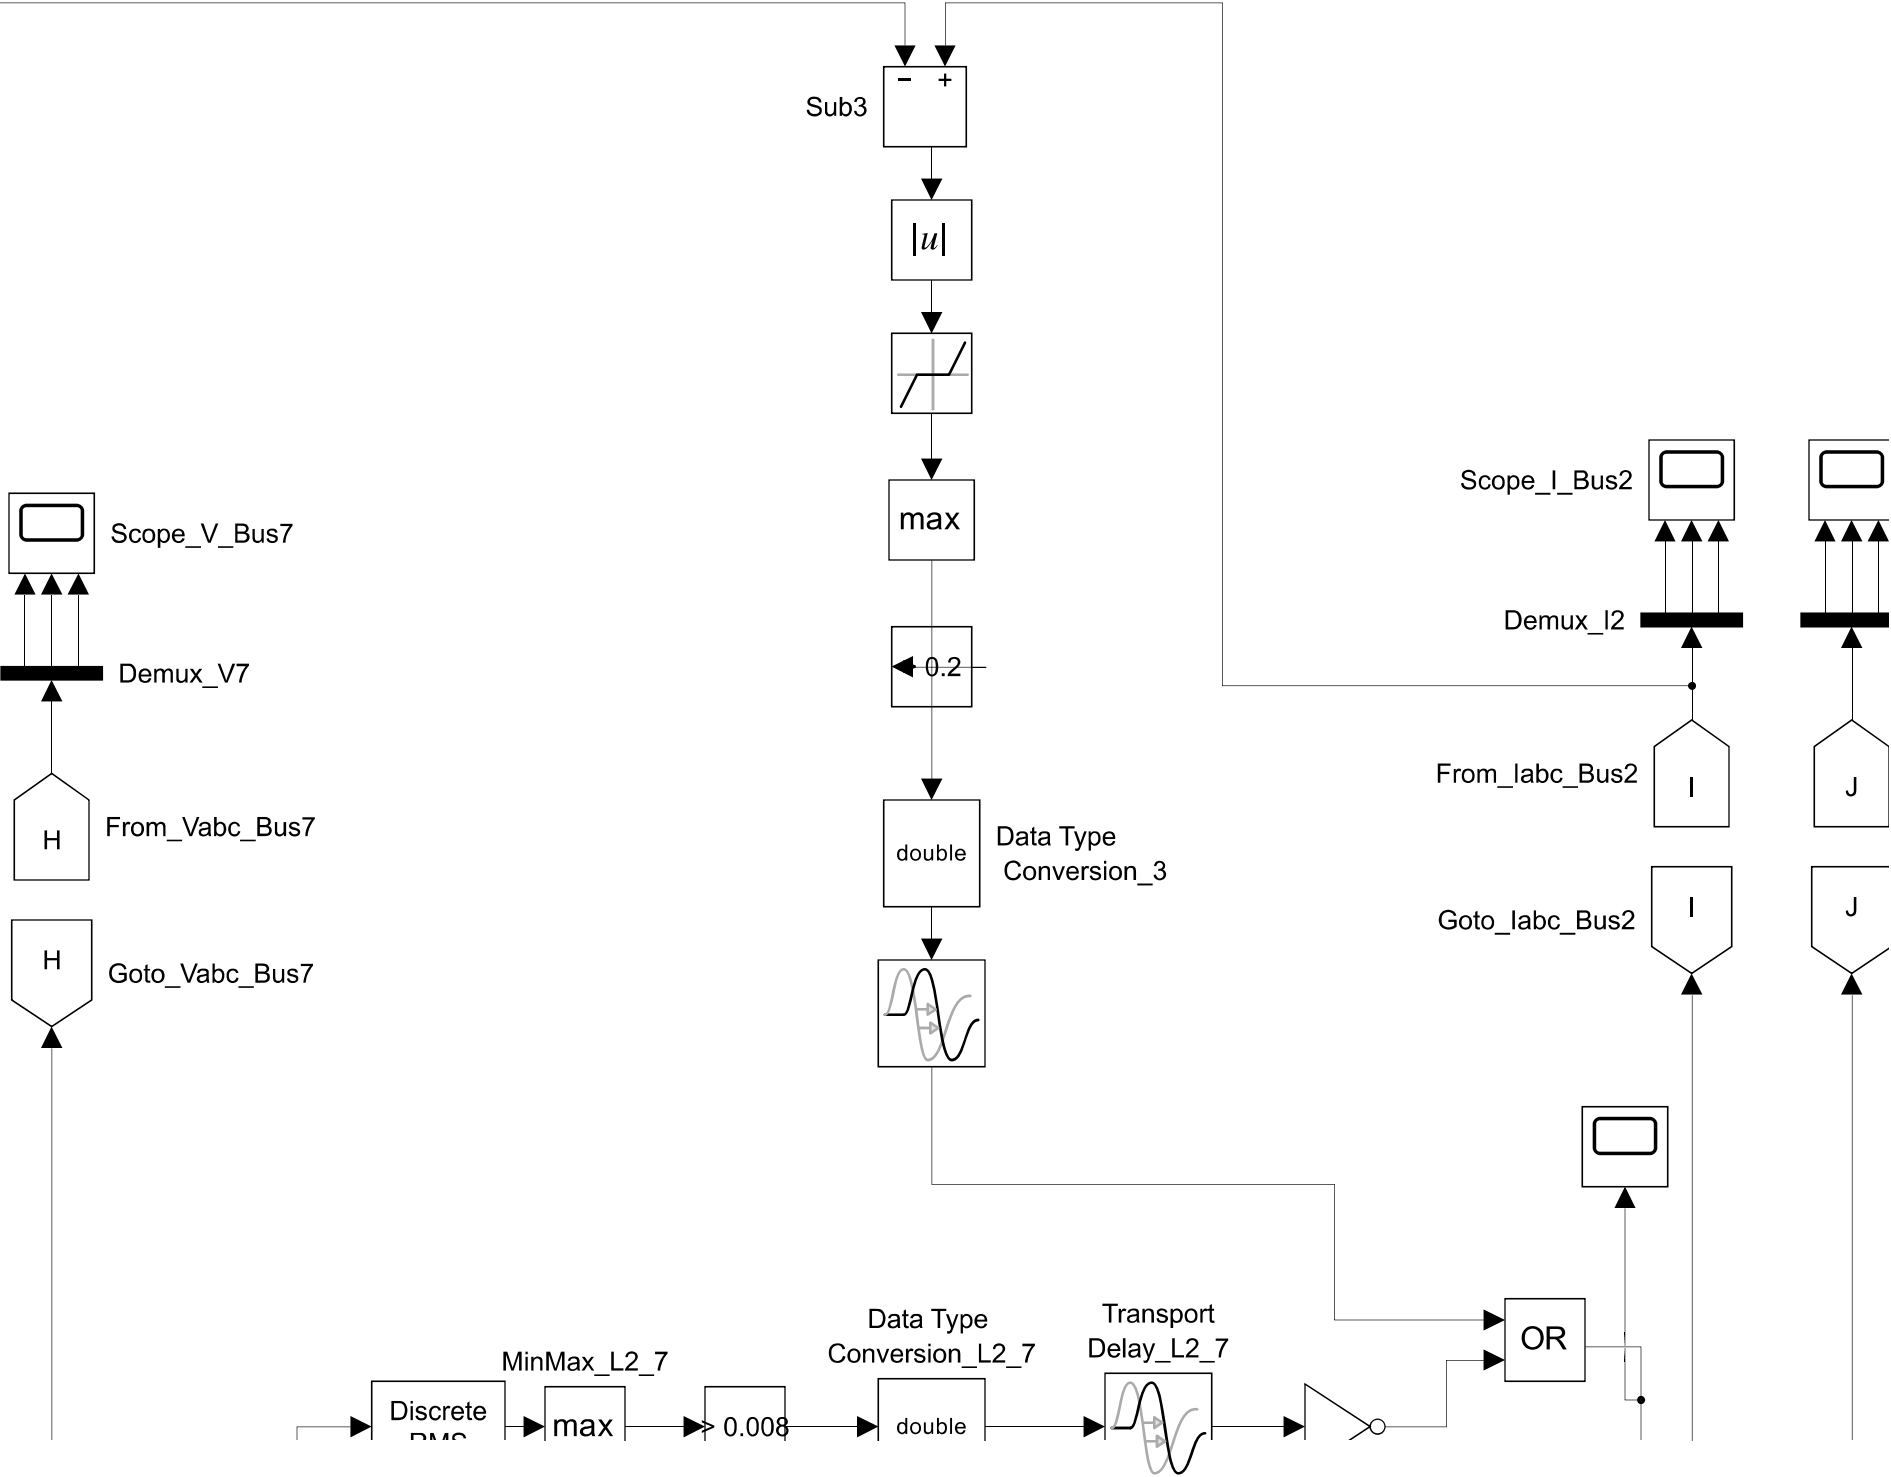



Scope_V_Bus2


Demux_V2


From_Vabc_Bus2


Goto_Vabc_Bus2

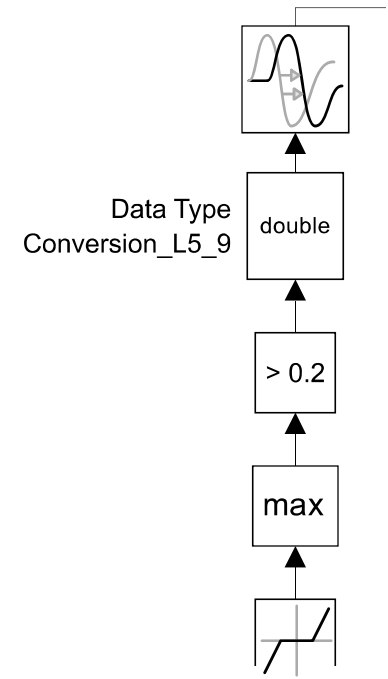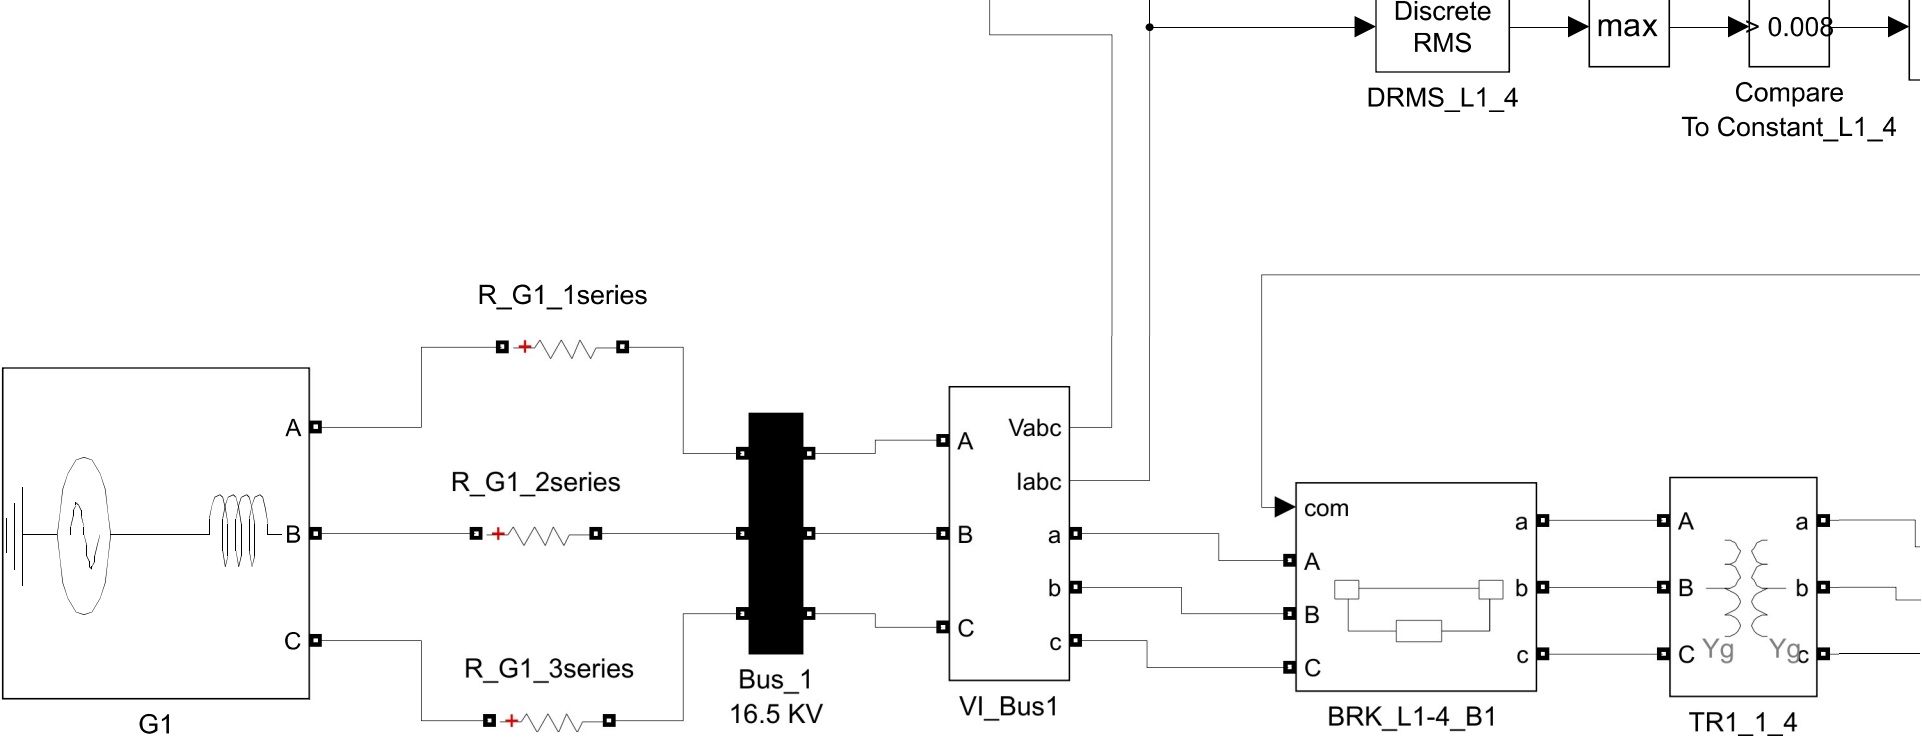


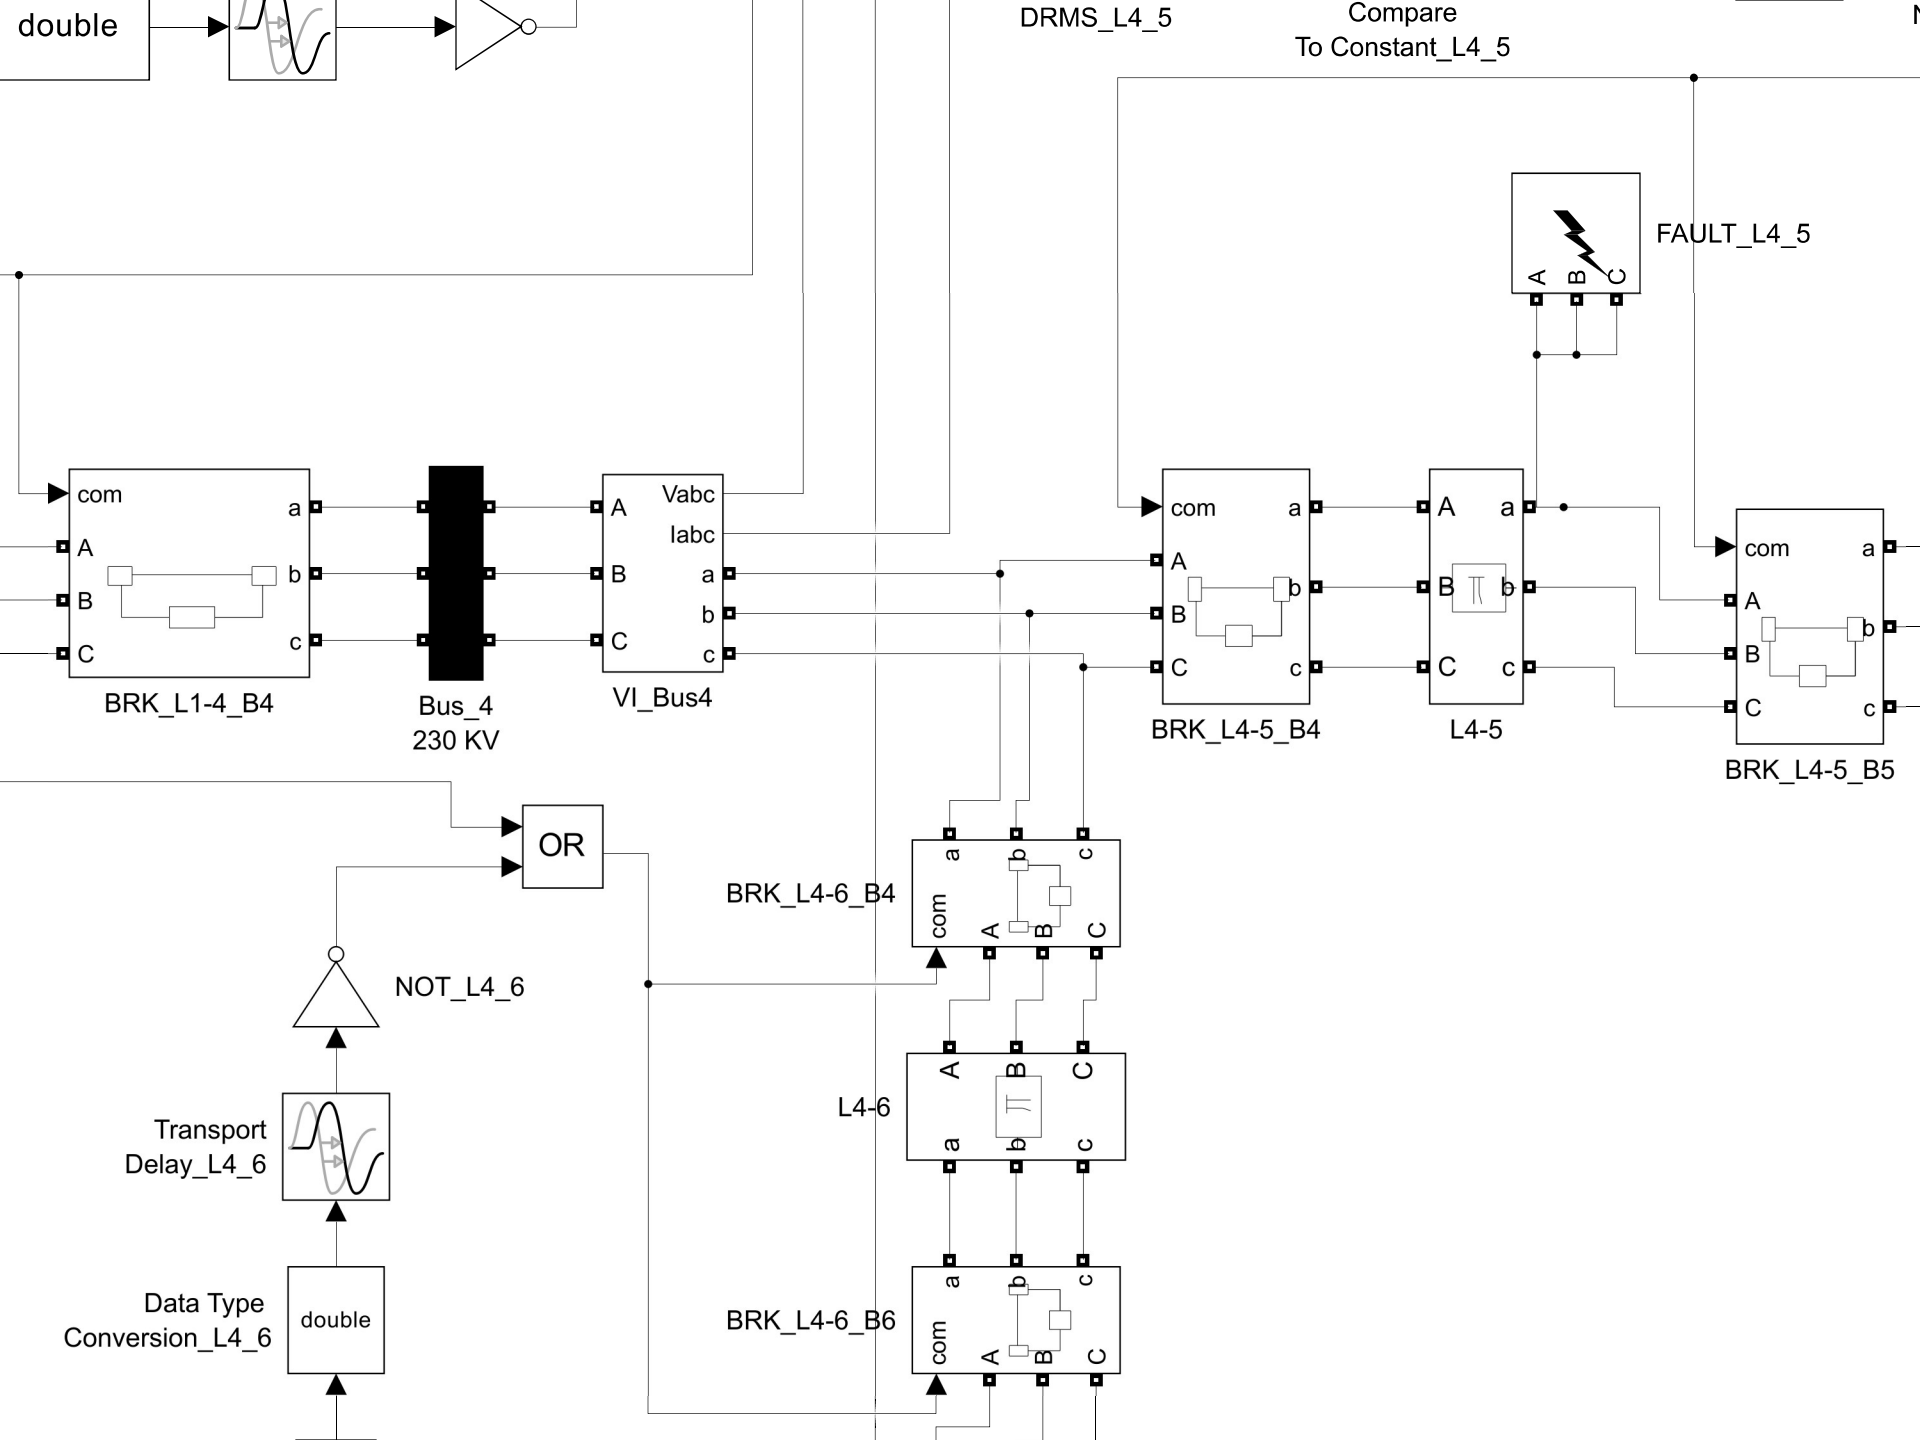


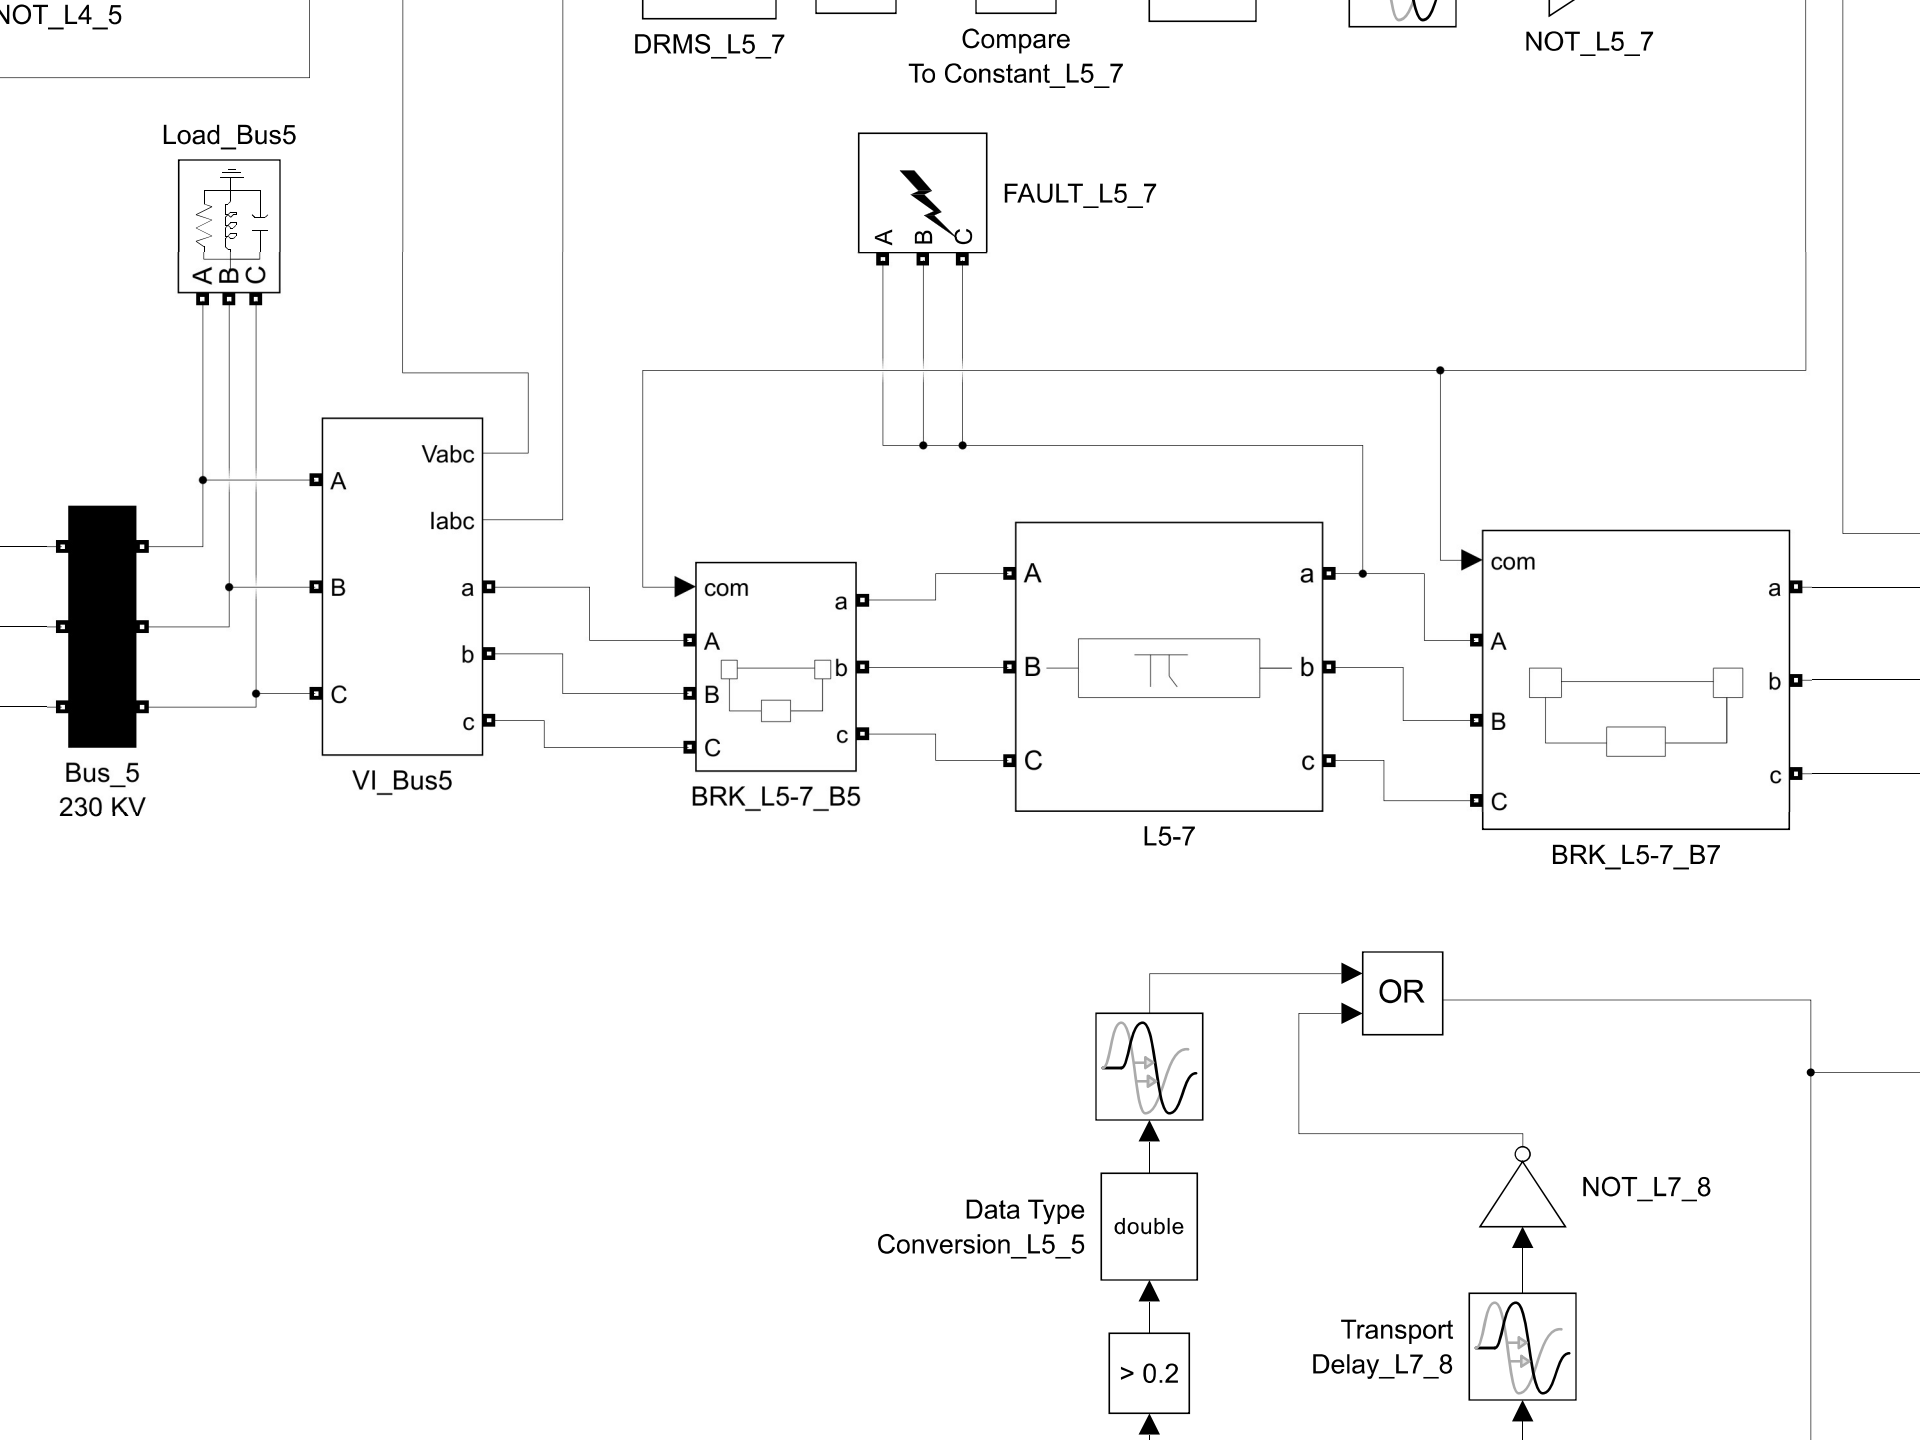

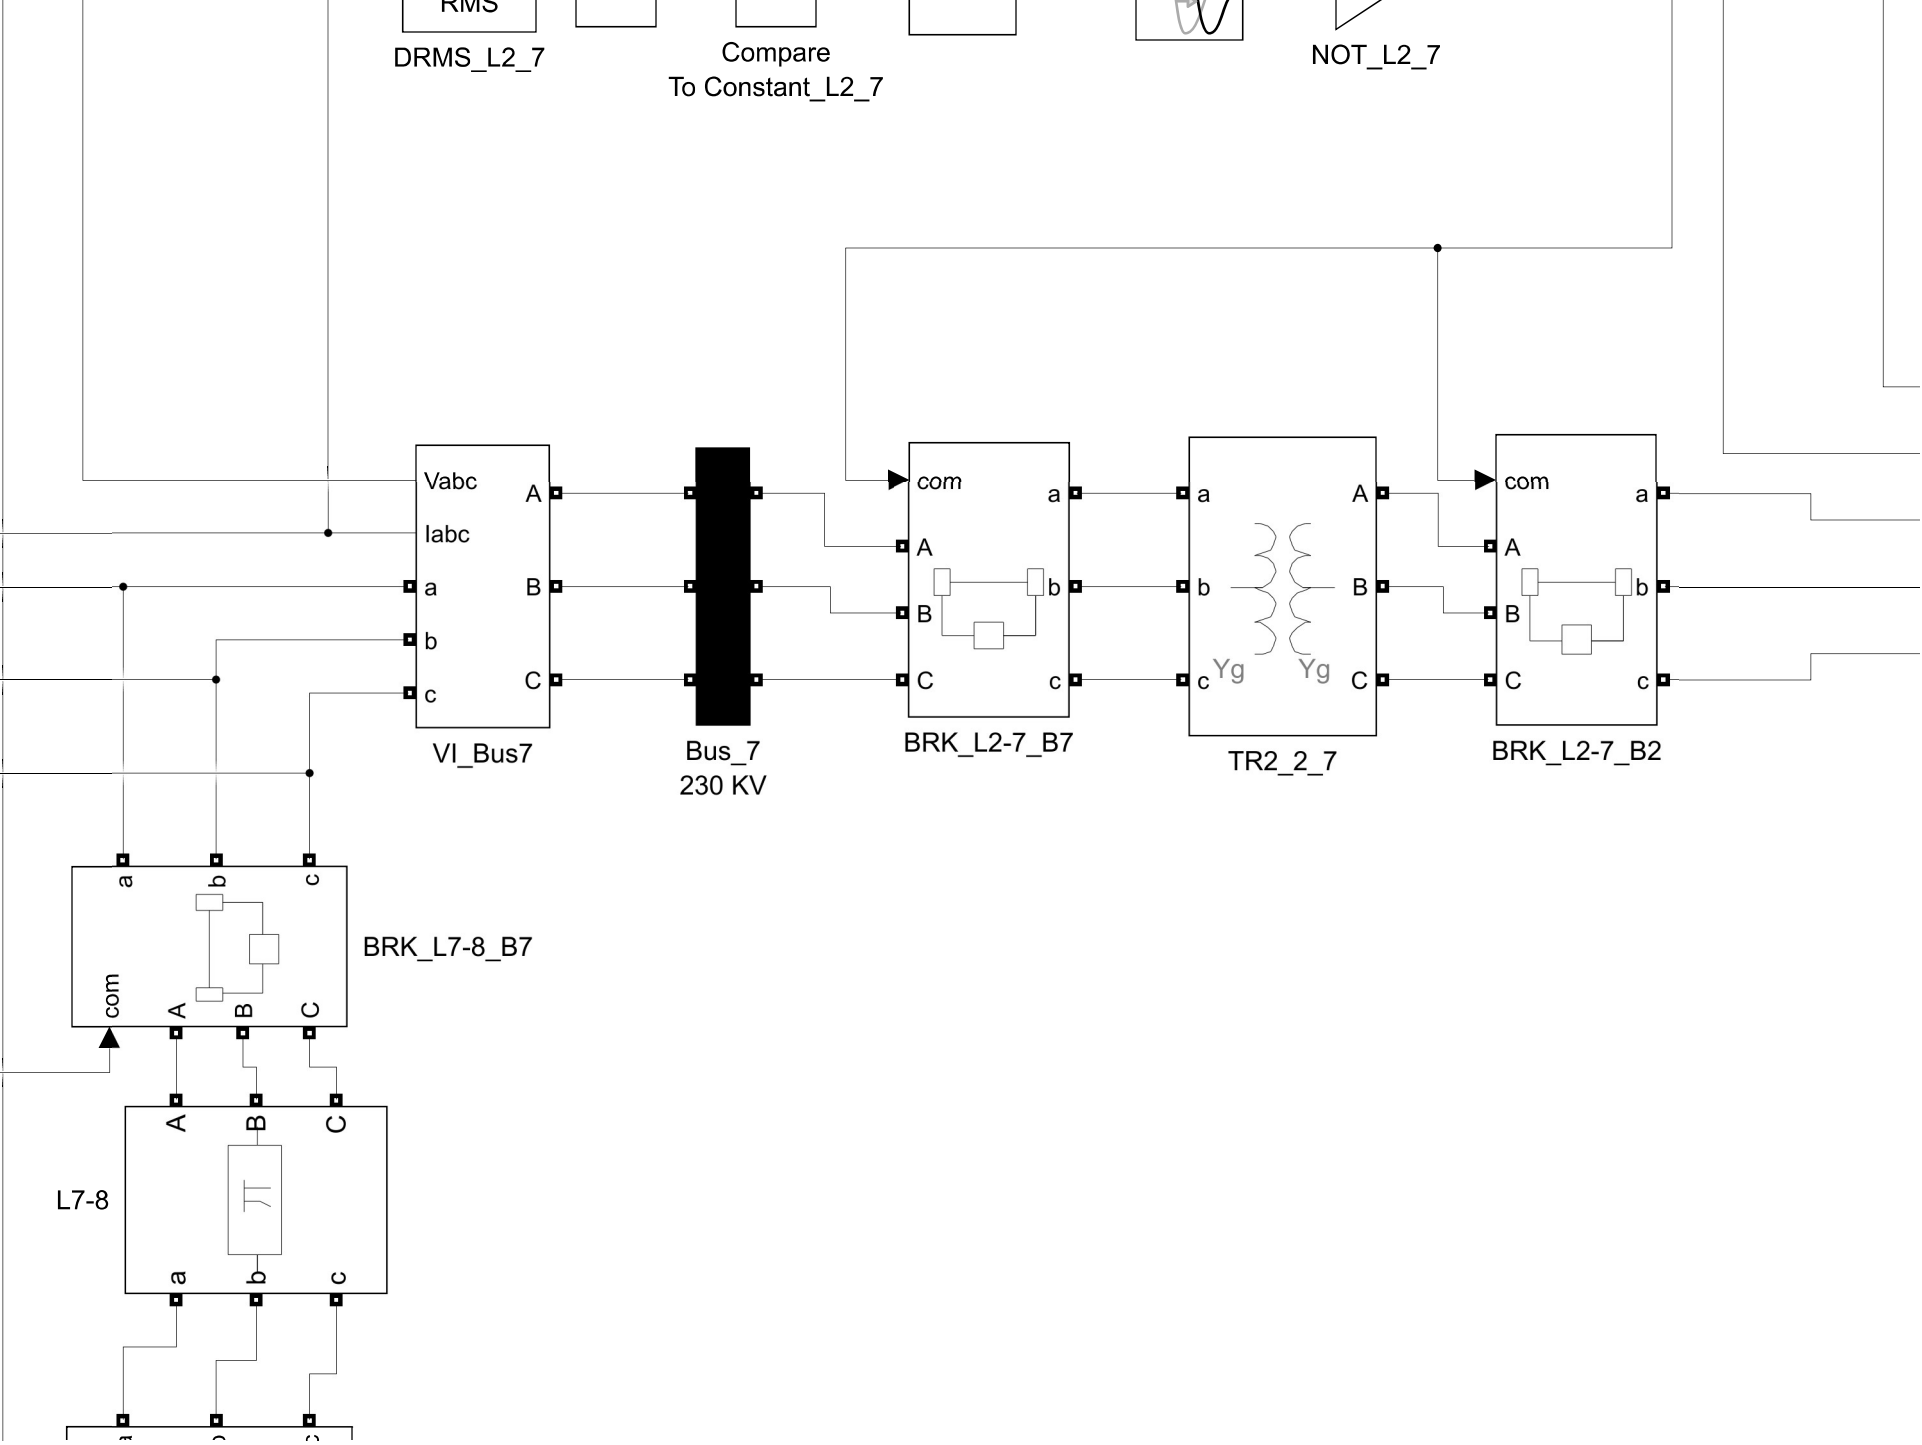


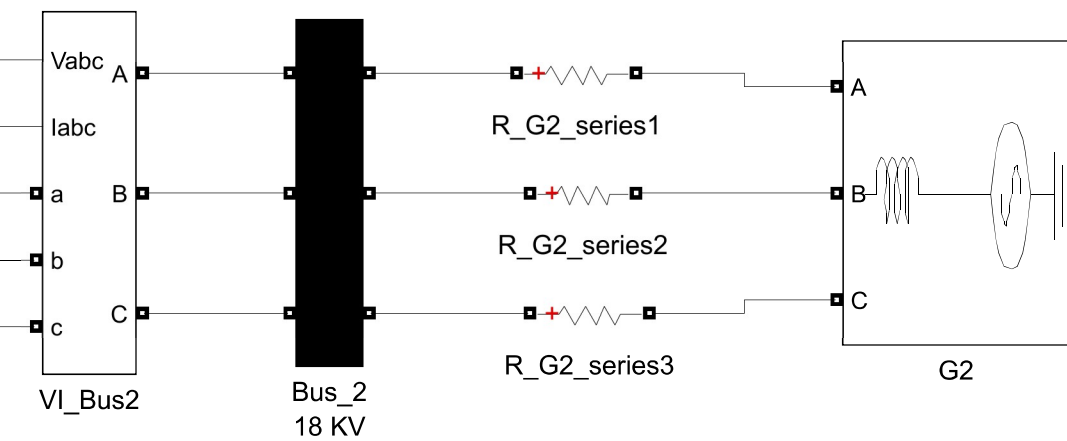


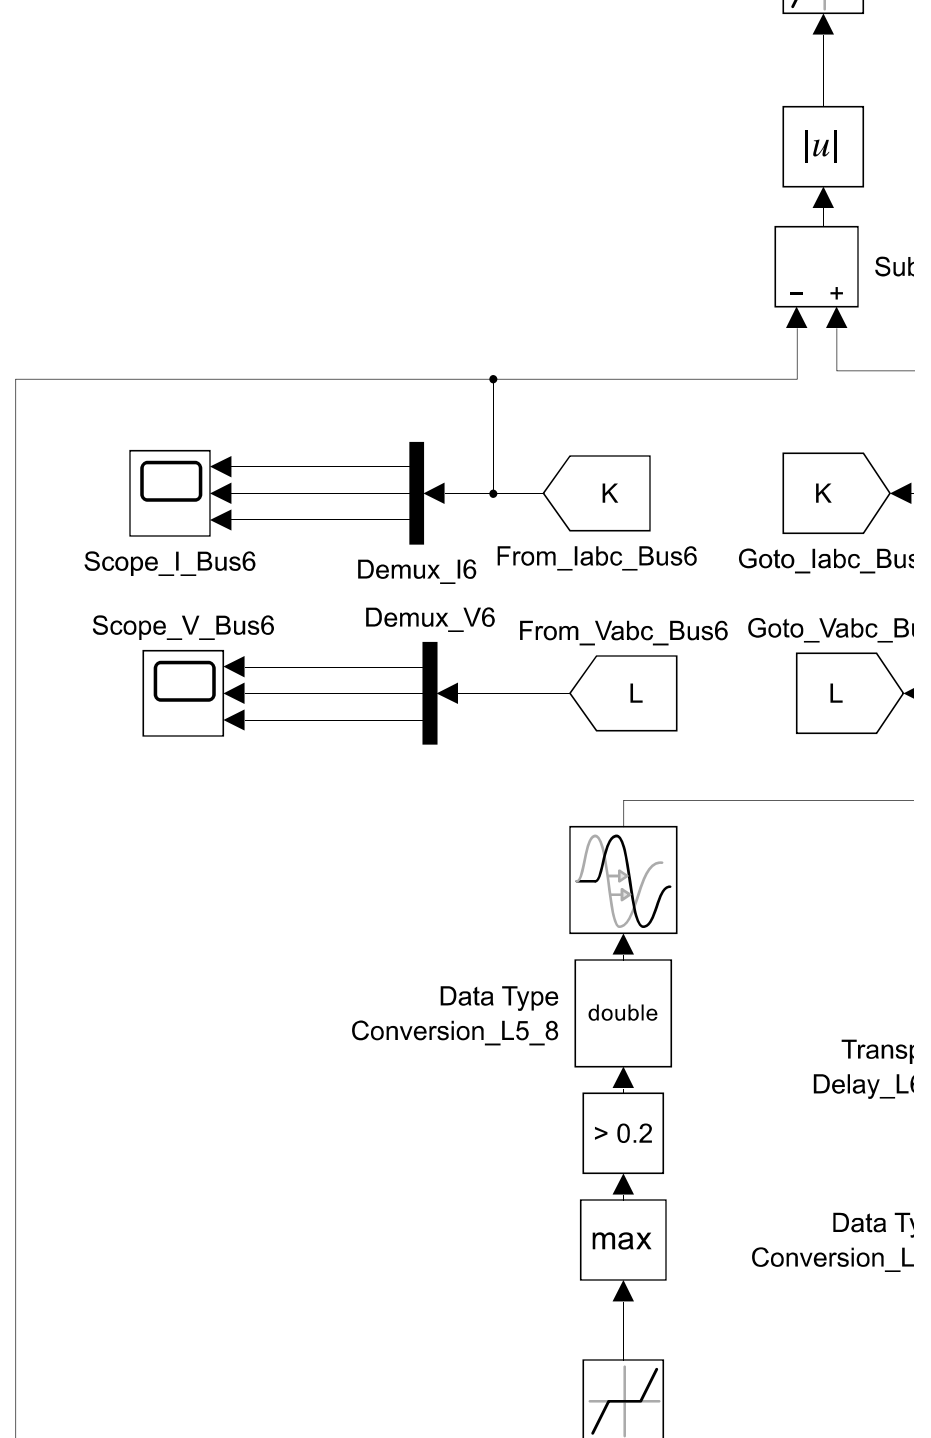


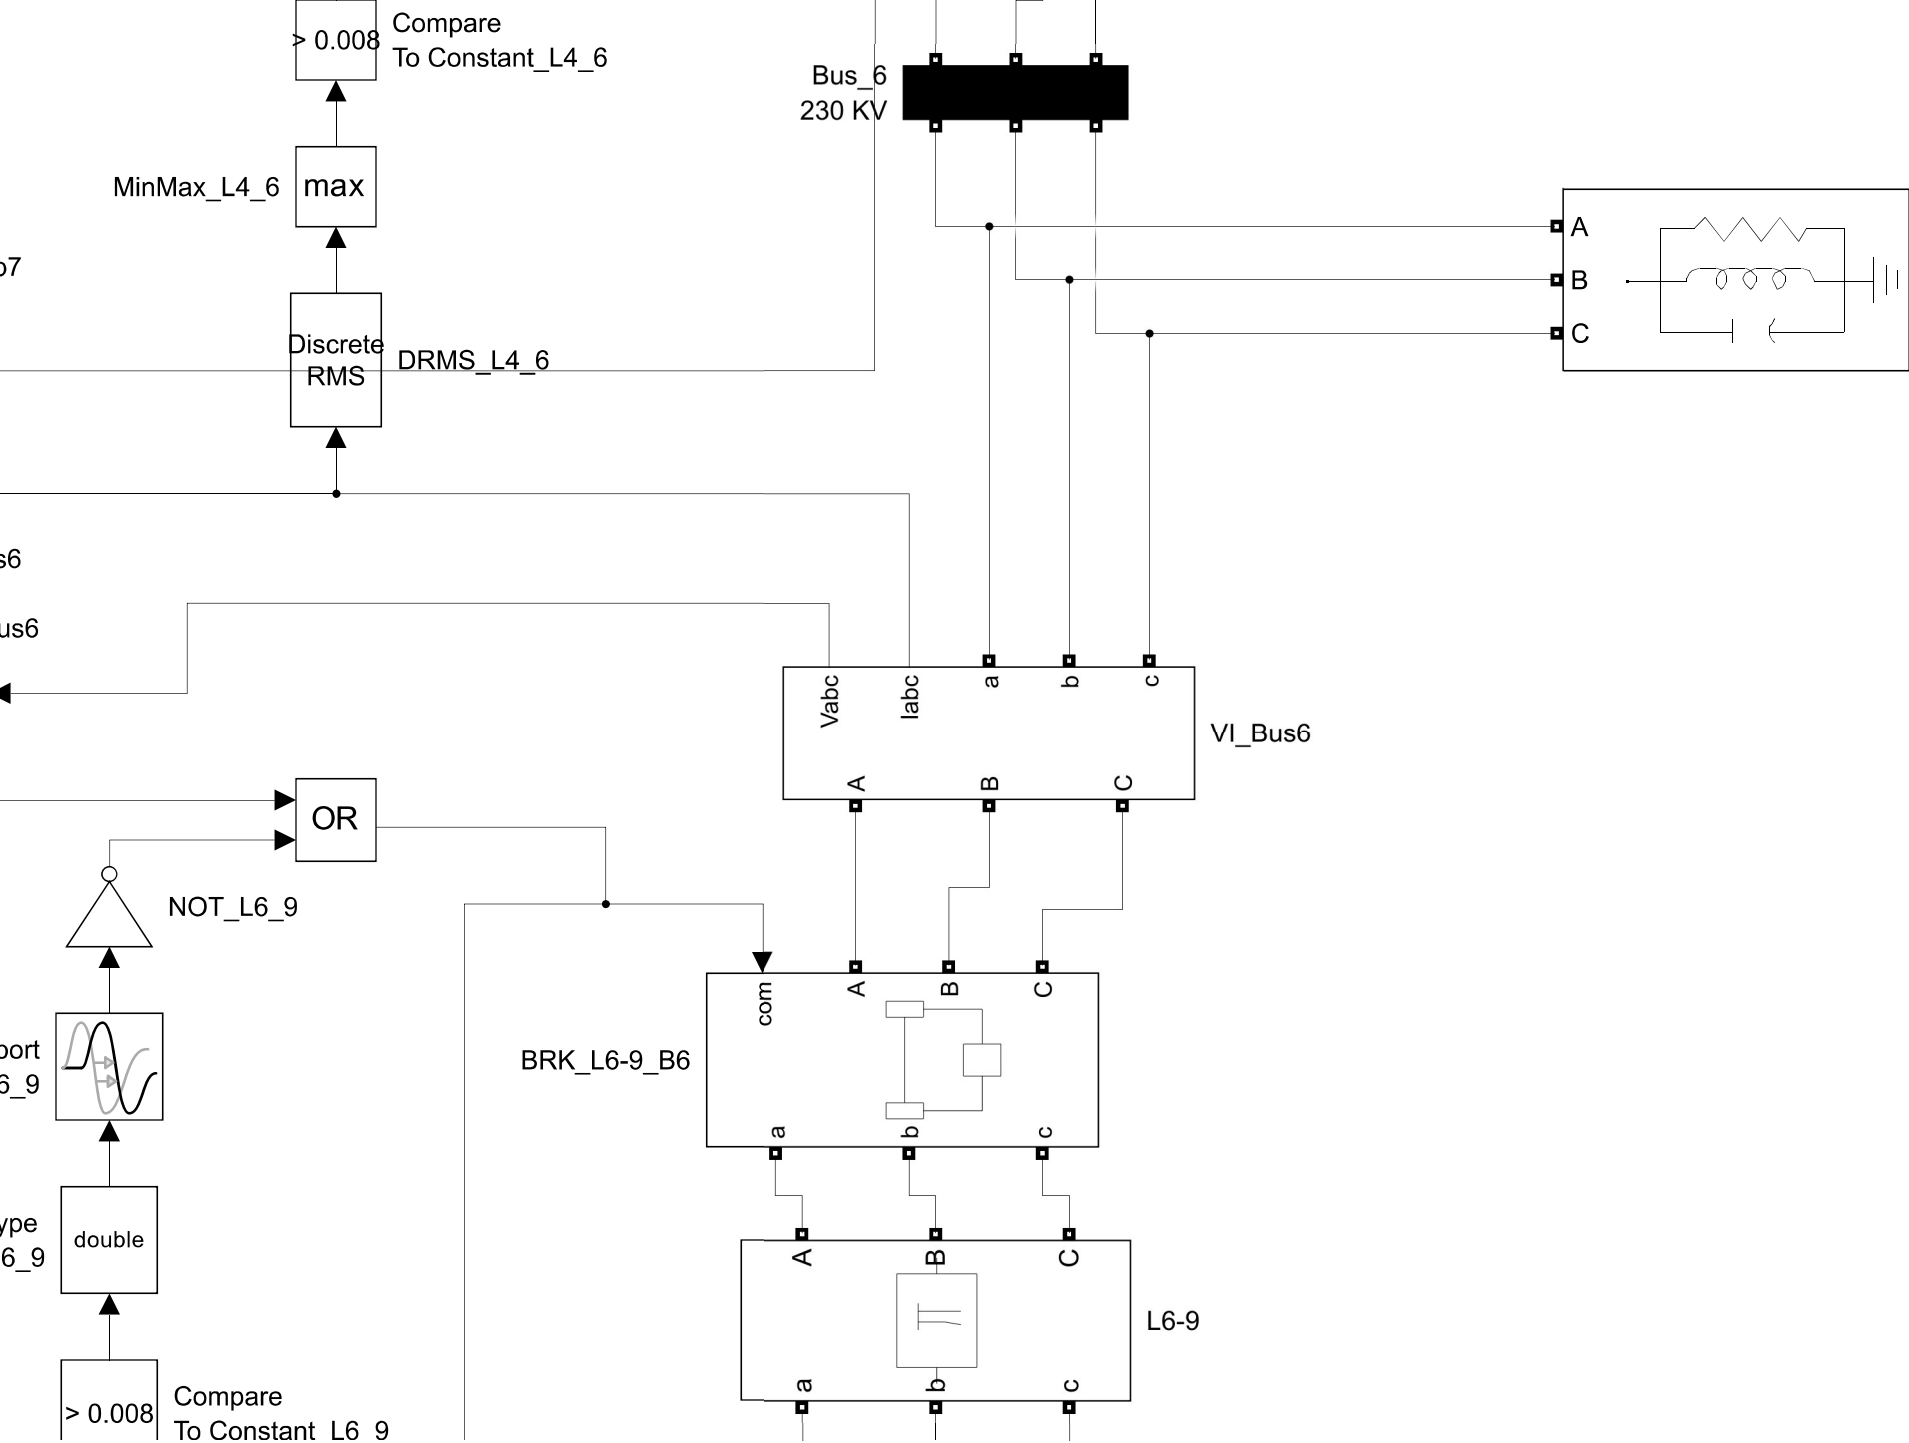



Load_Bus6

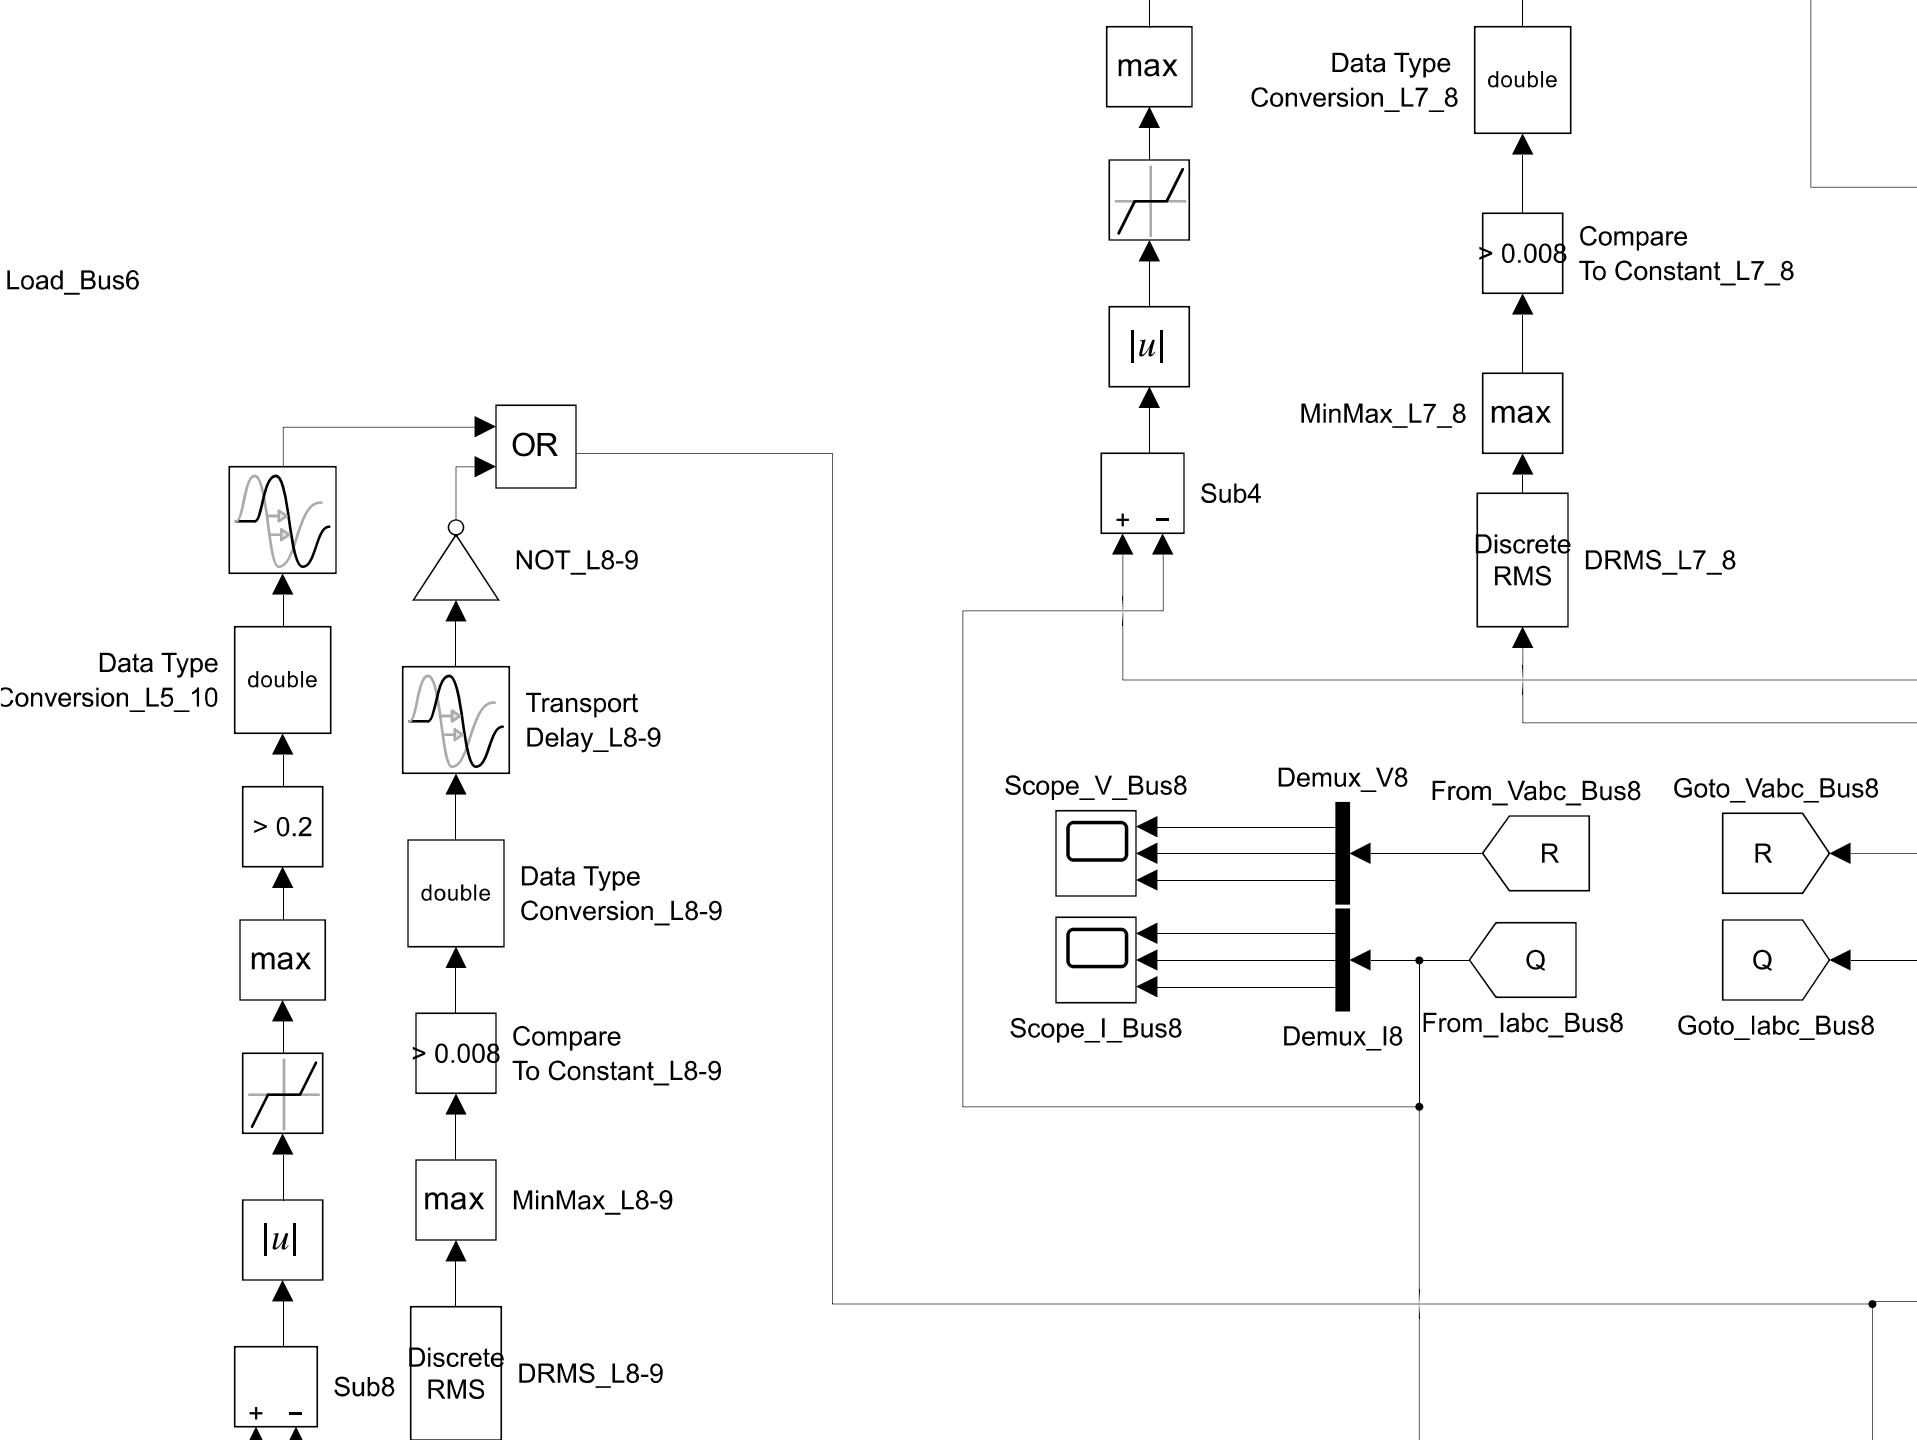


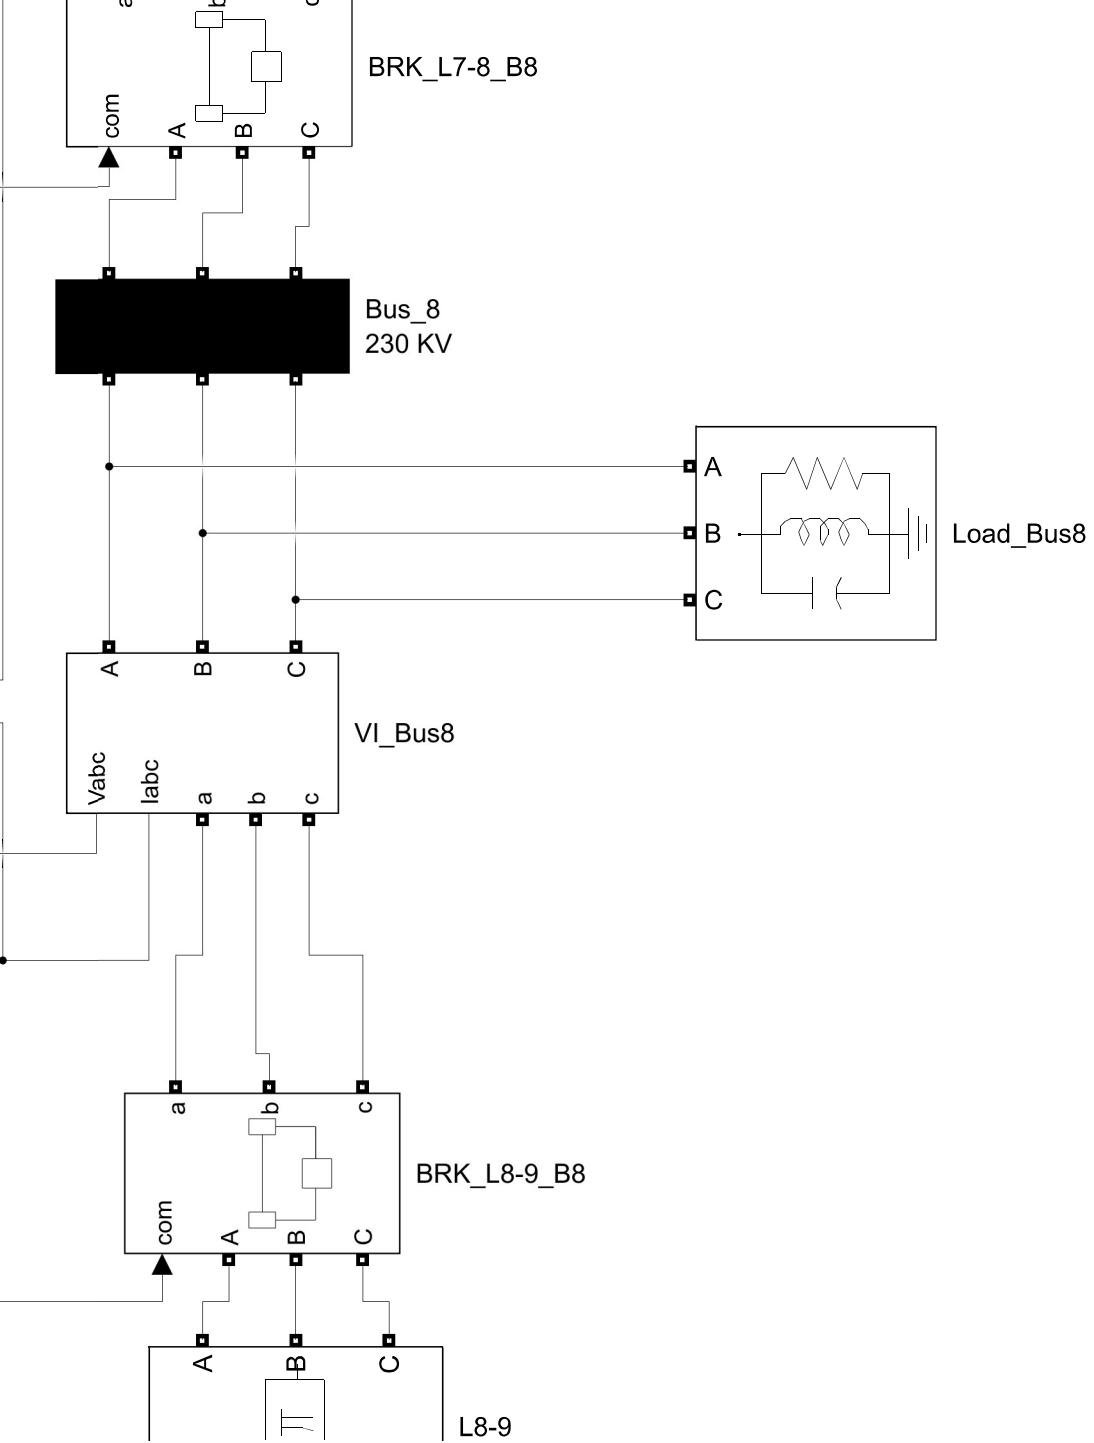


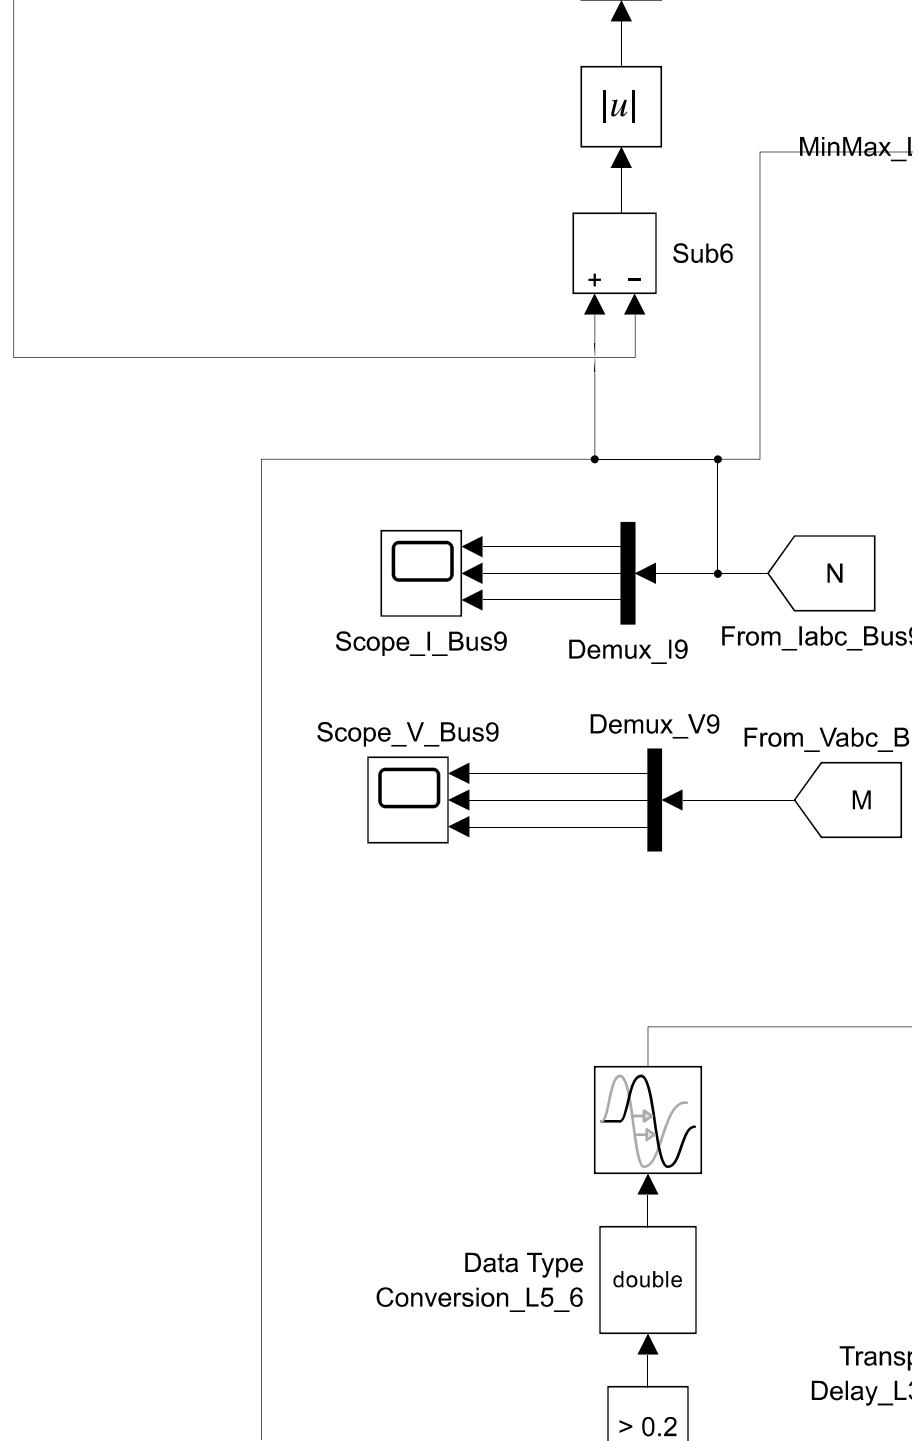


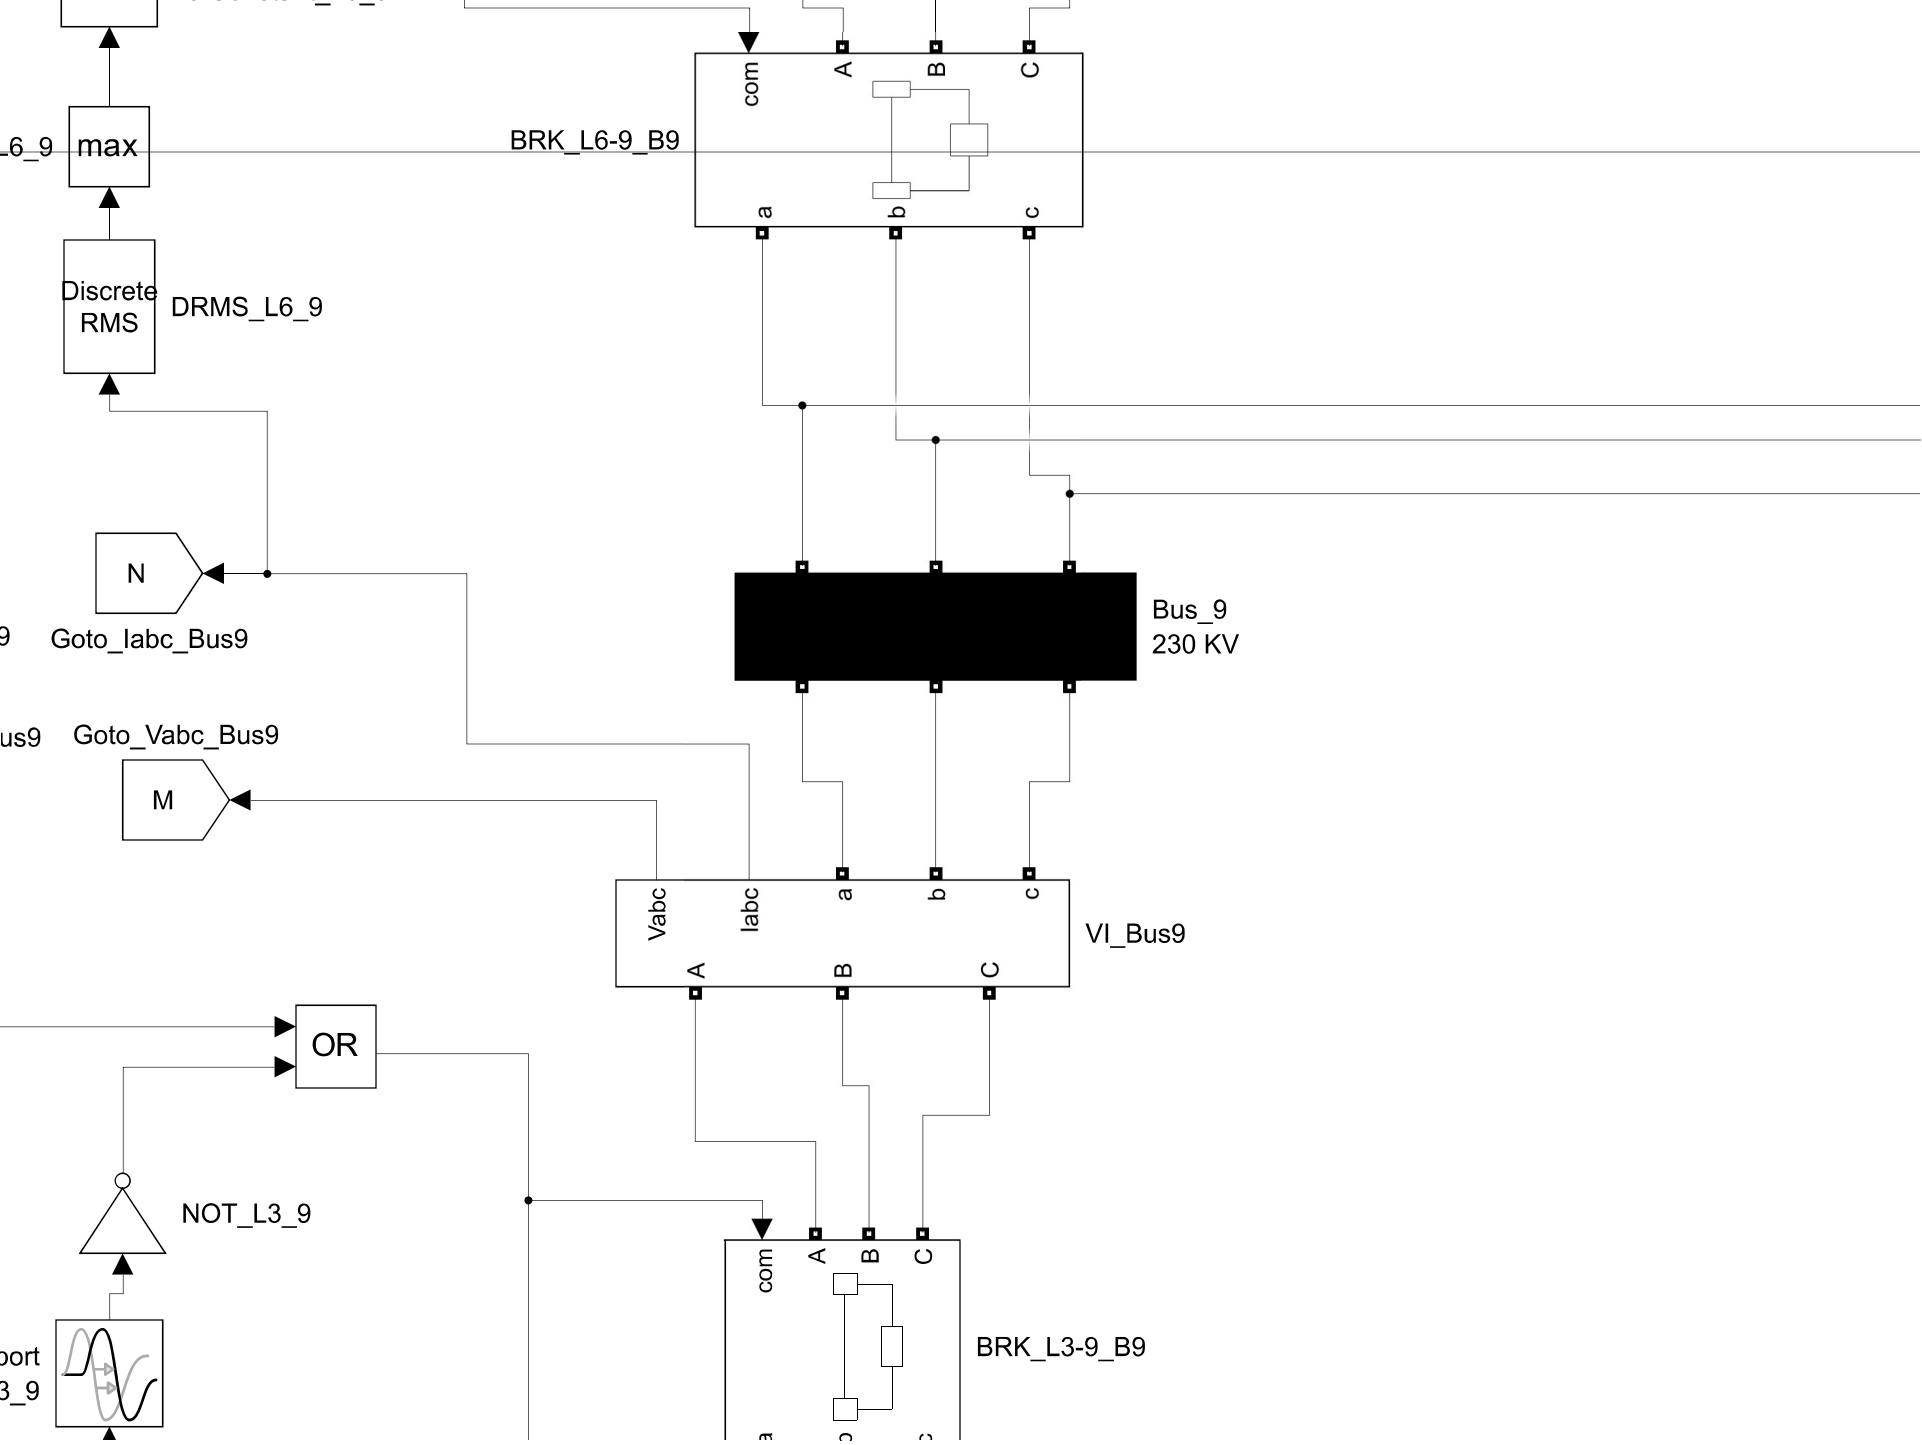




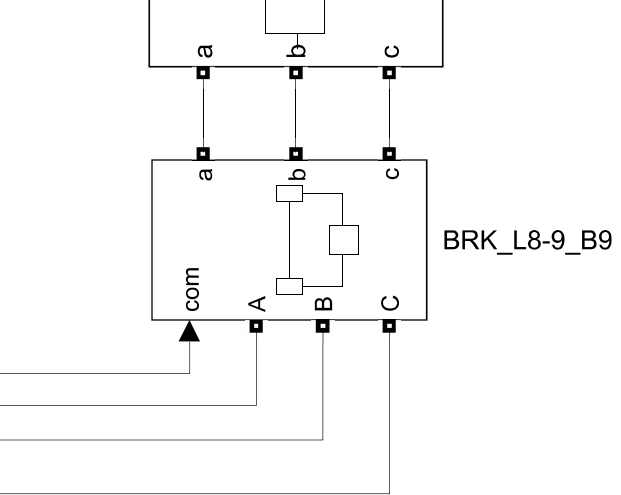


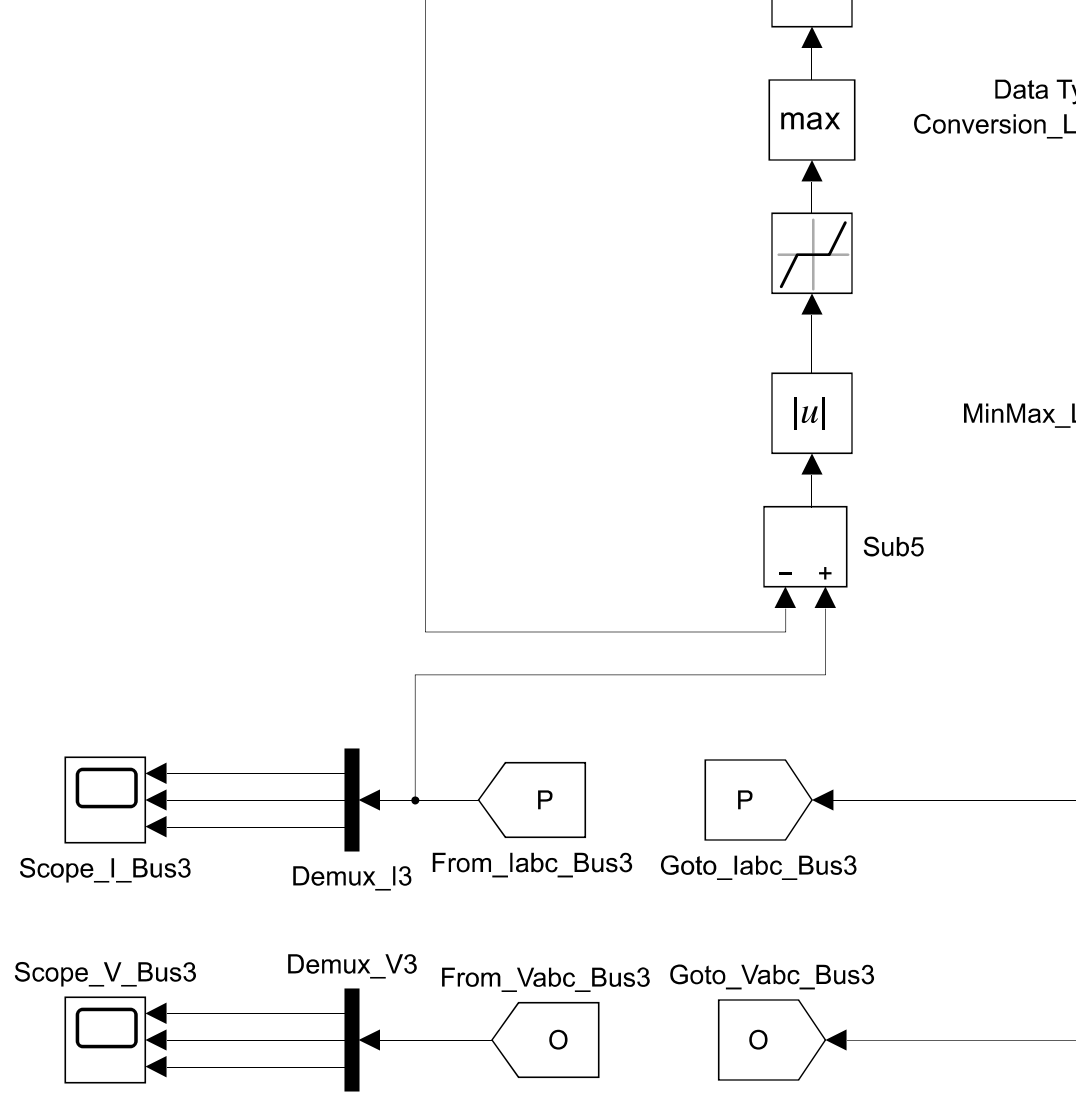

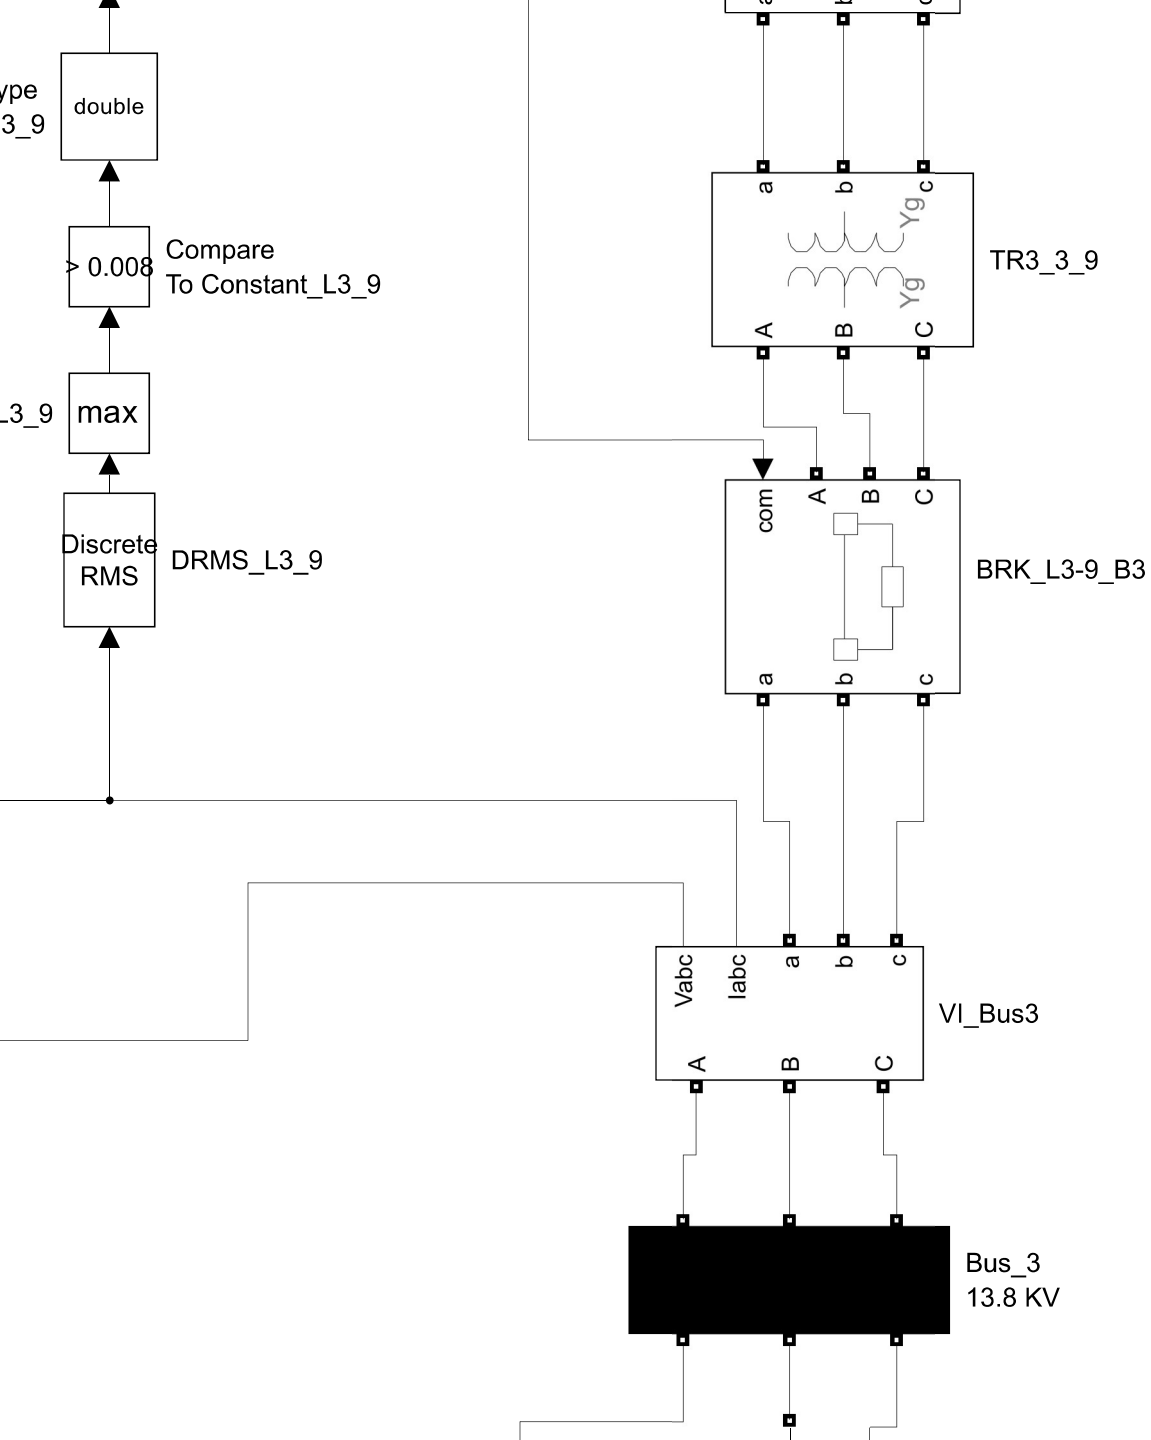

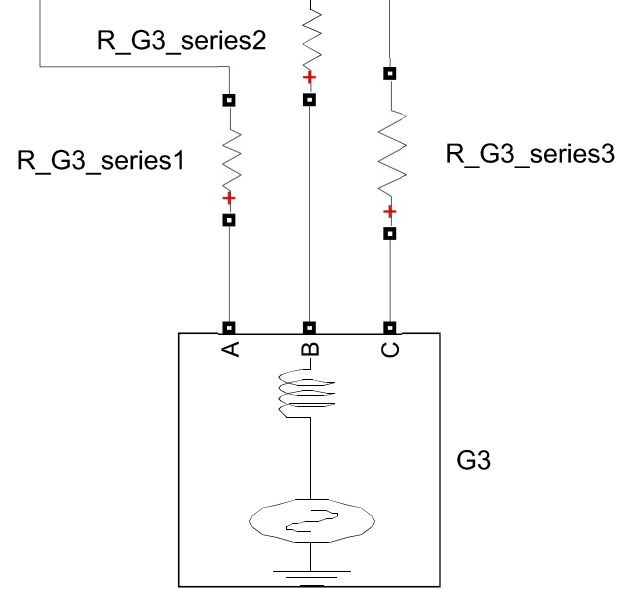


Graphical user interface for the analysis of
Simscape Power Systems (Specialized Technology) circuits.
Place the Powergui block in the top-level of your model and double-click
on it to open the GUI.





EQUIVALENT CIRCUIT
Discrete


EquivalentModel1



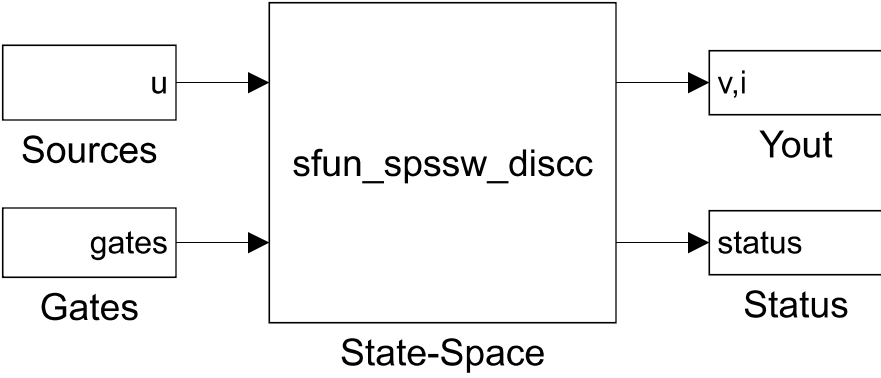

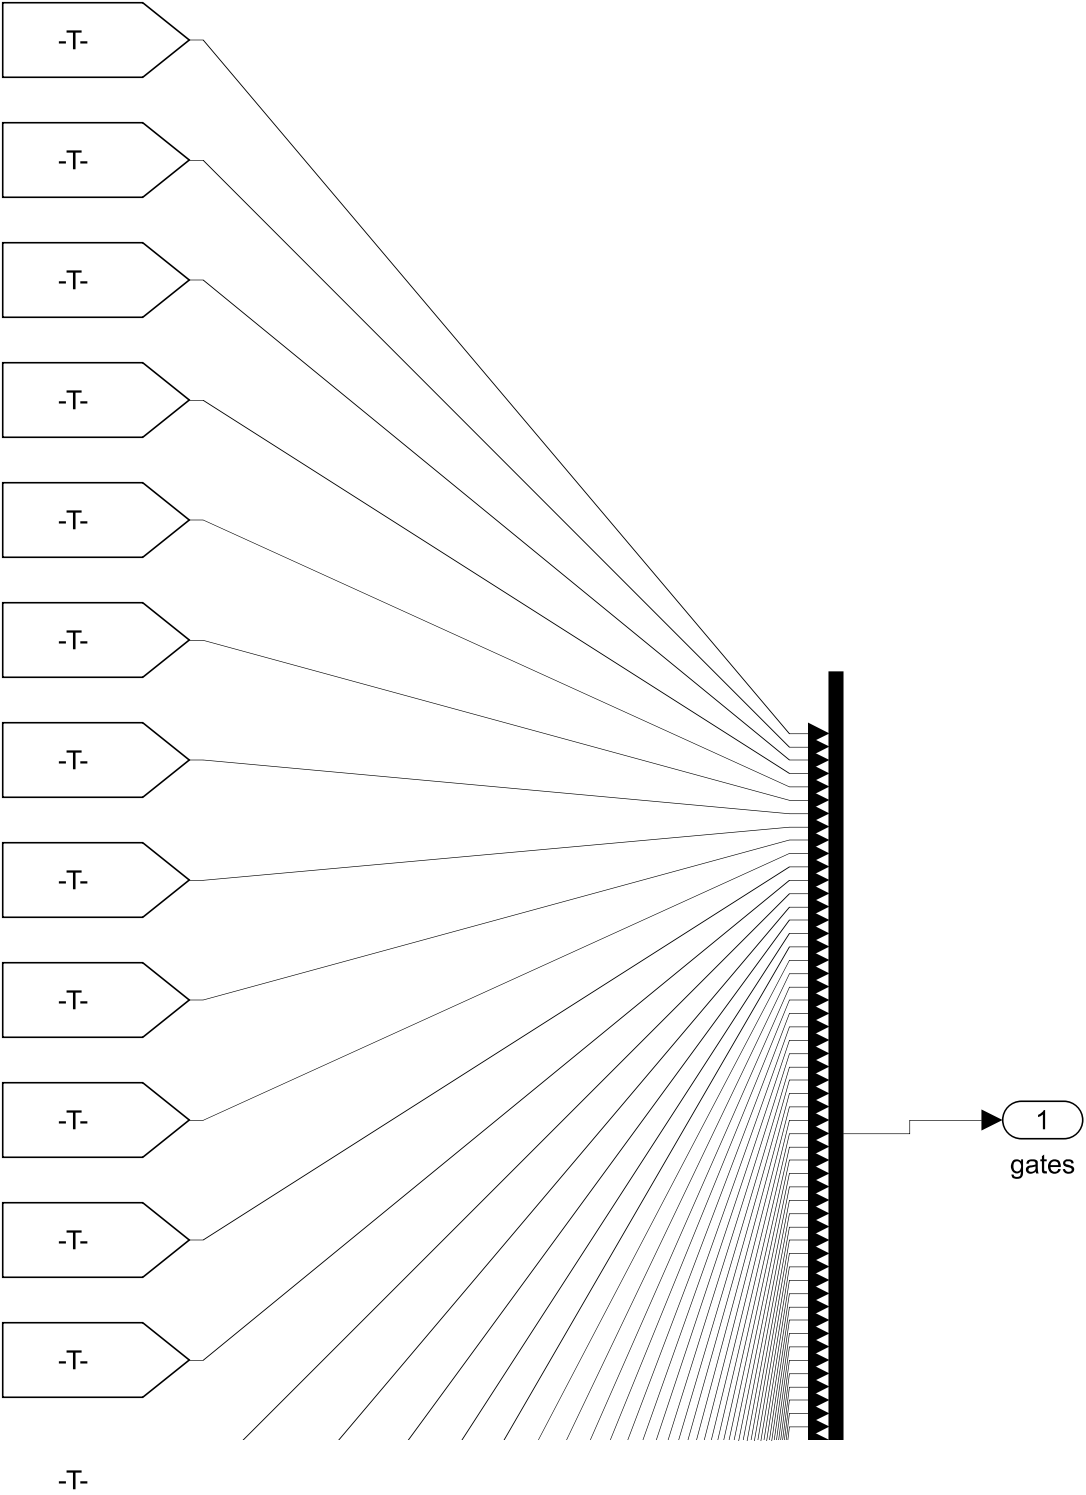


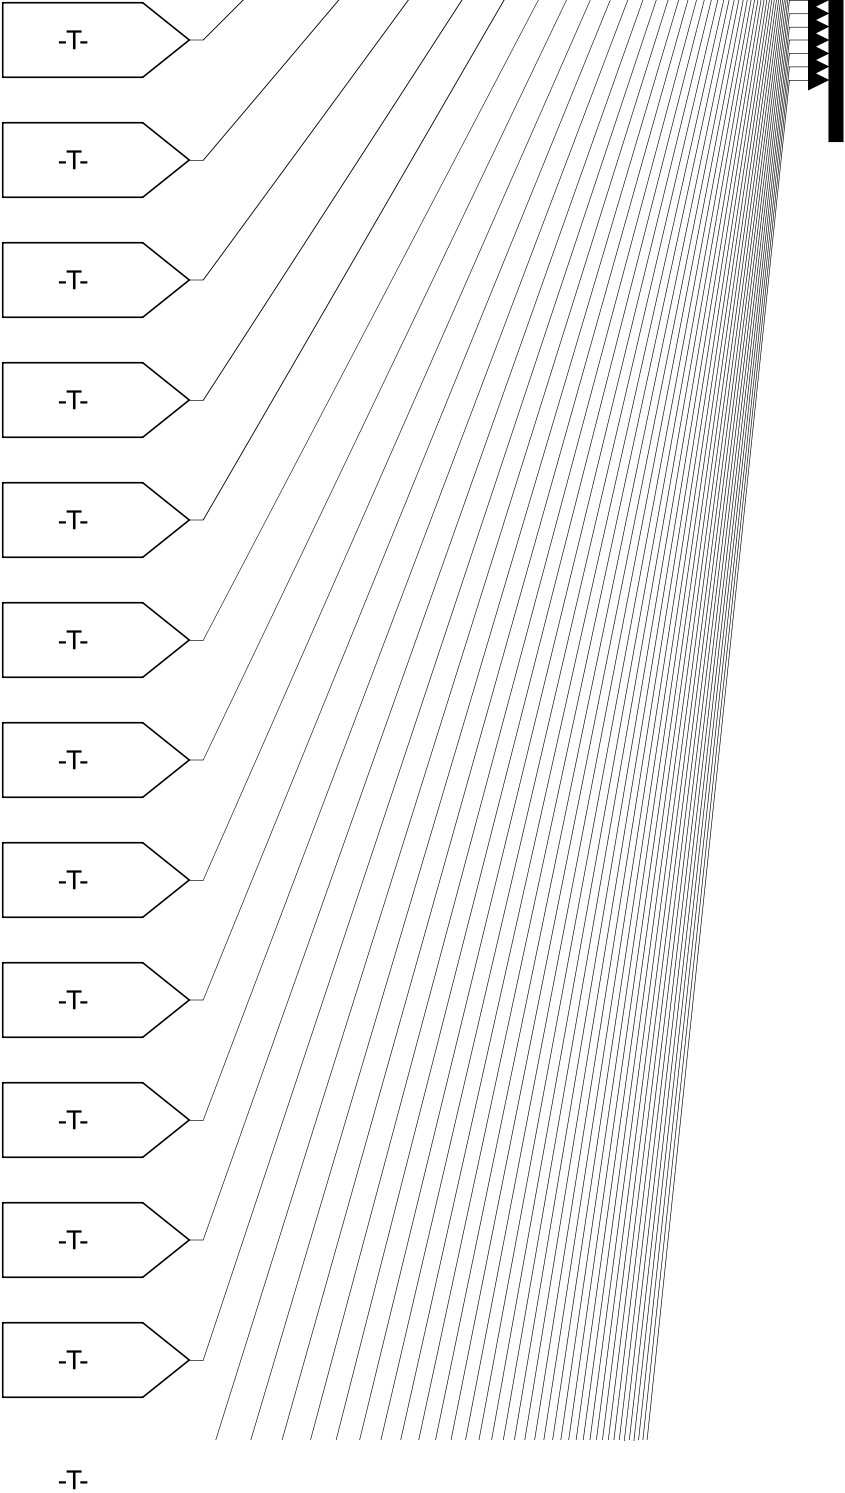

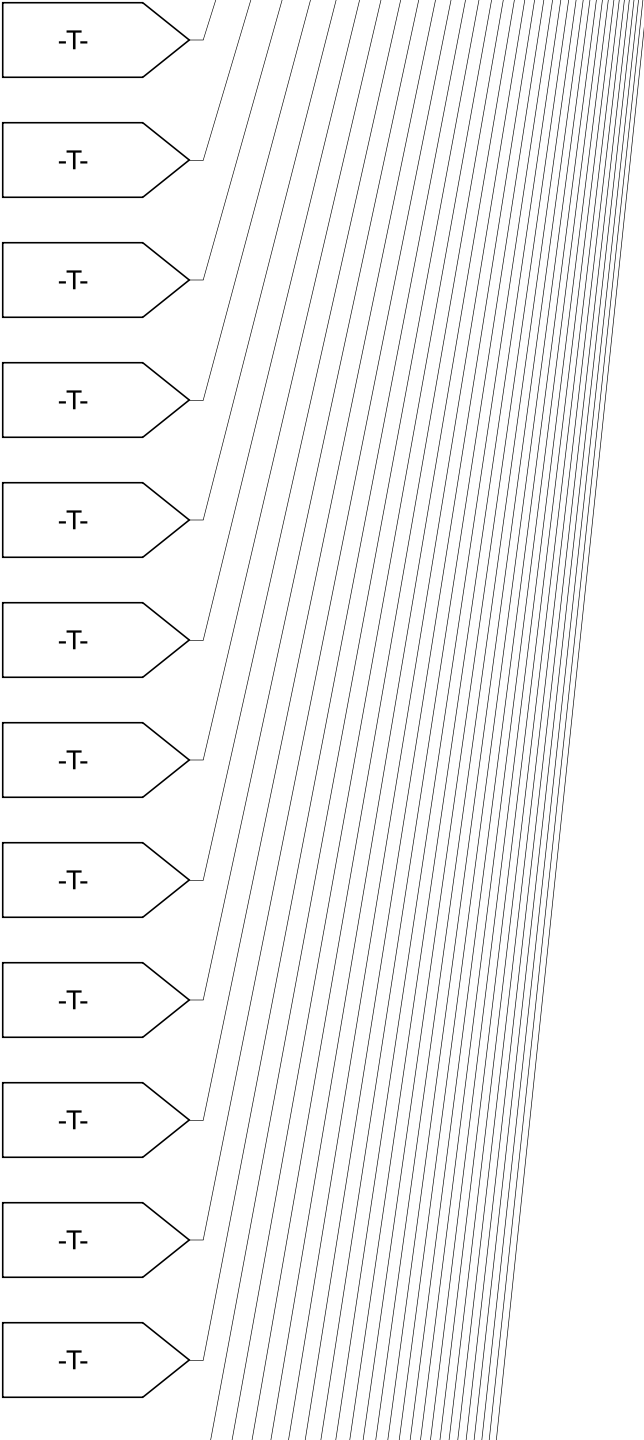


-T-




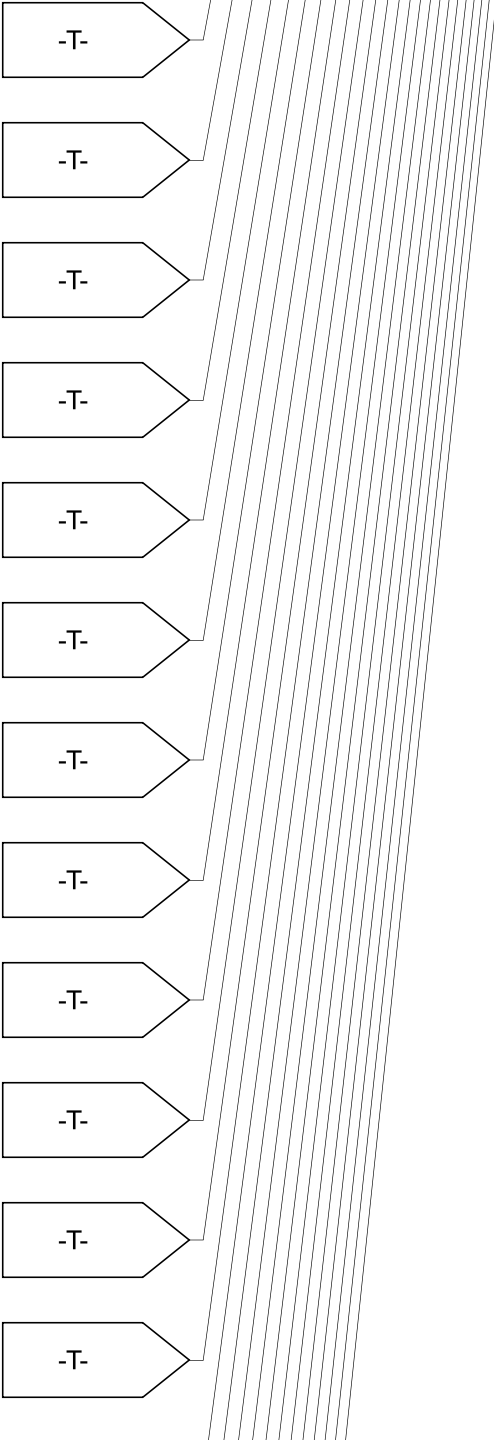

$-T-$




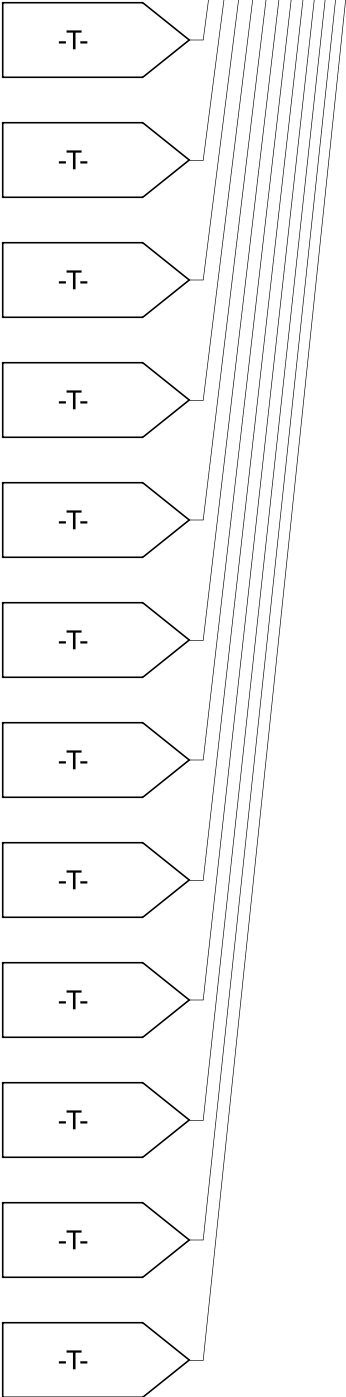


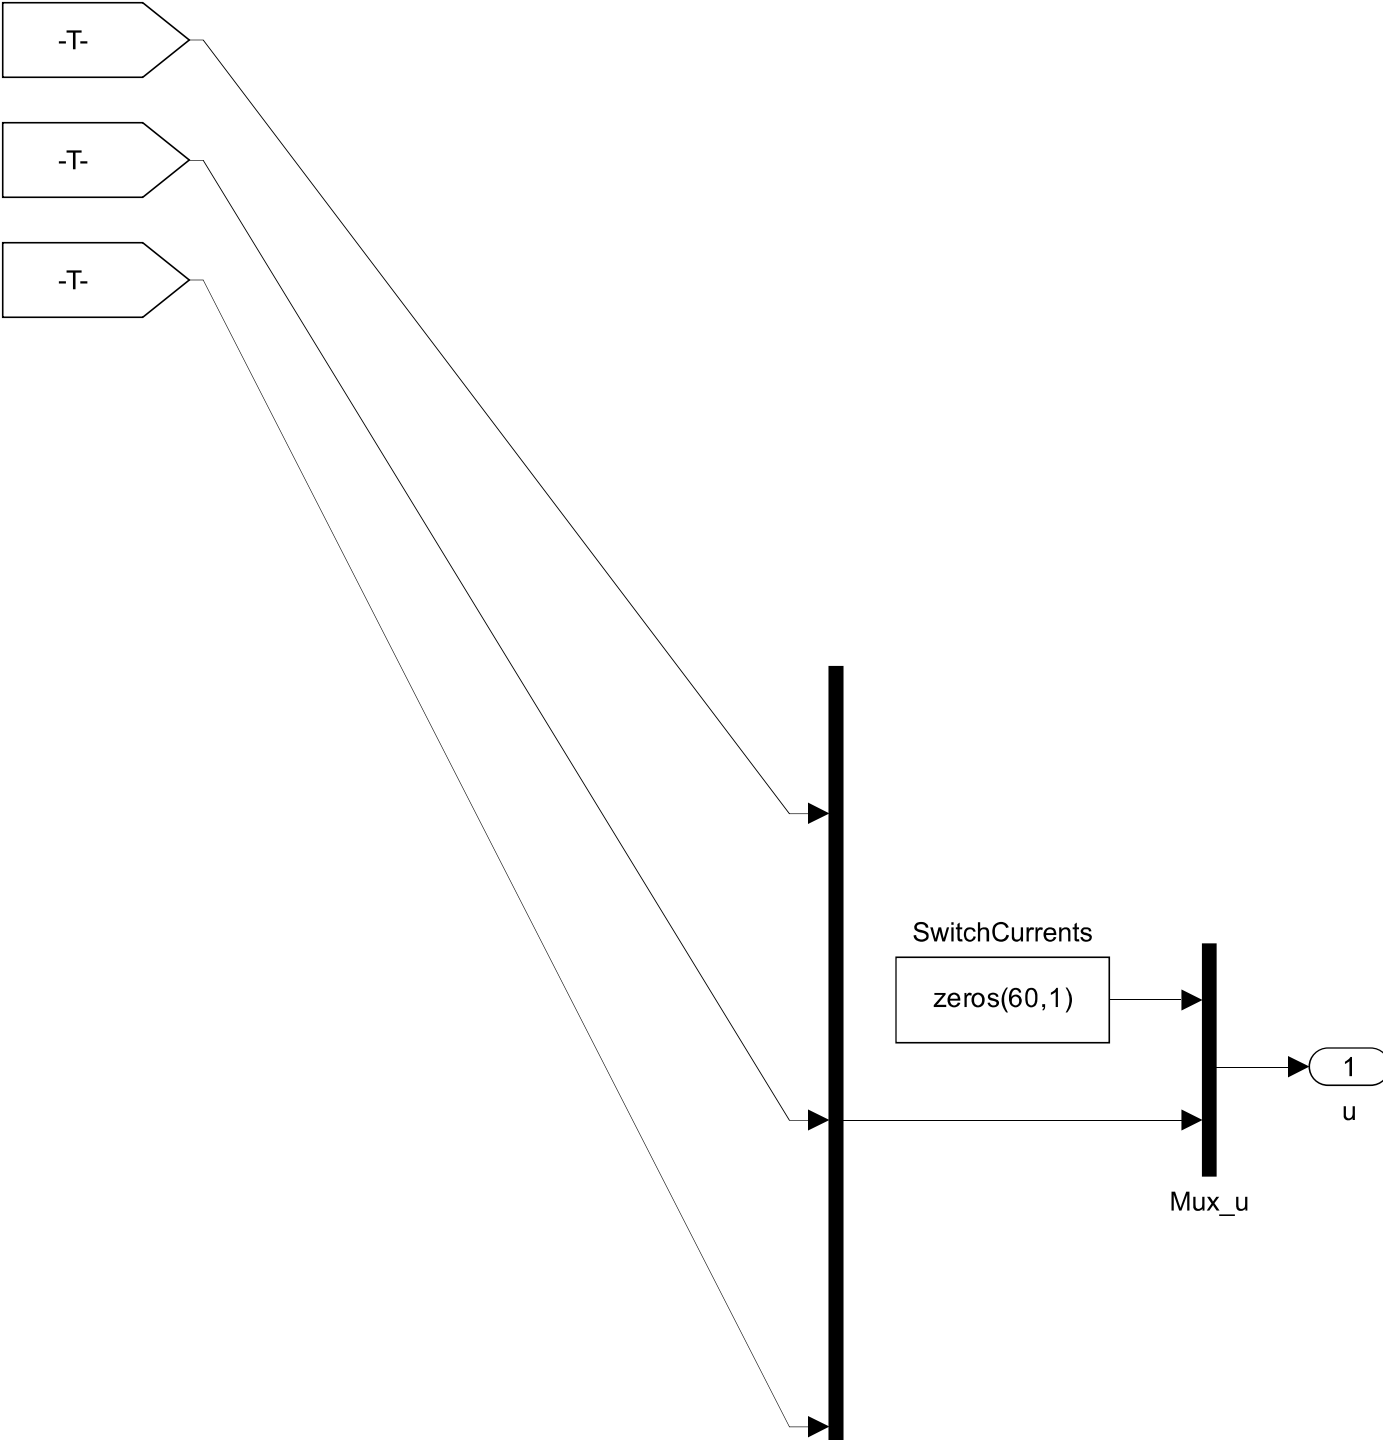

1




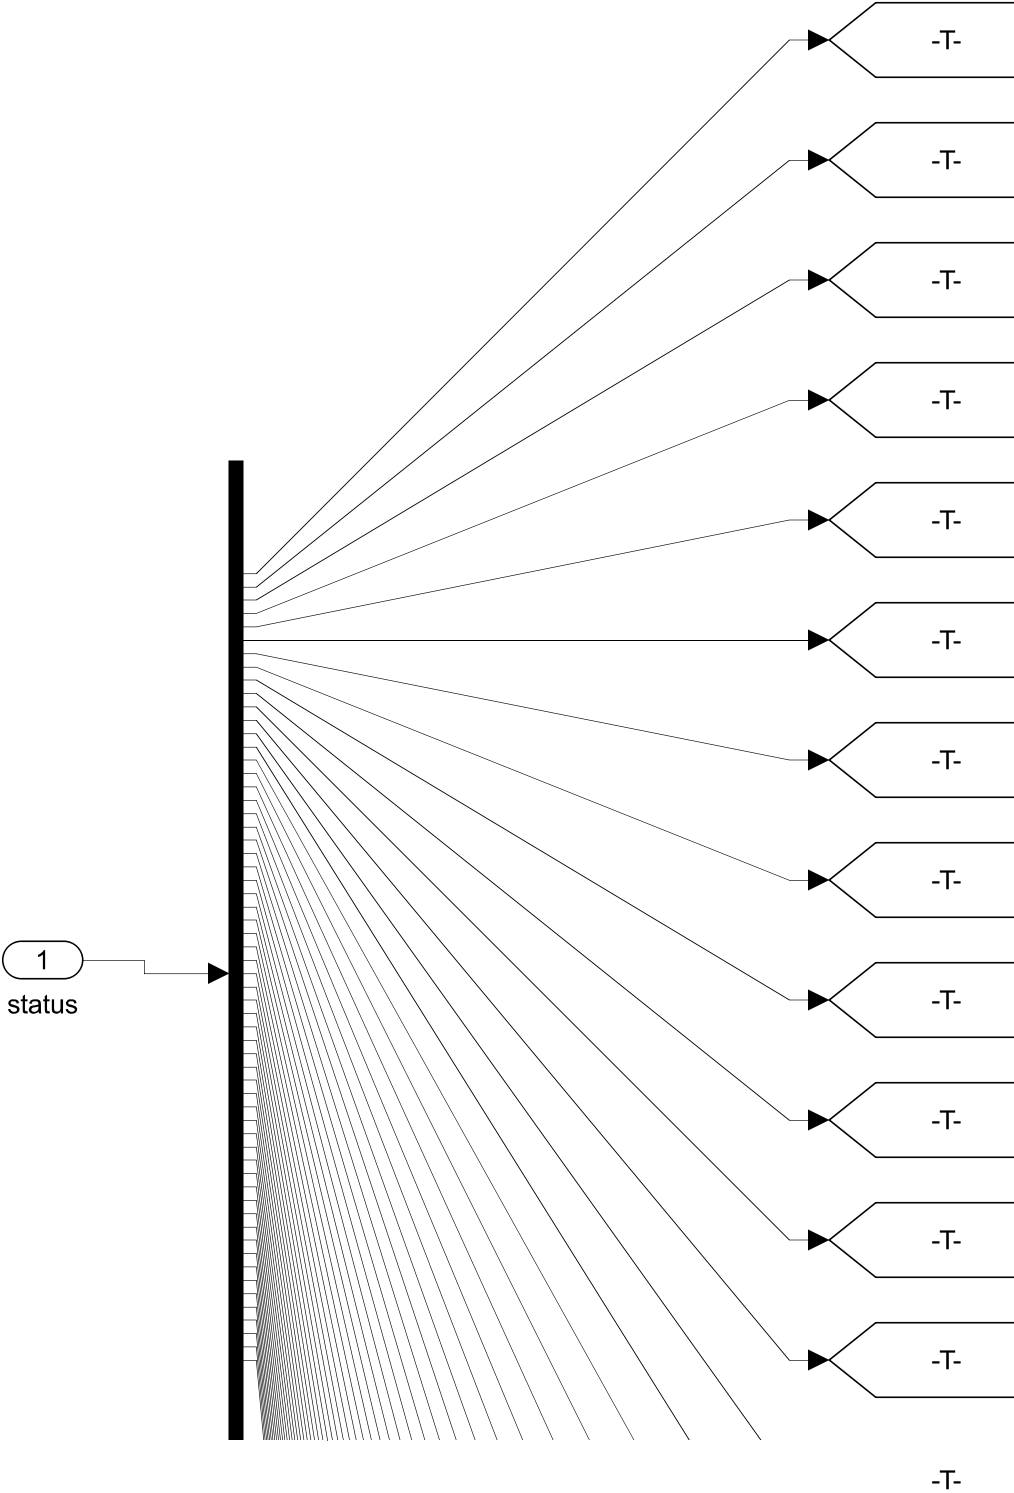

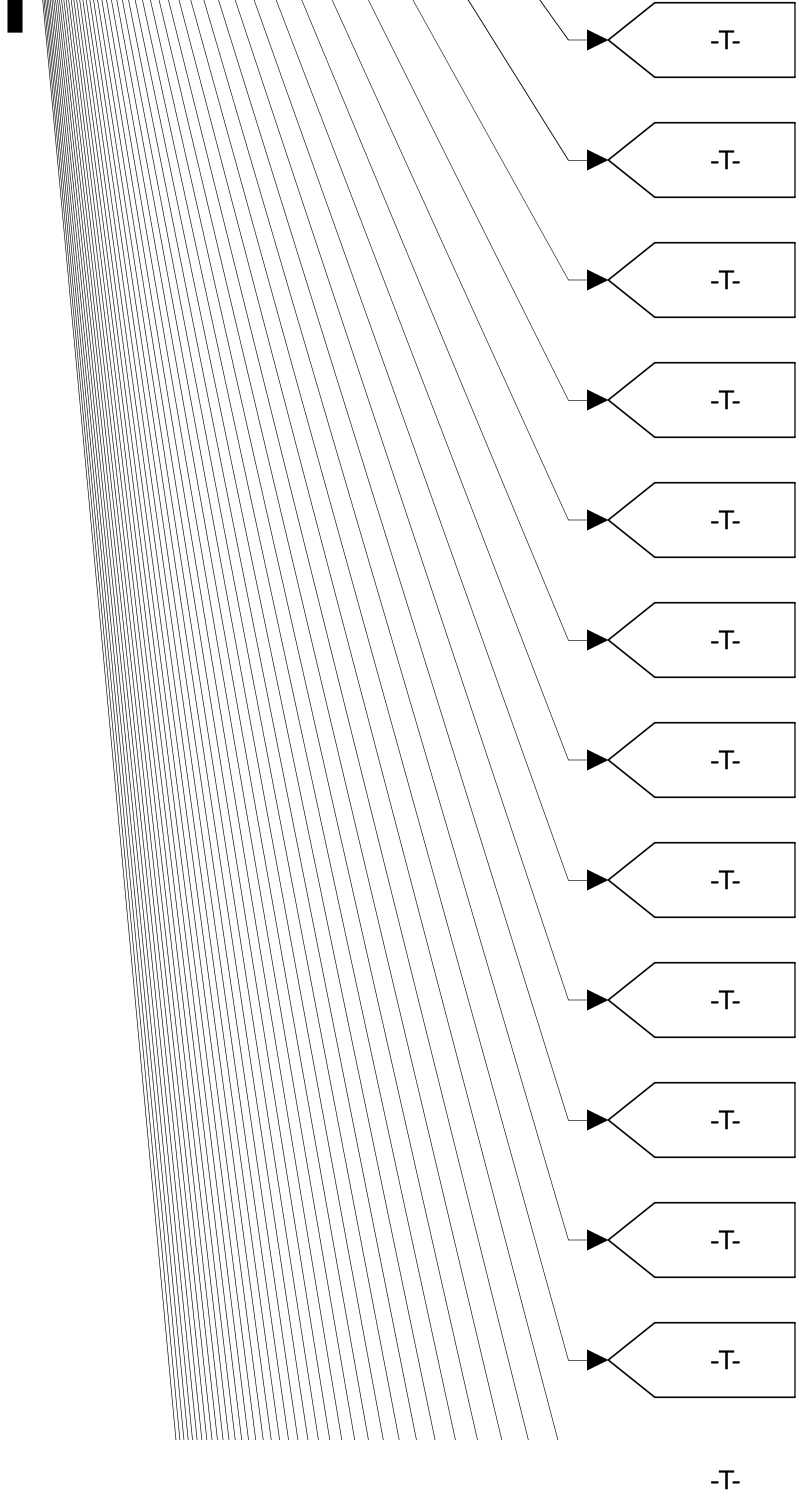













$-T-$



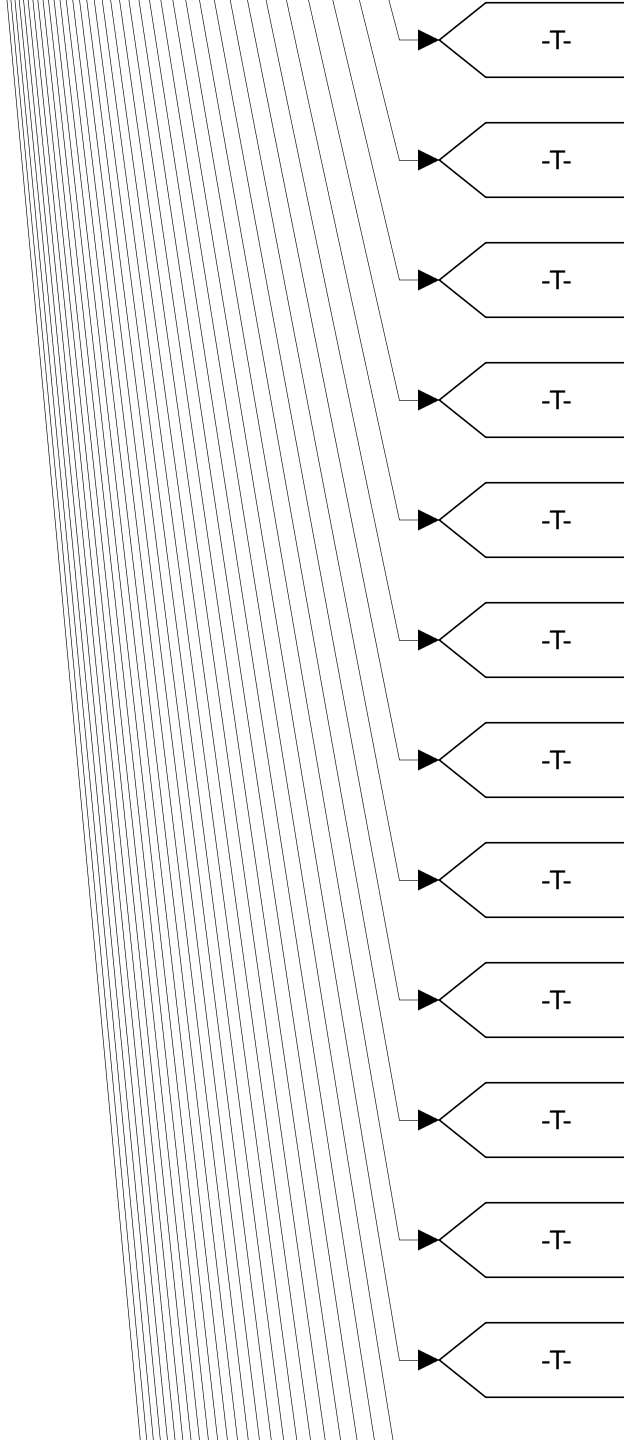


$-T-$








-T-




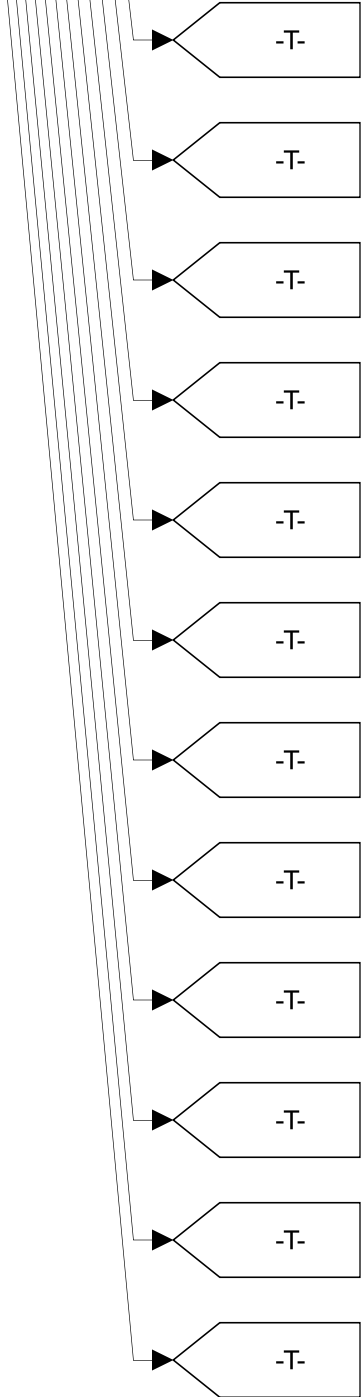

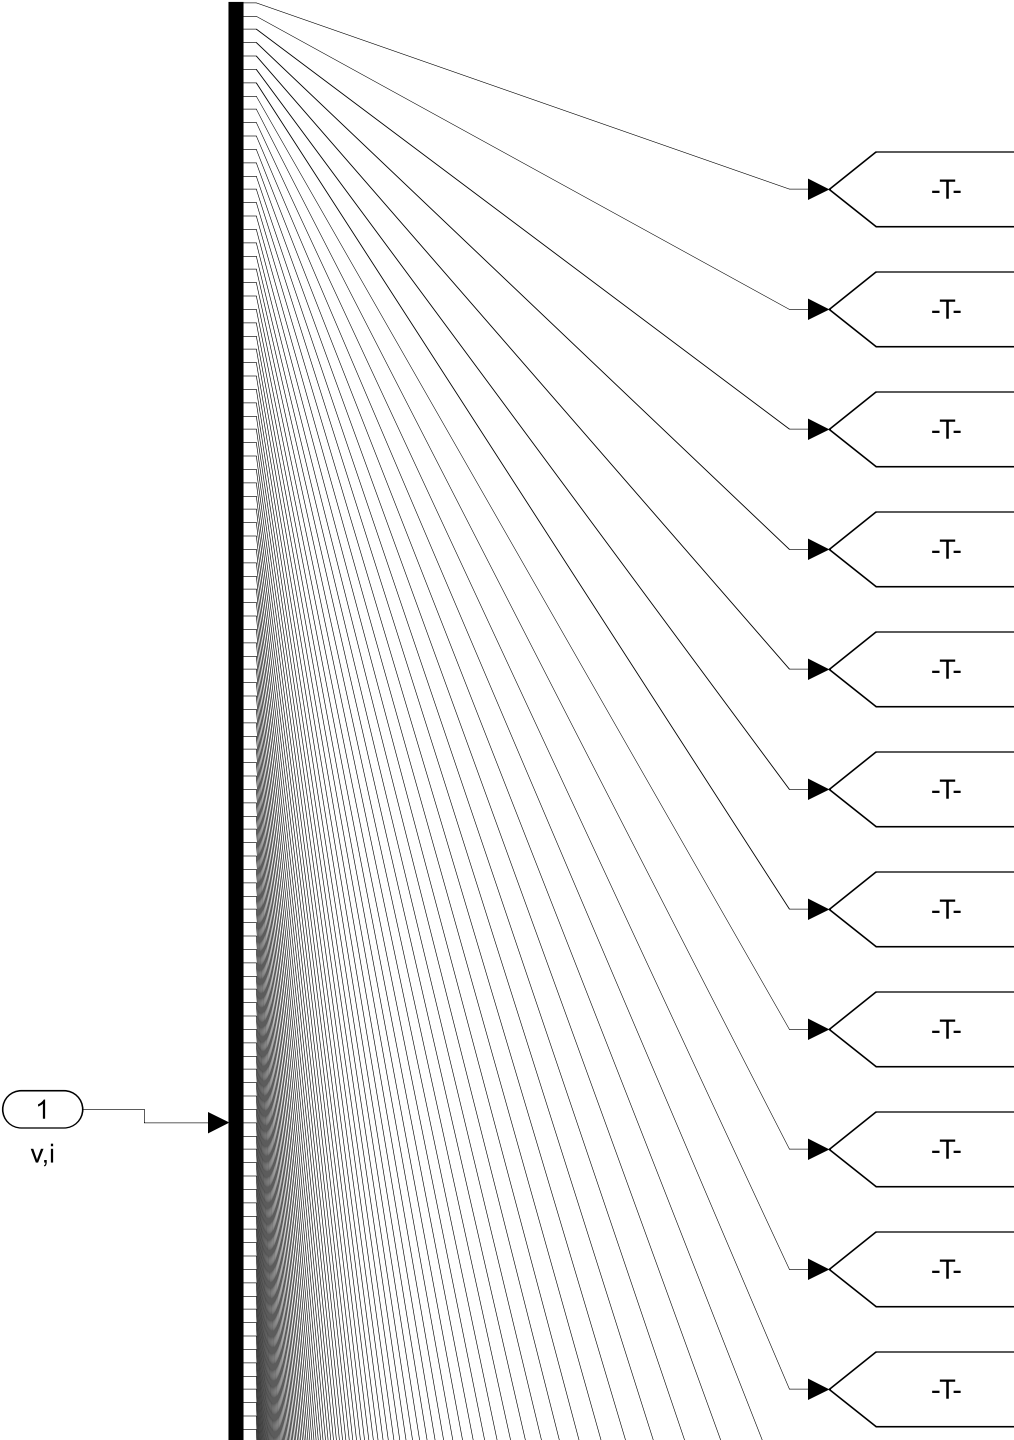

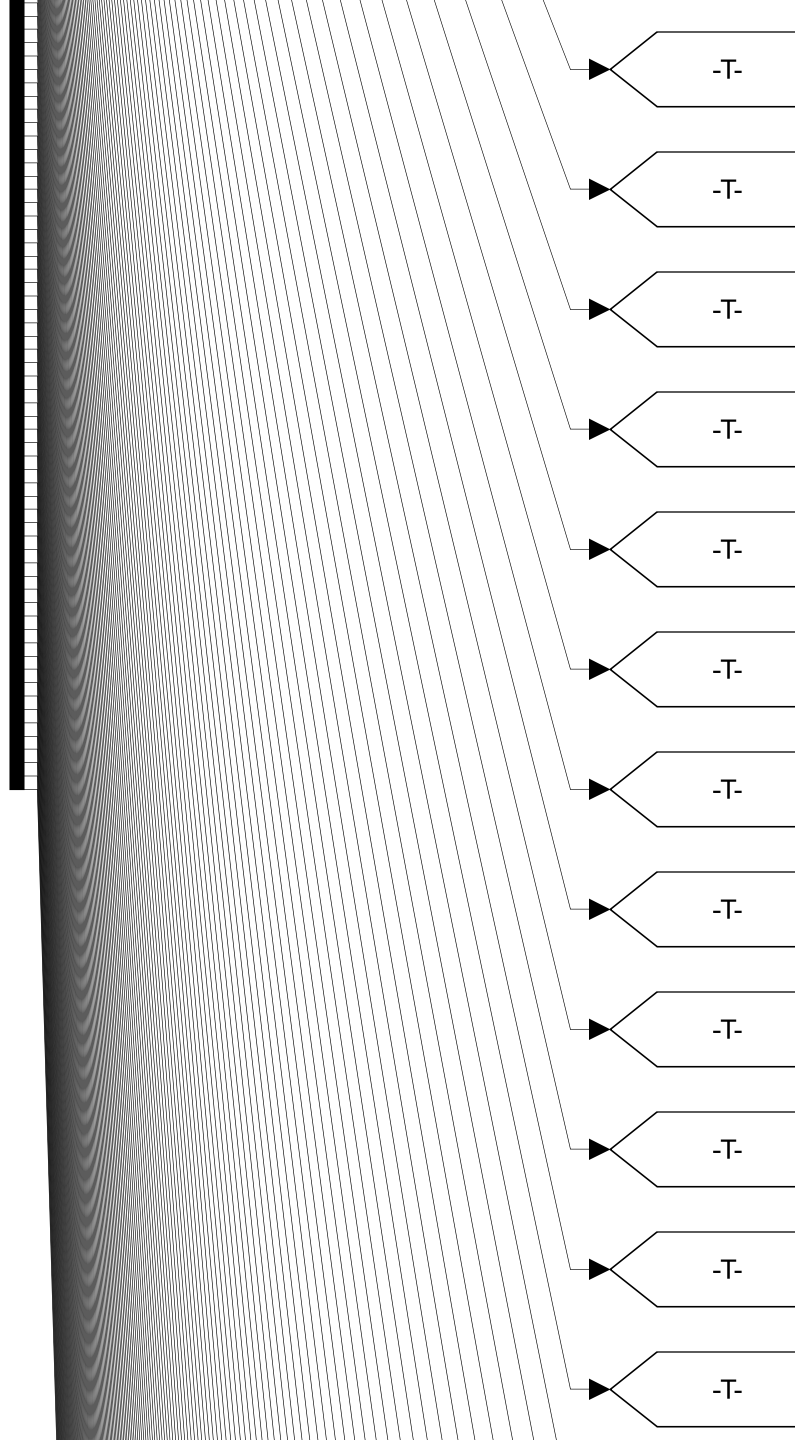

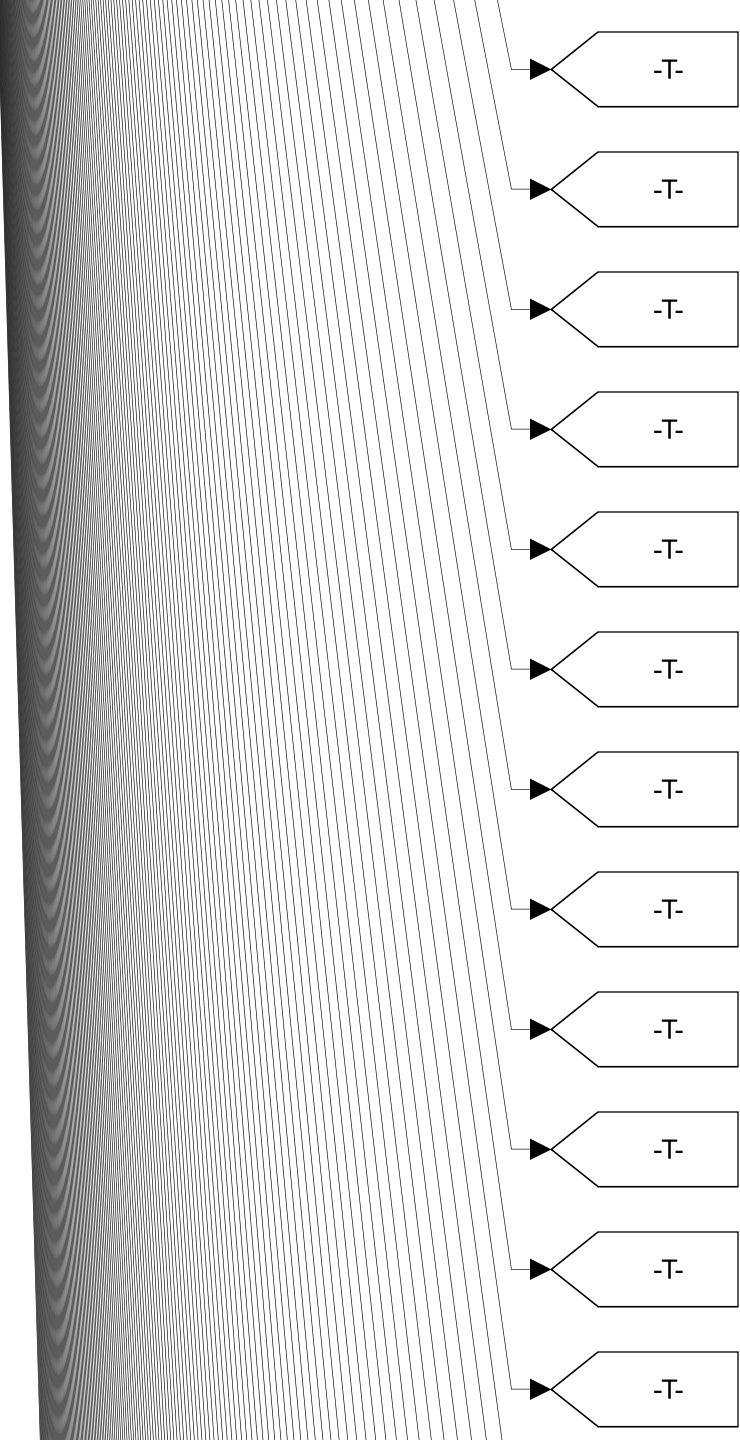

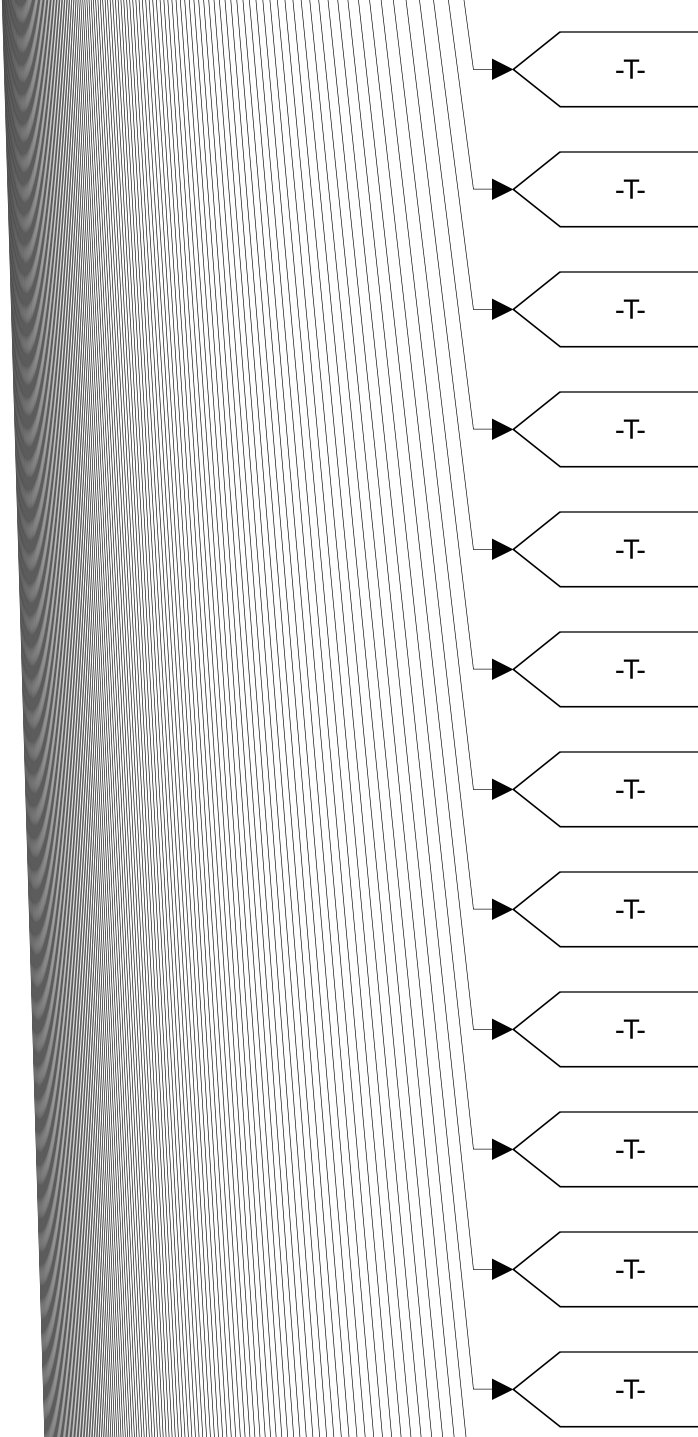

→ -T-

→ -T-

→ -T-

→ -T-

→ -T-

→ -T-

→ -T-

→ -T-














→ -T-














→ -T-


→ -T-


→ -T-




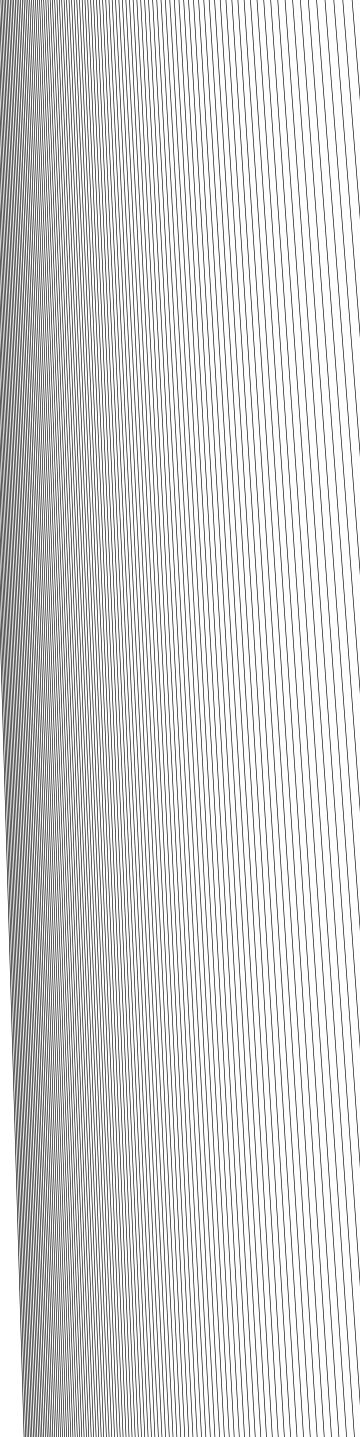


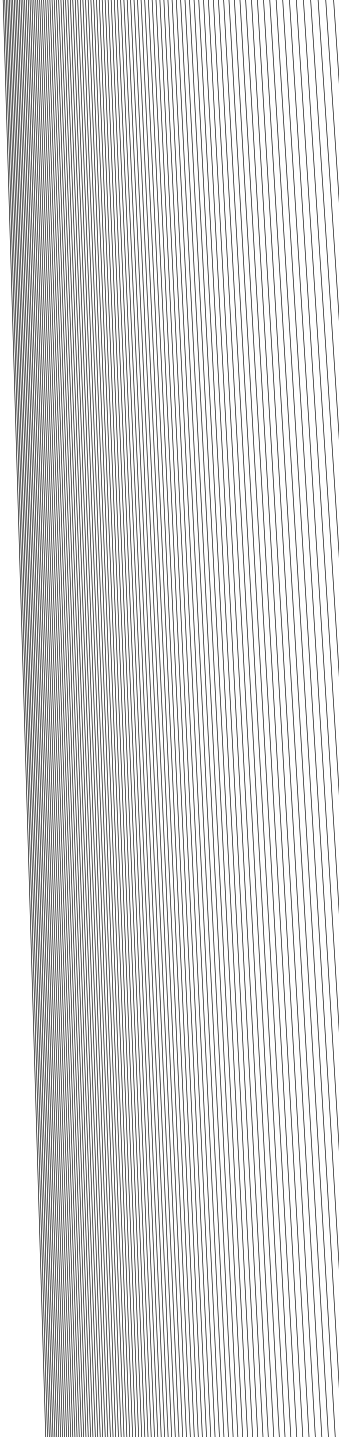


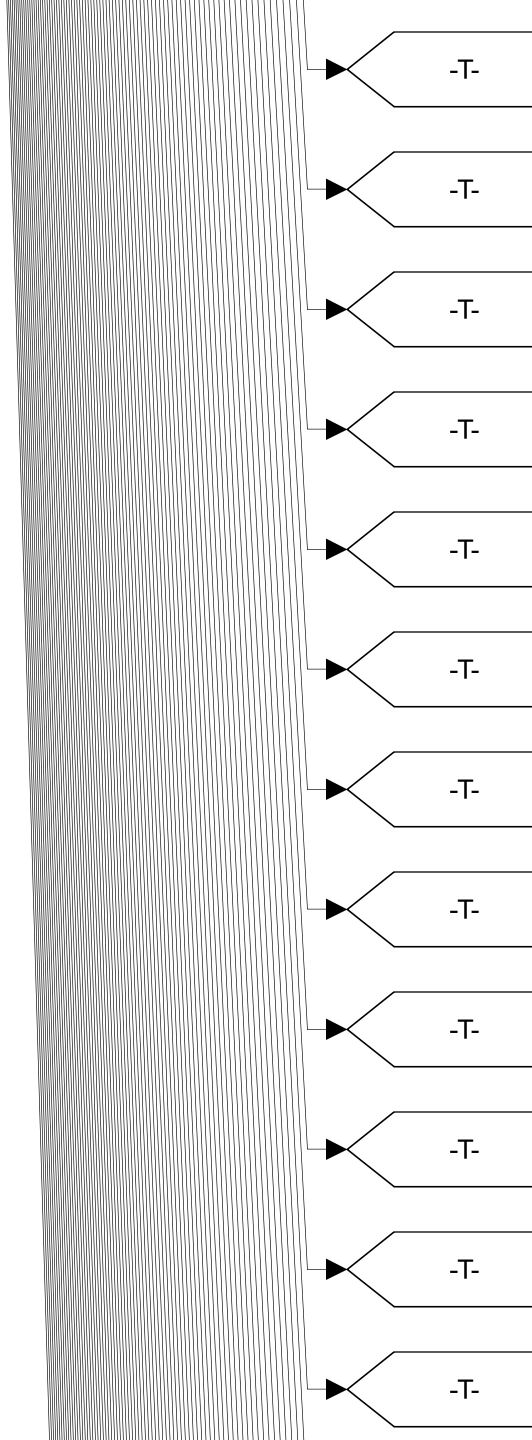


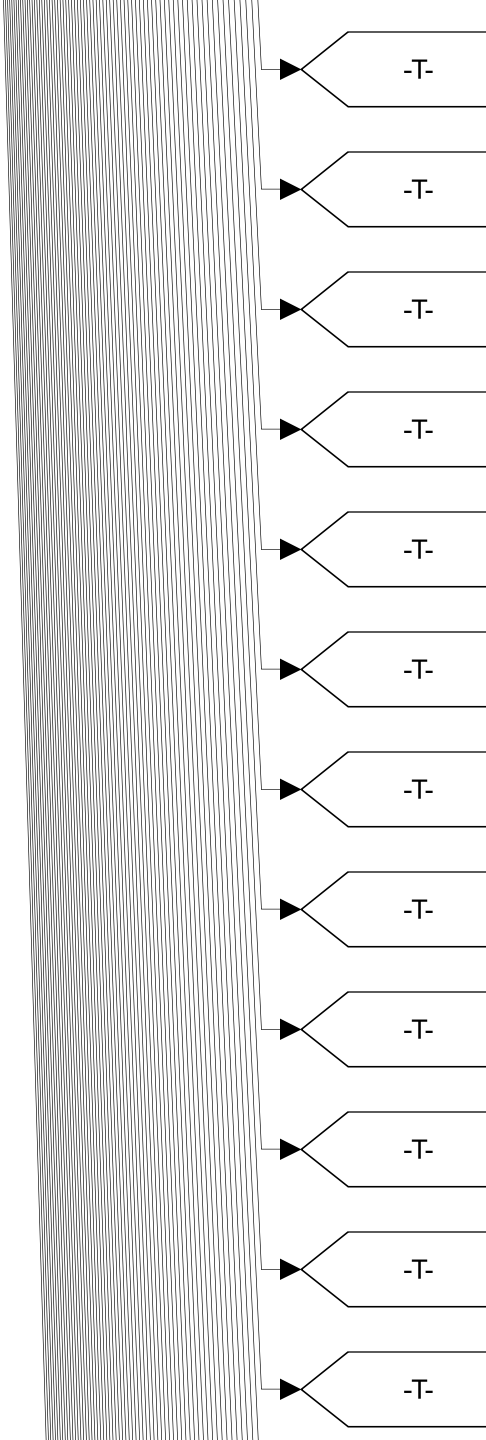


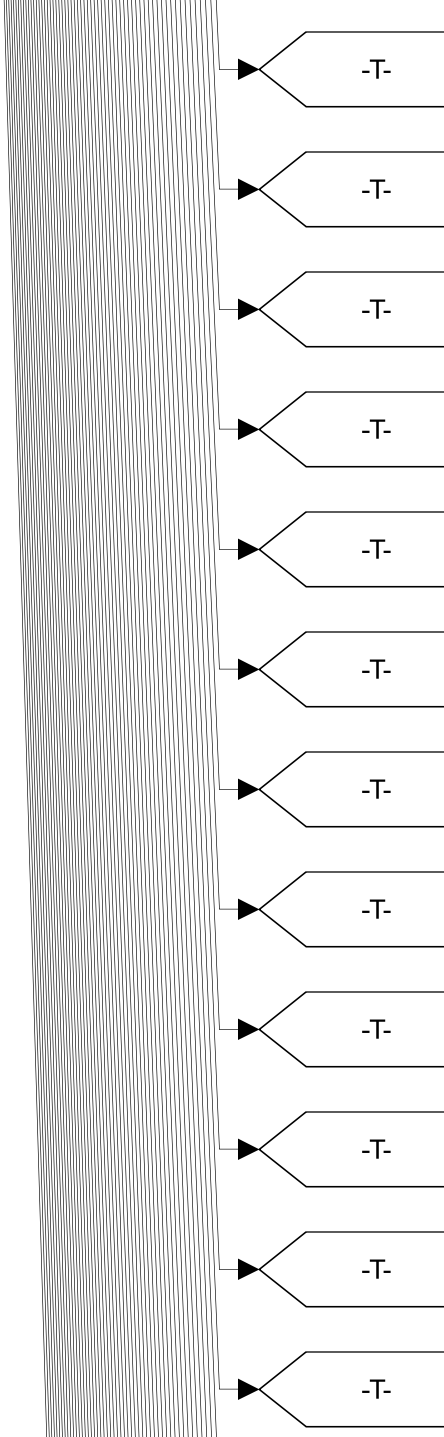


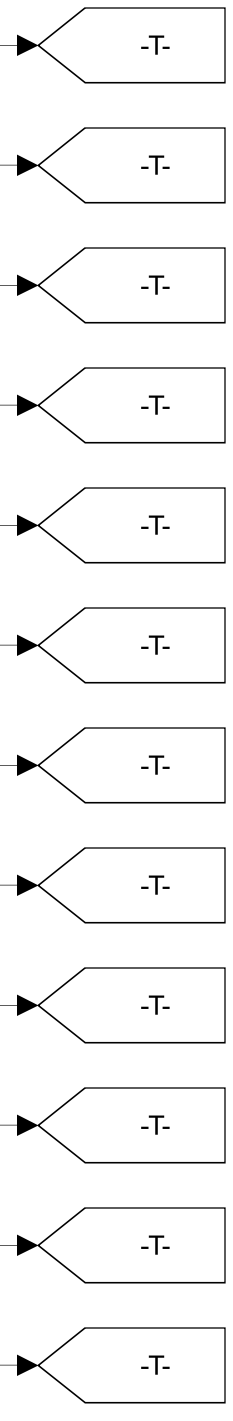


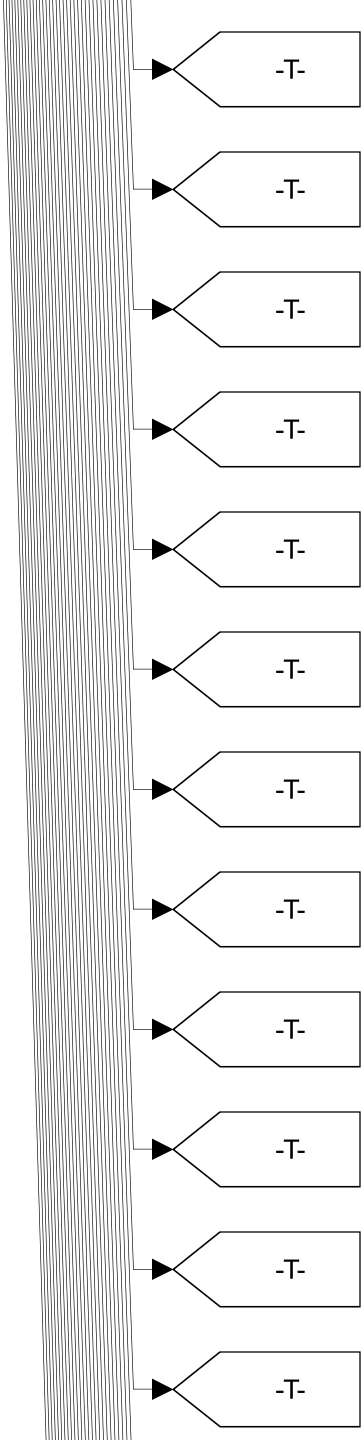


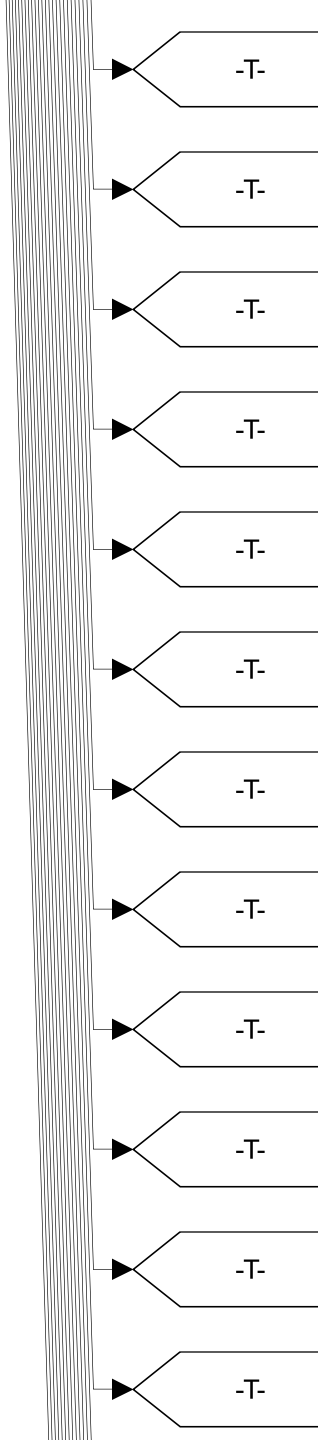


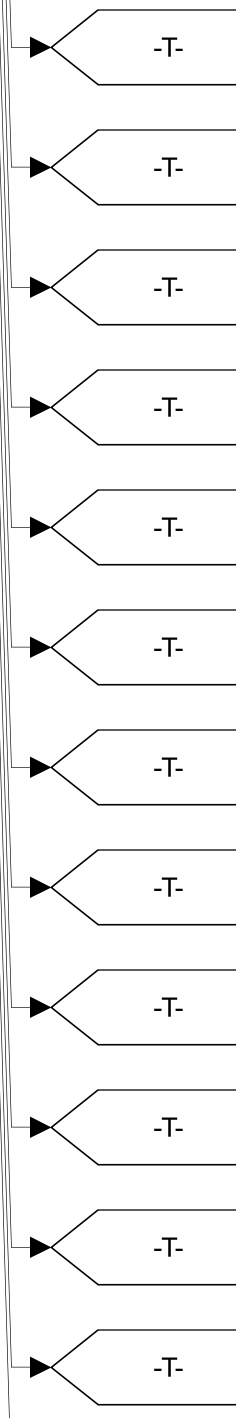






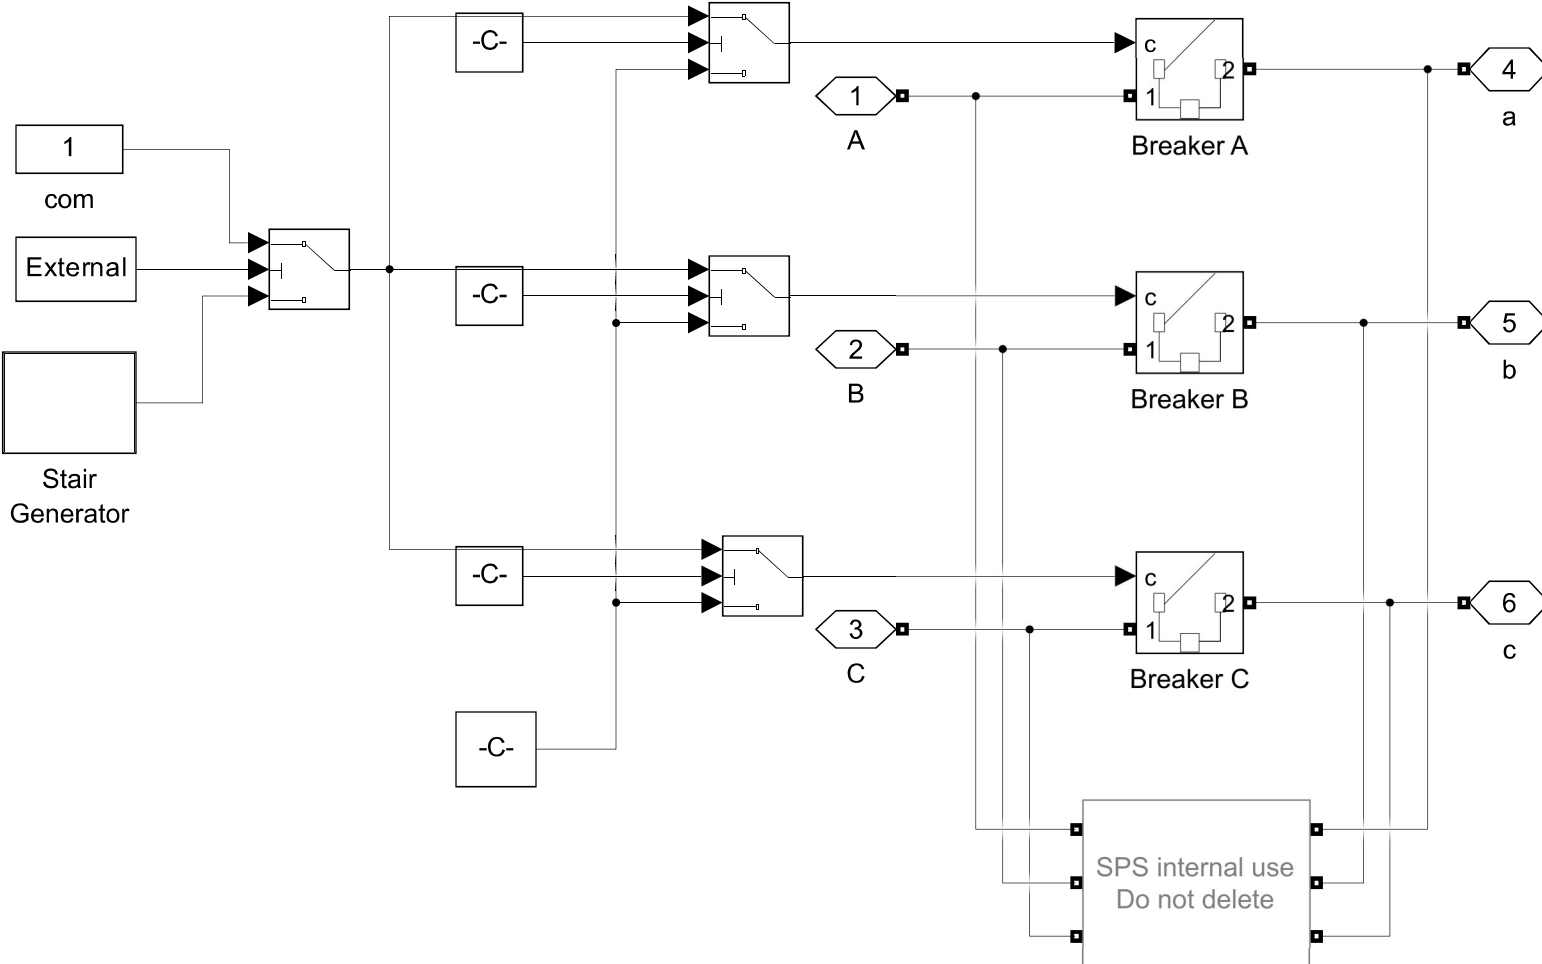



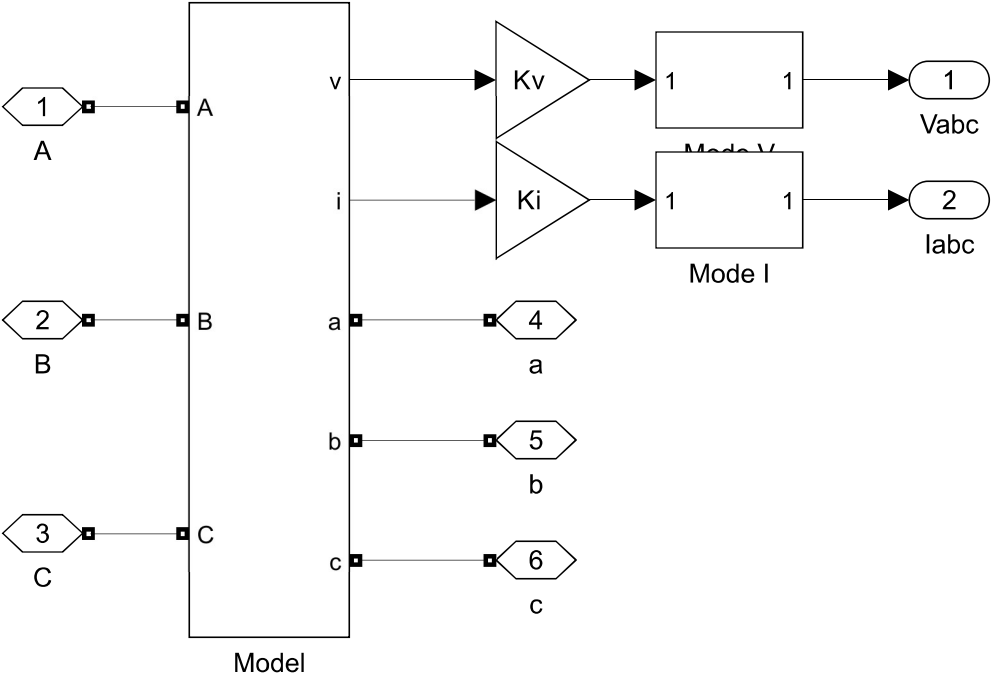


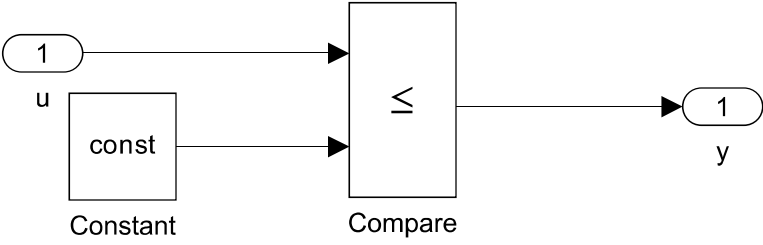

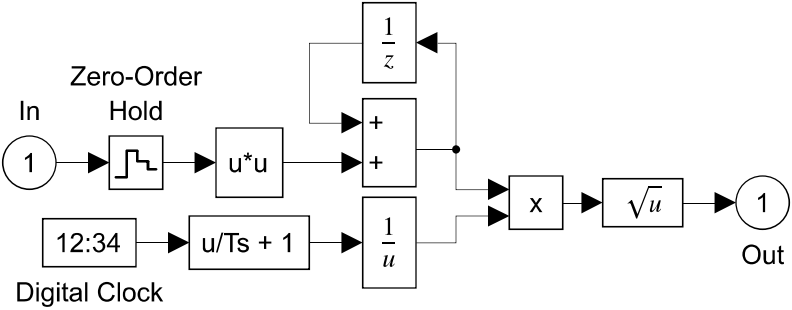

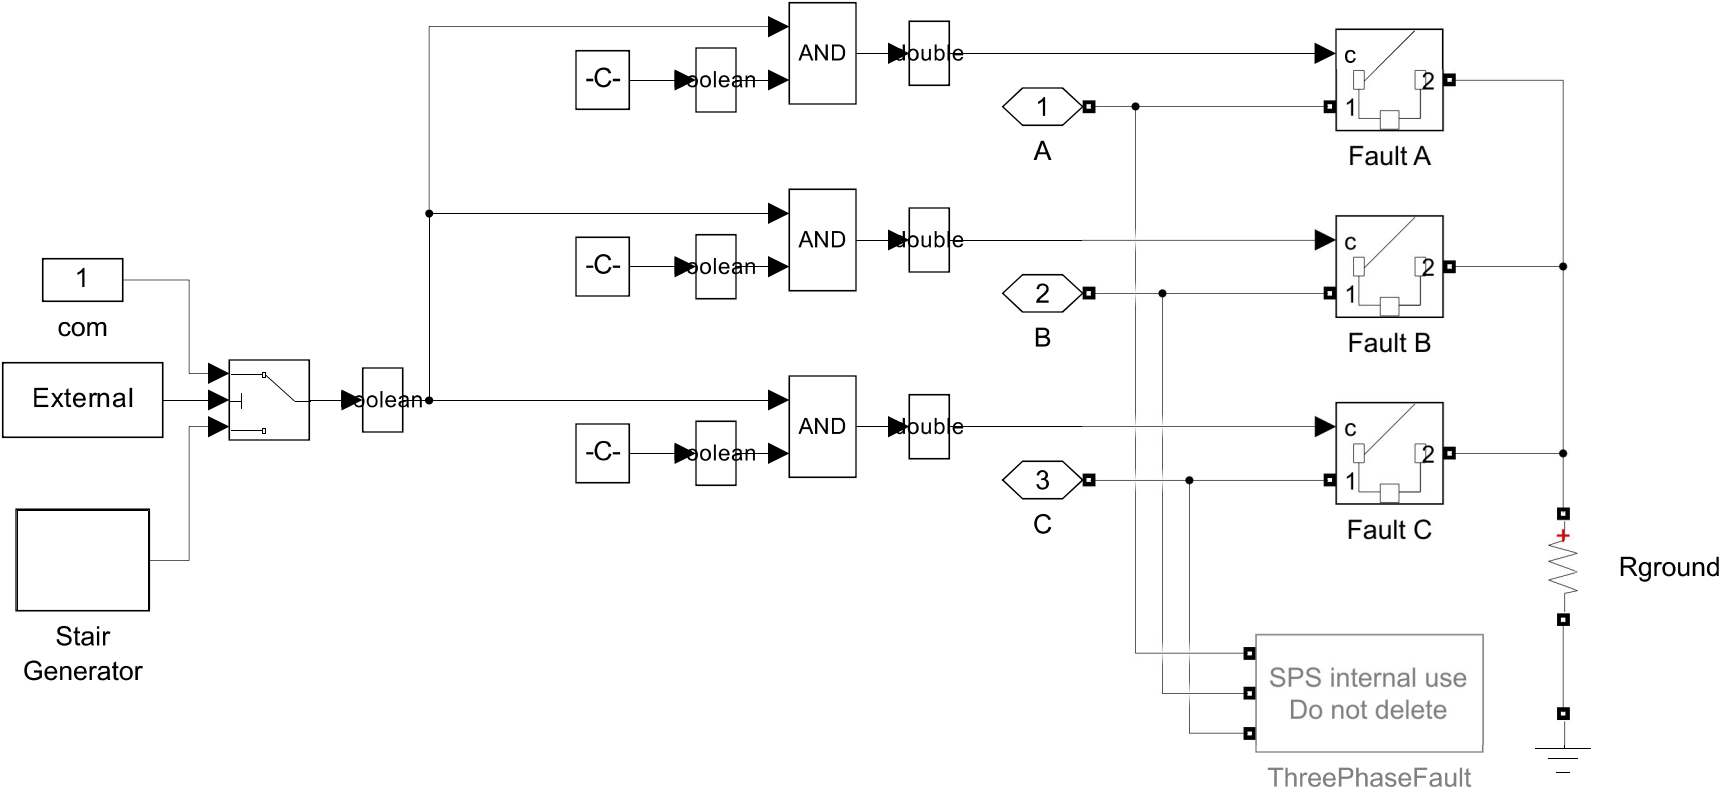

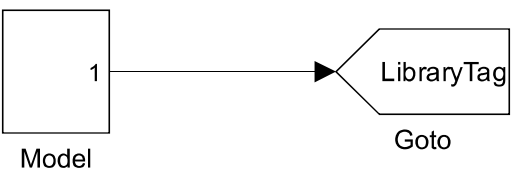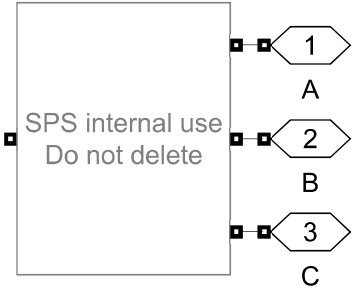

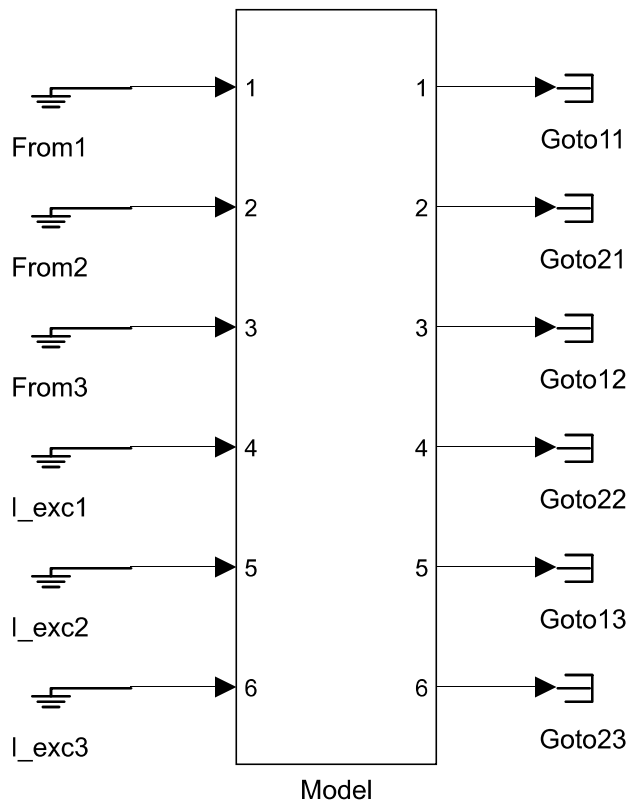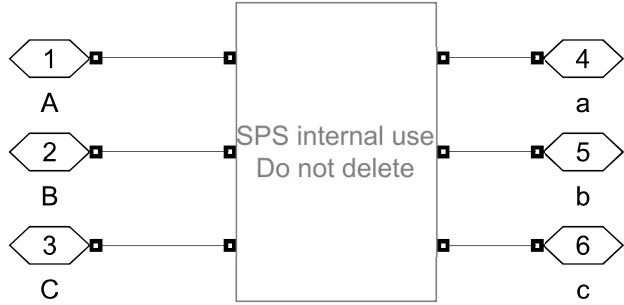

Page	System Name
1	nine_bus_main_model
2	nine_bus_main_model/powergui
3	nine_bus_main_model/powergui/EquivalentModel1
4	nine_bus_main_model/powergui/EquivalentModel1/Gates
5	nine_bus_main_model/powergui/EquivalentModel1/Sources
6	nine_bus_main_model/powergui/EquivalentModel1/Status
7	nine_bus_main_model/powergui/EquivalentModel1/Yout

Page Unique Resolved Library Links
(Page and Block Name referencing link)

8	spsThreePhaseBreakerLib/Three-Phase Breaker
(1	BRK_L1-4_B1)
(1	BRK_L1-4_B4)
(1	BRK_L2-7_B2)
(1	BRK_L2-7_B7)
(1	BRK_L3-9_B3)
(1	BRK_L3-9_B9)
(1	BRK_L4-5_B4)
(1	BRK_L4-5_B5)
(1	BRK_L4-6_B4)
(1	BRK_L4-6_B6)
(1	BRK_L5-7_B5)
(1	BRK_L5-7_B7)
(1	BRK_L6-9_B6)
(1	BRK_L6-9_B9)
(1	BRK_L7-8_B7)
(1	BRK_L7-8_B8)
(1	BRK_L8-9_B8)
(1	BRK_L8-9_B9)
9	spsThreePhaseVIMeasurementLib/Three-Phase V-I Measurement
(1	Bus_1 16.5 KV)
(1	Bus_2 18 KV)
(1	Bus_3 13.8 KV)
(1	Bus_4 230 KV)
(1	Bus_5 230 KV)
(1	Bus_6 230 KV)
(1	Bus_7 230 KV)
(1	Bus_8 230 KV)
(1	Bus_9 230 KV)
(1	VI_Bus1)
(1	VI_Bus2)
(1	VI_Bus3)
(1	VI_Bus4)
(1	VI_Bus5)
(1	VI_Bus6)
(1	VI_Bus7)
(1	VI_Bus8)
(1	VI_Bus9)
10	simulink/Logic and Bit Operations/Compare To Constant
(1	Compare To Constant)
(1	Compare To Constant1)
(1	Compare To Constant2)
(1	Compare To Constant3)
(1	Compare To Constant4)

```

( 1 Compare To Constant5)
( 1 Compare To Constant6)
( 1 Compare To Constant7)
( 1 Compare To Constant8)
( 1 Compare To Constant_L1_4)
( 1 Compare To Constant_L2_7)
( 1 Compare To Constant_L3_9)
( 1 Compare To Constant_L4_5)
( 1 Compare To Constant_L4_6)
( 1 Compare To Constant_L5_7)
( 1 Compare To Constant_L6_9)
( 1 Compare To Constant_L7_8)
( 1 Compare To Constant_L8_9)

11      sdolib/RMS Blocks/DRMS
( 1 DRMS_L1_4)
( 1 DRMS_L2_7)
( 1 DRMS_L3_9)
( 1 DRMS_L4_5)
( 1 DRMS_L4_6)
( 1 DRMS_L5_7)
( 1 DRMS_L6_9)
( 1 DRMS_L7_8)
( 1 DRMS_L8_9)

12      spsThreePhaseFaultLib/Three-Phase Fault
( 1 FAULT_L5_7)
( 1 FAULT_L4_5)

13      spsThreePhaseSourceLib/Three-Phase Source
( 1 G1)
( 1 G2)
( 1 G3)

14      spsThreePhaseTransformerTwoWindingsLib/Three-Phase Transformer (Two Windings)
( 1 TR1_1_4)
( 1 TR2_2_7)
( 1 TR3_3_9)

```