

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Grip Heater
Part Number:	99994-2253
Flat Rate Time(Hr):	0.9

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

 **WARNING** : WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.


Refer to the following Service Manual for detailed procedures.
(KLE500) P/No.: 99830-0209 or 99832-0356

NOTE

- This kit does not operate if the relay kit is not installed, therefore install the relay kit (see Relay Kit (P/No.: 99994-1985) for Assembly Instructions Manual).
- When installing the hand cover kit (P/No.: 99994-2284), install this kit and the hand cover kit at the same time.

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Left Grip Heater	46075-0701	1	
2	Right Grip Heater	46019-0136	1	
3	Bracket	11058-2508	1	
4	Cover	14094-0304	1	
5	Grip Heater Controller	21175-2197	1	
6	Harness	26031-4366	1	
7	Screw	220AB0540	1	M5 × 40 mm
8	Screw	220AB0545	1	M5 × 45 mm
9	Screw	92172-0007	1	M5 × 10 mm
10	Collar	92152-1848	2	L = 5 mm
11	Collar	92152-3908	1	L = 19 mm
12	Collar	92152-3909	1	L = 12 mm
13	Trim	53044-0660	1	
14	Clamp	92173-0742	2	Nylon Type
15	Clamp* ¹	92173-2194	1	Rubber Type
16	Clamp	92173-2198	1	Rubber Type
17	Clamp	92173-2199	1	Rubber Type
18	Bolt (with a Non-permanent Locking Agent)	92154-7967	2	M6 × 18 mm

*¹: The clamp is the same as this used in the fog lamp kit (P/No.: 99994-2264). When installing the grip heater kit and fog lamp kit at the same time, use the clamp from either kit.

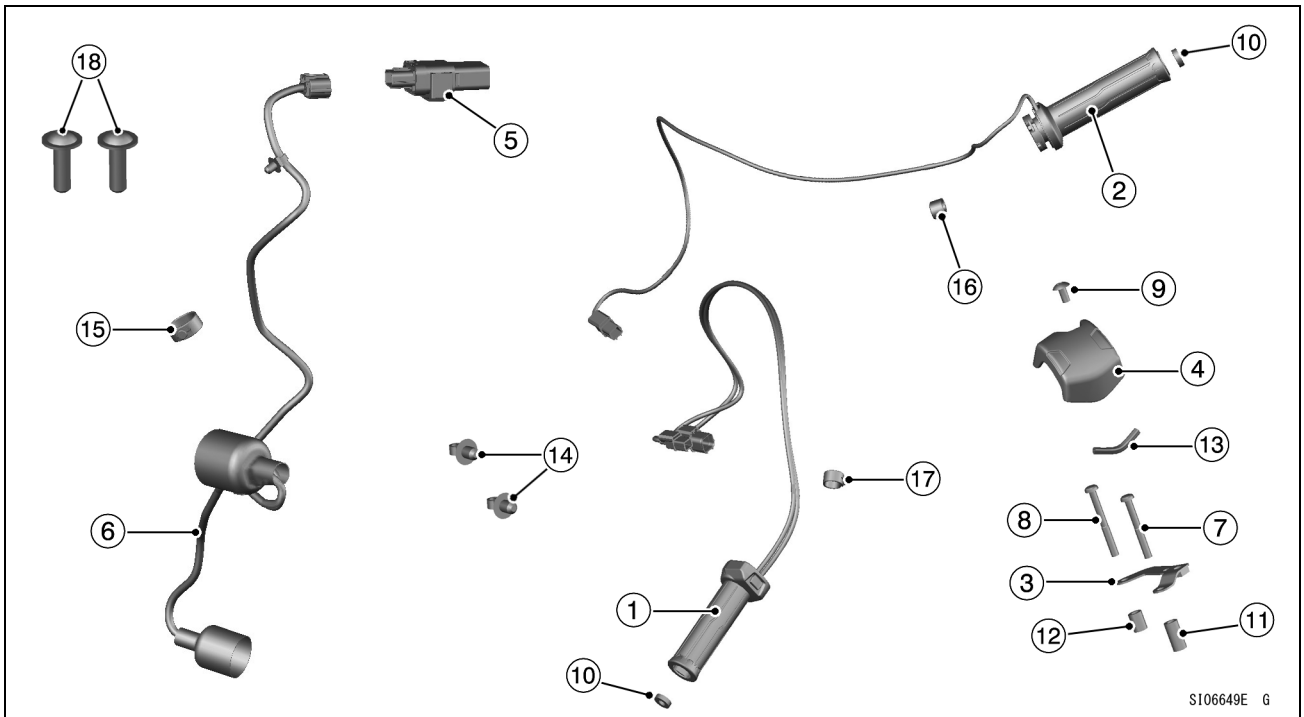

Installation Instructions

- Remove the following parts (Refer to the Service Manual).
 - Lower Fairings
 - Handlebar Weights
 - Throttle Grip


NOTE

- *The removed throttle grip and right switch housing screws are not necessary for this accessory.*

- Apply compressed air to the inside of the left handlebar grip [A] to remove the grip.

NOTE

- *The removed left handlebar grip is not necessary for this accessory.*

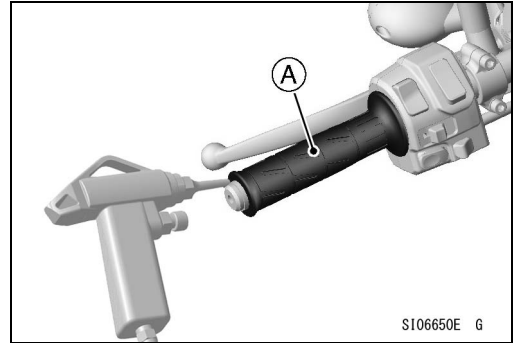


- Using a cleaning fluid, clean off any oil or dirt on the handlebar and dry them with a clean cloth.
- Before installing the left grip heater, mask the bolt hole of the handlebar end to prevent adhesive from entering it.
- Apply heat resistant adhesive [A] inside the left grip heater [1] as shown.
 - 30 mm (1.2 in.) [B] from this side of the rib ends [C]

Sealant – Adhesive, TB1530C: 56042-0001

NOTE

- *Quickly complete bonding process before the adhesive is dry. To prevent motorcycle from falling over, work with an assistant.*
- *Once installed left grip heater cannot be reused.*

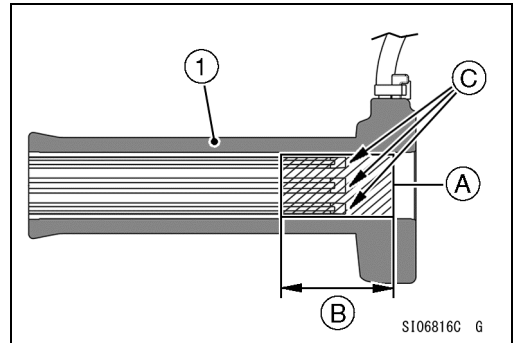




WARNING

Be sure to use the specified adhesive to securely bond the left grip heater with the handlebar. Dry them until bonded. Make sure that they are completely bonded together.


Using an unspecified adhesive or insufficient drying time can cause the grip heater to fall off during riding, which leads to turnover accidents resulting in severe injury or death.

NOTE


- When inserting the grip heater into the handlebar, do not grasp the grip heater switch portion strongly, do not hammer the grip end, or do not twist the grip strongly. The circuit in the grip heater may be broken.
If the grip heater stops in the middle of the handlebar, inject degreaser into the gap between the handlebar and the grip heater to remove the grip heater. Never try to prize out the grip heater with a wiring driver. The circuit in the grip heater may be broken.

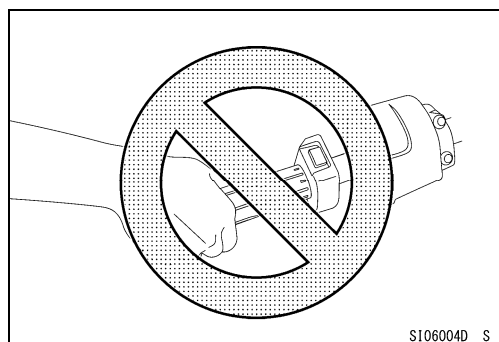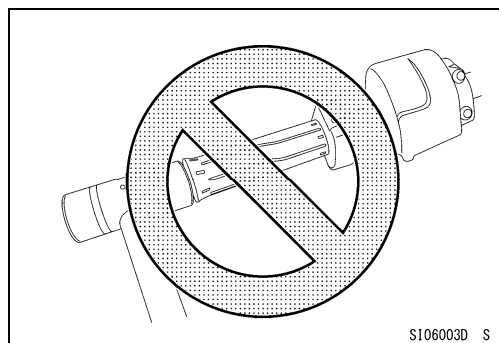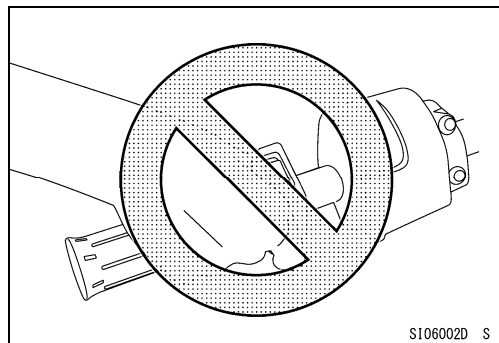


- Align the harness outlet (front end side) [A] of the left grip heater [1] and mating surface [B] of the left switch housing [C].
No Clearance [D]
- Wipe out excess adhesive.

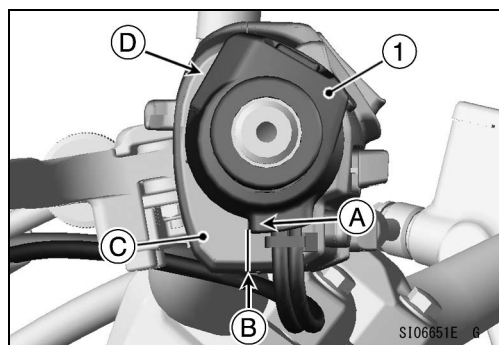

- Run the left grip heater leads [A] as shown.
- Hold the left grip heater leads and left switch housing lead [B] with the clamp [17] at the gray tape position.

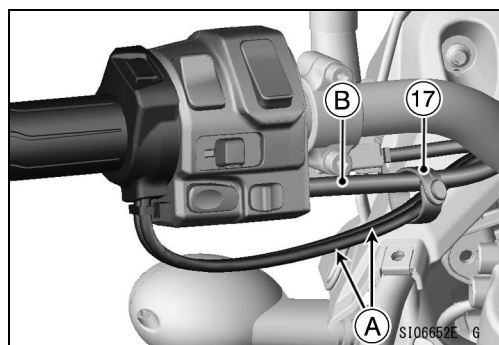


- Open the clamp [A].
- Run the left grip heater leads [B] as shown.
- Hold the left grip heater leads, left switch housing lead [C] and clutch cable [D] with the clamp [A].
- Run the left grip heater leads into the guide [E].
- Position the left grip heater leads innermost and bottom of the vehicle.

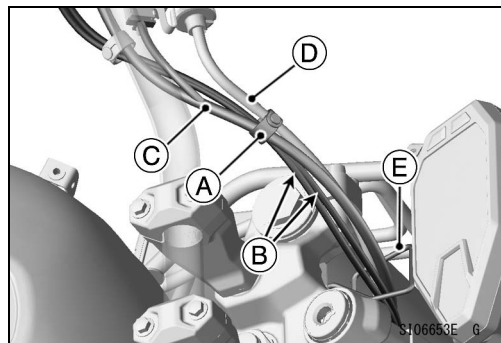


- Run the left grip heater leads [A] as shown.
- Run the left grip heater leads to the inside of the frame [B].

NOTE

- *In this illustration, the canister has been removed for the purpose of explanation.*

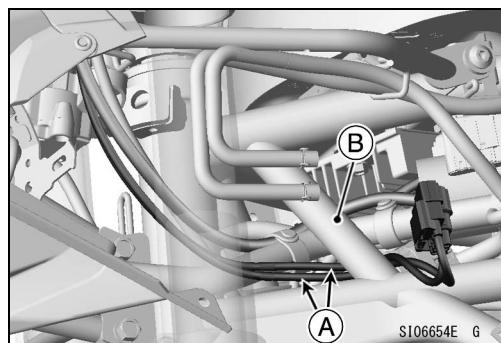

- Install the trim [13] on the guide [A] of the cover [4].

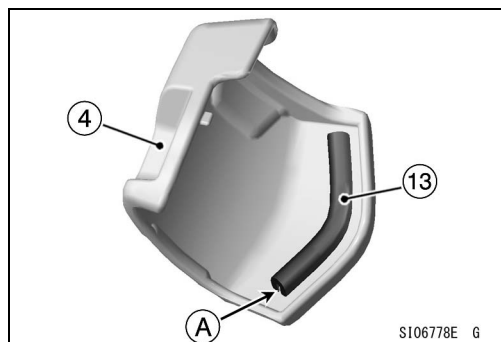


- Install the right grip heater [2] in the same way as the throttle grip (Refer to the Service Manual).

- Install:
 - Collars [11] [12]
 - Bracket [3]

- Tighten the screws [7] [8].


Torque – Screws: 2.4 N·m (0.24 kgf·m, 21 in·lb)

- Run the right grip heater lead [A] over the collar [11].

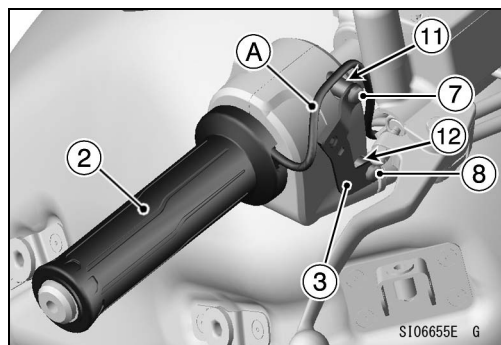


- Install the cover [4].
- Tighten the screw [9].


Torque – Screw: 3.0 N·m (0.31 kgf·m, 27 in·lb)

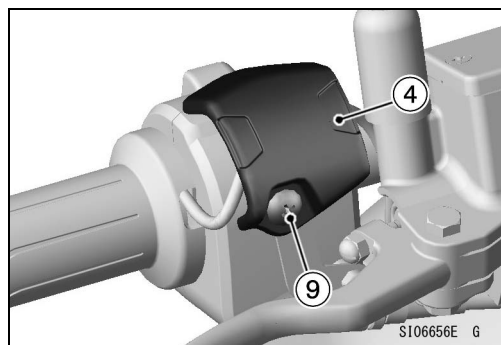


- Run the right grip heater lead [A] between the handlebars [B] and mirror boss [C].

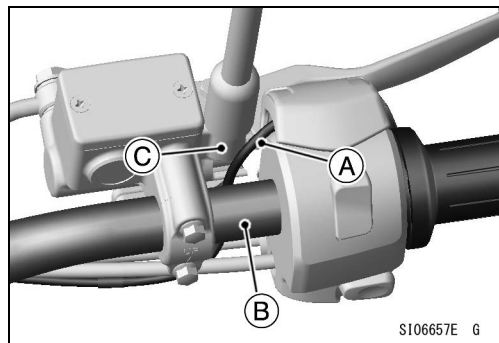


- Run the right grip heater lead [A] as shown.
- Hold the right grip heater lead and right switch housing lead [B] in front of the brake fluid level inspection window [C] with the clamp [16].
- Check that the throttle grip moves smoothly from full open to close.

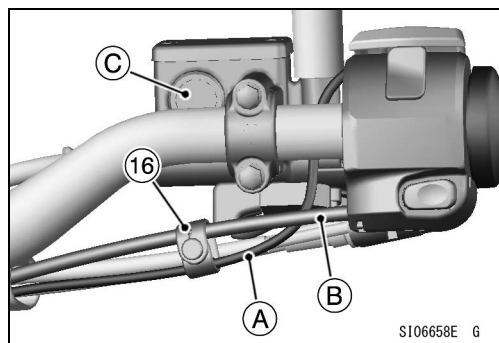


- Open the clamp [A].
- Run the right grip heater lead [B] as shown.
- Hold the right grip heater lead, right switch housing lead [C] and throttle cables [D] with the clamp [A].

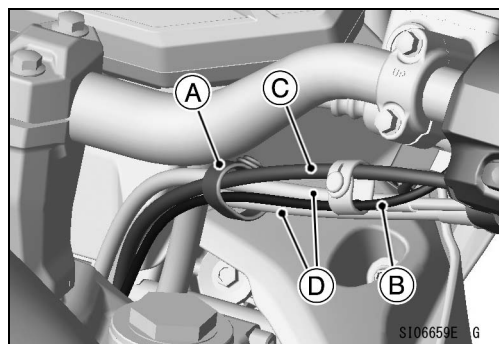

- Run the right grip heater lead [A] as shown.
- Run the right grip heater lead into the guide [B].
- Position the right grip heater lead innermost and top of the vehicle.

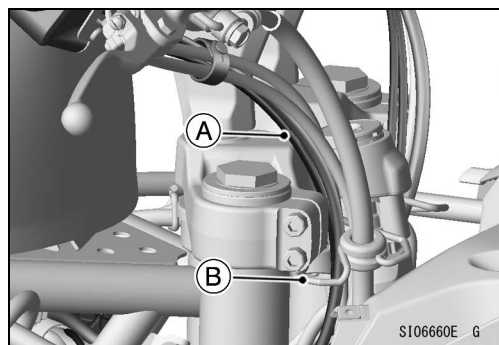

- Run the right grip heater lead [A] as shown.
- Run the right grip heater lead to the inside of the bracket [B].

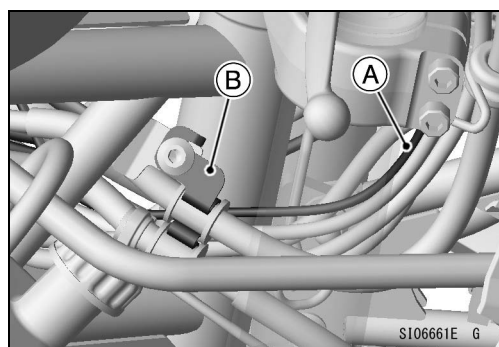


(Under the Frame)


- Run the right grip heater lead [A] along throttle cables [B] as shown.
- Position the right grip heater lead to the inside of the brake hose [C].

NOTE


- *In this illustration, the fuel tank has been removed for the purpose of explanation.*

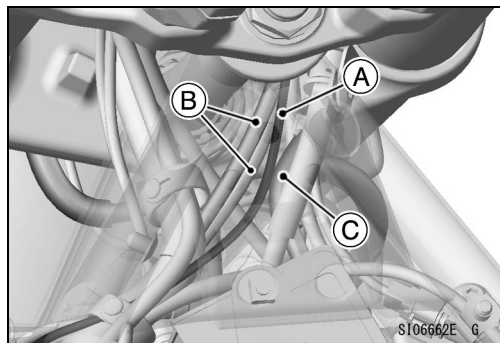



- Run the right grip heater lead [A] between the left switch housing lead [B] and main harness [C].
- Open the clamp [D].
- Hold the right grip heater lead, main harness and ignition switch lead [E] with the clamp [D] at the gray tape position.

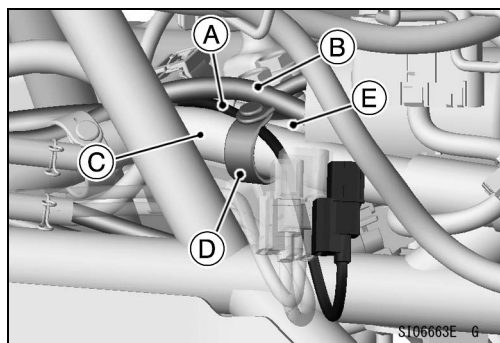


- Run the harness [6] as shown.
- Run the harness [6] to the inside of the dust cover [A] and hose [B].
- Connect the connectors of the harness [6] to the left and right grip heater lead connectors [C].
- Slide the dust cover [A] on the connectors.

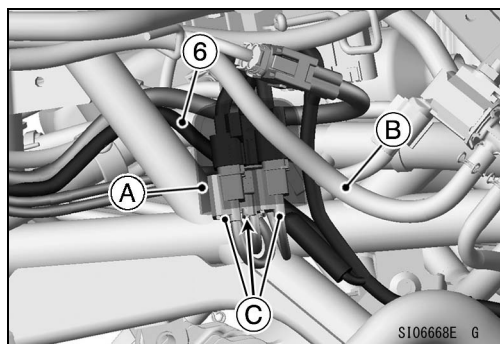


- Align [A] the end of the dust cover [B] and end of each connector.
- Install the clamp [14] to the harness [6] at near the inlet hole [C] of the dust cover.
- Cut the excess of the clamp.
- Install the clamp [14] to the bracket [D].

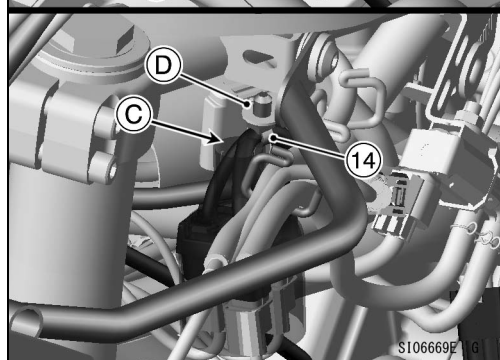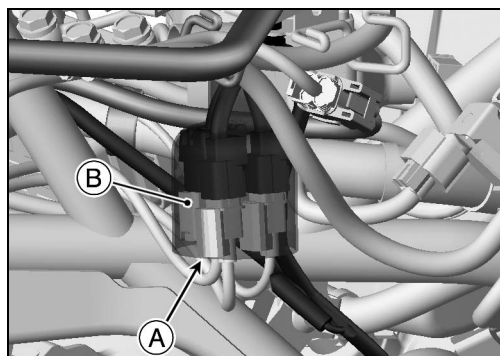

- Remove the tape on the connector [A].

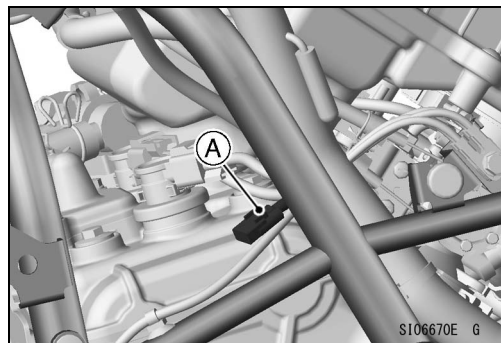


- Run the harness [6] as shown.
- Hold the harness with the clamp [14] at the white tape position of the harness.
- Cut the excess of the clamp.
- Install the clamp [14] to the frame [A].
- Connect the connectors [B].
- Slide the dust cover [C] on the connectors.
- Do not slack in main harness side connector.

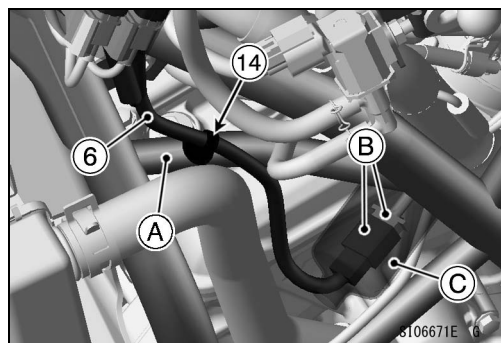


NOTE

- *After connecting the connectors, do not push the dust cover [C] to the engine side. Prevent the dust cover from interfering with the engine head.*


- Run the harness [6] as shown.
- Run the harness [6] to the inside of the frame [A].
- Run the harness [6] over the clamp [B].
- Hold the harness, main harness [C], left grip heater leads [D] and fog lamp switch lead [E] (fog lamp kit equipped vehicle) with the clamp [15] at the gray tape positions of the left grip heater leads and main harness.

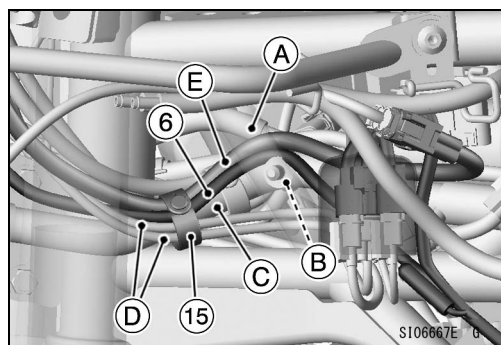


- Run the harness [6] as shown.
- Position the harness to the inside of the left grip heater leads [A].
- Do not slack in this area harness [B].
- Insert the clamp [C] of the harness into the hole of the bracket.

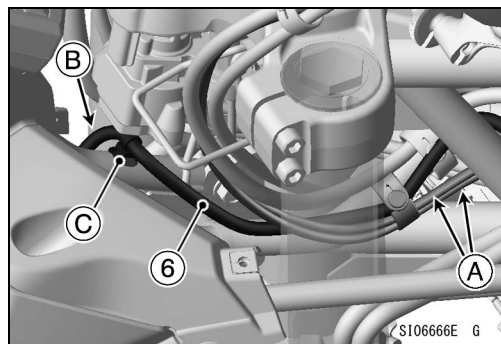


- Install the grip heater controller [5] to the bracket [A].

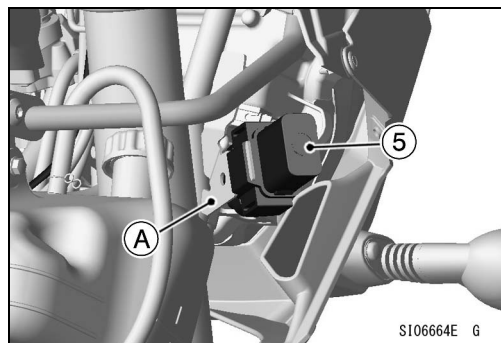

- Run the harness [6] as shown.
- Position the harness to the inside of the main harness [A].
- Connect the connector [B] of the harness to the grip heater controller [5].

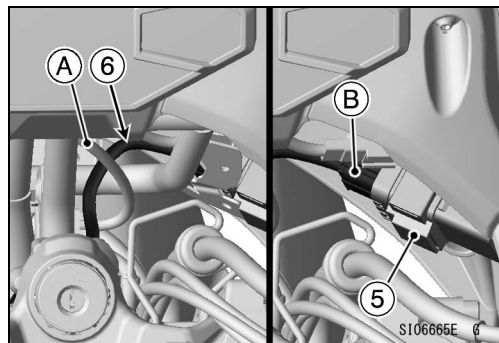

- Install the collar [10] and handlebar weight [A].
- Install the hand cover (equipped vehicle).
- Tighten the bolt [B].
- Except for hand cover equipped vehicle, apply a non-permanent locking agent to the threads of the bolt [B].
- The other side also with same procedure.

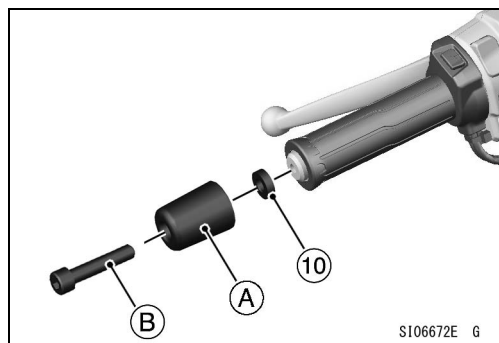


- Check that the throttle grip moves smoothly from full open to close.


⚠ WARNING

After having installed the right grip heater to the motorcycle, open and close the throttle to make sure that it moves smoothly. Driving without conducting proper checks on the throttle can lead to an accident. If the throttle becomes stuck, it possibly causes motorcycle fall over accident, resulting in severe injury or death.

- Turn the handlebar to both sides.
- ★ If the interfere with handlebar movement, inspect the installation condition of parts.
- Turn the ignition switch on.
- Push the grip heater switch, and check the indicator light (LED) [A] goes on.
- ★ If the indicator light (LED) does not go on, inspect the installation condition of parts.
- Turn the ignition switch off.

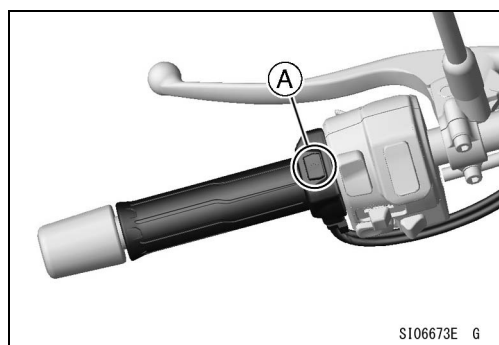

- Install the removed parts (Refer to the Service Manual).
- Replace the bolts [A] with new ones [18] on both sides.

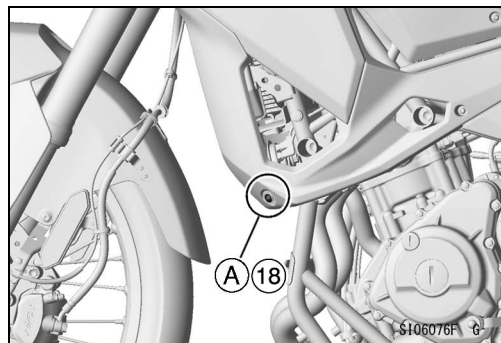

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.

NOTE

- *This grip heater is rated at 28 W.*
- *Please refer to the Operation Manual (Part No. 99870-0396) for operating procedures.*