

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Engine Guard
Part Number:	99994-2263
Flat Rate Time(Hr):	0.2

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*


● Indicates a procedural step or work to be done.

○ Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

NOTE

○ *When installing the fog lamp kit (P/No.: 99994-2264), install this kit and the fog lamp kit at the same time.*

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Guard	55020-2557	1	Left
2	Guard	55020-2558	1	Right
3	Bracket	11058-2632	1	
4	Collar	92152-3919	1	
5	Plug	92066-1220	4	
6	Bolt (with a Non-permanent Locking Agent)	92154-7689	1	M8 × 85 mm
7	Bolt (with a Non-permanent Locking Agent)	92153-0948	2	M8 × 20 mm
8	Bolt	92154-7669	2	M8 × 16 mm
9	Washer	92200-0434	2	φ16 mm
10	Nut	92210-0304	1	
11	Washer	92022-1401	2	φ15.5 mm
12	Collar	92152-4075	2	
13	Damper	92161-0570	2	

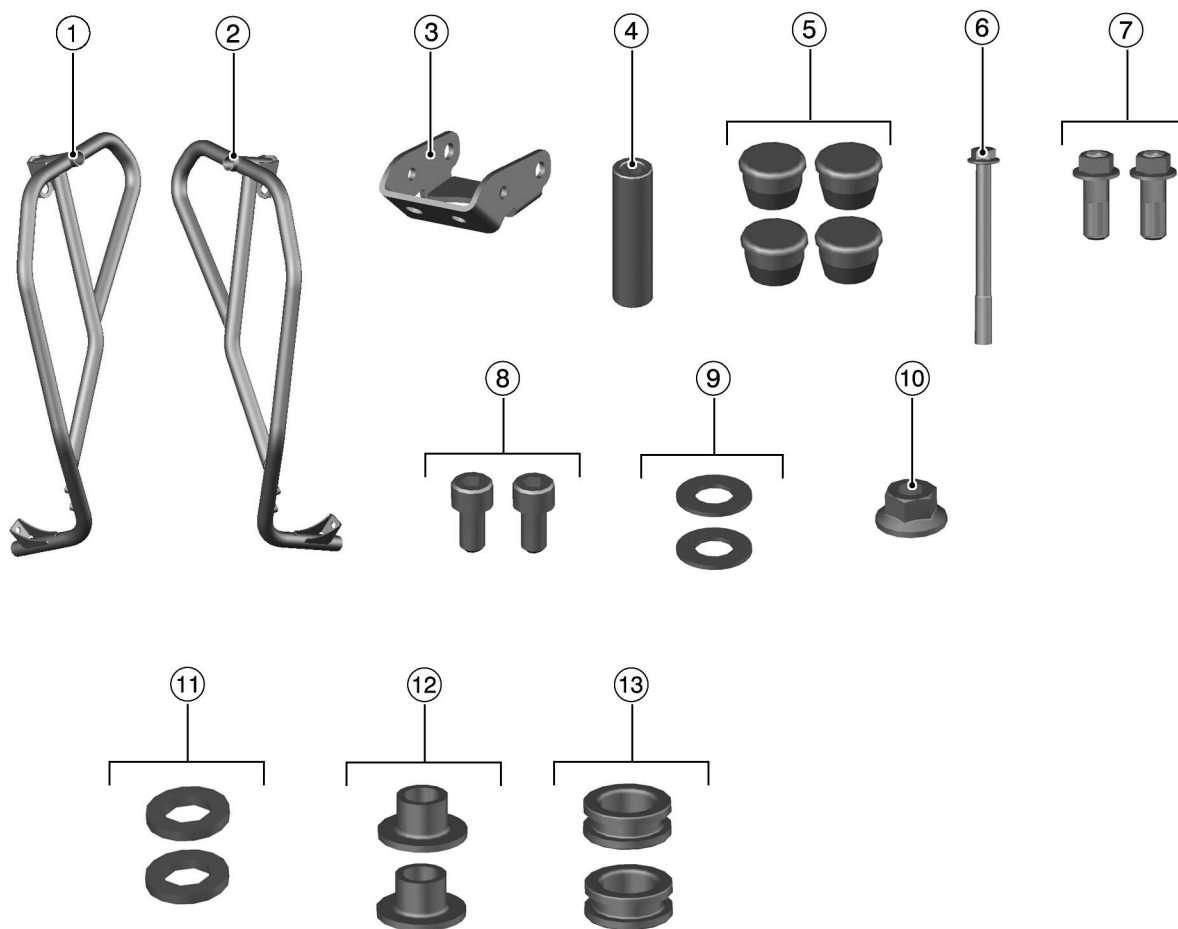


S106940E G

Installation Instructions


- Remove the plugs [A] on both sides.

NOTE


- *The removed plugs are not necessary for this accessory.*

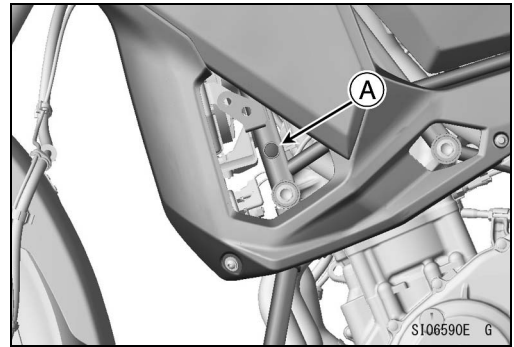


- Install the plugs [5] to the guards [1] [2].

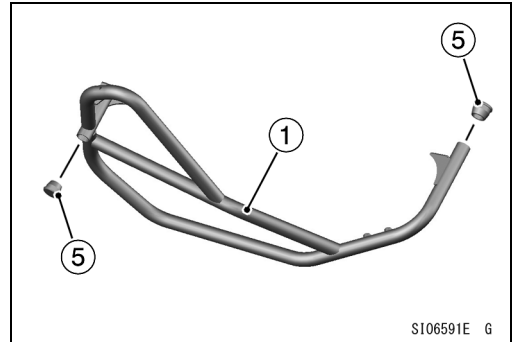


- Install the dampers [13] and collars [12] to the guards [1] [2].

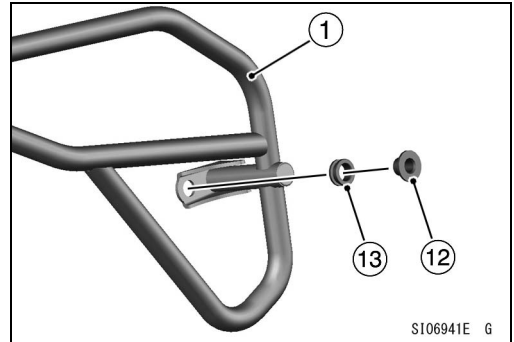


- Install the bracket [3].
- Tighten the bolts [8] with washers [9] temporarily.
Headlight Unit [A]

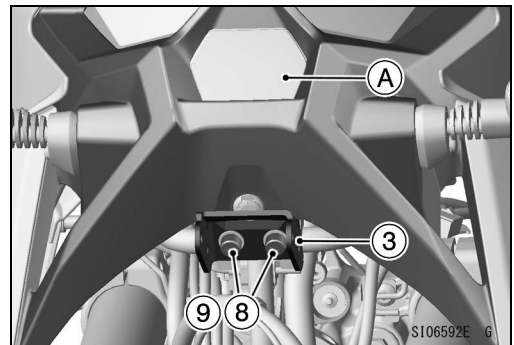

- Install the left guard [1].
- Tighten the bolt [7] temporarily.
- Install the right guard [2] in the same way as the left side.
- Hold the left guard with a suitable tool.

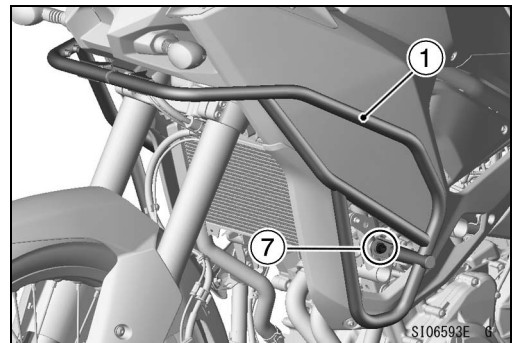

- Install the collar [4], washers [11], bolt [6] and nut [10].
- Position the washers [11] between the bracket [3] and guards [1] [2].
- Tighten the bolt [6] temporarily.
- Tighten all bolts [6] [7] [8].

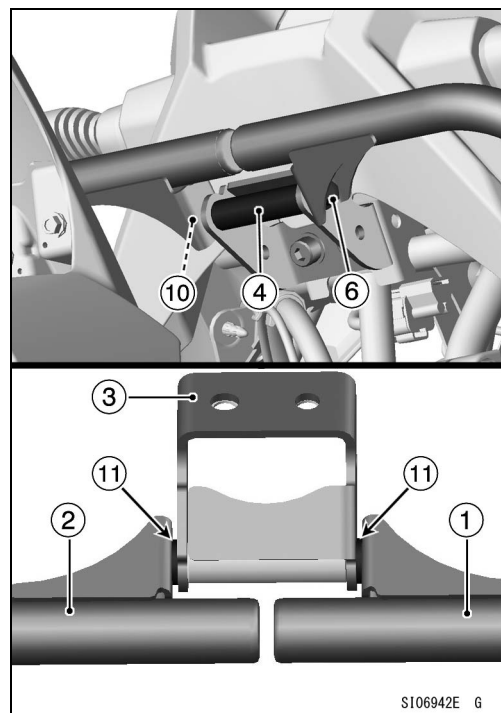

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.