

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Fog Lamp
Part Number:	99994-2264
Flat Rate Time(Hr):	0.6

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

Refer to the following Service Manual for detailed procedures.
(KLE500) P/No.: 99830-0209 or 99832-0356

NOTE

- *This kit does not operate if the relay kit is not installed, therefore install the relay kit (see Relay Kit (P/No.: 99994-1985) for Assembly Instructions Manual).*
- *Prepare the engine guard kit (P/No.: 99994-2263), before this kit installation.*
- *When installing this kit, install this kit and the engine guard kit at the same time.*
- *When installing the hand cover kit (P/No.: 99994-2284), install this kit and the hand cover kit at the same time.*
- *In some illustrations, the upper fairing, headlight, lower fairing, etc. have been removed for the purpose of explanation.*


Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Fog Lamp	23016-0685	1	Left
2	Fog Lamp	23016-0686	1	Right
3	Stay	35063-1634	1	Left
4	Stay	35063-1635	1	Right
5	Fog Lamp Switch	27010-1524	1	
6	Harness	26031-4367	1	
7	Bolt	92151-1611	4	M6 × 25 mm
8	Bolt	92154-0917	4	M5 × 12 mm
9	Damper	92160-1167	4	
10	Collar	92152-1847	4	
11	Washer* ¹	92200-1042	1	
12	Band	92072-0106	2	
13	Clamp	92170-1682	2	
14	Clamp* ²	92173-2194	1	
15	Clamp* ³	92171-0069	1	
16	Collar* ⁴	92152-4066	1	L = 6.9 mm
17	Bolt (with a Non-permanent Locking Agent)	92154-7967	1	M6 × 18 mm

*¹: When installing the hand cover kit (P/No.: 99994-2284), the washer is not used.

*²: The clamp is the same as this used in the grip heater kit (P/No.: 99994-2253). When installing the fog lamp kit and grip heater kit at the same time, use the clamp from either kit.

*³: Use a clamp only for evaporative emission control system non-equipped model.



*⁴: The collar has a groove for identification. The collar is used when installing this kit and the hand cover kit at the same time.

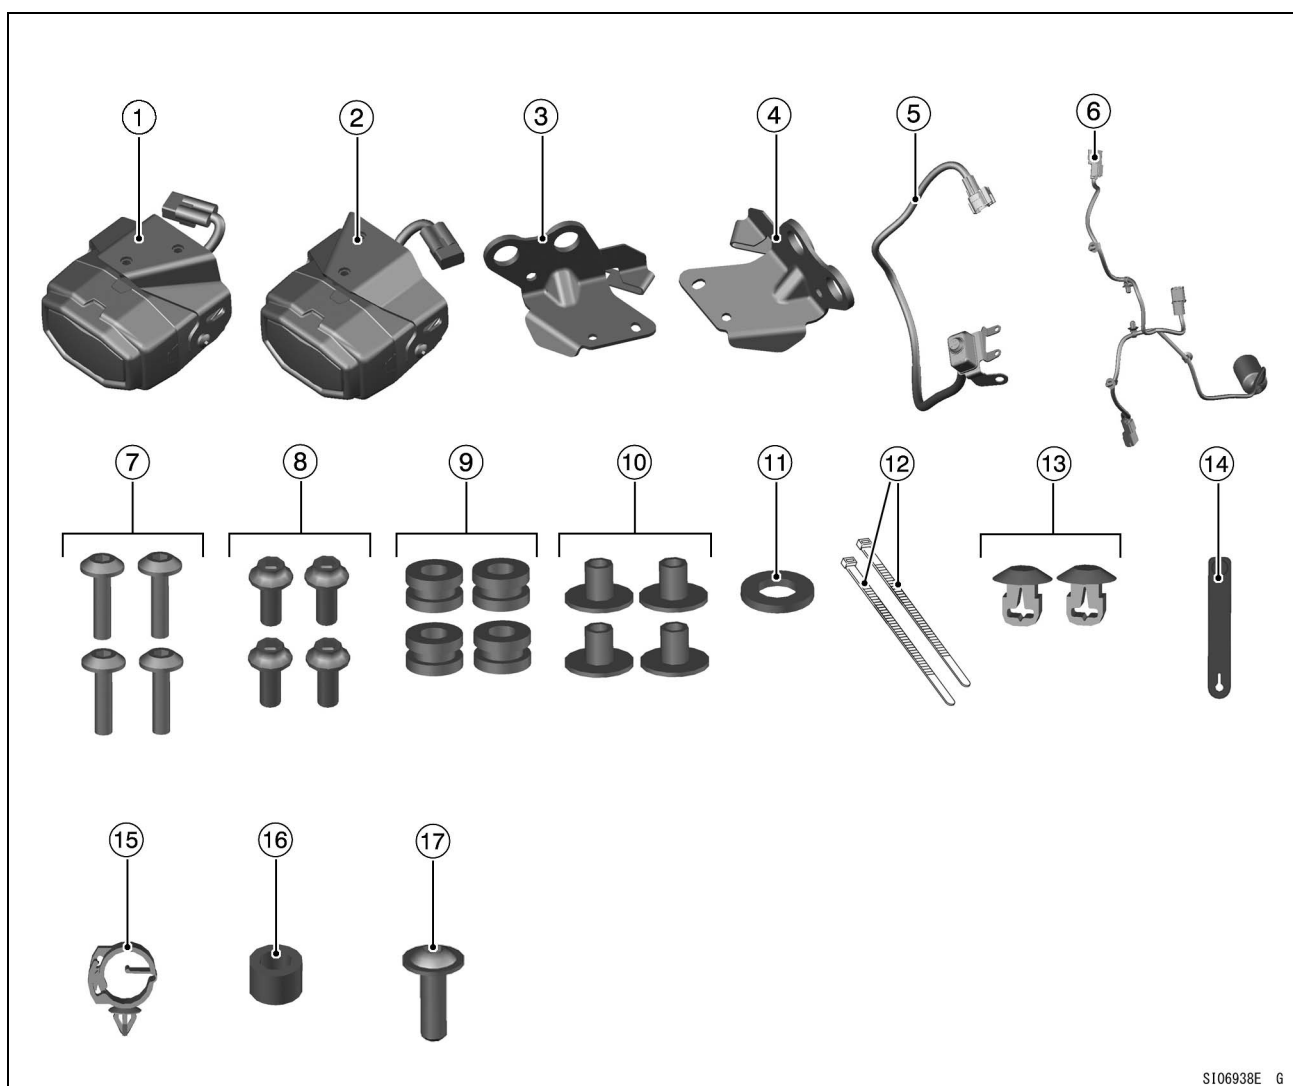

SI06938E G

Installation Instructions

- Remove the following parts (Refer to the Service Manual).
Left Lower Fairing
Left Rear View Mirror
- Install the dampers [9] and collars [10] to the stays [3] [4].

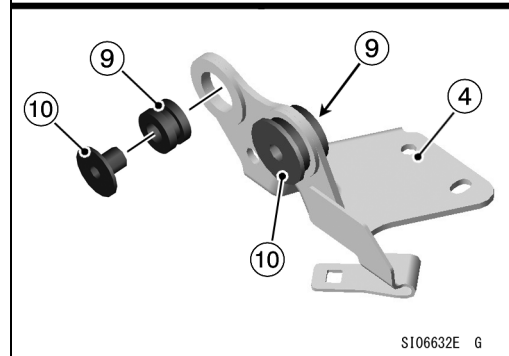
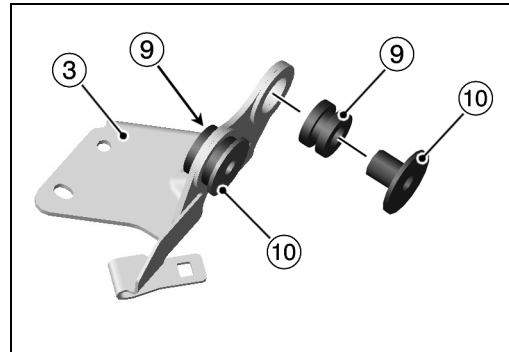


S106632E G

- Install the fog lamps [1] [2] to the stays [3] [4].
- Tighten the bolts [8].



NOTE

- The bracket [A] of the fog lamp [1] is indicated the ACC-ID.

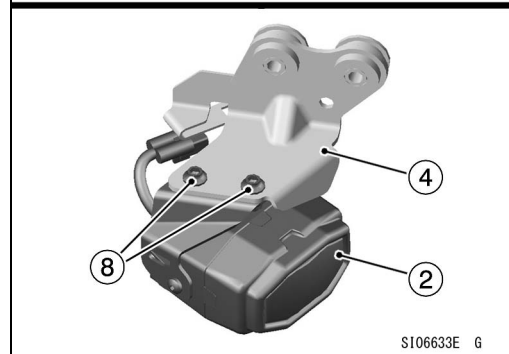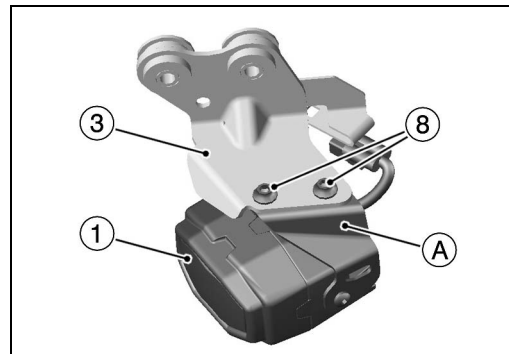

S106633E G

- Install each fog lamp assy [A] to the guards (engine guard kit) [B].
- Tighten the bolts [7].

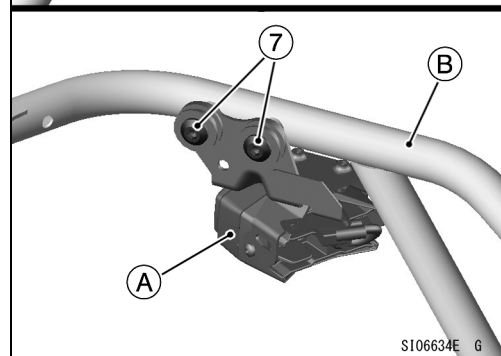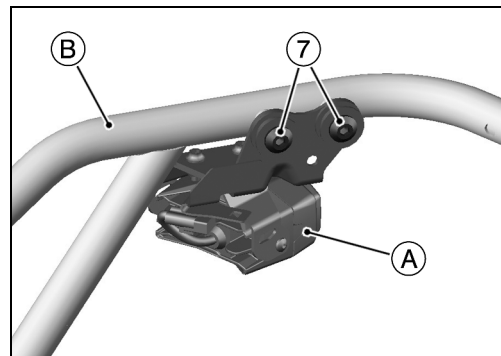


S106634E G

Hand Cover Non-equipped Model

- Remove the bolts [A] and washers [B].

NOTE

- *The removed washers are not necessary for this accessory.*

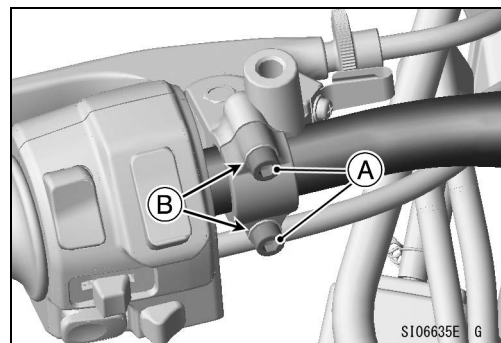


S106635E G

Hand Cover Equipped Model

- Remove the bolt [A] and collar [B].
- Remove the bolt [C] and washer [D].

NOTE


- *The removed collar and washer are not necessary for this accessory.*

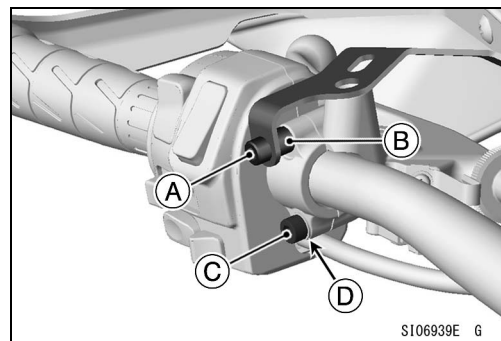

S106939E G

When installing only the fog lamp:

- Install:
 - Washer [11]
 - Fog Lamp Switch [5]
 - Removed Bolts [A]
- Position the washer [11] under the bracket [B] of the fog lamp switch.
- Set the clutch lever to the original position and tighten the bolts [A] (Refer to the Service Manual).
- Install the left rear view mirror (Refer to the Service Manual).

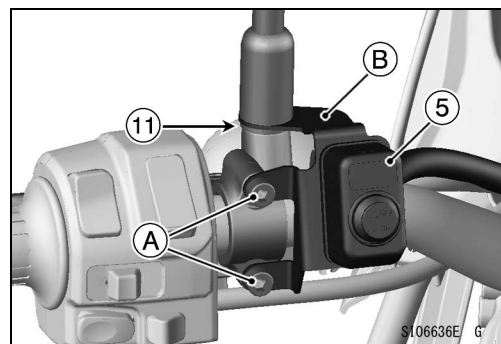

S106636E G

When installing the fog lamp and hand cover:






- Install:
 - Fog Lamp Switch [5]
 - Collar [16]
 - Removed Bolts [A]
 - Position the bracket [B] of the hand cover under the bracket [C] of the fog lamp switch.
 - Position the collar [16] between the bracket [C] of the fog lamp switch and bracket [B] of the hand cover.
 - Set the clutch lever to the original position and tighten the bolts [A] (Refer to the Service Manual).
 - Install the left rear view mirror (Refer to the Service Manual).
 - Open the clamp [A].
 - Run the fog lamp switch lead [B] along left switch housing lead [C] as shown.
 - Hold the fog lamp switch lead, left switch housing lead and clutch cable [D] with the clamp [A] at the gray tape position.
 - Run the fog lamp switch lead into the guide [E].
-
- Run the fog lamp switch lead [A] along main harness [B] as shown.
 - Run the fog lamp switch lead to the inside of the frame [C].
 - Hold the fog lamp switch lead and main harness with the clamp [14] at the gray tape position.

- Remove the connector cap [A] of the main harness from the bracket [B].
- Remove the connector cap.


NOTE

- *The removed connector cap is not necessary for this accessory.*


- Connect the connector [A] of the harness [6] to the connector of the main harness.
- Fix the connector [A] to the bracket [B].

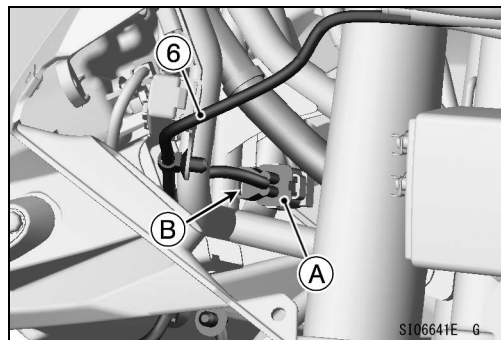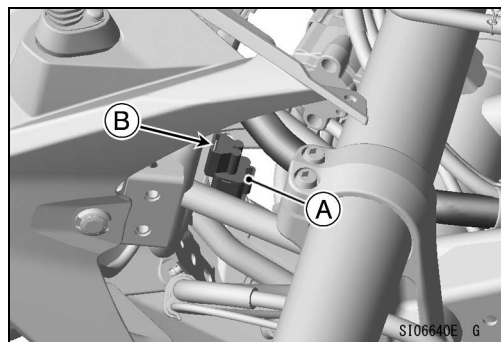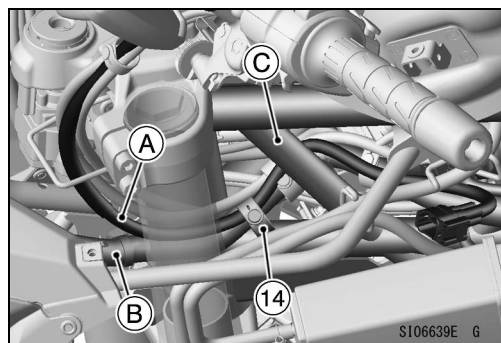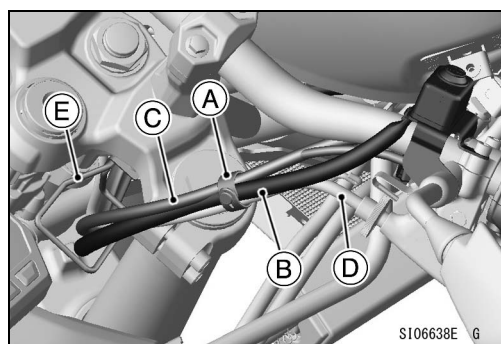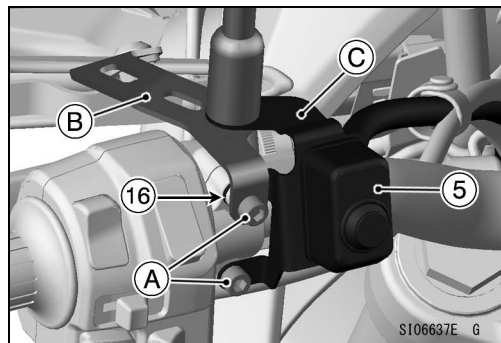



- Run the harness [6] as shown.
- Install the clamp [A] to the bracket [B].

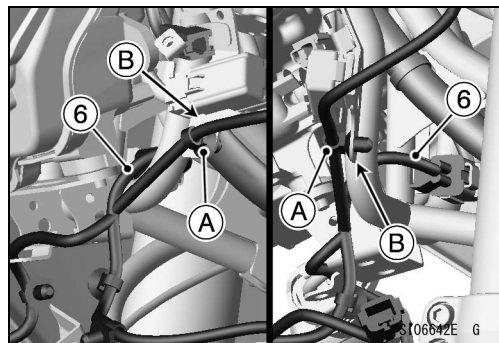

- Install the following parts.
Left Lower Fairing (Refer to the Service Manual)
Engine Guard Kit (Refer to the Assembly Instructions Manual)
- Run the harness [6] as shown.
- Install the clamps [A] to the bracket [B] and guards [C].

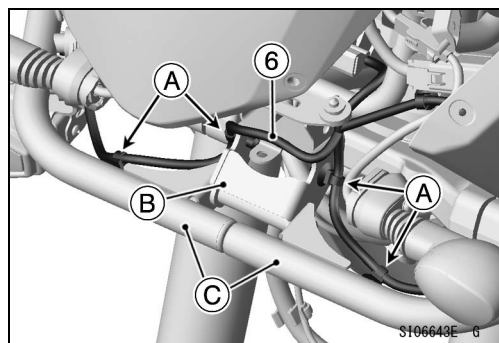


- Install the clamp [13] to the stay [3].
- Run the harness [6] as shown.
- Install the band [12] through the clamp [13].
- Hold the harness [6] with the band [12].
- Cut the excess of the band.
- Connect the connector [A].
- Fix the connector to the stay [3].
- Install the right side in the same way as the left side.

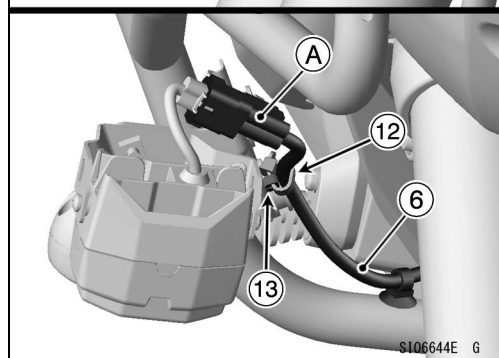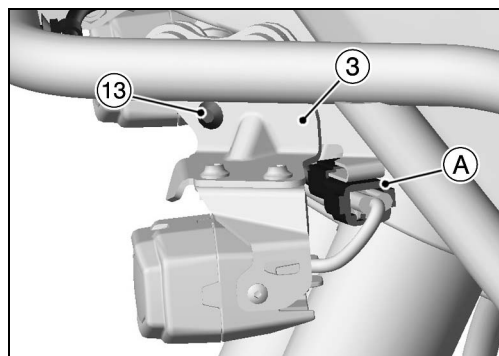


Evaporative Emission Control System Equipped Model

- Run the harness [6] as shown.
- Run the harness [6] under the bracket [A].
- Run the harness [6] between the left lower fairing and hoses [B].
- Run the harness [6] inside the guide [C].

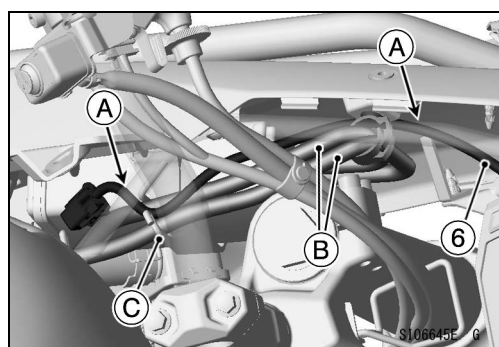


Evaporative Emission Control System Non-equipped Model

- Run the harness [6] as shown.
- Run the harness [6] under the bracket [A].
- Run the harness [6] inside the guide [B].
- Hold the harness [6] with the clamp [15], and install the clamp to the left lower fairing.

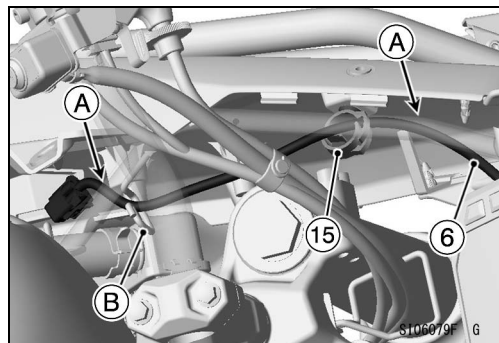


- Connect the connector [A].
- Slide the dust cover [B] on the connectors.

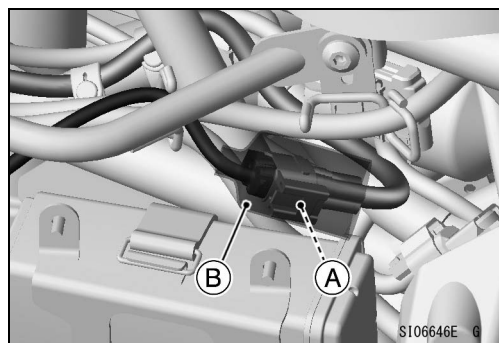


- Turn the ignition switch on.
- Push the fog lamp switch, and check that the fog lamps go on.
- The fog lamp beam aiming is adjustable by loosening the screws [A] and bolts [8].
- After adjusted the fog lamp beam aiming, tighten the screws [A] and bolts [8].

Torque – Screws: 1.2 N·m (0.12 kgf·m, 11 in·lb)

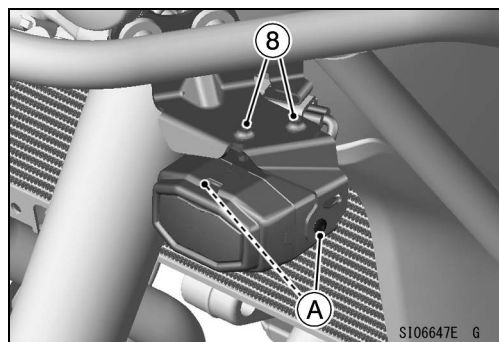

- Push the fog lamp switch, and turn the ignition switch off.
- Install the removed parts (Refer to the Service Manual).
- Replace the bolt [A] with a new one [17].

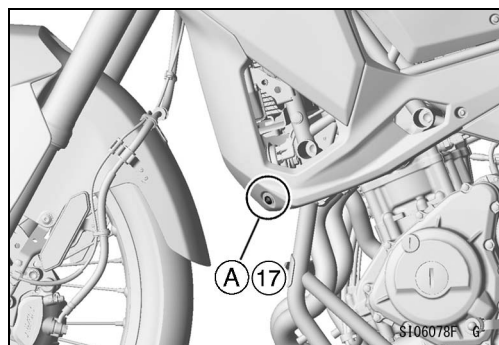

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.