

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Center Stand
Part Number:	99994-2267
Flat Rate Time(Hr):	0.4

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.


The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.


Refer to the following Service Manual for detailed procedures.
(KLE500) P/No.: 99830-0209 or 99832-0356

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Center Stand	34011-0044	1	
2	Bracket	32043-0721	1	Left
3	Bracket	32043-0718	1	Right
4	Spring	92145-2388	1	L = 145 mm
5	Spring	92145-2389	1	L = 170 mm
6	Nut	92015-1428	2	
7	Collar	92152-3943	2	
8	Bolt (with a Non-permanent Locking Agent)	92154-7920	2	M10 × 30 mm
9	Bolt (with a Non-permanent Locking Agent)	92154-7890	4	M8 × 25 mm
10	Damper	92075-015	1	
11	Cotter Pin	550AA2015	1	
12	Tube	92192-3921	1	
13	Bank Sensor	92155-0001	2	M6

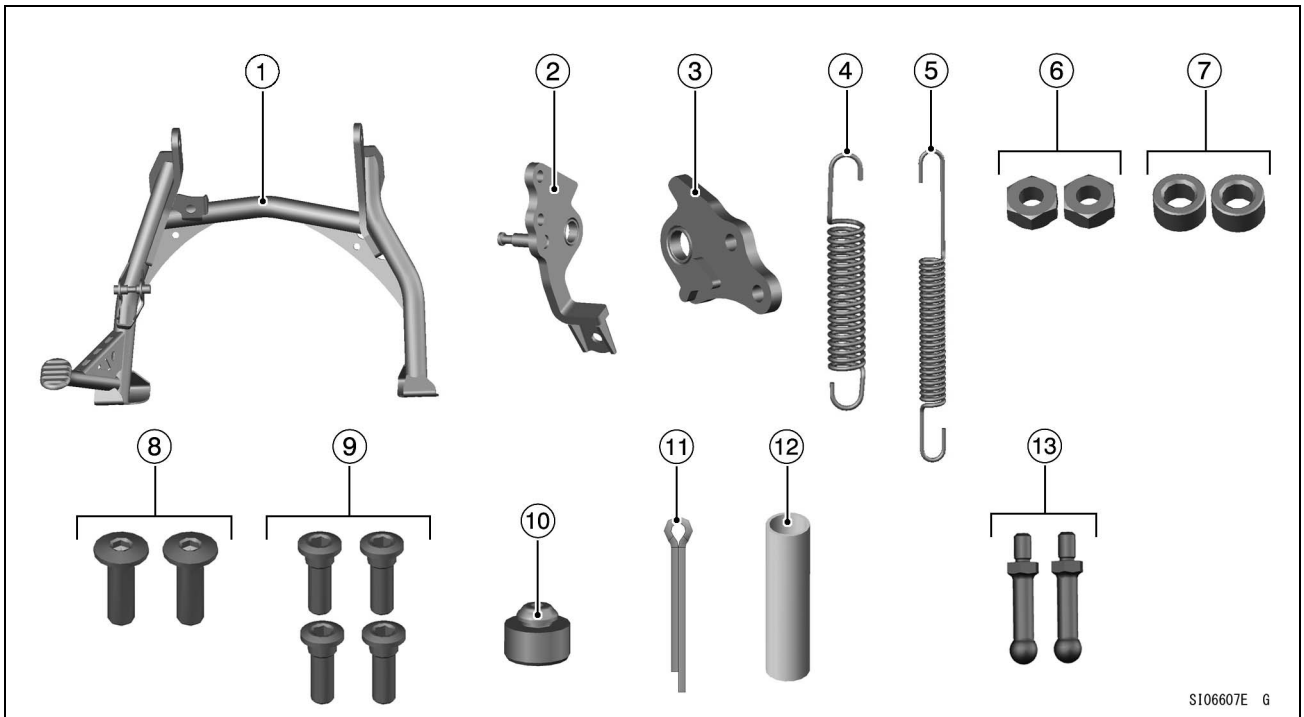


Installation Instructions

- Install the damper [10] to the center stand [1].

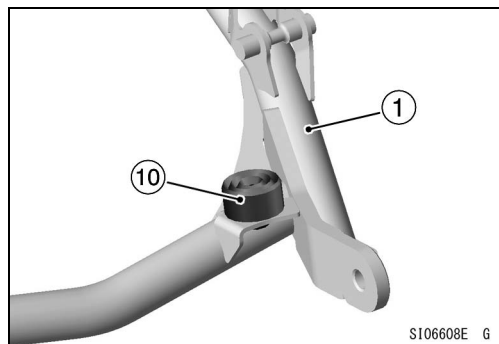


- Apply grease to the outside of the collars [7].
- Install the collars [7] in the brackets [2] [3].

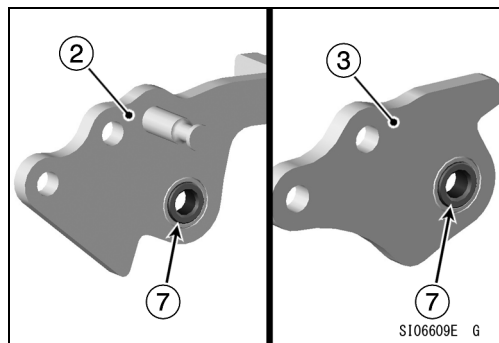


- Apply grease to the sliding surface [A] of the center stand [1].
- Install the bracket [2], bolt [8] and nut [6].
- Touch the bracket [2] to the damper [10], and tighten the bolt [8].

Torque – Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)

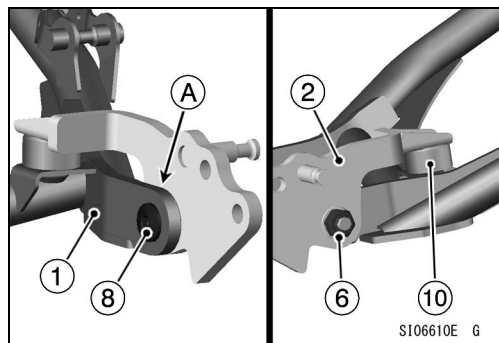

- Apply grease to the sliding surface [A] of the center stand [1].
- Install the bracket [3], bolt [8] and nut [6].
- Touch the bracket [3] to the center stand [1], and tighten the bolt [8].


Torque – Bolt: 44 N·m (4.5 kgf·m, 32 ft·lb)

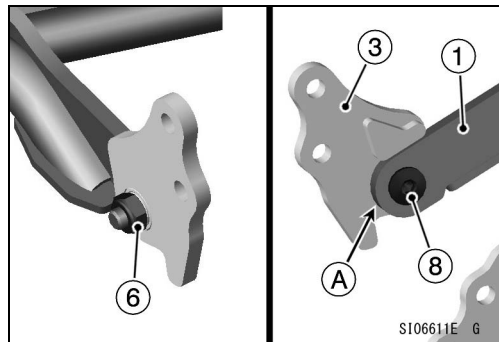

- Remove the bolts [A].

NOTE

○ The removed bolts are not necessary for this accessory.

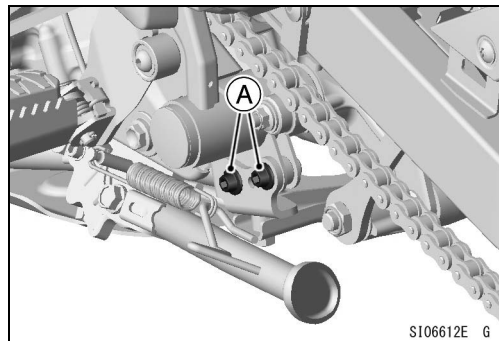

- Remove the following parts (Refer to the Service Manual).
Cotter Pin [A]
Joint Pin [B]




NOTE

- *The removed cotter pin is not necessary for this accessory.*


- Install the center stand assy [A].
- Tighten the bolts [9].

Torque – Bolts: 35 N·m (3.6 kgf·m, 26 ft·lb)


- Install the following parts (Refer to the Service Manual).
Removed Joint Pin
Cotter Pin [11]

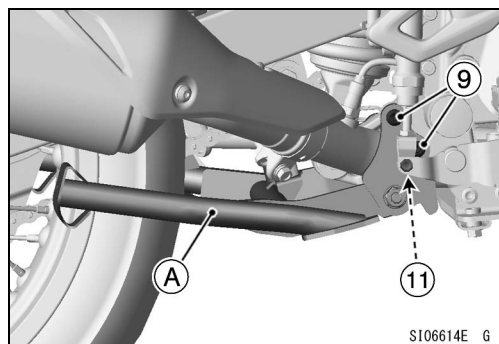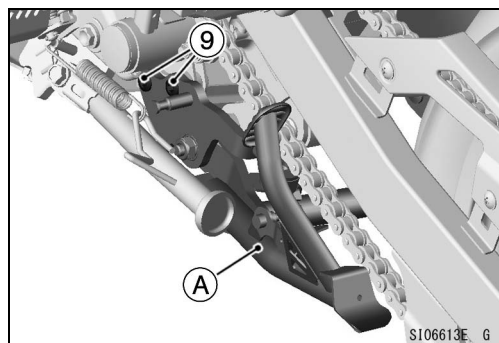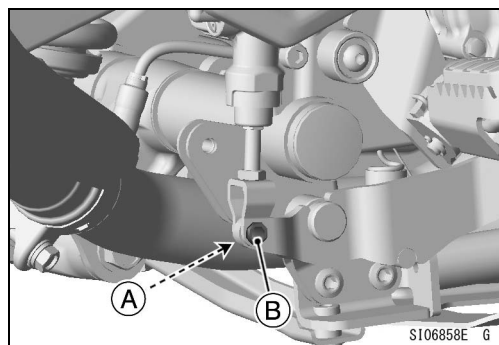


- Install the tube [12] to the spring [5].

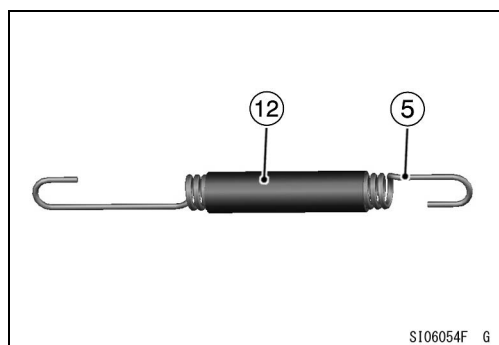

- Set the spring [5] into the spring [4] as shown.
- Position the long spring ends of the springs [4] [5] front side of the vehicle.

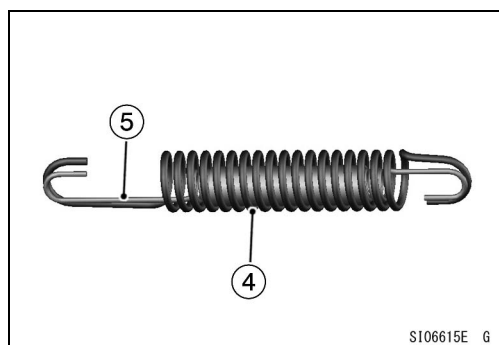

- Apply grease to the guide pin [A] and mounting pin [B].
- Hook the rear ends of the springs [4] [5] to the guide pin [A] of the center stand [1].
- Hook the front ends of the springs [4] [5] to the mounting pin [B] of the bracket [2].
- Position the ends of the spring [5] outside of the vehicle.
- Be sure both ends of the springs [4] [5] are in the grooves of the guide pin and mounting pin.

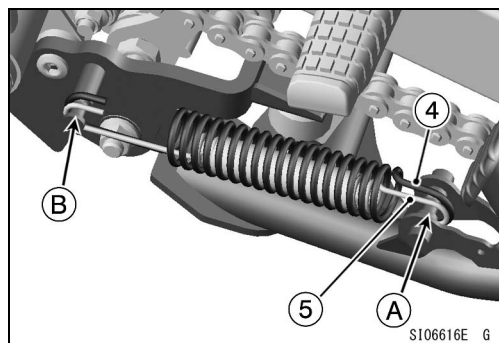


- Remove the bank sensors [A] on both sides.

NOTE

- *The removed bank sensors are not necessary for this accessory.*

- Tighten the bank sensors [13] on both sides.

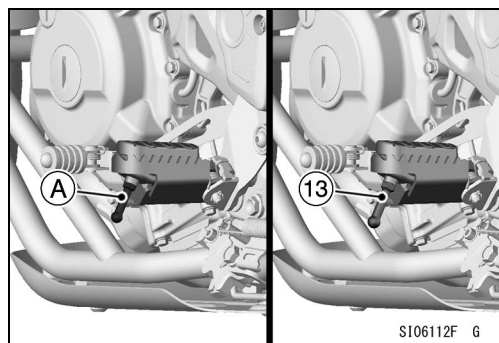

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.