

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Rear Carrier
Part Number:	99994-2271
Flat Rate Time(Hr):	0.2

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

 **WARNING** : WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.


● Indicates a procedural step or work to be done.

 WARNING	
● Do not carry loads of more than 9 kg (20 lb) on the rear carrier. ● Do not exceed the maximum vehicle load. Review your vehicle owner's manual for information regarding proper loading. ● Do not exceed the vehicle speed of 120 km/h (74 mph) when carrying a passenger and/or cargo. Also reduce speed according to road or weather condition, etc. Failure to adjust the speed to compensate for added weight and other conditions may result in a loss of control and subsequent accident.	

NOTE

- When installing the top case bracket kit (P/No.: 99994-1495), install the top case bracket kit on the plate [3] first.
- When installing the pannier case bracket kit (P/No.: 99994-2273), install this kit and the pannier case bracket kit at the same time.

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Stay	46019-0138	1	Left
2	Stay	46019-0139	1	Right
3	Plate	13272-7707	1	
4	Bolt	92153-1810	4	M8 × 15 mm
5	Bolt	92154-2339	4	M8 × 73 mm
6	Washer	410AA1000	4	
7	Plug	92066-1220	2	
8	Label	56071-1619	1	

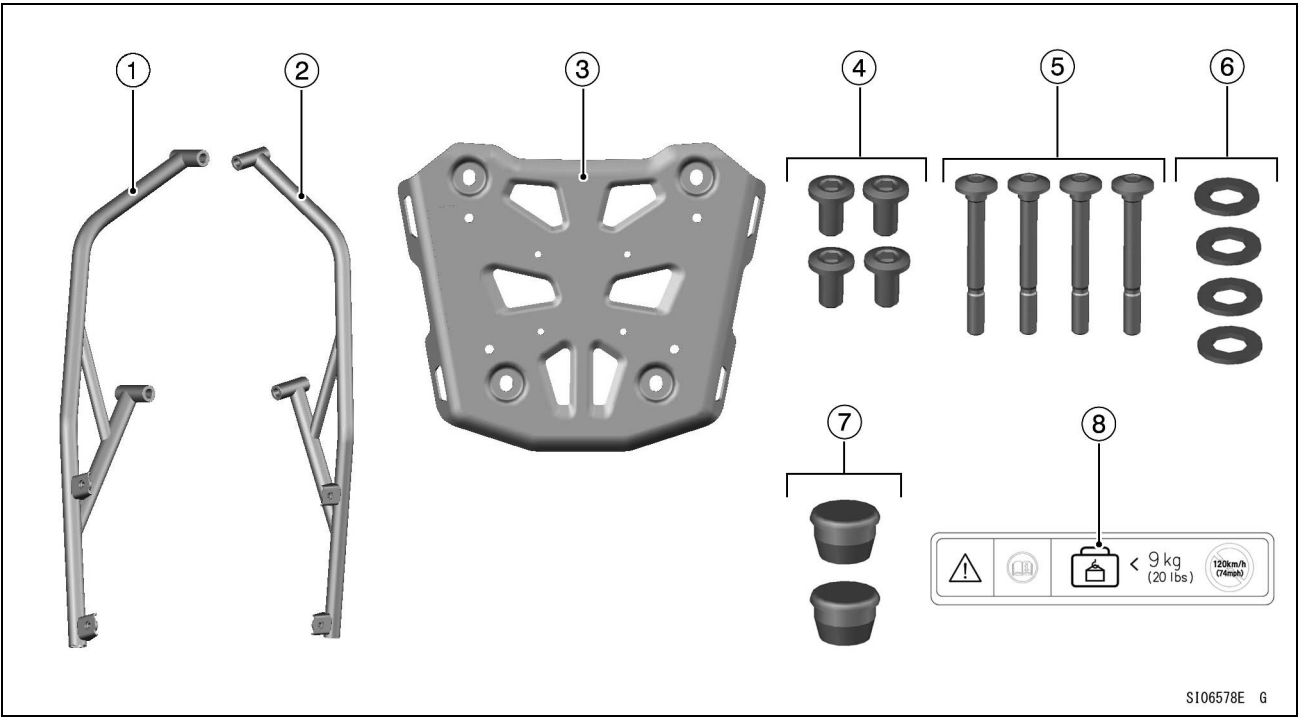

Installation Instructions

- Remove (Both Sides):
Bolts [A]
Collars [B]

NOTE

- *The removed bolts are not necessary for this accessory.*

- Install the collars [A] so that the stepped side faces inward.
- Install the left stay [1].
- Apply a non-permanent locking agent (middle strength: Loctite 243 or equivalent) to the bolts [5].
- Tighten the bolts [5] following the tightening sequence [1 - 2].
- Install the right stay [2] in the same way as the left side.






- Install the plugs [7] to the stays [1] [2].

- Install the plate [3].
- Tighten the bolts [4] with washers [6].

- For Europe model, paste the label [8] on the pasted label.

NOTE

- *For except Europe model, the label [8] is not used.*

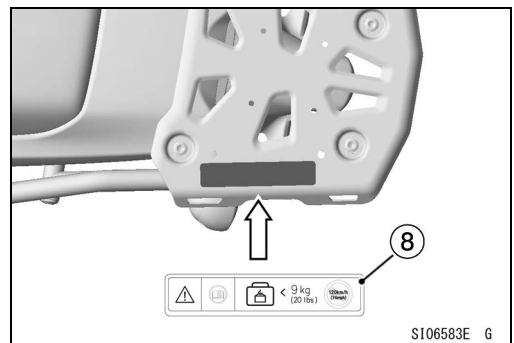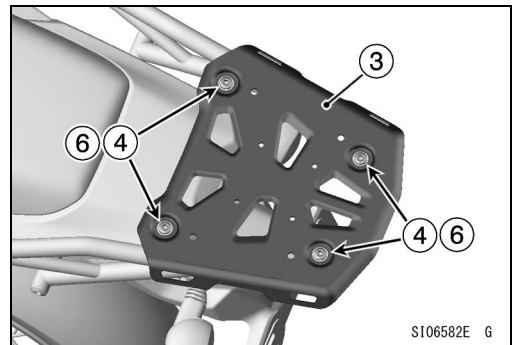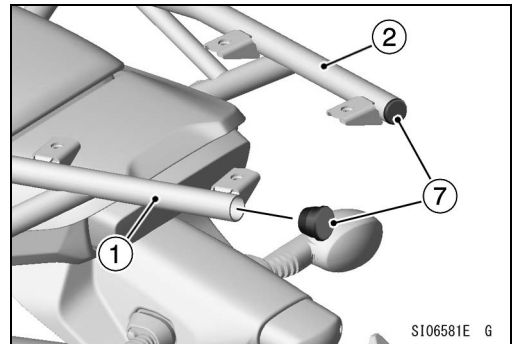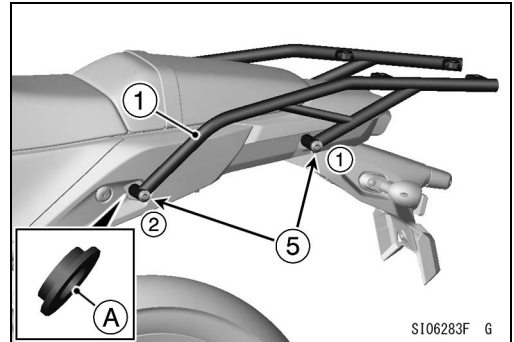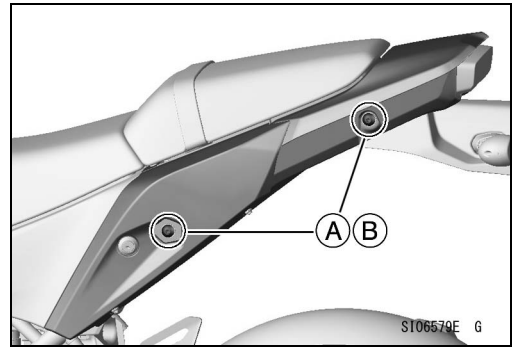

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.