

Operation Manual

Model:	KLE500 (2026MY -)
Description:	Grip Heater
Part Number:	99994-2253

Thank you for your purchase. This manual contains information for proper operation of the accessory parts and precautions. Read through this manual before operation for proper use of the accessory parts.

The following symbols indicate the information for proper installation and operation in this instruction.

WARNING : WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

NOTICE : NOTICE is used to address practices not related to personal injury.

NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.

● Indicates a procedural step or work to be done.

○ Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

NOTE

○ This grip heater is all type grip heater.


Left Grip Heater [A]

Right Grip Heater [B]

Heater Range [C]

Specifications


Power Supply	12 V Battery
Power Consumption	28 W (at Level 3)
Heater Type	Left Side: Electric Wire Heater Right Side: FPC (Flexible Printed Circuits) Heater

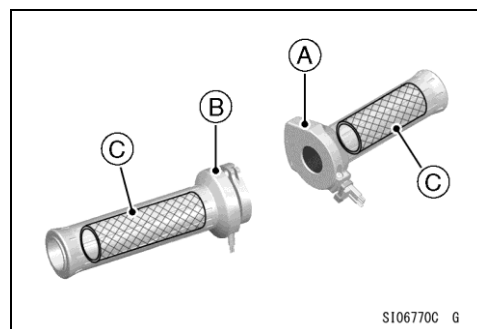

Grip Heater Switch Operation

By pushing the switch the driver can turn the grip heater on/off or change the preset temperature.

- The indicator light shows the operating condition and preset temperature.
- The indicator lights have four modes which are changed by pushing the switch.
- The temperature can be set to three levels. Set to the appropriate level according to the outside temperature or sensible temperature.
- The grip heater will be turned off when the ignition switch of the motorcycle has been turned off.

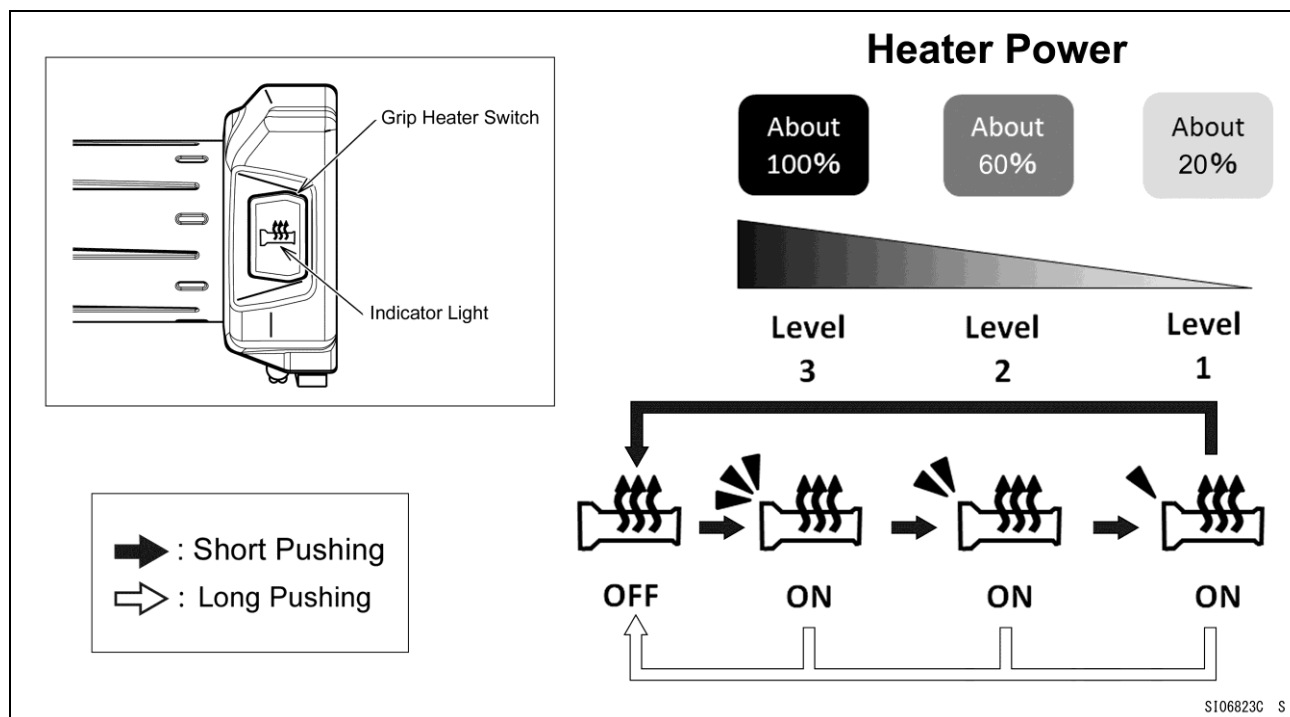

- Check the grip heater operating condition and temperature setting level with the indicator light.

Mode	Indicator Light
OFF	No lighting (blinking when the voltage is low)
Level 3	It goes on after repeating 3 times blinking for 5 times.
Level 2	It goes on after repeating 2 times blinking for 5 times.
Level 1	It goes on after repeating 1 time blinking for 5 times.

⚠ WARNING

- Operating the grip heater switch while riding may cause a distraction that can lead to a crash resulting in serious injury or death. Do not operate the grip heater switch while riding.
- Always wear gloves when using the grip heater to avoid burning hands.
- Using the grip heater with worn or damaged grips may cause burns. If the handlebar grip becomes worn or damaged, stop using the grip heater and replace the grip with a new one.

NOTICE

- Do not use the grip heaters for extended periods while the engine is stopped or idling to prevent draining the battery.
- Do not use a high-pressure washer to clean the motorcycle and avoid spraying the grips to prevent damage to wiring and heating elements.

NOTE

- *If the battery voltage drops while using the grip heater, the grip heater turns off and the indicator light blinks. The indicator light will continue blinking even if the battery voltage recovers at high speed driving etc. When using the grip heater, push the switch and turn off the grip heater once before using it. If the battery voltage is recovered, the grip heater can be turned on.*
- *The grip temperature is depending on the outside air temperature. Avoid using it at a higher temperature setting on warmer days.*

Troubleshooting Guide

When the indicator light blinks, charge or replace the battery. Still blinking, there is a possibility that the grip heater may be broken, so have the grip heater checked by an authorized Kawasaki dealer.