


Test Points for LH_i460_NON_NFC

S.NO	TEST POINT
1	TP100
2	TP101
3	TP113
4	TP126
5	TP307
6	TP310
7	TP311
8	TP312
9	TP321
10	TP322
11	TP324
12	TP407
13	TP201
14	TP202
15	TP414
16	TP503
17	TP507
18	TP511
19	TP602
20	TP612
21	TP613
22	TP614
23	TP104
24	TP200
25	NA
26	NA
27	NA
28	NA
29	NA
30	NA
31	NA
32	NA
33	NA
34	NA

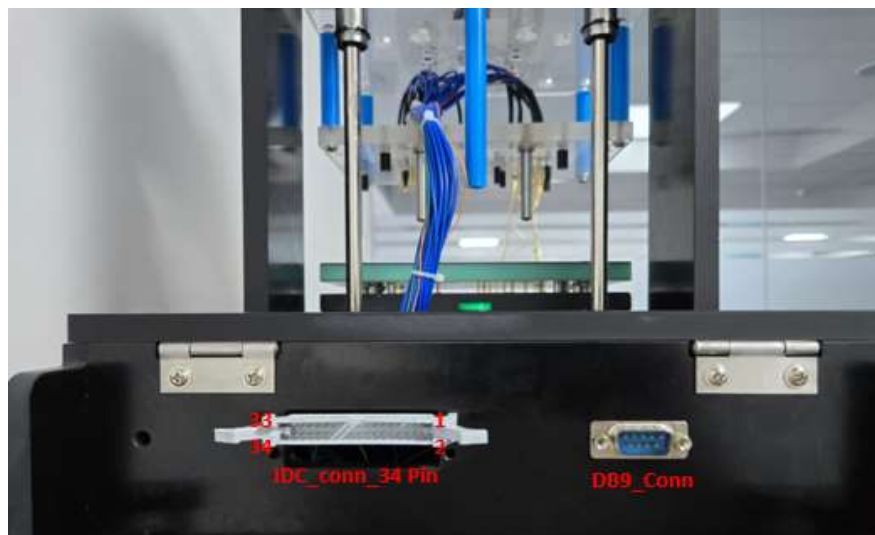

X100 connector (DB9 Connector)

S.No	PADS
1	VBAT
2	GND
3	DRV_OUT_A
4	DRV_OUT_A
5	IPB GND
6	EOS_OUT
7	LIN
8	CON_CAN_H
9	CON_CAN_L

Note* above table of X100 connector is to be counted to seprate DB9 connector beacuse these are Power supply and output pins of PCB

