


Test Points for RH_i460_NFC

S.NO	TEST POINT
1	TP100
2	TP101
3	TP113
4	TP126
5	TP307
6	TP310
7	TP311
8	TP312
9	TP321
10	TP322
11	TP324
12	TP407
13	TP201
14	TP202
15	TP414
16	TP503
17	TP507
18	TP511
19	TP602
20	TP612
21	TP613
22	TP614
23	TP801
24	TP703
25	TP803
26	TP704
27	TP705
28	TP706
29	TP707
30	TP708
31	TP104
32	TP200
33	NA
34	NA

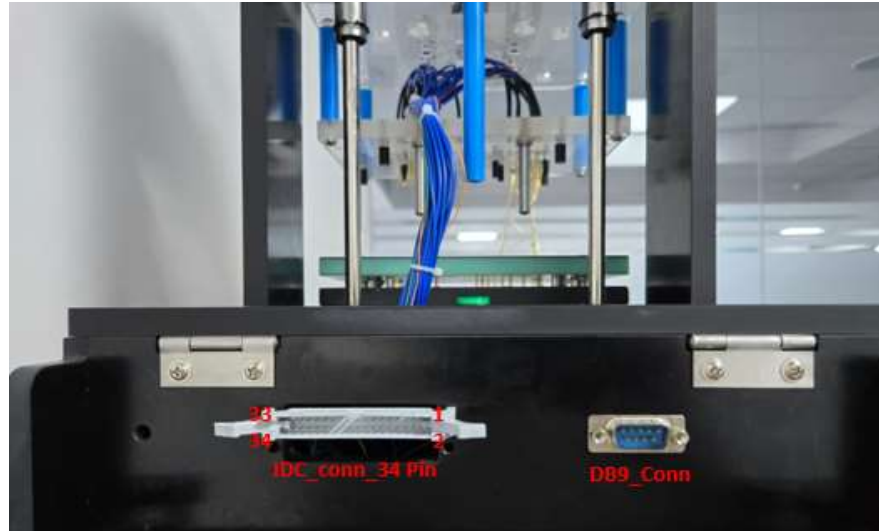

X100 connector (DB9 Connector)

S.No	PADS
1	VBAT
2	GND
3	DRV_OUT_A
4	DRV_OUT_A
5	IPB GND
6	EOS_OUT
7	LIN
8	CON_CAN_H
9	CON_CAN_L

Note* above table of X100 connector is to be counted to separate DB9 connector because these are Power supply and output pins of PCB

