VIBE DJ


Two decks, crossfader, headphone cue, SYNC, hot cues and loops: everything on one page

GET GOING IN 20 SECONDS

1. In the list, select a track and press `F1` **LOAD A**. Select the next one and press `F2` **LOAD B**.
2. `F6` **DECKS** opens the decks (or press `K6` from anywhere).
3. `F1` starts A. Put B in your headphones with `F5` **PHONES B**.
4. `F4` **SYNC B**: B takes A's tempo and lands on its beat.
5. `F6` starts B on the beat. Slide the crossfader over with encoder **A**.

Tempo and beats are measured from the audio when a track loads (the waveform fills in first). SYNC needs the BPM of both decks. The analysis is saved: a track loaded again has it at once, and the list shows its BPM.

THE SCREEN

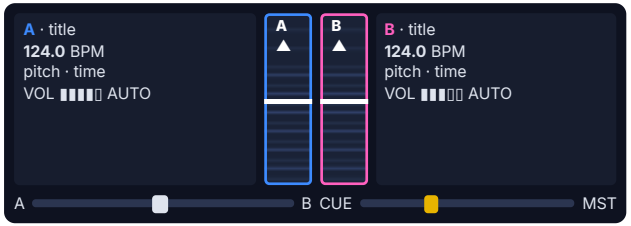

The two waveforms sit side by side in the middle, with the decks outside. Both run **bottom to top**, and the white line is "now". Lows, mids and highs have their own colours, so kicks are easy to see. 🟧 hot cues 🟩 loop band **BEND** = bending. Nothing jumps on its own.

ENCODERS

	1	2	3	4
	Volume A	Pitch A · nudge	Volume B	Pitch B · nudge
	SHIFT FILTER A	SHIFT HIGH A	SHIFT FILTER B	SHIFT HIGH B

A	B	DATA
Crossfader	Cue ⇄ master (phones)	Focus · the list
SHIFT MID A	SHIFT MID B	push = ENTER

FILTER: turn left for low-pass, right for high-pass, and back to the middle for off. LOW, MID and HIGH go from −30 dB (kill) to +6 dB. LOW is set with FOCUS (DATA). With SYNC on, the pitch knob nudges the beat (about 5 ms a detent) and SYNC stays. Pitch changes the tempo and the key together, like a turntable.

F1–F6 · ON THE DECKS

PLAY A	PHONES A	SYNC A	SYNC B	PHONES B	PLAY B
⇧ |◂ start					⇧ |◂ start

Mirrored: deck A on the left, deck B on the right. **SHIFT + PLAY** jumps to the start of the track, and a synced deck stays on the beat. A lit key means it is on. SYNC: the deck you press *follows* the other one, and only one follows at a time.

F1–F6 · LIST OPEN ON THE DECKS

PLAY A	UP folder	LOAD A	LOAD B	CLOSE	PLAY B

F1–F6 · THE LIST

LOAD A	LOAD B	STOP	▸▸	NOW ⇧ SHUFFLE	DECKS ⇧ REPEAT

One knob and one button reach everything (an MPK mini: K5 turns, its knob pressed = ENTER, Undo = HOME). In the list, **ENTER** plays a track the normal way. If decks are already playing, it loads the track into the free deck.

GETTING AROUND

the list ⇄ K6 / F6 · ↩ **DECKS** ⇄ ENTER · F5

list on the decks

↩	DECKS → the list (the music keeps playing). In the list: up one folder.
`DATA` turn	**Focus**: an orange frame walks over every control (deck A, mixer, deck B).
`ENTER` / push	Presses the framed button. On a value, it starts editing (◀ arrow): **DATA** changes it, **ENTER** or ↩ ends.
LOAD (title)	Frame the deck's title and press ENTER: the list opens. **DATA** picks a track, **ENTER** loads it into that deck.
`K1` `K2`	LOAD A / LOAD B on the decks (and in the list opened there).
`K3`	**AUTO VOL** on/off (lit = on, remembered). Every track plays equally loud. The amount shows next to VOL as "AUTO +4.2".
`HOME`	Firmware menu.

PADS

ROW 1 · DECK A

PLAY 1	PHONES 2	SYNC 3	|◂ START 4

ROW 2 · DECK B

PLAY 5	PHONES 6	SYNC 7	|◂ START 8

ROW 3 · DECK A · CUES & LOOPS

CUE 1 9	CUE 2 10	LOOP 4 11	LOOP 8 12

ROW 4 · DECK B · CUES & LOOPS

CUE 1 13	CUE 2 14	LOOP 4 15	LOOP 8 16

HOT CUES, LOOPS, BEND

🟧 **CUE** empty	Sets the cue on the next beat.
🟧 **CUE** set	Jumps there, exactly on the beat. The pad is lit orange.
`SHIFT` + CUE	Clears the cue.
🟩 **LOOP 4/8**	A 4- or 8-beat loop from the next beat. The pad blinks while the loop records, then it repeats sample-exact.
🟩 again	The loop plays out at its end and the track carries on.
`OCT −` `OCT +`	Hold to bend deck A by −4 % / +4 %, to nudge it onto the beat.
◀ ▶	Hold to bend deck B the same way.

HEADPHONES

VIBE FM	PHONES has its own signal. The decks set to **PHONES** go there, mixed with the master using encoder **B**.
2-out interface	**Split** while a deck is in PHONES: **OUT L = master**, **OUT R = cue** (both mono). The screen shows it. Use headphones only.
Plugin	The cue arrives on the second output, "Cue (headphones)".

⇧ = hold SHIFT · pads count from the top left