FORM REF-HS · REV. 4 REFERENCE SHEET · POST-STASIS REFRESHER POST IN EVERY CRANE CAB, LIFT MUSTER AND EQUIPMENT YARD

DUNEWRIGHT COLONY WORKS
Settlement Site 4 · Construction Division · Crane & Lift

HAND SIGNALS.

WHEN THE RADIO IS DROWNED OUT BY ENGINES, WIND OR SAND, YOUR ARMS DO THE TALKING.

READ FIRST

ONE SIGNAL PERSON. ANYONE CAN STOP.

Each lift has **one** qualified signal person in an orange hard hat. The operator takes signals only from them, except **STOP and EMERGENCY STOP, which the operator obeys from anyone.** Signals are given facing the operator, in clear view. If the operator loses sight of the signal person, they stop. Lost the radio? Switch to hand signals and confirm on Ch 11 when it's back.

Figures face you, the way the operator sees the signal person. **Orange arrows** show the motion.

CRANE SIGNALS

OLD EARTH STANDARD · ASME B30.5 MOBILE CRANES

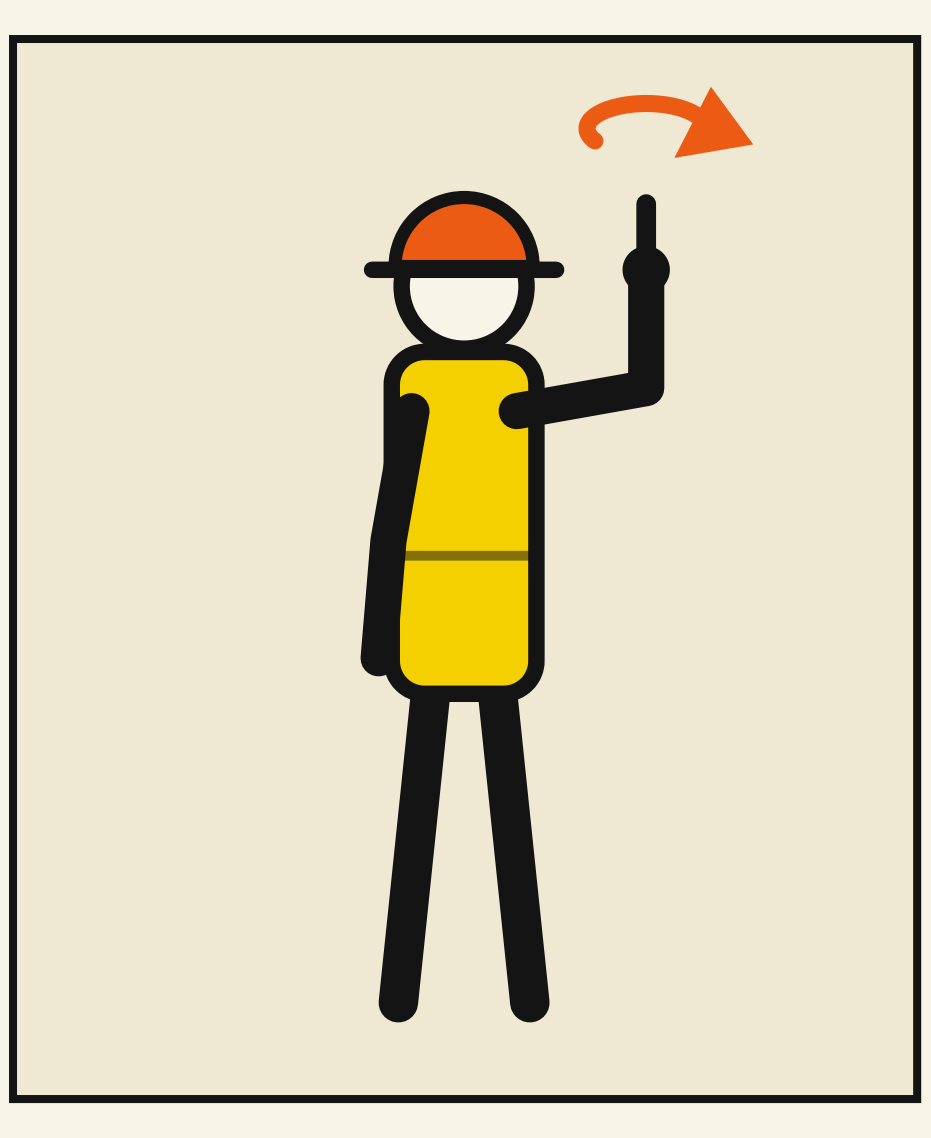

HOIST

Forearm vertical, forefinger pointing up. Move hand in small horizontal circles.

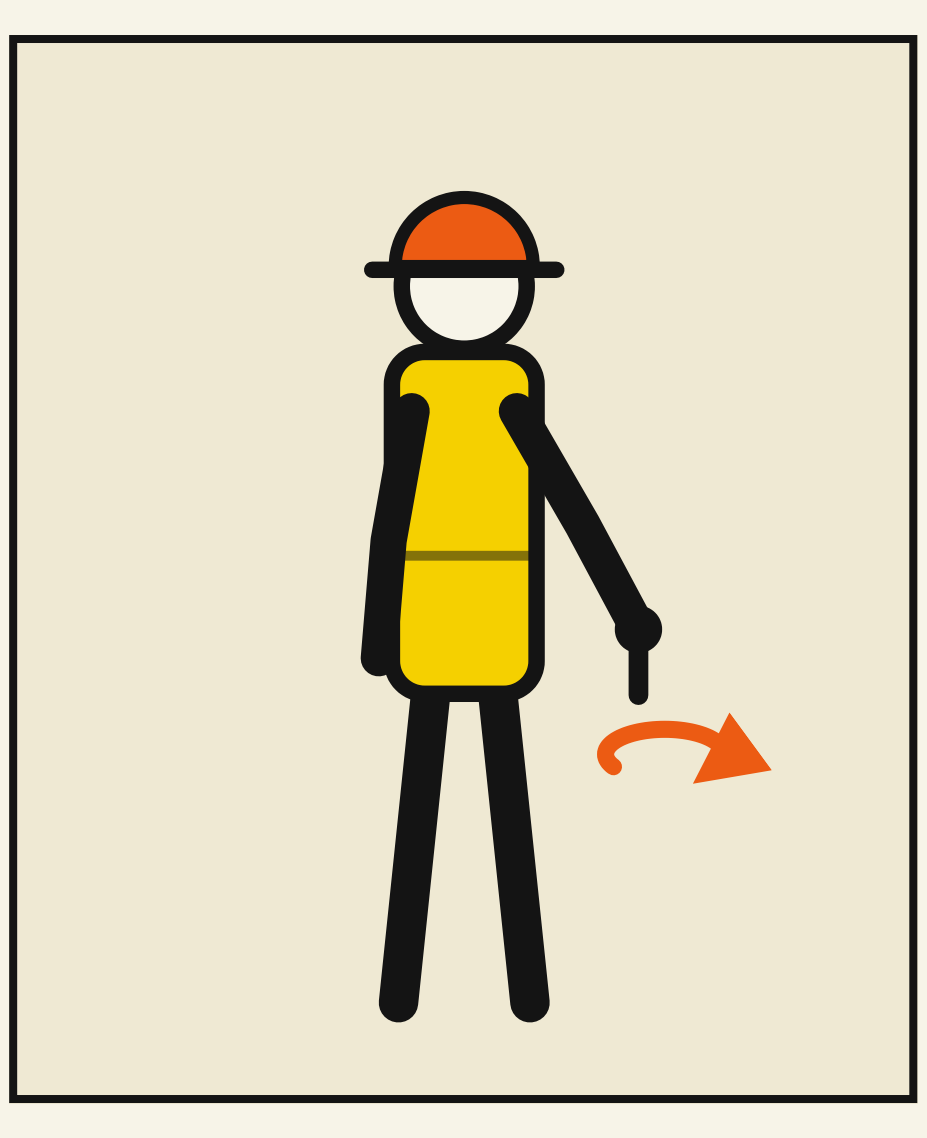

LOWER

Arm extended downward, forefinger pointing down. Move hand in small horizontal circles.

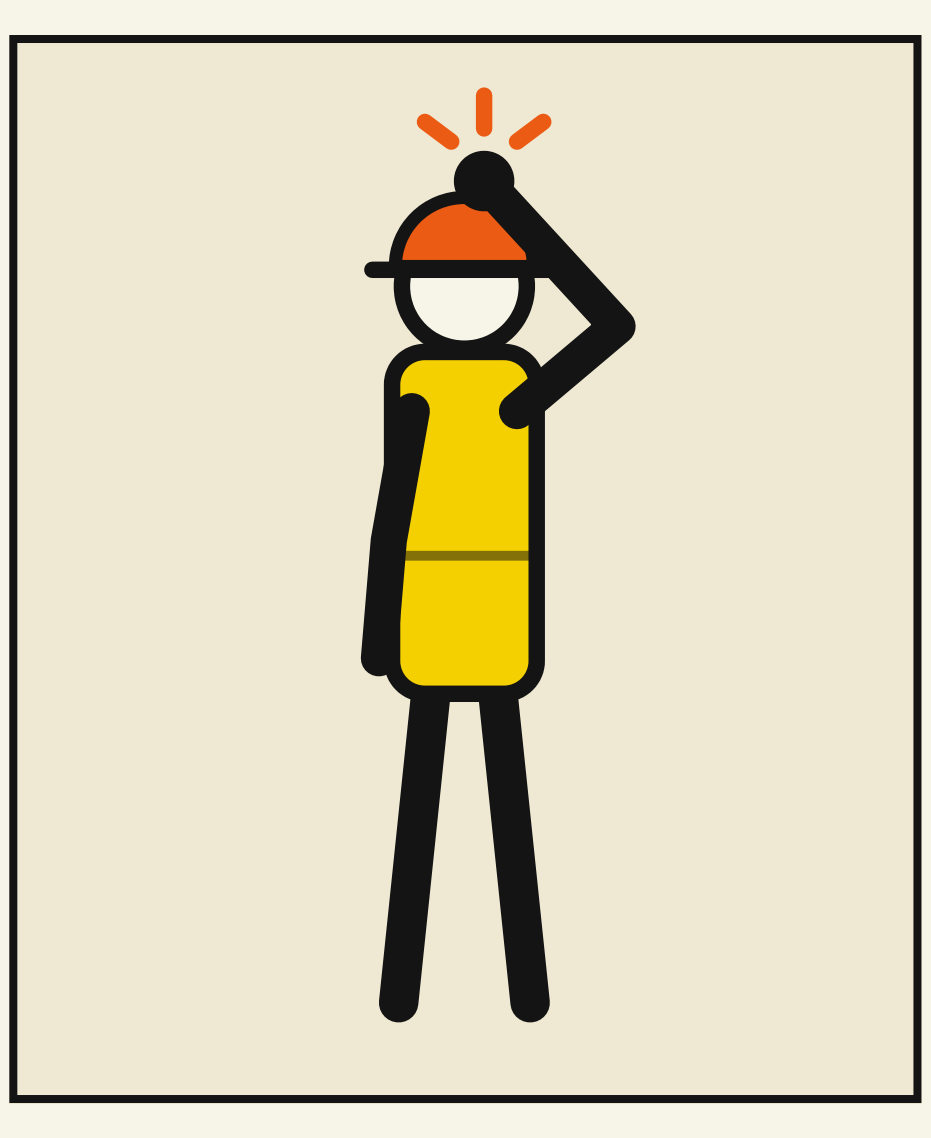

USE MAIN HOIST

Tap fist on top of head. Then give regular signals.

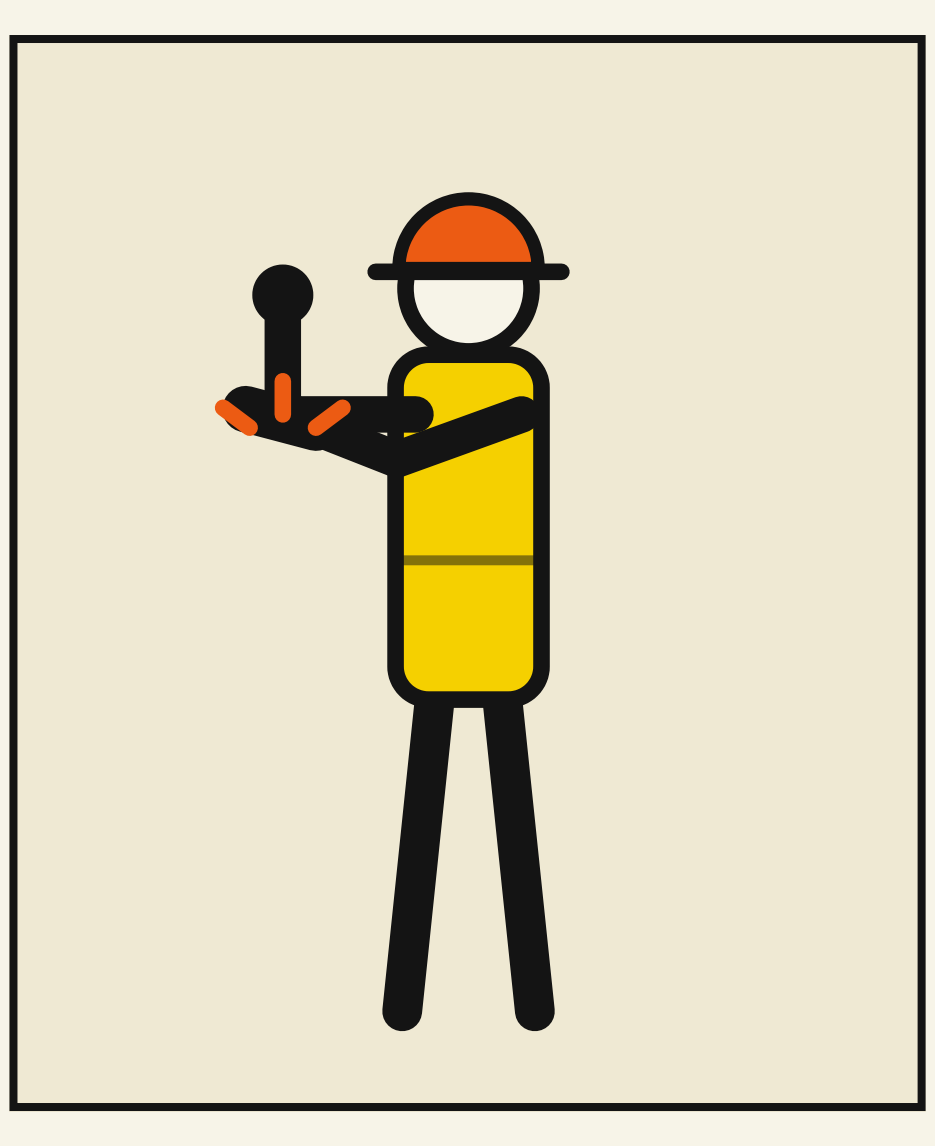

USE WHIPLINE

Tap the elbow with one hand (auxiliary hoist). Then give regular signals.

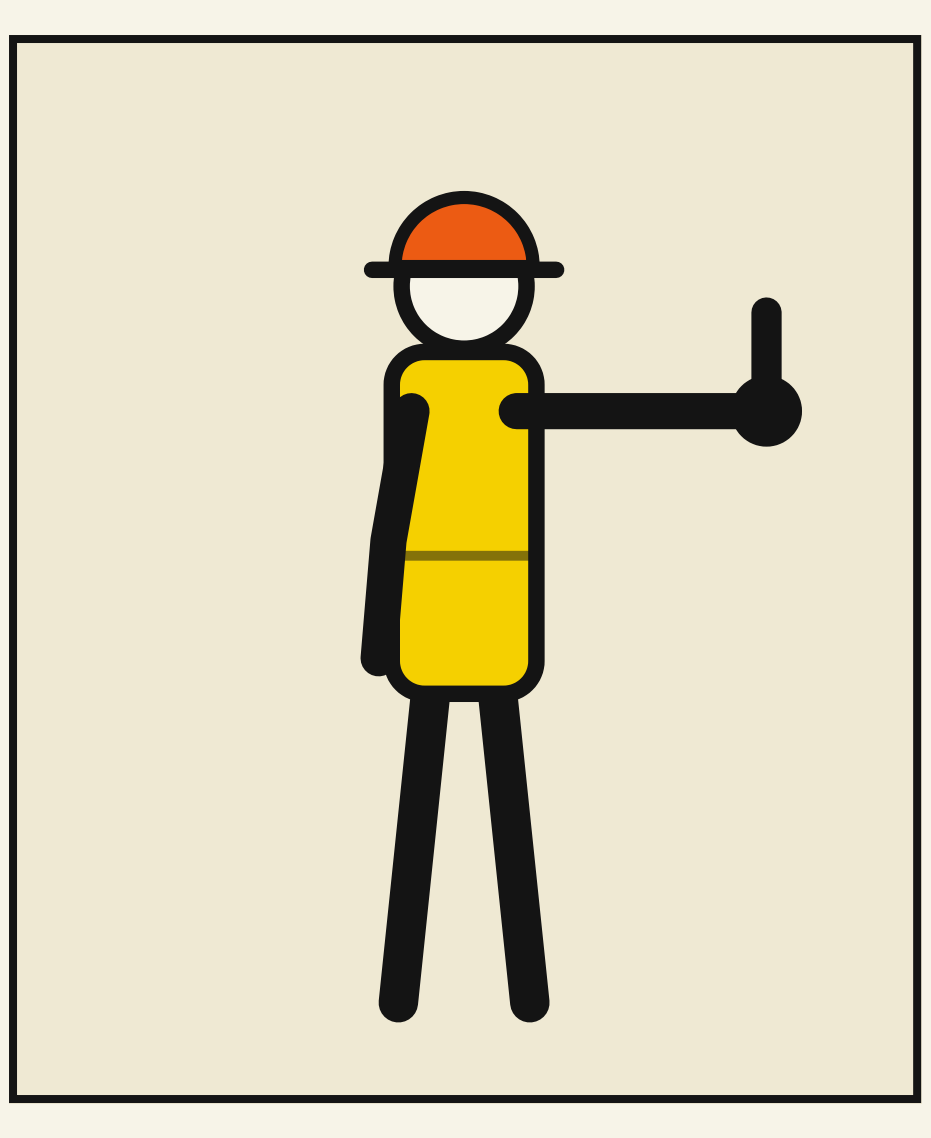

RAISE BOOM

Arm extended, fingers closed, thumb pointing upward.

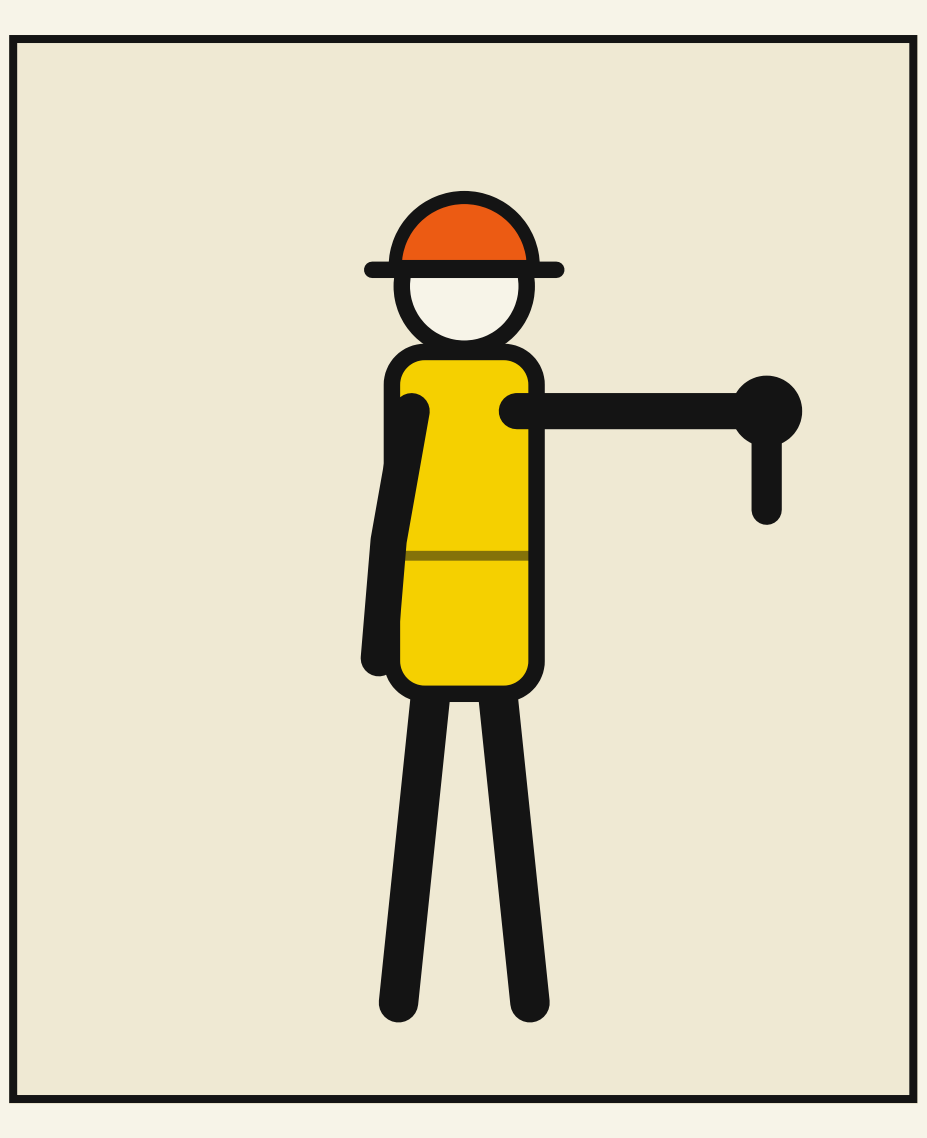

LOWER BOOM

Arm extended, fingers closed, thumb pointing downward.

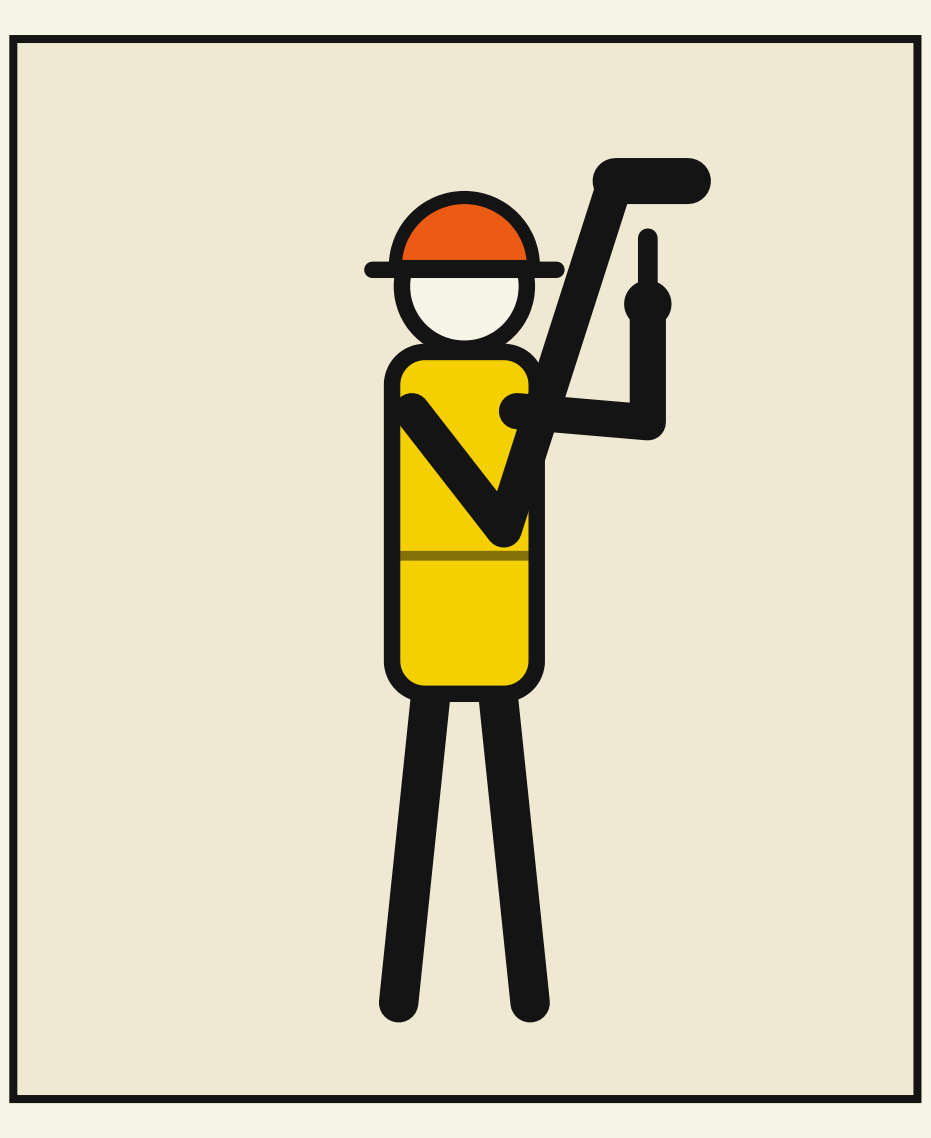

MOVE SLOWLY

One hand gives any motion signal. The other hand is held still, flat, in front of it. Shown: hoist slowly.

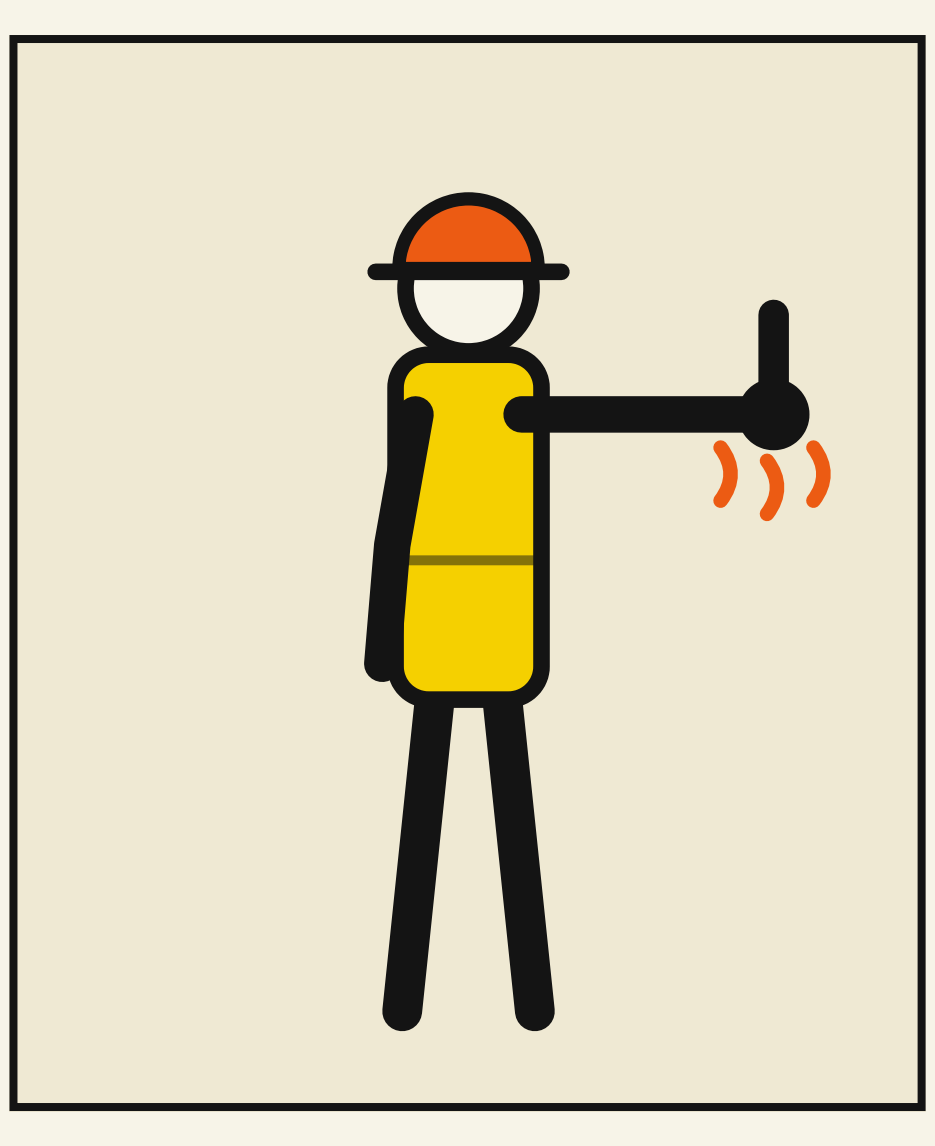

RAISE BOOM & LOWER LOAD

Arm extended, thumb up. Flex fingers in and out as long as load movement is wanted.

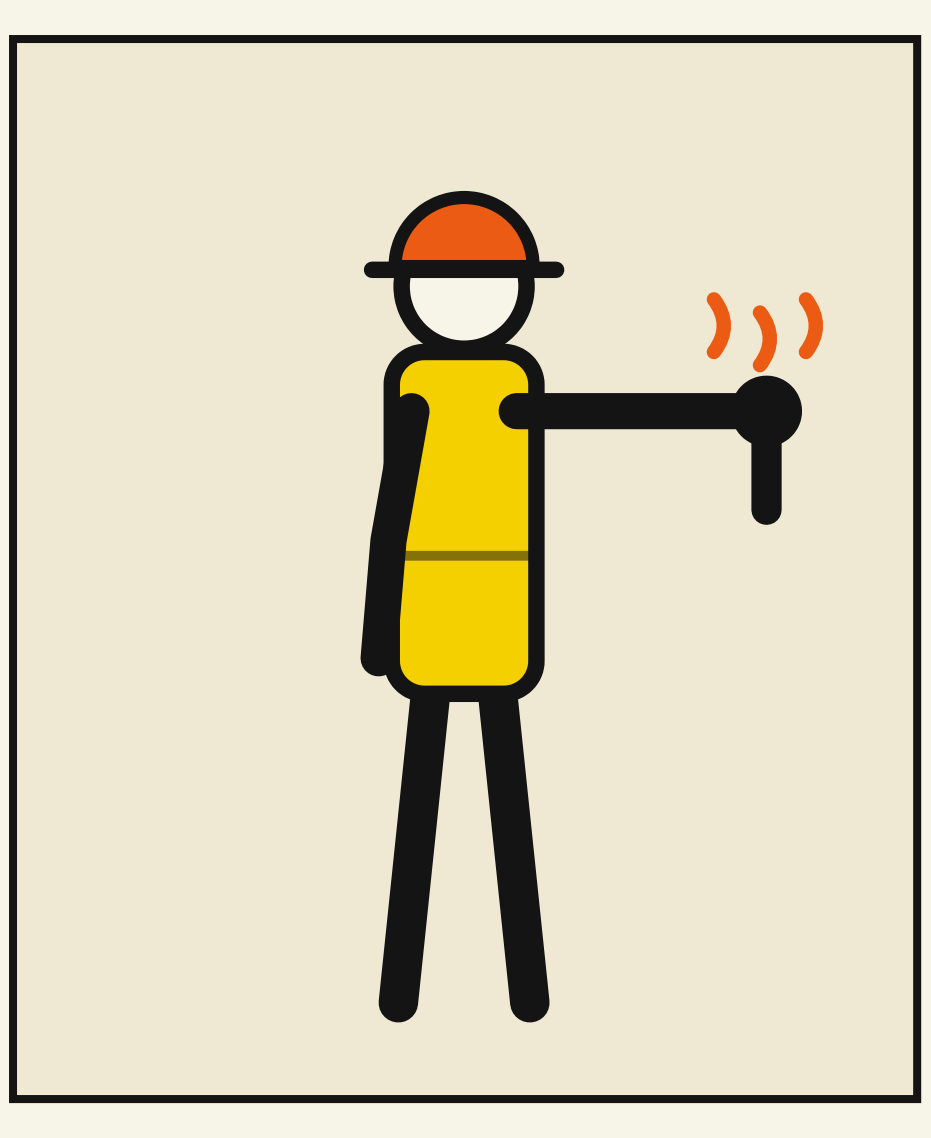

LOWER BOOM & RAISE LOAD

Arm extended, thumb down. Flex fingers in and out as long as load movement is wanted.

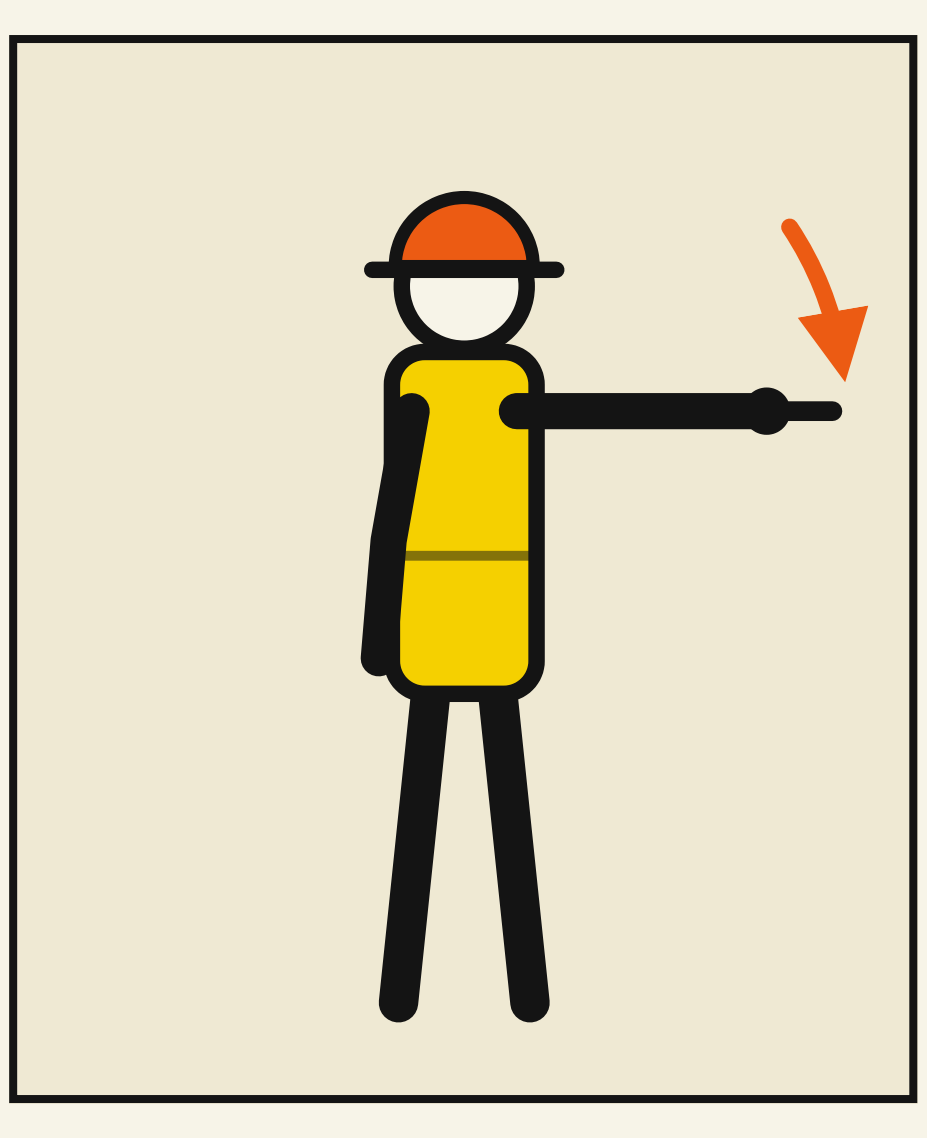

SWING

Arm extended, point with finger in the direction to swing the boom.

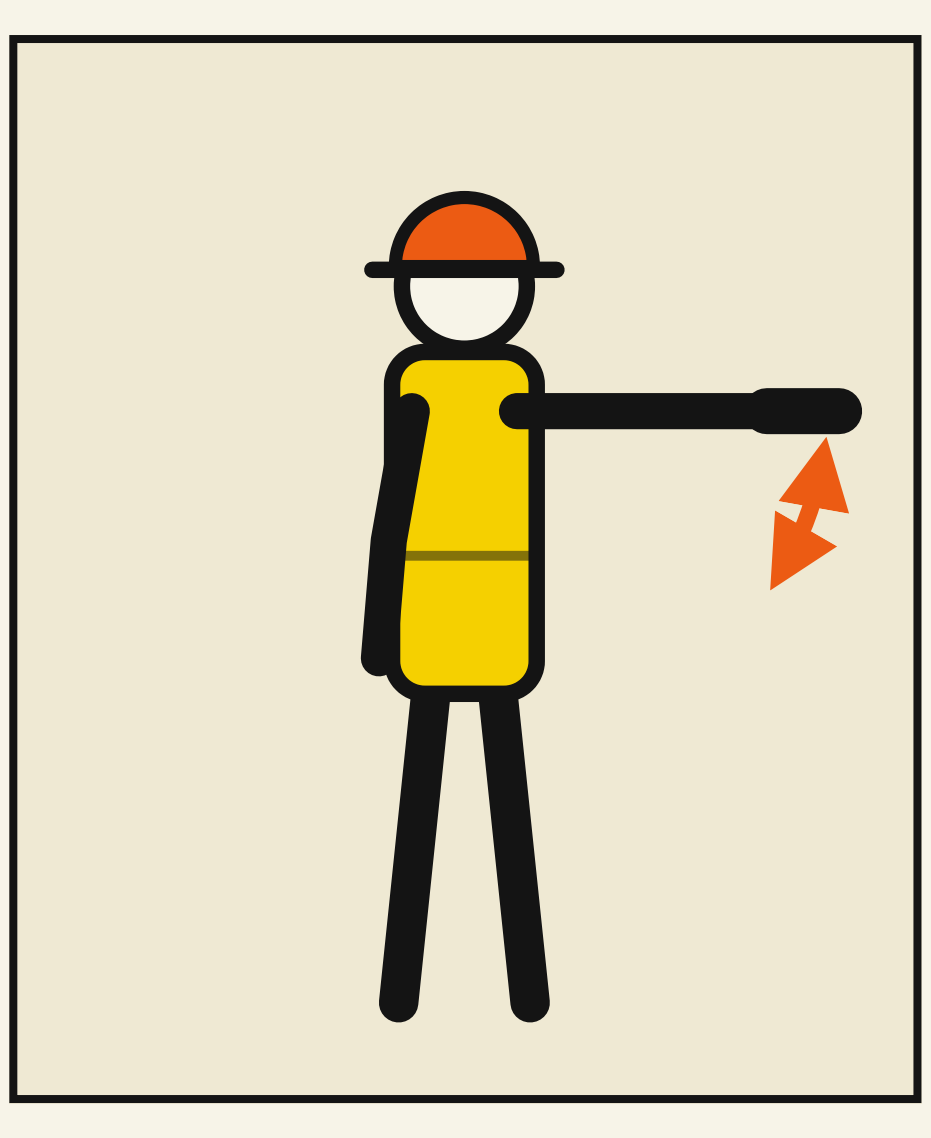

STOP

Arm extended, palm down. Move arm back and forth horizontally.

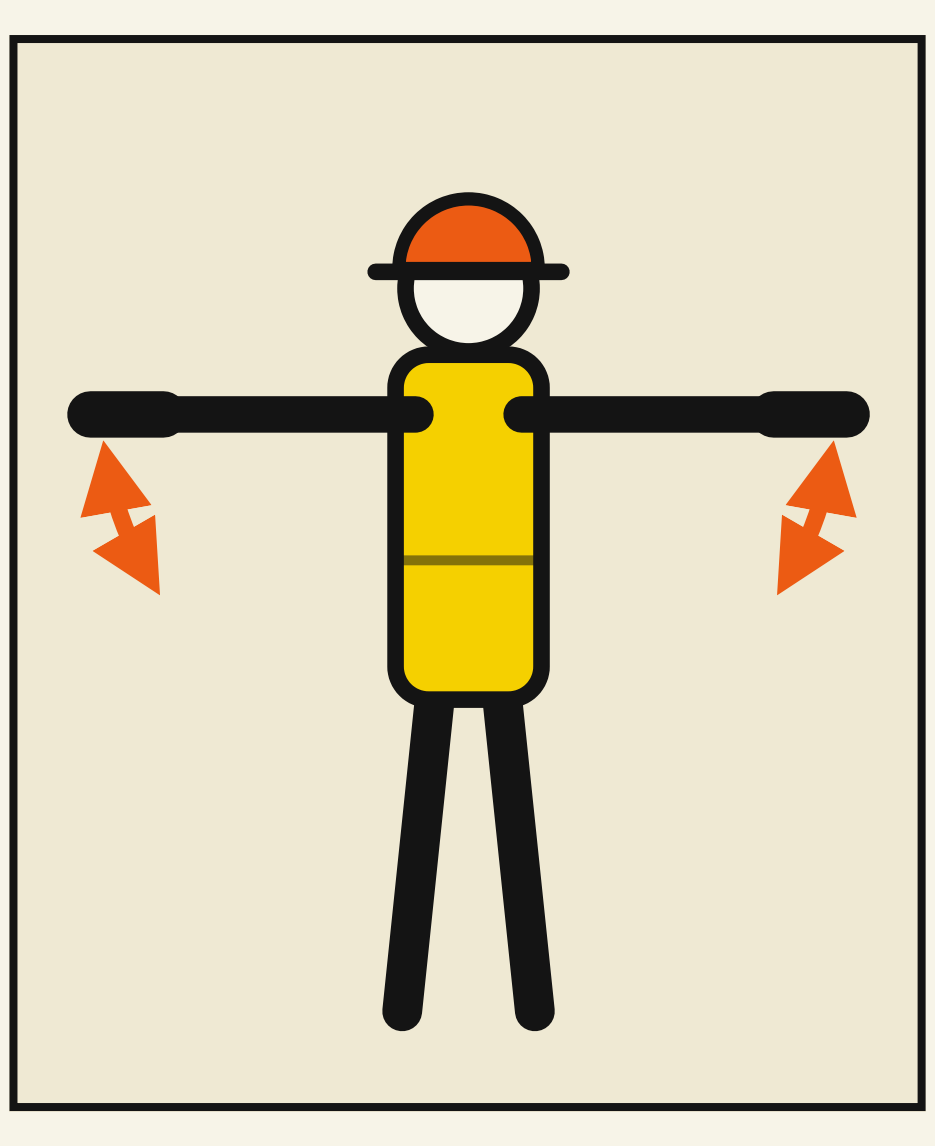

EMERGENCY STOP

Both arms extended, palms down. Move arms back and forth horizontally.

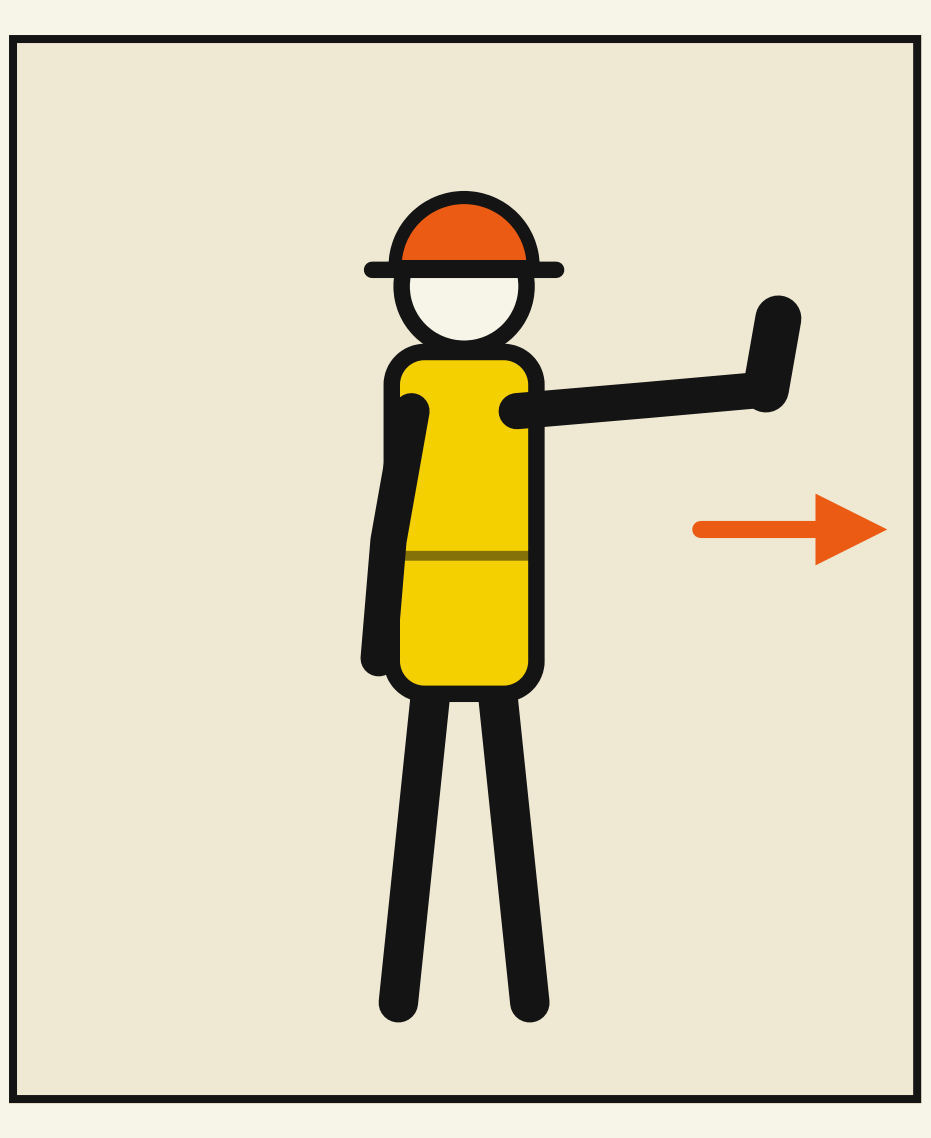

TRAVEL

Arm extended forward, hand open and slightly raised. Make a pushing motion in the direction of travel.

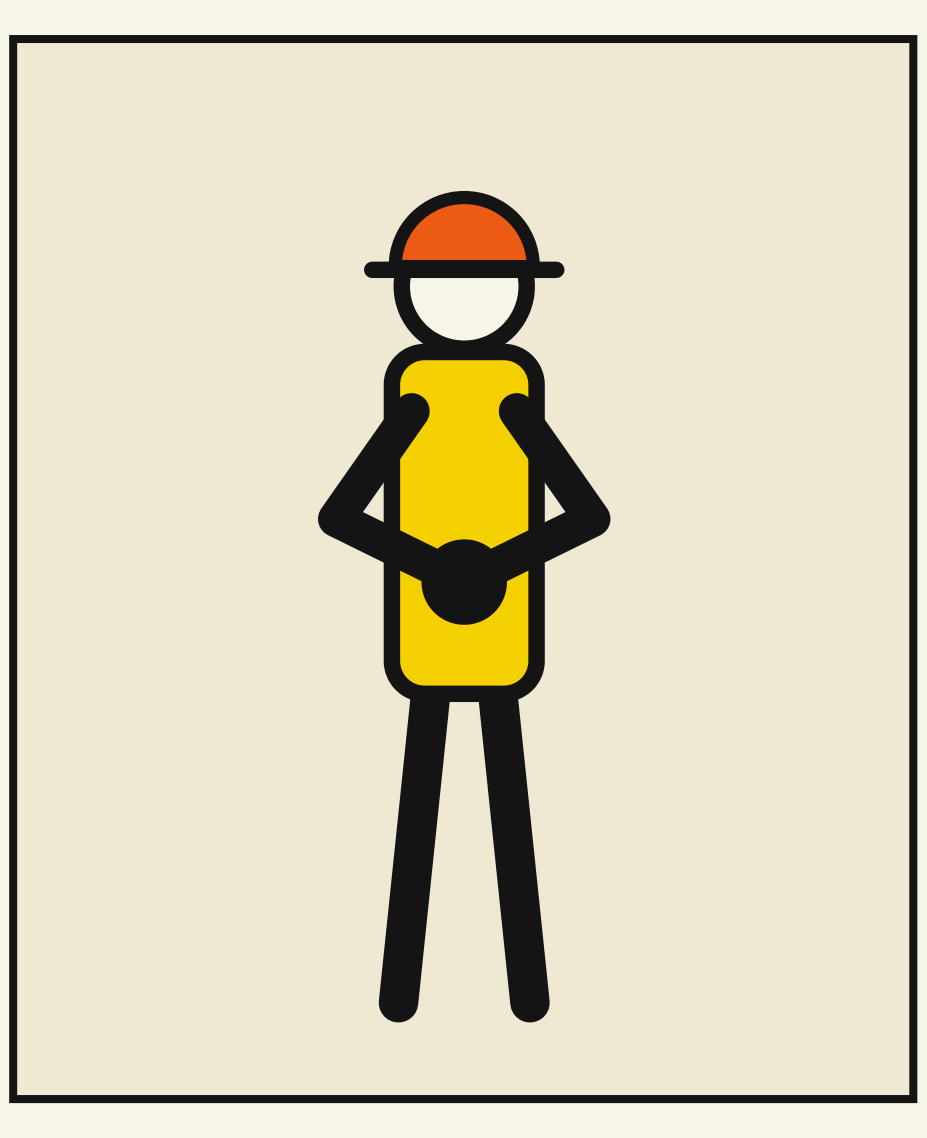

DOG EVERYTHING

Clasp hands in front of body. Stop all motion and hold everything where it is.

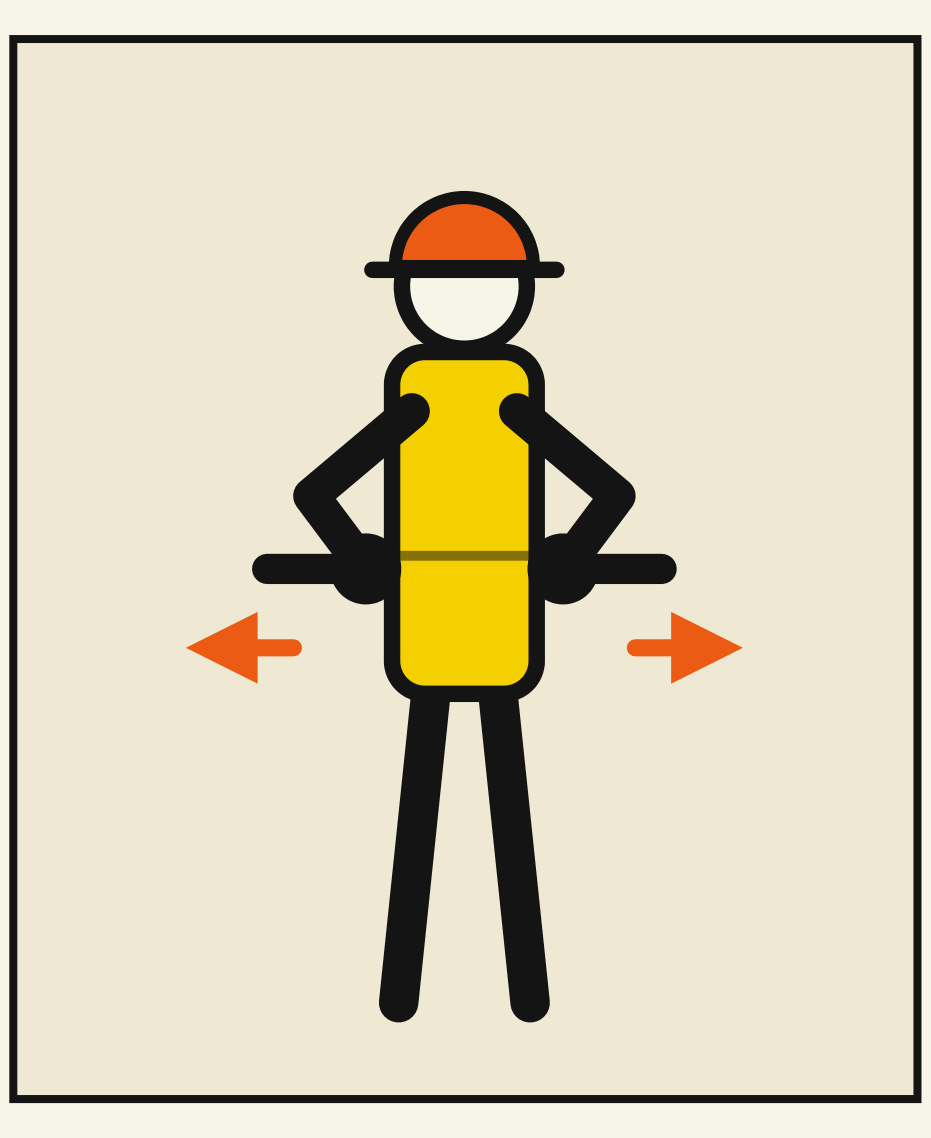

EXTEND BOOM

Both fists in front of body, thumbs pointing outward (telescoping boom).

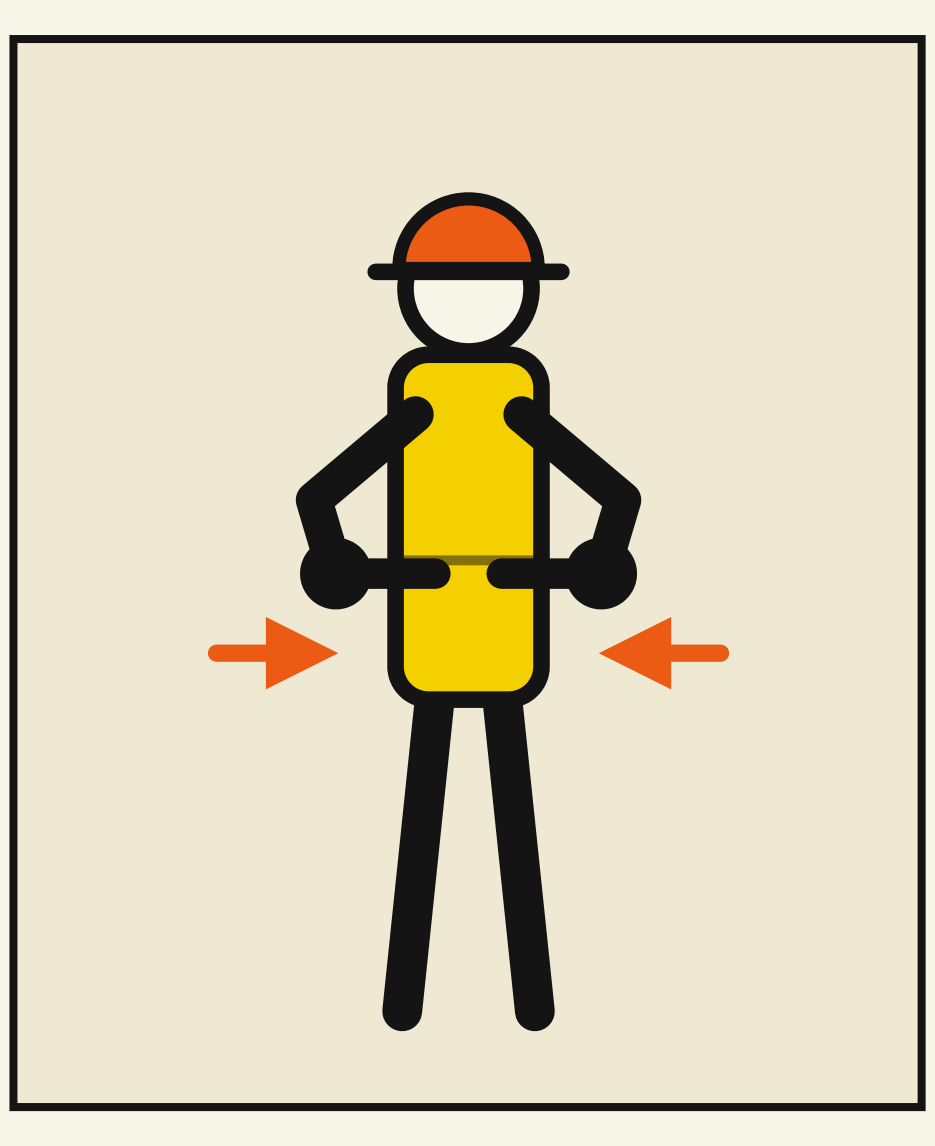

RETRACT BOOM

Both fists in front of body, thumbs pointing toward each other (telescoping boom).

EQUIPMENT SPOTTER SIGNALS

BACKING AND POSITIONING HAUL TRUCKS, LOADERS, CARRIERS

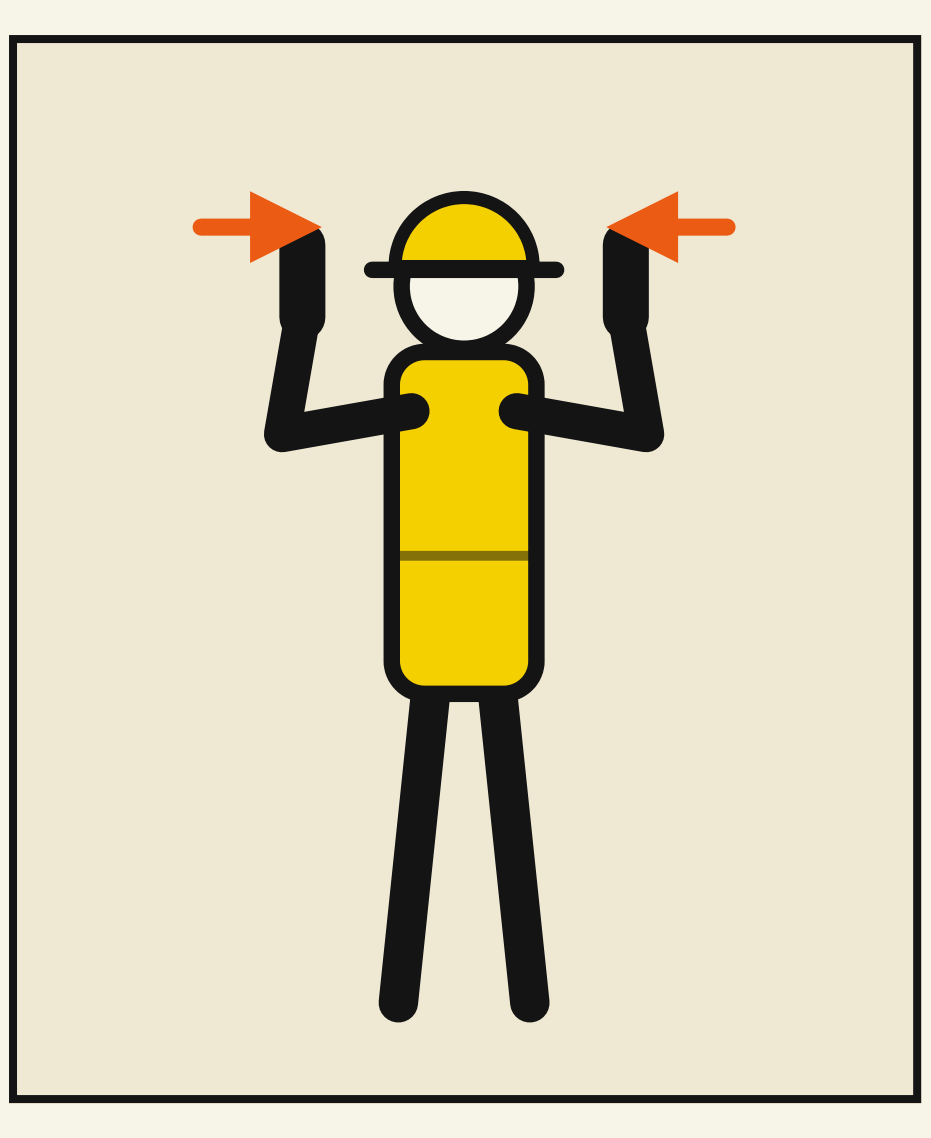

BACK UP / COME TO ME

Both hands up, palms toward you. Wave the machine back toward you.

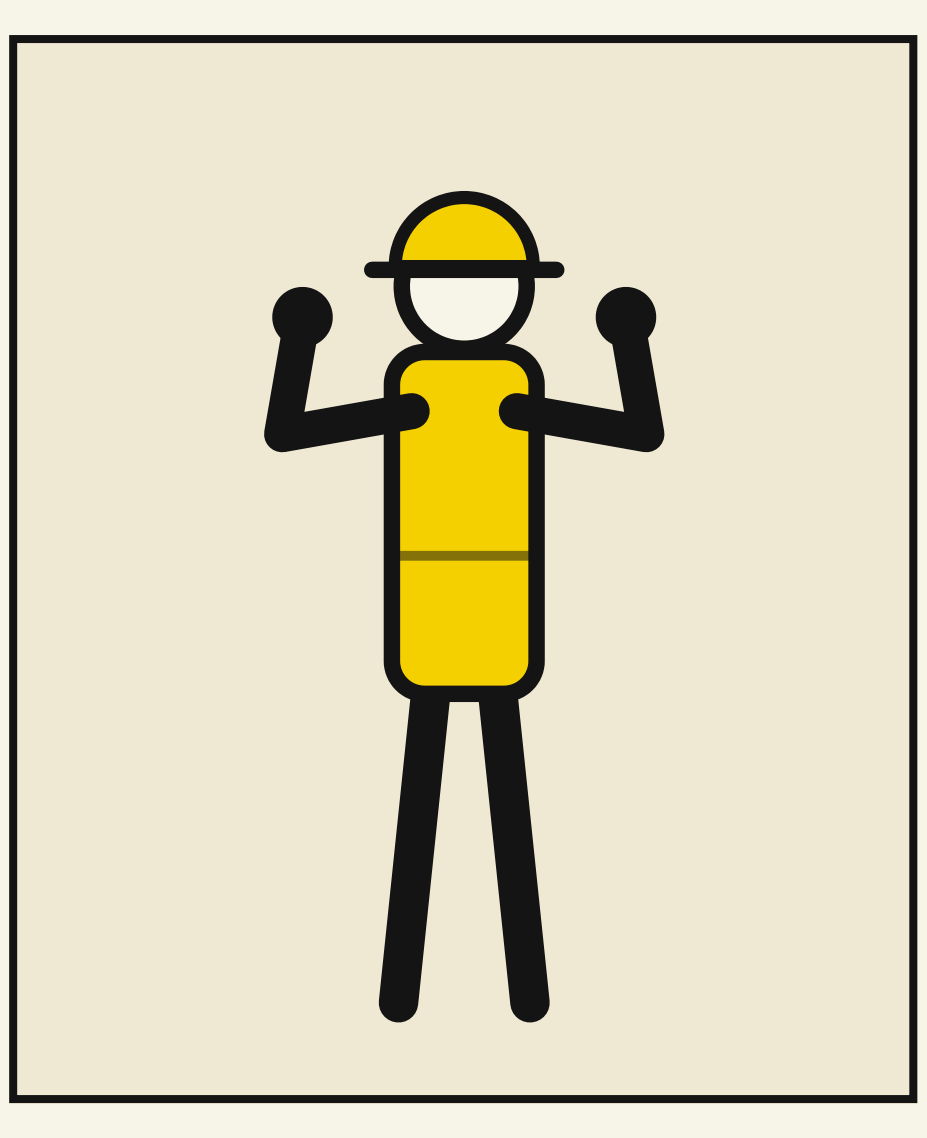

STOP

Both arms up, fists closed. Hold until the machine has stopped.

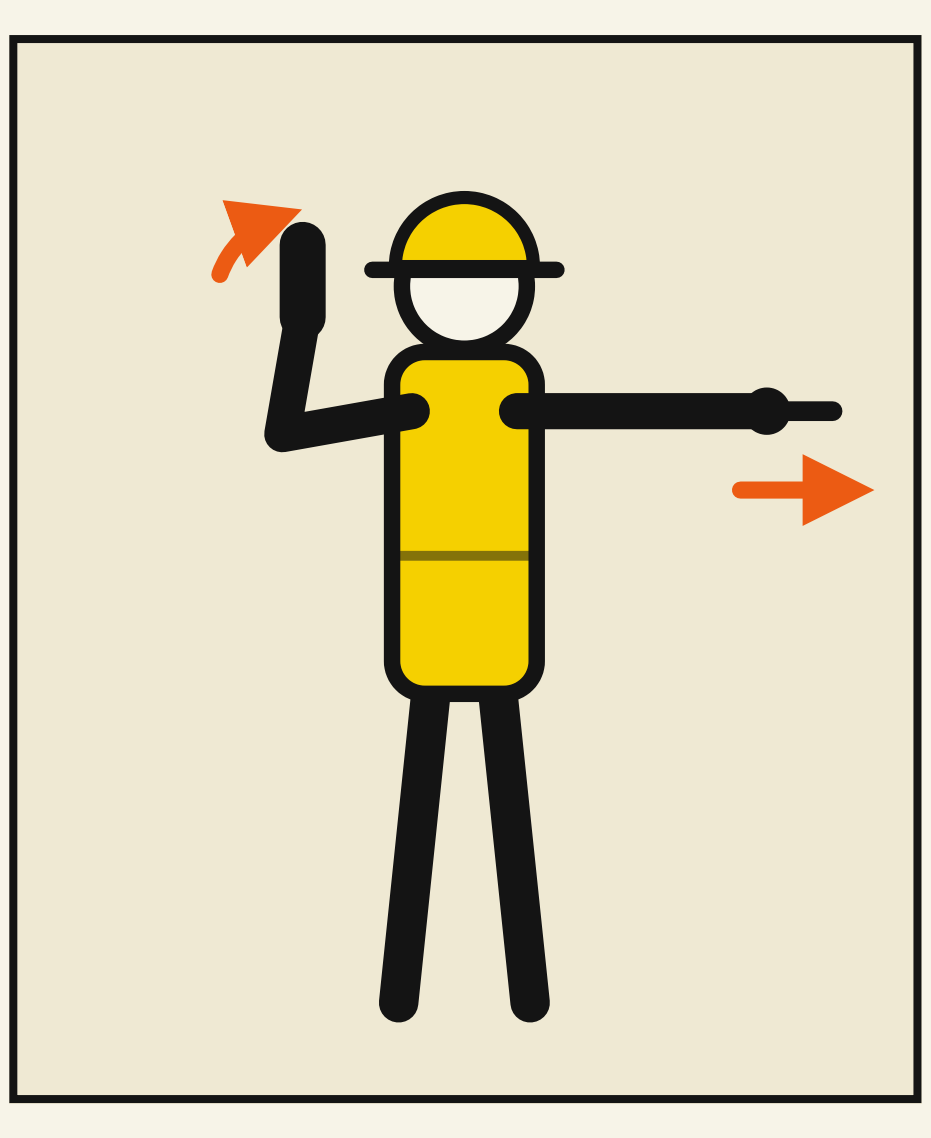

TURN

Point the direction to steer with one arm. Keep beckoning with the other hand.

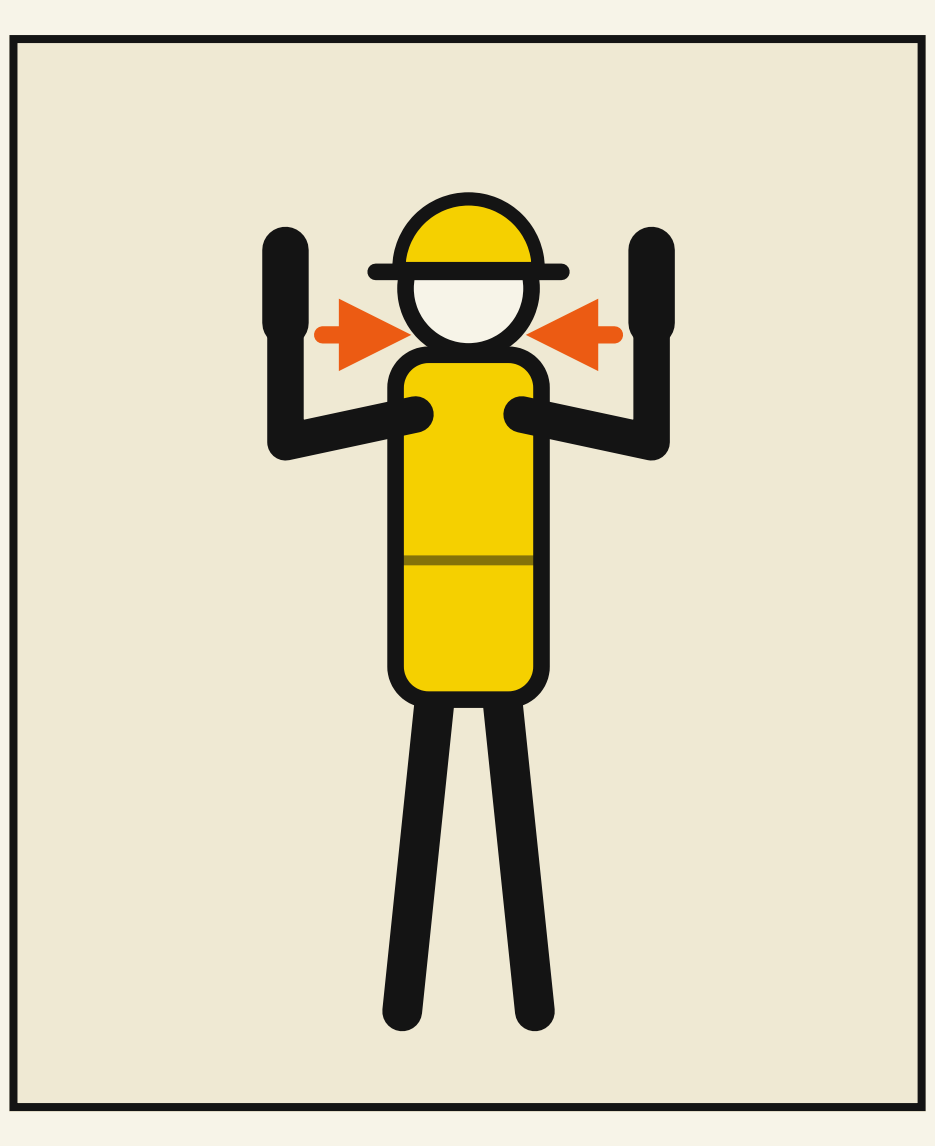

DISTANCE LEFT

Palms facing each other. The gap between hands is the distance left. Close them as it nears. Hands together = stop.

Spotters stand where the operator can see them in a mirror or camera, never directly behind the machine. Lose sight of your spotter: stop.

DCW SITE EMERGENCY SIGNALS

SITE SIGNALS · DUNEWRIGHT ONLY, NOT AN OLD EARTH STANDARD

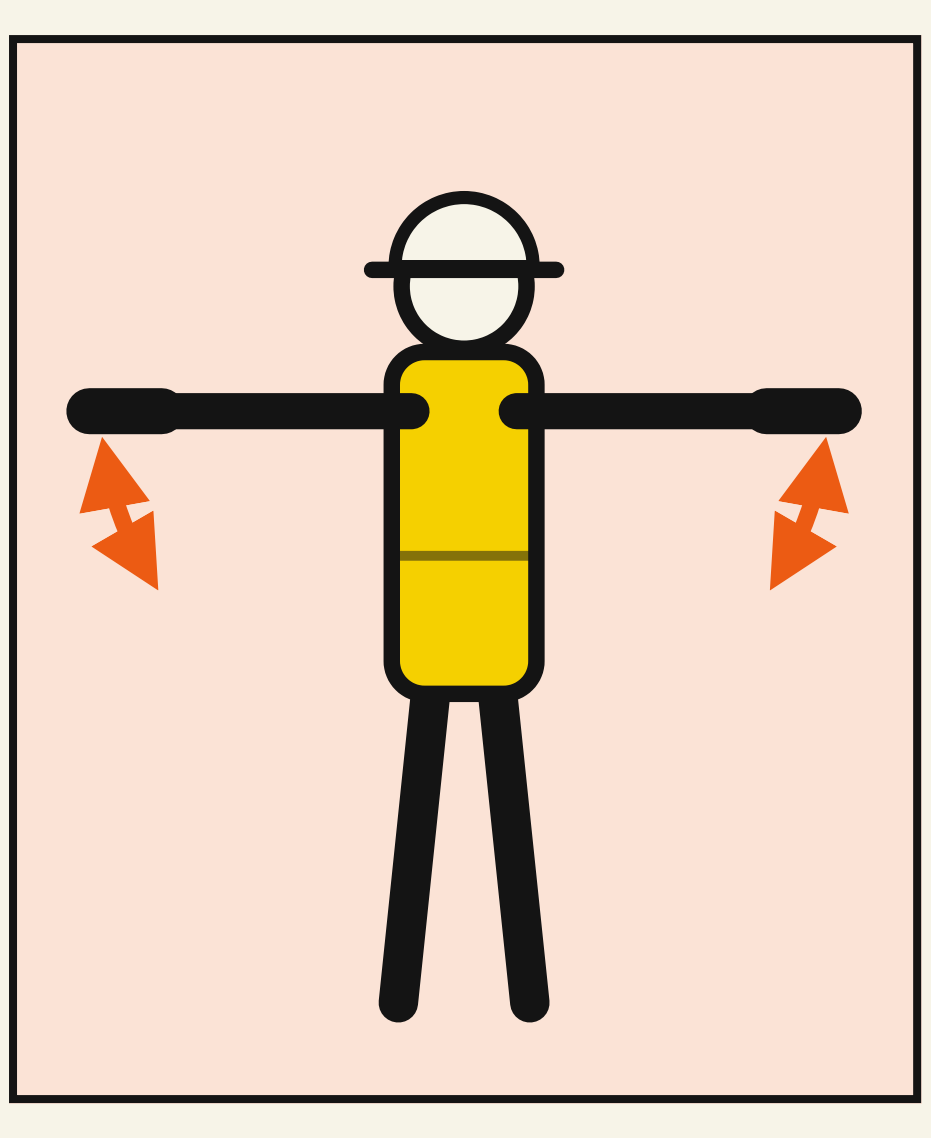

SITE SIGNAL

ALL STOP

Same as crane emergency stop. Every machine, crane and torch in sight stops.

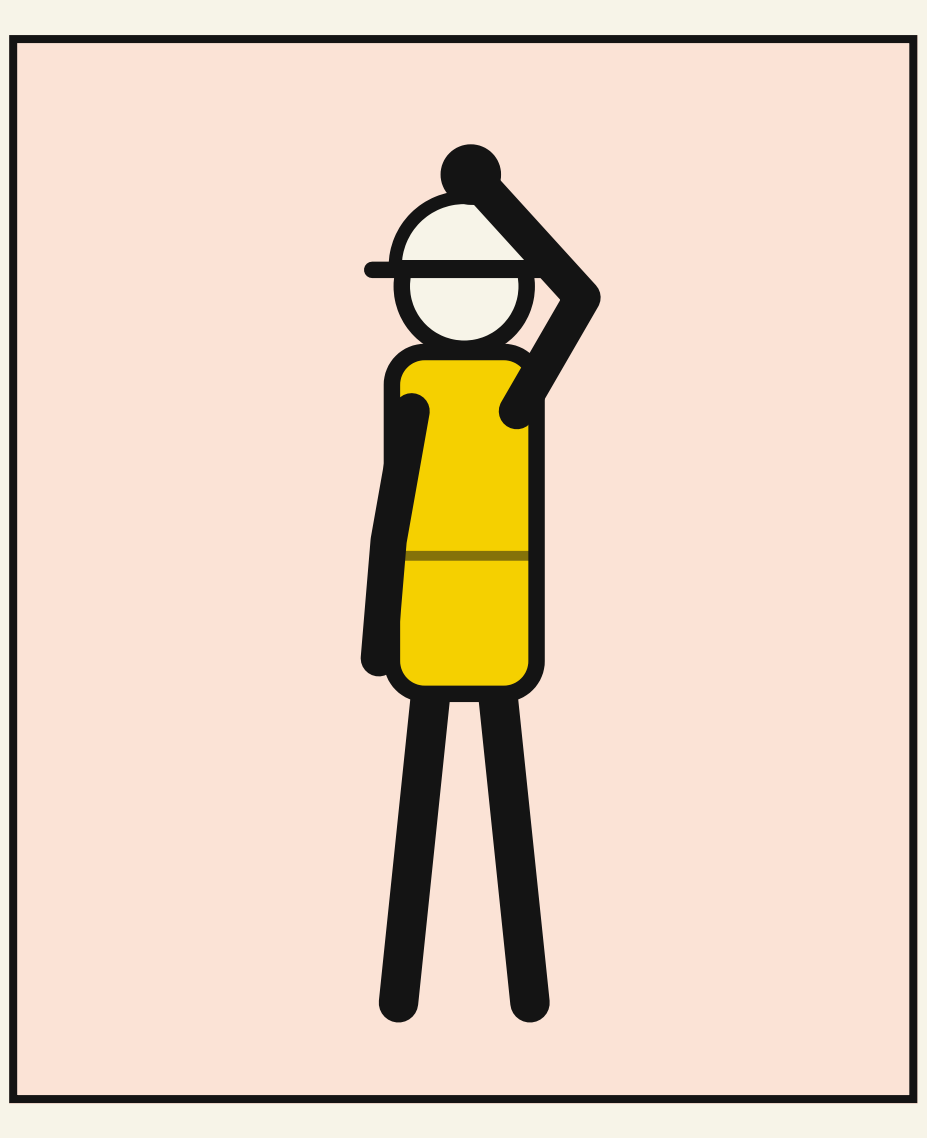

SITE SIGNAL

ARE YOU OK? / I'M OK

Arm arched over your head, fist on top of your helmet. Ask with it. Answer with the same signal.

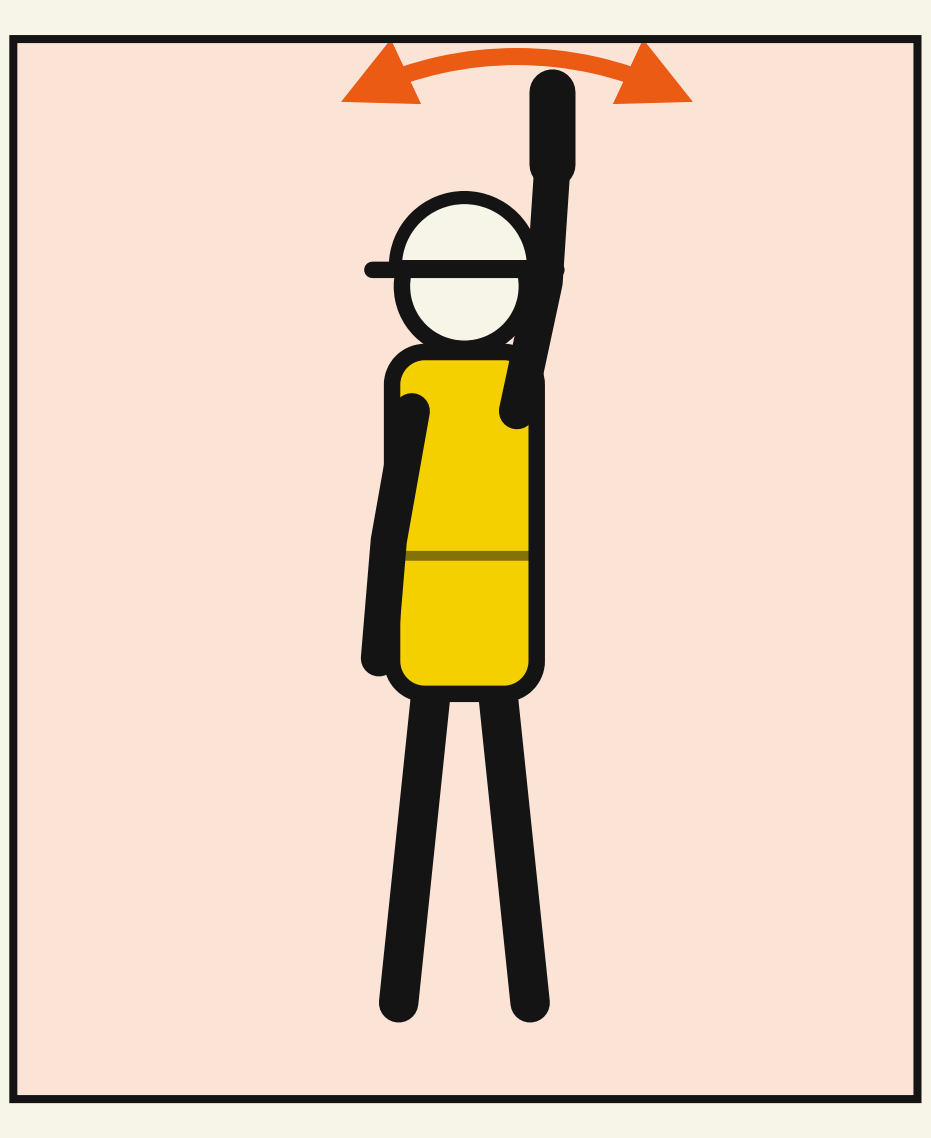

SITE SIGNAL

NEED HELP / COME TO ME

Arm straight up, wave it side to side overhead. Keep waving until someone comes.

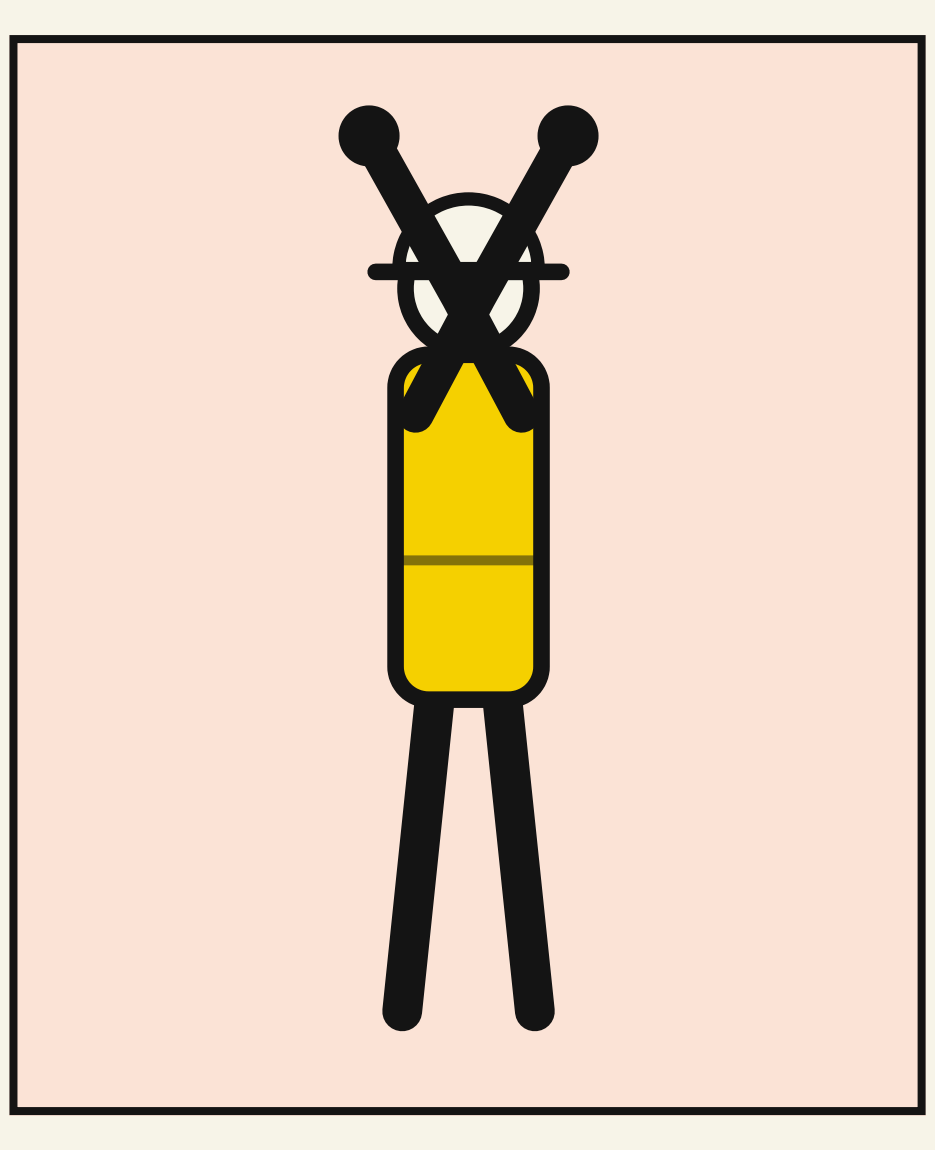

SITE SIGNAL

MAN DOWN

Cross both arms overhead in an X. Then point at the casualty.

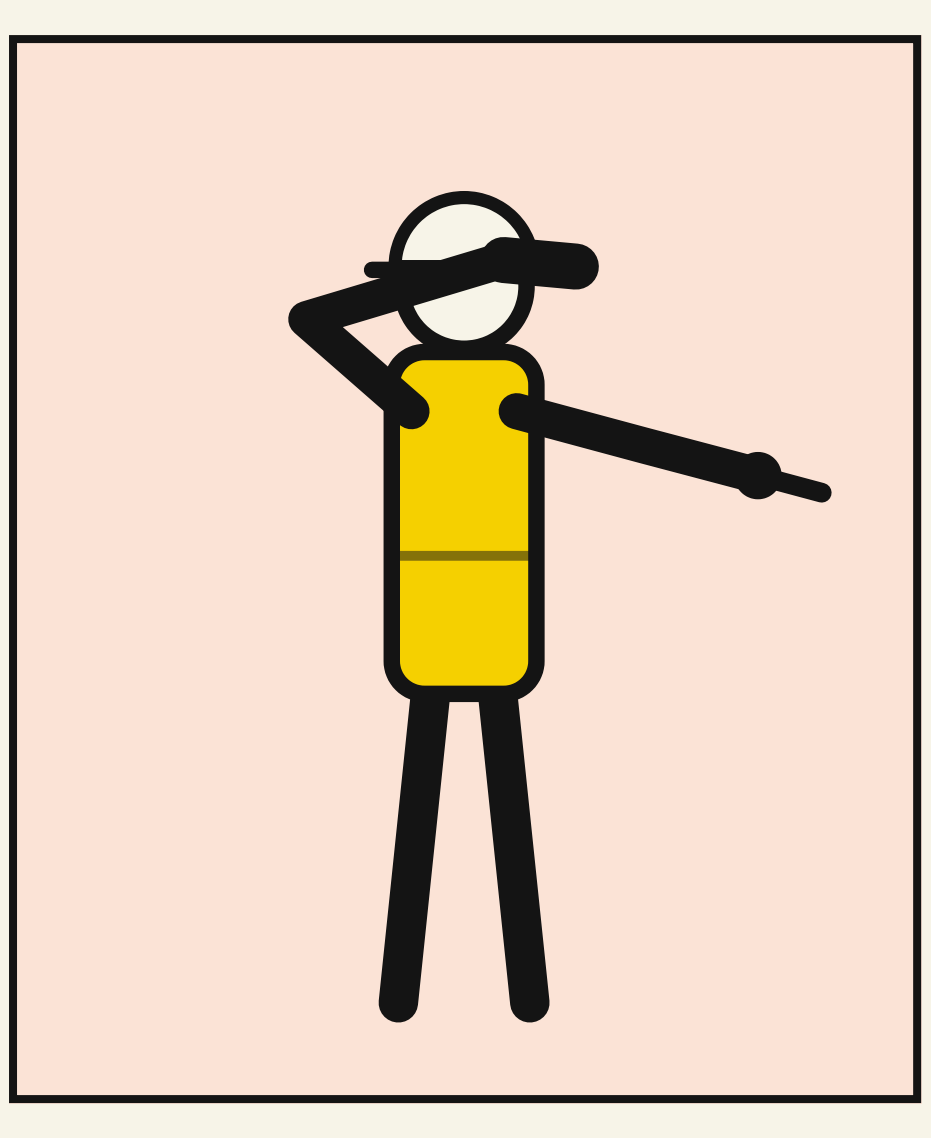

SITE SIGNAL

HEAT CASUALTY

Forearm across your brow, then point at the casualty. Bring ice and the medic.

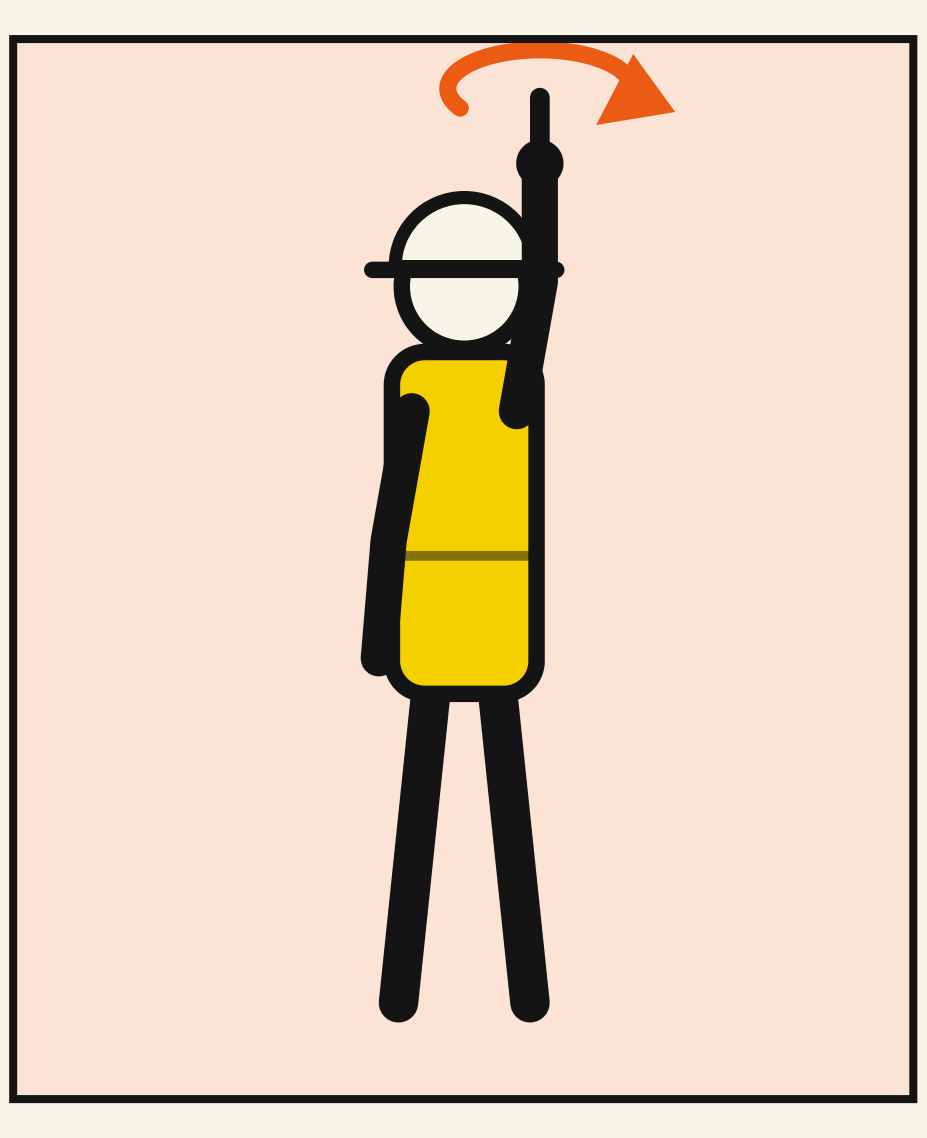

SITE SIGNAL

EVACUATE TO MUSTER

Arm straight up, circle it overhead. Then point toward your muster point.

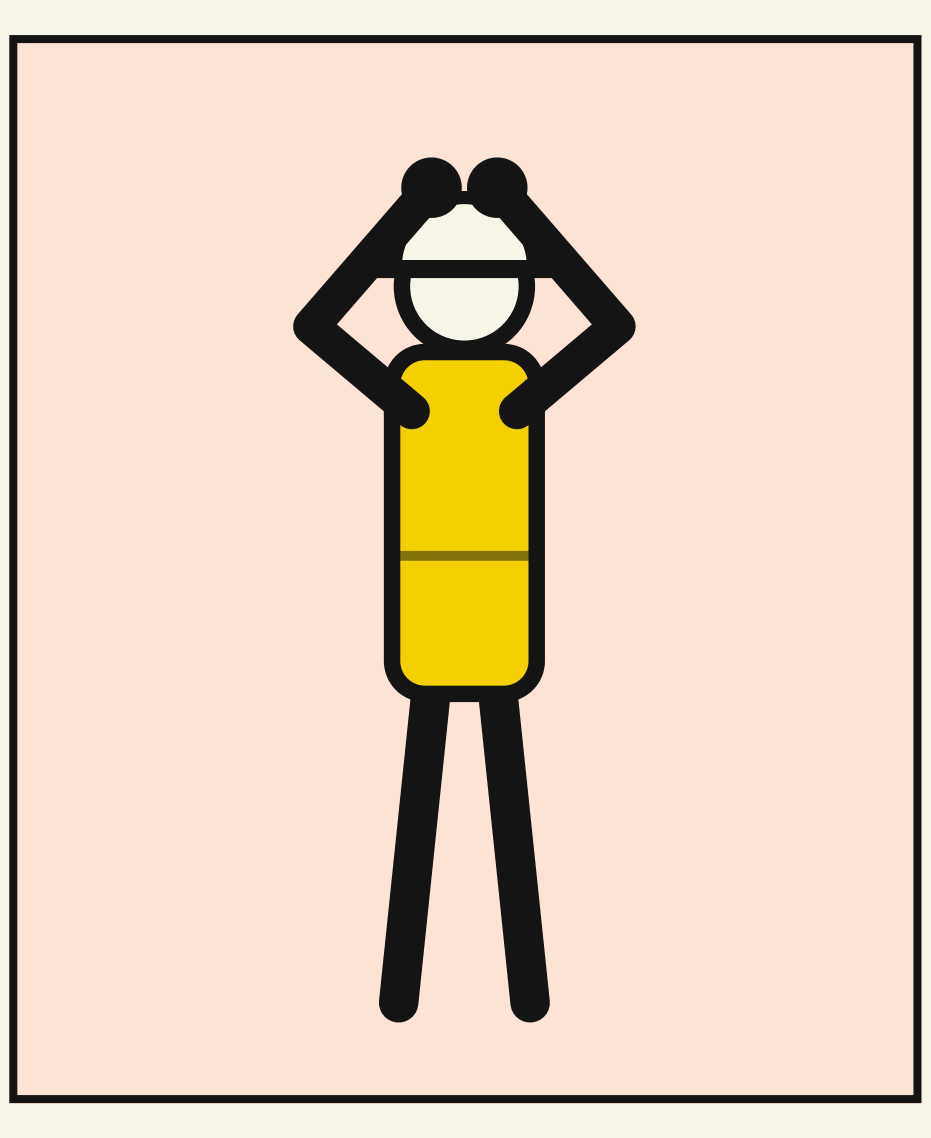

SITE SIGNAL

TAKE SHELTER

Both hands on top of your helmet, elbows out. Then point to the nearest shelter.

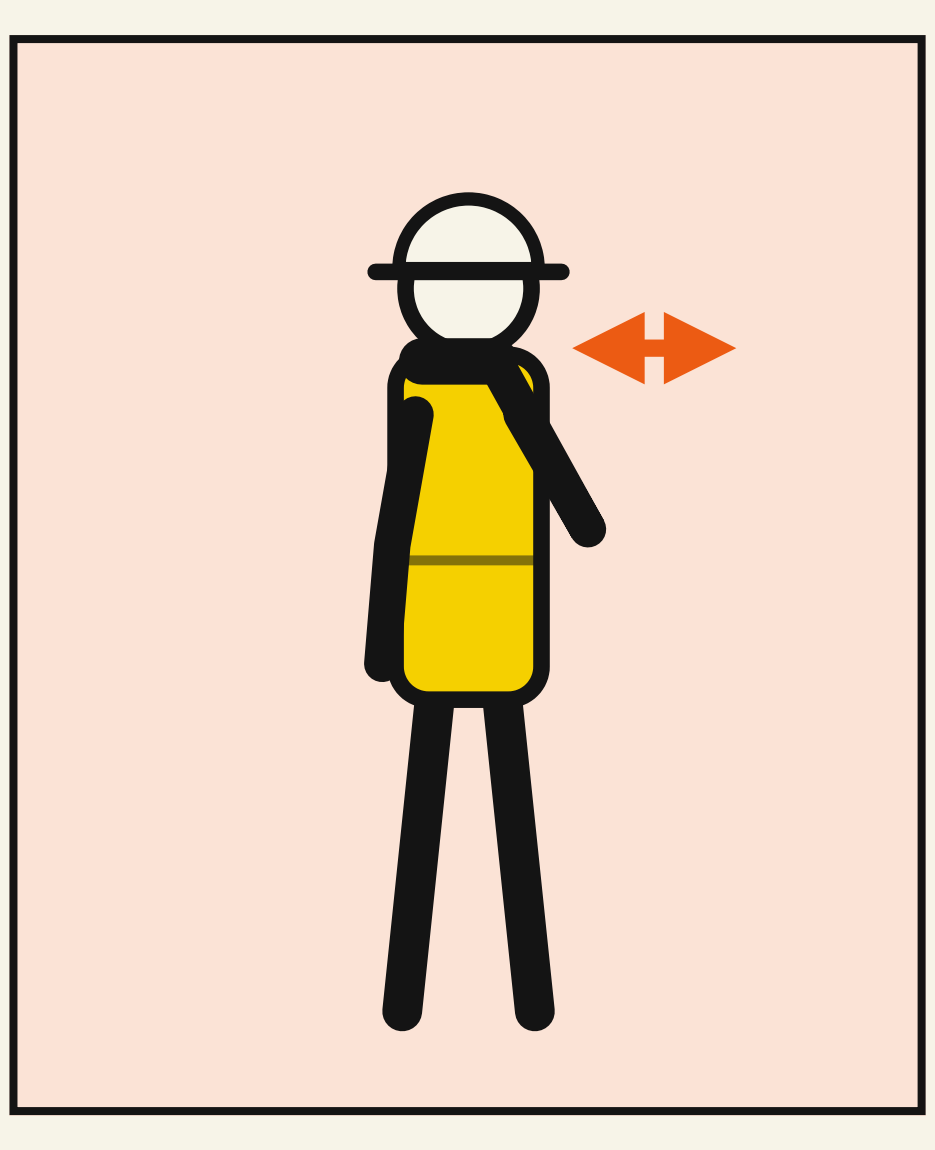

SITE SIGNAL

CAN'T BREATHE / AIR PROBLEM

Flat hand slicing across your throat. Respirator, cooling suit or air supply failing. Get them to clean air.

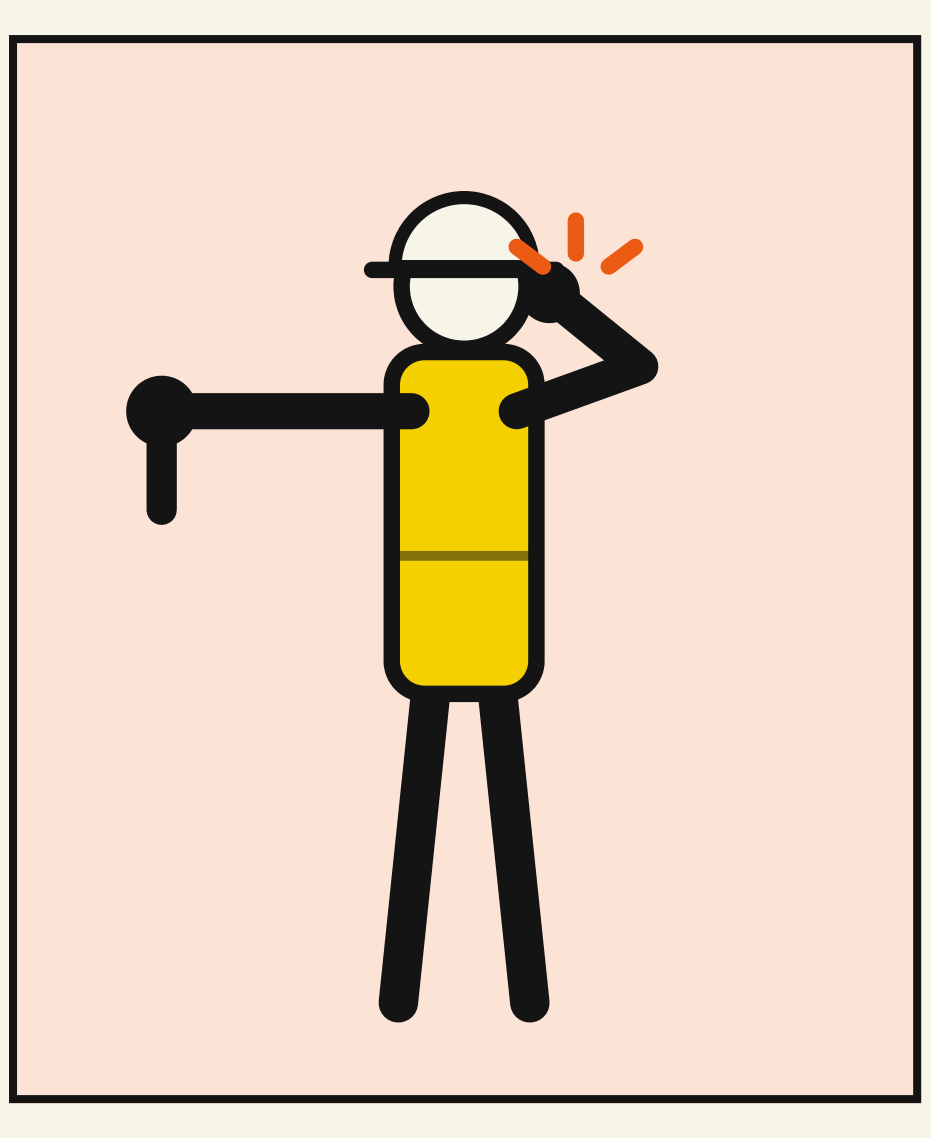

SITE SIGNAL

RADIO FAILURE

Fist tapping beside your ear, then thumb down. Switch to hand signals and find a working radio.

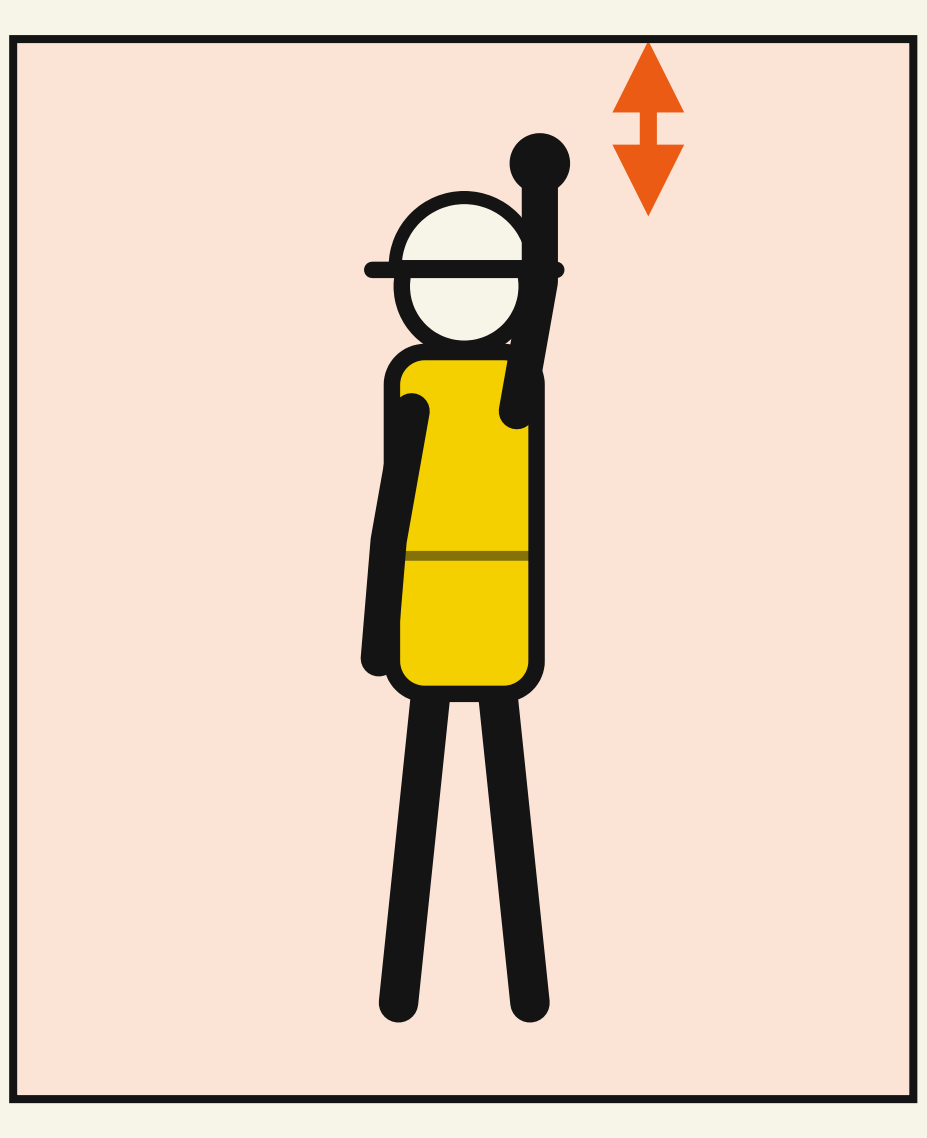

SITE SIGNAL

FIRE

Fist pumped straight up and down overhead. Then point at the fire. Grab an extinguisher only if it's small.

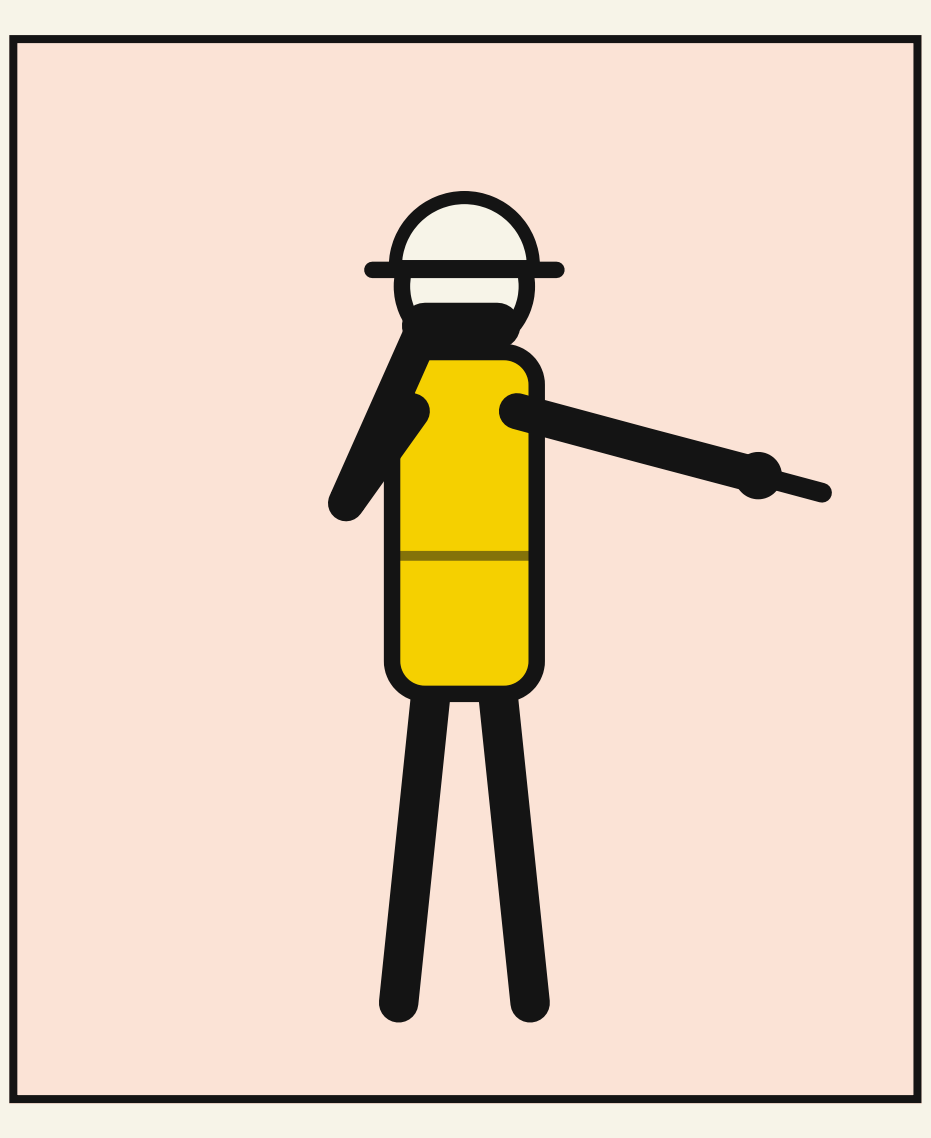

SITE SIGNAL

GAS / BAD AIR

Hand flat over your mouth and nose, then point upwind. Everyone moves upwind and out.

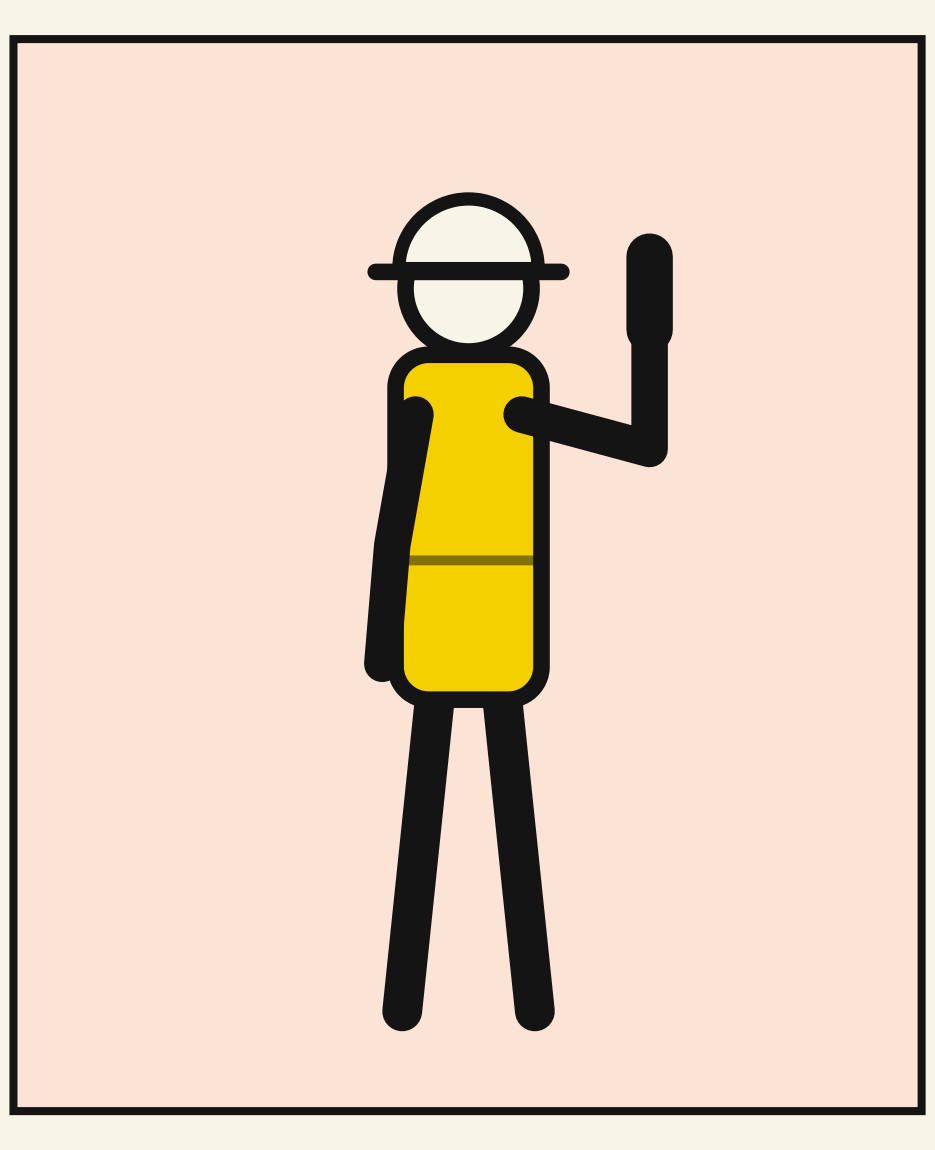

SITE SIGNAL

HOLD POSITION

Forearm up, flat hand facing the person. Stay where you are until waved on.

After any emergency signal, call it in on Ch 1 as soon as you can: "Emergency, emergency, emergency", type, sector-grid, deck, number hurt.

STOP BEATS EVERYTHING

Two arms out, palms down, waving back and forth means **everything stops now**: cranes, machines, hot work. It works the same on the crane line, the haul road and the deck. The siren version is **3 short blasts**.

Adapted from Old Earth standards: ASME B30.5 (Mobile and Locomotive Cranes) standard hand signals, OSHA 1926 Subpart CC Appendix A, common earthmoving spotter practice. Site emergency signals are Dunewright Colony Works rules.

REF-HS · Dunewright Colony Works · Replace when faded