

liteboard

liteboard Datasheet



V1.1 GRINN 2017

Table of Contents

1.	Sı	lummary	3
	1.1.	Description	3
	1.2.	Features	3
	1.3.	Additional information	3
2.	Fι	unctional Description	4
	2.1.	Block Diagram	4
	2.2.	Connectors on the board	5
	2.3.	Connectors list	5
	2.4.	Connectors description	6
	3.	μSD slot card [J1]	6
	4.	Ethernet RJ45 [J2]	6
	5.	USB type A [J3]	7
	6.	Power supply [J4]	7
	7.	micro USB Type B connector [J5]	7
	8.	40 pins connector for expansion sandwich [J8]	8
	9.	40 pins connector for expansion sandwich [J12]	10
	10.	40 pins connector for expansion sandwich [J9]	12
	11.	JTAG [J11]	14
	11.1.	Boot options	15
	11.2.	User interface	16
	11.2.	.1. LED	16
	11.2.	.2. On/Off switch [S2]	16
	11.2.	.3. Reset switch [S3]	16
12	2.	Electrical Characteristics	17
	12.1.	. Absolute Maximum Ratings	17
	12.2.	. Recommended Operating Conditions	17
13	3.	Mechanical Characteristics	18
14	1.	Document Revision History	19



1. Summary

1.1. Description

The liteboard is single computer board ready to use with the liteSOM modules. The liteboard is equipped with 10/100Mb Ethernet port, USB 2.0 Host, Power supply connector, uSD card slot, LED, boot choose dipswitch, JTAG port (not populated), microUSB for power supply and serial debug, expansion connectors 3x40PIN, dedicated power output for TFT backlight. The liteboard is compatible with linux-friendly liteSOM modules. Additionally, liteboard enables you to implement any kind of application in such areas as IoT, building or industrial automation and many more. The liteboard is targets at companies and individuals who want to develop their products for mass production.

1.2. Features

- Small size industrial single board computer ready to use with liteSOM module
- SO-DIMM socket dedicate for the liteSOM
- 10/100 Mb Ethernet, RJ45
- USB 2.0
- micro USB for power supply and serial debug
- micro SD card slot
- 3 x 40 Pins for expansion connectors
- JTAG port
- · Boot configuration DIP switch
- · Dedicated power output for LCD backlight
- 5-12V power supply
- Compatible with chiliboard expansion sandwiches


1.3. Additional information

The board circuit diagram and instructions on how to start with software development using liteboard are available on the website: www.litesom.com




2. Functional Description

2.1. Block Diagram

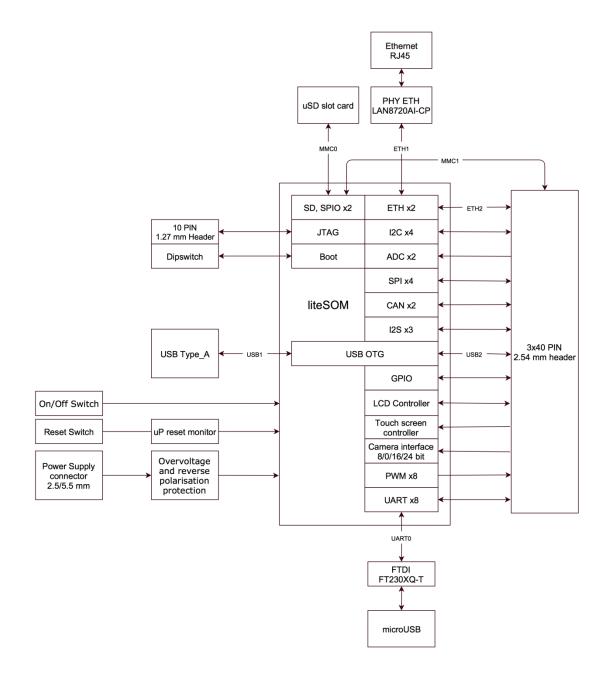



2.2. Connectors on the board

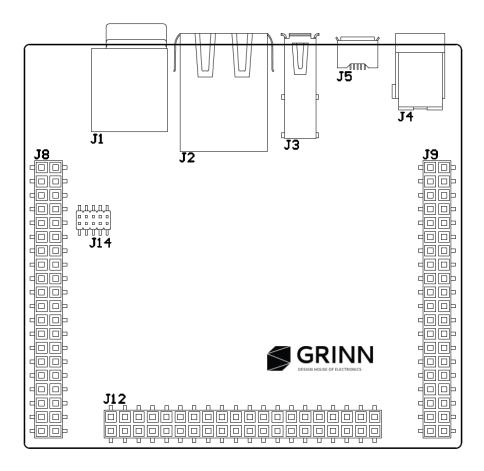

2.3. Connectors list

Connector	Description
J1	Micro SD slot card
J2	Ethernet [RJ45]
J3	USB Host [Type A]
J4	Power supply [2.5/5.5mm]
J5	Micro USB [Type B]
J8	40 pins connector for expansion sandwich [2x20, pitch: 2.54 mm]
J9	40 pins connector for expansion sandwich [2x20, pitch: 2.54 mm]
J12	40 pins connector for expansion sandwich [2x20, pitch: 2.54 mm]
J14	JTAG [2x5, pitch: 1.27 mm]



2.4. Connectors description

2.4.1 µSD slot card [J1]

Pin	liteboard Connector	liteSOM Connctor	I.MX 6UL Pin	Туре	Description
1	SD_DAT2	175	B1	Ю	μSD Data
2	SD_DAT3	178	A2	Ю	μSD Data
3	SD_CMD	177	C2	Ю	Command line
4	3V3	-	-		VDD 3.3V
5	SD_CLK	181	C1	Ю	Clock
6	GND	-	-		GND
7	SD_DAT0	173	В3	Ю	μSD Data
8	SD_DAT1	176	B2	Ю	μSD Data
9	SD_CD	44	J14	Ю	Card detect

2.4.2 Ethernet RJ45 [J2]

The liteboard is equipped with 10/100Mb Ethernet interface based on LAN8720AI-CP transceiver by Microchip. Table below presents the connected LAN8720AI-CP and liteSOM module.

liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Type	Description
ETH_MDIO	32	K17	Ю	Multifunction pin.
ETH_MDC	31	L16	Ю	Multifunction pin.
ETH_RXD1	99	E17	Ю	Multifunction pin.
ETH_RXD0	97	F16	Ю	Multifunction pin.
ETH_RXERR	98	D15	Ю	Multifunction pin.
ETH_TXEN	94	F15	Ю	Multifunction pin.
ETH_TXD0	93	E15	Ю	Multifunction pin.
ETH_TXD1	91	E14	Ю	Multifunction pin.
ETH_CRS_DV	100	E16	Ю	Multifunction pin.
ETH_RESETn	4	P8	Input	Connect to global RESETn
ETH_REFCLK	92	F14	Ю	Multifunction pin.

2.4.3 USB type A [J3]

The liteSOM supports two USB OTG host ports. The liteboard is equipped with USB type A socket. It is driven by liteSOM USB2.0 controller.

Pin	liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Description
1	USB1_VCC	70	T12	USB VCC
2	USB1_D_P	63	U15	USB1 data positive
3	USB1_D_N	65	T15	USB1 data negative
4	GND	-	-	GND

2.4.4 Power supply [J4]

The J4 connector is dedicated for 5-12 V DC power supply. We are recommended using the power adapter with 1A current output. The DC power socket is compatible with the standard 2.5mm / 5.5mm power plug. Power input on the liteboard has reverse polarity and overvoltage protection.

2.4.5 micro USB Type B connector [J5]

The micro USB port on the liteboard is used for serial interface communication. The default parameters for the serial port are:

Baud rate: 115200Data bits: 8Stop bits: 1Parity: None

The micro USB port can be also used as the power supply for liteboard with the current up to 500mA. When the expansion board is connected we recommend using external power supply connected to J4.

Pin No	liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Description
1	DBG_USB_VCC	-	-	USB Power supply
2	DBG_RXD	45	K14	RX Debug [FTDI Converter] Input data
3	DBG_TXD	43	K16	TX Debug [FTDI Converter] Output data
4	-	-	-	No connected
5	GND	-	-	GND

2.4.6 40 pins connector for expansion sandwich [J8]

P3 1 2 P4 P5 3 4 P6 P7 7 8 P9 P9 9 10 P12 P13 11 12 P14 P15 15 16 P18 P17 17 18 P19 P19 19 20 P22 P21 21 22 P24 P25 23 24 P26 P27 27 28 P29 P29 29 30 P32 P31 31 32 P34 P35 33 34 P36 P37 37 38 P39 P40

Pin No	liteboard Connector		liteSOM Connector	I.MX 6UL Pin	Туре	Function
1	P1	I2S0_DOUT	25	N14	Ю	Multifunction pin.
2	P2	12S0_DIN	21	M14	Ю	Multifunction pin.
3	P3	I2S0_WCLK	24	N15	Ю	Multifunction pin.
4	P4	I2S0_BCLK	23	N16	Ю	Multifunction pin.
5	P5	I2S0_MCLK	22	P14	Ю	Multifunction pin.
6	P6	GND	-	-	Ground	GND
8	P7	NAND_CE1n	184	B5	Ю	Multifunction pin.
8	P8	NAND_CE0n	183	C5	Ю	Multifunction pin.
9	P9	NAND_CLE	182	A4	Ю	Multifunction pin.
10	P10	NAND_WPn	152	D5	Ю	Multifunction pin.
11	P11	GND	-	-	Ground	GND
12	P12	SPI_CLK	165	D4	Ю	Multifunction pin.
13	P13	SPI_CS	168	D3	Ю	Multifunction pin.
14	P14	SPI_MISO	170	D1	Ю	Multifunction pin.
15	P15	SPI_MOSI	167	D2	Ю	Multifunction pin.



16	P16	I2C_SCL	155	E5	Ю	Multifunction pin.
17	P17	I2C_SDA	153	F5	Ю	Multifunction pin.
18	P18	NAND_REDYn	186	A3	Ю	Multifunction pin.
19	P19	UART2_CTS	52	J15	Ю	Multifunction pin.
20	P20	UART2_RTS	50	H14	Ю	Multifunction pin.
21	P21	UART2_TX	49	J17	Ю	Multifunction pin.
22	P22	UART2_RX	51	J16	Ю	Multifunction pin.
23	P23	UART3_TX	79	H17	Ю	Multifunction pin.
24	P24	UART3_RX	81	H16	Ю	Multifunction pin.
25	P25	TS_X_LEFT	34	M16	Ю	Multifunction pin.
26	P26	TS_X_RIGHT	35	L17	Ю	Multifunction pin.
27	P27	TS_Y_UP	36	L14	Ю	Multifunction pin.
28	P28	TS_Y_DOWN	37	L15	Ю	Multifunction pin.
29	P29	GND	-	-	Ground	GND
30	P30	GPIO0	38	K13	Ю	Multifunction pin.
31	P31	GPIO8	30	N17	Ю	Multifunction pin.
32	P32	GPIO5	33	M17	Ю	Multifunction pin.
33	P33	GND	-	-	Ground	GND
34	P34	UART5_RX	89	G13	Ю	Multifunction pin.
35	P35	UART5_TX	87	F17	Ю	Multifunction pin.
36	P36	CAN1_TX	80		Ю	Multifunction pin.
37	P37	CAN1_RX	82		Ю	Multifunction pin.
38	P38	UART7_RXD	102	A15	Ю	Multifunction pin.
39	P39	UART4_RX	85	G16	Ю	Multifunction pin.
40	P40	UART4_TX	83	G17	Ю	Multifunction pin.



2.4.7 40 pins connector for expansion sandwich [J12]


	J12		
P41		2	P42
P43	1	2	P44
P45	3	4	P46
GND	5	6	P48
P49	7	8	P50
P51	9	10	P52
P53	11	12	P54
P55	13	14	P56
P57	15	16	P58
P59	17	18	P60
P61	19	20	P62
P63	21	22	P64
P65	23	24 26	P66
P67			P68
GND	27	28	P70
P71	31	30 32	P72
P73	33	34	P74
P75	35		P76
P77	37	36 38	P78
P79			P80
	- 39	40	

Pin No	liteboard Connector		liteSOM Connector	I.MX 6UL Pin	Туре	Function
1	P41	UART7_TXD	103	B14	Ю	Multifunction pin.
2	P42	ETH_MDIO	32	K17	Ю	Multifunction pin.
3	P43	ETH_MDC	31	L16	Ю	Multifunction pin.
4	P44	USB_OTG2_DRVVBUS	104	A16	Ю	Multifunction pin.
5	P45	SNVS_TAMPER7	6	N10	Input	Multifunction pin.
6	P46	USB_OTG2_ID	101	D17	Ю	Multifunction pin.
8	P47	GND	-	-	Ground	GND
8	P48	USB_OTG2_D_P	57	U13	Ю	Multifunction pin.
9	P49	USB_OTG2_VBUS	56	U12	Input	Multifunction pin.
10	P50	USB_OTG2_D_N	59	T13	Ю	Multifunction pin.
11	P51	LCD_RESET	145	E9	Ю	Multifunction pin.
12	P52	SDIO_CMD	158	F3	Ю	Multifunction pin.
13	P53	ETH2_RX_EN	109	B17	Ю	Multifunction pin.
14	P54	GND	-	-	Ground	GND

15	P55	SDIO_DAT3	166	E1	Ю	Multifunction pin.
16	P56	ETH2_RXERR	107	D16	Ю	Multifunction pin.
17	P57	GND	-	-	Ground	GND
18	P58	ETH2_RX_DATA1	110	C16	Ю	Multifunction pin.
19	P59	GND	-	-	Ground	GND
20	P60	UART1_CTS	46	K15	Ю	Multifunction pin.
21	P61	GND	-	-	Ground	GND
22	P62	JTAG_MOD	26	P15	Input	Multifunction pin.
23	P63	GND	-	-	Ground	GND
24	P64	CCM_CLK1_P	76	P17	Ю	Multifunction pin.
25	P65	SDIO_DAT1	164	E3	Ю	Multifunction pin.
26	P66	SDIO_DAT2	163	E2	Ю	Multifunction pin.
27	P67	GND	-	-	Ground	GND
28	P68	SDIO_DAT0	162	E4	Ю	Multifunction pin.
29	P69	GND	-	-	Ground	GND
30	P70	LCD_DATA18	120	A13	Ю	Multifunction pin.
31	P71	LCD_DATA2	140	E10	Ю	Multifunction pin.
32	P72	LCD_DATA17	121	B13	Ю	Multifunction pin.
33	P73	LCD_DATA9	131	A11	Ю	Multifunction pin.
34	P74	LCD_DATA1	141	A9	Ю	Multifunction pin.
35	P75	LCD_DATA16	122	C13	Ю	Multifunction pin.
36	P76	LCD_DATA8	132	B11	Ю	Multifunction pin.
37	P77	LCD_DATA0	142	В9	Ю	Multifunction pin.
38	P78	SDIO_CLK	157	F2	Ю	Multifunction pin.
39	P79	PWM_Brightness	29	M15	Ю	Multifunction pin.
40	P80	GND	-	-	Ground	GND



2.4.8 40 pins connector for expansion sandwich [J9]

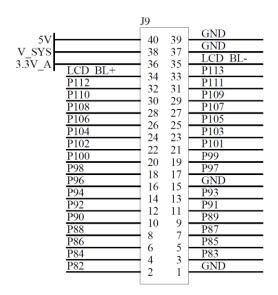

Pin No	liteboard Connector		liteSOM Connector	I.MX 6UL Pin	Туре	Function
1	P81	GND	-	-	Ground	GND
2	P82	SNVS_TAMPER6	15	N11	Input	Multifunction pin.
3	P83	SNVS_TAMPER2	11	P11	Input	Multifunction pin.
4	P84	SNVS_TAMPER8	18	N9	Input	Multifunction pin.
5	P85	SNVS_TAMPER0	9	R10	Input	Multifunction pin.
6	P86	SNVS_TAMPER9	17	R6	Input	Multifunction pin.
8	P87	SNVS_TAMPER4	13	P9	Input	Multifunction pin.
8	P88	SNVS_TAMPER1	12	R9	Input	Multifunction pin.
9	P89	NAND_DQS	106	E6	Ю	Multifunction pin. ¹
10	P90	SNVS_TAMPER5	14	N8	Input	Multifunction pin.
11	P91	LCD_ENABLE	147	D9	Ю	Multifunction pin.
12	P92	SNVS_TAMPER3	16	P10	Input	Multifunction pin.
13	P93	LCD_HSYNC	148	В8	Ю	Multifunction pin.
14	P94	LCD_VSYNC	146	C9	Ю	Multifunction pin.



15	P95	GND	-	-	Ground	GND
16	P96	LCD_CLK	150	A8	Ю	Multifunction pin.
17	P97	LCD_DATA7	135	D11	Ю	Multifunction pin.
18	P98	LCD_DATA6	136	A10	Ю	Multifunction pin.
19	P99	LCD_DATA5	137	B10	Ю	Multifunction pin.
20	P100	LCD_DATA4	138	C10	Ю	Multifunction pin.
21	P101	LCD_DATA3	139	D10	Ю	Multifunction pin.
22	P102	LCD_DATA15	125	D13	Ю	Multifunction pin.
23	P103	LCD_DATA14	126	A12	Ю	Multifunction pin.
24	P104	LCD_DATA13	127	B12	Ю	Multifunction pin.
25	P105	LCD_DATA12	128	C12	Ю	Multifunction pin.
26	P106	LCD_DATA11	129	D12	Ю	Multifunction pin.
27	P107	LCD_DATA10	130	E12	Ю	Multifunction pin.
28	P108	LCD_DATA23	115	B16	Ю	Multifunction pin.
29	P109	LCD_DATA22	116	A14	Ю	Multifunction pin.
30	P110	LCD_DATA21	117	B14	Ю	Multifunction pin.
31	P111	LCD_DATA20	118	C14	Ю	Multifunction pin.
32	P112	LCD_DATA19	119	D14	Ю	Multifunction pin.
33	P113	RESET	4	P8	Reset	RESET
34	P114	LCD_BL+	-	-	Output	LCD_BL+
35	P115	LCD_BL-	-	-	Output	LCD_BL-
36	P116	3V3	-	-		3.3V_A
37	P117	GND	-	-	Ground	GND
38	P118	5VSYS	-	-		V_SYS
39	P119	GND	-	-	Ground	GND
40	P120	5V	-	-		5V

Pins belong to NVCC_NAND power group. This group is used to internal eMMC connection, which determinates power supply of 3.3V.



2.4.9 JTAG [J11]

Pin	liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Туре	Description
1	3V3	-	-	Supply	3.3V Supply
2	I2S0_MCLK	22	P14	Input	TMS
3	GND	-	-	GND	GND
4	12S0_DIN	21	M14	Input	TCK
5	GND	-	-	GND	GND
6	I2S0_WLCK	24	N15	Output	TDO
7	-	-	-	-	No connected
8	I2S0_BCLK	23	N16	Input	TDI
9	GND	-	-	GND	GND
10	I2S0_DOUT	25	N14	Input	RESET

Normally connector J11 is not assembled on the board.



3. Boot options


The i.MX 6Ultralite processor supports booting from:

• Memory: NOR, NAND, MMC or EEPROM

• Peripheral: USB or UART

After power-up, list of possible boot method reading configuration pins BT_MODE[1:0], BT_CFG1[7:0], BT_CFG3[7:0] and BT_CFG4[7:0]. Only BT_MODE[1:0], BT_CFG1[7:5] and BT_CFG2[3] are exposed on liteboard DIP switches. The other boot pins are set to HIGH.

For choose the boot options is available 6 pins dipswitch (S1).



1	2	3	4	5	6
BOOT_MODE0	BOOT_MODE1	BT_CFG1[7]	BT_CFG1[6]	BT_CFG1[5]	BT_CFG2[3]

BOOT_MODE [1:0] are used to select system boot mode.

BOOT_MODE0	BOOT_MODE1	Boot Mode
LOW	LOW	Boot from Fuses
HIGH	LOW	Serial Downloader
LOW	HIGH	Internal Boot
HIGH	HIGH	Reserved

The table below shows fuse map for boot configuration.

Туре	BT_CFG1[7]	BT_CFG1[6]	BT_CFG1[5]	BT_CFG2[3]
QSPI	LOW	LOW	LOW	FSDLY (Full Speed Delay Selection) LOW: one clock delay HIGH: two clock delay
SPI	LOW	LOW	HIGH	Not used
SD/eSD	LOW	HIGH	LOW	Not used



MMC/eMMC	LOW	HIGH	HIGH	Not used
				Boot Search Count:
NAND	HIGH	Not used	Not used	LOW: 4
				HIGH: 8

For complete Boot Mode configuration description see section 8 of i.MX 6UltraLite Reference Manual.

3.1. User interface

3.1.1.LED

The liteboard is equipped with D6 LED connected to the 3.3V power line.

3.1.2. On/Off switch [S2]

Name	liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Description
S2	ONOFF	3	ON/OFF	Switch ON/OFF liteboard

3.1.3. Reset switch [S3]

The liteboard is equipped with the microprocessor reset monitor MAX803SQ308T1G by Maxim. It is activated after press the reset switch [S3].

Name	liteboard Connector	liteSOM Connector	I.MX 6UL Pin	Description
S3	RESET	4	PORn	Reset



4. Electrical Characteristics

4.1. Absolute Maximum Ratings

	min.	max.	unit
Supply voltage V_DC		18	V
Supply voltage V_USB		5,5	V
Terminal current V_SYS		1.5	А
Terminal current 3V3		1,5	Α
Terminal current LCD_BL-, LCD_BL+		500	mA
Operating ambient temperature (Consumer version)	0	70	°C
Operating ambient temperature (Industrial version)	-40	85	°C


4.2. Recommended Operating Conditions

	min.	nom.	max.	unit
Supply voltage V_DC	5.0	6.0	12	V
micro USB VBUS Supply, USB_OTGx_VBUS	4.50	5.0	5.35	V
Current, micro USB_VBUS			500	mA
Output current, V_SYS	0		500 (5V) 250 (3.6V)	mA
Output current, 3.3VD ¹	0		400 (200)	mA

Reference supply voltage for the pins groups: VCC_GPIO, VCC_UART, VCC_LCD, VCC_ENET, NVCC_CSI are 3.3V



5. Mechanical Characteristics

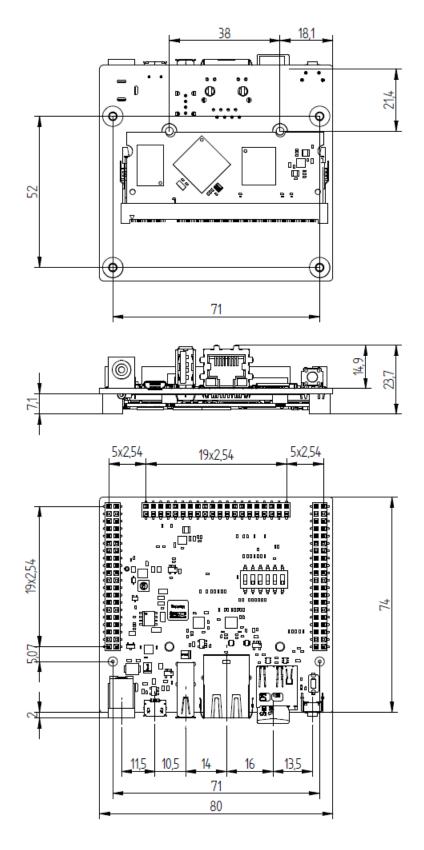



6. Document Revision History

Document Revision	Notes
1.0	Initial revision



Grinn sp. z o.o.
POLAND
ul. Wagonowa 2
53-609 Wrocław
t. +48 71 716 40 99
m. office@grinn-global.com
www.grinn-global.com

© Copyright 2017 Grinn

All rights reserved. No part of this document may be photocopied or recorded on any electronic media without written permission of Grinn. The information contained in this documentation is subject to change without prior notice. We assume no liability for erroneous information or its consequences. Grinn reserves the right to change details in this publication without notice. Grinn makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and products descriptions at any time without notice. Grinn does not make any commitment to update the information contained herein. Trademarks used from other companies refer exclusively to the products of those companies. Product and company names herein may be the trademarks of their respective owners.

