INSTRUMENT CLUSTER

Instrument Cluster Wiring Diagram for Nissan GT-R Premium 2010

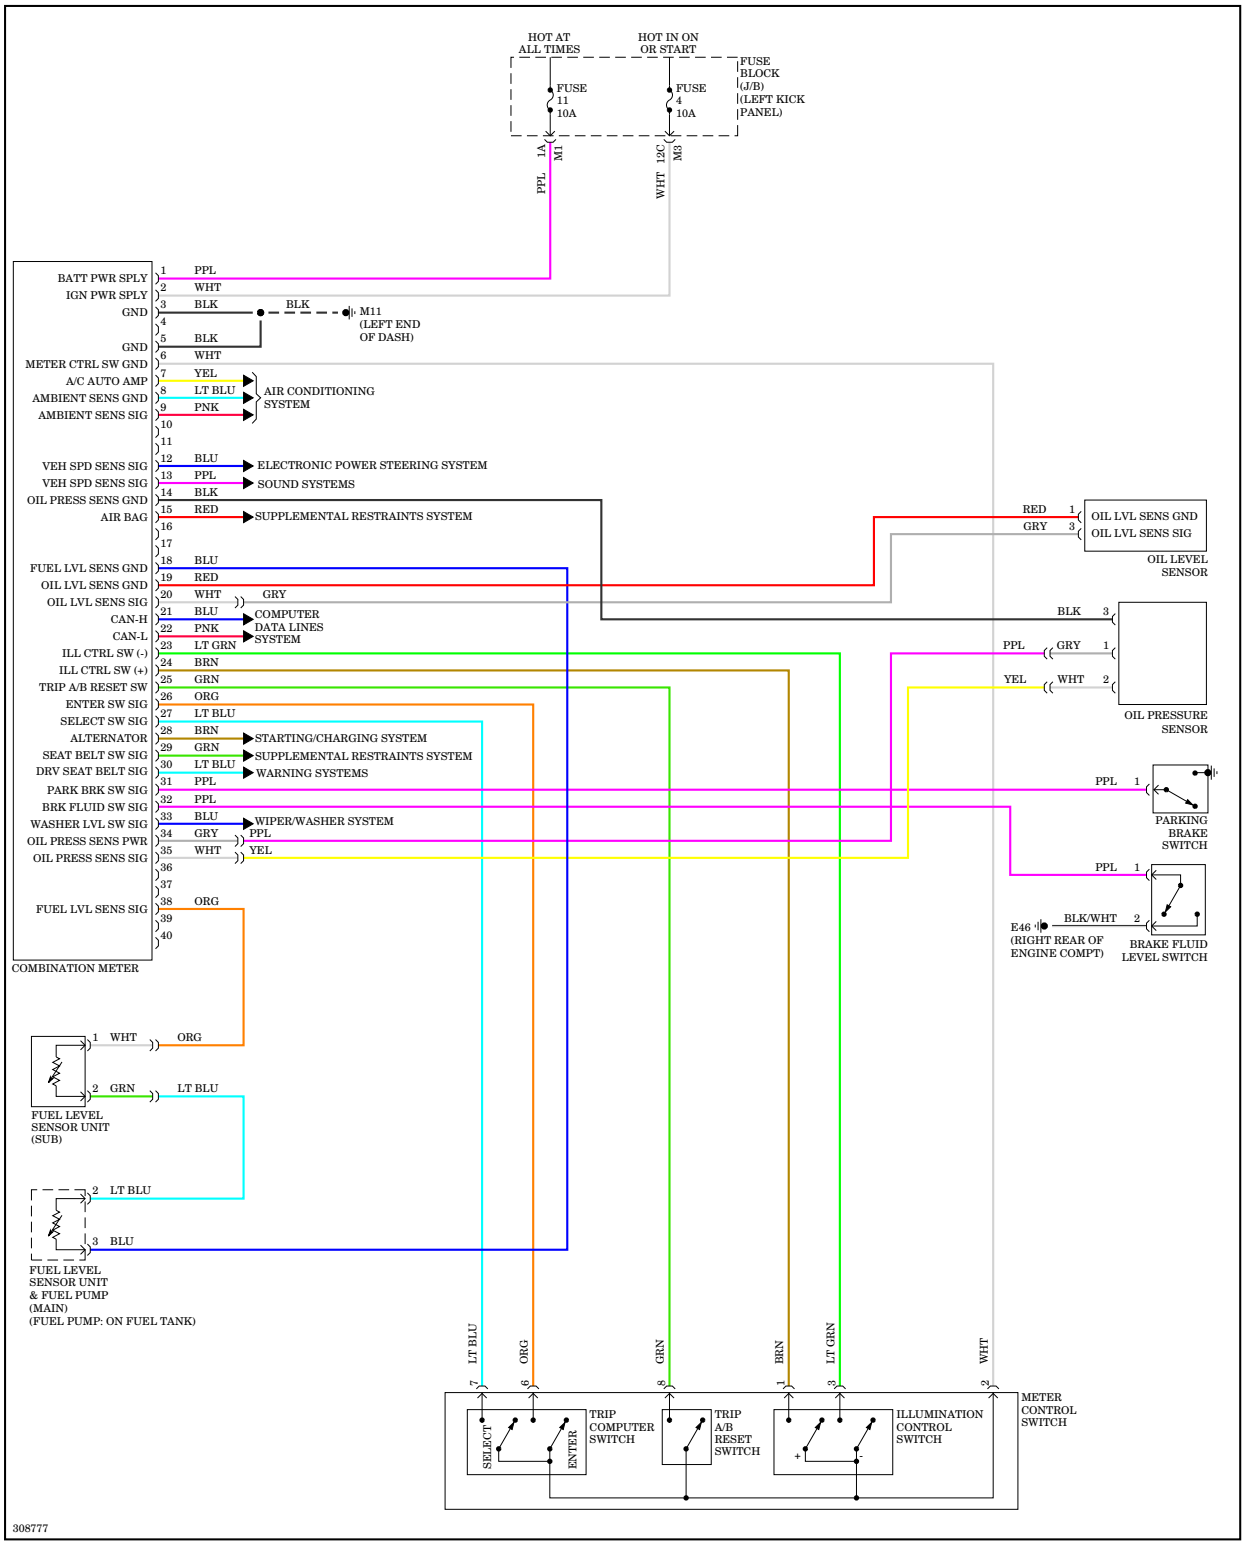

List of elements for Instrument Cluster Wiring Diagram for Nissan GT-R Premium 2010:

- 12c
- A/c auto amp
- Air bag
- Air conditioning system

- Alternator
- Ambient sens gnd
- Ambient sens sig
- Batt pwr sply
- Brake fluid level switch
- Brk fluid sw sig
- Can-h
- Can-l
- Combination meter
- Computer data lines system
- Drv seat belt sig
- E46 (right rear of engine compt)
- Electronic power steering system
- Enter
- Enter sw sig
- Fuel level sensor unit & fuel pump (main) (fuel pump: on fuel tank)
- Fuel level sensor unit (sub)
- Fuel lvl sens gnd
- Fuel lvl sens sig
- Fuse 10a
- Fuse block (j/b) (left kick panel)
- Gnd
- Hot at all times
- Hot in on or start
- Ign pwr sply
- Ill ctrl sw (+)
- Ill ctrl sw (-)
- Illumination control switch
- M11 (left end of dash)
- Meter control switch
- Meter ctrl sw gnd
- Oil level
- Oil lvl sens gnd
- Oil lvl sens sig
- Oil press sens gnd
- Oil press sens pwr
- Oil press sens sig
- Oil pressure
- Park brk sw sig
- Parking brake switch
- Pnk
- Red
- Seat belt sw sig
- Select
- Select sw sig
- Sensor
- Sound systems
- Starting/charging system
- Trip a/b reset sw
- Trip a/b reset switch
- Trip computer switch
- Veh spd sens sig
- Warning systems
- Washer lvl sw sig

ANTI-THEFTAIR CONDITIONINGDEFOGGERSCRUISE CONTROLCOMPUTER DATA LINESANTI-LOCK BRAKESBODY CONTROL MODULESCOOLING FANELECTRONIC SUSPENSIONELECTRONIC POWER STEERINGENGINE PERFORMANCEGROUND DISTRIBUTIONEXTERIOR LIGHTSINSTRUMENT CLUSTERHEADLIGHTSPOWER DOOR LOCKSHORNINTERIOR LIGHTSNAVIGATIONPOWER MIRRORSPOWER DISTRIBUTIONPOWER WINDOWSPOWER SEATSRADIOTRANSMISSIONSTARTING/CHARGINGWARNING SYSTEMSTRUNK, TAILGATE, FUEL DOORSUPPLEMENTAL RESTRAINTSWIPER/WASHER