




Таблица описания специальных символов шрифта MIPGOST

Для того, чтобы отобразить в Автокаде один из символов в таблице необходимо в текстовой строке набрать последовательность %%nnn, где nnn-номер кода. Для кодов <100 первые символы 0 (ноль).
В формате Unicode \U+XXXX, где XXXX-номер – шестнадцатиричное число

Формат UNICODE

Сивол	Код	Сивол	Код	Сивол	Код
Греческие символы					
α	\U+03B1	δ	\U+03B4	ρ	\U+03C1
β	\U+03B2	λ	\U+03BB	σ	\U+03C3
γ	\U+03B3	π	\U+03C0	φ	\U+03C6
Δ	\U+0394				
Римские цифры					
Ⅰ	\U+2160	Ⅴ	\U+2164	Ⅸ	\U+2168
Ⅱ	\U+2161	Ⅵ	\U+2165	Ⅹ	\U+2169
Ⅲ	\U+2162	Ⅶ	\U+2166		
Ⅳ	\U+2163	Ⅷ	\U+2167		
Математические					
∞	\U+221E	≥	\U+2265	←	\U+2190
≠	\U+2260	→	\U+2192	↓	\U+2193
≤	\U+2264	↑	\U+2191	×	\U+00D7
÷	\U+00F7	≈	\U+2248	2	\U+00B2 Верхн.индекс
3	\U+00 B3 Верхн.индекс	⊥	\U+00AB	∟	\U+00AA
Проектирование					
⦤	\U+E742	M^2	\U+E738	Y	\U+0094
∠	\U+E743	M^3	\U+E739	Y%	\U+0095
⊓K	\U+E740	⌓	\U+0088	‰	\U+2030

Профили					
	\U+E71F		\U+E725		\U+E72B
	\U+E720		\U+E726		\U+E72C
	\U+E721		\U+E727		\U+E72D
	\U+E722		\U+E728		\U+E72E
	\U+E723		\U+E729		\U+E72F
	\U+E724		\U+E72A		\U+E71B
	\U+E71C		\U+E71D		\U+E71E
	\U+E71F				
Прочие					
	\U+E733		\U+0092		\U+0097
	\U+E734		\U+0093		\U+24C2
	\U+007F		\U+24C5		\U+00A6
	\U+00A7		\U+00A9		\U+00AA
	\U+00AB		\U+E737		\U+00 B2 Верхн.индекс
	\U+00 B3 Верхн.индекс		\U+20AC		\U+2122

!!! В тексте описан также механизм управления перьями для написания нижних и верхних индексов.
В однострочных текстах – это %% последовательности.
В многострочных текстах – это UNICOD (\U+XXXX) последовательности.

%%201 (\U+00C9) – сместить перо вверх
%%202 (\U+00CA) – вернуть назад (вниз)

%%203 (**\U+00CB**) – сместить перо вниз
%%204 (**\U+00CC**) – вернуть назад (вверх)

На каждое %%201 необходимо %%202 и на каждое %%203 необходимо %%204

Чтобы понять, скопируйте в текстовую строку **ОДНОСТРОЧНОГО** текста
Фомула спирта C%%2032%%204H%%2035%%204OH

Получим
Фомула спирта C_2H_5OH

Разбор

Фомула спирта C	– текст
%%203	– перо вниз
2	– нижний индекс углерода
%%204	– перо назад (нормальные символы)
H	– водород
%%203	– перо вниз
5	– нижний индекс водорода
%%204	– перо назад (нормальные символы)
OH	– кислород и водород

Точно так же работают и верхние индексы. Только вместо %%203 - %%201 и вместо %%204 - %%202
Попробуйте

Действия со степенями:
a%%201m%%202a%%201n%%202=a%%201m+n%%202

Действия со степенями: $a^m a^n = a^{m+n}$

Format Multiline Text in an Alternate Text Editor

If you use an alternate text editor, you apply formatting by entering format codes.

You can underline text, add a line over text, and create stacked text. You can also change color, font, and text height. You can change the spaces between text characters or increase the width of the characters themselves. To apply formatting, use the format codes shown in the following table.

Format codes for paragraphs

Format code	Purpose	Enter this ...	To produce this ...
\0...\o	Turns overline on and off	Autodesk \OAutoCAD\o	Autodesk AutoCAD
\L...\l	Turns underline on and off	Autodesk \LAutoCAD\l	Autodesk AutoCAD
\~	Inserts a nonbreaking space	Autodesk AutoCAD\~LT	Autodesk AutoCAD LT
\\	Inserts a backslash	Autodesk \\AutoCAD	Autodesk \AutoCAD
\{...\}	Inserts an opening and closing brace	Autodesk \{AutoCAD\}	Autodesk {AutoCAD}
\C*value;*	Changes to the specified color	Autodesk \C2;AutoCAD	Autodesk AutoCAD
File name;	Changes to the specified font file	Autodesk \Ftimes; AutoCAD	Autodesk AutoCAD
\H*value*;	Changes to the text height specified in drawing units	Autodesk \H2;AutoCAD	Autodesk AutoCAD
\H*value*x;	Changes the text height to a multiple of the current text height	Autodesk \H3x;AutoCAD	Autodesk AutoCAD
\S...^...;	Stacks the subsequent text at	1.000\S+0.010^-	1.000 +0.010 -0.000


	the /, #, or ^ symbol	0.000;	
\T*value*;	Adjusts the space between characters. Valid values range from a minimum of .75 to 4 times the original spacing between characters.	\T2;Autodesk	A u t o d e s k
\Q*angle*;	Changes obliquing angle	\Q20;Autodesk	*Autodesk*
\W*value*;	Changes width factor to produce wide text	\W2;Autodesk	Autodesk
\A	Sets the alignment value; valid values: 0, 1, 2 (bottom, center, top)	\A1;1\S1/2	$1\frac{1}{2}$
\P	Ends paragraph	Autodesk\PAutoCAD	Autodesk AutoCAD

Braces can be nested up to eight levels deep.

You can also use control codes to add special characters, such as tolerance or dimensioning symbols. See MTEXT.

Example: Formatting Text in an Alternate Text Editor

This example describes how the text in the following illustration was created.

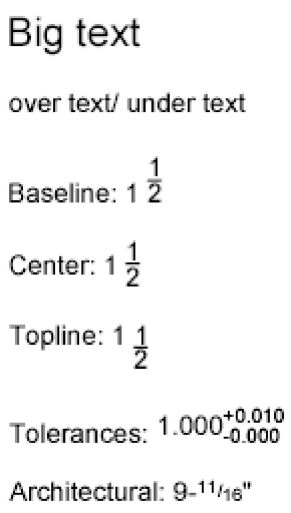

Each line below was entered in an alternate text editor:

```
{{\H1.5x; Big text} \A2; over text\A1;/\A0; under text}\P
{\A0;Baseline: 1 \S1/2;}\P
{\A1;Center: 1 \S1/2;}\P
{\A2;Topline: 1 \S1/2;}\P
{Tolerances: \A1;1.000\H.75x;\S+0.010^-0.000;}\P
{Architectural: 9-{\H.666x;\A2;11\A1;/\A0;16}\A2;"}\P
```