BALBOA WORKING

PRIMING MODE SCREEN:

- Power On, Priming Mode for some time and then switches to the normal working mode.
- Can operate Jet1, Jet2 and Circulation, independent of each other. Circulation is not synced with Jet1 or Jet2.
- Manually exit the Priming mode by pressing the back-arrow button in upper left corner.

NORMAL WORKING SCREEN:

- Top Left Corer
  - “SLEEP BUTTON” icon
  - “TEMPERATURE RANGE” icon
  - “HEAT MODE” icon
- Centre of the screen
  - “TEMPERATURE” – Current and Set temp.

Sleep Icon:

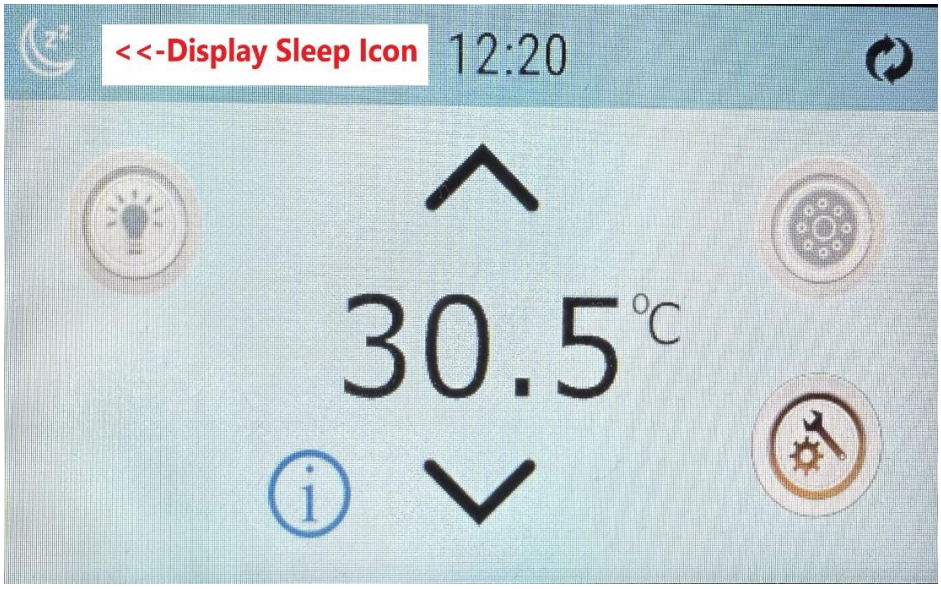

- Single touch - Turn off display
- Touch display again - Turn on display

Temp Range Icon:

- L – Low

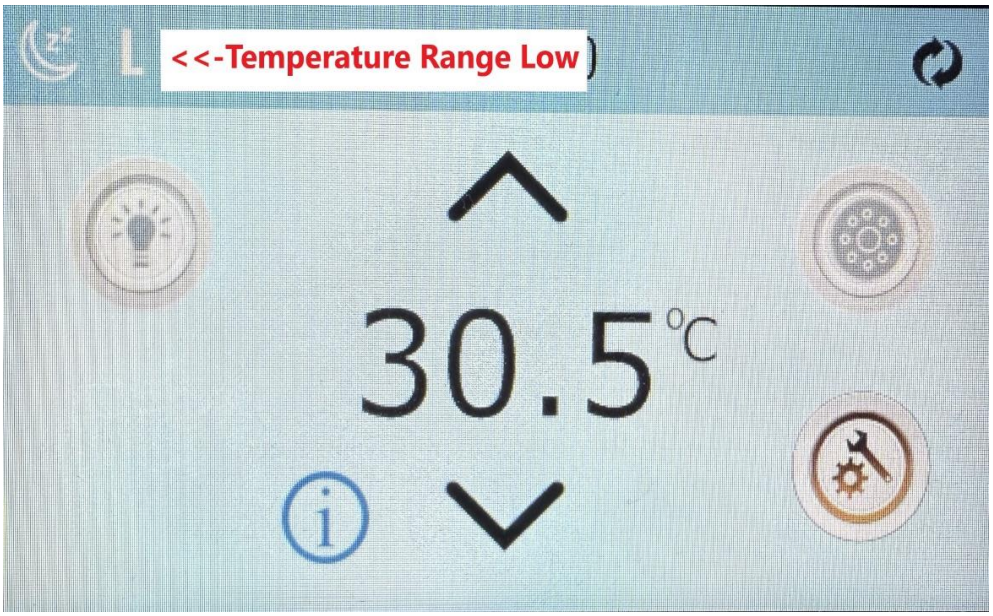

- H – High

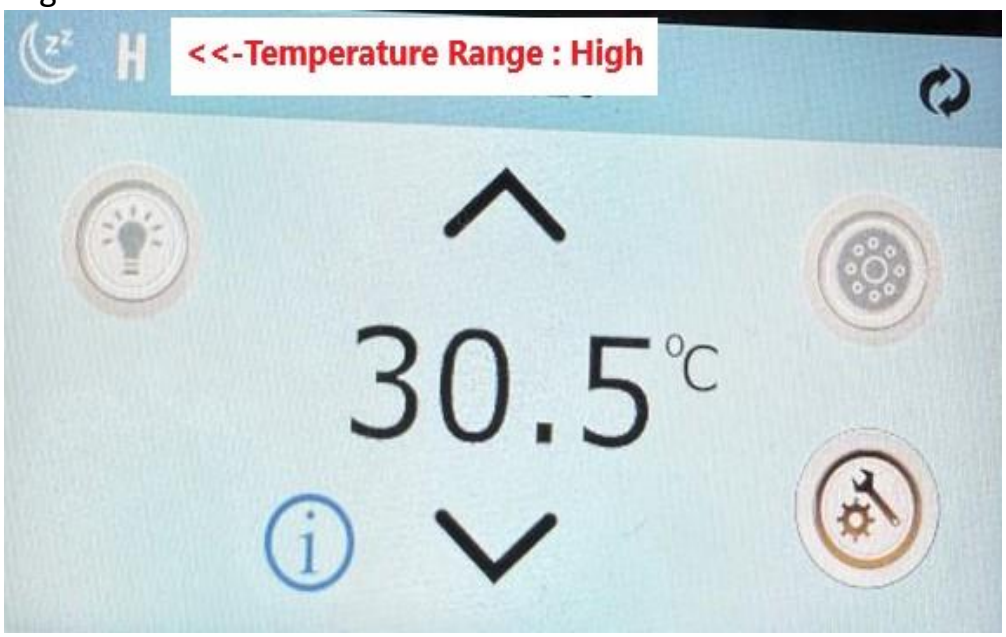

Heating Mode Icon:

- R – Ready

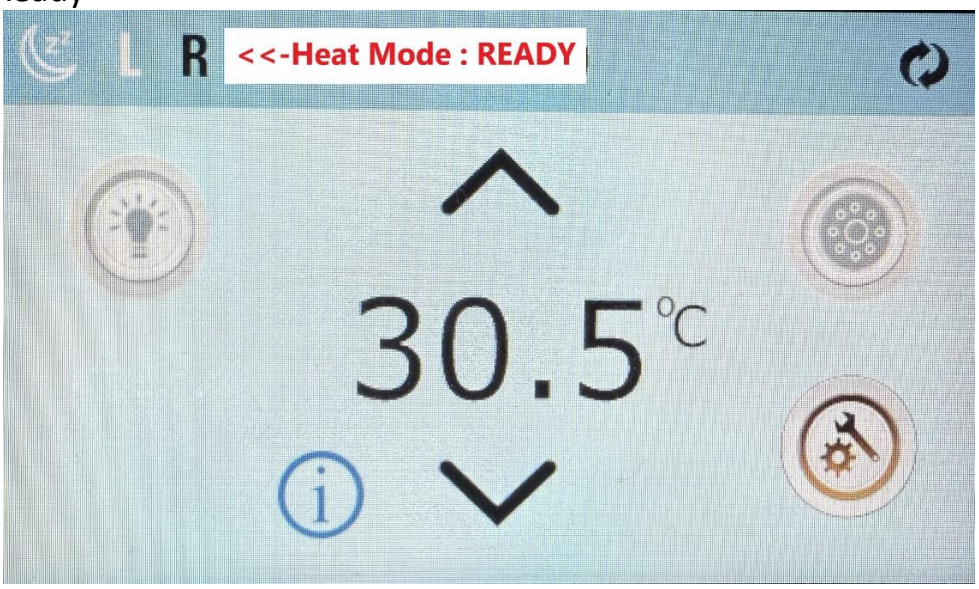

- Resting R – Rest

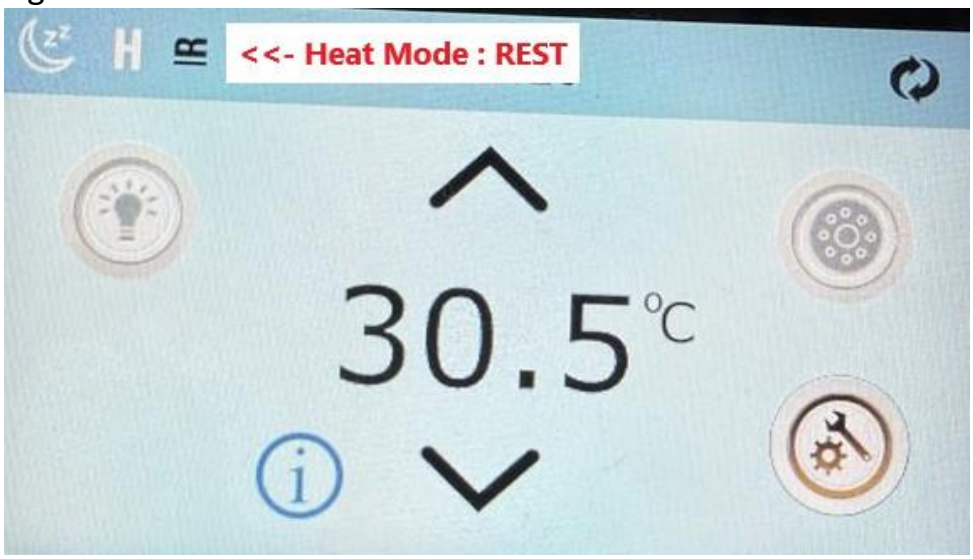

- RR – Ready/Rest

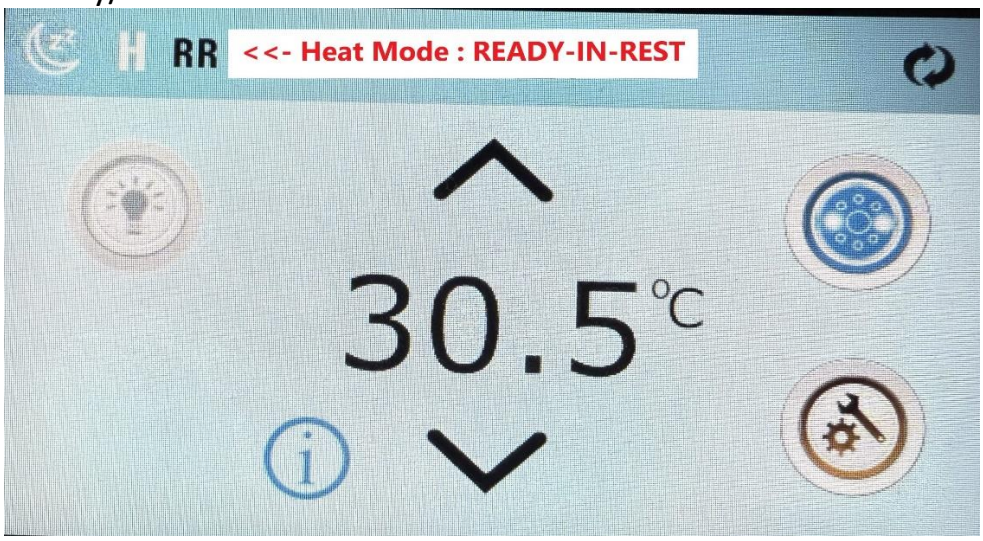

Temperature:

- "CURRENT TEMPERATURE" in Black colour.
- Up Arrow – Increase Set Temp by 0.5 Degree
- Down Arrow – Decrease Set Temp by 0.5 degree
- "SET TEMPERATURE" will be shown in Yellow Colour, while setting the temp, for a brief period of time

Temperature Range:

- LOW
  - Set temp from 10 to 37 degrees
- HIGH
  - Set temp from 26.5 to 40 degrees

Heat Mode:

- "READY". (**Heating States**: "NOT HEATING", "HEATING' & "HEAT WAITING")

  - Measured Temp < Set Temp by 1 Degree or more
    - HEATING
      - Red "Thermometer with Increasing Temperature" icon
    - HEAT WAITING – for 1-2 Min
      - Red "Blinking Thermometer" icon
    - Heating State again; Until current temp reaches to Set temp
  - Measured Temperature > Set Temperature by 1 degree or more
    - STOP HEATING
      - No Thermometer icon.

(“CIRCULATION PUMP” starts occasionally. Cannot be operated manually while in a Normal Working).

- “REST”
    - By switching into it, Heating stops immediately
    - Jet1, Jet2, & Blower (if were running) stop after some time
- “READY/REST or READY-IN-REST”
    - Operating Jet1 in the Rest Mode, switches the mode to the Ready/Rest Mode.
    - Spa-Controller works normally as in Ready Mode.
    - Does not switch back to the Rest Mode automatically.