
MQTT Tool


1) install driver

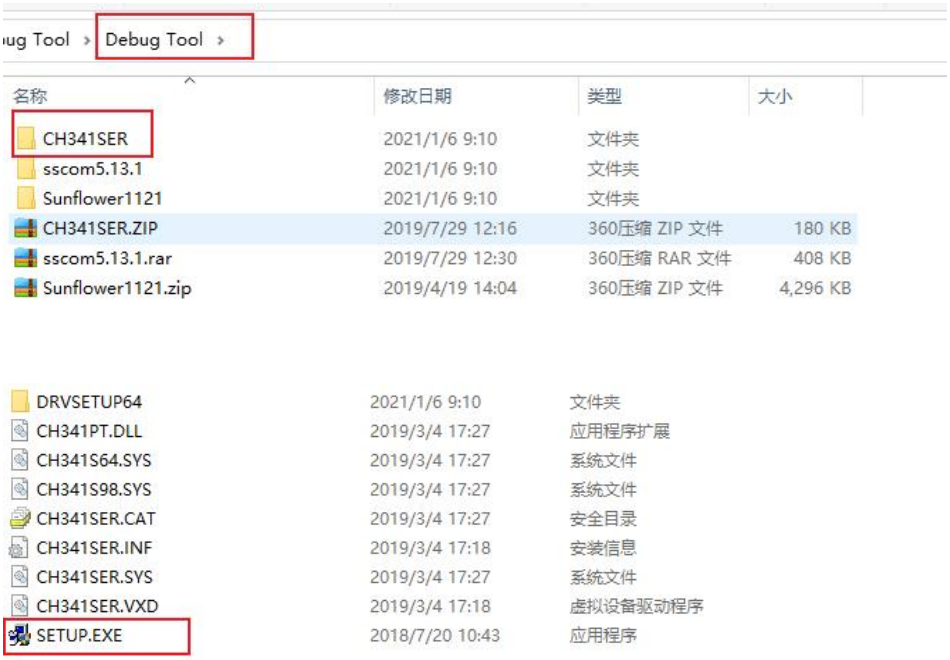



2) Prepare and check the debug cable and debug board

- Connect the workstation to the PC (note the locations marked in the image below).
- Any configuration of the workstation requires powering on first.

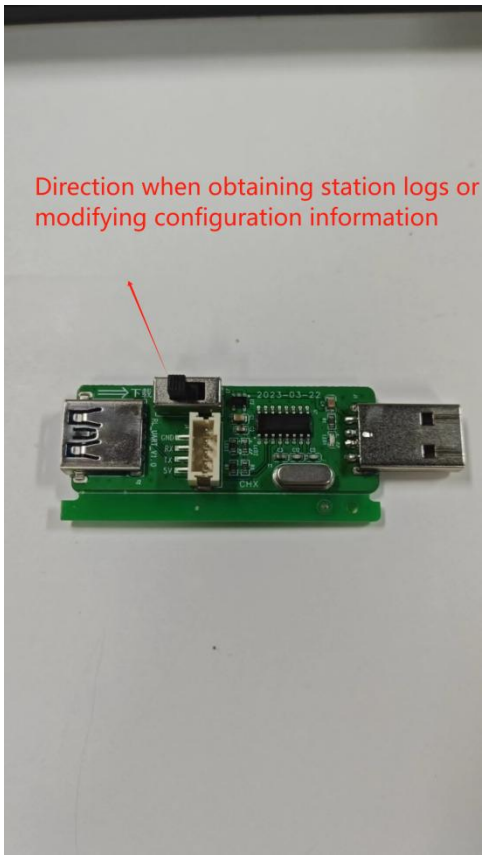

Direction when obtaining station logs or
modifying configuration information




-There is a black dustproof film that needs to be peeled off manually.






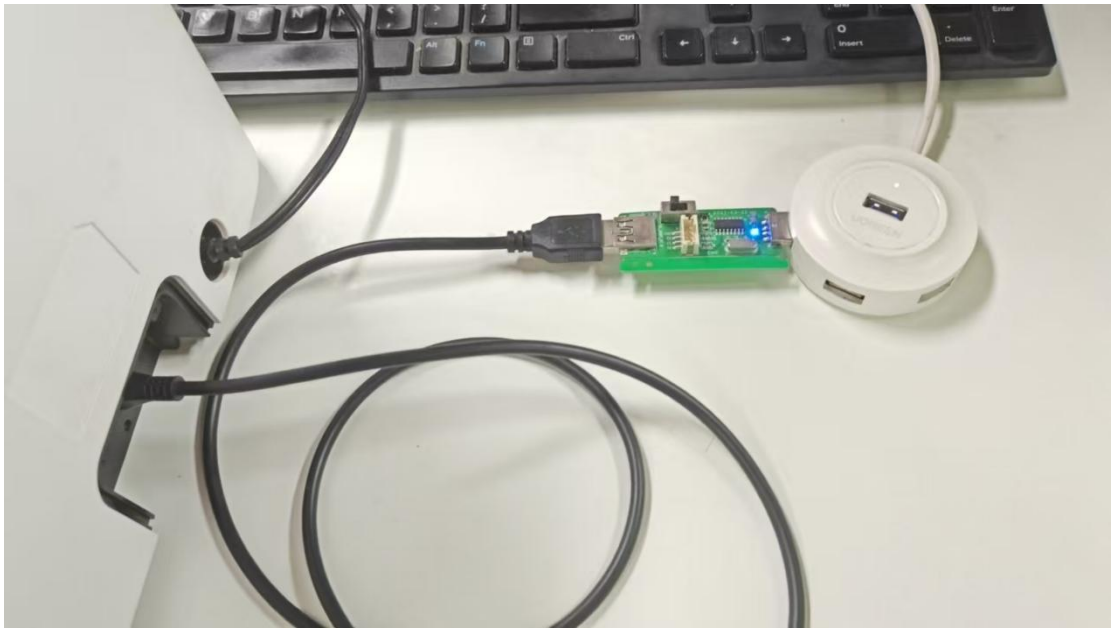

3) Check COM port, confirm USB-SERIAL CH340 port;

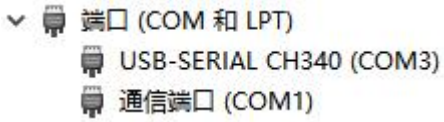



4) Open the login software （Please contact the administrator to obtain the account and password）;

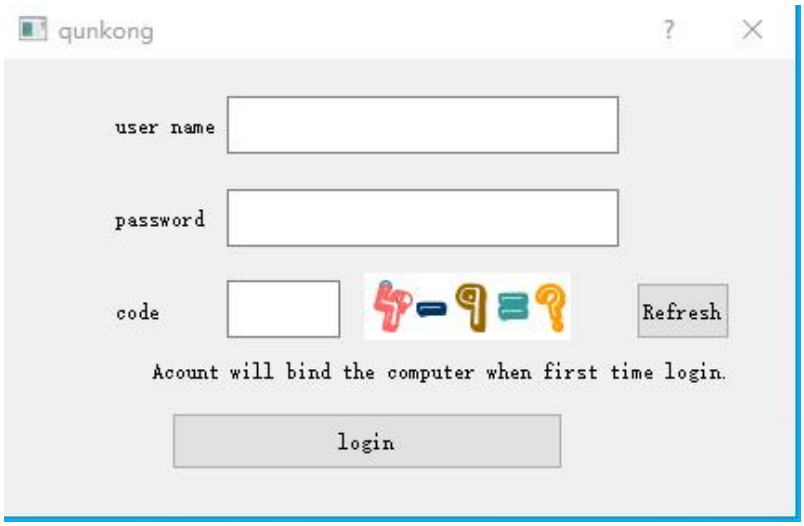

5) Click "REFRSH", select the USB-SERIAL CH340 (COM x) port, click "Open" to connect；


Note: Do not modify the station SN at will

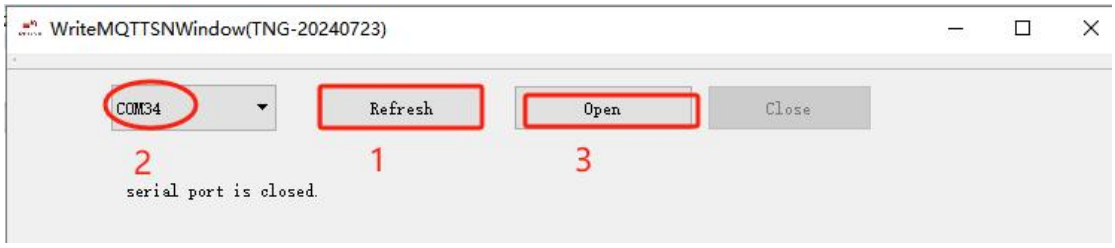

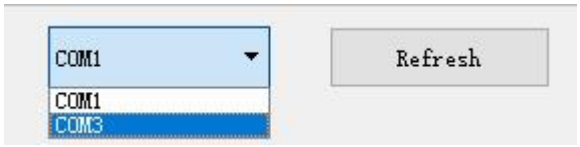




6) QMTT server parameter configuration（Remember to click "Write"）；

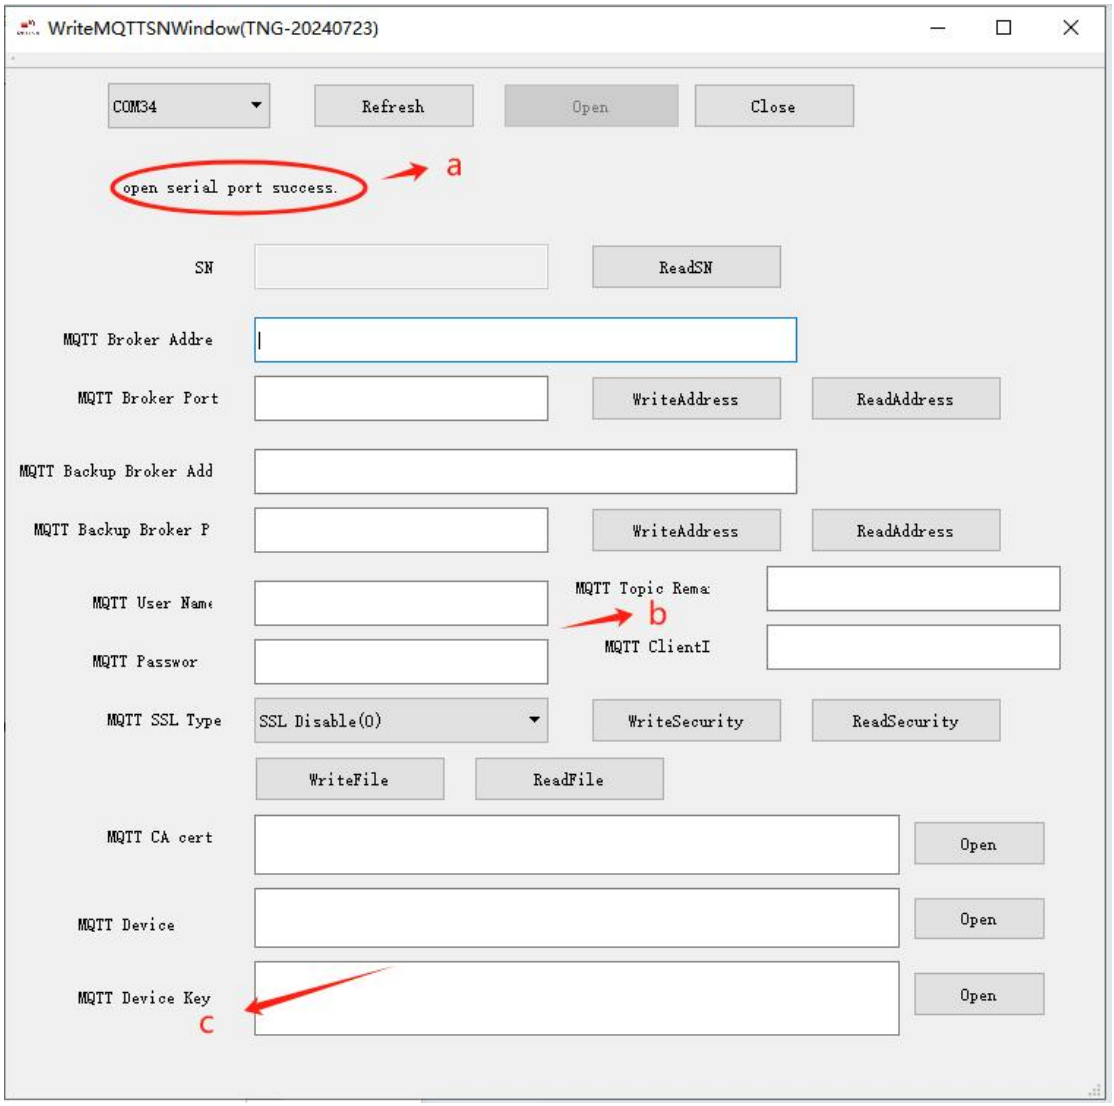



a. Use “REFRSH” to search the COM serial port and access it successfully；


```
open serial port success.
```


b. Configuration parameter（Remember to click "Write"）；

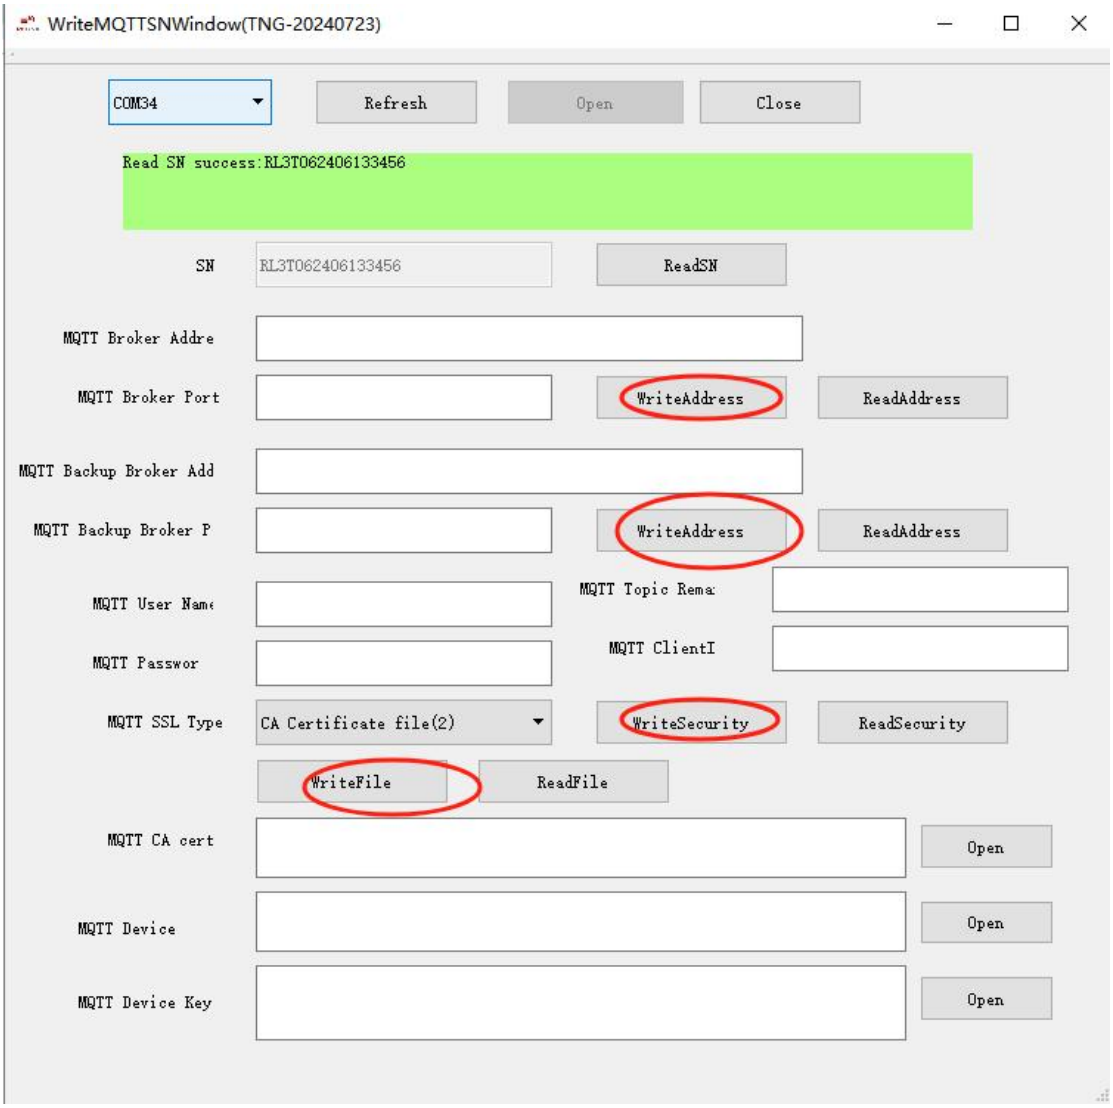

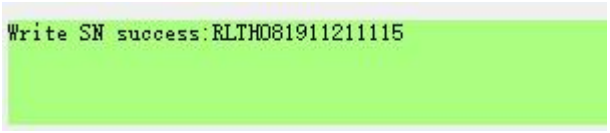








Ps：

① QMTT server parameter configuration interface user name and password, non required options, whether to configure according to customer requirements（Remember to click "Write"）.

② Confirm whether the parameters are configured successfully, and click “Read” to view。

c. Import certificate and key（Remember to click "Write"）.

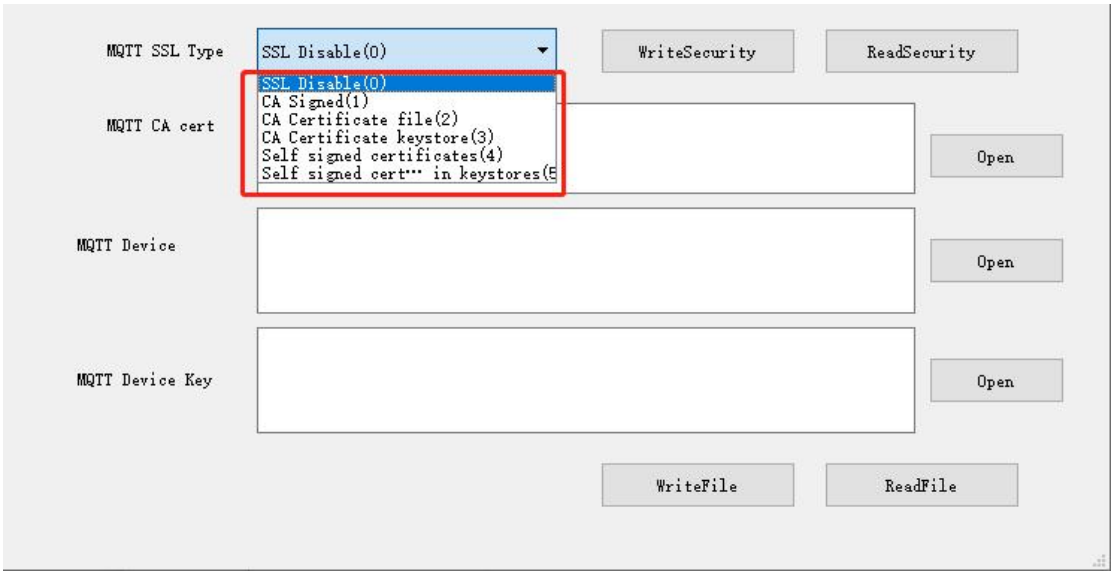

SSL DISable（0）

parameter required：Server IP，Server Port，Standby Server IP，Standby Server Port，username，passwpord，topic，clientID。

CA Signed（1）

parameter required：Server IP，Server Port，Standby Server IP，Standby Server Port，username，passwpord，topic，clientID。


CA Certificate file（2）

parameter required：Server IP，Server Port，Standby Server IP，Standby Server Port，username，passwpord，topic，clientID，rootCACertificate。

Self signed certificates（4）


parameter required：Server IP，Server Port，Standby Server IP，Standby Server Port，username，passwpord，topic，clientID，rootCA Certificate，certificate.crt Certificate，device.key Certificate。

ps：CA Certificate keystore（3）and （5）modes are not supported。



（Write the MQTT certificate file succeeded procedure）

5) Reset and connect the “sscom5” tool to check the configuration parameters；

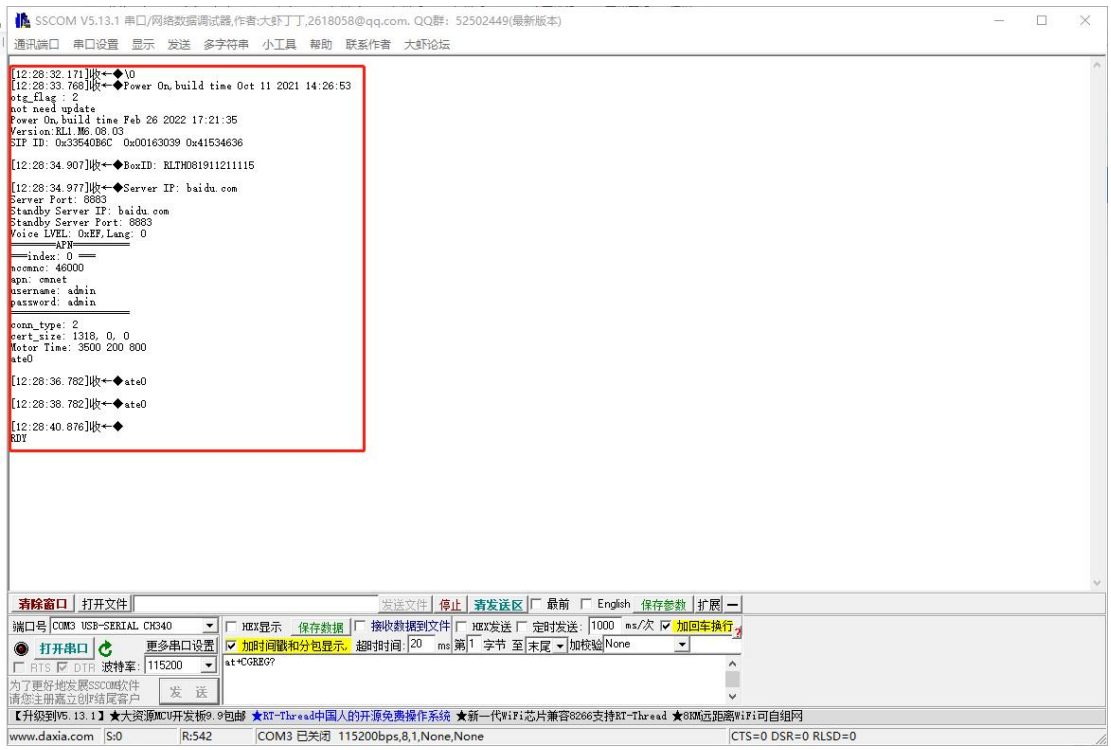


```
[11:14:48.011]收←◆login success
```