



HPE Networking EdgeConnect Hardware Reference Guide

August 2026

Rev V

201889-001

Copyright and Trademarks

HPE Networking EdgeConnect Hardware Reference Guide

Date: August 2026

© Copyright 2026 Hewlett Packard Enterprise Development LP. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein. Third-party trademarks mentioned are the property of their respective owners. To view the end-user software agreement, go to [HPE Networking EULA](#).

Hewlett Packard Enterprise Company
Attn: General Counsel
WW Corporate Headquarters
1701 E Mossy Oaks Rd Spring, TX 77389
United States of America



Support

For product and technical support, contact Support using any of the following methods:

1.877.210.7325 (toll-free in USA)

+1.408.935.1850

www.silver-peak.com/support

We're dedicated to continually improving our products and documentation. If you have suggestions or feedback for our documentation, send an e-mail to sp-techpubs@hpe.com.



Related Documentation

- **Release Notes** provide information on new software features, system bugs, and software compatibility.
- All EdgeConnect SD-WAN Edge Platform documentation is available at <https://www.arubanetworks.com/website/techdocs/sdwan/>
- The **EdgeConnect Hardware Accessories Guide** lists power supplies and rack mounting equipment included with each EdgeConnect model along with optional rack mounting accessories, disk drives, and power supplies: https://www.arubanetworks.com/website/techdocs/sdwan-PDFs/hardware/reference/201911_EdgeConnect-Hardware-Accessories_latest.pdf
- Product Dimensions, Weight, Domestic Shipping Cost, and International Shipping information is available at <https://arubanetworking.hpe.com/techdocs/sdwan-PDFs/hardware/HPE-ANW-Product-Shipping.pdf>



Contents

Copyright and Trademarks	2
Support	3
Related Documentation	4
Warning Statements	8
Class 1 Laser Products	9
Maintenance Port Precautions	10
General Safety	11
Compliance Statements	15
Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products	16
Requirements for Rack-Mount Equipment	17
Requirements for Knurled Thumb Screws	18
Model Specifications and Standards	19
Specifications for Hardware Appliances	20
Modem Specifications	27
Fiber Specifications	28
EdgeConnect (EC) Series Specifications	33
EdgeConnect (EC) Series Power Adapter / Supply Efficiency	34
EdgeConnect (EC) Noise Levels	35
IEEE 802.x Standards	36
Appliance Views	38
Supported Inventory	39
EC-US [PN 201106]	41
EC-XS [PN 200889] & EC-XS-FIPS [PN 201447]	42
EC-XS [PN 201571]	43
EC-XS [PN 201694]	44
EC-10104 [PN 201857]	45
EC-10106 [PN 3510325]	46
EC-10108 [PN 3510326]	48
EC-10150 [PN 3510332]	50
EC-S [PN 200877]	55
EC-S-P AC [PN 201687]	58
EC-S-P DC [PN 201743]	61
EC-M [PN 200890]	63
EC-M-B [PN 200969]	65
EC-M-P [PN 201274]	67
EC-M-B [PN 201553]	69
EC-M-P [PN 201552] & EC-M-P-FIPS* [PN 201634]	72



EC-M-H AC [PN 201762]	75
EC-L [PN 200883]	77
EC-L-B [PN 201270]	79
EC-L-P [PN 201305]	81
EC-L-NM [PN 200887]	83
EC-L-B-NM [PN 201272]	85
EC-L-P-NM [PN 201307]	87
EC-L-H [PN 201754]	89
EC-XL [PN 200884]	92
EC-XL-B [PN 201271]	94
EC-XL-P [PN 201306] & EC-XL-P-FIPS* [PN 201449]	96
EC-XL-P [PN 201632]	98
EC-XL-NM [PN 200888]	100
EC-XL-B-NM [PN 201273]	102
EC-XL-P-NM [PN 201308] & EC-XL-P-NM-FIPS* [PN 201659]	104
EC-XL-P-NM [PN 201633]	106
EC-XL-H [PN 201756]	108
EC-XL-H-10G [PN 201915]	112
USB LTE Modem [R8F34A]	116
EdgeConnect Airflow	118
Pluggable Transceivers in EdgeConnect	119
Approved Transceivers	120
3rd Party Qualified Transceivers	124
Single Rate TAA Transceiver	125
Orderable SKU	126
Installing a Fiber Interface Transceiver	127
EdgeConnect EC-S Expansion Module	132
Replacing an SSD or NVMe	134
Using Appliance Manager	135
Physically Replacing a Disk	137
Disk Instruction Set A	138
Disk Instruction Set B	141
Disk Instruction Set C	145
Disk Instruction Set D	147
Replacing a Power Supply	149
Power Supply Summary and Instruction Set Matrix	150
Power Supply Instruction Set A	152
Power Supply Instruction Set B	154
Power Supply Instruction Set C	156



Replacing a Deployed Appliance 157
 Replacing a Deployed EdgeConnect Appliance 158

Power Cords and Cable Pinouts 159
 Power Cords by Country: Specifications 160
 Power Cords by Country: 161
 RJ-45 Console Port Pinouts 166
 DB-9 Console Port Pinout 168
 Configuring DB-9 Console Access to the Appliance 169

Desk/Wall and Rack Mount Installation Guides 170



Warning Statements

This chapter includes the following warning statements.

- [Class 1 Laser Products on the next page](#)
- [Maintenance Port Precautions on page 10](#)
- [General Safety on page 11](#)



Class 1 Laser Products

- EC-S (only with optional fiber module)
- EC-S-P
- EC-M
- EC-M-B
- EC-M-P
- EC-M-P-FIPS
- EC-M-H
- EC-L
- EC-L-B
- EC-L-P
- EC-L-NM
- EC-L-B-NM
- EC-L-P-NM
- EC-L-H
- EC-XL
- EC-XL-B
- EC-XL-P
- EC-XL-P-FIPS
- EC-XL-NM
- EC-XL-B-NM
- EC-XL-P-NM
- EC-XL-P-NM-FIPS
- EC-XL-H
- EC-XL-H-10G
- EC-10106
- EC-10108
- EC-10150



Maintenance Port Precautions

The serial console is only used for periodic maintenance and not to be used under normal operation.



General Safety

CAUTION Please note the following:

- The server will not be used in a home, school, or other public area where the general population would have access to it.
- The manufacturer specifies that the thumbscrew normally should be tightened with a screwdriver. Use of a thumbscrew is not considered to compromise the basic principles of safety associated with the standard.

WARNING To prevent potential for personal injury, property damage or death, please observe the following instructions:

- Do not use damaged equipment, including exposed, frayed or damaged power cords. Use only the approved power cable that is rated for the equipment. The voltage and current rating of the cable should be greater than the ratings marked on the equipment.
- Plug the power cables into properly grounded electrical outlets
- ***Do not use adapter plugs or remove the grounding prong from a cable.***
If you must use an extension cable, use a 3-wire cable with properly grounded plugs.
- Observe extension cable and power strip ratings to ensure that the total ampere rating of all equipment plugged into the extension cable or power strip does not exceed 80 percent of the ampere ratings limit for the extension cable or power strip.
- When connecting or disconnecting power to hot-swappable power supplies, observe the following precautions:
 - Install the power supply **before** connecting the power cable to it.
 - Unplug the power cable before removing a power supply.
 - To disconnect power from the server, disconnect **all** power cables from **all** power supplies. (If you only disconnect one hot-swappable power supply, the system will automatically switch to a redundant one.)
- The power supplies in the server may produce high voltages and potential energy hazards. By opening the cover of the server you may be exposed to a risk of electric shock. The components inside the server housing should only be serviced by a trained service technician.
- Inside the housing, the power supply may have more than one power supply cable. To reduce the risk of electric shock, a trained service technician may need to disconnect all power supply cables before servicing the system.
- The server should not be operated with the cover removed.



- Components inside the server housing may become extremely hot during normal operations. These components include the memory and CPU modules. Allow sufficient time for components to cool before handling.
- The server should not be operated in environments that can get wet. Protect the server at all times from liquid intrusion.
- If your server gets wet, **turn off the AC power at the circuit breaker** before attempting to remove the power cables from the electrical outlet. Then disconnect power to the equipment and to any attached devices.
- Avoid obstructing the air vents on the server or pushing objects into the openings. This could lead to fire or electric shock.

CAUTION To prevent hardware damage or loss of data, observe the following precautions:

- Follow installation instructions carefully.
- Do not attempt to service the equipment yourself. The server should be serviced by a trained service technician.
- You should operate this equipment from the type of external power source indicated on the electrical ratings label.
- Wait 30 seconds after turning off the equipment before removing a component from the system or disconnecting a peripheral device from the server.
- Always leave at least 4 inches (10.2cm) of physical clearance on all vented sides of the server. This permits the airflow required for proper ventilation.
- Avoid placing equipment too close together such that it is subject to re-circulated (pre-heated) air. Avoid placing equipment too close to an server or exhaust vent.
- Ensure that cables are connected to the server without stress and that nothing rests on the cables.
- If the equipment is located in a rack, move it with caution. Ensure that all casters and/or stabilizers are firmly connected. While moving the equipment, avoid uneven surfaces and sudden stops.
- Do not place other equipment, monitors, or other devices on top of the server.
- To protect the server from fluctuations in electrical power, use a surge suppressor, line conditioner or uninterruptible power supply (UPS).

WARNING Installing an incompatible battery on the server board may increase the risk of fire or explosion. Observe the following precautions:



- The battery should only be replaced with a battery that is the same or equivalent as the factory installed battery.
- Do not attempt to open or service the battery. Do not dispose of the battery in a fire or with household waste. Contact the local waste disposal agency for the location of the nearest battery deposit site.

CAUTION Please observe the following additional precautions for rack-mounted systems:

- Slide/rail mounted equipment is not to be used as a shelf or a work space.
- Elevated Operating Ambient – If the server is installed in a closed or multi-unit rack assembly, the operating ambient temperature in the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to the maximum operating temperature specified in the environmental specifications.
- Reduced Air Flow – Installation of the server in a rack should be such that the amount of air flow required for safe operation is not compromised.
- Mechanical Loading – Mounting of the server in the rack should not create a hazardous condition from uneven mechanical loading.
- Circuit Overloading – Connection of the equipment to the supply circuit should not create an overloaded situation. Pay close attention to equipment nameplate ratings.
- Reliable Grounding – Appliances mounted in racks should be grounded properly. If using power strips to connect the server to the supply circuit, make certain that the power strips are also grounded properly.
- It is your responsibility to ensure that the rack and the provided rail system are compatible with each other before installing the server.
- Install the front and side stabilizers prior to installing equipment in a rack. Failure to install stabilizers may cause a rack to tip over.
- Load racks from the bottom up, loading the heaviest items near the bottom of the rack.
- Do not stand or step on components in the rack.
- Do not use slide-rail-mounted equipment as a shelf or workspace. Do not add weight to the top of the server.

WARNING Grounding Instructions for Qualified Electricians Only.

- Grounding techniques may vary. However, a positive connection to a safety (earth) ground is required.
- Make the ground connection first and disconnect it last to prevent hazards.



- Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor.
- If the system is installed in a rack, ensure that the system chassis is securely grounded to the rack cabinet frame. Do not connect power to the system until grounding cables are connected.



Compliance Statements

This chapter includes the following required compliance statements.

- [Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products on the next page](#)
- [Requirements for Rack-Mount Equipment on page 17](#)
- [Requirements for Knurled Thumb Screws on page 18](#)



Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products

Class A

Refer to this link for Safety and Compliance Information for Server, Storage, Power, Networking, and Rack Products:

[Compliance Link](#)



Requirements for Rack-Mount Equipment

Observe the following requirements for all rack-mount equipment:

1. **Elevated Operating Ambient Temperature** – If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
2. **Reduced Air Flow** – Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
3. **Mechanical Loading** – Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
4. **Circuit Overloading** – Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring.

Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

5. **Reliable Earthing** – Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (for example, use of power strips).



Requirements for Knurled Thumb Screws

When rack mounting an appliance, thumbscrews should be tightened with a tool after both initial installation and subsequent access to the panel.



Model Specifications and Standards

This section includes general and model-specific specifications for EdgeConnect appliances.

Refer to the Quick Start Guides listed under [Silver Peak Documentation](#) to verify current EdgeConnect host system requirements and to see which hypervisors ECOS software currently supports.

Chapter contents:

- [Specifications for Hardware Appliances on the next page](#)
- [Fiber Specifications on page 28](#)
- [EdgeConnect \(EC\) Series Specifications on page 33](#)
- [IEEE 802.x Standards on page 36](#)



Specifications for Hardware Appliances

		EC-US [PN 201106]	EC-XS [PN 200889]	EC-XS [PN 201571]
Capacity	<i>Local Data Store</i>	1 x 120 GB mSATA-mini SSD	1 x 120 GB SSD	1 x 120 GB m.2 SSD
Connectivity	<i>LAN/WAN Ethernet</i>	3 x 10/100/1000 LAN/WAN	4 x 10/100/1000 LAN/WAN	4 x 10/100/1000 LAN/WAN
	<i>Management</i>	RJ-45 serial port	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RJ-45 serial port
Power	<i>Requirement</i>	100–240VAC 50–60Hz, 8.7 W / 29.7 BTU	100–240VAC 50–60Hz, 23 W / 78.5 BTU	100–240VAC 50–60Hz, 34 W / 116 BTU
Dimensions & Weight	<i>Power Supplies</i>	Single (Power Adapter)	Single (Power Adapter)	Single (Power Adapter)
	<i>Height</i>	0.8 in. (20.32 mm)	1.73 in. (43.94 mm)	1.73 in. (43.94 mm)
	<i>Width</i>	4.9 in. (124.46 mm)	9.45 in. (240.03 mm)	9.09 in. (230.89 mm)
	<i>Depth</i>	4.7 in. (119.38 mm)	6.54 in. (166.12 mm)	7.87 in. (199.90 mm)
	<i>Weight</i>	1.1 lbs (0.5 kg)	3.0 lbs (1.4 kg)	3.5 lbs (1.6 kg)

		EC-XS [PN 201694]	EC-XS-FIPS [PN 201447]	EC-10104 [PN 201857]
Capacity	<i>Local Data Store</i>	1 x 120 GB m.2 SSD	1 x 120 GB SSD	1 x 120 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 10/100/1000 LAN/WAN	4 x 10/100/1000 LAN/ WAN	4 x 10/100/1000 LAN/ WAN
	<i>Management</i>	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RJ-45 serial and 1 x micro USB port
Power	<i>Requirement</i>	100–240VAC 50–60Hz, 34 W / 116 BTU	100–240VAC 50–60Hz, 23 W / 78.5 BTU	100–240VAC 50–60Hz, 17 W / 58 BTU
Dimensions & Weight	<i>Power Supplies</i>	Single (Power Adapter)	Single (Power Adapter)	Single (Power Adapter)
	<i>Height</i>	1.73 in. (43.94 mm)	1.73 in. (43.94 mm)	1.6 in. (40.6 mm)
	<i>Width</i>	9.09 in. (230.89 mm)	9.45 in. (240.03 mm)	7.8 in. (198.1 mm)
	<i>Depth</i>	7.87 in. (199.90 mm)	6.54 in. (166.12 mm)	6.0 in. (152.4 mm)
	<i>Weight</i>	3.1 lbs (1.4 kg)	3.0 lbs. (1.4 kg)	2.5 lbs. (1.0 kg)



		EC-S [PN 200877]	EC-S-P AC [PN 201687]	EC-S-P DC [PN 201743]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	2 x 480 GB SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	6 x 10/100/1000 LAN/WAN; Optional 2 x 1/10 Gbps fiber LAN/WAN	8 x 10/100/1000 LAN/WAN; 4 x 1/10 Gbps fiber LAN/WAN	8 x 10/100/1000 LAN/WAN; 4 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RJ-45 serial port
Power	<i>Requirement</i>	100–240VAC 47–63Hz, 100 W / 341 BTU	100–240VAC 47–63Hz, 111 W / 379 BTU	– 48V, 103 W / 351 BTU
Dimensions & Weight	<i>Power Supplies</i>	Single	1+1 redundant	1+1 redundant
	<i>Height</i>	1.73 in. (43.94 mm)	1.73 in. (43.94 mm) 1 RU	1.73 in. (44 mm) 1 RU
	<i>Width</i>	16.97 in. (431 mm)	17.24 in. (438 mm)	17.24 in. (438 mm)
	<i>Depth</i>	12.01 in. (305 mm)	16.54 in. (420 mm)	16.54 in. (420 mm)
	<i>Weight</i>	11.0 lbs (5.0 kg)	18.14 lbs (8.23 kg)	18.14 lbs (8.23 kg)

		EC-M [PN 200890]	EC-M-B [PN 200969]	EC-M-B [PN 201553]
Capacity	<i>Local Data Store</i>	2 x 480 GB m2SSD	2 x 480 GB m2SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100–240VAC 50–60Hz, 126 W / 430 BTU	100–240VAC 50–60Hz, 132 W / 450 BTU	100–240VAC 50–60Hz, 162 W / 553 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.93 mm) 1 RU	1.68 in. (42.67 mm) 1 RU	1.69 in. (42.8 mm) 1 RU
	<i>Width</i>	17.1 in. (434 mm)	17.1 in. (434 mm)	17.1 in. (434 mm)
	<i>Depth</i>	26.1 in. (663 mm)	24 in. (610 mm)	22 in. (559 mm)
	<i>Weight</i>	26.0 lbs (11.8 kg)	24.0 lbs (10.8 kg)	22.0 lbs (10.0 kg)



		EC-M-P [PN 201274]	EC-M-P [PN 201552]	EC-M-P-FIPS [PN 201634]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	2 x 480 GB SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100–240VAC 50–60Hz, 132 W / 450 BTU	100–240VAC 50–60Hz, 162 W / 553 BTU	100–240VAC 50–60Hz, 162 W / 553 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU
	<i>Width</i>	17.1 in. (434 mm)	17.1 in. (434 mm)	17.1 in. (434 mm)
	<i>Depth</i>	24 in. (610 mm)	22 in. (559 mm)	22 in. (559 mm)
	<i>Weight</i>	24.0 lbs (10.8 kg)	24.0 lbs (10.8 kg)	22.0 lbs (10.0 kg)

		EC-M-H AC [PN 201762]	EC-L [PN 200883]	EC-L-B [PN 201270]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	2 x 480 GB SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	8 x 10/100/1000 LAN/WAN; 4 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; RJ-45 serial port	2 x 10/100/1000; RS-232 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100–240VAC 47–63Hz, 153 W / 522 BTU	100–240VAC 50–60Hz, 401 W / 1368 BTU	100–240VAC 50–60Hz, 440 W / 1501 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm)
	<i>Width</i>	17.2 in. (437 mm)	17.34 in. (440.51 mm)	17.08 in (434.00 mm)
	<i>Depth</i>	16.5 in. (420 mm)	28.57 in. (725.80 mm)	31.29 in (794.67 mm)
	<i>Weight</i>	18.1 lbs (8.2 kg)	36.0 lbs (16.3 kg)	36.0 lbs (16.3 kg)



		EC-L-P [PN 201305]	EC-L-NM [PN 200887]	EC-L-B-NM [PN 201272]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	8 x 480 GB SSD	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gb fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 440 W / 1501 BTU	100-240VAC 50-60Hz, 440 W / 1501 BTU	100-240VAC 50-60Hz, 370 W / 1262 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in (42.8 mm)	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU
	<i>Width</i>	17.08 in (434.00 mm)	17.34 in. (440.51 mm)	17.08 in. (434.00 mm)
	<i>Depth</i>	31.29 in (794.67 mm)	28.57 in. (725.80)	31.29 in. (794.67 mm)
	<i>Weight</i>	36.0 lbs (16.3 kg)	36.0 lbs. (16.3 kg)	36.0 lbs (16.3 kg)

		EC-L-P-NM [PN 201307]	EC-L-H [PN 201754]	EC-XL [PN 200884]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD	2 x 480 GB SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 10/100/1000 LAN/WAN; 2 x 1/10 Gbps fiber LAN/WAN	6 x 1/10 Gbps fiber LAN/WAN	4 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 370 W / 1262 BTU	100-240VAC 50-60Hz, 404 W / 1379 BTU	100-240VAC 50-60Hz, 474 W / 1617 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.9 mm) 1 RU	1.69 in. (42.8 mm) 1 RU
	<i>Width</i>	17.08 in. (434.00 mm)	17.11 in. (434.6 mm)	17.34 in. (440.51 mm)
	<i>Depth</i>	31.29 in. (794.67)	27.83 in. (706.9 mm)	28.57 in. (725.80 mm)
	<i>Weight</i>	37.0 lbs (16.8 kg)	32.0 lbs. (14.6 kg)	36.0 lbs. (16.3 kg)



		EC-XL-B [PN 201271]	EC-XL-P [PN 201306]	EC-XL-P [PN 201632]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	2 x 480 GB SSD	2 x 480 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 1/10 Gbps fiber LAN/WAN	4 x 1/10 Gbps fiber LAN/WAN	6 x 25/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 438 W / 1495 BTU	100-240VAC 50-60Hz, 438 W / 1495 BTU	100-240VAC 50-60Hz, 459 W / 1566 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU
	<i>Width</i>	17.08 in. (434.00 mm)	17.08 in. (434.00 mm)	17.08 in. (434.00 mm)
	<i>Depth</i>	31.29 in. (794.67 mm)	31.29 in. (794.67)	31.29 in. (794.67)
	<i>Weight</i>	36.0 lbs. (16.3 kg)	36.0 lbs. (16.3 kg)	36.0 lbs. (16.3 kg)

		EC-XL-P-FIPS [PN 201449]	EC-XL-NM [PN 200888]	EC-XL-B-NM [PN 201273]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD	2 x 480 GB SSD 4 x 400 GB NVMe SSD	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 1/10 Gbps fiber LAN/WAN	4 x 1/10 Gbps fiber LAN/WAN	4 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 438 W / 1495 BTU	100-240VAC 50-60Hz, 537 W / 1832 BTU	100-240VAC 50-60Hz, 480 W / 1638 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.69 in. (42.8 mm) 1 RU	1.69 in. (42.8 mm) 1 RU	1.68 in. (42.8 mm) 1 RU
	<i>Width</i>	17.08 in. (434.00 mm)	17.34 in. (440.51 mm)	17.08 in. (434.00 mm)
	<i>Depth</i>	31.29 in. (794.67)	28.57 in. (725.80 mm)	31.29 in. (794.67 mm)
	<i>Weight</i>	36.0 lbs. (16.3 kg)	36.0 lbs. (16.3 kg)	36.5 lbs (16.5 kg)



		EC-XL-P-NM [PN 201308]	EC-XL-P-NM [PN 201633]	EC-XL-P-NM-FIPS [PN 201659]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD
Connectivity	<i>LAN/WAN Ethernet</i>	4 x 1/10 Gbps fiber LAN/WAN	6 x 25/10 Gbps fiber LAN/WAN	4 x 1/10 Gbps fiber LAN/WAN
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 480 W / 1638 BTU	100-240VAC 50-60Hz	100-240VAC 50-60Hz, 480 W / 1638 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	1+1 redundant
	<i>Height</i>	1.68 in. (42.8 mm) 1 RU	1.68 in. (42.8 mm) 1 RU	1.68 in. (42.8 mm) 1 RU
	<i>Width</i>	17.08 in. (434.00 mm)	17.08 in. (434.00 mm)	17.08 in. (434.00 mm)
	<i>Depth</i>	31.29 in. (794.67 mm)	31.29 in. (794.67 mm)	31.29 in. (794.67 mm)
	<i>Weight</i>	36.5 lbs. (16.5 kg)	36.5 lbs. (16.5 kg)	36.5 lbs. (16.5 kg)

		EC-XL-H [PN 201756]	EC-XL-H-10G [PN 201915]	EC-10106 [PN 3510325]
Capacity	<i>Local Data Store</i>	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD	2 x 480 GB SSD 2 x 1.6 TB NVMe SSD	1 x 120 GB SSD
Connectivity	<i>LAN/WAN Ethernet</i>	6 x 25/10 Gbps fiber LAN/WAN	6 x 1/10 Gbps fiber LAN/WAN	2 x 10/100/1000 RJ45 ports with POE Support. 2 x Combo ports (RJ45 or SFP). 2 x 1G/10G SFP+ Ports
	<i>Management</i>	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; DB-9 serial port	2 x 10/100/1000; RJ45 & USB-C serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz, 435 W / 1484 BTU	100-240VAC 50-60Hz, 413 W / 1409 BTU	100-240VAC 50-60Hz; 165W/ 563.00 BTU
Dimensions & Weight	<i>Power Supplies</i>	1+1 redundant	1+1 redundant	Single (Power Adapter)
	<i>Height</i>	1.69 in. (42.9 mm) 1 RU	1.69 in. (42.9 mm) 1 RU	1.72 in. (43.7 mm) 1 RU
	<i>Width</i>	17.11 in. (434.6 mm)	17.11 in. (434.6 mm)	11.61 in. (294.8 mm)
	<i>Depth</i>	27.83 in. (706.9 mm)	27.83 in. (706.9 mm)	7.92 in. (201.05 mm)
	<i>Weight</i>	33.5 lbs. (15.2 kg)	33.5 lbs. (15.2 kg)	5.08 lbs. (2.305kg)



		EC-10108 [PN 3510326]	EC-10150 [PN 3510332]
Capacity	<i>Local Data Store</i>	1 x 120 GB SSD	2 x 480 m.2 NVMe SSD 2 x 1.6TB U.2 NVMe SSD (Optional)
Connectivity	<i>LAN/WAN Ethernet</i>	2 x 10/100/1000 RJ45 ports with POE Support. 2 x Combo ports (RJ45 or SFP). 2 x 1G/10G SFP+ Ports	8 x 25/10/1 Gbps fiber LAN/WAN 2 x 10/100/1000 RJ45 ports
	<i>Management</i>	2 x 10/100/1000 RJ45 & USB-C serial port	2 x 10/100/1000 RJ45 & DB-9 serial port
Power	<i>Requirement</i>	100-240VAC 50-60Hz; 165W/ 563.00 BTU	100-240VAC 50-60Hz; 456W / 1518 BTU
Dimensions & Weight	<i>Power Supplies</i>	Single (Power Adapter)	1+1 redundant
	<i>Height</i>	1.72 in. (43.7 mm) 1 RU	1.69 in. (42.9 mm) 1 RU
	<i>Width</i>	11.61 in. (294.8 mm)	17.12 in (434.8 mm)
	<i>Depth</i>	7.92 in. (201.05 mm)	25.57 in (649.5 mm)
	<i>Weight</i>	5.08 lbs. (2.305kg)	32.4 lbs. (14.7 kg)



Modem Specifications

		USB LTE Modem [PN R8F34A]
Connectivity	<i>Version</i>	USB 2.0
Power	<i>Requirement</i>	3.5 W. Max
Dimensions and Weight	<i>Height</i>	0.79 in. (20 mm)
	<i>Width</i>	1.96 in. (50 mm)
	<i>Depth</i>	3.94 in. (100 mm)
	<i>Weight</i>	2.75 oz. (78 g)

Environmental	<i>Temperature (Operating)</i>	0°C to 40°C (32°F to 104°F)
	<i>Temperature (Storage)</i>	-40°C to 70°C (-40°F to 158°F)
	<i>Altitude (Operating)</i>	Up to 10,000 ft. (3,048 m)
	<i>Humidity (Operating)</i>	10% to 90% relative humidity, non-condensing
	<i>Humidity (Storage)</i>	10% to 95% relative humidity, non-condensing
Regulatory	<i>EMC</i>	FCC Part 15 Class B CISPR32 Class B EN55032 Class B ICES-003 Class B VCCI Class B EN61000-3-2 EN61000-3-3 EN55024, EN55035, EN301 489-1, EN301 489-52 KN32 Class B, KN35, KN301 489-1, KN301 489-52 CNS13438 Class B
	<i>Telco</i>	FCC Part 15 Class A EN 55022 Class A EN 61000-3-2/3-3 EN 55024
	<i>Wireless Certification</i>	Common Language Equipment Identifier (CLEI) Code
	<i>Carrier Certification</i>	Verizon, AT&T (pending), T-Mobile (not applicable)
	<i>Safety Certification</i>	UL/IEC/EN 60950 IEC/EN 62368-1



Fiber Specifications

Hardware Model	Part Number	Fiber Interfaces – 1/10 Gbps	
EC-M	PN 200890	2 interfaces: tlan0, twan0	- LC connectors - SR (Short Reach) [default] 10 Gbps 850 nm Multimode Datacom SFP+ Transceiver - Multimode 50μ fiber - LR (Long Reach) - Not supported - Fail-to-Glass— yes
EC-M-B	PN 200969 PN 201553		
EC-L	PN 200883		
EC-L-B	PN 201270		
EC-L-NM	PN 200887		
EC-L-B-NM	PN 201272		
EC-XL	PN 200884	4 interfaces: tlan0, twan0, tlan1, twan1	Fail-to-Glass— yes
EC-XL-B	PN 201271		
EC-XL-NM	PN 200888		
EC-XL-B-NM	PN 201273		
EC-M-P	PN 201274 PN 201552	2 interfaces: tlan0, twan0	- LC Connectors - SR (Short Reach) / Short (SX) 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver - Multimode 50μ fiber - LR (Long Reach) / Long (LX) 1/10 Gbps 1310 nm Single Mode Datacom SFP+ Transceiver - Single-mode 8.3μ fiber - Fail-to-Glass— no
EC-M-P-FIPS	PN 201634		
EC-L-P	PN 201305		
EC-L-P-NM	PN 201307		



Hardware Model	Part Number	Fiber Interfaces – 1/10 Gbps	
EC-L-H	PN 201754	6 interfaces: tlan0, twan0, tlan1, twan1, tlan2, twan2 4 interfaces: tlan0, twan0, tlan1, twan1	
EC-S-P	PN 201689		
EC-M-H	PN 201762		
EC-XL-P	PN 201306		
EC-XL-P-FIPS	PN 201449		
EC-XL-P-NM	PN 201308		
EC-XL-P-NM-FIPS	PN 201659		
EC-XL-P	PN 201623	6 interfaces: tlan0, twan0, tlan1, twan1, tlan2, twan2	- LC Connectors - SR (Short Reach) / Short (SX) 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver - Multimode 50μ fiber - LR (Long Reach) 1/10 Gbps 1310 nm Single Mode Datacom SFP+ Transceiver - Single-mode 8.3μ fiber - Fail-to-Glass— no
EC-XL-P-NM	PN 201633		
EC-XL-H EC-XL-H-10G	PN 201756 PN 201915		

Hardware Model	Part Number	Fiber Interfaces – 25/10 Gbps	
EC-XL-P	PN 201632	6 interfaces: tlan0, twan0, tlan1, twan1, tlan2, twan2	- LC Connectors - SR (Short Reach) 25/10 Gbps 850 nm Multimode Datacom SFP28 Transceiver - Multimode 50μ fiber - LR (Long Reach) 25/10 Gbps 1310 nm Single Mode Datacom SFP28 Transceiver - Single-mode 8.3μ fiber - Fail-to-Glass— no
EC-XL-P-NM	PN 201633		
EC-XL-H	PN 201756		



Model	Part Number	Fiber Interfaces – 1/10Gbps tlan0/twan0
EC-S	<i>PN 200877</i> <i>Applicable when optional fiber module is installed.</i>	• 2 interfaces • LC connectors • SR (Short Reach) / Short (SX) • 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver • Multimode 50µ fiber • LR (Long Reach) / Long (LX) • 1/10 Gbps 1310 nm Single Mode Datacom SFP+ Transceiver • Single-mode 8.3µ fiber • Fail-to-Glass— no

Model	Part Number	Fiber Interfaces – 1/10Gbps tlan0/twan0
EC-S-P AC	<i>PN 201687</i>	• 4 interfaces • LC connectors • SR (Short Reach) / Short (SX) • 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver • Multimode 50µ fiber • LR (Long Reach) / Long (LX) • 1/10 Gbps 1310 nm Single Mode Datacom SFP+ Transceiver • Single-mode 8.3µ fiber • Fail-to-Glass— no
EC-S-P DC	<i>PN 201743</i>	
EC-M-H AC	<i>PN 201762</i>	



Model	Part Number	Fiber Interfaces 1 Gbps and 10 Gbps – wan0/wan1 1 Gbps – lan2/wan2
EC-10106 EC-10108	PN 3510325 PN 3510326	• 4 interfaces • LC connectors • SR (Short Reach) / Short (SX) • 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver • Multimode 50μ fiber • LR (Long Reach) / Long (LX) • 1/10* Gbps 1310 nm Single Mode Datacom SFP+ Transceiver • Single-mode 8.3μ fiber • Fail-to-Glass— no

* Note: 10 Gbps only. See [Approved Transceivers on page 120](#).



Model	Part Number	Fiber Interfaces 1 Gbps, 10 Gbps, 25 Gbps lan0/lan1/lan2/lan3 wan0/wan1/wan2/wan4
EC-10150	PN 3510332	• 8 interfaces • LC connectors • SR (Short Reach) / Short (SX) • 1/10 Gbps 850 nm Multimode Datacom SFP+ Transceiver • Multimode 50μ fiber • LR (Long Reach) / Long (LX) • 1/10 Gbps 1310 nm Single Mode Datacom SFP+ Transceiver • Single-mode 8.3μ fiber • SR (Short Reach) • 25 Gbps 850 nm Multimode Datacom SFP28 Transceiver • Multimode 50μ fiber • LR (Long Reach) • 25 Gbps 1310 nm Single Mode Datacom SFP28 Transceiver • Single-mode 8.3μ fiber • Fail-to-Glass— no



EdgeConnect (EC) Series Specifications

Environmental		<i>Temperature (Operating)</i>	0°C to 40°C (32°F to 104°F)
		<i>Temperature (Storage)</i>	-40°C to 65°C (-40°F to 149°F)
		<i>Altitude (Operating)</i>	Up to 10,000 ft. (3,048 m)
		<i>Altitude (Storage)</i>	Up to 40,000 ft. (12,192 m)
	<i>EC-XS / EC-S</i>	<i>Humidity (Operating)</i>	8% to 90% relative humidity, non-condensing
		<i>Humidity (Storage)</i>	8% to 95% relative humidity, non-condensing
	<i>All other models</i>	<i>Humidity (Operating)</i>	10% to 80% relative humidity, non-condensing
		<i>Humidity (Storage)</i>	8% to 95% relative humidity, non-condensing
Regulatory	<i>EC-US EC-XS EC-10104 EC-10106 EC-10108</i>	<i>EMC</i>	FCC Part 15 Class B ICES-003 Issue 7, Class B EN 55032 Class B EN 61000-3-2/3-3 EN 55035 CNS 15936-1 KSC 9832 AS/NZ CISPR32 VCCI-CISPR32 Class B
	<i>All other models</i>	<i>EMC</i>	FCC Part 15 Class A EN 61000-3-2/3-3 ICES-003 Issue 7, Class A EN 55032 Class A EN 55035 CNS 15936-1 KSC 9832 AS/NZ CISPR32 VCCI-CISPR32 Class A
		<i>Safety</i>	UL/cUL 60950 / 62368 IEC/EN 60950 / 62368 CNS 15598-1



EdgeConnect (EC) Series Power Adapter / Supply Efficiency

Models	RMN	Derived Average Efficiency @ 230V/50Hz
EC-US	NCA-1010B-SV1	89.55%
EC-XS	FWA-ASP1012	89.86%
	NCA-1015A-SV1	89.86%
EC-10104	EC-10104	90.58%
EC-10106	SPEC-PR06	92.83%
EC-10108	SPEC-PR08	92.83%
EC-10150	TPS-W024	91.00%
EC-S-P	FWA-ASP3050	88.00%
EC-M-H	FWA-ASP3050-12C	
EC-L-H	HSTNS-2154	91.00%
EC-XL-H		
EC-XL-H-10G		



EdgeConnect (EC) Noise Levels

Models	Noise Level	Temperature
EC-US	Fanless	25° C
EC-XS	40 dBA	
EC-10104	Fanless	
EC-10106	42 dBA	
EC-10108	42 dBA	
EC-10150	71.5 dBA	
EC-S-P	40 dBA	
EC-M-H	44.3 dBA	



IEEE 802.x Standards

The following are the IEEE 802.x standards for EdgeConnect appliances.

Ethernet Standard	Description	Appliance Model EC-										
		US XS 10104	10106 10108	10150	S	M	M-H	L-B	L-P L-H	XL-B	XL-P XL-H	XL-H-10G
802.3i	10BASE-T 10 Mbit/s (1.25 MB/s) over twisted pair	Y	Y	Y	Y	Y	Y	Y	Y	N	N	Y
802.3u	100BASE-TX Fast Ethernet at 100 Mbit/s (12.5 MB/s) w/autonegotiation	Y	Y	Y	Y	Y	Y	Y	Y	N	N	Y
802.3ab	1000BASE-T Gbit/s Ethernet over twisted pair at 1 Gbit/s (125 MB/s)	Y	Y	Y	Y	Y	Y	Y	Y	N	Y	Y
802.3z	1000BASE-X Gbit/s Ethernet over Fiber-Optic at 1 Gbit/s (125 MB/s)	N	Y	Y	Y	Y	Y	Y	Y	Y	N	Y
802.3ae	10 Gigabit Ethernet over fiber; 10GBASE-SR	N	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y
802.3ae	10 Gigabit Ethernet over fiber; 10GBASE-LR	N	Y	Y	Y	Y*	Y	N	Y	Y	Y	Y
802.3an	10GBASE-T 10Gbit/s (1,250 MB/s) Ethernet over unshielded twisted pair (UTP)	N	N	Y	N	N	N	N	N	N	N	N
802.3bt	Third generation Power over Ethernet with up to 100 W using four pairs in balanced-twistedpair cabling (4PPoE)	N	Y	N	N	N	N	N	N	N	N	N
802.3by	25 Gbit/s over Multimode Fiber	N	N	Y	N	N	N	N	N	N	Y	N
802.3cc	25 Gbit/s over Single Mode Fiber	N	N	Y	N	N	N	N	N	N	Y	N



Ethernet Standard	Description	Appliance Model EC-										
		US XS 10104	10106 10108	10150	S	M	M-H	L-B	L-P L-H	XL-B	XL-P XL-H	XL-H-10G
802.1Q	Networking standard that supports virtual LANs (VLANs) on an Ethernet network	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y

* Supported on the -P model only.



Appliance Views

This chapter includes each appliance model and provides information about its physical characteristics and layout.



Supported Inventory

Model	Part Number	HDD/SSD/NVMe Drives			Power Supplies		
		Qty	Allow user to replace	Hot swappable	Qty	Allow user to replace	Hot swappable
EC-US	201106	1	no	--	0 ¹	N/A	N/A
EC-XS	200889	1	no	--	0 ¹	N/A	N/A
EC-XS	201571	1	no	--	0 ¹	N/A	N/A
EC-XS	201694	1	no	--	0 ¹	N/A	N/A
EC-XS-FIPS	201447	1	no	--	0 ¹	N/A	N/A
EC-10104	201857	1	no	--	0 ¹	N/A	N/A
EC-10106	3510325	1	no	--	0 ¹	N/A	N/A
EC-10108	3510326	1	no	--	0 ¹	N/A	N/A
EC-10150	3510332	4	Yes	Yes	2	Yes	Yes
EC-S	200887	2	no	--	1	N/A	N/A
EC-S-P AC	201687	2	no	--	2 ²	yes	yes
EC-S-P DC	201743	2	no	--	2 ²	yes	yes
EC-M	200890	2	yes	yes	2	yes	yes
EC-M-B	200969	2	yes	yes	2	yes	yes
EC-M-B	201553	2	yes	yes	2	yes	yes
EC-M-P	201274	2	yes	yes	2	yes	yes
EC-M-P	201552	2	yes	yes	2	yes	yes
EC-M-P-FIPS	201634	2	no	no	2	yes	yes
EC-M-H AC	201762	2	no	--	2	yes	yes
EC-L	200883	2	yes	yes	2	yes	yes
EC-L-B	201270	2	yes	yes	2	yes	yes
EC-L-P	201305	2	yes	yes	2	yes	yes
EC-L-NM	200887	8	yes	yes	2	yes	yes
EC-L-B-NM	201272	4	yes	yes	2	yes	yes
EC-L-P-NM	201307	4	yes	yes	2	yes	yes
EC-L-H	201754	2	yes	yes	2	yes	yes
EC-XL	200884	2	yes	yes	2	yes	yes
EC-XL-B	201271	2	yes	yes	2	yes	yes
EC-XL-P	201306	2	yes	yes	2	yes	yes
EC-XL-P	201632	2	yes	yes	2	yes	yes
EC-XL-P-FIPS	201449	2	no	no	2	yes	yes
EC-XL-NM	200888	6	yes	yes	2	yes	yes
EC-XL-B-NM	201273	4	yes	yes	2	yes	yes
EC-XL-P-NM	201308	4	yes	yes	2	yes	yes
EC-XL-P-NM	201633	4	yes	yes	2	yes	yes
EC-XL-P-NM-FIPS	201659	4	no	no	2	yes	yes
EC-XL-H-10G	201915	4	yes	yes	2	yes	yes

¹This model has a power adapter.



²System comes with one (1) power supply. Hot swappable is applicable only when an optional second power supply is added.



EC-US [PN 201106]

EC-US	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--

EC-US — Front View



EC-US — Rear View



The only LED is the **Power** button. When the system is ON, the LED illuminates **Green**.


EC-XS [PN 200889] & EC-XS-FIPS [PN 201447]

EC-XS	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--

EC-XS — Front View



EC-XS — Rear View

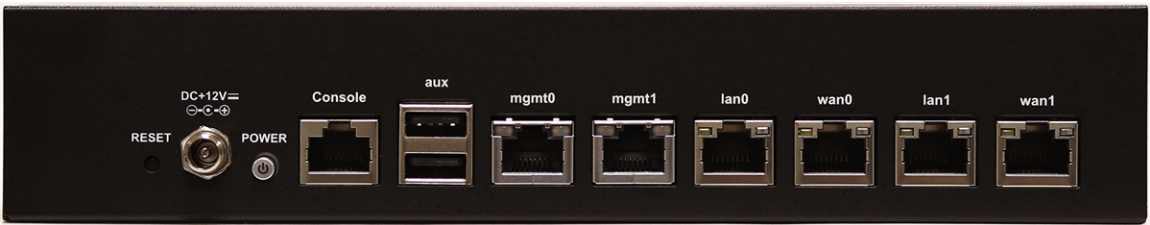

View	LED	Definition
Front LEDs Power Status SSD	Power	Illuminated = System is powered on Not illuminated = System is powered off
	Status	Green = Operational state is normal Red = System is malfunctioning
	SSD	Blinking = Data access activities
Rear LEDs Link/ Activity Speed	Speed	Amber = Connection speed is 1000 Mbps Green = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Amber solid = Port is active Amber blinking = There is traffic
	Both LEDs	Not illuminated = BYPASS



EC-XS [PN 201571]

EC-XS	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--

EC-XS — Front View



EC-XS — Rear View



View	LED	Definition
Front LEDs Power SSD	Power	• Illuminated = System is powered on • Not illuminated = System is powered off
	SSD	• Blinking = Data access activities
Rear LEDs Link/ Activity Speed	Speed	• Amber = Connection speed is 1000 Mbps • Green = Connection speed is 100 Mbps • Not illuminated = Connection speed is 10 Mbps
	Link/ACT	• Green solid = Port is active • Green blinking = There is traffic



EC-XS [PN 201694]

EC-XS	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--

EC-XS — Front View



EC-XS — Rear View



View	LED	Definition
Front LEDs Power Status SSD	Power	Green = Operational state is normal Off = System is powered off
	Status	Off = Always off
	SSD	Amber = Data access activities Off = No data access activities
Rear LEDs Link/ Activity Speed	Speed	Amber = Connection speed is 1000 Mbps Green = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Amber solid = Link is established; there is no activity on the port. Amber blinking = Link is established; there is activity on the port. Off = No link is established




EC-10104 [PN 201857]


EC-10104	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--

EC-10104 — Front View



EC-10104 — Rear View

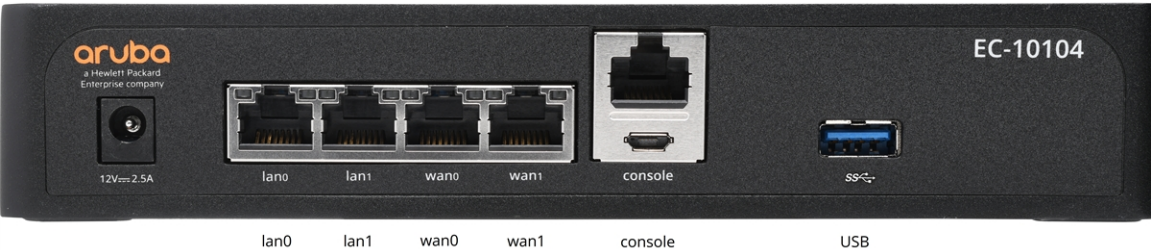


View	LED	Definition
Front LEDs 	Power	Green (Solid)= System is powered on Not illuminated = System is powered off
Rear LEDs Link/ Activity Speed 	Speed	Green (Solid)= Connection speed is 1000 Mbps Not Illuminated = Connection speed is 10 or 100 Mbps
	Link/ACT	Green (Solid) = Link is established – there is no activity on the port. Green (Blinking) = Link is established – there is activity on the port. Not illuminated = No Link is Established



EC-10106 [PN 3510325]

EC-10106	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--




EC-10106 — Front View with and without Transceivers

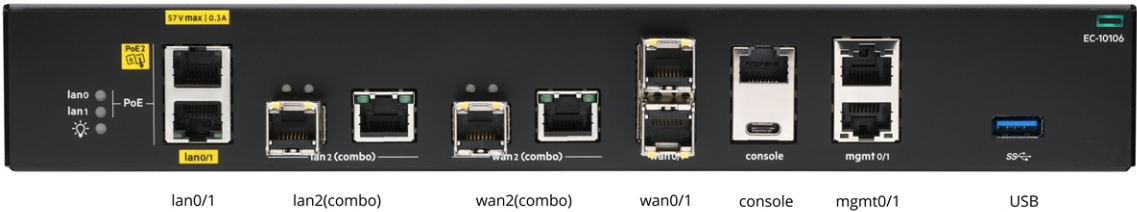

1GB BASE-T (RJ45) transceiver is only supported in wan0/1. See [Single-Rate Transceivers on page 122](#).

EC-10106 — Rear View

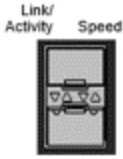


View	LED	Definition
Power LEDs 	Power	Green (Solid)= System is powered on Amber (Solid)= System in Error State Not illuminated = System is powered off
PoE LEDs 	PoE Status	Green (Solid)= PoE Power Provided Not illuminated = PoE Power Not Provided
Port LEDs (lan0, lan1, lan2, wan2)  	Speed	Green (Solid)= Connection speed is 1000 Mbps Not Illuminated = Connection speed is 100 /10 Mbps (RJ45 port) Not Illuminated = No link (SFP port)
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link
Port LEDs (wan0, wan1) 	Speed	Green (Solid)= Connection speed is 10 Gbps Amber (Solid)= Connection speed is 1000 Mbps Not Illuminated = No Link
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link.
Mgmt LEDs (mgmt0, mgmt1) 	Speed	Green (Solid)= Connection speed is 1000 Mbps Not Illuminated = Connection speed is 10 or 100 Mbps
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link.



EC-10108 [PN 3510326]

EC-10108	SSD	Power Adapter
Quantity	1	1
User authorized to replace?	no	yes
Hot swappable?	--	--




EC-10108 — Front View with and without Transceivers

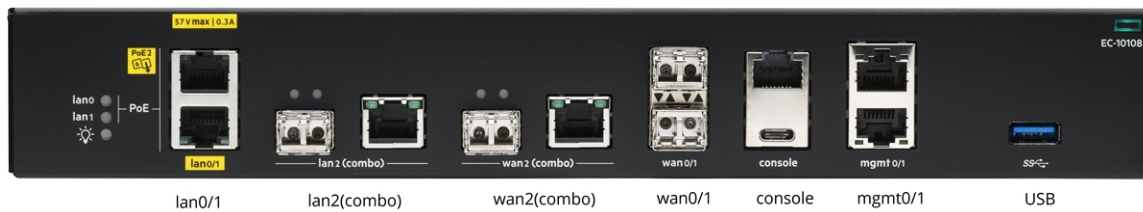

1GB BASE-T (RJ45) transceiver is only supported in wan0/1. See [Single-Rate Transceivers on page 122](#).


EC-10108 — Rear View

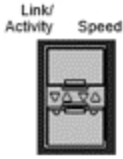

View	LED	Definition
Power LEDs 	Power	Green (Solid)= System is powered on Amber (Solid)= System in Error State Not illuminated = System is powered off
PoE LEDs 	PoE Status	Green (Solid)= PoE Power Provided Not illuminated = PoE Power Not Provided
Port LEDs (lan0, lan1, lan2, wan2)  	Speed	Green (Solid)= Connection speed is 1000 Mbps Not Illuminated = Connection speed is 100 /10 Mbps (RJ45 port) Not Illuminated = No link (SFP port)
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link
Port LEDs (wan0, wan1) 	Speed	Green (Solid)= Connection speed is 10 Gbps Amber (Solid)= Connection speed is 1000 Mbps Not Illuminated = No Link
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link.
Mgmt LEDs (mgmt0, mgmt1) 	Speed	Green (Solid)= Connection speed is 1000 Mbps Not Illuminated = Connection speed is 10 or 100 Mbps
	Link/ACT	Green (Solid) = Port is active. Green (Blinking) = Port is transmitting or receiving data. Not illuminated = No Link.



EC-10150 [PN 3510332]

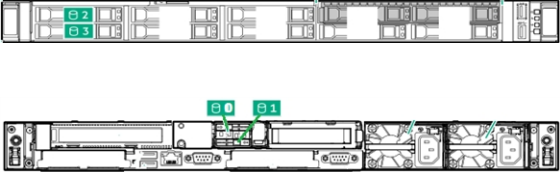EC-10150	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	


EC-10150 — Front View without Optional NVMe Drive Kit




EC-10150 — Front View with Optional NVMe Drive Kit



EC-10150 — Rear View – OS Boot Drives

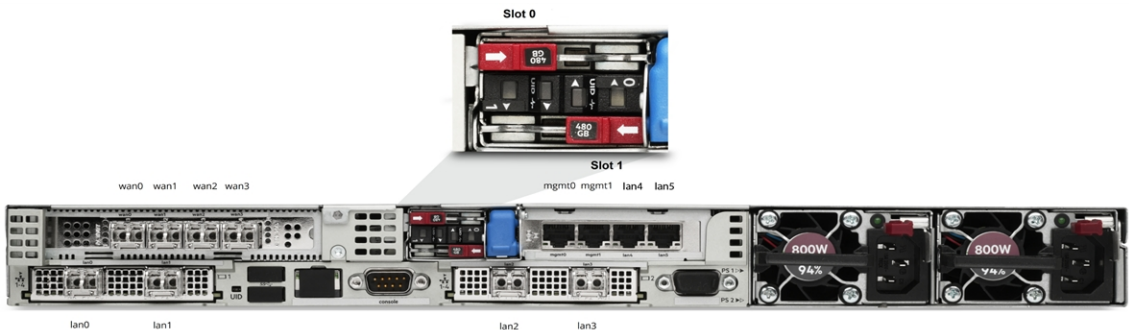


EC-10150 – OS Boot Drive LED Definition

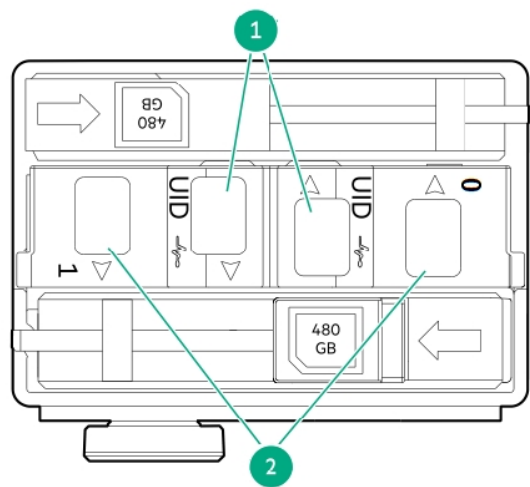

Item	LED	Status	Definition
1	Fault / Locate	Solid Amber	Drive has failed, or is unsupported or invalid
		Solid Blue	Drive is operating normally
		Flashing Amber / Blue (one flash per second)	Drive has failed
		Off	Drive is operating normally
2	Online / Activity	Solid Green	Drive is online and has no activity
		Flashing Green (one flash per second)	Drive is rebuilding
		Flashing Green (four flashes per second)	Drive is operating normally and has activity
		Off	Drive is not configured





EC-10150 – NM Drive LED Definition

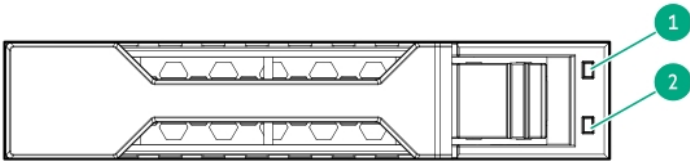


Item	LED	Status	Definition
1	Fault / Locate	Solid Amber	Drive has failed, or is unsupported or invalid
		Solid Blue	Drive is operating normally
		Flashing Amber / Blue (one flash per second)	Drive has failed
		Off	Drive is operating normally
2	Online / Activity	Solid Green	Drive is online and has no activity
		Flashing Green (one flash per second)	Drive is rebuilding
		Flashing Green (four flashes per second)	Drive is operating normally and has activity
		Off	Drive is not configured


EC-10150 – Rear View – Network Ports

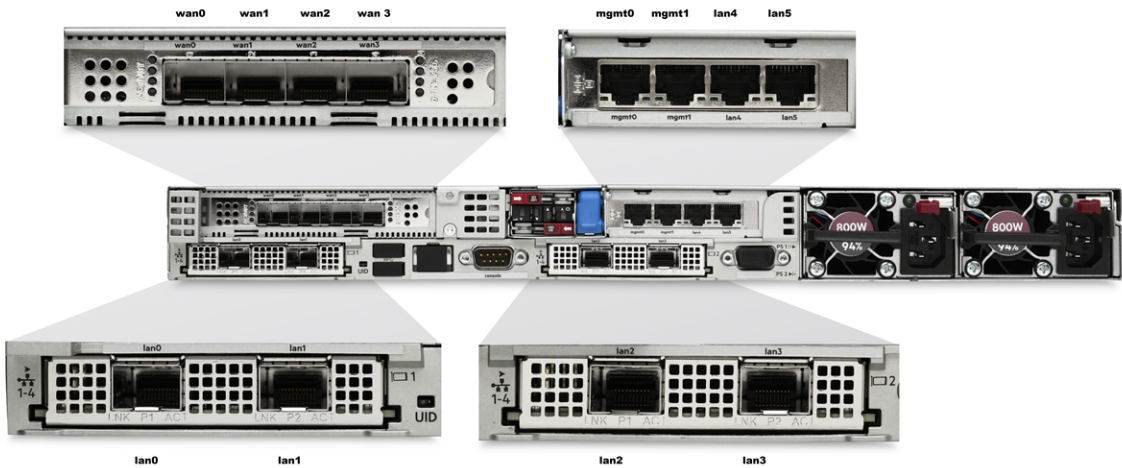

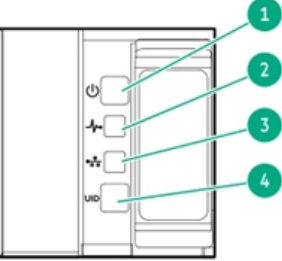Front Panel LEDs		LED and ConditionF
	Power On / Standby button and System Power LED	• Solid Green = System on • Flashing Green = Performing Power On sequence • Amber = System in Standby • Off = No power present <i>Facility power is not present, power cord is not attached, no power supplies are installed, or power supply failed</i>
	Health LED	• Solid Green = Normal • Flashing Amber = System degraded • Flashing Red = System critical
	NIC Status LED	• Solid Green = Link to network • Flashing Green = Network active • Off = No network activity
	UID button / LED	• Solid Blue = Activated • Off = No network activity UID is a button/LED feature that turns the UID on/off. The UID LED is used to locate/identify a particular server when it is deployed in a dense rack with other equipment.

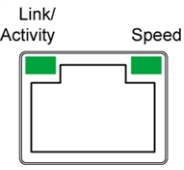LED		Definition: mgmt0/mgmt1/lan4/wan5
	Link / ACT	SPEED • Solid Green = Link established • Flashing Green = Port is transmitting or receiving data • Off = No Link.
	Speed	• Solid Green = Link at 1 Gbps • Solid Amber = Link at 1000 Mbps or 10 Mbps • Off = No Link.

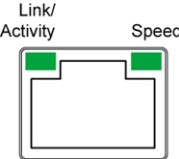

LED		Definition: lan0/lan1/lan2/lan3/wan0/wan1/wan2/wan3
	Link / ACT	SPEED • Solid Green = Link established • Flashing Green = Port is transmitting or receiving data • Off = No Link.
	Speed	• Solid Green = Link at 25 Gbps • Solid Amber = Link at 1000 Mbps or 10 Gbps • Off = No Link.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect.



EC-S [PN 200877]



EC-S	SSD	Power Supply
Quantity	2	1
User authorized to replace?	no	no
Hot swappable?	--	--

EC-S — Front View

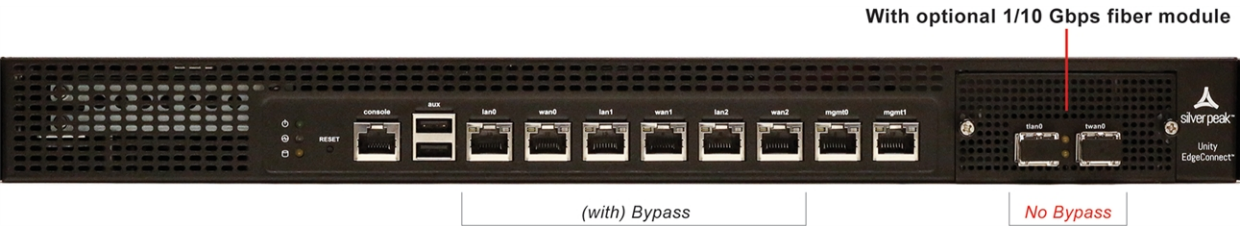


EC-S — Rear View

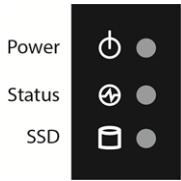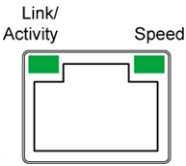


View	LED	Definition
Front LEDs 	Power	• Illuminated = System is powered on • Not illuminated = System is powered off
	Status	• Green = Operational state is normal • Red = System is malfunctioning
	SSD	• Blinking = Data access activities
Rear LEDs 	Speed	• Amber = Connection speed is 1000 Mbps • Green = Connection speed is 100 Mbps • Not illuminated = Connection speed is 10 Mbps
	Link/ACT	• Amber solid = Port is active • Amber blinking = There is traffic
	Both LEDs	• Not illuminated = BYPASS

1/10 Gbps Fiber Interfaces

This applies when the optional fiber module is installed.

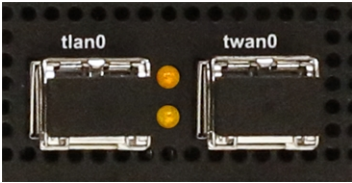tlan0/twan0	Status	LEDs (Amber)
	Link	ON
	Active	Flash
	Non-Link	OFF



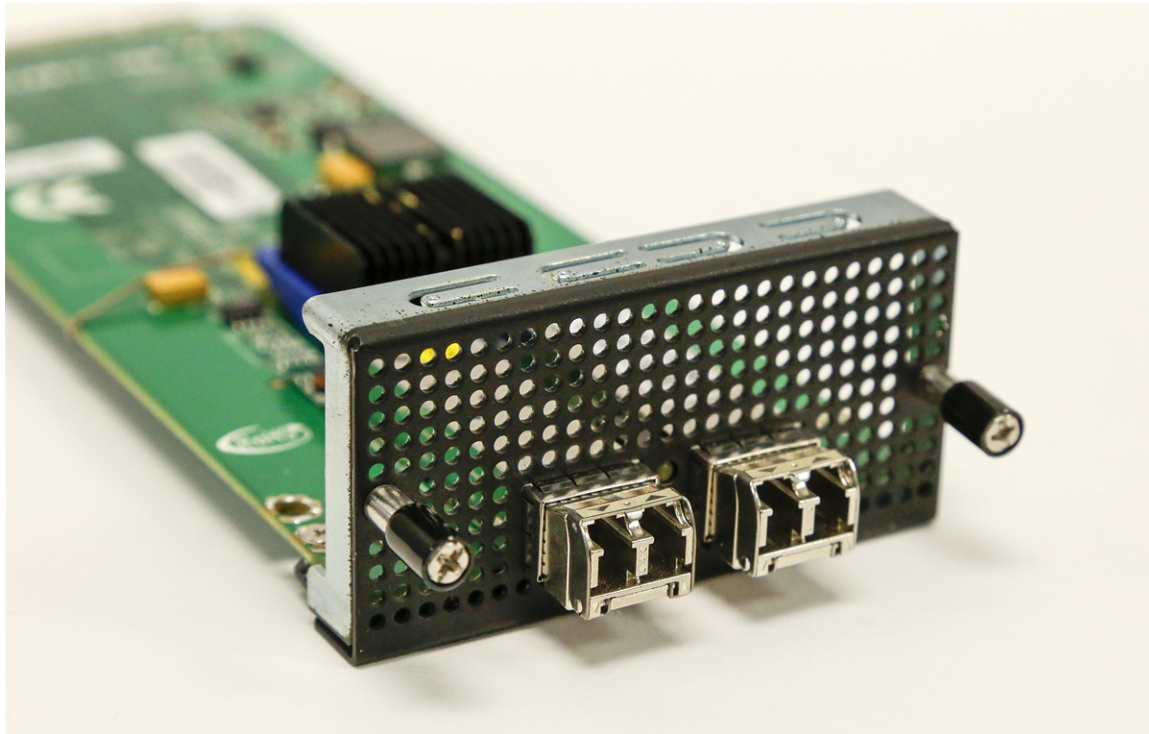

SFP+ optical transceivers come in pairs for the **EC-S** appliance expansion module. You have a choice of either the **SR/SX** or **LR/LX** modules:

- Short Reach (**SR**) / Short (SX) transceiver's bail (handle) is **beige**.
- Long Reach (**LR**) / Long (LX) transceiver's bail (handle) is **blue**.

Disclaimer

- The appliance does not support SFP28 transceivers.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-S-P AC [PN 201687]


EC-S-P AC	SSD	Power Supply
Quantity	2	1, Optional 2 (PN 201687-001 and 201687-002)
Quantity	2	2 (PN 201687-003 and newer)
User authorized to replace?	no	yes
Hot swappable?	--	yes (when there are two power supplies)

201687-001, 201687-002 and 201687-003 are functionally identical versions of EC-S-P AC.

EC-S-P AC— Front View without transceivers

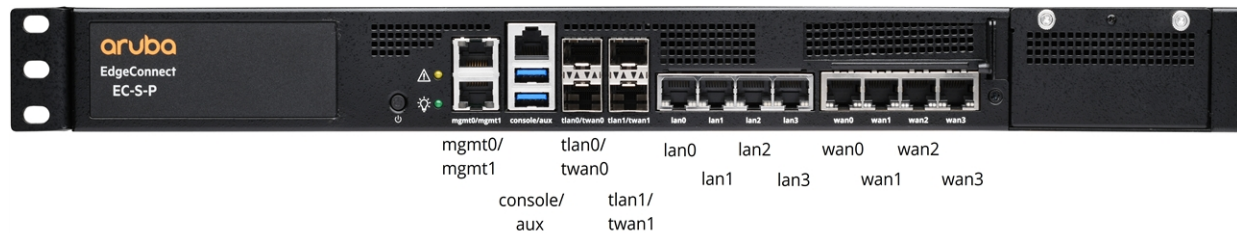

EC-S-P AC— Front View with transceivers


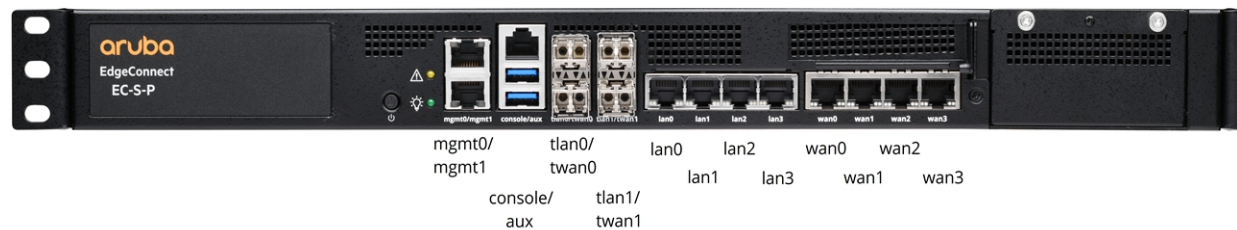


EC-S-P AC — Rear View (Single Power Supply)



EC-S-P AC — Rear View (Dual Power Supply)

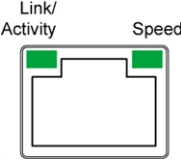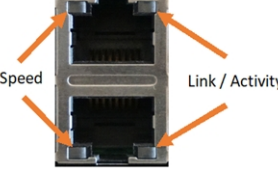


View	LED	Definition
Front LEDs Alert  Power 	Alert	• Amber = any critical sensor threshold or critical discrete sensor events (e.g. processor thermal trip, PSU failure, etc.) occur
	Power	• Green = Operational state is normal
Rear LEDs 	Speed	• Green = Connection speed is 1000 Mbps • Amber = Connection speed is 100 Mbps • Not illuminated = Connection speed is 10 Mbps
	Link/ACT	• Green solid = Port is active • Green blinking = There is traffic
mgmt0/1 LEDs 	Speed	• Green = Connection speed is 1000 Mbps • Amber = Connection speed is 100 Mbps • Not illuminated = Connection speed is 10 Mbps
	Link/ACT	• Green solid = Port is active • Green blinking = There is traffic



1/10 Gbps Fiber Interfaces

This applies when the optional fiber module is installed.

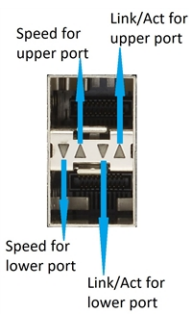
tlan0/twan0	Status	LEDs
	Speed	• Green = Connection speed is 10 Gbps • Amber = Connection speed is 1 Gbps
	Link	• Green solid = Port is active • Green blinking = There is traffic




EC-S-P DC [PN 201743]

EC-S-P DC	SSD	Power Supply
Quantity	2	1 & optional 2
User authorized to replace?	no	yes
Hot swappable?	--	yes (when optional second power supply is added)

EC-S-P DC— Front View without transceivers

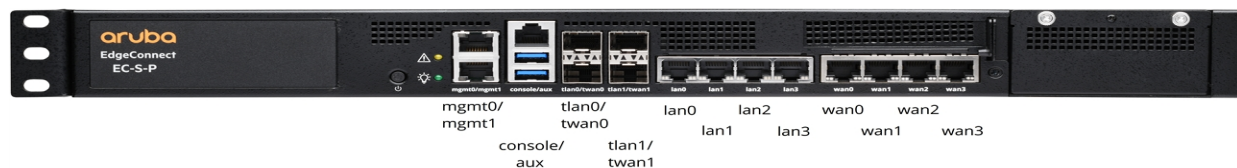

EC-S-P DC— Front View with transceivers


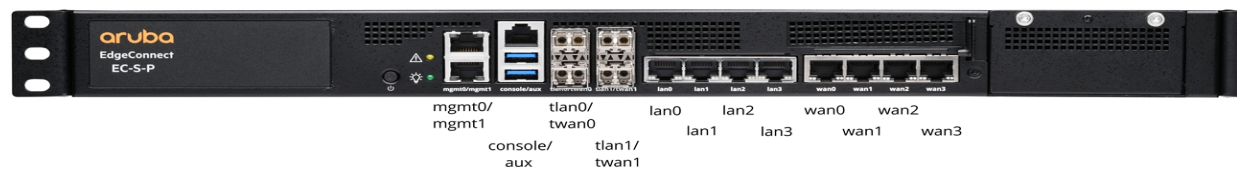


EC-S-P DC — Rear View (Single Power Supply)




EC-S-P DC — Rear View (Dual Power Supply)

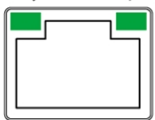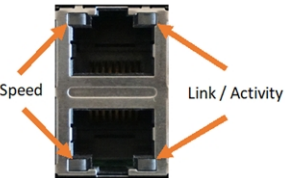

View	LED	Definition
Front LEDs Alert Power 	Alert	Amber = any critical sensor threshold or critical discrete sensor events (e.g. processor thermal trip, PSU failure, etc.) occur
	Power	Green = Operational state is normal
Rear LEDs Link/ Activity Speed 	Speed	Green = Connection speed is 1000 Mbps Amber = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Green solid = Port is active Green blinking = There is traffic
mgmt0/1 LEDs 	Speed	Green = Connection speed is 1000 Mbps Amber = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

1/10 Gbps Fiber Interfaces

This applies when the optional fiber module is installed.

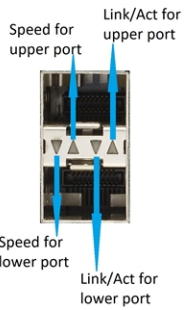tlan0/twan0	Status	LEDs
	Speed	Green = Connection speed is 10 Gbps Amber = Connection speed is 1 Gbps
	Link	Green solid = Port is active Green blinking = There is traffic




EC-M [PN 200890]


EC-M	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	


EC-M — Front View



EC-M — Rear View

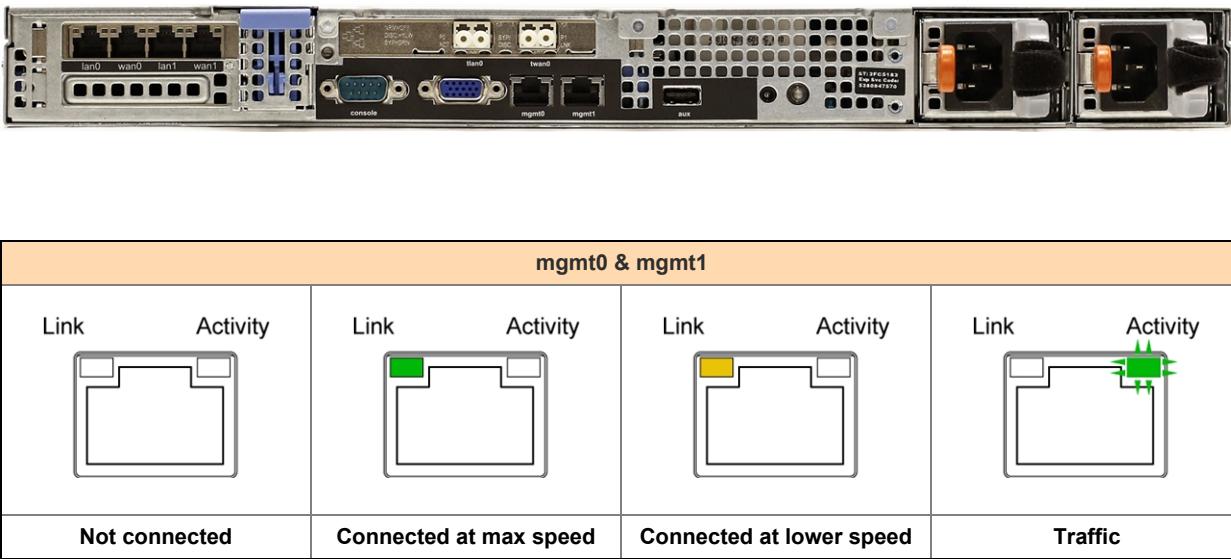


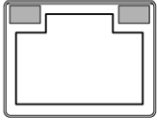LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED • Yellow solid = Connection speed is 1000 Mbps • Green solid = Connection speed is 100 Mbps • Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect • Green blinking = Bypass • Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	• Green solid = Port is active • Green blinking = There is traffic

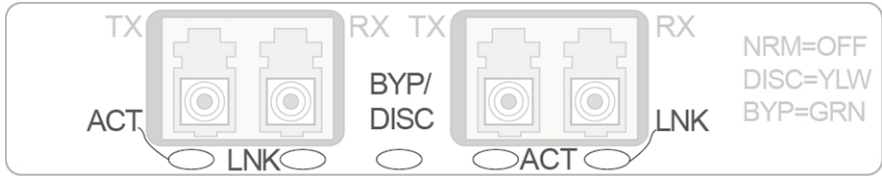
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-M-B [PN 200969]





EC-M-B	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	


EC-M-B — Front View

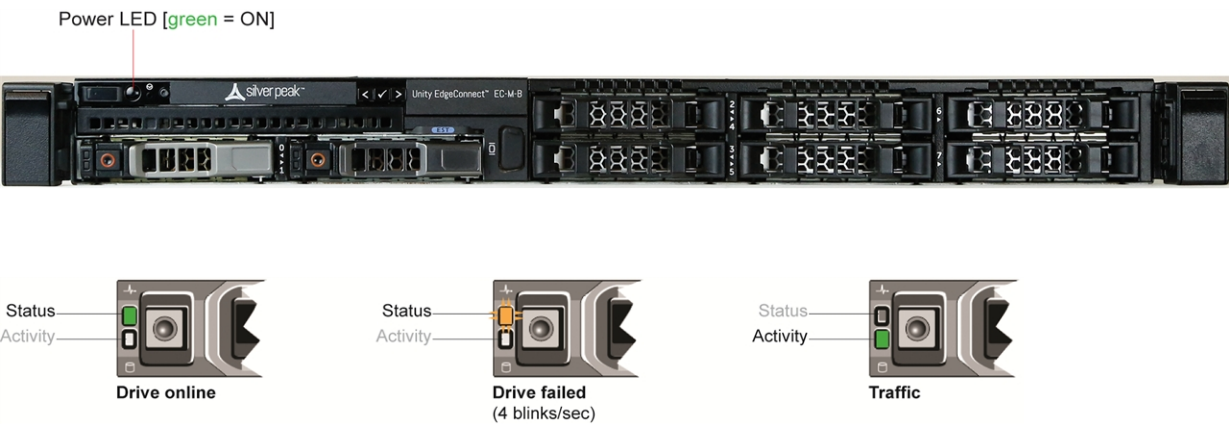


EC-M-B — Rear View

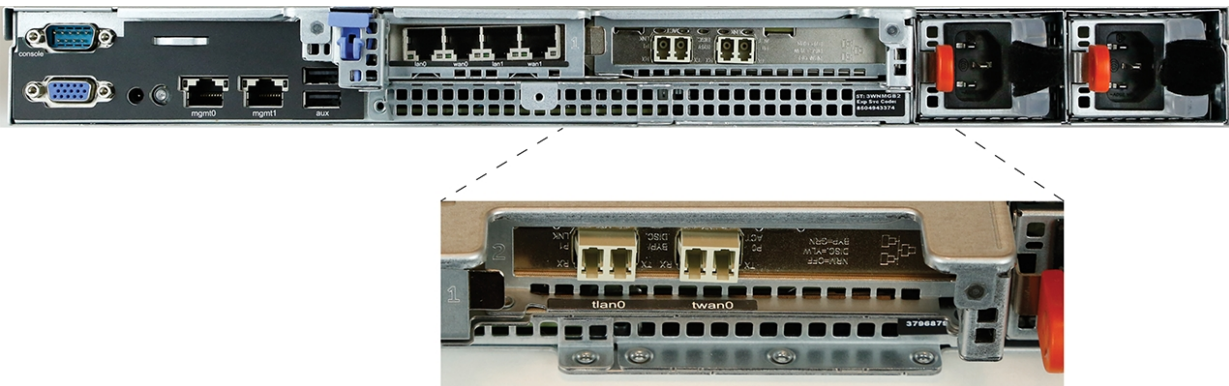

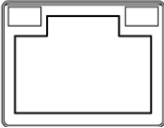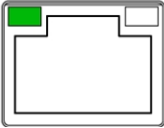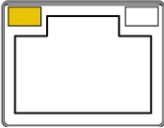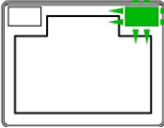mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

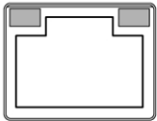LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

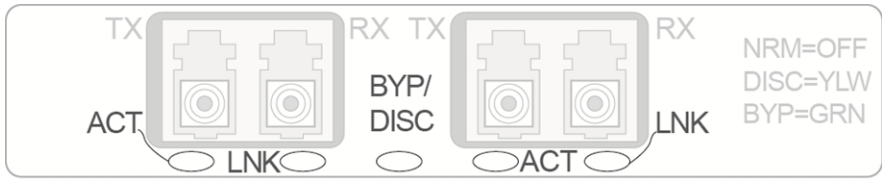
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-M-P [PN 201274]





EC-M-P	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-M-P — Front View

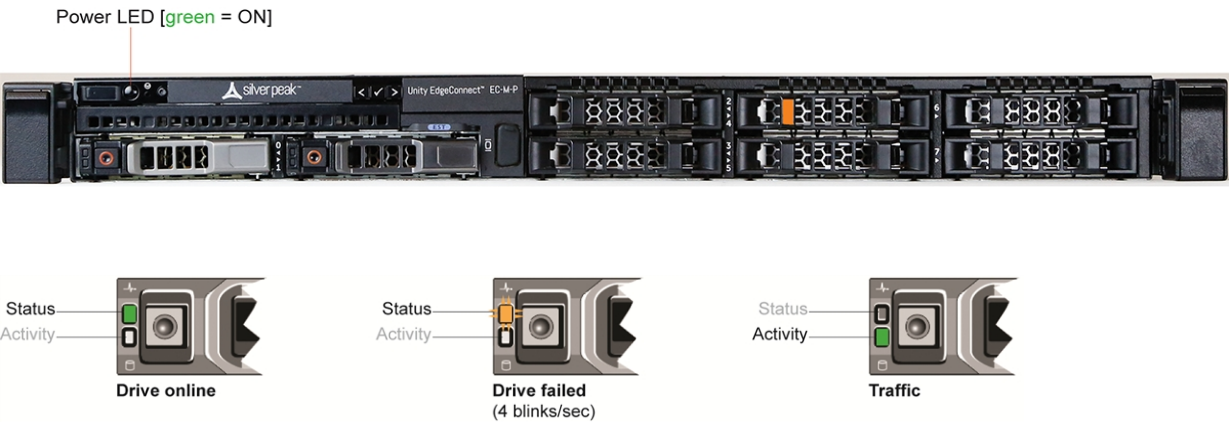



EC-M-P — Rear View

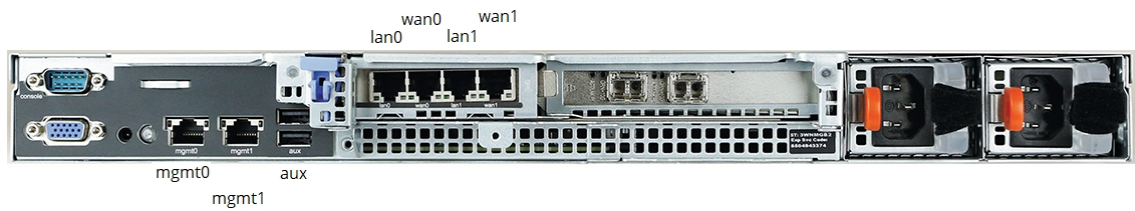

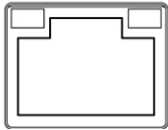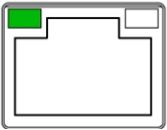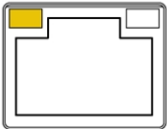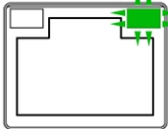mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

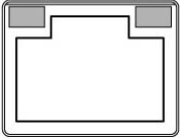

LED		lan0/wan0/lan1/wan1
Rear LEDs Link Activity 	Speed	SPEED • Green solid = Connection speed is 1000 Mbps • Amber solid = Connection speed is 100 Mbps or 10 Mbps
	Link/ACT	• Greenblinking Note: In some models, the activity LED will not illuminate in disconnect mode.

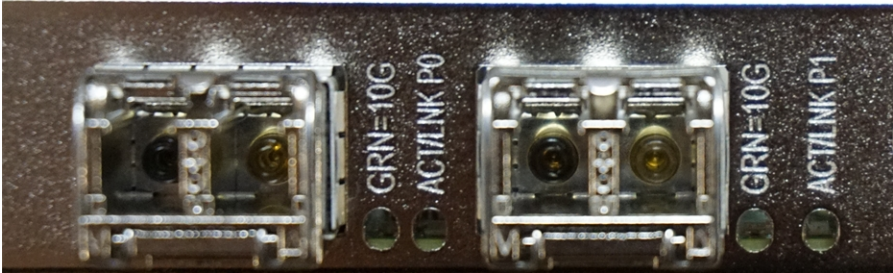1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	


Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-M-B [PN 201553]

EC-M-B	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	





EC-M-B — Front View

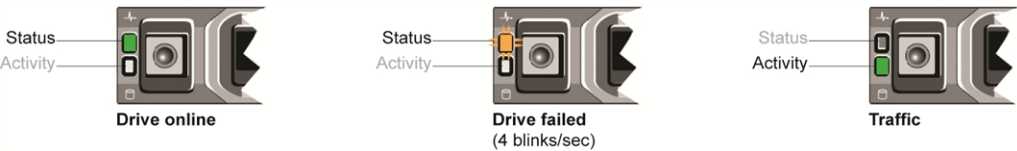


EC-M-B — Rear View

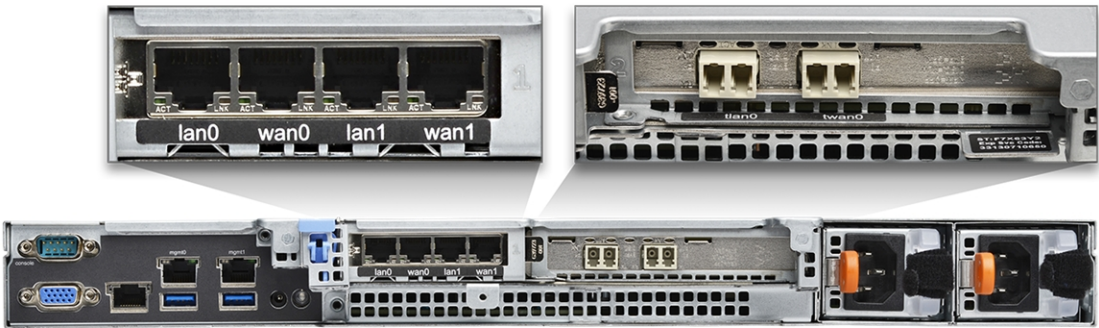

Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

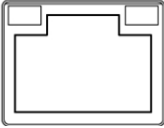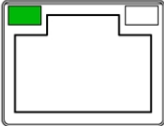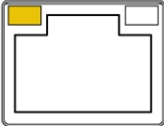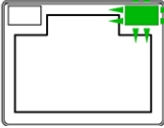mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

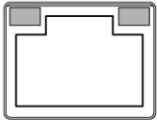LED	lan0/wan0/lan1/wan1	
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic



1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
TX ACT LNK RX BYP/ DISC TX ACT LNK RX NRM=OFF DISC=YLW BYP=GRN			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-M-P [PN 201552] & EC-M-P-FIPS* [PN 201634]


EC-M-P & EC-M-P-FIPS	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes*	yes	
Hot swappable?	yes*	yes	

* FIPS appliance (140-2 Level 2) disks cannot be replaced in the field. EC-M-P-FIPS disks are covered with a Tamper Evident Label. If a disk fails on one of these appliances, the entire unit must be returned (RMA).


EC-M-P — Front View

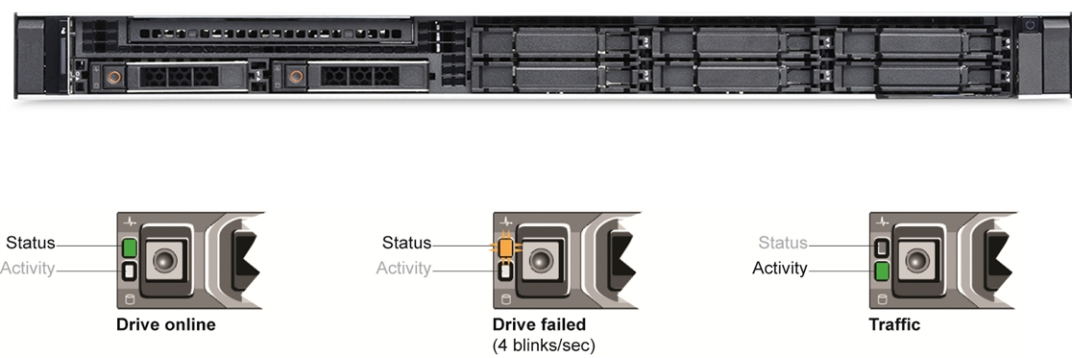





EC-M-P — Rear View with SFP+ Modules

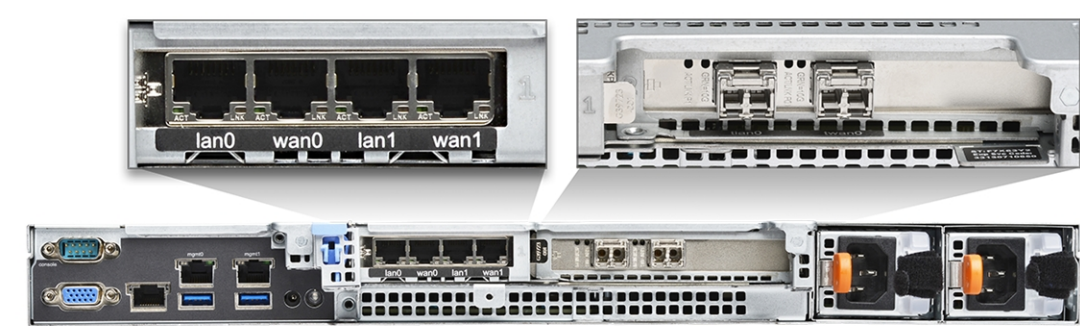


EC-M-P — Rear View without SFP+ Modules

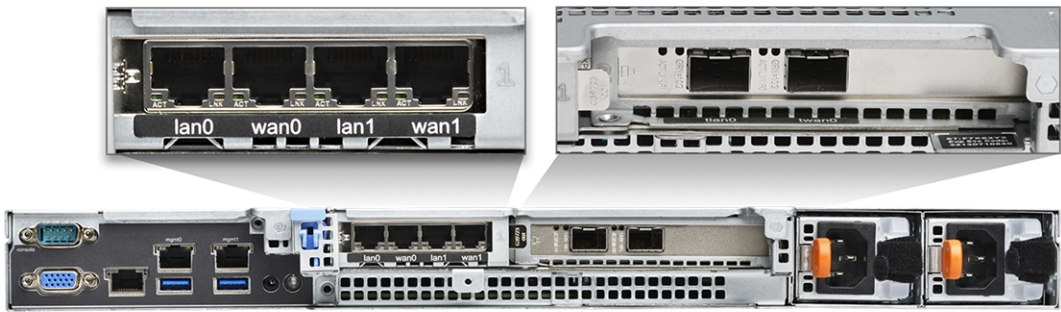


Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

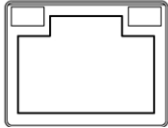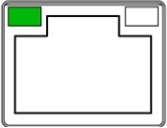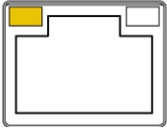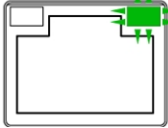mgmt0 & mgmt1			
LinkActivity 	LinkActivity 	LinkActivity 	LinkActivity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

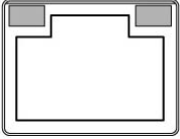

LED		lan0/wan0/lan1/wan1
Rear LEDs Link Activity 	Speed	SPEED • Greensolid = Connection speed is 1000 Mbps • Ambersolid = Connection speed is 100 Mbps or 10 Mbps
	Link/ACT	• Greenblinking

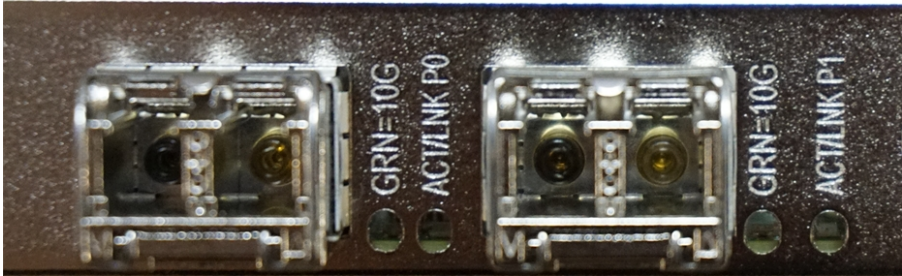1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-M-H AC [PN 201762]

EC-M-H AC	SSD	Power Supply
Quantity	2	2
User authorized to replace?	no	yes
Hot swappable?	--	yes

EC-M-H AC— Front View without transceivers


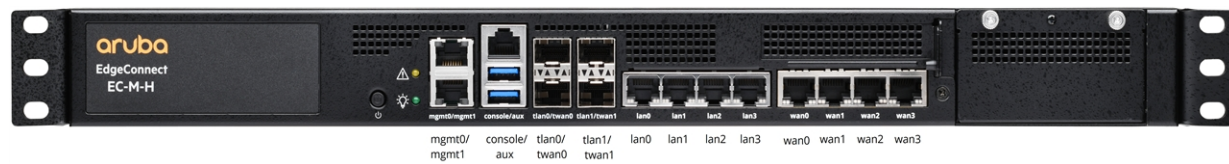


EC-M-H AC— Front View with transceivers

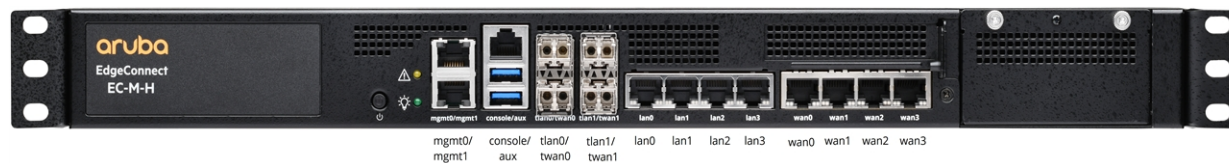


EC-M-H AC — Rear View (Dual Power Supply)

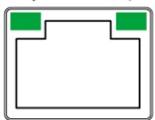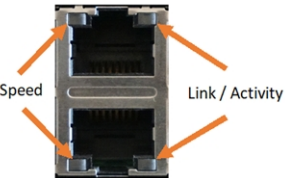

View	LED	Definition
Front LEDs Alert Power 	Alert	Amber = any critical sensor threshold or critical discrete sensor events (e.g. processor thermal trip, PSU failure, etc.) occur
	Power	Green = Operational state is normal
Rear LEDs Link/ Activity Speed 	Speed	Green = Connection speed is 1000 Mbps Amber = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Green solid = Port is active Green blinking = There is traffic
mgmt0/1 LEDs 	Speed	Green = Connection speed is 1000 Mbps Amber = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

1/10 Gbps Fiber Interfaces

This applies when the optional fiber module is installed.

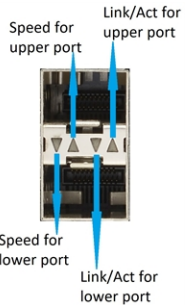tlan0/twan0	Status	LEDs
	Speed	Green = Connection speed is 10 Gbps Amber = Connection speed is 1 Gbps
	Link	Green solid = Port is active Green blinking = There is traffic



EC-L [PN 200883]

EC-L	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-L — Front View

Power LED [green = ON]




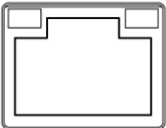


Diagram illustrating the status of the drive LEDs:


- Drive online:** Status LED is green, Activity LED is green.
- Drive failed (4 blinks/sec):** Status LED is orange, Activity LED is orange.
- Traffic:** Status LED is green, Activity LED is green.


EC-L — Rear View

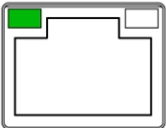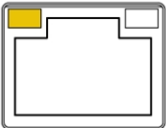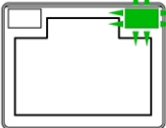

mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

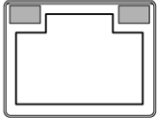

LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

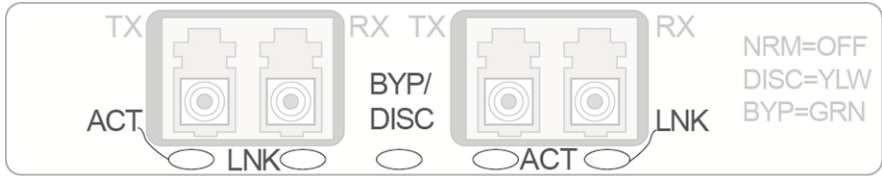
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-L-B [PN 201270]

EC-L-B	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-L-B — Front View




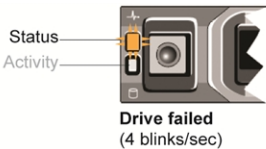



EC-L-B — Rear View

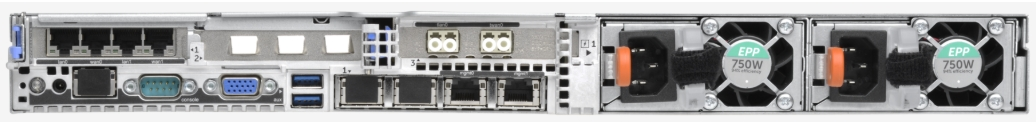


Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

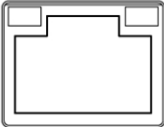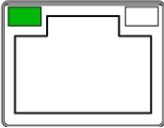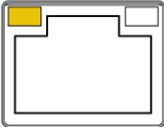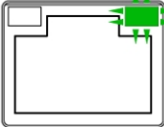

mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

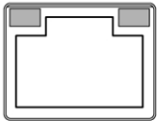LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

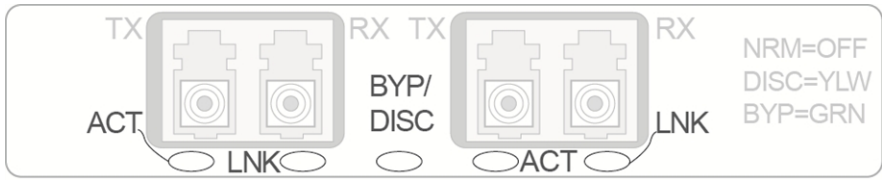
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	



EC-L-P [PN 201305]

EC-L-P	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-L-P— Front View




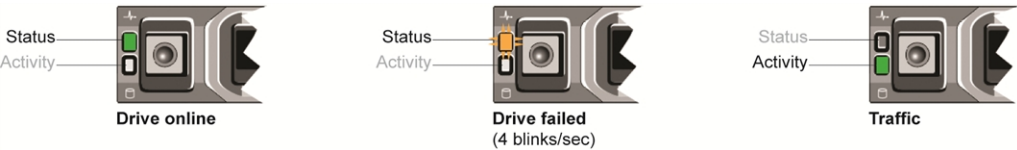



EC-L-P — Rear View



Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

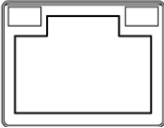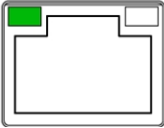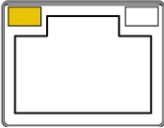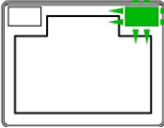

mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

LED		lan0/wan0/lan1/wan1
Rear LEDs Link Activity 	Speed	SPEED Green solid = Connection speed is 1000 Mbps Amber solid = Connection speed is 100 Mbps or 10 Mbps
	Link/ACT	Green blinking

1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules



Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.



EC-L-NM [PN 200887]





EC-L-NM	SSD	Power Supplies	Disk Layout
Quantity	8	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	


EC-L-NM — Front View

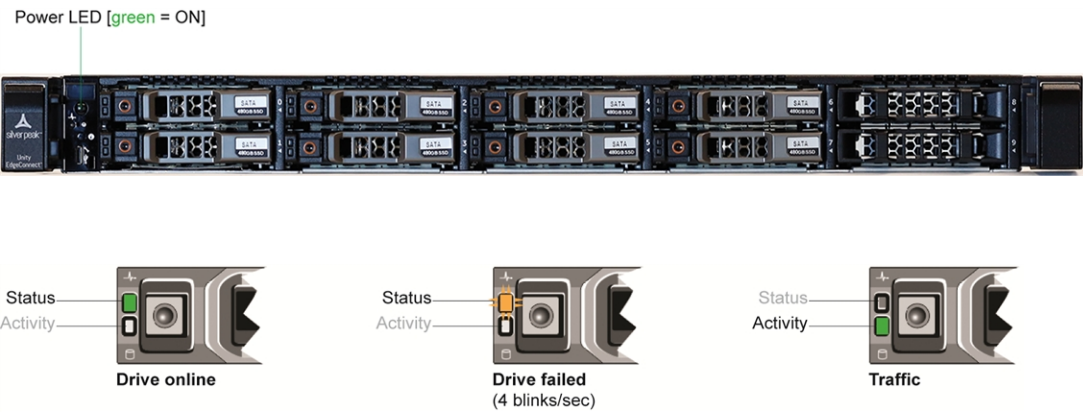


EC-L-NM — Rear View

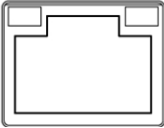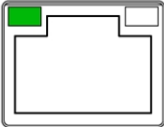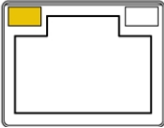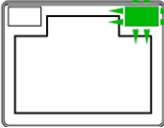

mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

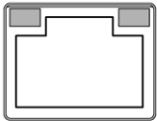LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

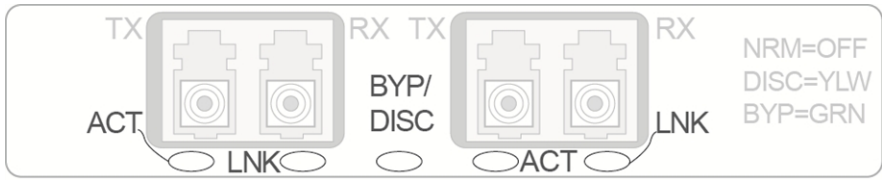
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	



EC-L-B-NM [PN 201272]

EC-L-B-NM	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	

EC-L-B-NM— Front View




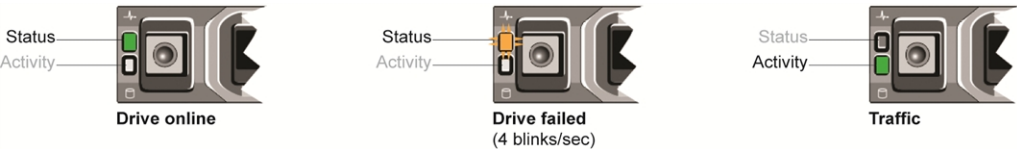



EC-L-B-NM— Rear View




Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

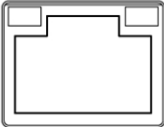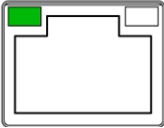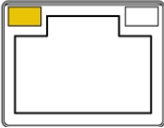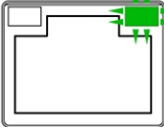

mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

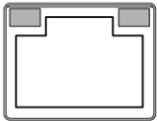LED		lan0/wan0/lan1/wan1
Rear LEDs Speed / Bypass / Disconnect Link / Activity 	Speed / Bypass / Disconnect	SPEED Yellow solid = Connection speed is 1000 Mbps Green solid = Connection speed is 100 Mbps Not illuminated = Connection speed is 10 Mbps Bypass/Disconnect Green blinking = Bypass Yellow linking = Disconnect Note: In disconnect mode, the activity LED will not illuminate.
	Link/ACT	Green solid = Port is active Green blinking = There is traffic

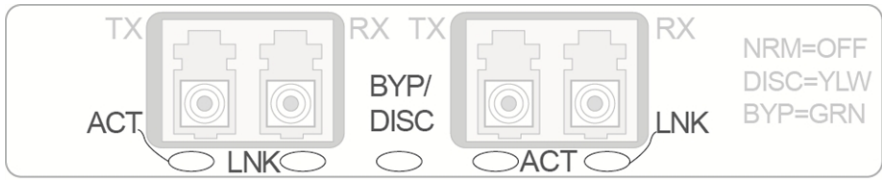
1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	



EC-L-P-NM [PN 201307]

EC-L-P-NM	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	

EC-L-P-NM— Front View




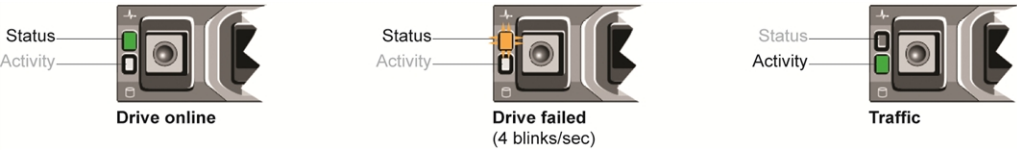


EC-L-P-NM— Rear View



Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

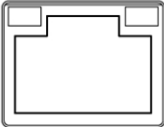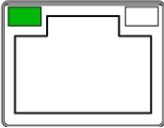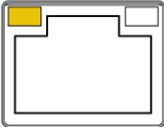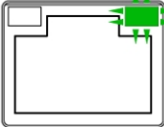

mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

LED		lan0/wan0/lan1/wan1
Rear LEDs	Speed	SPEED Green solid = Connection speed is 1000 Mbps Amber solid = Connection speed is 100 Mbps or 10 Mbps
	Link/ACT	Green blinking

1/10 Gbps fiber interfaces for lan0/twan0 — SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-L-H [PN 201754]

EC-L-H	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-L-H — Front View




SATA SSD

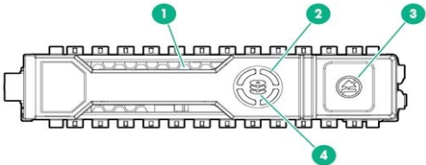




Item	LED	Status	Definition
1	Locate	No LED	Initialize On and Off Immediately
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	No Not Remove	No LED	Initialize On and Off Immediately
		Off	Removing the drive does not cause a logical drive to fail.
4	Drive Status	No LED	Initialize On and Off Immediately
		Off	The Drive is not configured by RAID controller.



EC-L-H — Rear View

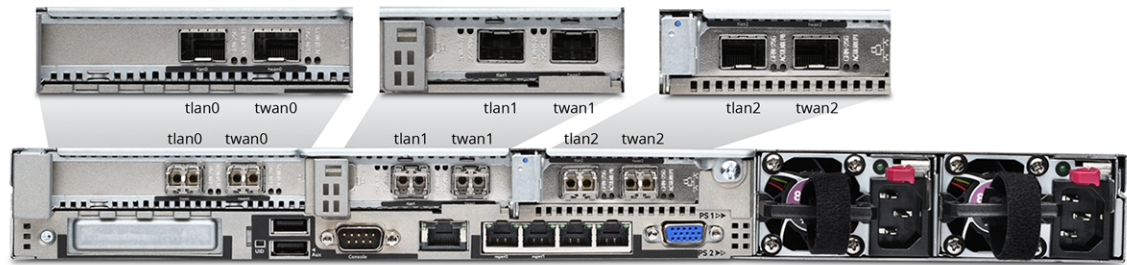


Front Panel LEDs		LED and ConditionF
	UID Button / LED	• Off = Deactivated
	Power On / Standby button and system power LED	• Solid Green = System on • Flashing Green = Performing Power On sequence • Amber = System in Standby • Off = No power present
	Health LED	• Solid Green = Normal • Flashing Green = ILO is rebooting • Flashing Amber = System degraded • Flashing Red = System critical
	NIC Status LED	• Solid Green = Link to network • Flashing Green = Network active • Off = No network activity

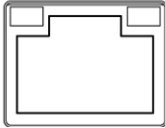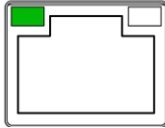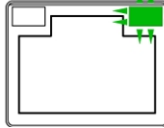mgmt0 & mgmt1		
LinkActivity 	LinkActivity 	LinkActivity 
No Network Activity	Link to Network	Network Active



1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules

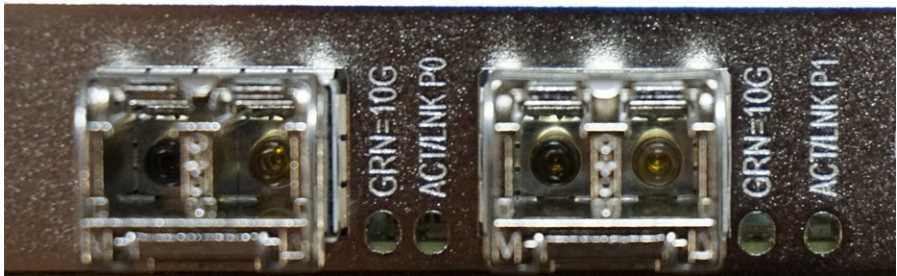

Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.



EC-XL [PN 200884]





EC-XL	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-XL — Front Views

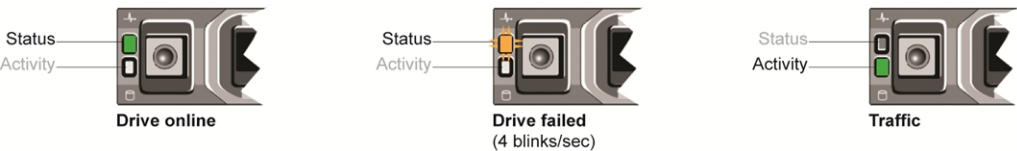

EC-XL — Rear View

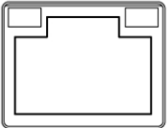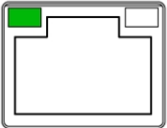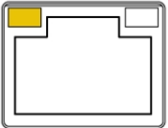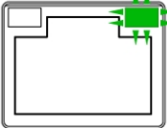

mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic




1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 — SR (Short Reach) Modules [Fixed Ports]			
TX ACT LNK RX BYP/ DISC TX ACT LNK RX NRM=OFF DISC=YLW BYP=GRN			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	



EC-XL-B [PN 201271]

EC-XL-B	SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	

EC-XL-B — Front Views




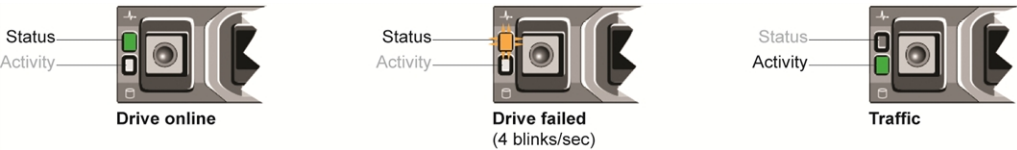



EC-XL-B — Rear View



Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

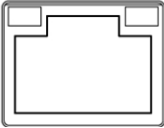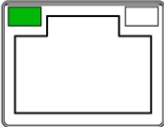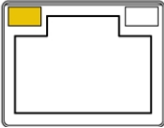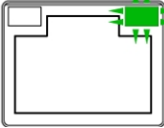

mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

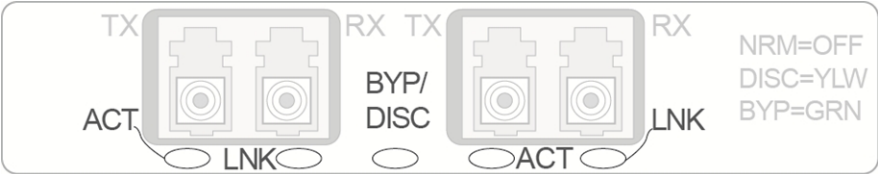1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 — SR (Short Reach) Modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-XL-P [PN 201306] & EC-XL-P-FIPS* [PN 201449]

EC-XL-P & EC-XL-P-FIPS	Drives SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes*	yes	
Hot swappable?	yes*	yes	

* FIPS appliance (140-2 Level 2) disks cannot be replaced in the field. EC-XL-P-FIPS disks are covered with a Tamper Evident Label. If a disk fails on one of these appliances, the entire unit must be returned (RMA).

EC-XL-P — Front Views




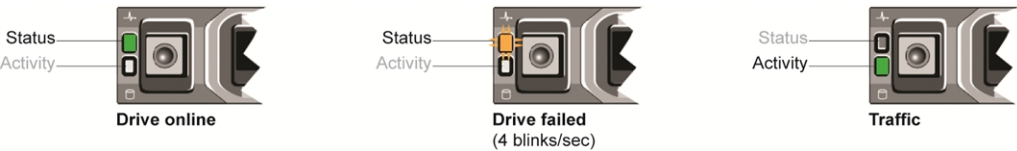



EC-XL-P — Rear View



Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

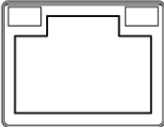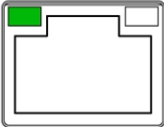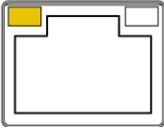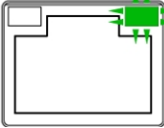

mgmt0 & mgmt1			
Link Activity 	Link Activity 	Link Activity 	Link Activity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

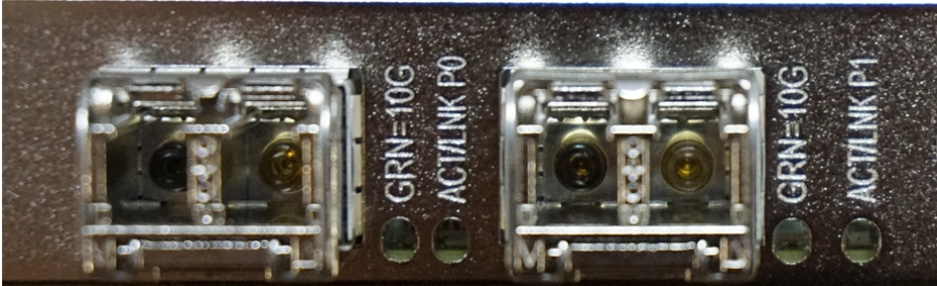1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-XL-P [PN 201632]

EC-XL-P	Drives SSD	Power Supplies	Disk Layout
Quantity	2	2	
User authorized to replace?	yes	yes	
Hot swappable?	yes	yes	





EC-XL-P — Front Views

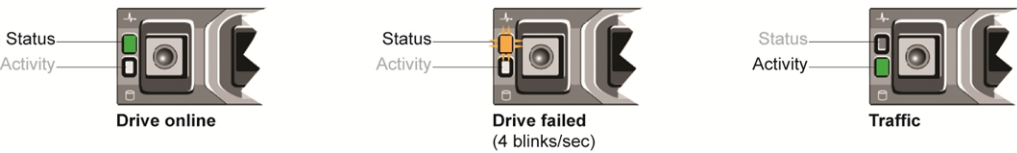


EC-XL-P — Rear View

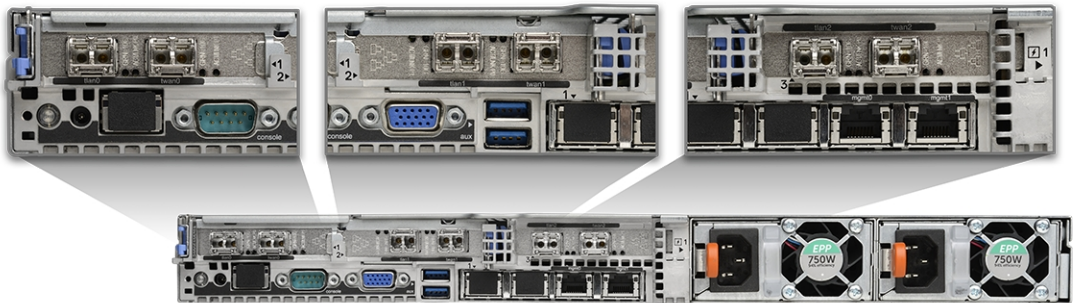

Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

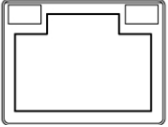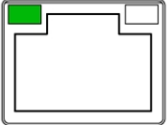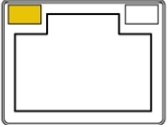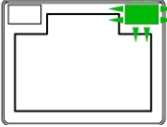mgmt0 & mgmt1			
Link 	Activity 	Link 	Link 
Not connected	Connected at max speed	Connected at lower speed	Traffic

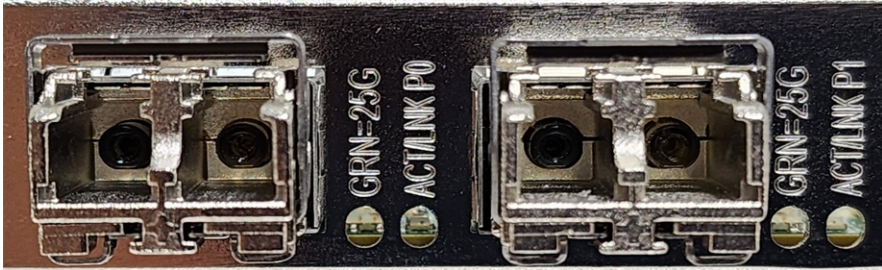25/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1/tlan2/twan2 SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		25G	10G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimers

- The appliance supports SFP+ and SFP28 transceivers.
- When changing transceivers or link speed, there is a 30 to 60 second wait time before links are established.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-XL-NM [PN 200888]

EC-XL-NM	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	4	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	





EC-XL-NM — Front View


Power LED [green = ON]

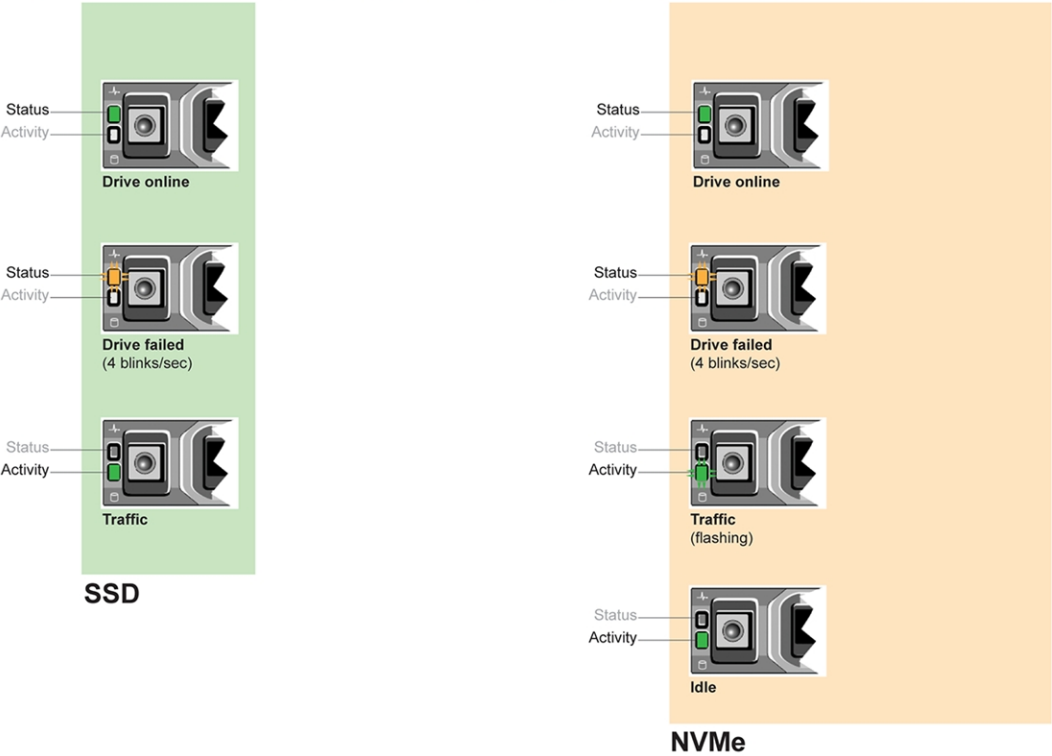

EC-XL-NM — Rear View

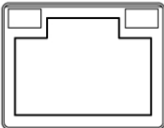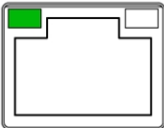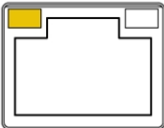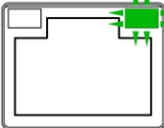

mgmt0 & mgmt1			
Link 	Activity 	Link 	Link 
Not connected	Connected at max speed	Connected at lower speed	Traffic

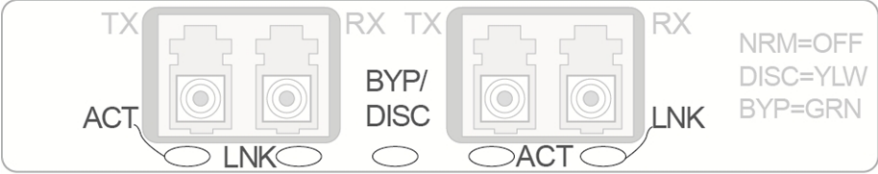
1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 — SR (Short Reach) Modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	



EC-XL-B-NM [PN 201273]

EC-XL-B-NM	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	

EC-XL-B-NM — Front Views




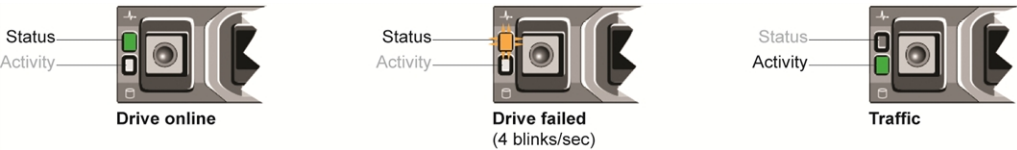



EC-XL-B-NM — Rear View



Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

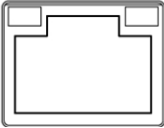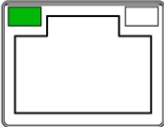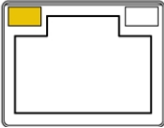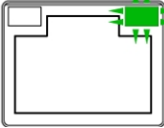

mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

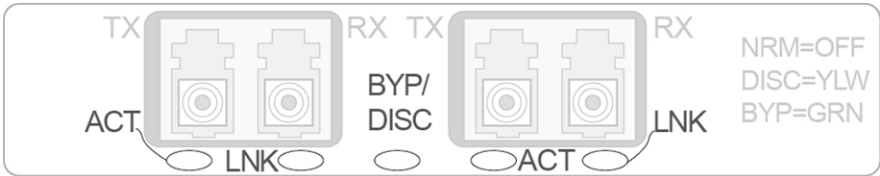1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 — SR (Short Reach) Modules [Fixed Ports]			
			
Indicator		10G	1G
LNK	Link	blue solid	green solid
ACT	Activity	green blinking	
BYPASS	Bypass	green solid	
DISC	Disconnect	yellow solid	
NRM	Normal	off — In NRM mode, the ports are independent interfaces	




EC-XL-P-NM [PN 201308] & EC-XL-P-NM-FIPS* [PN 201659]

EC-XL-P-NM & EC-LX-NM-FIPS	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes*		yes	
Hot swappable?	yes*		yes	

* FIPS appliance (140-2 Level 2) disks cannot be replaced in the field. EC-XL-P-NM-FIPS disks are covered with a Tamper Evident Label. If a disk fails on one of these appliances, the entire unit must be returned (RMA).

EC-XL-P-NM — Front Views




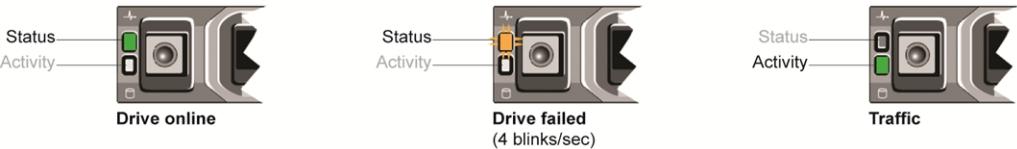



EC-XL-P-NM — Rear View



Front System LED	LED and Condition
	Solid blue = Indicates that the system is turned on and is in normal operation.
	Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

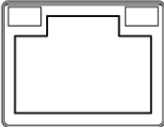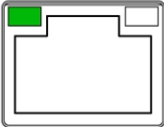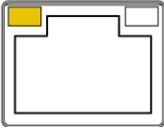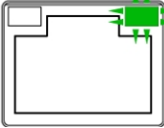

mgmt0 & mgmt1			
LinkActivity 	LinkActivity 	LinkActivity 	LinkActivity 
Not connected	Connected at max speed	Connected at lower speed	Traffic

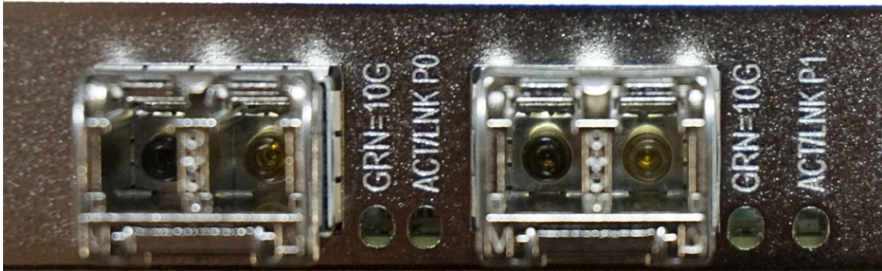1/10 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1 — SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance does not support SFP28 transceivers.


Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-XL-P-NM [PN 201633]

EC-XL-P-NM	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	





EC-XL-P-NM — Front Views

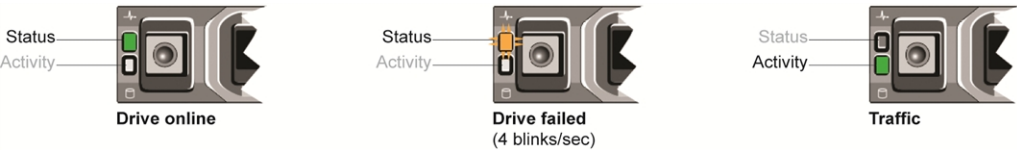


EC-XL-P-NM — Rear View

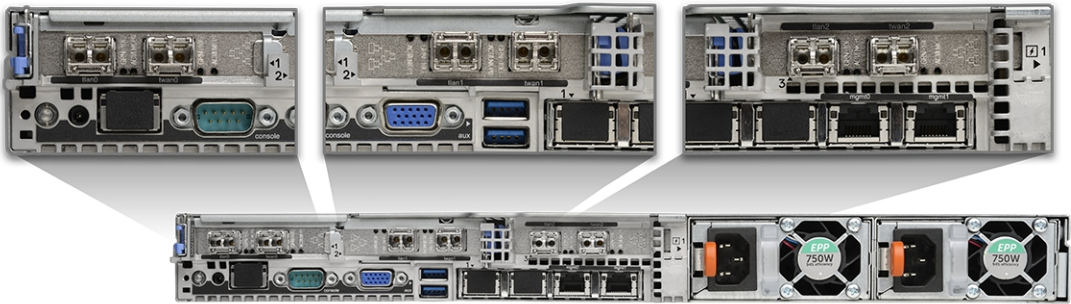

Front System LED	LED and Condition
	• Solid blue = Indicates that the system is turned on and is in normal operation.
	• Amber = Indicates the system is experiencing a fault or a warning. Contact Tech Support.

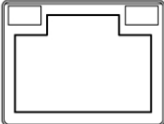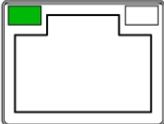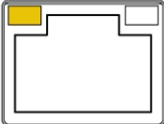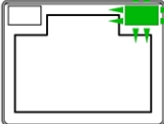mgmt0 & mgmt1			
Link Activity	Link Activity	Link Activity	Link Activity
			
Not connected	Connected at max speed	Connected at lower speed	Traffic

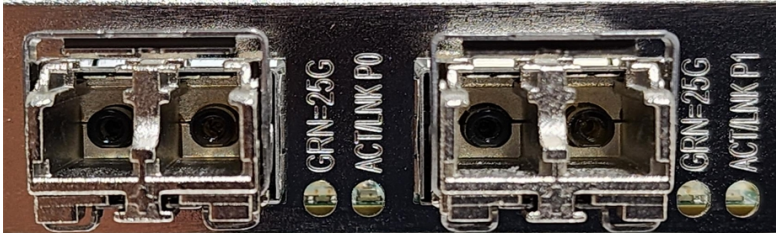10/25 Gbps fiber interfaces for tlan0/twan0/tlan1/twan1/tlan2/twan2/ — SR (Short Reach) & LR (Long Reach) modules			
			
Indicator		25G	10G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimers

- The appliance supports SFP+ and SFP28 transceivers.
- When changing transceivers or link speed, there is a 30 to 60 second wait time before links are established.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-XL-H [PN 201756]

EC-XL-H	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	

EC-XL-H – Front View



SATA SSD

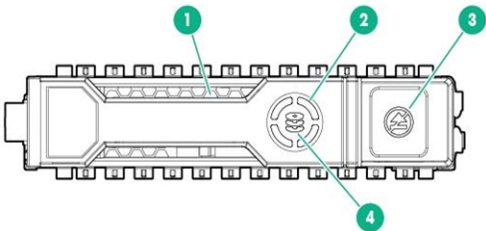


Item	LED	Status	Definition
1	Locate	No LED	Initialize On and Off Immediately
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	No Not Remove	No LED	Initialize On and Off Immediately
		Off	Removing the drive does not cause a logical drive to fail.
4	Drive Status	No LED	Initialize On and Off Immediately
		Off	The Drive is not configured by RAID controller.



NVMe Drive

The NVMe SSD is a PCIe bus device. A device attached to a PCIe bus cannot be removed without allowing the device and bus to complete and cease the signal/traffic flow.


CAUTION Do not remove an NVMe SSD from the drive bay while the Do not remove LED is flashing. The Do not remove LED flashes to indicate that the device is still in use. Removing the NVMe SSD before the completed and ceased signal/traffic flow can cause loss of data.

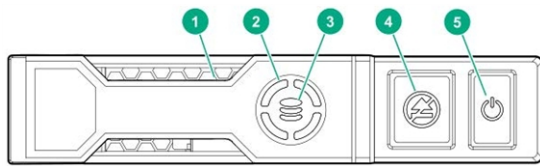




Item	LED	Status	Definition
1	Locate	No LED	Initialize On and Off Immediately
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	Drive Status	Flashing Green	Initialize On and Off Immediately
4	No Not Remove	Solid White	Do not remove the drive. The drive must be ejected from the PCI3 bus prior to removal.
		Flashing White	The drive rejection request is pending.
		Off	The drive has been ejected.
5	Power	Solid Green	Do not remove the drive. The drive must be ejected from the PCI3 bus prior to removal.
		Flashing Green	The drive rejection request is pending.
		Off	The drive has been ejected.



EC-XL-H — Rear View

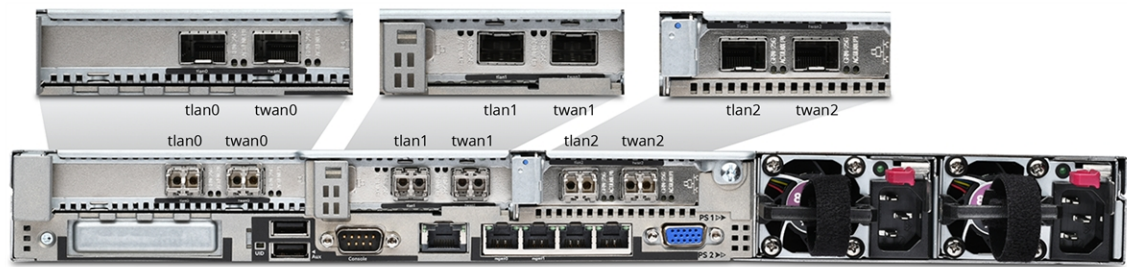


Front Panel LEDs		LED and ConditionF
	UID Button / LED	• Off = Deactivated
	Power On / Standby button and system power LED	• Solid Green = System on • Flashing Green = Performing Power On sequence • Amber = System in Standby • Off = No power present
	Health LED	• Solid Green = Normal • Flashing Green = ILO is rebooting • Flashing Amber = System degraded • Flashing Red = System critical
	NIC Status LED	• Solid Green = Link to network • Flashing Green = Network active • Off = No network activity

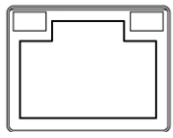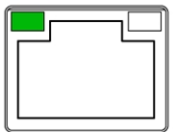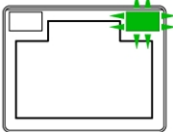mgmt0 & mgmt1		
LinkActivity 	LinkActivity 	LinkActivity 
No Network Activity	Link to Network	Traffic



10/25 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules

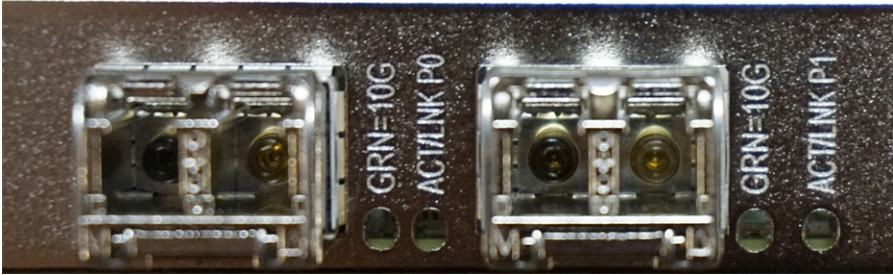

Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance supports SFP+ and SFP28 transceivers.
- When changing transceivers or link speed, there is a 30 to 60 second wait time before links are established.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.




EC-XL-H-10G [PN 201915]

EC-XL-H-10G	SSD	NVMe	Power Supplies	Disk Layout
Quantity	2	2	2	
User authorized to replace?	yes		yes	
Hot swappable?	yes		yes	

EC-XL-H-10G — Front View



SATA SSD

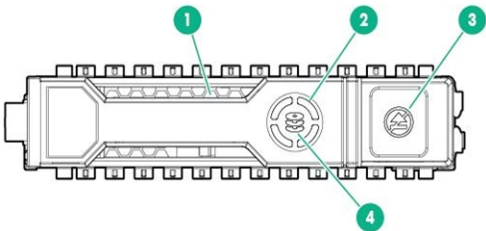


Item	LED	Status	Definition
1	Locate	No LED	Initialize On and Off Immediately
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	No Not Remove	No LED	Initialize On and Off Immediately
		Off	Removing the drive does not cause a logical drive to fail.
4	Drive Status	No LED	Initialize On and Off Immediately
		Off	The Drive is not configured by RAID controller.



NVMe Drive

The NVMe SSD is a PCIe bus device. A device attached to a PCIe bus cannot be removed without allowing the device and bus to complete and cease the signal/traffic flow.


CAUTION Do not remove an NVMe SSD from the drive bay while the Do not remove LED is flashing. The Do not remove LED flashes to indicate that the device is still in use. Removing the NVMe SSD before the completed and ceased signal/traffic flow can cause loss of data.

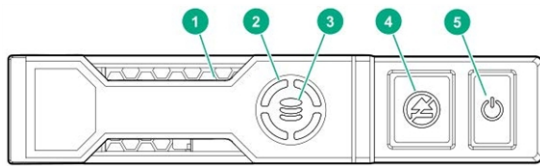

Item	LED	Status	Definition
1	Locate	No LED	Initialize On and Off Immediately
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	Drive Status	Flashing Green	Initialize On and Off Immediately
4	No Not Remove	Solid White	Do not remove the drive. The drive must be ejected from the PCI3 bus prior to removal.
		Flashing White	The drive rejection request is pending.
		Off	The drive has been ejected.
5	Power	Solid Green	Do not remove the drive. The drive must be ejected from the PCI3 bus prior to removal.
		Flashing Green	The drive rejection request is pending.
		Off	The drive has been ejected.



EC-XL-H-10G — Rear View

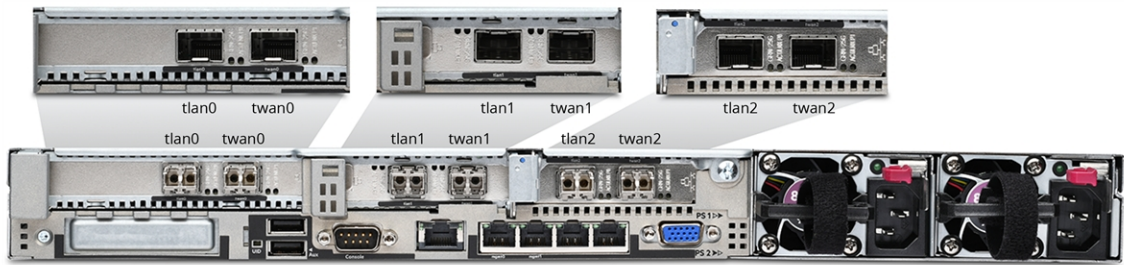

Front Panel LEDs		LED and ConditionF
	UID Button / LED	• Off = Deactivated
	Power On / Standby button and system power LED	• Solid Green = System on • Flashing Green = Performing Power On sequence • Amber = System in Standby • Off = No power present
	Health LED	• Solid Green = Normal • Flashing Green = ILO is rebooting • Flashing Amber = System degraded • Flashing Red = System critical
	NIC Status LED	• Solid Green = Link to network • Flashing Green = Network active • Off = No network activity

mgmt0 & mgmt1		
LinkActivity	LinkActivity	LinkActivity
No Network Activity	Link to Network	Traffic



1/10 Gbps fiber interfaces for tlan0/twan0 — SR (Short Reach) & LR (Long Reach) modules

Indicator		10G	1G
LNK	Link	green solid	yellow solid
ACT	Activity	green blinking	

Disclaimer

- The appliance supports SFP and SFP+ transceivers.
- When changing transceivers or link speed, there is a 30 to 60 second wait time before links are established.

Refer to [Pluggable Transceivers in EdgeConnect on page 119](#) for a list of approved transceivers and third party transceivers that are validated and qualified for use in EdgeConnect appliances.



USB LTE Modem [R8F34A]

USB LTE Modem — Front View



USB LTE Modem — Rear View



tlan0/twan0	Status
	Green = Cellular link made.
	Orange = Power but no cellular link.

Refer to the **USB LTE Modem datasheet** for more details.



EdgeConnect Airflow



Model	Part Number	Airflow Direction
EC-XS	201571	Right to Left panel
EC-10106	3510325	
EC-10108	3510326	



Model	Part Number	Airflow Direction
EC-S-P AC	201687	Front to Rear panel
EC-S-P DC	201743	
EC-M-H	201762	



Model	Part Number	Airflow Direction
EC-L-H	201754	Fron to Rear panel
EC-XL-H	201756	
EC-XL-H-10G	201915	



Pluggable Transceivers in EdgeConnect

This section provides information about pluggable transceivers that are approved (fully supported) and qualified (not fully supported) for use in certain EdgeConnect appliance models.

3rd party Transceiver Support Policy

HPE Networking utilizes a rigorous process for certifying pluggable transceivers for operation within EdgeConnect platforms. HPE Networking Technical Assistance Center (TAC) provides full support for customers utilizing HPE Networking-supplied transceivers that are designed for operations in EdgeConnect, as well as those 3rd party transceivers that are identified in our Hardware Reference Guide and which are certified for operation within EdgeConnect. HPE Networking will provide limited technical support for transceivers that are not procured through HPE Networking and which are not on the certified list. This support is limited to normalizing configuration related issues, but does not include root cause analysis and diagnosis, and thus may or may not resolve the issue nor guarantee a successful outcome. TAC will likely request that you check the 3rd-party transceiver module and, if required, replace it with a certified component.

For ensuring consistent operations and support, HPE Networking highly recommends customers utilize HPE Networking -supplied transceiver designed for EdgeConnect operations or procure only certified 3rd party transceivers listed in the following sections.



Approved Transceivers

Single-rate 1G SFP, 10G SFP+, 25G SFP28, and dual-rate 1/10G optical SFP+ and 10/25G optical SFP28 transceivers are available for certain EdgeConnect appliances. These transceivers go through an internal qualification process and are customized to operate with EdgeConnect software. These transceivers are recommended for use with EdgeConnect appliances that support pluggable transceivers.

Dual-Rate Transceivers

Vendor	Model	Part Number	EC-M-H EC-S-P	EC-L-H EC-L-P EC-L-P-NM EC-M-P EC-XL-H-10G	EC-XL-P EC-XL-P-NM EC-XL-H
SFP28 - SR Modules					
Finisar	SFP28 SRD (Dual Rate: 25GBase-SR, 10GBase-SR)	FTLF8536P4BCVSPK_Rev B	X	X	✓
Finisar	SFP28 SRD (Dual Rate: 25GBase-SR, 10GBase-SR)	FTLF8536P4BCVASP	X	X	✓
SFP28 - LR Modules					
Finisar	SFP28 SRD (Dual Rate: 25GBase-LR, 10GBase-LR)	FTLF1436P3BCVSPK_Rev B	X	X	✓
Finisar	SFP28 SRD (Dual Rate: 25GBase-LR, 10GBase-LR)	FTLF1436P3BCVASP	X	X	✓
SFP+ - SR Modules					
Avago	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	AFBR-709DMZ-IN3	[1]	✓	[2]
Avago	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	AFBR-709DMZ-IN7	[1]	✓	[2]
Avago	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	AFBR-709DMZ	[1]	✓	[2]
Avago	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	AFBR-710DMZ-IN2	[1]	✓	[2]
Finisar	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	FTLX8574D3BCVASP	[1]	✓	[2]
Finisar	SFP+ - Dual Rate: 10GBase-SR, 1000Base-SX - SRD	FTLX8574D3BCV-ITL	X	[4]	X



Finisar	SFP+ - Dual Rate: 10GBase-SR,1000Base-SX - SRD	FTLX8574D3BCVSPK	X	[4]	X
SFP+ - LR Modules					
Avago	SFP+ - Dual Rate: 10GBase-LR,1000Base-LX - LRD	AFCT-739DMZ	[1]	✓	[2]
Finisar	SFP+ - Dual Rate: 10GBase- LR,1000Base-LX - LRD	FTLX1475D3BCVASP	[1]	✓	[2]
Finisar	SFP+ - Dual Rate: 10GBase-LR,1000Base-LX - LRD	FTLX1475D3BCV-ITL	X	[5]	X
Finisar	SFP+ - Dual Rate: 10GBase-LR,1000Base-LX - LRD	FTLX1475D3BCVSPK	X	[5]	X
Finisar	SFP+ - Dual Rate: 10GBase-LR,1000Base-LX - LRD	FTLX1471D3BCVSPK	X	[5]	X
SFP RJ45 Copper Single Rate					
Finisar	SFP - 1000BASE-T (RJ45 Copper)	FCLF8522P2BTL	X	✓	[3]

[1] 1Gb Auto-Negotiate needs to be disabled on switch side when operating at 1G

[2] 1Gb Auto-Negotiate needs to be enabled on switch side (Appliance and Switch may be set to 1Gb Full). If Auto Negotiation on the switch side cannot be enabled, we recommend using 10G SFP+ Transceivers instead of 1 SFP Transceivers.

[3] PN: 201306 (EC-XL-P), 201308 (EX-XL-P-NM), 201449 (EC-XL-P-FIPS), and 201659 (EC-XL-P-NM-FIPS) appliances are supported for the RJ45 Copper transceiver.

[4] PN: 201274 (EC-M-P), 201552 (EC-M-P), 201305 (EC-L-P), and 201307 (EC-L-P-NM) appliances are supported for the SFP+ Dual Rate 10/1 SR/SX transceiver.

[5] PN: 201274 (EC-M-P), 201552 (EC-M-P), 201305 (EC-L-P), and 201307 (EC-L-P-NM) appliances are supported for the SFP+ Dual Rate 10/1 LR/LX transceiver.



Single-Rate Transceivers

Part Number	Description	EC-10106 EC-10108	EC-10150
SFP+ - SR Modules			
J9150D	Aruba 10G SFP+ LC SR 300m MMF XCVR	[1]	✓
SFP+ - LR Modules			
J9151E	Aruba 10G SFP+ LC LR 10km SMF XCVR	[1]	✓
SFP - SX Modules			
J4858D	Aruba 1G SFP LC SX 500m MMF XCVR	[2]	[3]
SFP - LX Modules			
J4859D	Aruba 1G SFP LC LX 10km SMF XCVR	[2]	[3]
SFP - SX Modules (TAA)			
JL745A	Aruba 1G SFP LC SX 500m MMF TAA XCVR	[2]	[3]
SFP - LX Modules (TAA)			
JL746A	Aruba 1G SFP LC LX 10km SMF TAA XCVR	[2]	[3]
SFP - RJ45 Copper			
S3R03A	HPE ANW EC 1G SFP RJ45 100m XCVR	[1]	✓
SFP+ - RJ45 Copper			
JL563C	Aruba 10G Base-T SFP+ RJ45 30m Cat6A XCV (I Temp)	X	X
SFP28 - SR Modules			
JL484A	Aruba 25G SFP28 LC SR 100m MMF XCVR	X	✓
SFP28 - LR Modules			
JL486A	Aruba 25G SFP28 LC LR 10km SMF XCVR	X	✓
SFP+ - DAC Cables			
J9281D	Aruba 10G SFP+ to SFP+ 1m DAC Cable	[4] & [5]	[4]
J9283D	Aruba 10G SFP+ to SFP+ 3m DAC Cable	[4] & [5]	[4]
SFP28 - DAC Cable			
JL489A	Aruba 25G SFP28 to SFP28 5m DAC Cable	X	✓

IMPORTANT!!! Set port speed to match transceiver module speed on the EC appliance setting

[1] Only works in WAN0 and WAN1.

[2] Enable Auto-negotiation on the Link Partner device. If Auto-negotiation on the Link Partner is non-configurable and is disabled, do one of the following:

- If the Link Partner device supports only 1Gb links:



- The 1Gb fiber Transceiver cannot be used on wan0 or wan1 ports. In this case, we recommend using the 1Gb fiber Transceiver on either wan2-sfp or lan2-sfp ports.
- The 1Gb copper Transceiver can be used on wan0 or wan1 ports. The recommended 1Gb Copper transceiver is S3R03A.
- If the Link Partner device is 10Gb capable, connect the device to wan0/wan1 port using a 10Gb Transceiver.
 - lan2-sfp and wan2-sfp do not support 10Gb Transceivers.

If Auto negotiation on the switch side cannot be enabled, recommend using 10G SFP+ Transceivers instead of 1G SFP Transceivers.

[3] Enable Auto-negotiation on the Link Partner device. Set port speed to 1Gb on the EC appliance.

[4] Port speed needs to be set to match the speed of the supported installed transceiver.

[5] Link partner show link when “admin down” applied to the EC appliance.



3rd Party Qualified Transceivers

In situations that require the use of non-recommended transceivers, EdgeConnect does not inhibit 3rd party transceivers from operating but may not provide full visibility or monitoring capabilities for these transceivers. Such transceivers will be reported as “not supported” and alarms may not be reported properly.

The following is a list of 3rd party qualified transceivers that are validated and qualified to operate within EdgeConnect, but which are not fully supported:

Vendor	Model	Part Number	EC-M-P / EC-L-P / EC-L-P-NM
SFP - RJ45 Copper			
Avago	SFP - 1000BASE-T (RJ45 Copper)	ABCU-5710RZ	✓



Single Rate TAA Transceiver

Transceiver SKU	Description	EC-S-P EC-M-H	EC-L-H EC-M-P EC-XL-H-10G	EC-XL-H	EC-XL-P EC-XL-P-NM	EC-10106 EC-10108	EC-10150
JL745A	Aruba 1G SFP LC SX 500m MMF TAA XCVR	No	Yes	[1] & [2]	[1], [2], & [3]	[1]	Yes
JL746A	Aruba 1G SFP LC LX 10km SMF TAA XCVR	No	Yes	[1] & [2]	[1], [2], & [3]	[1]	Yes
JL748A	Aruba 10G SFP+ LC SR 300m MMF TAA XCVR	Yes	Yes	[2]	No	Yes	Yes
JL749A	Aruba 10G SFP+ LC LR 10km SMF TAA XCVR	Yes	Yes	[2]	No	Yes	Yes
S2N63A	HPE ANW 25G SFP LC LR 10km SMF TAA XCVR	X	X	[2]	{2}	X	Yes

IMPORTANT!!! Set port speed to match transceiver module speed on the EC appliance setting

[1] Auto-Negotiate needs to be enabled

[2] Link partner still shows link when "admin down" applied to the EC.

[3] EC-XL-P 25Gb TLAN1/TWAN1 does not support 1Gb:



Orderable SKU

Product Name	SKU	Description	EC-S-P EC-M-H	EC-L-H EC-M-P EC-XL-H-10G	EC-XL-H EC-XL-P EC-XL-P-NM
EC-SFP-SR	JM535A	Aruba EC-SFP-SR Multi Mode SFP	Yes	Yes	Yes
EC-SFP-LR	JM534A	Aruba EC-SFP-LR Single Mode SFP	Yes	Yes	Yes
EC-SFP28-25G-SR	JM533A	Aruba EC-SFP28-25G-SR Multi Mode	No	No	Yes
EC-SFP28-25G-LR	JM532A	Aruba EC-SFP28-25G-LR Single Mode	No	No	Yes
EC-SFP-1000BT	R9Y49A	Aruba EC-SFP-1000BT Copper	No	Yes	No

SKU / Product Name	Description	EC-10106 EC-10108	EC-10150
J9150D	Aruba 10G SFP+ LC SR 300m MMF XCVR	Yes	Yes
J9151E	Aruba 10G SFP+ LC LR 10km SMF XCVR	Yes	Yes
J4858D	Aruba 1G SFP LC SX 500m MMF XCVR	Yes	Yes
J4859D	Aruba 1G SFP LC LX 10km SMF XCVR	Yes	Yes
JL745A	Aruba 1G SFP LC SX 500m MMF TAA XCVR	Yes	Yes
JL746A	Aruba 1G SFP LC LX 10km SMF TAA XCVR	Yes	Yes
S3R03A	HPE ANW EC 1G SFP RJ45 100m XCVR	Yes	Yes
J9281D	Aruba 10G SFP+ to SFP+ 1m DAC Cable	Yes	Yes
J9283D	Aruba 10G SFP+ to SFP+ 3m DAC Cable	Yes	Yes
JL484A	Aruba 25G SFP28 LC SR 100m MMF XCVR	No	Yes
JL486A	Aruba 25G SFP28 LC LR 10km SMF XCVR	No	Yes
JL489A	Aruba 25G SFP28 to SFP28 5m DAC Cable	No	Yes
JL745A	Aruba 1G SFP LC SX 500m MMF TAA XCVR	Yes	Yes
JL746A	Aruba 1G SFP LC LX 10km SMF TAA XCVR	Yes	Yes
JL748A	Aruba 10G SFP+ LC SR 300m MMF TAA XCVR	Yes	Yes
JL749A	Aruba 10G SFP+ LC LR 10km SMF TAA XCVR	Yes	Yes
S2N63A	HPE ANW 25G SFP LC LR 10km SMF TAA XCVR	Yes	Yes

Use the SKU when placing the order through HPE systems and use the Product Name when placing the order through Silver Peak systems.



Installing a Fiber Interface Transceiver


The following fiber-interface appliance models support SR (Short Reach) and LR (Long Reach) transceivers.

IMPORTANT Users may experience WAN port link failures on EC-10150 devices when switching between different transceiver media types, specifically from RJ45 to fiber. The issue is caused by a driver failing to set the PHY configuration correctly during media swaps, leading to persistent link down states that only power cycling can recover; a simple reboot will not resolve the issue.

SFP+ Optical Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-M-P	201274 201552	1/10 Gbps (Dual Rate)	AFBR-709DMZ-IN3 – SR – Short Reach / SX – Short
EC-M-P-FIPS	201634		AFBR-709DMZ-IN7 – SR – Short Reach / SX – Short
EC-M-H AC	201762		AFBR-709DMZ – SR – Short Reach / SX – Short
EC-L-P	201305		AFBR-710DMZ-IN2 – SR – Short Reach / SX – Sort
EC-L-P-NM	201307		
EC-L-H	201754		AFCT-739DMZ – LR – Long Reach / LX – Long
EC-XL-P	201306		FTLX8574D3BCVASP– SR – Short Reach / SX – Short
EC-XL-P-FIPS	201449		FTLX1475D3BCVASP – LR – Long Reach / LX – Long
EC-XL-P-NM	201308		
EC-XL-P-NM-FIPS	201659		
EC-S-P AC	201687	1/10 Gbps (Dual Rate)	
EC-S-P DC	201743		
EC-XL-P	201632		
EC-X L-P-NM	201633		
EC-XL-H	201756		
EC-XL-H-10G	201915		

SFP Optical Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-10106	3510325	1 Gbps (Single Rate)	J4858D – SX – Short JL745A – SX – Short – TAA (Trade Agreements Act) J4859D – LX – Short JL746A – LX – Short – TAA (Trade Agreements Act)
EC-10108	3510326		
EC-10150	3510332		

SFP+ Optical Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-10106	3510325	10 Gbps (Single Rate)	J9150D – SR – Short Reach
EC-10108	3510326		JL748A – SR – Short Reach – TAA (Trade Agreements Act)
EC-10150	3510332		J9151E – LR – Long Reach JL749A – LR – Long Reach – TAA (Trade Agreements Act)

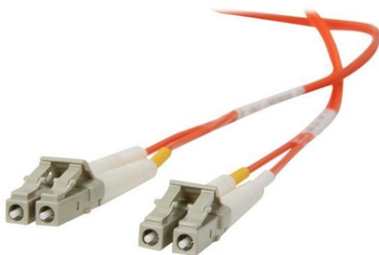SR (Short Reach) Fiber Interface	
	
Beige bail (handle) with beige connector	Duplex multimode 50/125 Fiber Patch Cable (LC/LC) to be used with SR (Short Reach)

LR (Long Reach) Fiber Interface	
	
Blue bail (handle) with blue connector	Duplex single mode 8.3/125 Fiber Patch Cable (LC/LC) to be used with LR (Long Reach)



These transceivers are hot-swappable.

WARNING If you don't turn off the power while replacing the transceiver, be sure to protect your eyes from exposure to the laser; be careful to avoid looking directly into the interface housing.

SFP28 Optical Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-XL-P	201632	25/10 Gbps (Dual Rate)	FTLF8536P4BCVASP – SR – Short Reach FTLF1436P3BCVASP – LR – Short Reach
EC-XL-P-NM	200633		
EC-XL-H	201756		

SFP28 Optical Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-10150	3510332	25 Gbps (Single Rate)	JL484A – SR – Short Reach JL486A – LR – Short Reach S2N63A – LR – Long Reach – TAA (Trade Agreements Act)

SR (Short Reach) Fiber Interface	
	
Black bail (handle) with aqua connector	Duplex multimode 50/125 Fiber Patch Cable (LC/LC) to be used with SR (Short Reach)



LR (Long Reach) Fiber Interface

Blue bail (handle) with blue connector

Duplex single mode 8.3/125 Fiber Patch Cable (LC/LC) to be used with LR (Long Reach)

SFP Copper Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-M-P	201274 201552	1 Gbps	FCLF8522P2BTL
EC-M-P-FIPS	201634		
EC-L-P	201305		
EC-L-P-NM	201307		
EC-XL-P	201306		
EC-XL-P-FIPS	201449		
EC-XL-P-NM	201308		
EC-XL-P-NM-FIPS	201659		
EC-L-H	201754		
EC-XL-H-10G	201915		

SFP Copper Transceivers			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-10106	3510325	1 Gbps	S3R03A – Base-T RJ45
EC-10108	3510326		
EC-10150	3510332		


DAC Cable			
Appliance Model	Appliance Part Number	Data Rate	Models
EC-10106	3510332	10 Gbps	J9281D – 1 m DAC (Direct Attach Cable)
EC-10108	3510326		J9283D – 3 m DAC (Direct Attach Cable)
EC-10150	3510332	10 Gbps	J9281D – 1 m DAC (Direct Attach Cable)
			J9283D – 3 m DAC (Direct Attach Cable)
		25 Gbps	JL489A – DAC (Direct Attach Cable)



EdgeConnect EC-S Expansion Module

Appliance Model	Appliance Part Number	SFP+ Optical Transceivers	
		Data Rate	Models
EC-S	200877	1/10 Gbps (Dual Rate)	AFBR-709DMZ-IN3 – SR – Short Reach / SX – Short AFBR-709DMZ-IN7 – SR – Short Reach / SX – Short AFBR-709DMZ – SR – Short Reach / SX – Short AFBR-710DMZ-IN2 – SR – Short Reach / SX – Short FTLX8574D3BCVASP – SR – Short Reach / SX – Short AFCT-739DMZ – LR – Long Reach / LX – Long FTLX1475D3BCVASP – LR – Long Reach / LX – Long



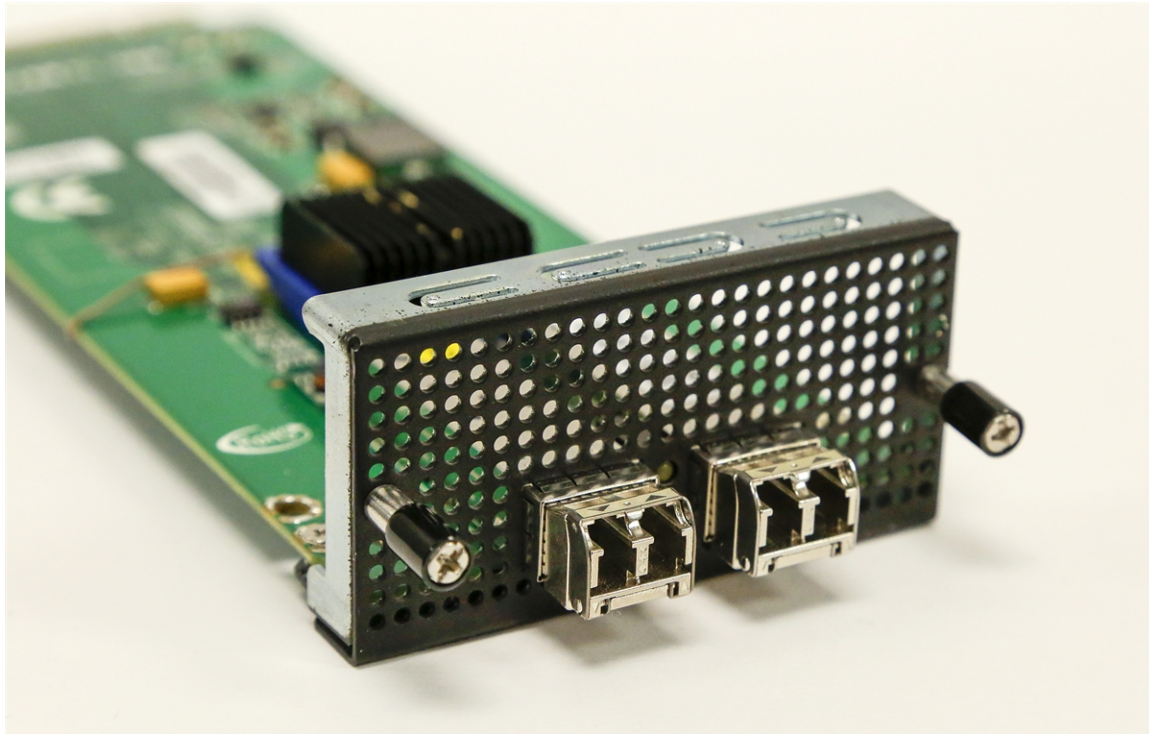

SFP+ optical transceivers come in pairs for the **EC-S** appliance expansion module. You have a choice of either the **SR/SX** or **LR/LX** modules:

- Short Reach (**SR**) / Short (SX) transceiver's bail (handle) is **beige**.
- Long Reach (**LR**) / Long (LX) transceiver's bail (handle) is **blue**.



Replacing an SSD or NVMe

This chapter describes how to replace an SDD (Solid State Drive) or NVMe (Non-Volatile Memory express) for those appliances for which the customer is authorized to make the replacement.

CAUTION Customers are not authorized to replace the single HDD or SSD in the EC-XS or EC-S. Replacing it voids the warranty. Contact Support for return and repair instructions.

Chapter contents:

- [Using Appliance Manager on the next page](#)
- [Physically Replacing a Disk on page 137](#)
- [Disk Instruction Set A on page 138](#)
- [Disk Instruction Set B on page 141](#)
- [Disk Instruction Set C on page 145](#)
- [Disk Instruction Set D on page 147](#)



Using Appliance Manager

Physical appliances have redundant encrypted disks.

Disk failure results in a **critical alarm**, and the specific disk's LED stops illuminating on the appliance.

To replace a failed disk:

1. Log into your Support portal account, and click **Open a Self Service RMA** for disk replacement.
2. Complete the wizard, using the serial number of the appliance (not the disk).
3. After you receive the new disk, go to the **Maintenance - Disk Management** page.
4. Select the failed disk's row in the table and click **Remove**. This takes the disk off-line.
5. Physically remove the old disk from the appliance.
6. Physically insert the new disk.
7. In the table, select the new disk and click **Insert**. This prompts the software to discover the disk and put it online.



Displays the progress of a new disk that's being rebuilt from its array partner.

If a disk has been physically removed, the **Status** is **NOT-IN-SERVICE** and no **Serial Number** displays.

The screenshot shows the Silver Peak management interface. At the top, there's a header with the Silver Peak logo, a 'Save Changes' button, and system information: Name: Tallinn (Normal), Up Time: 11m 6s, Time: 2015/09/23 00:51:32 UTC, Model: NX-8600, VXA: 7.3.1.0_56581, User: admin [logout]. Below the header is a navigation bar with tabs: Application View, Network View, Monitoring, Configuration, Administration, Maintenance, Support. The 'Disk Management' section is active, showing a table of disks and a 'Disk Layout' diagram.

Disk Management

Remove Insert

Slot ID	Pairing Slot ID	Status	Rebuild Status	Size (GB)	Serial Number	Removable
0	1	OK	COMPLETE	465	GTD400P6G2PGWD	yes
1	0	OK	NOT-IN-SERVICE	465		yes
2	3	OK	COMPLETE	465	GTD400P6G2P0JD	yes
3	2	OK	COMPLETE	465	GTD400P6G2PEGD	yes
4	5	OK	COMPLETE	465	GTD400P6G2P54D	yes
5	4	DEGRADED	COMPLETE	465	GTD400P6G2PN1D	yes
6	7	OK	COMPLETE	465	GTD400P6G2PGDD	yes
7	6	OK	COMPLETE	465	GTD400P6G2P3GD	yes
8	9	OK	COMPLETE	465	GTD400P6G2P0ZD	yes
9	8	OK	COMPLETE	465	GTD400P6G2PLGD	yes
10	11	OK	COMPLETE	465	GTD400P6G2PNED	yes
11	10	OK	COMPLETE	465	GTD400P6G2PN0D	yes
12	13	OK	COMPLETE	465	GTD400P6G2PN6D	yes
13	12	OK	COMPLETE	465	GTD400P6G2PNLD	yes
14	15	OK	COMPLETE	465	GTD400P6G2P7ZD	yes
15	14	OK	COMPLETE	465	GTD400P6G2NZWD	yes

Disk Layout

If a disk's **Status** is **DEGRADED**, you need to **Remove** it from the database.

Physically Replacing a Disk

This section provides the model-specific procedures for using Appliance Manager to replace an HDD or SSD.

Model	Part Number	HDD, SSD, or NVMe			Where to find
		Qty	Allow user to replace	Hot swappable	
EC-US	201106	1	no	--	--
EC-XS	200889	1	no	--	--
EC-XS	201571	1	no	--	--
EC-XS	201694	1	no	--	--
EC-XS-FIPS	201447	1	no	--	--
EC-10104	201857	1	no	--	--
EC-10106	3510325	1	no	--	--
EC-10108	3510326	2	no	--	--
EC-10150	3510332	4	yes	yes	Drive in the rear panel: Disk Instruction Set C on page 145 Drive in the front panel: Disk Instruction Set D on page 147
EC-S-P AC	201687	2	no	--	--
EC-S-P DC	201743	2	no	--	--
EC-M	200890	2	yes	yes	Disk Instruction Set A on the next page
EC-M-B	200969	2	yes	yes	Disk Instruction Set A on the next page
EC-M-B	201553	2	yes	yes	Disk Instruction Set A on the next page
EC-M-P	201274	2	yes	yes	Disk Instruction Set A on the next page
EC-M-P	201552	2	yes	yes	Disk Instruction Set A on the next page
EC-M-P-FIPS	201634	2	no	no	--
EC-M-H-AC	201762	2	no	--	--
EC-L	200883	2	yes	yes	Disk Instruction Set A on the next page
EC-L-B	201270	2	yes	yes	Disk Instruction Set A on the next page
EC-L-P	201305	2	yes	yes	Disk Instruction Set A on the next page
EC-L-NM	200887	8	yes	yes	Disk Instruction Set A on the next page
EC-L-B-NM	201272	4	yes	yes	Disk Instruction Set A on the next page
EC-L-P-NM	201307	4	yes	yes	Disk Instruction Set A on the next page
EC-L-H	201754	2	yes	yes	Disk Instruction Set B on page 141
EC-XL	200884	2	yes	yes	Disk Instruction Set A on the next page
EC-XL-B	201271	2	yes	yes	Disk Instruction Set A on the next page
EC-XL-P	201306	2	yes	yes	Disk Instruction Set A on the next page
EC-XL-P	201632	2	yes	yes	Disk Instruction Set A on the next page
EC-XL-P-FIPS	201449	2	no	no	--
EC-XL-NM	200888	6	yes	yes	Disk Instruction Set A on the next page
EC-XL-B-NM	201273	4	yes	yes	Disk Instruction Set A on the next page
EC-XL-P-NM	201308	4	yes	yes	Disk Instruction Set A on the next page
EC-XL-P-NM	201633	4	yes	yes	Disk Instruction Set A on the next page
EC-XL-P-NM-FIPS	201659	4	no	no	--
EC-XL-H	201756	4	yes	yes	Disk Instruction Set B on page 141
EC-XL-H-10G	201915	4	yes	yes	Disk Instruction Set B on page 141



Disk Instruction Set A

These appliance drives are hot-swappable.

The first disk on the left is **Disk 0**. The numbers increment by one from left to right.

EC-XL-NM [PN 200888] 2 SSD + 4 NVMe	
EC-XL-B-NM [PN 201273] 2 SSD + 2 NVMe	
EC-XL-P-NM [PN 201308] [PN 201633] 2 SSD + 2 NVMe	
EC-XL [PN 200884] 2 SSD	
EC-XL-B [PN 201271] 2 SSD	
EC-XL-P [PN 201306] [PN 201632] 2 SSD	
EC-L-NM [PN 200887] 8 SSD	
EC-L-B-NM [PN 201272] 2 SSD + 2 NVMe	
EC-L-P-NM [PN 201307] 2 SSD + 2 NVMe	



EC-L [PN 200883] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and four empty slots.
EC-L-B [PN 201270] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and four empty slots.
EC-L-P [PN 201305] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and four empty slots.
EC-M [PN 200890] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and three empty slots.
EC-M-B [PN 200969] [PN 201553] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and three empty slots.
EC-M-P [PN 201274] [PN 201552] 2 SSD	 Diagram showing two SSD modules (labeled 0 and 1) and three empty slots.




To take the disk off-line

1. Go to the **Maintenance >> Disk Management** page, select the disk, and click **Remove**.

If the SSD is online, the green activity/fault indicator flashes as the drive is turned off. When the SSD indicators are off, the SSD is ready for removal.



2. Press the release button to open the SSD carrier release handle.

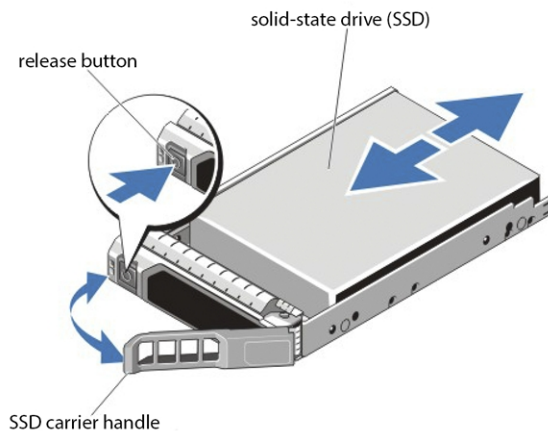

3. Slide the SSD carrier out until it is free of the hard-drive slot.
4. Press the release button on the front of the SSD carrier and open the SSD carrier handle.
5. Insert the SSD carrier into the SSD slot until the carrier connects with the backplane.
6. Close the SSD carrier handle to lock the SSD in place.
7. To put the disk back online, go to the **Maintenance >> Disk Management** page, select the disk, and click **Insert**.



Disk Instruction Set B


These appliance drives are hot-swappable.
The first disk on the left is **Disk 0**. The numbers increment by one from left to right.

EC-L-H [PN 201754] 2 SSD	
EC-XL-H [PN 201756] EC-XL-H-10G [PN 201915] 2 SSD + 2 NVMe	

To take the SATA disk off-line (For full status, reference the model in Appliance view)

1. Go to the **Maintenance >> Disk Management** page, select the disk, and click **Remove**.


If the SSD is online, wait for the activity ring to go off. When the SSD indicators are off, the SSD is ready for removal.

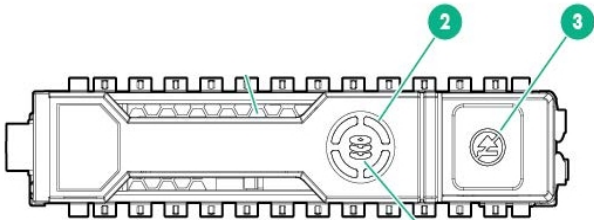


Item	LED	Status	Definition
2	Activity Ring	Rotating Green	Drive Activity
		Off	No Drive Activity
3	Do Not Remove	Solid White	Do not remove the drive. Removing the drive causes one or more of the logical drives to fail
		Off	Removing the drive does not cause a logical drive to fail.




2. Press the Do Not Remove button (item 3 in step 1 figure) to open the SSD carrier release handle.

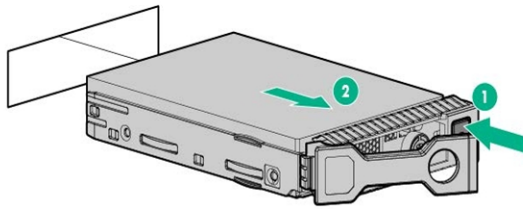

3. Slide the SSD carrier out until it is free of the hard-drive slot.

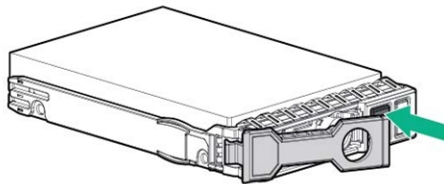

4. Press the Do Not Remove button on the front of the SSD carrier and open the SSD carrier handle.


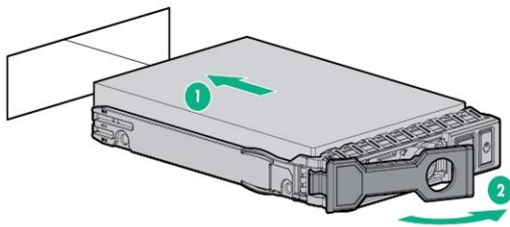



5. Insert the SSD carrier into the SSD slot until the carrier connects with the backplane.
6. Close the SSD carrier handle to lock the SSD in place.
7. To put the disk back online, go to the **Maintenance >> Disk Management** page, select the disk, and click **Insert**.




To take the NVMe disk off-line (For full status, reference the model in Appliance View)

- 1. Go to the **Maintenance >> Disk Management** page, select the disk, and click **Remove**.
- 2. Remove the drive:
 - 1. Push the Power button
The Do Not Remove button illuminates and flashes.
 - 2. Wait until the flashing stops and the Do Not Remove button is no longer illuminated
 - 3. Push the Do Not Remove button and then remove the drive.

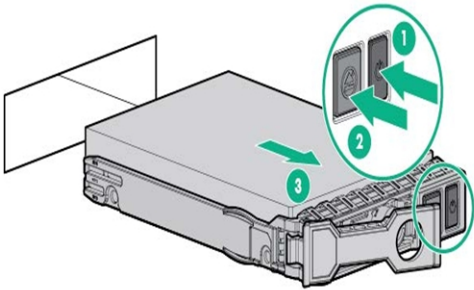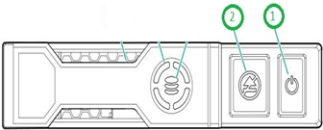Item	LED	Definition
1	Power	 
2	Do Not Remove	

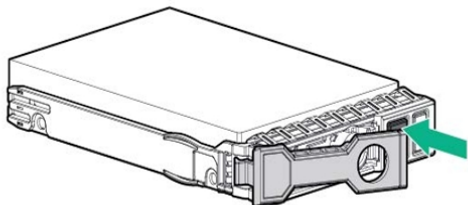

3. Press the Do Not Remove button on the front of the SSD carrier and open the SSD carrier handle.

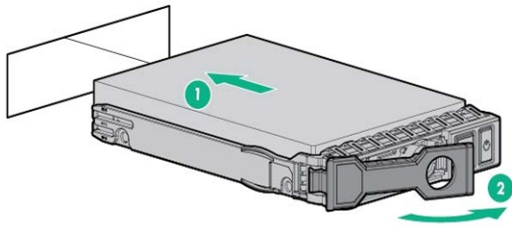


4. Insert the SSD carrier into the SSD slot until the carrier connects with the backplane.
5. Close the SSD carrier handle to lock the SSD in place.
6. To put the disk back online, go to the **Maintenance >> Disk Management** page, select the disk, and click **Insert**.




Disk Instruction Set C

These appliance drives are hot-swappable.

The first disk on the left is **Disk 0**. The numbers increment by one from left to right.

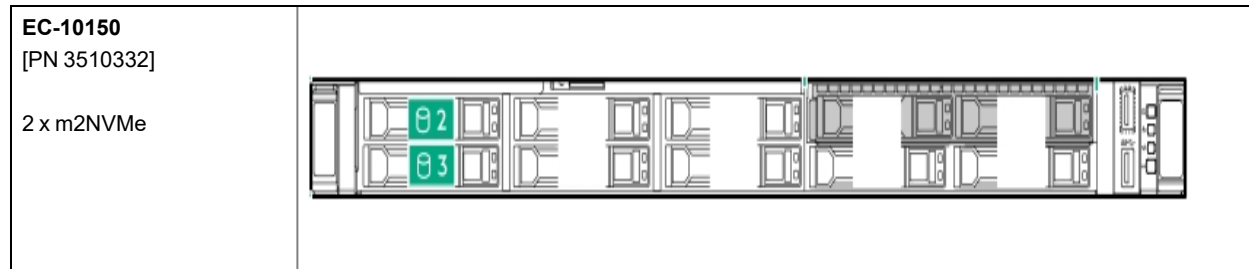


1. Go to the **Maintenance >> Disk Management** page, select the disk, and click **Remove**.
2. Remove the boot device carrier.
 1. Press and hold the carrier latch (callout 1).
 2. Pivot the latch to open (callout 2).
 3. Slide the carrier out from the boot device cage (callout 3).

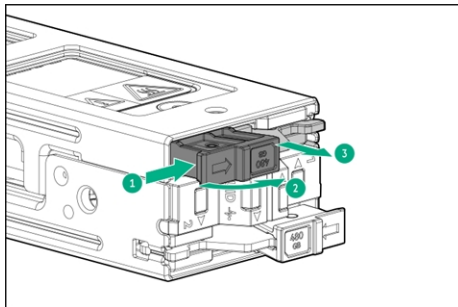

3. Install the boot device carrier.
 1. If closed, pivot the carrier latch to open.
 2. Slide the carrier into the boot device cage (callout 1).
 3. Pivot the latch to close (callout 2).



Make sure that the carrier latch is locked on the boot device cage.

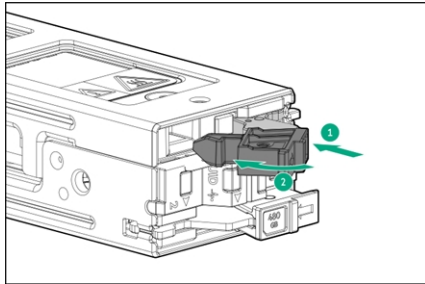


4. To put the disk back online, go to the **Maintenance >> Disk Management** page, select the disk, and click Insert.




Disk Instruction Set D

These appliance drives are hot-swappable.


The first disk on the left is **Disk 0**. The numbers increment by one from left to right.

EC-10150 [PN 3510332] 2 NVMe	
---	--

1. Go to the **Maintenance >> Disk Management** page, select the disk, and click **Remove**.
2. Follow the steps in the diagram to remove the NVMe drive.

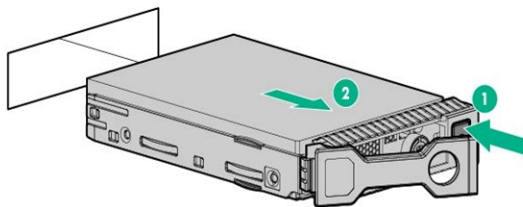

3. Press the button on the front of the SSD carrier and open the SSD carrier handle.
4. Follow the steps in the diagram below to install the NVMe drive.

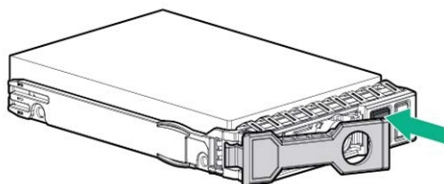

5. Insert the SSD carrier into the SSD slot until the carrier connects with the backplane.
6. Close the SSD carrier handle to lock the SSD in place.



7. To put the disk back online, go to the Maintenance >> Disk Management page, select the disk, and click Insert.



Replacing a Power Supply

This chapter describes how to replace a power supply for those appliances for which the customer is authorized to make the replacement.

WARNING Do not open the casing of a power supply. Opening the casing of a power supply voids the warranty. Only a qualified technician from the manufacturer has the authority to access and/or service power supplies.

Chapter contents:

- [Power Supply Summary and Instruction Set Matrix on the next page](#)
- [Power Supply Instruction Set A on page 152](#)
- [Power Supply Instruction Set B on page 154](#)
- [Power Supply Instruction Set C on page 156](#)



Power Supply Summary and Instruction Set Matrix

This table summarizes information and reference the appropriate instruction set for replacing redundant power supplies in the specified authorized appliance models:

Model	Part Number	Power Supplies			Where to find
		Qty	Allow user to replace	Hot swappable	
EC-US	201106	1	yes*	—	*Power adapter can be replaced
EC-XS	200889	1	yes*	—	*Power adapter can be replaced
EC-XS	201571	1	yes*	—	*Power adapter can be replaced
EC-XS	201694	1	yes*	—	*Power adapter can be replaced
EC-XS-FIPS	201447	1	yes*	—	*Power adapter can be replaced
EC-10104	201857	1	yes*	—	*Power adapter can be replaced
EC-10106	3510325	1	yes*	—	*Power adapter can be replaced
EC-10108	3510326	1	yes*	—	*Power adapter can be replaced
EC-10150	3510332	1	yes*	—	Power Supply Instruction Set B on page 154
EC-S	200877	1	no	no	
EC-S-P AC	201687	2	yes	yes	Power Supply Instruction Set C on page 156
EC-S-P DC	201743	2	yes	yes	Power Supply Instruction Set C on page 156
EC-M	200890	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-B	200969	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-B	201553	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-P	201274	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-P	201552	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-P-FIPS	201634	2	yes	yes	Power Supply Instruction Set A on page 152
EC-M-H- AC	201762	2	yes	yes	Power Supply Instruction Set C on page 156
EC-L	200883	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-B	201270	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-P	201305	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-NM	200887	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-B-NM	201272	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-P-NM	201307	2	yes	yes	Power Supply Instruction Set A on page 152
EC-L-H	201754	2	yes	yes	Power Supply Instruction Set B on page 154
EC-XL	200884	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-B	201271	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P	201306	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P	201632	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P-FIPS	201449	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-NM	200888	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-B-NM	201273	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P-NM	201308	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P-NM	201633	2	yes	yes	Power Supply Instruction Set A on page 152
EC-XL-P-NM-FIPS	201659	2	yes	yes	Power Supply Instruction Set A on page 152




Model	Part Number	Power Supplies			Where to find
		Qty	Allow user to replace	Hot swappable	
EC-XL-H	201756	2	yes	yes	Power Supply Instruction Set B on page 154
EC-XL-H-10G	201915	2	yes	yes	Power Supply Instruction Set B on page 154



Power Supply Instruction Set A

To replace the power supply

1. Disconnect the power cable from the power source and the power supply you intend to remove.
2. Press the release latch and pull the power supply straight out to release it from the power distribution board and clear the chassis.

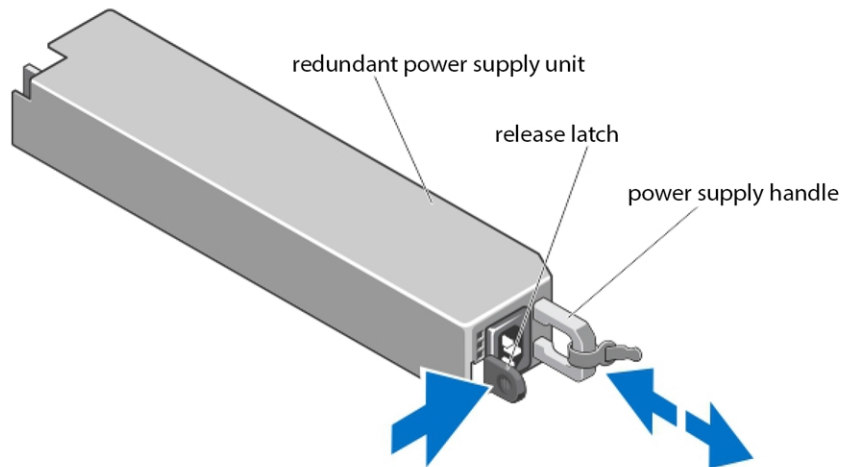

3. Slide the new power supply into the chassis until the power supply is fully seated and the release latch snaps into place.
4. Connect the power cable to the power supply and plug the cable into a power outlet.

NOTE When hot-swapping a new power supply, allow several seconds for the system to recognize the power supply and determine its status. The power-supply status indicator turns green to signify that the power supply is functioning properly.



Power Indicator Codes - Set A

Each power supply has an illuminated translucent handle that serves as an indicator to show whether power is present or whether a power fault has occurred.

power supply status indicator




Power Indicator Pattern	Condition
Not lit	Power is not connected.
Green	The handle/LED indicator illuminates green to indicate that a valid power source is connected to the power supply and that the power supply is operational.
Flashing amber	Indicates a problem with the power supply. Contact Support for additional information or help.



Power Supply Instruction Set B

To replace the power supply

1. Disconnect the power cable from the power source and the power supply you intend to remove.
2. Press the release latch and pull the power supply straight out to release it from the power distribution board and clear the chassis.

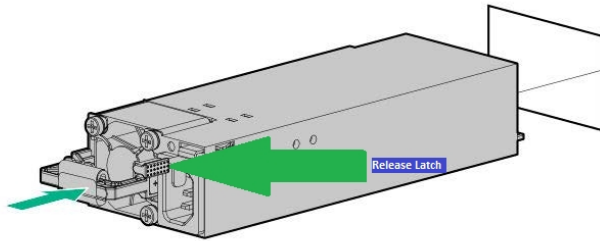

3. Slide the new power supply into the chassis until the power supply is fully seated and the release latch snaps into place.
4. Connect the power cable to the power supply and plug the cable into a power outlet.


NOTE When hot-swapping a new power supply, allow several seconds for the system to recognize the power supply and determine its status. The power-supply status indicator turns green to signify that the power supply is functioning properly.



Power Indicator Codes - Set B

Each power supply has an LED that serves as an indicator to show whether power is present or whether a power fault has occurred.

Power Supply LED Indicator

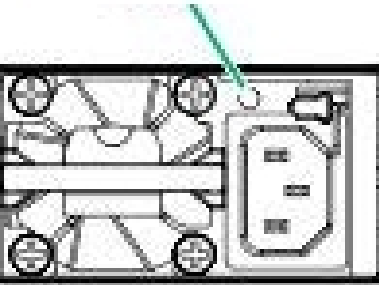

Power Indicator Pattern	Condition
Solid Green	Normal
Off	One or more of the following conditions exist: • AC power unavailable • Power supply failed • Power supply in standby mode • Power supply exceeded current limit




Power Supply Instruction Set C


To replace the power supply:

1. Disconnect the power cable from the power source and the power supply you intend to remove.
2. Press the release latch and pull the power supply straight out to release it from the power distribution board and clear the chassis.

AC Power Supply

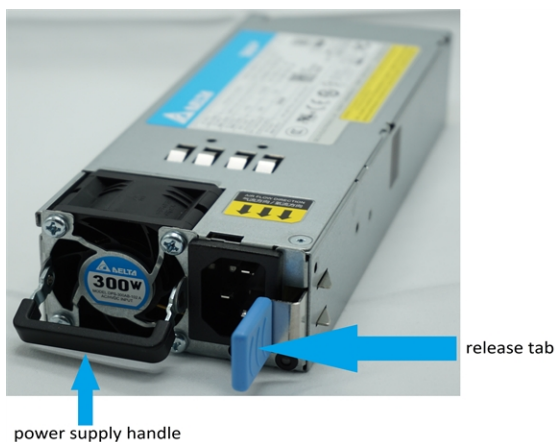

DC Power Supply

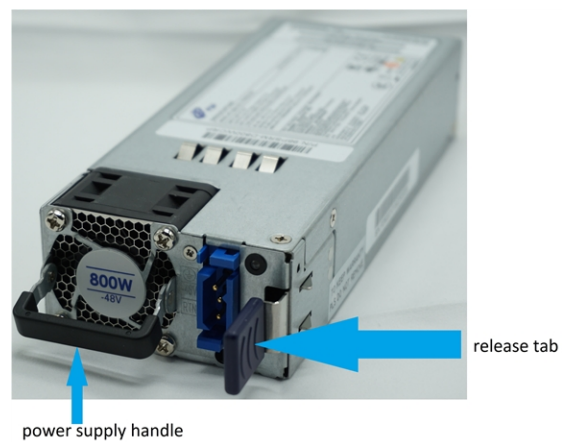

3. Slide the new power supply into the chassis until the power supply is fully seated and the release latch snaps into place.
4. Connect the power cable to the power supply and plug the cable into a power outlet.

NOTE When hot-swapping a new power supply, allow several seconds for the system to recognize the power supply and determine its status. The power-supply status indicator turns green to signify that the power supply is functioning properly.

AC Power Supply: Hot swap is supported when the second (optional) power supply is installed.

DC Power Supply: Hot swap is supported when the second (optional) power supply is installed.

Replacing a Deployed Appliance

The following bullets summarize information about using Appliance Manager or Orchestrator when replacing an appliance that's already deployed in your network:

- If you've made a backup of the appliance configuration, you'll be able to restore it to the new appliance. If not, you must manually configure the new appliance.

To manually configure the appliance, refer to the following user documents:

- *Appliance Manager Operator's Guide* [200030-001]
 - *Orchestrator User's Guide* [200095-001]
- If you're replacing a 4-port appliance and want to restore the backup configuration, then make sure that the new appliance is also a 4-port appliance.



Replacing a Deployed EdgeConnect Appliance


We recommend using the RMA Wizard through Orchestrator to replace an EdgeConnect device with an identical unit.

1. If you have not backed up the configuration, do it now, using Orchestrator.
2. Physically install the new [replacement] appliance.

If you need to review rack mount instructions, refer to [Desk/Wall and Rack Mount Installation Guides](#)..

3. Cable the appliance, as directed. As needed, refer to the [Unity EdgeConnect Quick Start Guide](#) [PN 200907-001], *Part 1 - Physical Installation*.

After you power on the EdgeConnect appliance, it automatically registers its serial number with Cloud Portal. The portal knows a serial number's associated account, resulting in Orchestrator displaying a blinking **Appliances Discovered** box.



IMPORTANT Do Not click the **Appliances Discovered** button.

4. Navigate to the **RMA** tab in the Orchestrator UI.
5. Select the appliance you want to replace from the menu.

NOTE The IP address, appliance model, hostname, serial number, and software version auto-populates after you select the appliance.

6. Select the incoming discovered appliance you are going to use to replace the previous appliance.

NOTE The IP address, appliance model, hostname, serial number, and software version auto-populates after you select the appliance.

7. Select **Apply**.

The **Applying Configuration** page opens, which lists the status of the upgrading appliance and restore configuration.

8. Close the **Applying Configuration** page when it indicates the tasks are completed.
9. Power down, disconnect, and remove the old appliance.



Power Cords and Cable Pinouts

This chapter includes the following sections:

- [Power Cords by Country: Specifications on the next page](#)
- [RJ-45 Console Port Pinouts on page 166](#)
- [DB-9 Console Port Pinout on page 168](#)
- [Configuring DB-9 Console Access to the Appliance on page 169](#)



Power Cords by Country: Specifications


This section includes country-specific power cord plug and receptacle specifications for EdgeConnect appliances.

COUNTRY	APPROVALS	Rating	PLUG	RECEPTACLE
Argentina	IRAM	10A / 250V	IRM 2073: 1982 Argentina Plug	IEC-60320-C13
Australia	SAA	10A / 250V	AS 3112-3, Australia Plug	IEC-60320-C13
Brazil	INMETRO	10A / 240V	NBR 14136, Brazil Plug	IEC-60320-C13
China	CCC	10A / 250V	GB1002, China Plug	IEC-60320-C13
Continental Europe	VDE, KEMA, CEVEC, NEMKO, DEMKO, SETI, OVE, SEV	10A / 250V	CEE 7/7 Europe Plug "Schuko" CE	IEC-60320-C13
Denmark	DEMKO	10A / 250V	DK 2.5 A, Danish Plug	IEC-60320-C13
India	BIS	10A / 250V	IS 1293, India Plug	IEC-60320-C13
Israel	SII	10A / 250V	SI32, Israeli Plug	IEC-60320-C13
Italy / Chile	IMQ	10A / 250V	CEI23-50, Italian / Chile Plug	IEC-60320-C13
Japan	PSE	10A / 125V	C8303, Japanese Plug	IEC-60320-C13
Korea	KETI	10A / 250V	KSC 8305, Korean Plug	IEC-60320-C13
North America	UL, CSA	10A / 125V	NEMA 5-15P	IEC-60320-C13
South Africa	SABS	10A / 250V	SABS-164, South African Plug	IEC-60320-C13
Switzerland	SEV	10A / 250V	SEV 1011, Swiss Plug	IEC-60320-C13
Taiwan	BSMI	10A / 250V	CNS 690, Taiwan Plug	IEC-60320-C13
United Kingdom / Ireland	BSI	10A / 250V	BS 1363, U.K. Plug	IEC-60320-C13
JmpCbl RoW "PDU Cord"	World-Wide	10A / 250V	IEC 320 C14	IEC-60320-C13




Power Cords by Country:


Argentina Power Cord

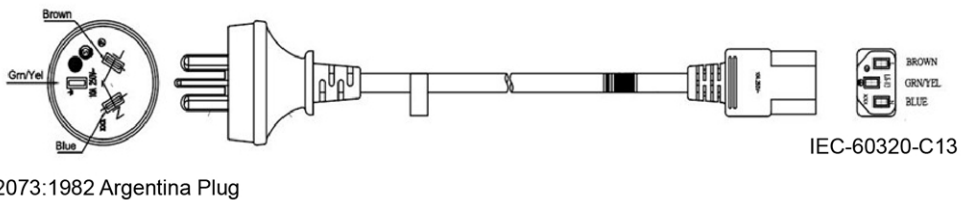


Australia Power Cord

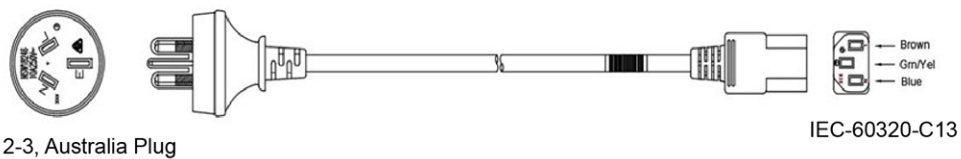


Brazil Power Cord

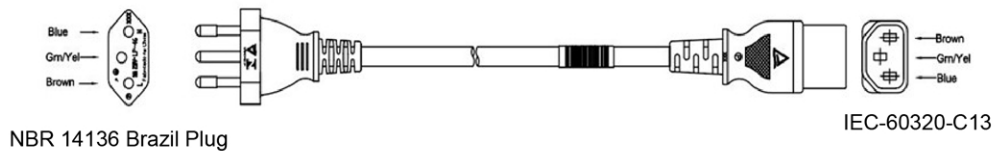


China Power Cord

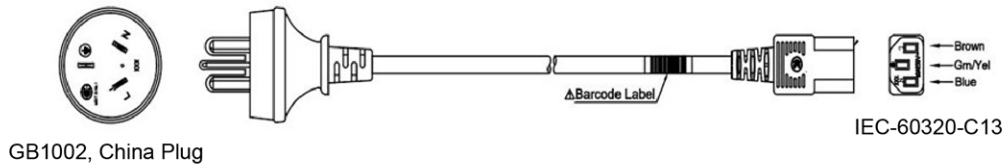


Continental Europe Power Cord

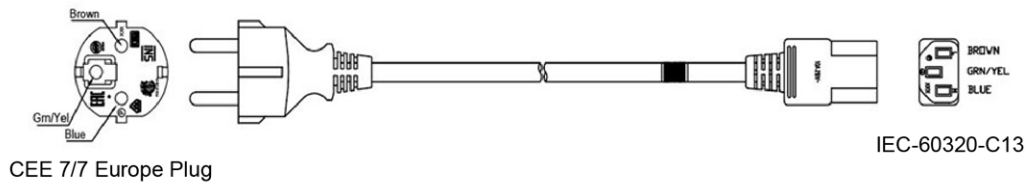


Denmark Power Cord

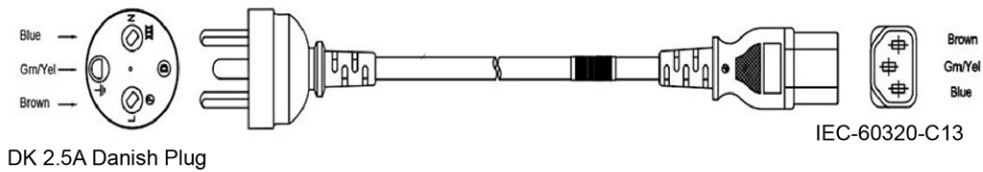

India Power Cord

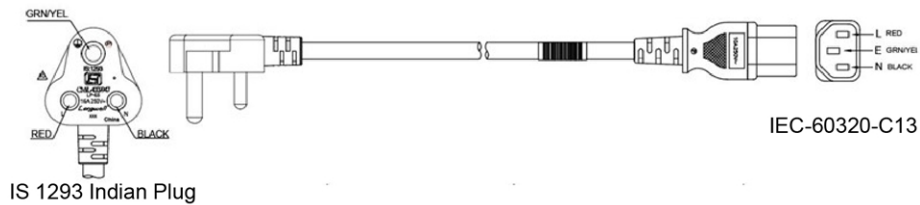


Israel Power Cord

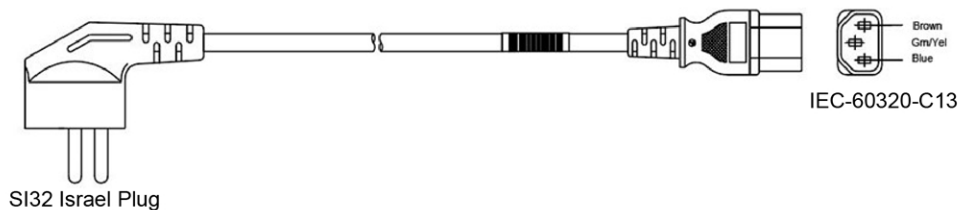


Italy / Chile Power Cord




Japan Power Cord

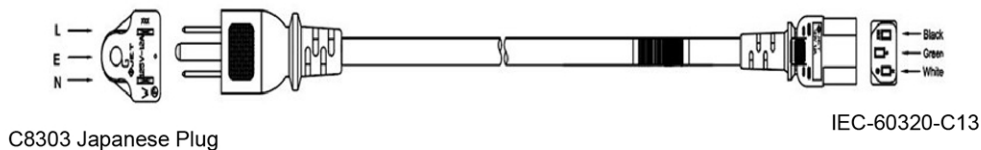


Korea Power Cord

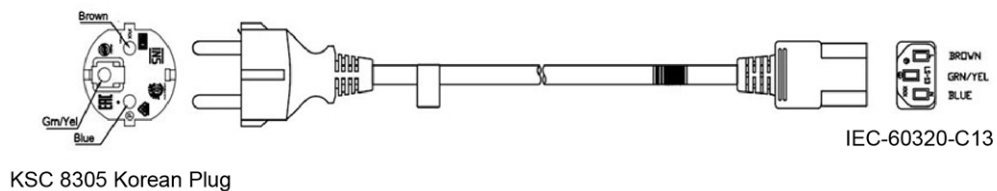


North America Power Cord

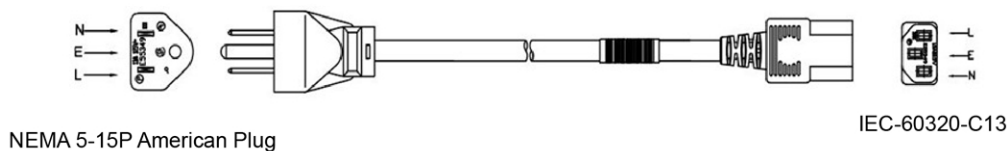


South Africa Power Cord

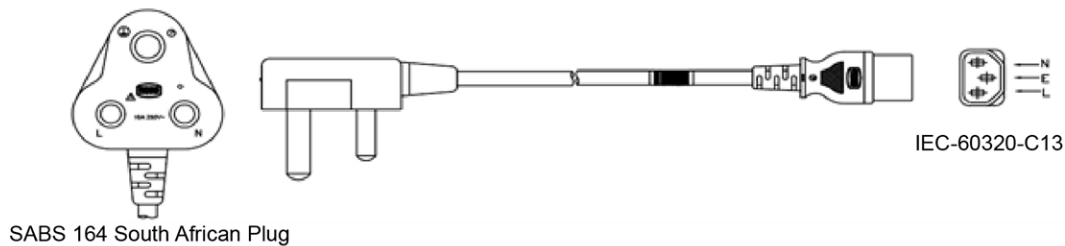


Switzerland Power Cord

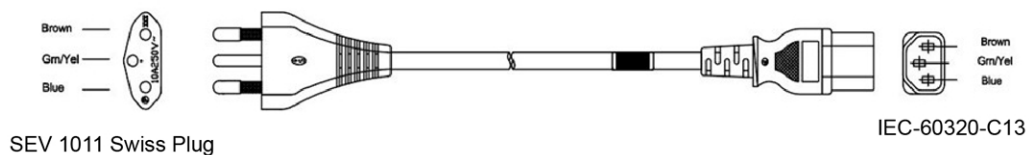


Taiwan Power Cord

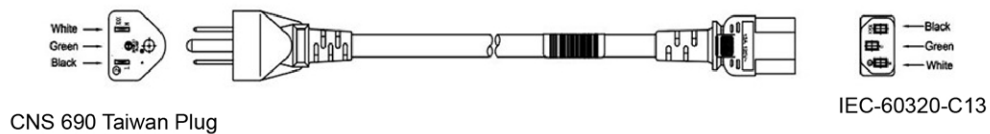

United Kingdom / Ireland / Malaysia Power Cord

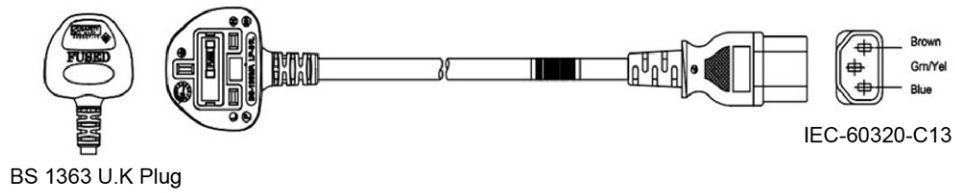

JmpCbl RoW "PDU Cord" Power Cord

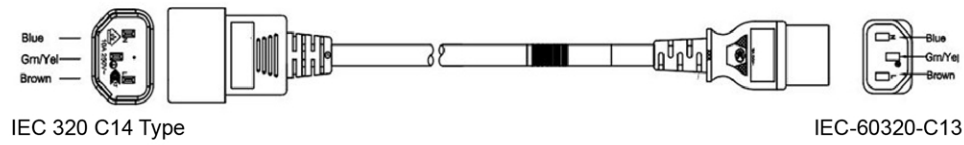


RJ-45 Console Port Pinouts

The RJ-45 console port pinouts vary by appliance model.

The following appliances are associated with this RJ-45 pinout diagram:


Model
EC-XS (PN 200889)
EC-XS-FIPS
EC-S

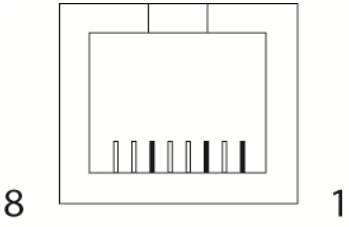	Pin	Signal	Description
	1	RTS	Request to Send
	2	DTR	Data Terminal Ready
	3	SOUT / TxD	Transmitted Data
	4	GND	Ground
	5	GND	Ground
	6	SIN / RxD	Received Data
	7	DSR	Data Set Ready
	8	CTS	Clear To Send



The following appliance is associated with this RJ-45 pinout diagram.

Model
EC-US
EC-XS (201571)
EC-S-P
EC-M-H
EC-10104
EC-10106
EC-10108

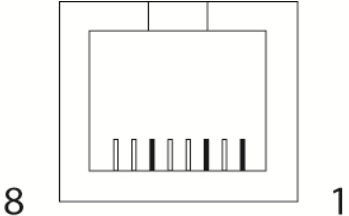	Pin	Signal	Description
	1	RTS	Request to Send
	2	NC	No Connection
	3	SOUT / TxD	Transmitted Data
	4	GND	Ground
	5	GND	Ground
	6	SIN / RxD	Received Data
	7	NC	No Connection
	8	CTS	Clear To Send




DB-9 Console Port Pinout

The console port uses a null modem cable.

The following appliances are associated with this DB-9 pinout diagram:

Model		
EC-M	EC-L	EC-XL
EC-M-B	EC-L-B	EC-XL-B
EC-M-P	EC-L-P	EC-XL-P
EC-M-P-FIPS	EC-L-NM	EC-XL-P-FIPS
	EC-L-B-NM	EC-XL-NM
	EC-L-P-NM	EC-XL-B-NM
	EC-L-H	EC-XL-P-NM
		EC-XL-P-NM-FIPS
		EC-XL-H
		EC-XL-H-10G
		EC-10150

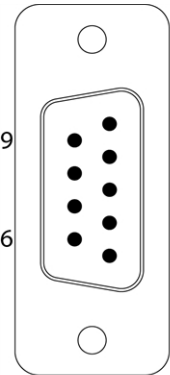

DB-9F

- 2 (RxD)
- 3 (TxD)
- 5 (GND)
- 6 (DSR)
- 4 (DTR)
- 8 (CTS)
- 7 (RTS)



Configuring DB-9 Console Access to the Appliance

For console port access, the appropriate settings are as follows:

Bits per second	9600
Data bits	8
Parity	none
Stop bits	1
Flow control	none



Desk/Wall and Rack Mount Installation Guides

This section provides links to desk/wall and rack mount installation guides that describe installation procedures for various EdgeConnect devices.

- [Small Form-Factor Pluggable \(SFP\) Module Installation Guide r8.1](#)
Hardware | Unity EdgeConnect | Release 8.6, Release 8.5, Release 8.1, Release 8
- [Rack Mount Instruct: ear mount EC-XS r8](#)
Hardware | NX/VX WAN Optimization | Release 8.5, Release 8.1, Release 8
- [Rack Mount Instructions: ear mount - EC-S r8](#)
Hardware | Unity EdgeConnect | Release 8.5, Release 8.1, Release 8
- [Rack Mount Instructions: 2-RU with rails \[tool-less\] r7.3](#)
Hardware | NX/VX WAN Optimization | Release 7.3
- [Rack Mount Instructions: 1-RU with rails](#)
Hardware | NX/VX WAN Optimization |
- [Desk / Wall Mount Instructions - r7.3](#)
Hardware | NX/VX WAN Optimization | Release 7.3
- [Rack Mount Instructions: ear mount EC-XS r7.3](#)
Hardware | NX/VX WAN Optimization | Release 7.3
- [Rack Mount Instructions: 2-RU with rails r7.3](#)
Hardware | NX/VX WAN Optimization | Release 7.3
- [Rack Mount Instructions: 1-RU with rails r6.2](#)
Hardware | NX/VX WAN Optimization | Release 6.2
- [Desk / Wall Mount Instructions r6.2](#)
Hardware | NX/VX WAN Optimization | Release 6.2

