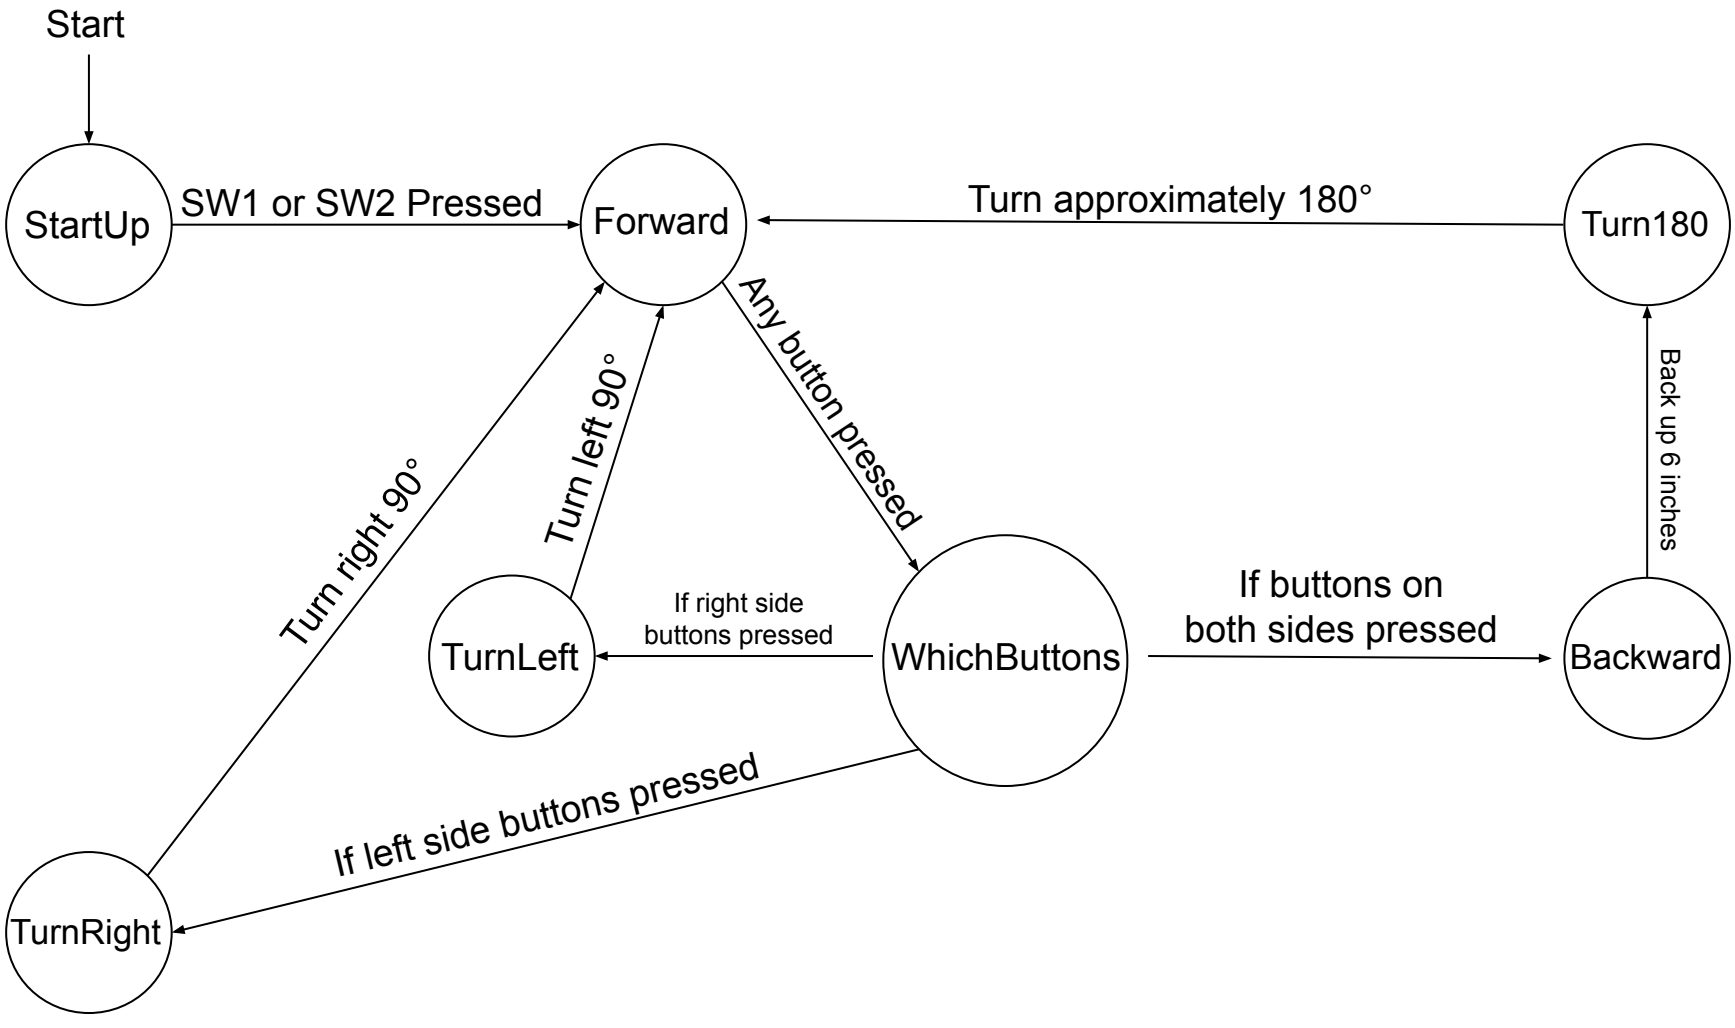
Start
StartUp
SW1 or SW2 Pressed
Forward
Turn approximately 180°
Turn180
Any button pressed
Turn left 90°
Turn right 90°
Back up 6 inches
TurnLeft
If right side
buttons pressed
WhichButtons
If buttons on
both sides pressed
Backward
If left side buttons pressed
TurnRight