


Complete pushing system maintenance

DESCRIPTION of OPERATIONS

Description


- 1) Mark and disassemble the trolleys.

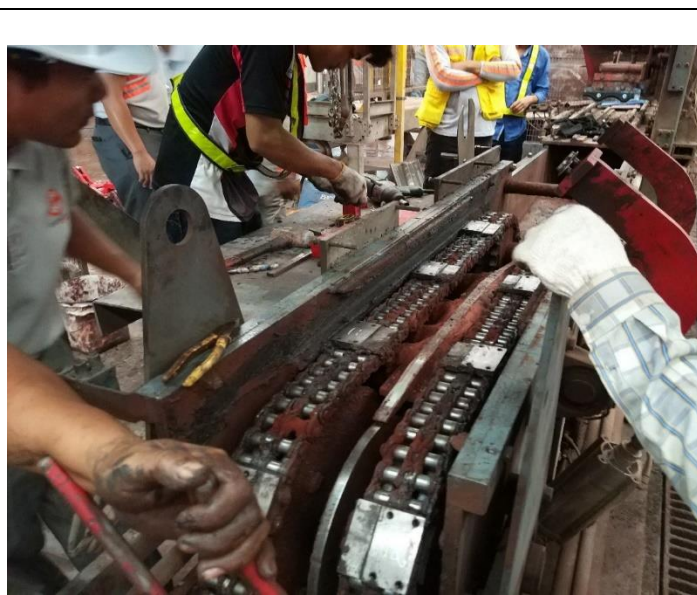

Take out all 9 trolleys.

Description


2) Replace bearings, shafts and polycords of the trolleys.



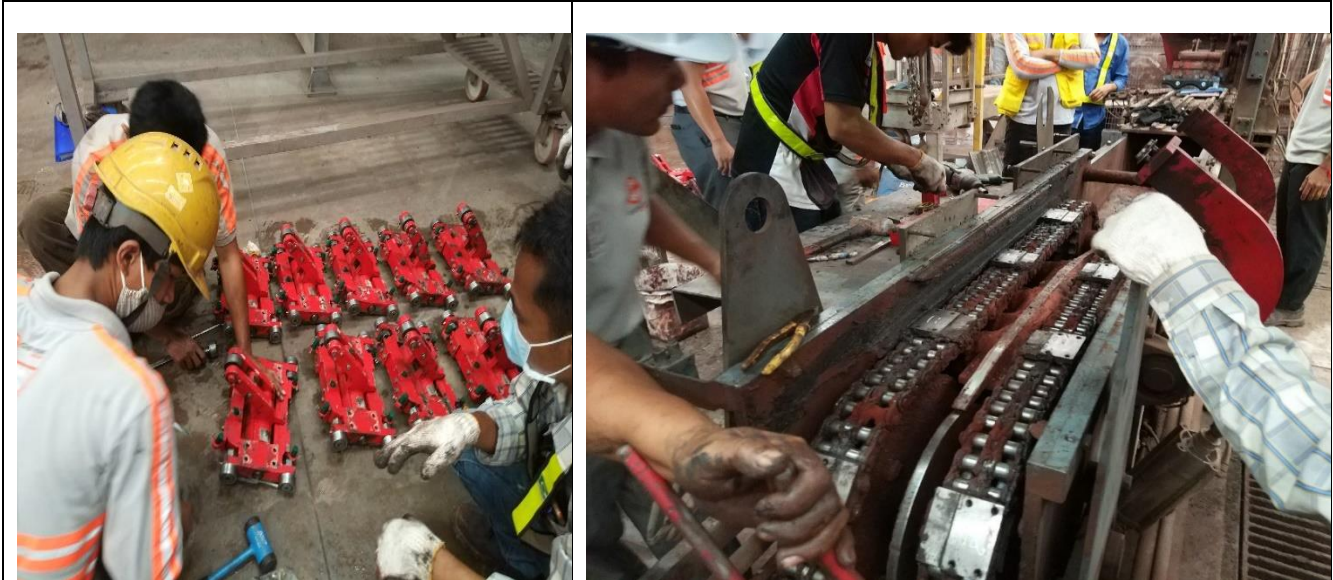


Check the condition of the trolleys by changing bearings and pushers if necessary.



Description

3) Replace bearings, shafts and polycords of the trolleys.

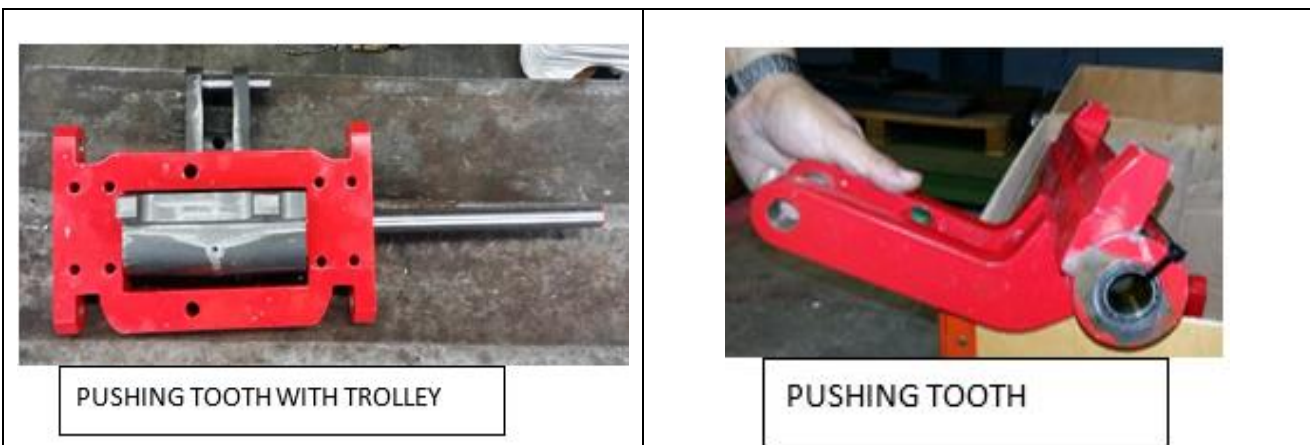

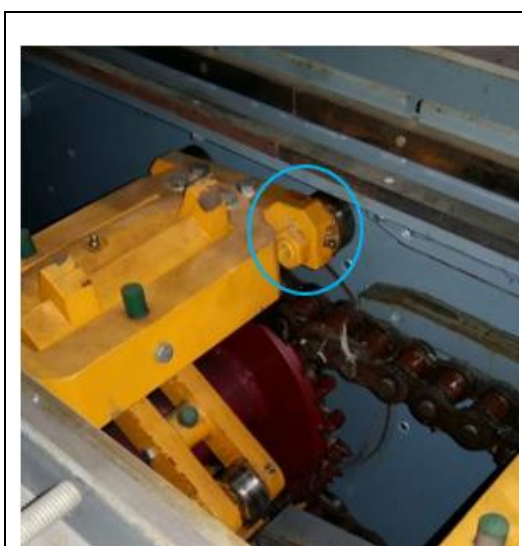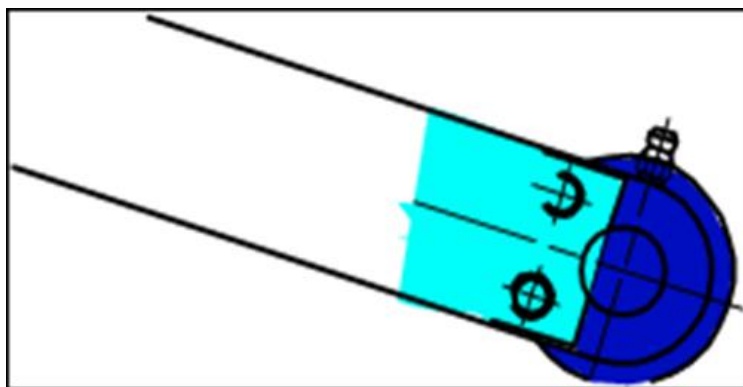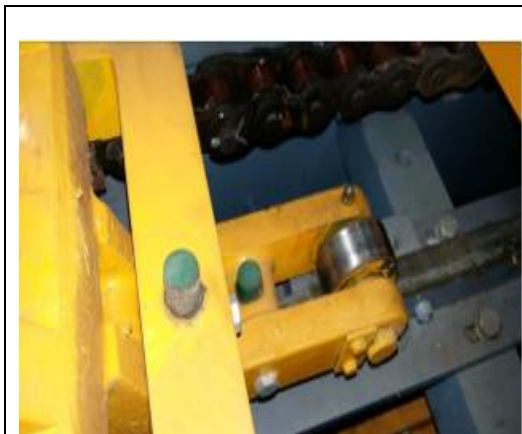

Replace bearings, shafts and polycords.

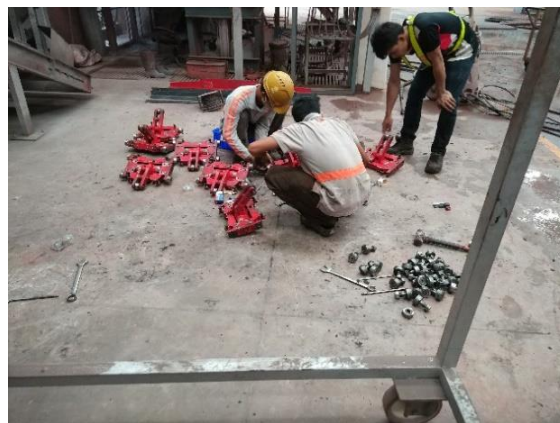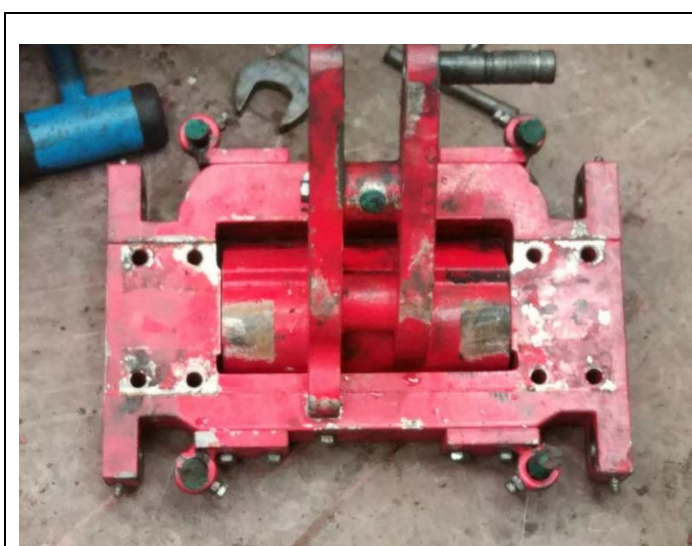




Description

- 3) Disassemble of the pushing chain by unbuttoning the saddle or $\frac{1}{2}$ connecting link.




Description

- 4) Change the double chain sections, connecting links and saddles (shown in the video).

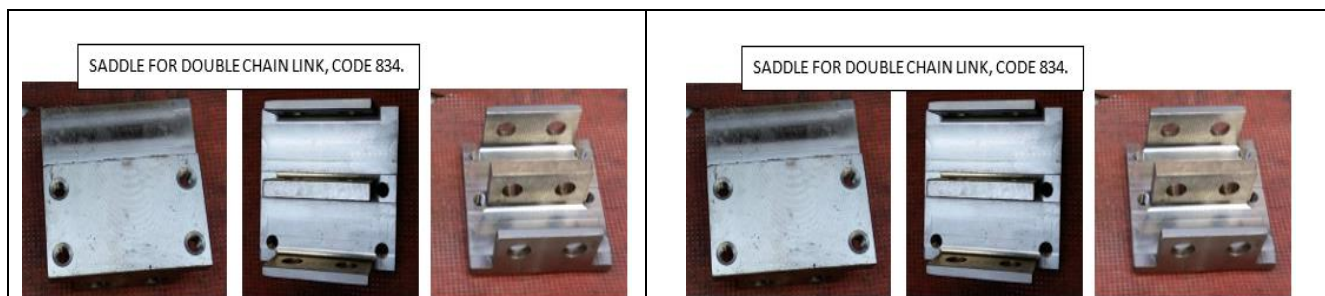

Description

- 5) Cleanwash bench and pushing chain structure.

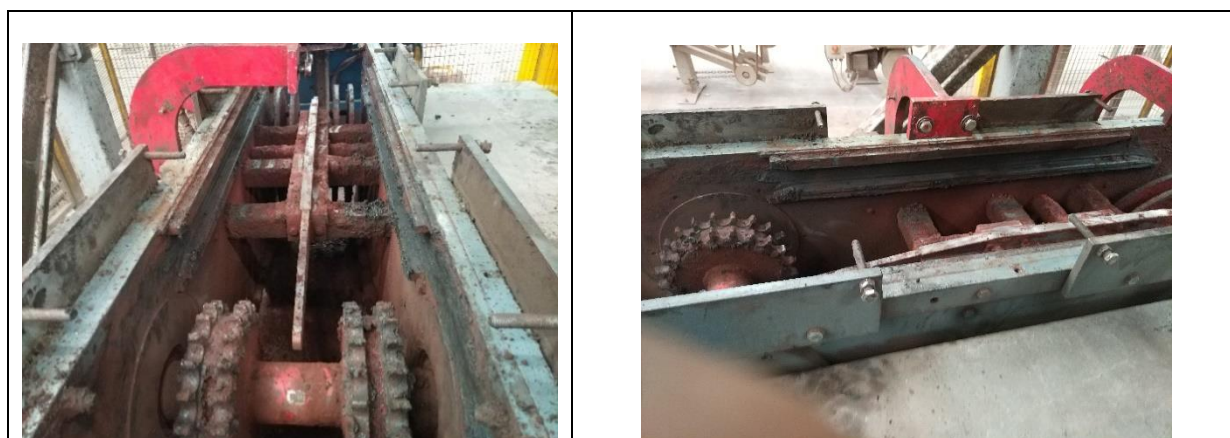




Pushing system without double chain and trolleys, ready to wash with pressure water.


Pushing system washed.


Description

6) Change the pushing chain guides.

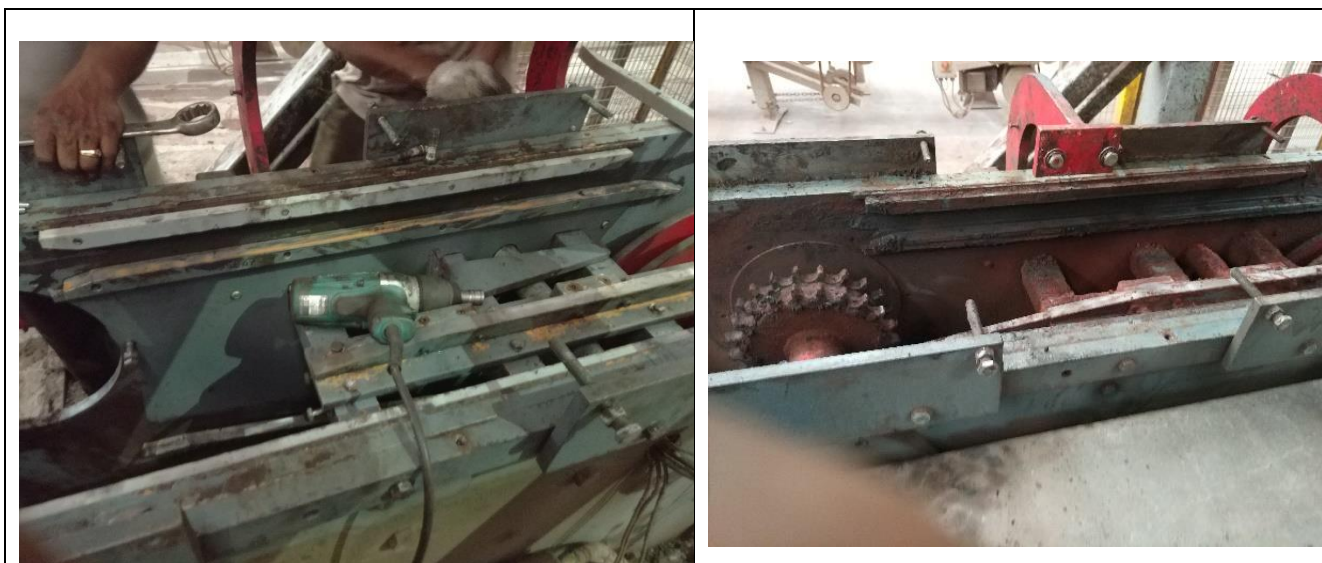


In case of excessive wear, all the guides of the push chain must be replaced.

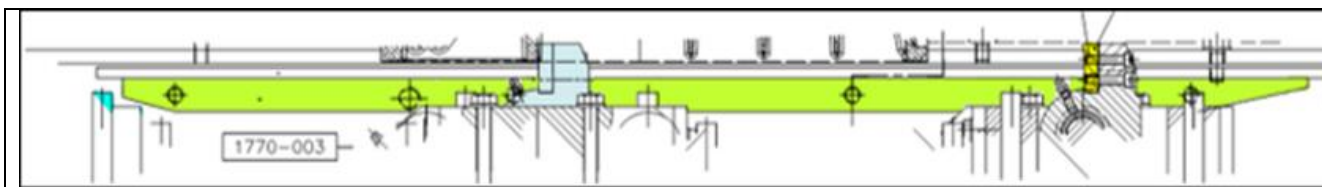

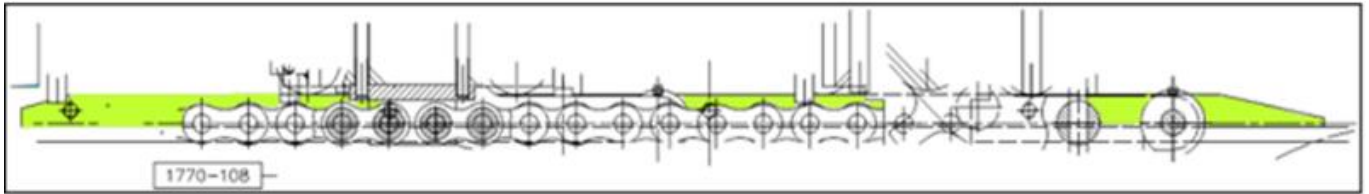


Guides replacement:

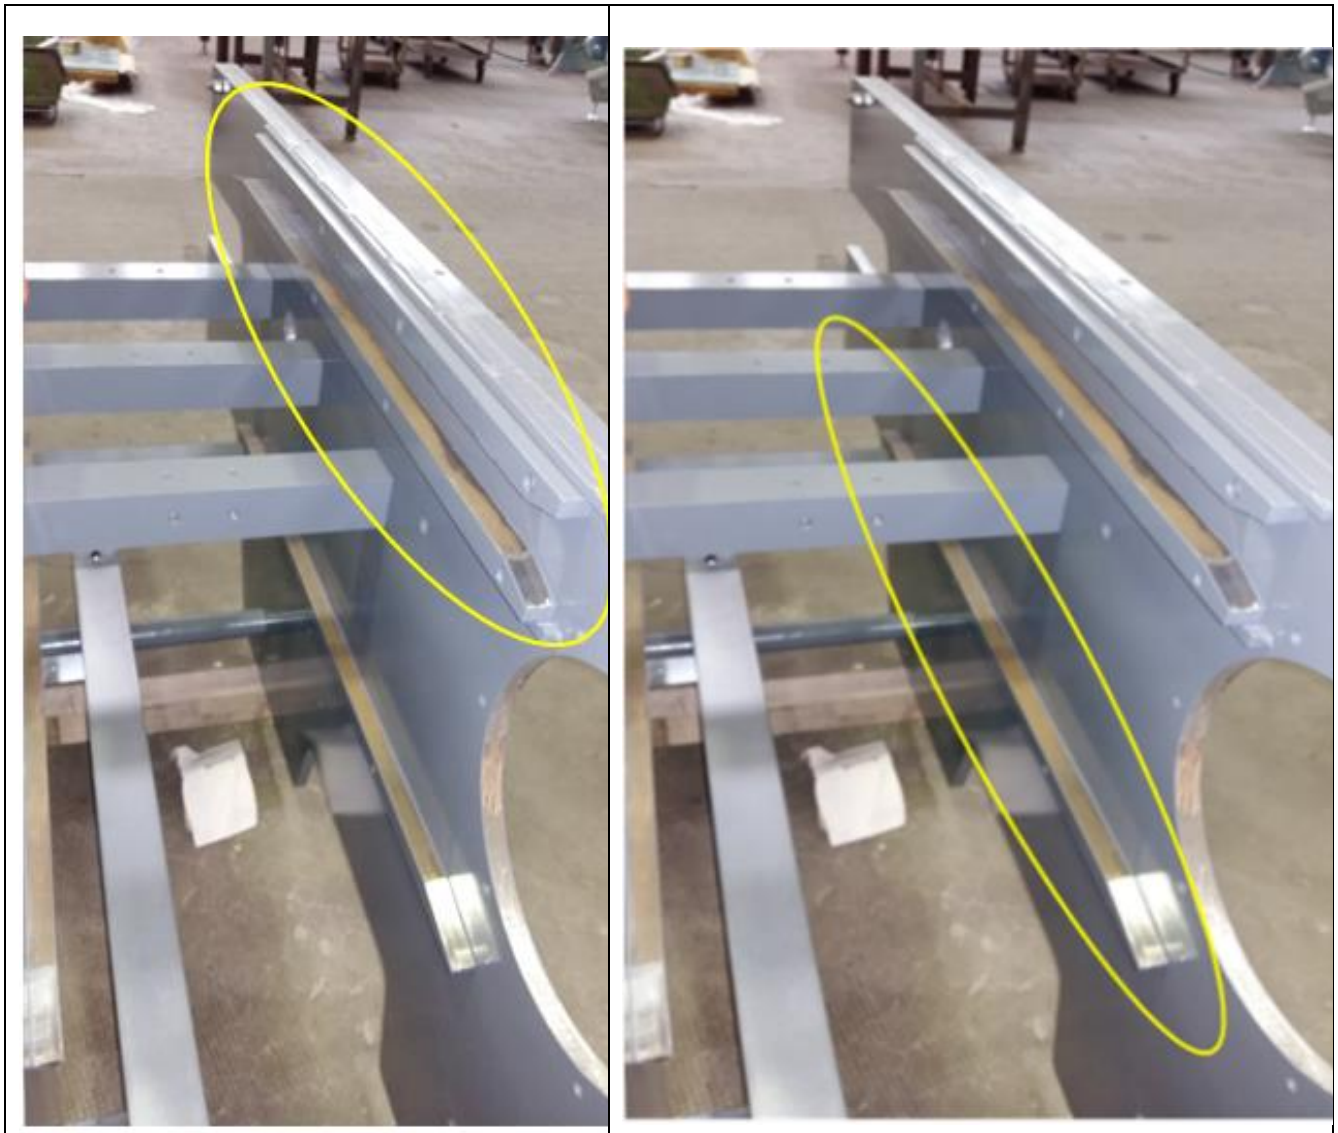

Description



7) Disassemble pushing chain gearbox.

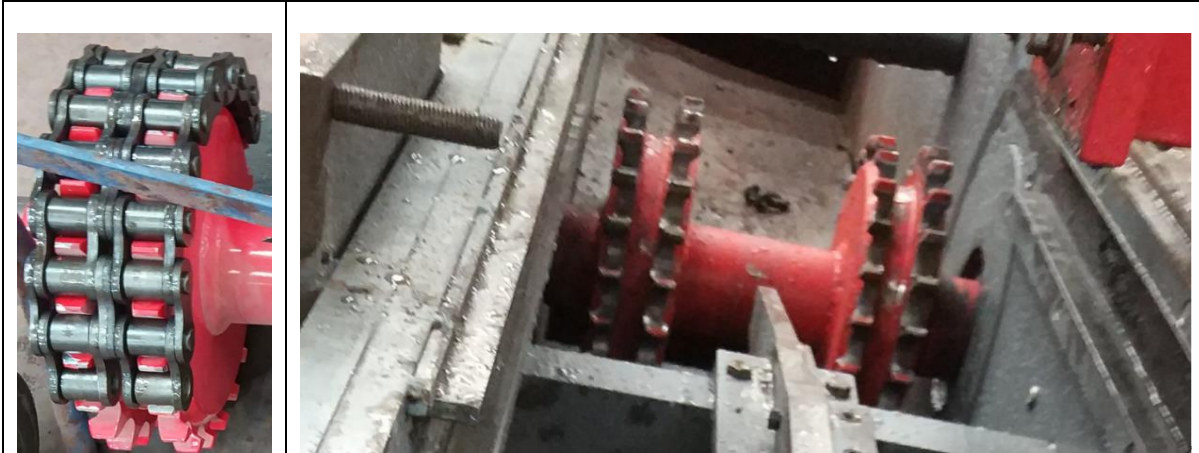



Check the clearance of the drive sprocket with a new section of chain → if there is excess clearance the drive sprocket and shaft must be replaced.



Disconnect the motor electrically & take reference of the electrical connection.

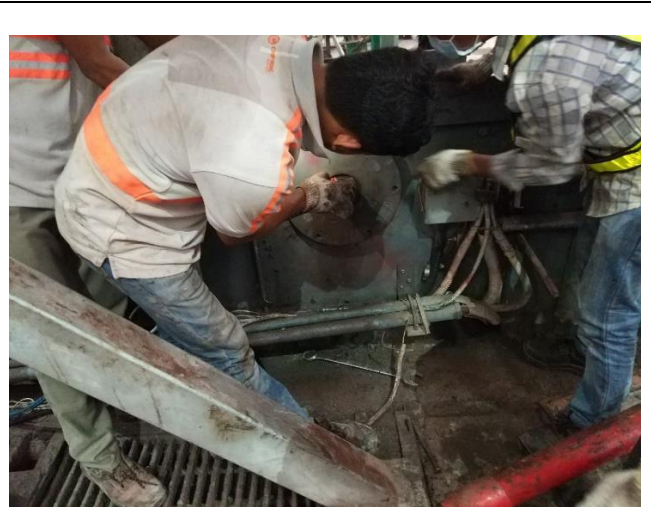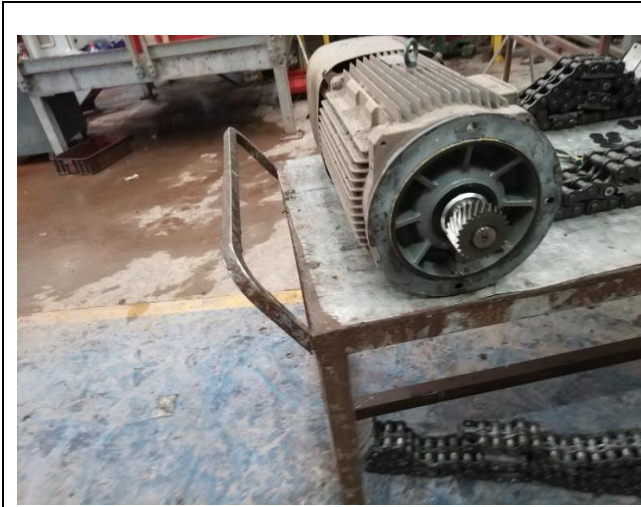

Empty the gearbox of oil and take out the electric motor. Mark the bearing covers on each side, remove the one on the rod side of the cutting carriage.

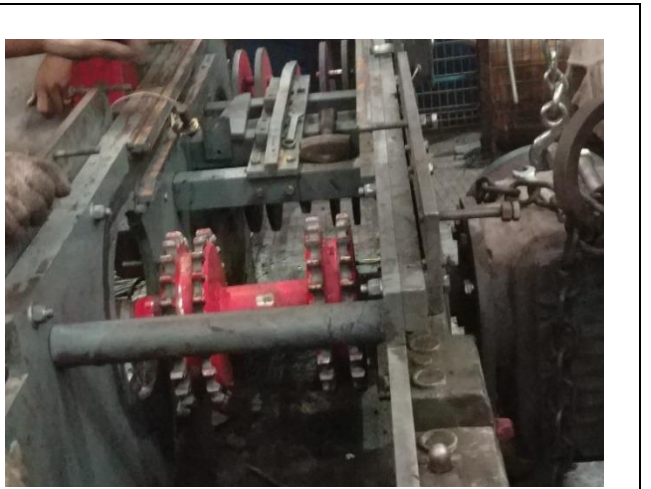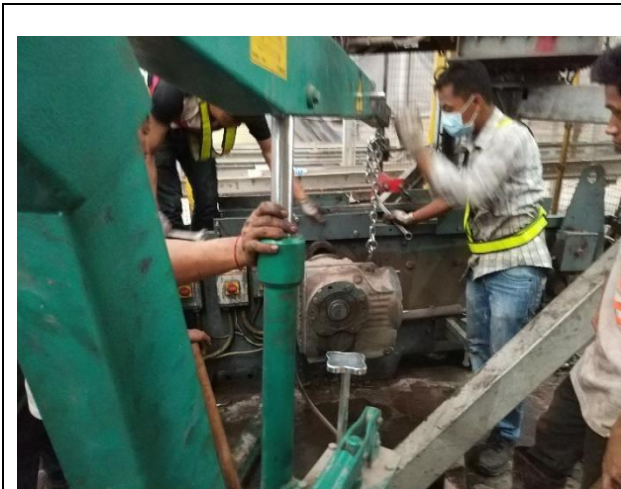

The gearbox unit cannot be removed from the sprocket drive shaft. Unscrew the bearing cover on the gearbox unit side and remove the gearbox unit with the sprocket drive shaft.



Disassemble the gearbox unit with the sprocket drive shaft.

Description

8) Disassemble the sprocket shaft of the drive side in an external workshop.



Replace the sprocket drive shaft with the gearbox unit in an external workshop to disassemble it with a hydraulic press, use it to replace the bearings in the bearing cover on the gearbox unit side and replace the new sprocket drive shaft.


Old sprocket drive shaft disassembled

Description

9) Assemble the gearbox unit and the new sprocket shaft of the pushing chain.



Assemble the gearbox unit with the new sprocket drive shaft on the pushing chain bench.

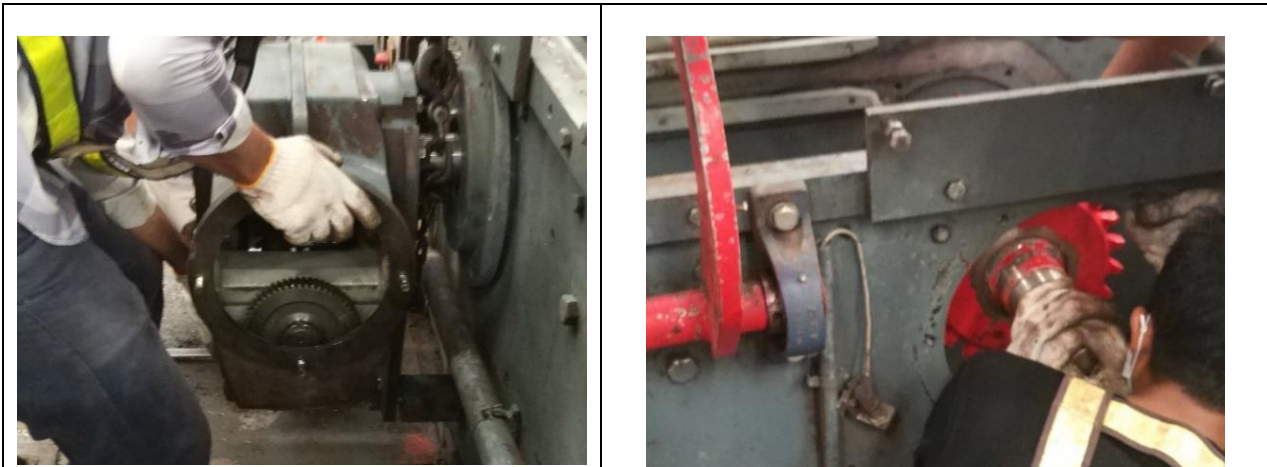

Assemble the bearing covers on both sides.




Assemble of the electric motor and oil refill of the gearbox.



Description


10) Assemble the new double chain and the trolleys.

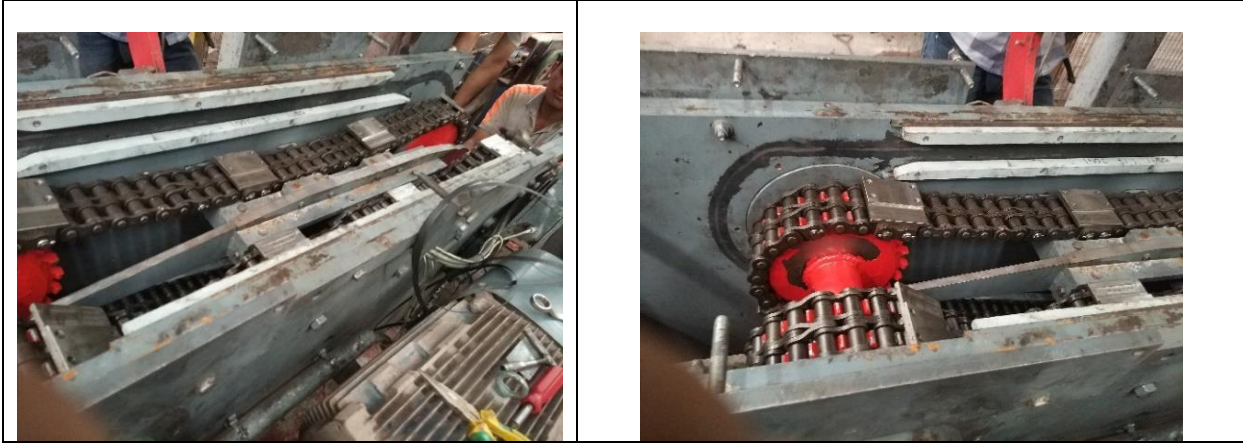

Assemble and fasten the new double pushing chain



Assemble the 9 trolleys on the double pushing chain.

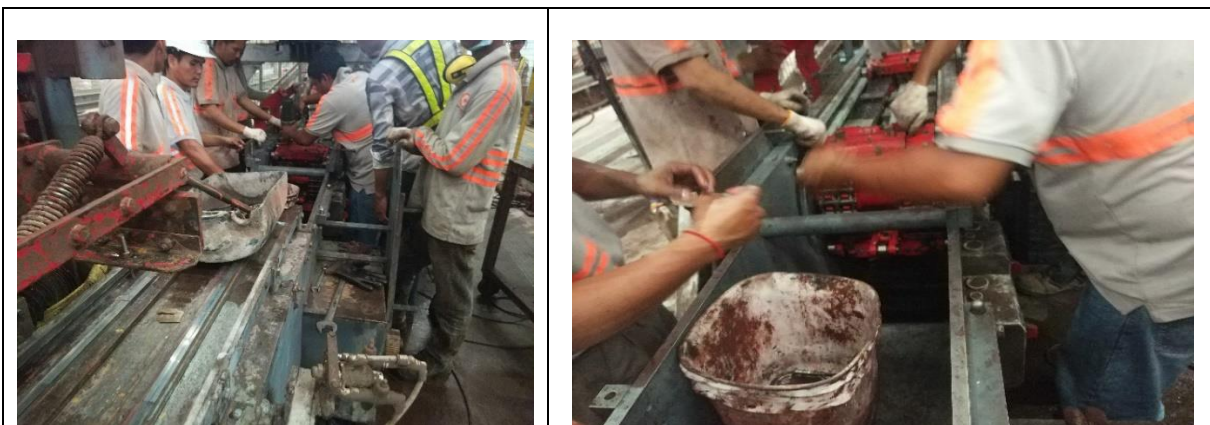


Assemble upper mould guides on the pushing chain.



New double pushing chain tensioned with the 9 trolleys.

Description

11) Assemble the extruder head.

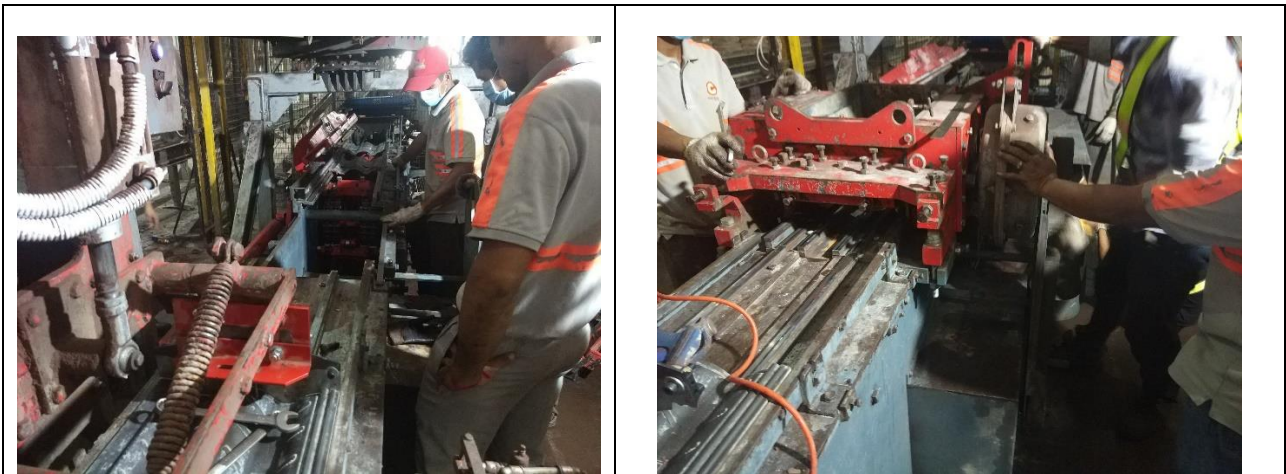

Assemble the extruder head on the bench.

12) Start moulds through the pushing chain and check the pusher plate push in the mould.



Start the moulds step through the pushing chain and check the moulds push by the pusher plate.

Description

13) Synchronize the cutting system point of the tile.



Place the cutting system at the central point of its displacement and the mould with its push chain in the central area (its cutting position), cutting blades perpendicular to the bench.



Place the rod of the cutting system at the upper point of the wheel and adjust the cutting system arm for that distance with the centered cutting system.