
Montage Camera

RunCam Thumb Pro

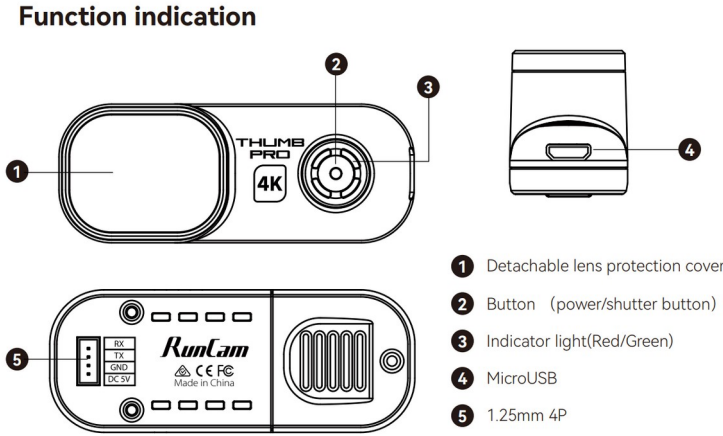

1. DESCRIPTION DE LA CAMÉRA

1. **Couvercle de protection de l'objectif détachable** : Il s'agit d'un couvercle qui peut être retiré pour protéger l'objectif de la caméra.
2. **Bouton (bouton d'alimentation/d'obturateur)** : Ce bouton sert à allumer la caméra et à déclencher l'obturateur pour prendre des photos ou des vidéos.
3. **Voyant indicateur (Rouge/Vert)** : Ce voyant pourrait indiquer l'état de la caméra, comme l'alimentation ou l'enregistrement.
4. **MicroUSB** : Il s'agit du port utilisé pour charger la caméra ou transférer des données.
5. **1.25mm 4P** : Port de connexion avec le contrôleur de vol.



Installation de la carte microSD


Micro SD Card

U3 card is recommended (4K@30FPS/2.7K@60FPS/1080P@120FPS requires U3 or above)

Supports up to 256G microSD card



Step 1

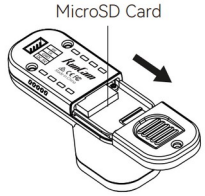

Step 2

Note: Be careful when handling the microSD card, please avoid contact with liquids, dust and debris. As a precaution, turn off the camera before inserting or removing a microSD card. Please refer to the microSD card manufacturer's instructions for use within an acceptable temperature range.






Support caméra flexible






Connexion au support motorisé

Power supply connection and flight controller connection

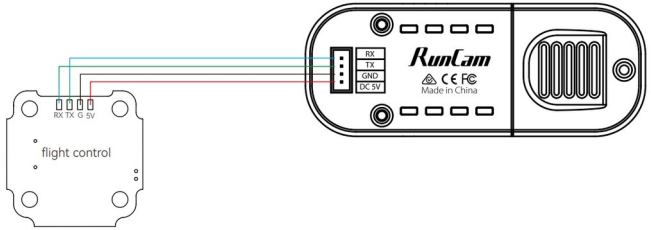

Please avoid long video recording in the case of high temperature and no ventilation.
Overheating will affect the performance of the device and cause the product to operate abnormally.



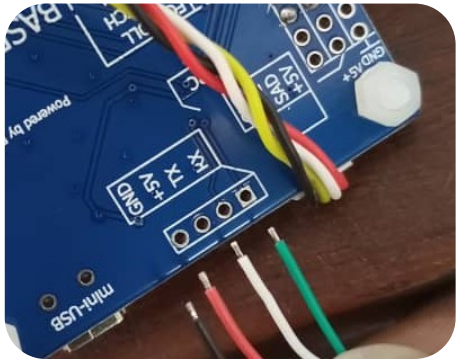

Nécessite
une soudure

Caméra montée sur support motorisé

