

SF-7016 12' POULTRY STUNNING SYSTEM



PARTS MANUAL

SIMMONS ENGINEERING COMPANY

91 SIMMONS INDUSTRIAL PLACE

P.O. BOX 546

DALLAS, GA 30132

770-445-6085 FAX: 770-443-9058

INFO@SIMENGCO.COM



March 19, 2019



*****FOR THE MOST UP TO DATE MANUALS PLEASE EMAIL
INFO@SIMENGCO.COM*****

Table of Contents

Using the Manual	4 - 4
12' Stunner Assembly	6 - 7
12' Cabinet Assembly	8 - 9
Stunner Shield Assembly	10 - 15
Cabinet, Infeed End	16 - 17
Cabinet Assembly, Insert Section 04	18 - 19
Drain Plug Assembly	20 - 21
Cabinet Assembly, Insert Section 12	22 - 23
Cabinet Assembly, Insert Section 04E	24 - 25
Cabinet Assembly, Insert Section 01 AC	26 - 27
Electric & Salt Water Control Panels (Cabinet and Wall Mounts)	28 - 31
High Volume Salt Water Injector	32 - 33
Salt Water Injector T-Handle Assembly	34 - 35
Flow Control Assembly	36 - 37
Overhead Assembly	38 - 39
Overhead Mount (Electric & Pneumatic)	40 - 40
Overhead Mount (Hydraulic)	41 - 41
Motor and Gear Box Assembly (110 Single Phase)	42 - 43
Motor and Gear Box Assembly	44 - 44
Pneumatic Motor & Valve Panel Assembly	46 - 46
Pneumatic Motor & Gearbox Assembly	47 - 47
Pneumatic Filter & Valve Assembly	48 - 49
Hydraulic Motor Assembly	50 - 51
Raise / Lower Stunner Box	52 - 52
Overhead Junction Box Assembly (Cabinet and Wall Mounts)	54 - 57
Warning Light	58 - 58
Stunner Control Panel Boxes (Cabinet and Wall Mounts)	60 - 63
Harness, Wiring Overhead Junction (Cabinet and Wall Mounts)	64 - 66
Stunner Guide Bar Kit	67 - 67
Mount, Attachment Assemblies	68 - 69
Stunner Enclosure Assembly	70 - 71
Wiring Diagrams (Cabinet and Wall Mounts)	72 - 74
Maintenance Instructions	77 - 79

Using the Manual

The Parts List

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	00000-00A	1	PART A
2	00000-00-00	2	PART B
3	PP-00-00	30	PART C
4	PP-00-00-0SS	400	PART D
5	RM-0000	2.7in	PART E
6	RM-0000-00	27ft	PART F

Explanation of Headings

- KEY #** locates the part on the adjacent drawing.
- PART #** is used for identification when ordering.
- QTY** is the number of required parts per assembly.
- DESCRIPTION** is a brief explanation of the part.

CHANGE NOTICE


This publication is provided to illustrate with intent, as accurately as possible, each item of the Simmons SF-7016 Stunner. This Publication is subject to change without notice.

*****FOR THE MOST UP TO DATE MANUALS PLEASE EMAIL
INFO@SIMENGCO.COM*****



THIS PAGE IS INTENTIONALLY LEFT BLANK


12' Stunner Assembly
(P/N 06800-05-12E/H/P)

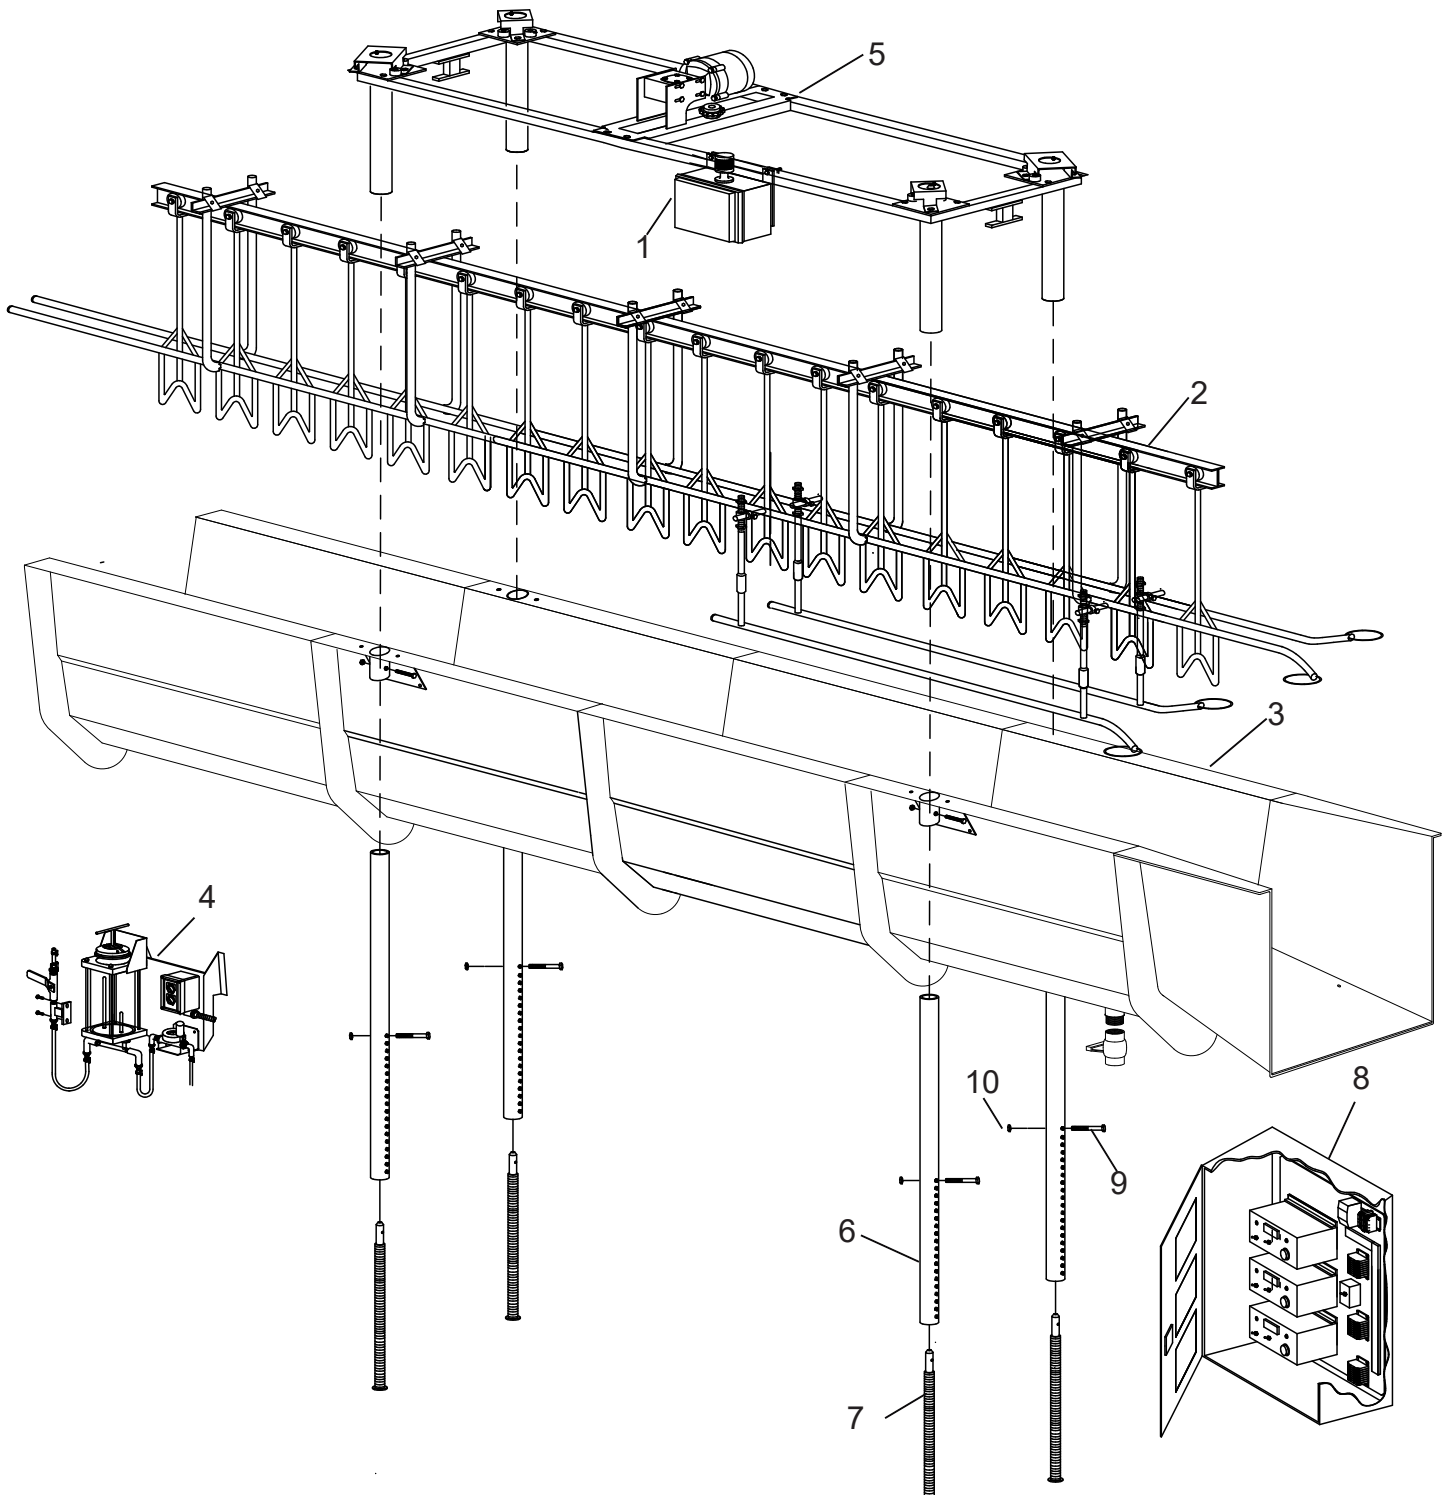

12' Stunner Assembly
(P/N 06800-05-12E/H/P)

KEY #	PART #	QTY.	DESCRIPTION
1	06640-35	1	BOX, Stunner Overhead Junction Assy.
2	06690-21-12	1	GUIDE BAR, Kit Stunner 12
3	06816-01-12	1	CABINET, SF-7016 Stunner 12' w/ Hinged Grate
4	06816-09-01	1	PANEL, Control Electric/Salt
5	06817-01-12E	1	OVERHEAD, Std 12 (Electric)
	06817-01-12H	1	OVERHEAD, Std 12 (Hydraulic)
	06817-01-12P	1	OVERHEAD, Std 12 (Pneumatic)
6	06824-15-40	4	ROD, Drop w/ Nut
7	06824-21	4	SCREW, Acme
8	07700-01C	1	ENCLOSURE, Stunner SS w/ 2DC & 1AC
9	PP-01-35	4	SCREW, HxHdCp 3/8 - 16 x 3 1/4
10	PP-04-01	4	NUT, Hex 3/8 - 16


12' Stunner Cabinet Assembly
(P/N 06816-01-12)

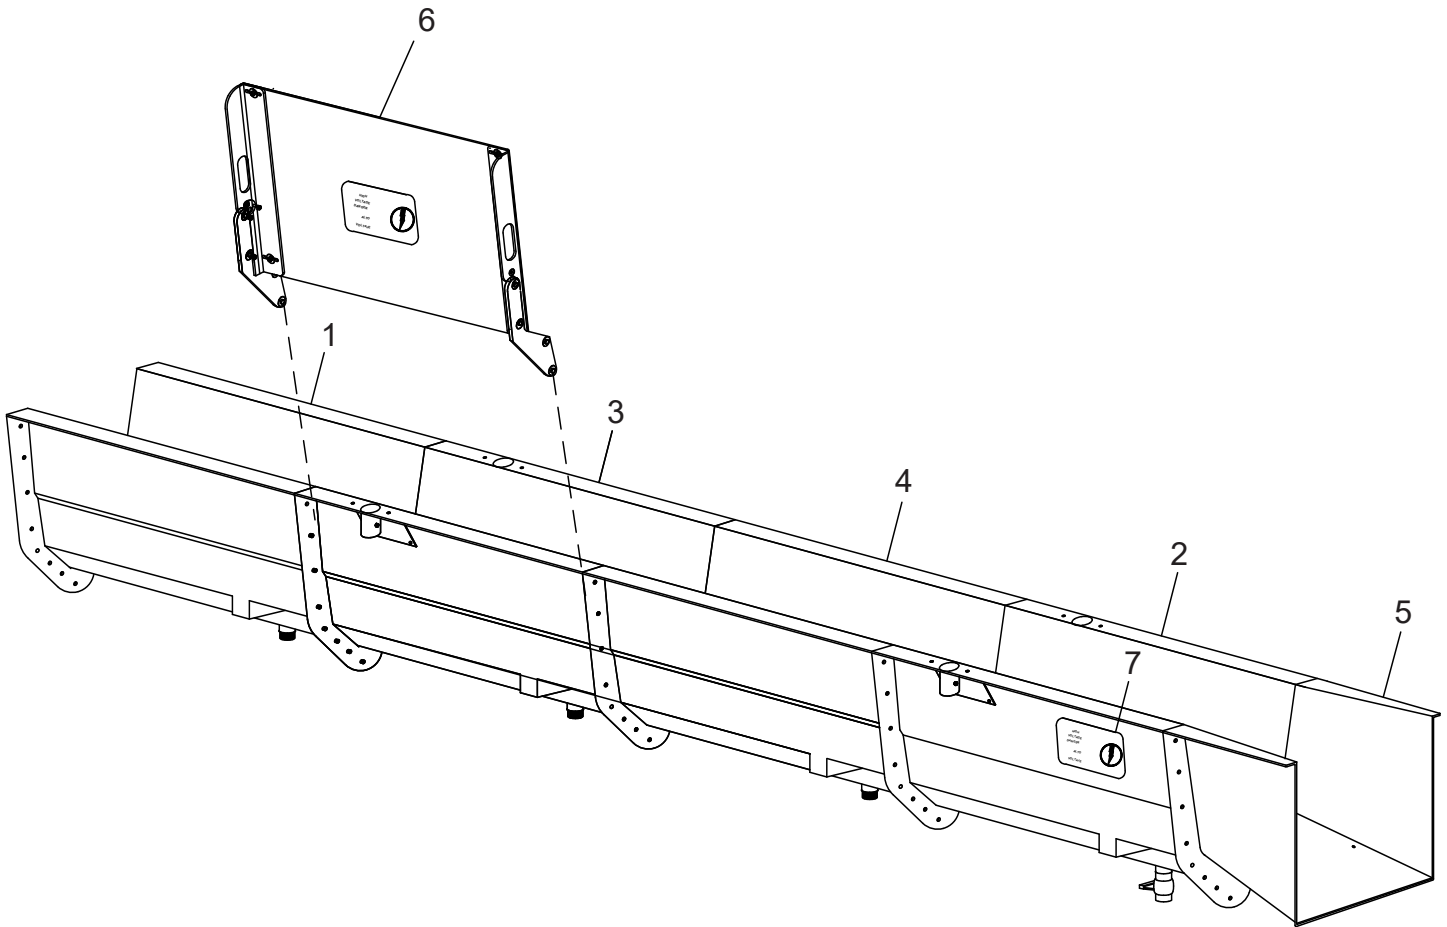

12' Stunner Cabinet Assembly
(P/N 06816-01-12)


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-03-01	1	INSERT, Stun Section 01 w/ Grates & AC Section
2	06816-03-04	1	INSERT, Stun Section 04 w/ Grates
3	06816-03-04E	1	INSERT, Stun Section 04E w/ Grates
4	06816-03-12	1	INSERT, Stun Section 12 w/ Grates
5	06816-07-01	1	INFEED, Stunner Assy.
6(Optional)	06816-61-01	~	SHIELD, Stunner Section
7	PP-19-99-10	~	SIGN, Electrical Warning SF-7016

Stunner Section Shield (Optional Accessory)
(P/N 06816-61-01)

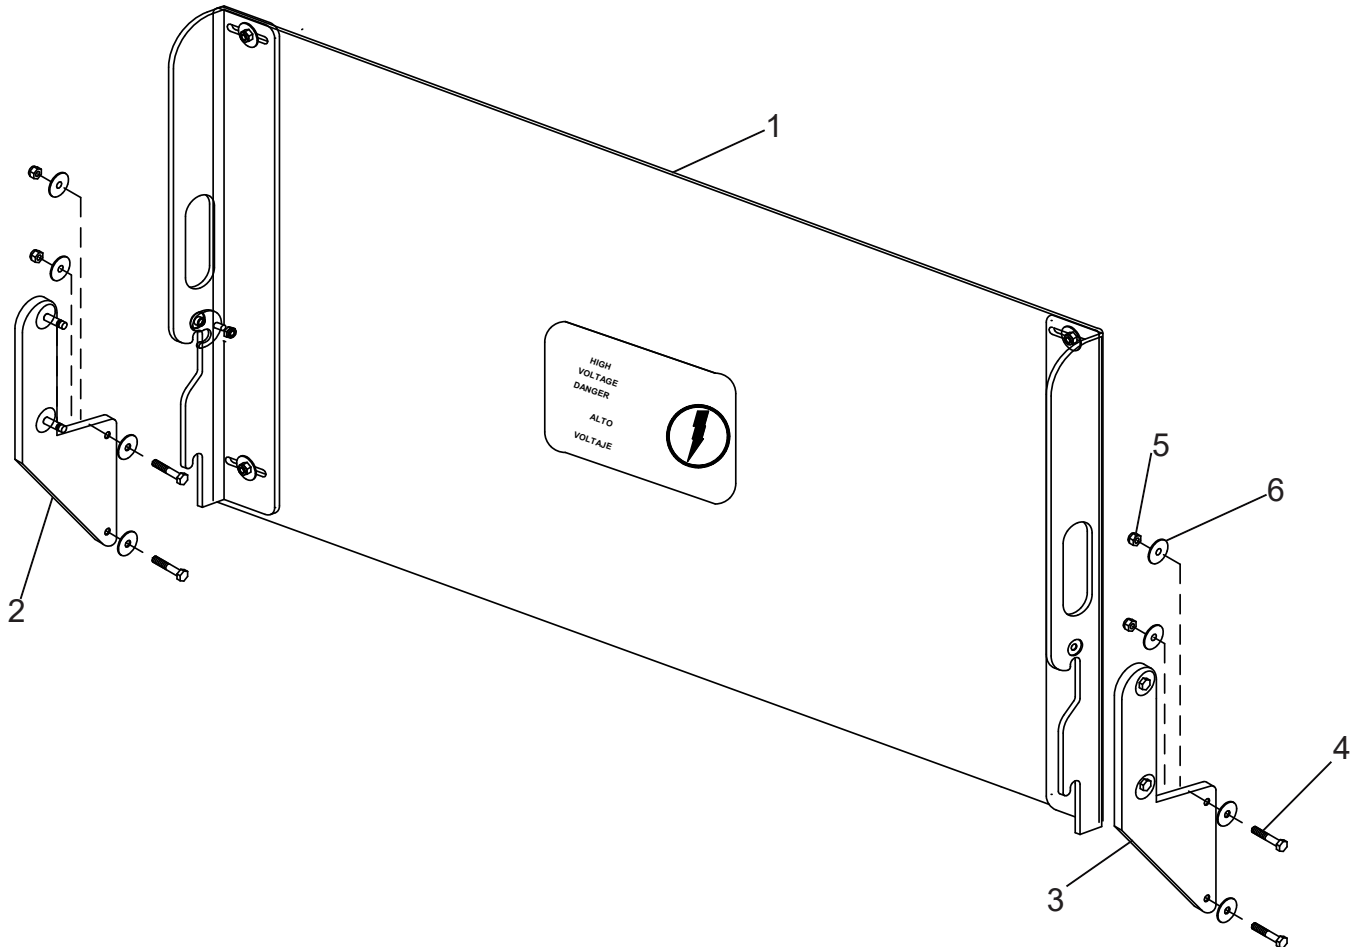


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-61-03	1	PANEL, Stunner Guard Assy.
2	06816-61-07L	1	ARM, Stunner Guard Mount LH
3	06816-61-07R	1	ARM, Stunner Guard Mount RH
4	PP-01-19	4	SCREW, HxHdCp 5/16 - 18 x 2
	PP-01-21	4	SCREW, HxHdCp 5/16 - 18 x 2 1/2
	PP-01-24	4	SCREW, HxHdCp 5/16 - 18 x 3 1/2
5	PP-04-32	4	NUT, Nyloc 5/16 - 18
6	PP-05-16	8	WASHER, 5/16 (Flat)

Stunner Guard Panel Assembly (Optional Accessory)
(P/N 06816-61-03)

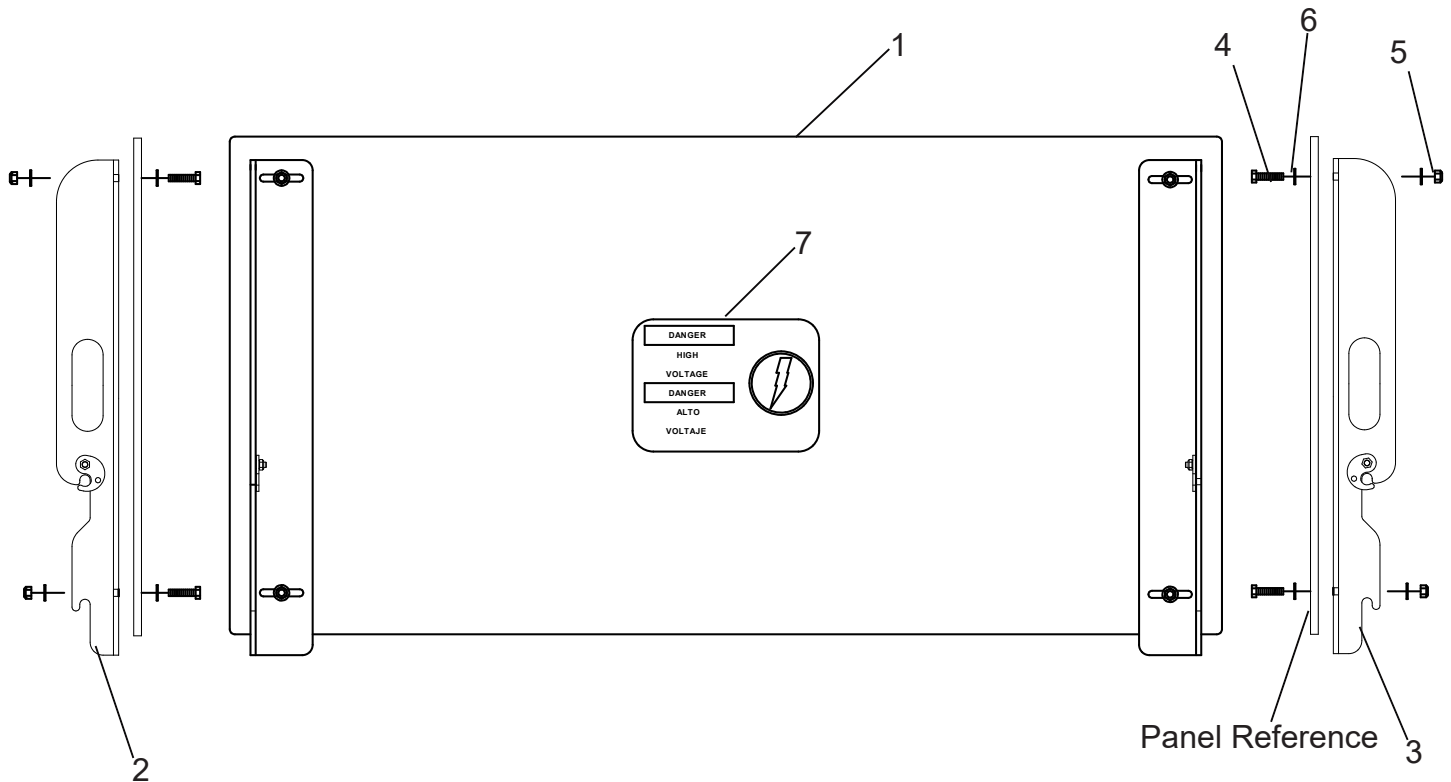


KEY #	PART #	QTY.	DESCRIPTION
1	06816-61-05	1	PANEL, Stunner Guard (Includes #7)
2	06816-61-09L	1	ANGLE, Stunner Guard Panel Mount LH
3	06816-61-09R	1	ANGLE, Stunner Guard Panel Mount RH
4	PP-01-16	4	SCREW, HxHdCp 5/16 - 18 x 1 1/4
5	PP-04-32	8	NUT, Nyloc 5/16 - 18
6	PP-05-16	8	WASHER, 5/16 (Flat)
7	PP-19-99-10	1	SIGN, Electrical Warning (SF-7016 Stunner)

Stunner Guard Panel Mount Angle LH (Optional Accessory)
(P/N 06816-61-09L)

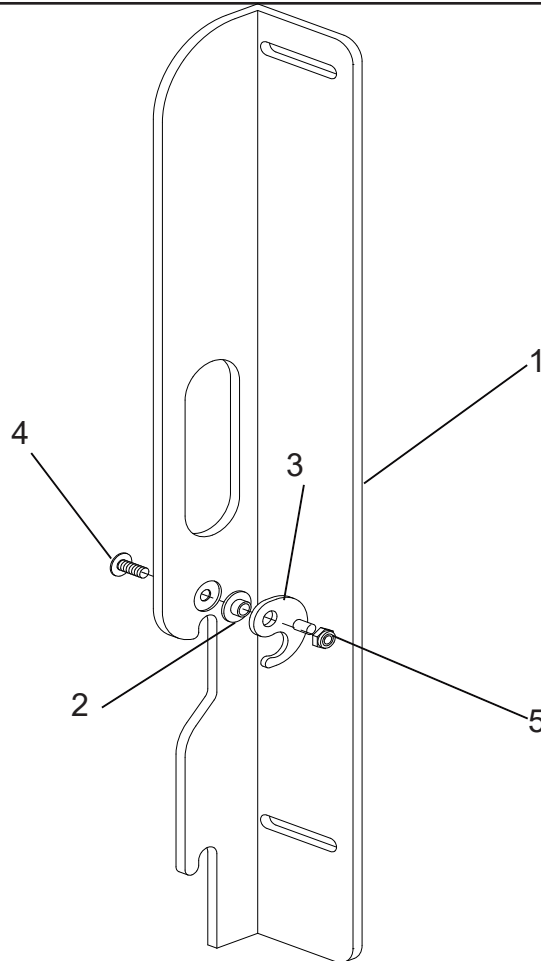


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-61-10L	1	ANGLE, Mount LH
2	06816-61-13	1	STUD, Latch Mount
3	06816-61-15L	1	LATCH, Shield LH
4	PP-02-76-01	1	SCREW, SktFlgBtnHd 1/4 - 20 x 5/8 18 - 8
5	PP-04-29	1	NUT, Nyloc 1/4 - 20 Jam

**Stunner Guard Panel Mount Angle RH (Optional Accessory)
(P/N 06816-61-09R)**

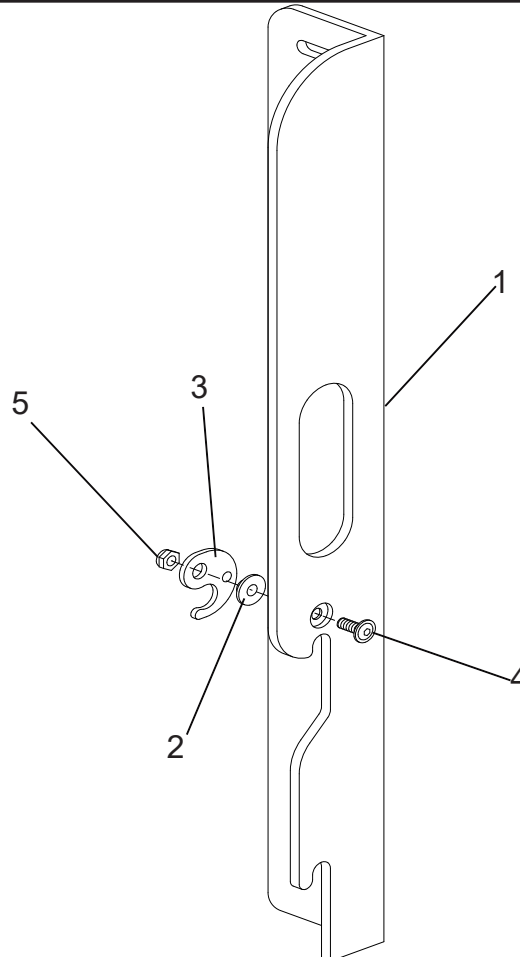


KEY #	PART #	QTY.	DESCRIPTION
1	06816-61-10R	1	ANGLE, Mount RH
2	06816-61-13	1	STUD, Latch Mount
3	06816-61-15R	1	LATCH, Shield RH
4	PP-02-76-01	1	SCREW, SktFlgBtnHd 1/4 - 20 x 5/8 18 - 8
5	PP-04-29	1	NUT, Nyloc 1/4 - 20 Jam

Stunner Guard Mount Arm LH (Optional Accessory)
(P/N 06816-61-07L)

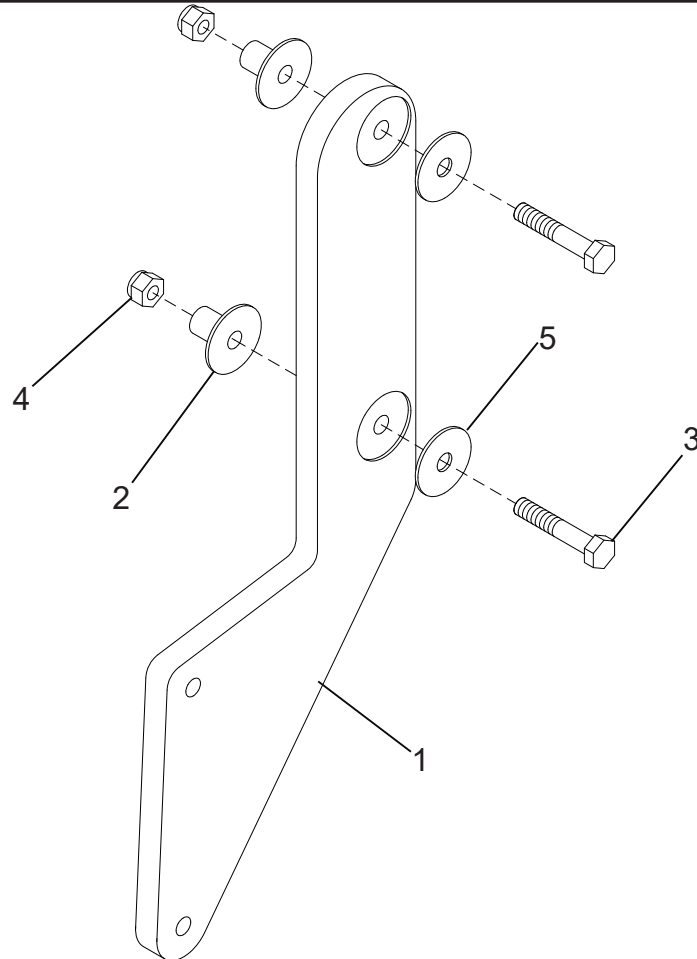


KEY #	PART #	QTY.	DESCRIPTION
1	06816-61-07	1	BRACKET, Stunner Panel Guard Mount
2	06816-61-11	2	STUD, Panel Mount
3	PP-01-18-03	2	SCREW, HxHdCp 5/16 - 18 x 1 3/4
4	PP-04-32	2	NUT, Nyloc 5/16 - 18
5	PP-05-16-01	2	WASHER, 5/16 (Flat Fender)

Stunner Guard Mount Arm RH (Optional Accessory)
(P/N 06816-61-07R)

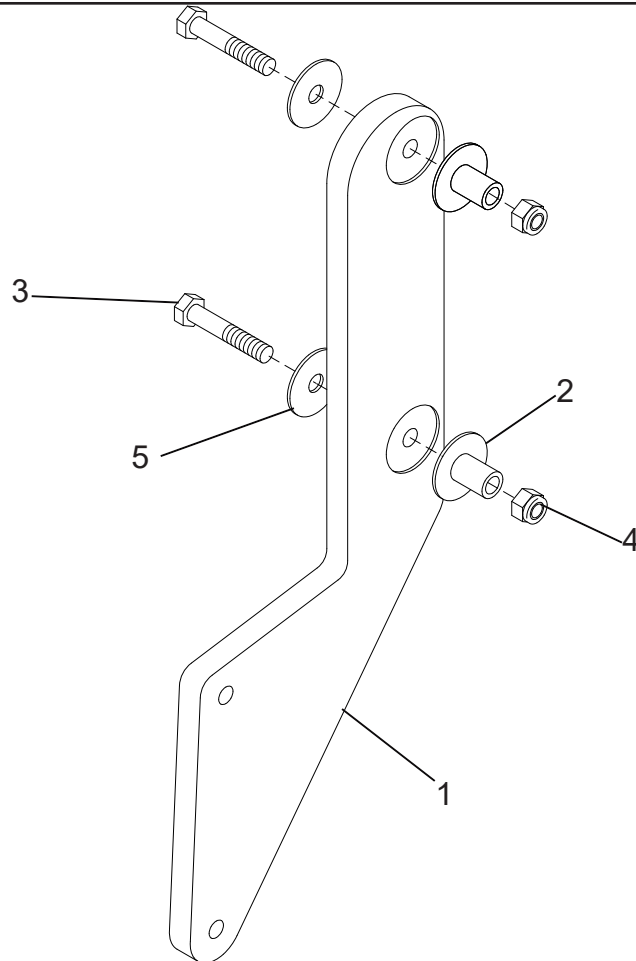

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-61-07	1	BRACKET, Stunner Panel Guard Mount
2	06816-61-11	2	STUD, Panel Mount
3	PP-01-83-03	2	SCREW, HxHdCp 5/16 - 18 x 1 3/4
4	PP-04-32	2	NUT, Nyloc 5/16 - 18
5	PP-05-16-01	2	WASHER, 5/16 (Flat Fender)


**Cabinet Assembly, Infeed End
(P/N 06816-07-01)**

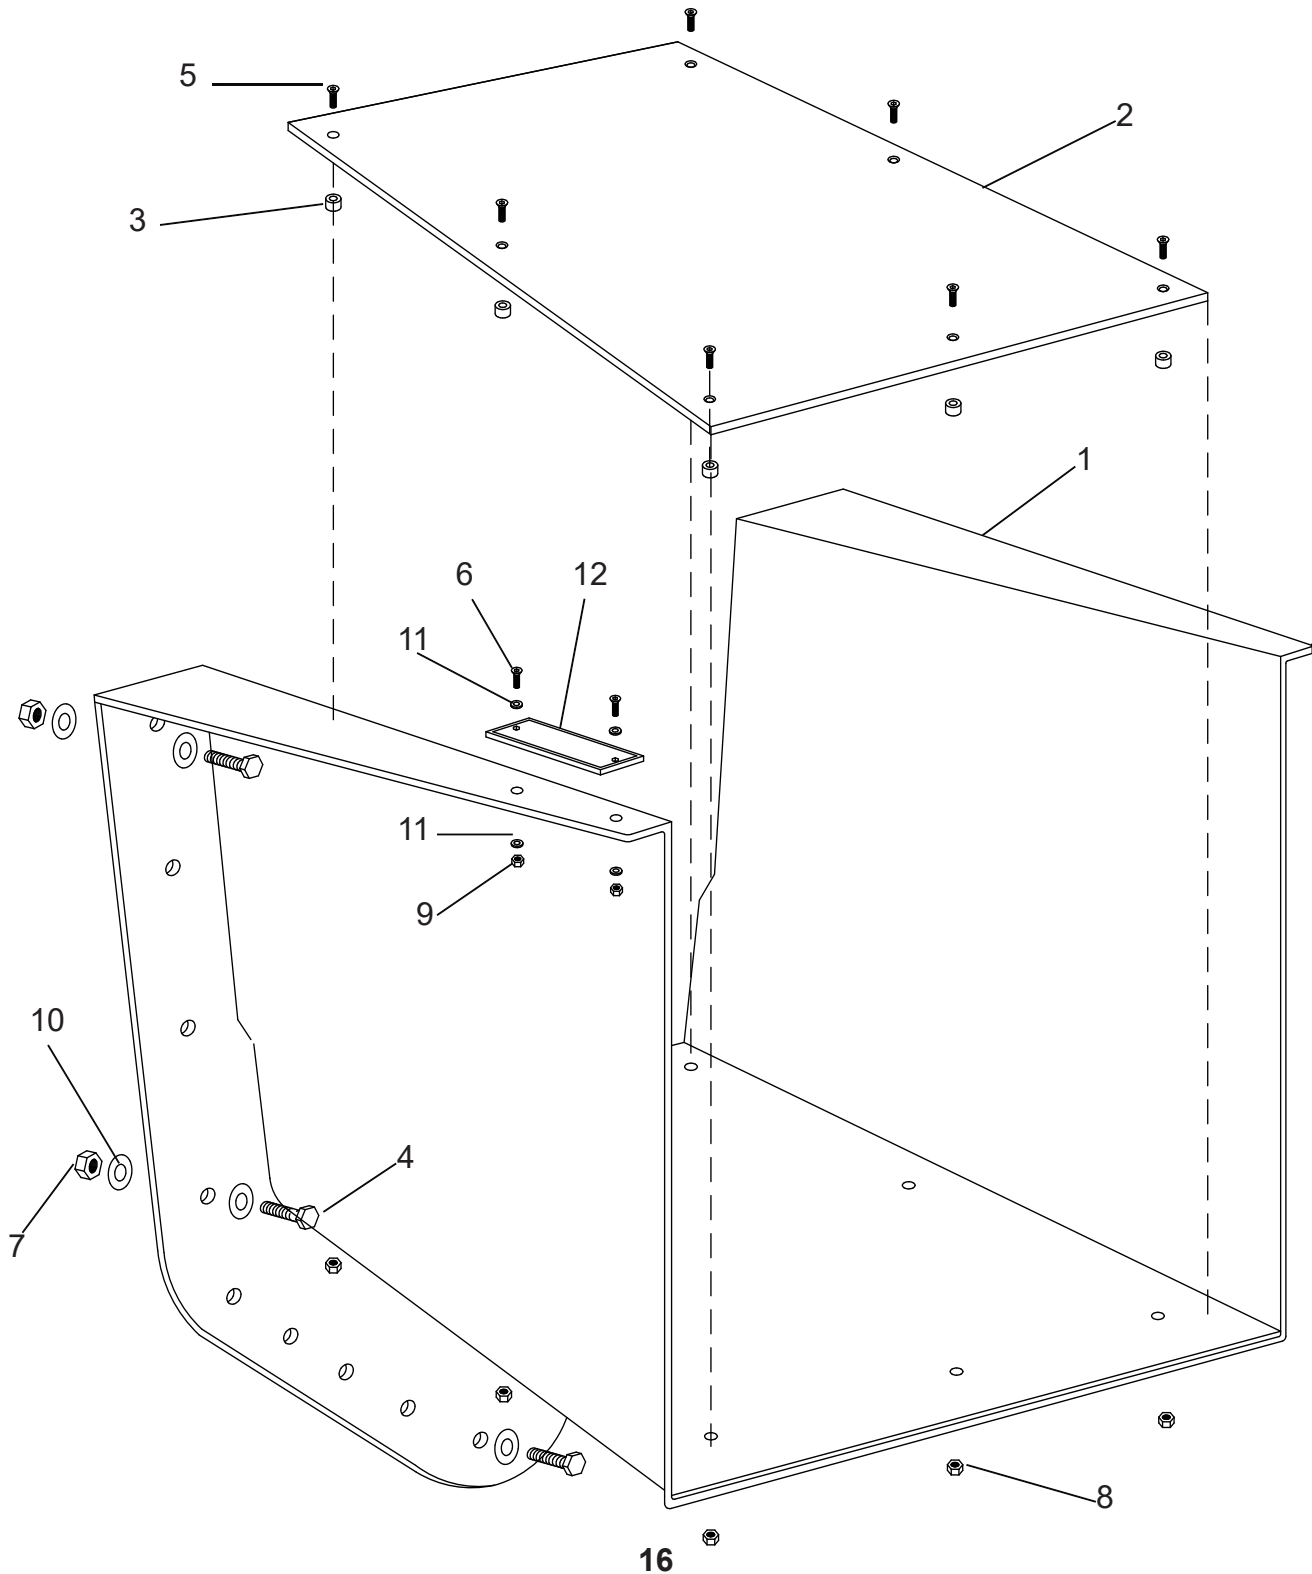

Cabinet Assembly, Infeed End
(P/N 06816-07-01)

KEY #	PART #	QTY.	DESCRIPTION
1	06816-07-03	1	INFEED, Stunner Drilled
2	06816-07-05	1	RAMP, Infeed
3	06816-07-07	7	SPACER, Ramp 1/2
4	PP-01-16	17	SCREW, HxHdCp 5/16 - 18 x 1 1/4
5	PP-02-232-01	7	SCREW, FltHd 5/16 - 18 x 2 Nylon
6	PP-02-96-06	2	SCREW, HxHdMch 4 - 40 x 3/4
7	PP-04-07	17	NUT, Hex 5/16 - 18
8	PP-04-07-05	7	NUT, Hex 5/16 - 18 Nylon
9	PP-04-76-01	2	NUT, Cap Lock 4 - 40
10	PP-05-16	34	WASHER, 5/16 (Flat)
11	PP-05-71-07	2	WASHER, #4 (Flat)
12	PP-16-15	1	PLATE, Simmons Engineering Serial #


Cabinet Assembly, Insert Section 04
(P/N 06816-03-04)

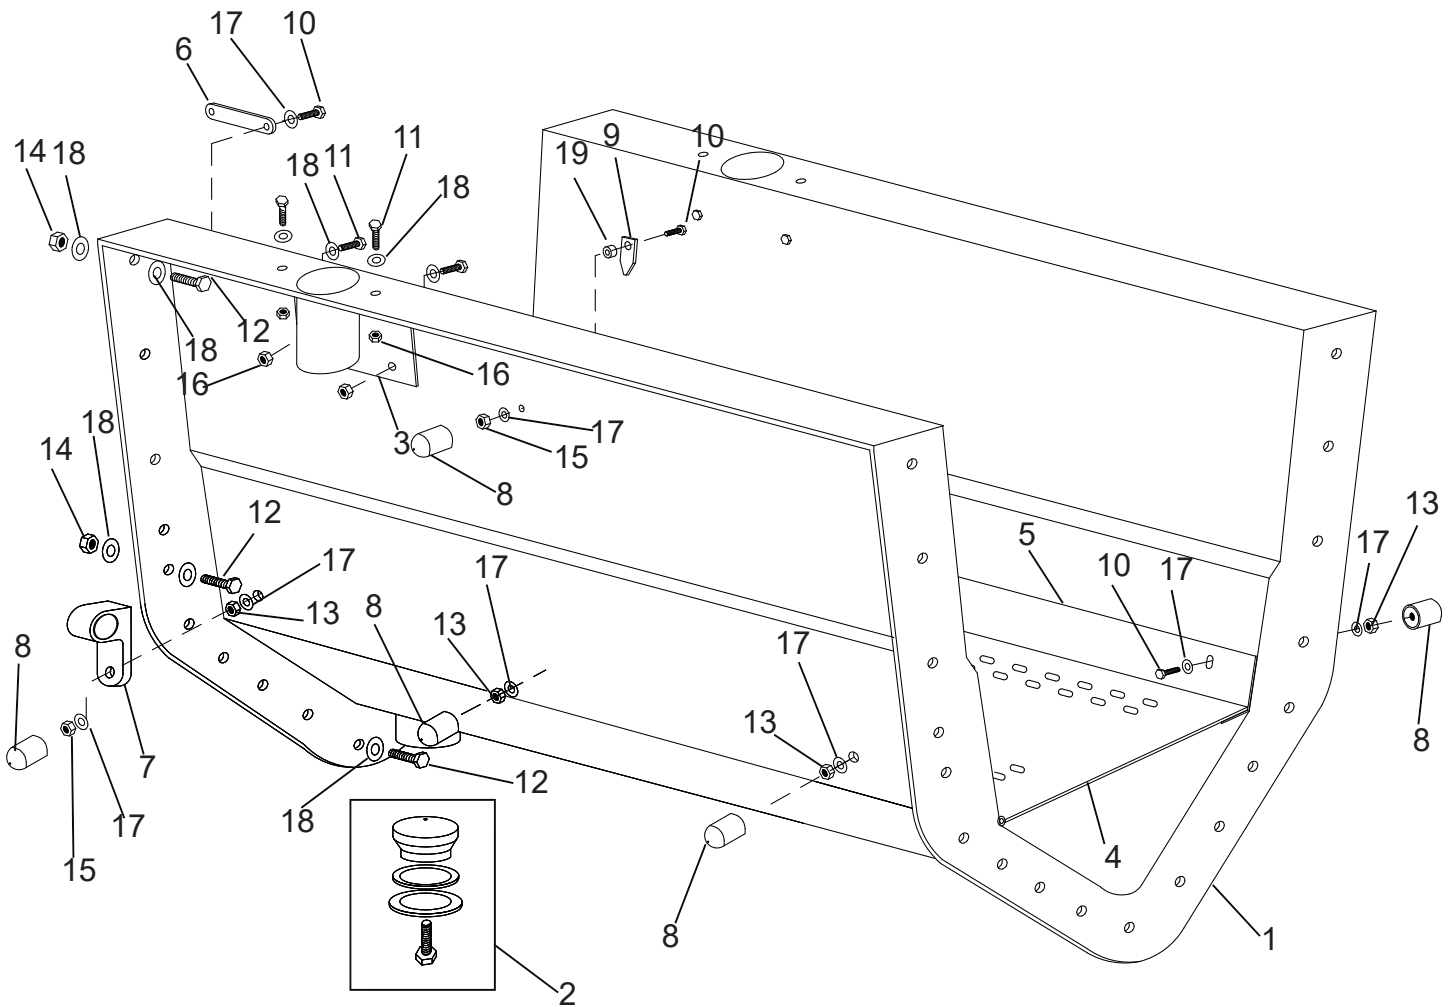

Cabinet Assembly, Insert Section 04
(P/N 06816-03-04)

KEY #	PART #	QTY.	DESCRIPTION
1	06816-05-04	1	INSERT, Drill Section 04
2	06816-21-01	1	PLUG, Drain Assy.
3	06816-21-11	2	MOUNT, Stunner Support
4	06816-31-01	1	GRATE, 48" Assy.
5	06816-31-07	1	RAIL, 48" DC/AC 30deg.
6	06816-31-17	1	PLATE, Hinge Connection
7	06816-35-01	1	MOUNT, Wire Tube
8	06816-35-07	7	ISOLATOR, Grate Extension
9	06832-61	1	LATCH, Stun
10	PP-01-06-FT	7	SCREW, HxHdCp 1/4 - 20 x 1 1/2 Full Thread
11	PP-1-14-01	8	SCREW, HxHdCp 5/16 - 18 x 1 1/8
12	PP-01-16-05	17	SCREW, HxHdCp 5/16 - 18 x 1 3/8
13	PP-04-06	6	NUT, Hex 1/4 - 20
14	PP-04-07	17	NUT, Hex 5/16 - 18
15	PP-04-29	2	NUT, Nyloc 1/4 - 20 Jam
16	PP-04-32	8	NUT, Nyloc 5/16 - 18
17	PP-05-15	14	WASHER, 1/4 (Flat)
18	PP-05-16	42	WASHER, 5/16 (Flat)
19	PP-12-21	1	BUSHING, 1/2 x 3/8 x 1/4


**Drain Plug Assembly
(P/N 06816-21-01)**

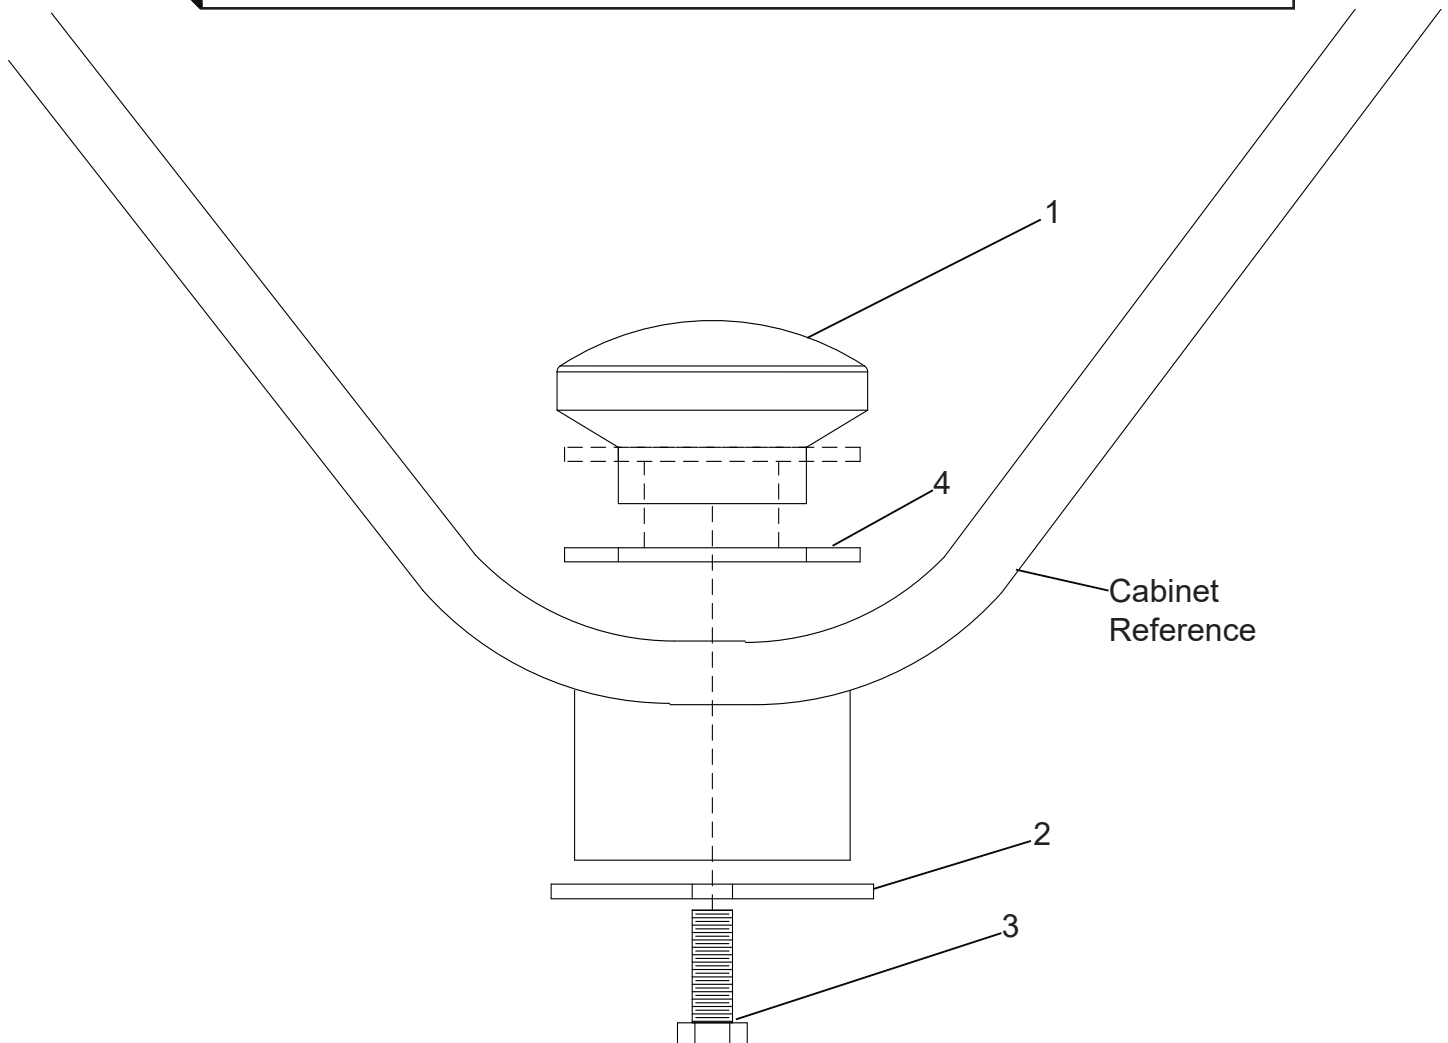

Drain Plug Assembly
(P/N 06816-21-01)

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-21-03	1	PLUG, Drain
2	06816-21-05	1	WASHER, Drain
3	PP-01-26	1	SCREW, HxHdCp 3/8 - 16 x 1
4	PP-06816-21-07	1	GASKET, Drain


Cabinet Assembly, Insert Section 12
(P/N 06816-03-12)

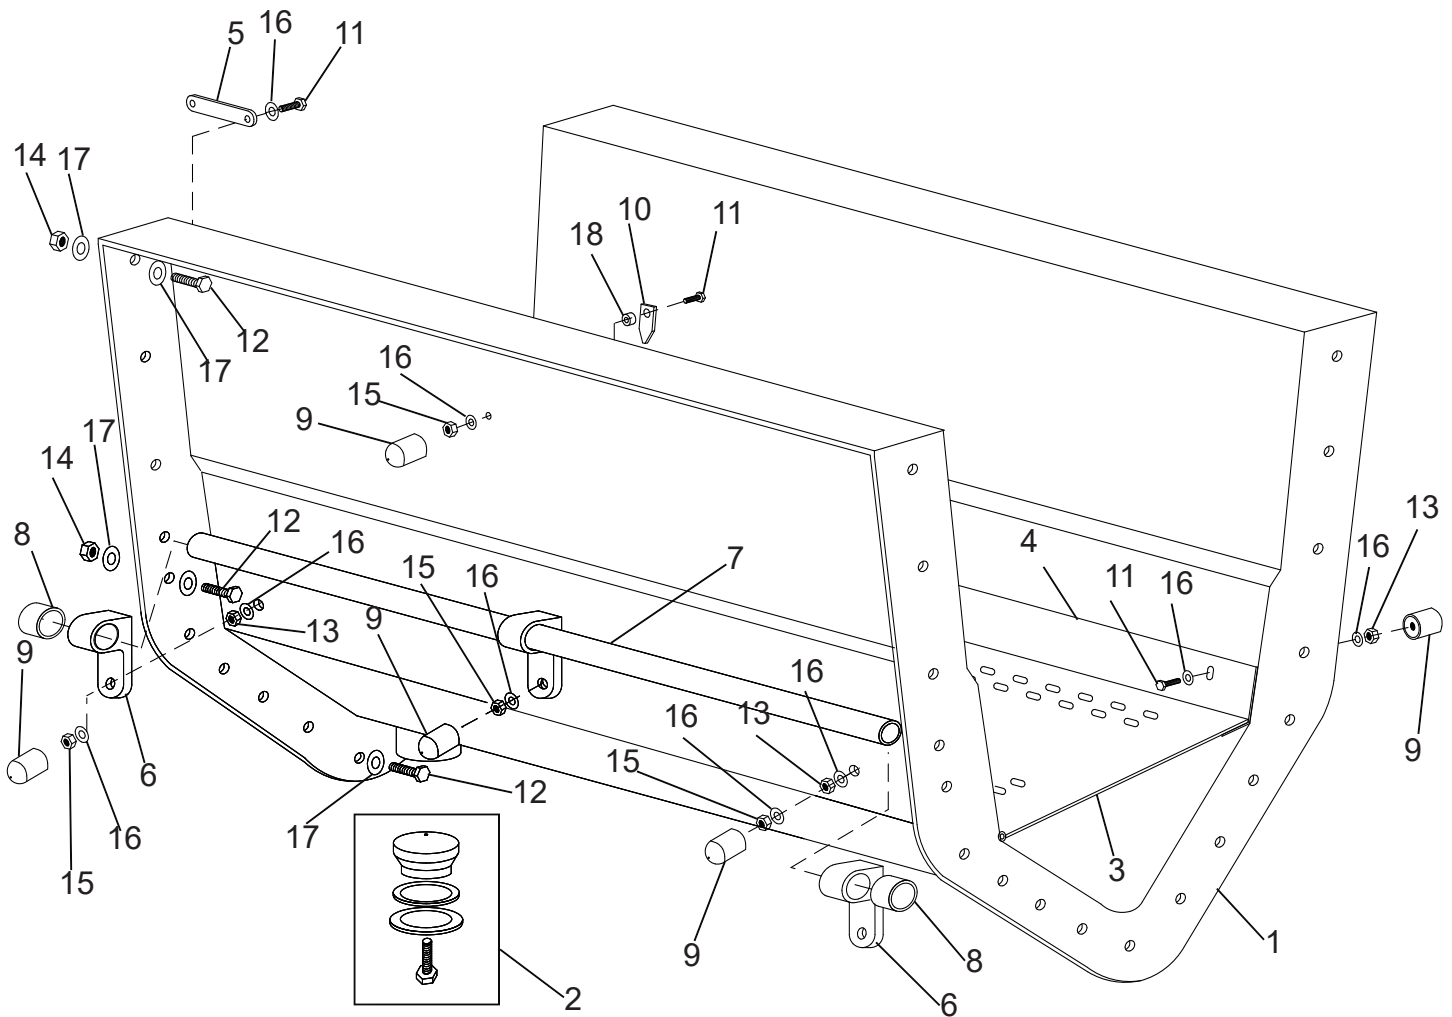

Cabinet Assembly, Insert Section 12
(P/N 06816-03-12)

KEY #	PART #	QTY.	DESCRIPTION
1	06816-05-01	1	INSERT, Drill Section 01
2	06816-21-01	1	PLUG, Drain Assy.
3	06816-31-01	1	GRATE, 48" Assy.
4	06816-31-07	1	RAIL, 48" DC/AC 30deg.
5	06816-31-17	1	PLATE, Hinge Connection
6	06816-35-01	3	MOUNT, Wire Tube
7	06816-35-03/45	1	TUBE, Wire 45"
8	06816-35-05	2	RETAINER, Ring Tube
9	06816-35-07	7	ISOLATOR, Grate Extension
10	06832-61	1	LATCH, Stun
11	PP-01-06-FT	7	SCREW, HxHdCp 1/4 - 20 x 1 1/2 Full Thread
12	PP-01-16-05	17	SCREW, HxHdCp 5/16 - 18 x 1 3/8
13	PP-04-06	6	NUT, Hex 1/4 - 20
14	PP-04-07	17	NUT, Hex 5/16 - 18
15	PP-04-29	4	NUT, Nyloc 1/4 - 20 Jam
16	PP-05-15	16	WASHER, 1/4 (Flat)
17	PP-05-16	34	WASHER, 5/16 (Flat)
18	PP-12-21	1	BUSHING, 1/2 x 3/8 x 1/4


**Cabinet Assembly, Exit Section 04E
(P/N 06816-03-04E)**

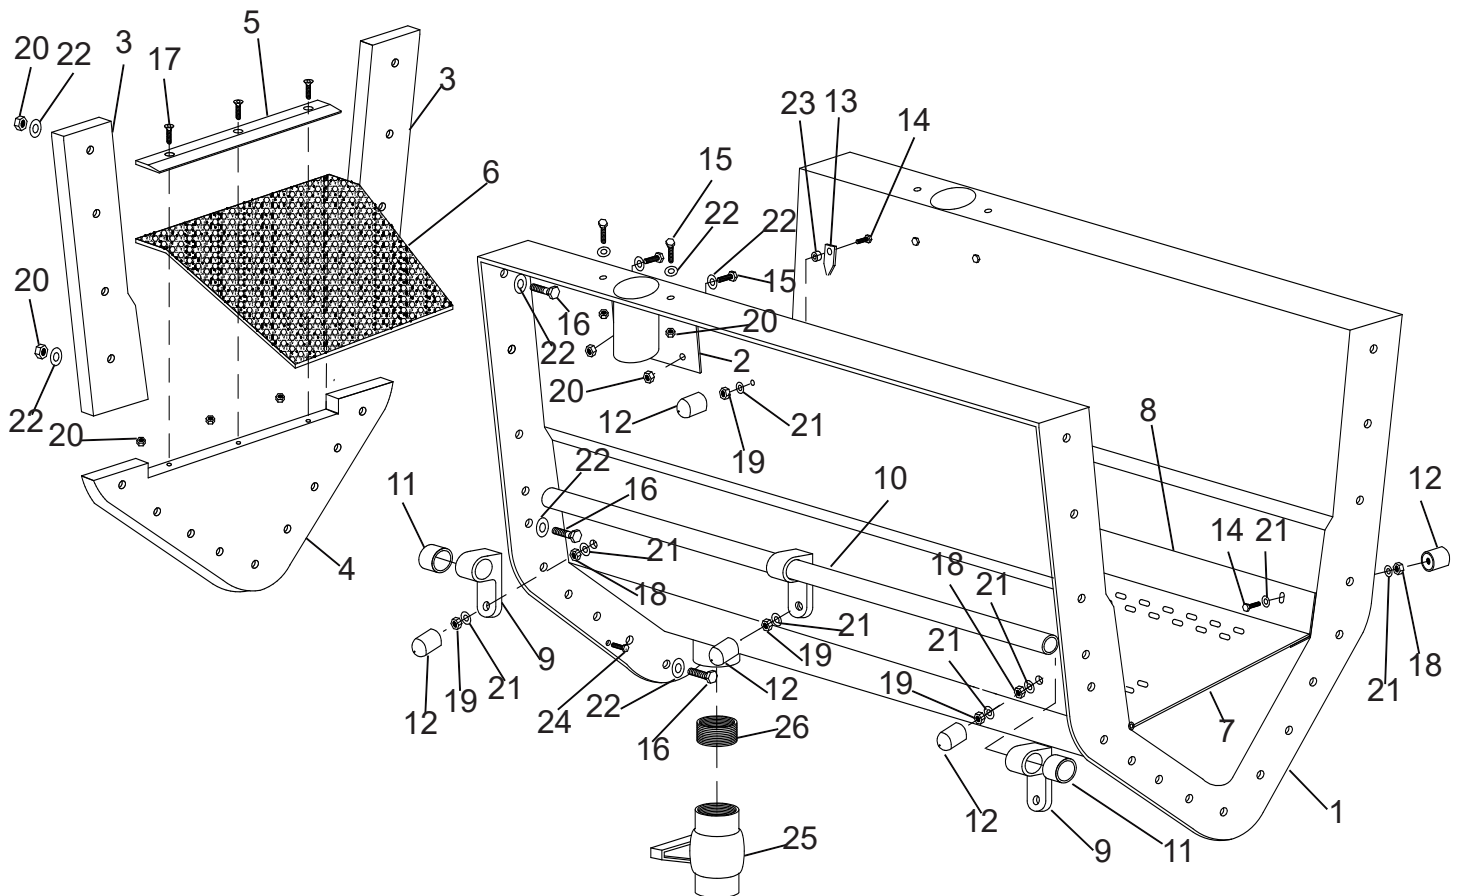

Cabinet Assembly, Exit Section 04E
(P/N 06816-03-04E)

KEY #	PART #	QTY.	DESCRIPTION
1	06816-05-04E	1	INSERT, Drill Exit Section 04E
2	06816-21-11	2	MOUNT, Stunner Support
3	06816-21-15	2	SHIM, DC Exit
4	06816-21-17	1	DAM, DC Exit
5	06816-21-19	1	CLAMP, DC Exit Ramp
6	06816-21-21	1	RAMP, DC Exit
7	06816-31-09	1	GRATE, 42" Exit DC Assy.
8	06816-31-15	1	RAIL, 42" Exit DC 30deg.
9	06816-35-01	3	MOUNT, Wire Tube
10	06816-35-03/45	1	TUBE, Wire 45"
11	06816-35-05	2	RETAINER, Ring Tube
12	06816-35-07	7	ISOLATOR, Grate Extension
13	06832-61	1	LATCH, Stun
14	PP-01-06-FT	7	SCREW, HxHdCp 1/4 - 20 x 1 1/2 Full Thread
15	PP-1-14-01	8	SCREW, HxHdCp 5/16 - 18 x 1 1/8
16	PP-01-21	17	SCREW, HxHdCp 5/16 - 18 x 2 1/2
17	PP-02-154	3	SCREW, SktFltHd 5/16 - 18 x 1 3/4
18	PP-04-06	6	NUT, Hex 1/4 - 20
19	PP-04-29	4	NUT, Nyloc 1/4 - 20 Jam
20	PP-04-32	28	NUT, Nyloc 5/16 - 18
21	PP-05-15	16	WASHER, 1/4 (Flat)
22	PP-05-16	42	WASHER, 5/16 (Flat)
23	PP-12-21	1	BUSHING, 1/2 x 3/8 x 1/4
24	PP-17-11	6	SCREW, PHST 8/16 x 3/4
25	PP-25-245	1	VALVE, Ball 2" PVC FemNpt
26	PP-25-401	1	NIPPLE, 2" Close PVC


**Cabinet Assembly, Insert Section 01 AC
(P/N 06816-03-01)**

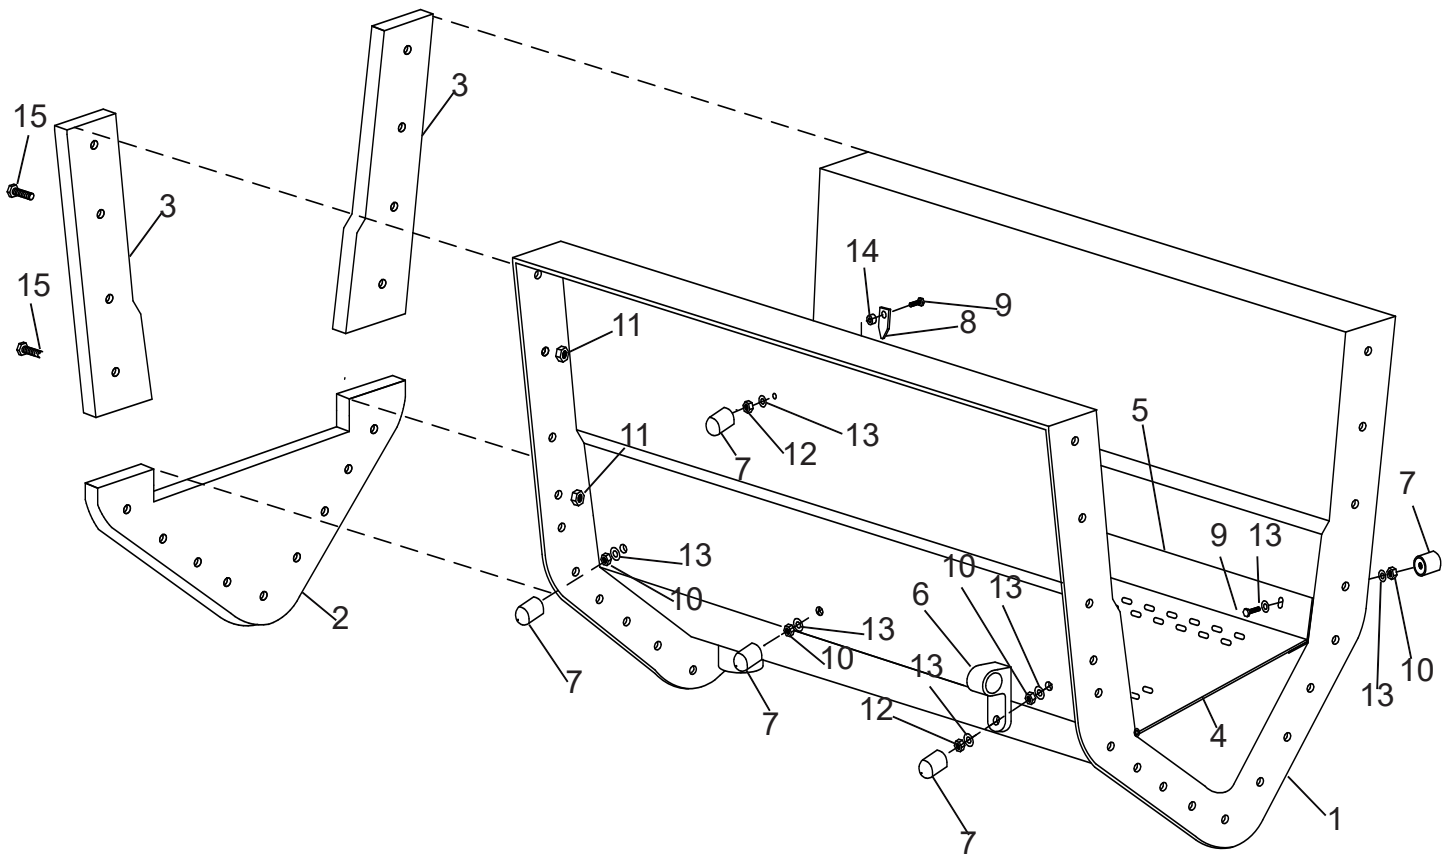

Cabinet Assembly, Insert Section 01 AC
(P/N 06816-03-01)



KEY #	PART #	QTY.	DESCRIPTION
1	06816-05-01	1	INSERT, Drill Section 01
2	06816-21-23	1	DAM, AC Exit
3	06816-21-25	2	SHIM, AC Exit
4	06816-31-01	1	GRATE, 48" Assy.
5	06816-31-07	1	RAIL, 48" DC/AC 30deg.
6	06816-35-01	1	MOUNT, Wire Tube
7	06816-35-07	7	ISOLATOR, Grate Extension
8	06832-61	1	LATCH, Stun
9	PP-01-06-FT	7	SCREW, HxHdCp 1/4 - 20 x 1 1/2 Full Thread
10	PP-04-06	6	NUT, Hex 1/4 - 20
11	PP-04-07-05	17	NUT, Hex 5/16 - 18 Nylon
12	PP-04-29	2	NUT, Nyloc 1/4 - 20 Jam
13	PP-05-15	14	WASHER, 1/4 (Flat)
14	PP-12-21	1	BUSHING, 1/2 x 3/8 x 1/4
15	PP-17-208-01	17	SCREW, HxHdCp 5/16 - 18 x 2 Nylon

Electric & Salt Water Control Panel (Cabinet Mount)
(P/N 06816-09-01)
Front View

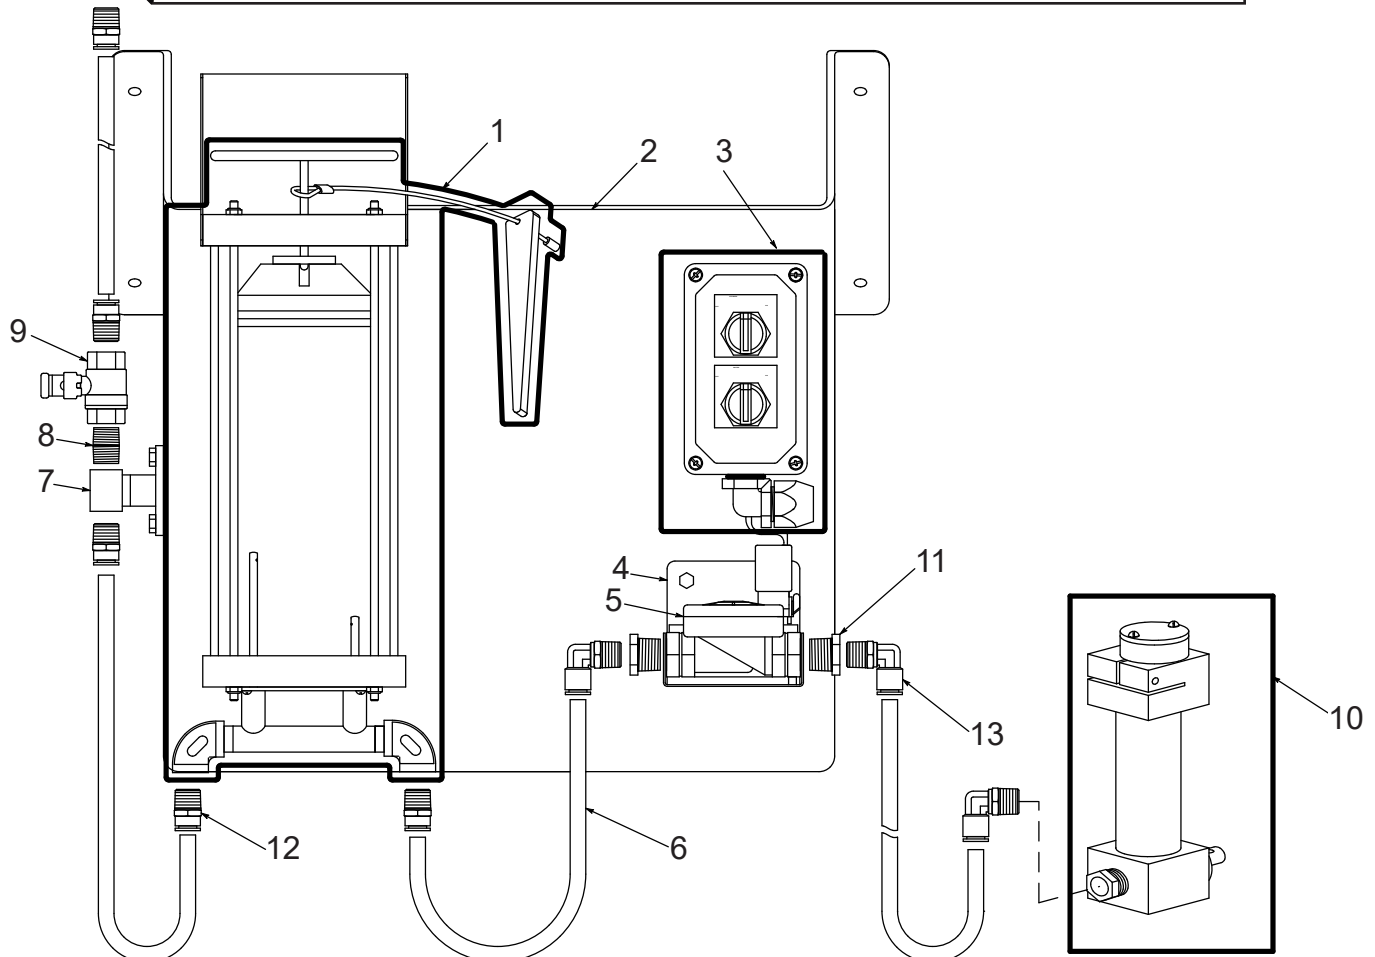


KEY #	PART #	QTY.	DESCRIPTION
1	06631-03	1	INJECTOR, Salt Water 1/2
2	06816-09-03	1	Panel, Stunner Side
3	06640-51	1	BOX, Stunner Control Panel Mount
4	06632-33	1	BRACKET, Solenoid Valve
5	PP-06-160-01A	1	VALVE, Solenoid 50/60Hz Sealed Coil 2010
6	PP-16-60	30ft.	TUBING, 1/2"d Natural Polyethylene
7	06632-17	1	MOUNT, 1/2 Strain & Valve
8	PP-06-148	1	NIPPLE, Close 1/2
9	PP-06-67	1	VALVE, Ball 1/2 F/M
10	06650-29	1	FLOW, Control Assy
11	06632-37	2	BUSHING, Reducing 3/4 x 1/2 Poly
12	PP-25-275-5/5	5	STRAIGHT, Male 1/2 PTC x 1/2 NPT SS
13	PP-25-276-5/5	3	ELBOW, Male 1/2 PTC x 1/2 NPT SS

Electric & Salt Water Control Panel (Cabinet Mount)
(P/N 06816-09-01)
Side View

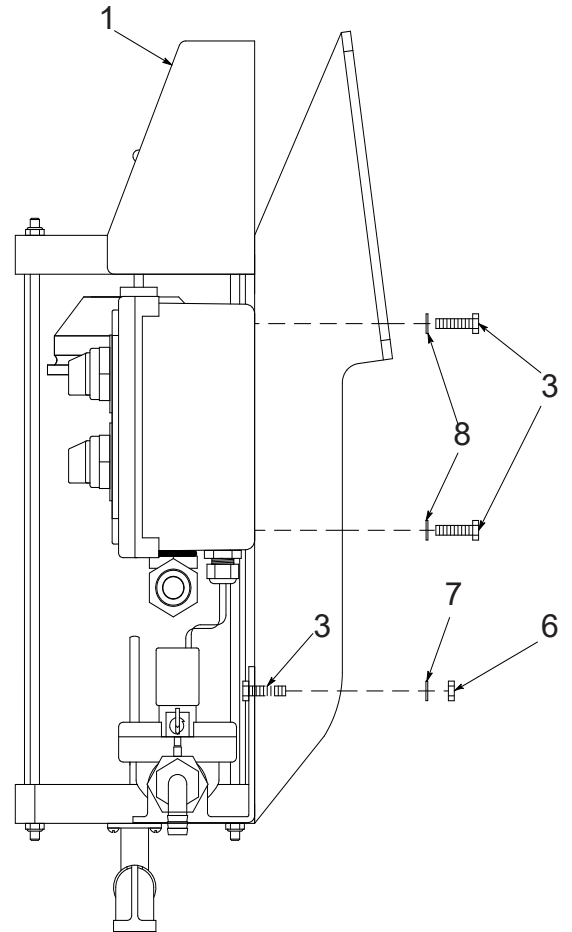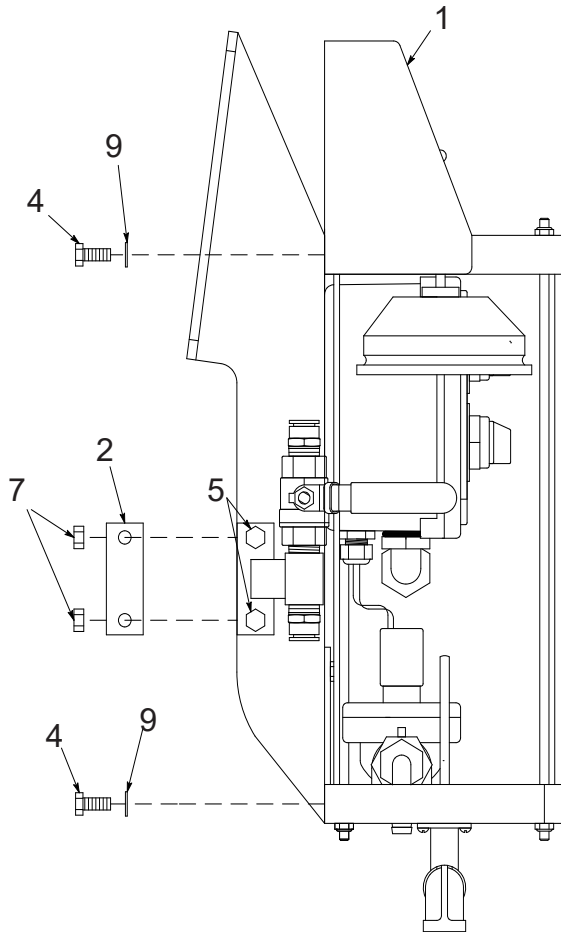


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	04305-03	1	SALT Shield
2	06640-57	1	STRAP, Junction Box
3	PP-01-05	6	SCREW, HxHdCp 1/4 - 20 x 1
4	PP-01-13	4	SCREW, HxHdCp 5/16 - 18 x 3/4
5	PP-01-16	2	SCREW, HxHdCp 5/16 - 18 x 1 1/4
6	PP-04-06	2	NUT, Hex 1/4 - 20
7	PP-04-07	2	NUT, Hex 5/16 - 18
8	PP-05-15	14	WASHER, 1/4 (Flat)
9	PP-05-16	6	WASHER, 5/16 (Flat)

Electric & Salt Water Control Panel (Wall Mount)
(P/N 06816-09-11)
Front View

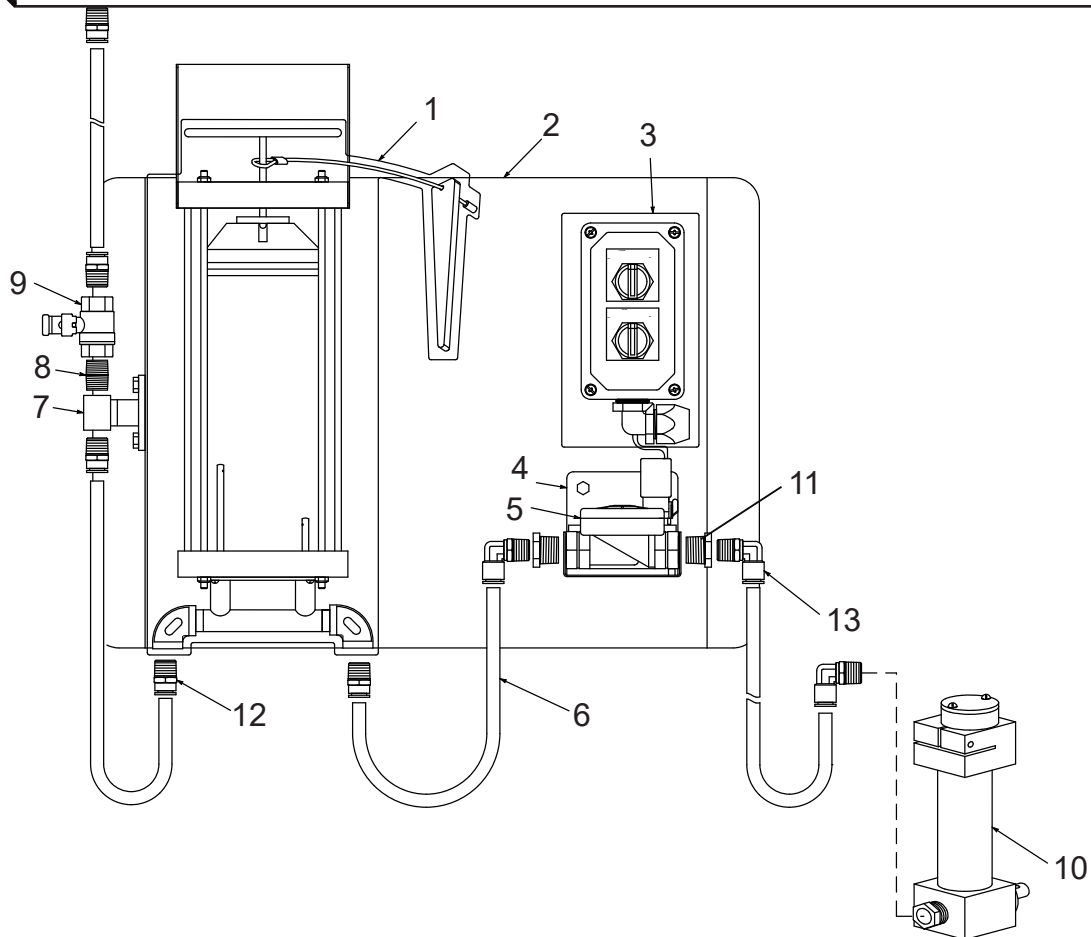


KEY #	PART #	QTY.	DESCRIPTION
1	06631-03	1	INJECTOR, Salt Water 1/2
2	06816-09-03	1	Panel, Wall Mount Stunner
3	06640-51-02	1	BOX, Stunner Control Wall Mount
4	06632-33	1	BRACKET, Solenoid Valve
5	PP-06-160-01A	1	VALVE, Solenoid 50/60Hz Sealed Coil 2010
6	PP-16-60	30ft.	TUBING, 1/2"d Natural Polyethylene
7	06632-17	1	MOUNT, 1/2 Strain & Valve
8	PP-06-148	1	NIPPLE, Close 1/2
9	PP-06-67	1	VALVE, Ball 1/2 F/M
10	06650-29	1	FLOW, Control Assy
11	06632-37	2	BUSHING, Reducing 3/4 x 1/2 Poly
12	PP-25-275-5/5	5	STRAIGHT, Male 1/2 PTC x 1/2 NPT SS
13	PP-25-276-5/5	3	ELBOW, Male 1/2 PTC x 1/2 NPT SS

Electric & Salt Water Control Panel (Wall Mount)
(P/N 06816-09-11)
Side View

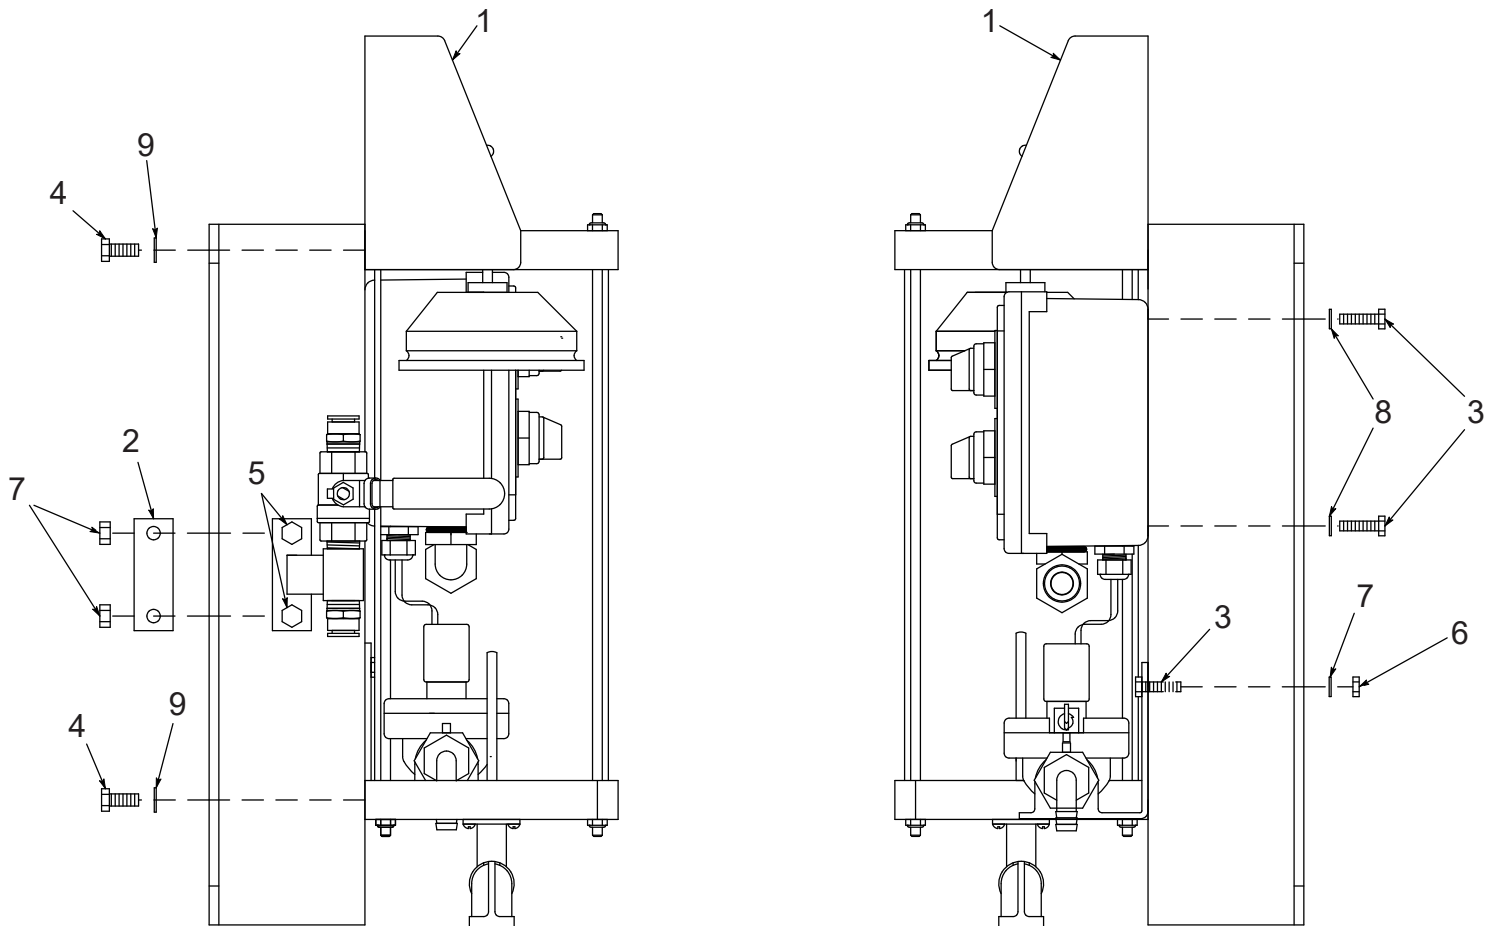

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	04305-03	1	SALT Shield
2	06640-57	1	STRAP, Junction Box
3	PP-01-05	6	SCREW, HxHdCp 1/4 - 20 x 1
4	PP-01-13	4	SCREW, HxHdCp 5/16 - 18 x 3/4
5	PP-01-16	2	SCREW, HxHdCp 5/16 - 18 x 1 1/4
6	PP-04-06	2	NUT, Hex 1/4 - 20
7	PP-04-07	2	NUT, Hex 5/16 - 18
8	PP-05-15	14	WASHER, 1/4 (Flat)
9	PP-05-16	6	WASHER, 5/16 (Flat)

High Volume Salt Water Injector (P/N 06631-03)

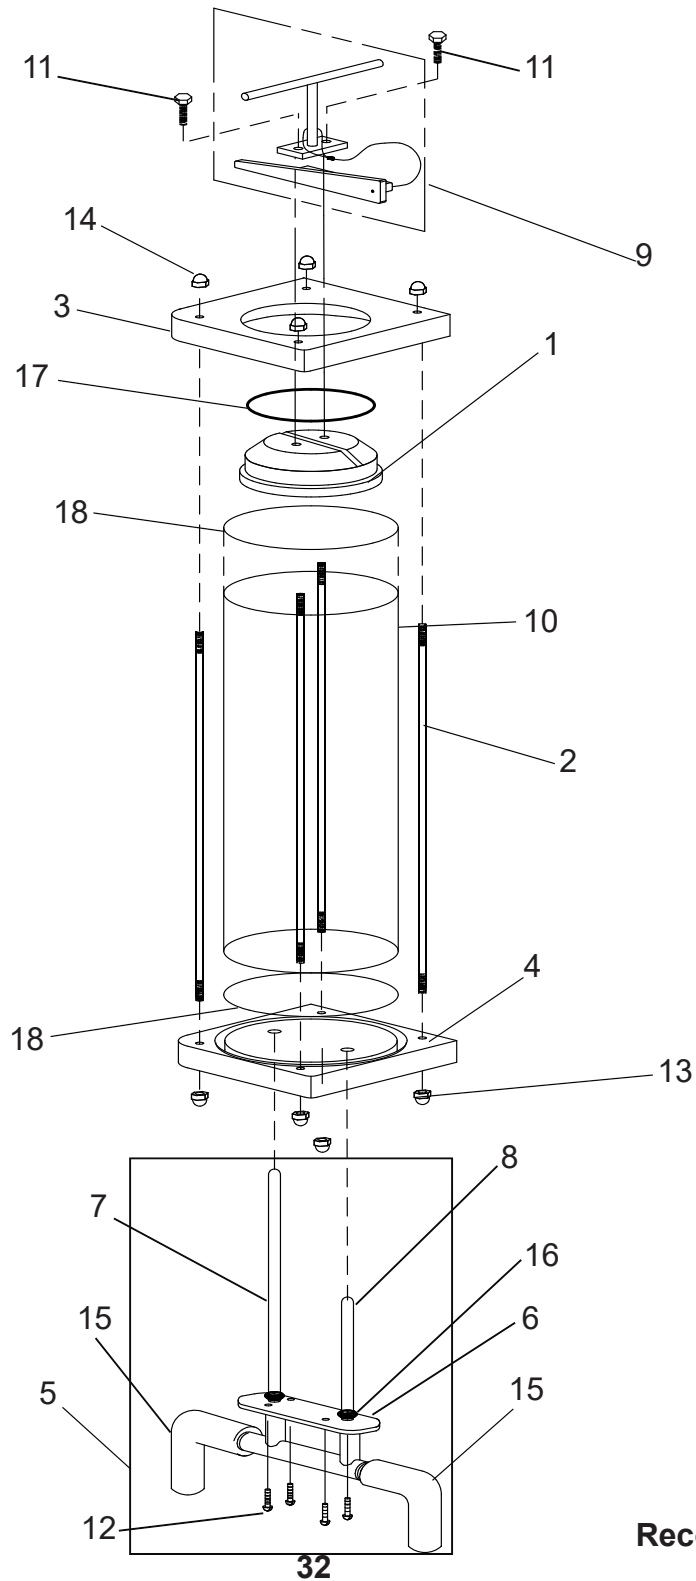


Recommended 60 - 80 PSI

High Volume Salt Water Injector (P/N 06631-03)

KEY #	PART #	QTY.	DESCRIPTION
1	04301-50	1	PLUG, Large SWI
2	04303-07	4	ROD, Threaded 1/4 x 16 SWI
3	04305-02	1	PLATE, Top SWI (6" Tube)
4	04307-03	1	PLATE, Base SWI (6" Tube)
5	04313-17	1	METER, Salt SS Assy.
6	04313-19	1	METER, Salt SS
7	04313-27	1	TUBE, Siphon 9"
8	04313-29	1	TUBE, Siphon 4 - 1/2
9	06630-03	1	HANDLE, Large SWI Assy.
10	06630-17	1	CYLINDER, Salt 6"
11	PP-01-04	2	SCREW, HxHdCp 1/4 - 20 x 3/4
12	PP-02-80	4	SCREW, s/RndHdMch 10 - 24 x 1/2
13	PP-04-06	4	NUT, Hex 1/4 - 20
14	PP-04-29	4	NUT, Hex 1/4 - 20 Jam
15	PP-06-36	2	ELBOW, 1/2
16	PP-22-370	2	O-Ring, 3/8 (Tube)
17	PP-22-488	1	O-RING 4 - 1/8 x 4 - 1/2 x 3/16
18	PP-22-502	2	O-RING 5 - 5/8 x 6 x 3/16
**	PP-16-199	1	SALT, Nuggets (50lb. Bag)


**Salt Water Injector T-Handle Assembly
(P/N 06630-03)**

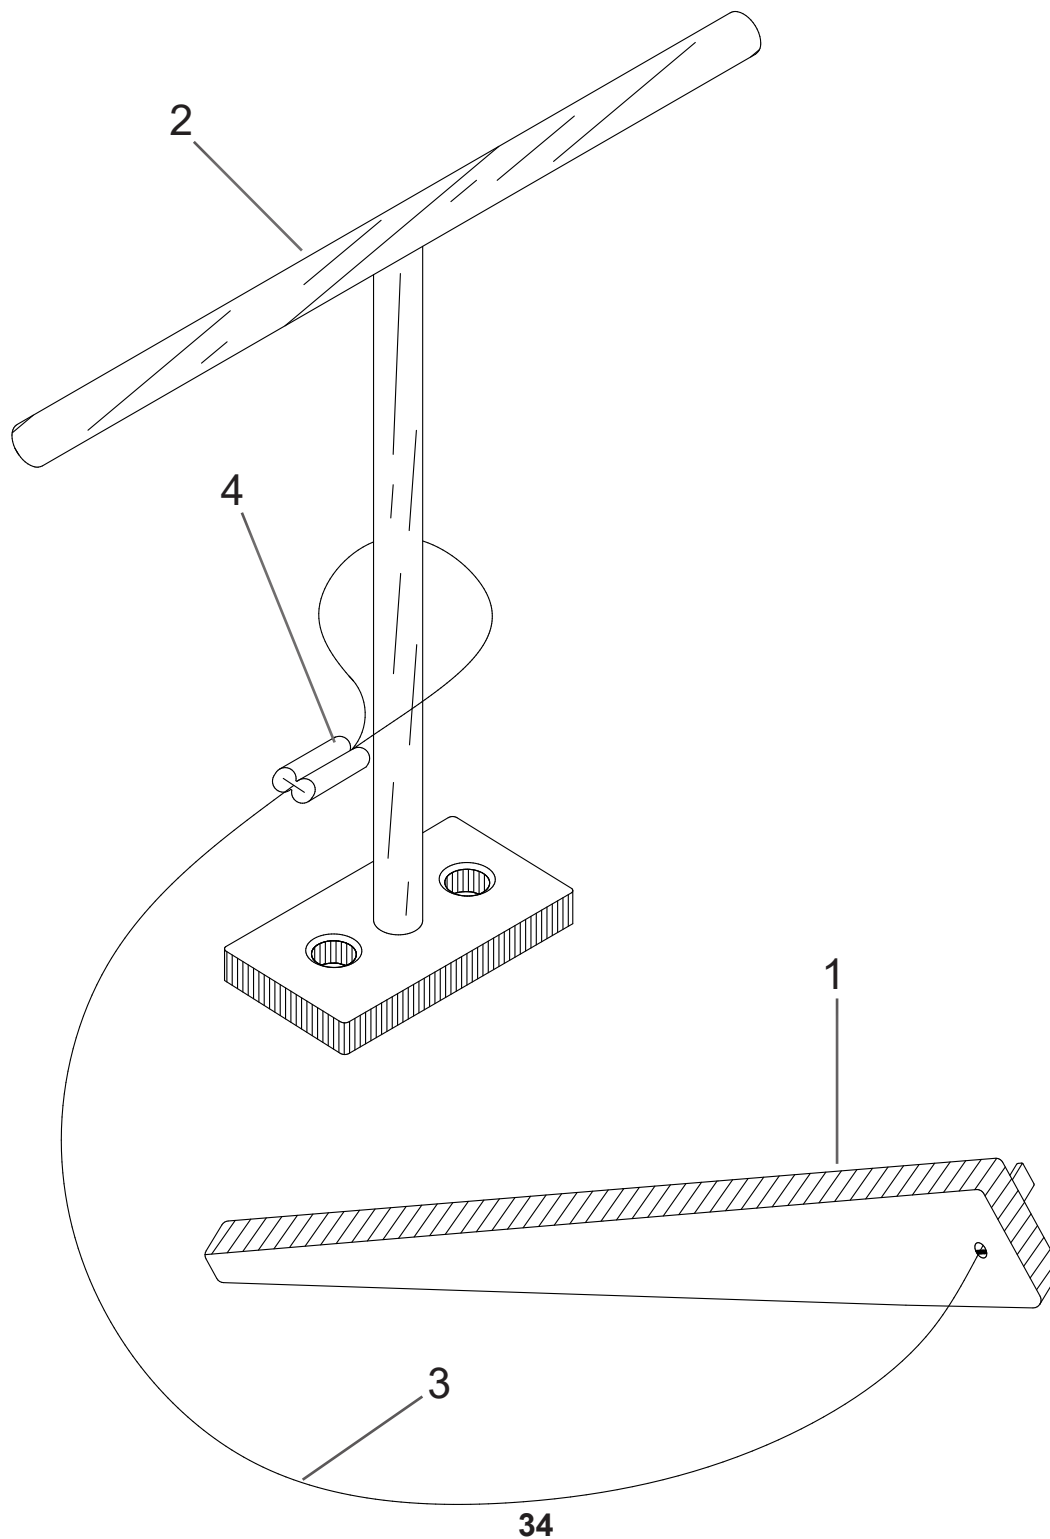

Salt Water Injector T-Handle Assembly
(P/N 06630-03)

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	04301-46	1	WEDGE, 6.5 Large SWI
2	06630-05	1	HANDLE, Large SWI
3	PP-16-290	1	CABLE, 3/32" w/ SS Stop
4	PP-16-290-01	1	SLEEVE, 3/32 Oval SS


**Flow Control Assembly
(P/N 06650-29)**

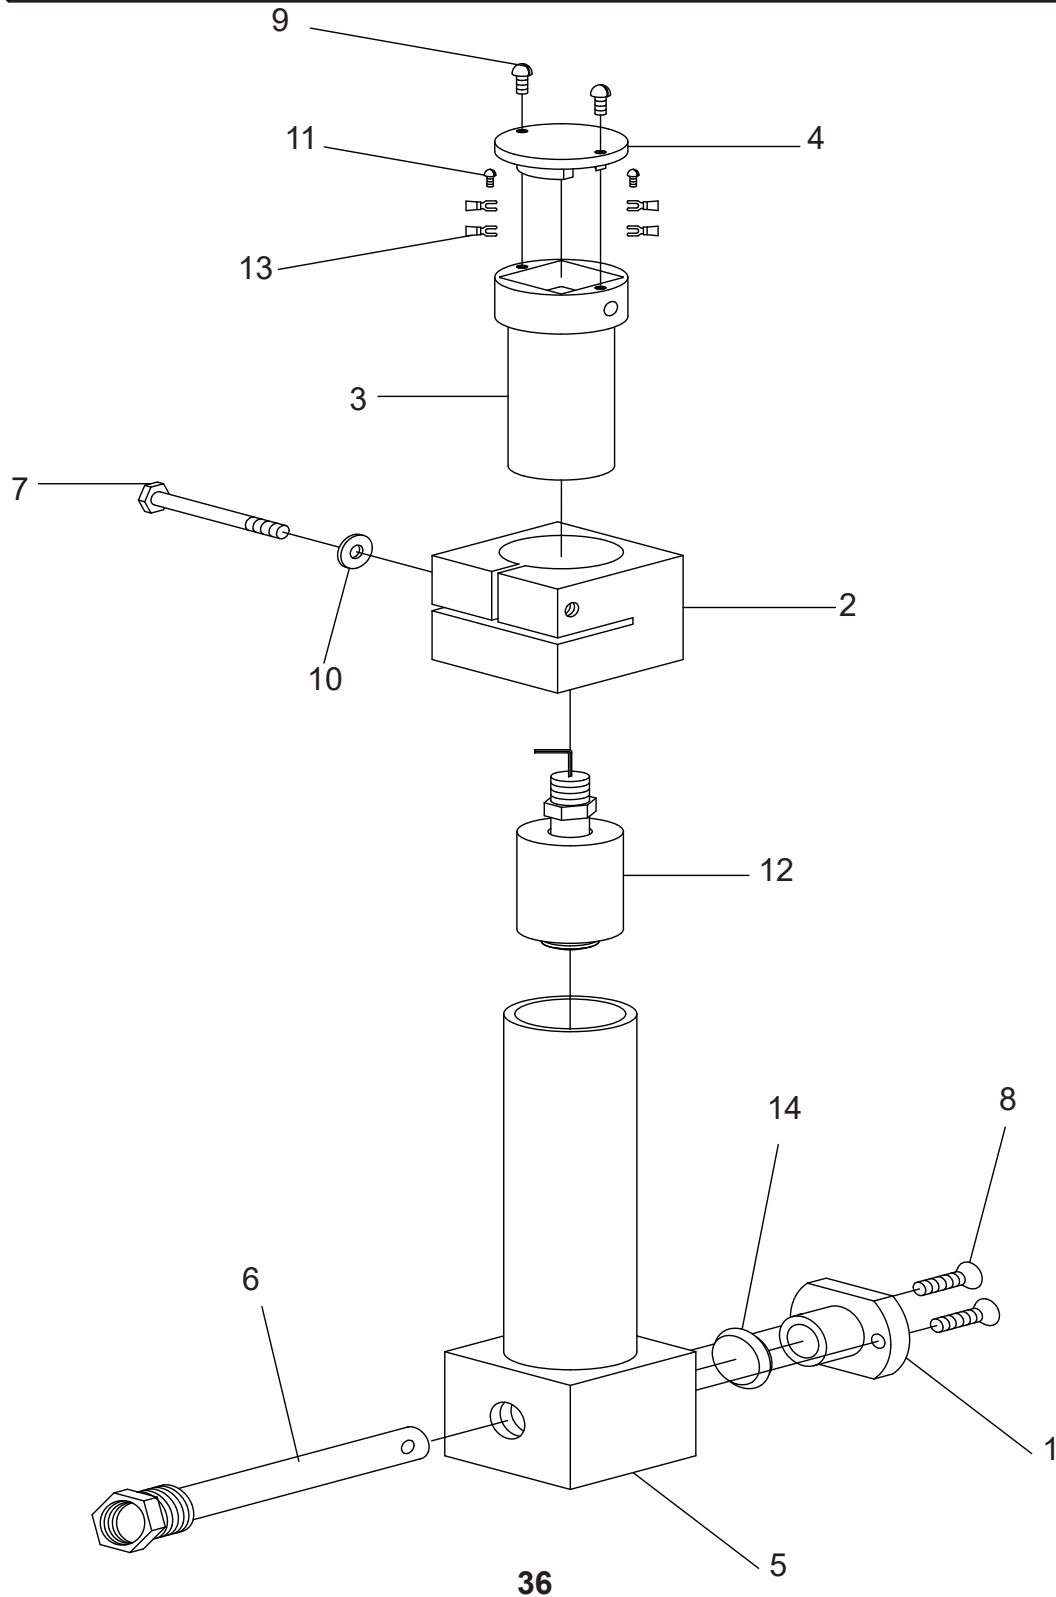

Flow Control Assembly (P/N 06650-29)

KEY #	PART #	QTY.	DESCRIPTION
1	06650-07	1	RETAINER, Float
2	06650-09	1	BLOCK, Clamp
3	06650-10	1	MOUNT, Float
4	06650-11	1	CAP, Float Mount
5	06650-33	1	MOUNT, Tube Assy. 3/4 FPT
6	06650-37	1	FITTING, 5/8 Water Supply
7	PP-01-73	1	SCREW, HxHdCp 1/4 - 20 x 2 1/2
8	PP-02-73	2	SCREW, SkFIHdCsk 1/4 - 20 x 1
9	PP-02-80	2	SCREW, s/RndHdMch 10 - 24 x 1/2
10	PP-05-15	1	WASHER 1/4 (Flat)
11	PP-17-217	2	SCREW, RndHdMch 6 - 32 x 1/4
12	PP-19-10	1	SWITCH, Water Level
13	PP-19-310	4	TERMINAL, Fork Red 18 - 22
14	PP-22-307	1	O-RING 15/16 x 1 - 1/8 x 3/32


**Overhead Assembly
(P/N 06817-01-12)**

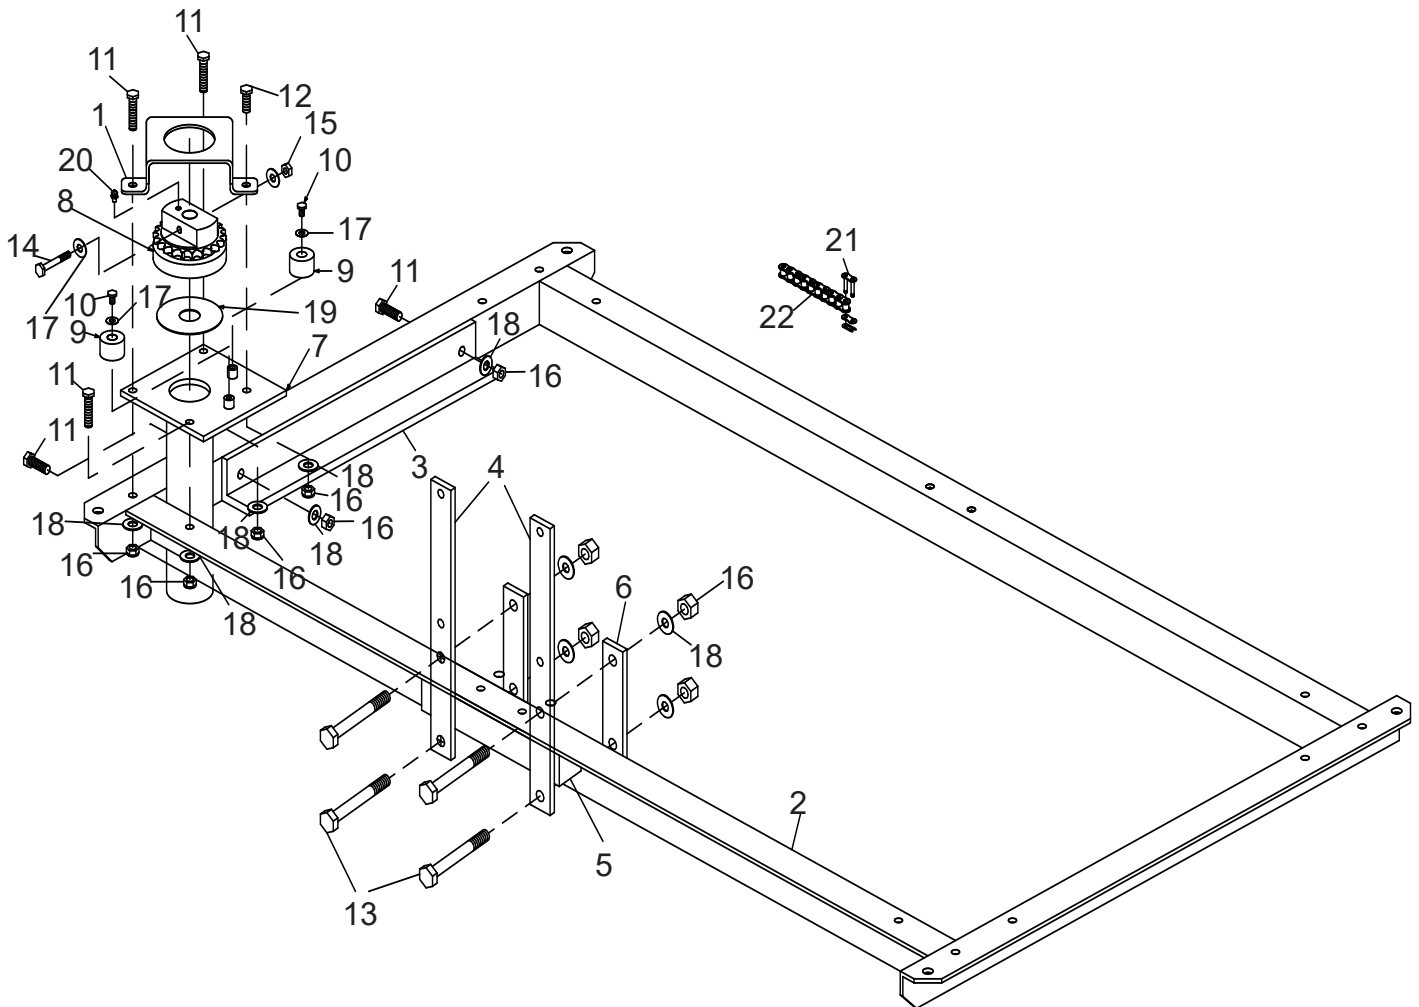

Overhead Assembly (P/N 06817-01-12)


KEY #	PART #	QTY.	DESCRIPTION
1	06625-29	4	BASE, Upper Sleeve
2	06817-03-12	1	FRAME, Std OvrHd 12 Ang
3	06817-11	2	MOUNT, Std OvrHd Ang
4	06817-13-09	2	MOUNT, Overhead Box
5	06817-13-11	1	MOUNT, Spacer
6	06817-15-35	2	PLATE, Tap 1/4 x 1 x 4
7	06822-07	4	SLEEVE, Lower LO Turkey
8	06823-01	4	SPROCKET, Low Overhead
9	20407-69	8	ROLLERS, #3,4,5,6
10	PP-01-07	8	SCREW, HxHdCp 1/4 - 20 x 3/8
11	PP-01-126	16	SCREW, HxHdCp 3/8 - 16 x 1 1/4 (Fullthread)
12	PP-01-26	4	SCREW, HxHdCp 3/8 - 16 x 1
13	PP-01-35	4	SCREW, HxHdCp 3/8 - 16 x 3 1/4
14	PP-01-74	4	SCREW, HxHdCp 1/4 - 20 x 2
15	PP-04-06	4	NUT, Hex 1/4 - 20
16	PP-04-30	24	NUT, Nyloc 3/8 - 16
17	PP-05-15	16	WASHER, 1/4 (Flat)
18	PP-05-17	24	WASHER, 3/8 (Flat)
19	PP-06890-53	4	WASHER, Sprocket
20	PP-08-02	4	FITTING, Grease 1/4 - 28 S
21	PP-29-40	2	LINK, Master #40 Stainless
22	RM-1340-1	20ft.	CHAIN, #40 Stainless

Overhead Mount (Electric & Pneumatic)
(P/N 06817-21)

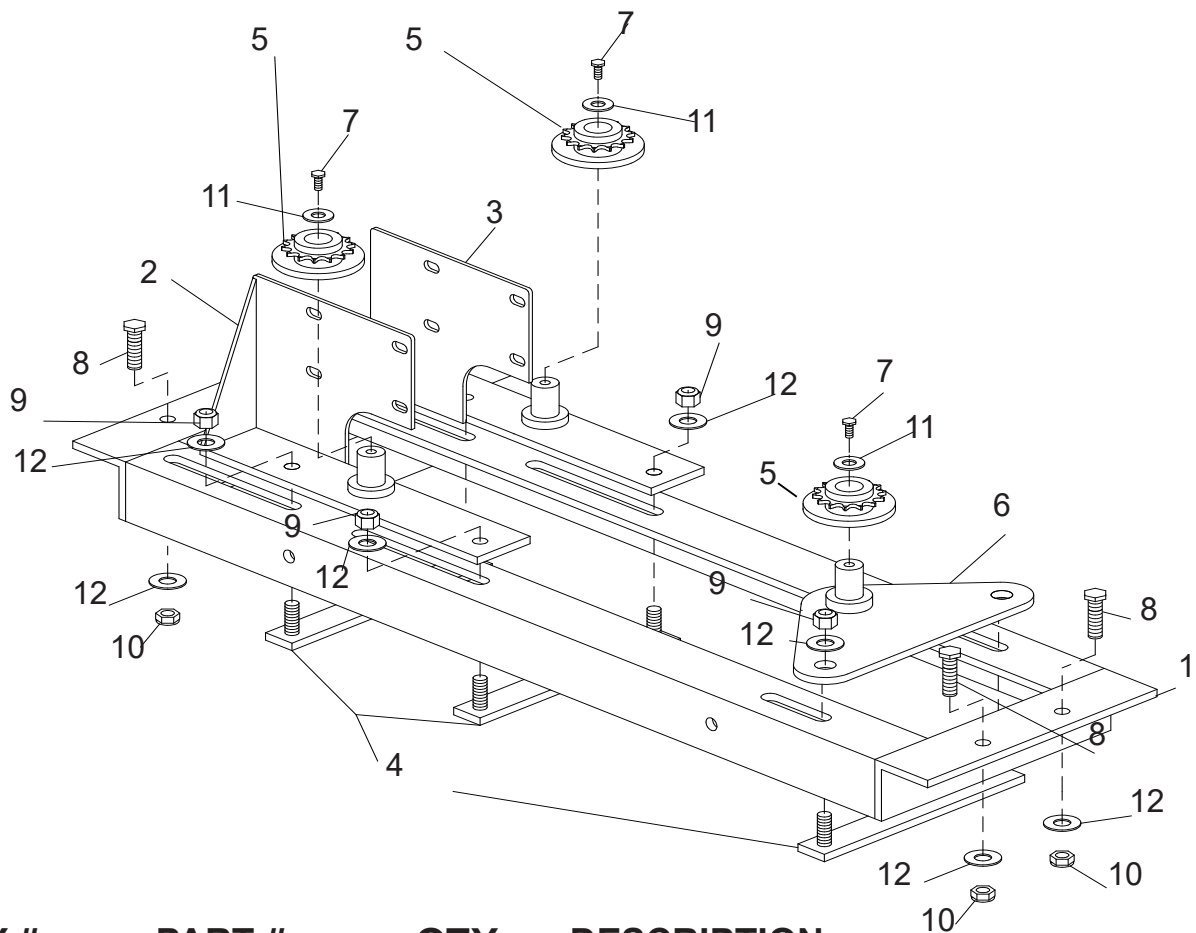

KEY #	PART #	QTY.	DESCRIPTION
1	06817-21-01	1	BASE, Std Actuator Mount
2	06817-21-11	1	MOUNT, Gearbox LH
3	06817-21-12	1	MOUNT, Gearbox RH
4	06817-21-21	3	PLATE, Retainer Mount
5	06817-21-31	3	SPROCKET, Idler #40 14T
6	06817-21-35	1	TAKE-UP, Chain Base Mount
7	PP-01-12	3	SCREW, HxHdCp 5/16 - 18 x 1/2
8	PP-01-126	4	SCREW, HxHdCp 3/8 - 16 x 1 1/4
9	PP-04-01	6	NUT, Hex 3/8 - 16
10	PP-04-30	4	NUT, Nyloc 3/8 - 16
11	PP-05-16-01	3	WASHER, 5/16 (Flat Fender)
12	PP-05-17	10	WASHER, 3/8 (Flat)


Overhead Mount (Hydraulic)
(P/N 06817-21H)

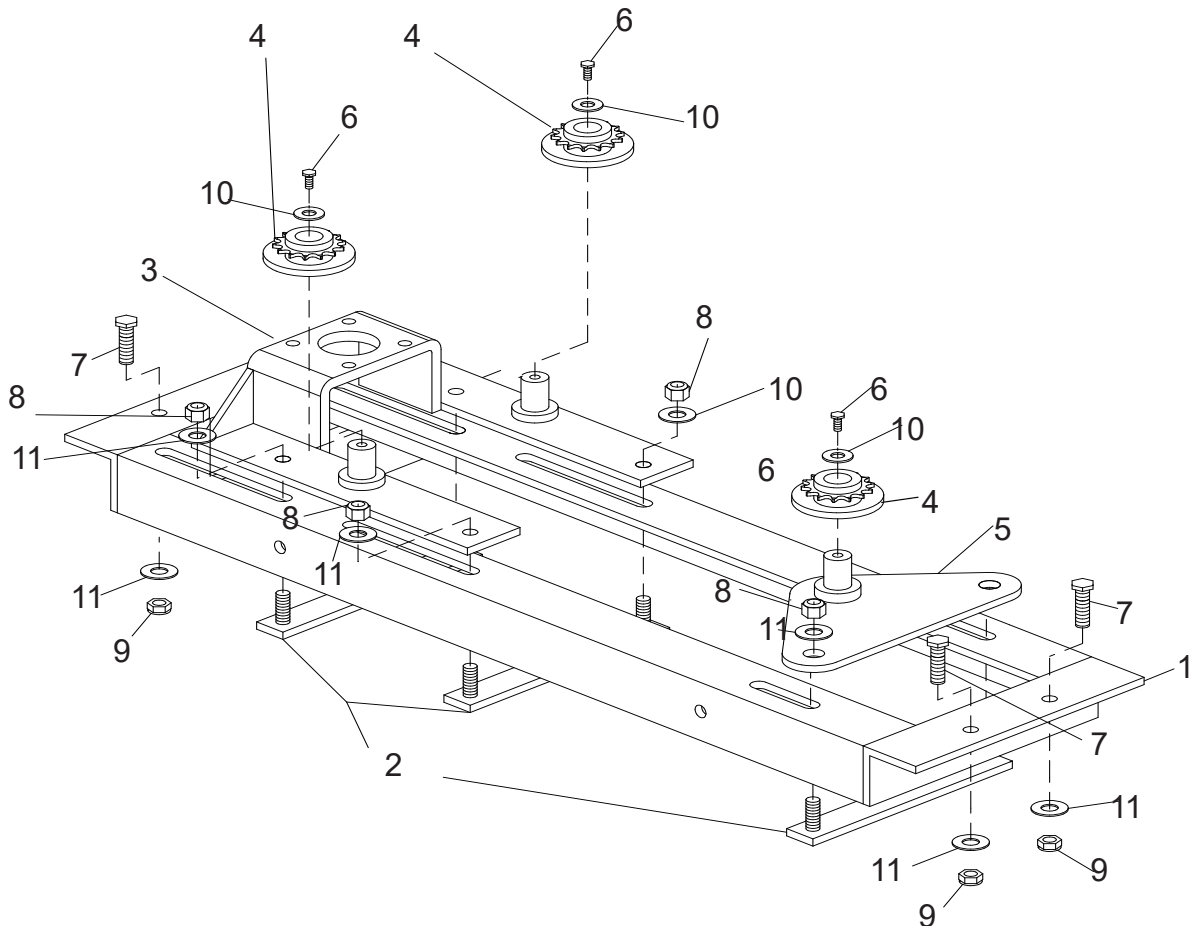

KEY #	PART #	QTY.	DESCRIPTION
1	06817-21-01	1	BASE, Std Actuator Mount
2	06817-21-21	3	PLATE, Retainer Mount
3	06817-21-27	1	MOUNT, Hydraulic Motor
4	06817-21-31	3	SPROCKET, Idler #40 14T
5	06817-21-35	1	TAKE-UP, Chain Base Mount
6	PP-01-12	3	SCREW, HxHdCp 5/16 - 18 x 1/2
7	PP-01-126	4	SCREW, HxHdCp 3/8 - 16 x 1 1/4
8	PP-04-01	6	NUT, Hex 3/8 - 16
9	PP-04-30	4	NUT, Nyloc 3/8 - 16
10	PP-05-16-01	3	WASHER, 5/16 (Flat Fender)
11	PP-05-17	10	WASHER, 3/8 (Flat)

Motor and Gear Box Assembly (P/N 06817-41E1)


NOTE: THIS DIAGRAM IS FOR 110 SINGLE PHASE ONLY!

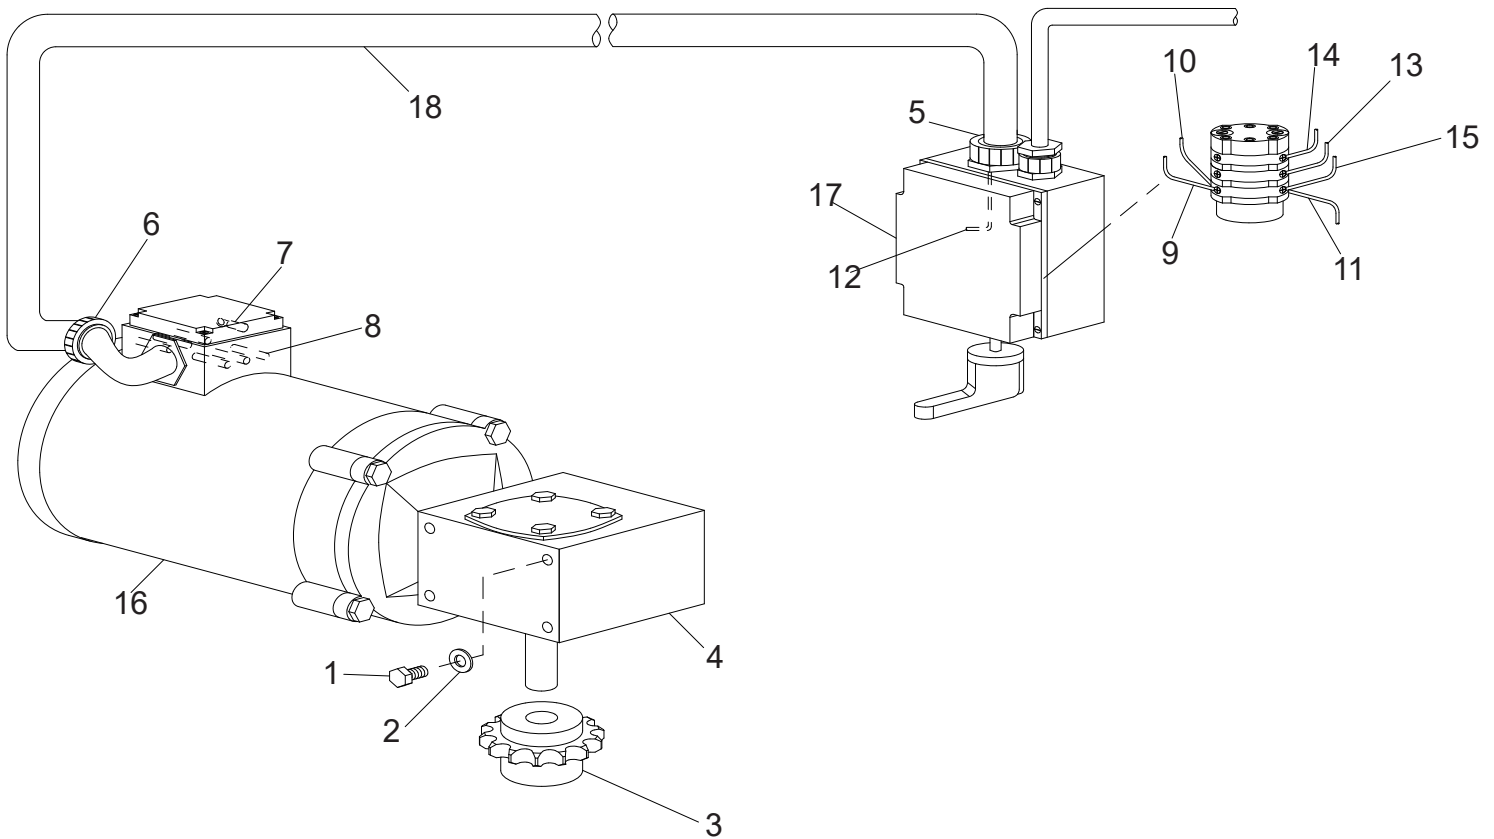

Motor and Gear Box Assembly (P/N 06817-41E1)

KEY #	PART #	QTY.	DESCRIPTION
1	PP-01-12	8	SCREW, HxHdCp 5/16 - 18 x 1/2
2	PP-05-16	8	WASHER, 5/16 (Flat)
3	PP-16-102-SS	1	SPROCKET, 40B15 x 5/8 Bore SS
4	PP-16-312-SS	1	REDUCER, Speed 20:1 Stunner SS
5	PP-19-17-10	1	CONNECTOR, 1/2 Straight Conduit
6	PP-19-17-11	1	CONNECTOR, 1/2 90deg Conduit
7	PP-19-311	1	TERMINAL, Ring PV14-10R-M
8	PP-19-314	6	SPLICE, Butt Cat# BSV-18X
9	PP-19-400	10ft.	WIRE, 18ga. (White)
10	PP-19-401	10ft.	WIRE, 18ga. (Black)
11	PP-19-402	10ft.	WIRE, 18ga. (Red)
12	PP-19-403	10ft.	WIRE, 18ga. (Green)
13	PP-19-404	10ft.	WIRE, 18ga. (Yellow)
14	PP-19-412	10ft.	WIRE, 18ga. (Green w/White)
15	PP-19-413	10ft.	WIRE, 18ga. (Yellow w/White)
16	PP-19-50-2SS	1	MOTOR, 1HP OvrHd 115/208-230 Single Phase
17	PP-19-528	1	SWITCH, Drum 3 Pos Spring
18	RM-0590	10ft.	CONDUIT, 1/2 Type A

Motor and Gear Box Assembly (P/N 06817-41E)

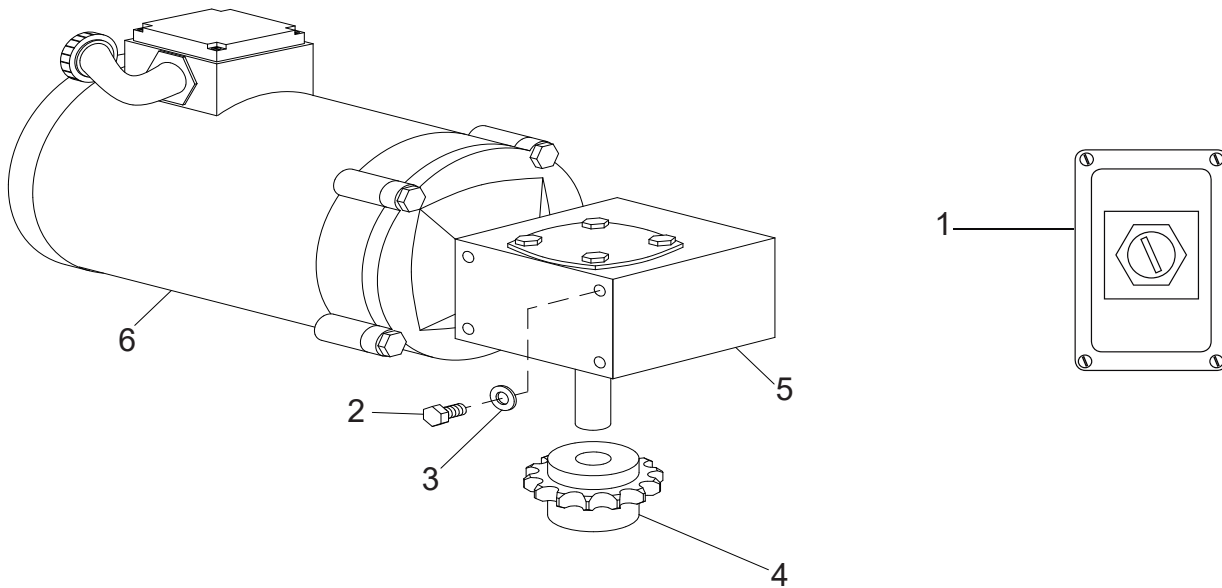


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06640-29	1	BOX, Raise / Lower Stunner 230 / 440 Volt
2	PP-01-12	8	SCREW, HxHdCp 5/16 - 18 x 1/2
3	PP-05-16	8	WASHER, 5/16 (Flat)
4	PP-16-102	1	SPROCKET, 40B15 x 5/8 Bore
5	PP-16-312-SS	1	REDUCER, Speed 20:1 SS
6	PP-19-50-1SS	1	MOTOR, 1HP Stunner OvrHd 230 / 440 Volt




THIS PAGE IS INTENTIONALLY LEFT BLANK

**Pneumatic Motor & Valve Panel Assembly
(P/N 06817-41P)**

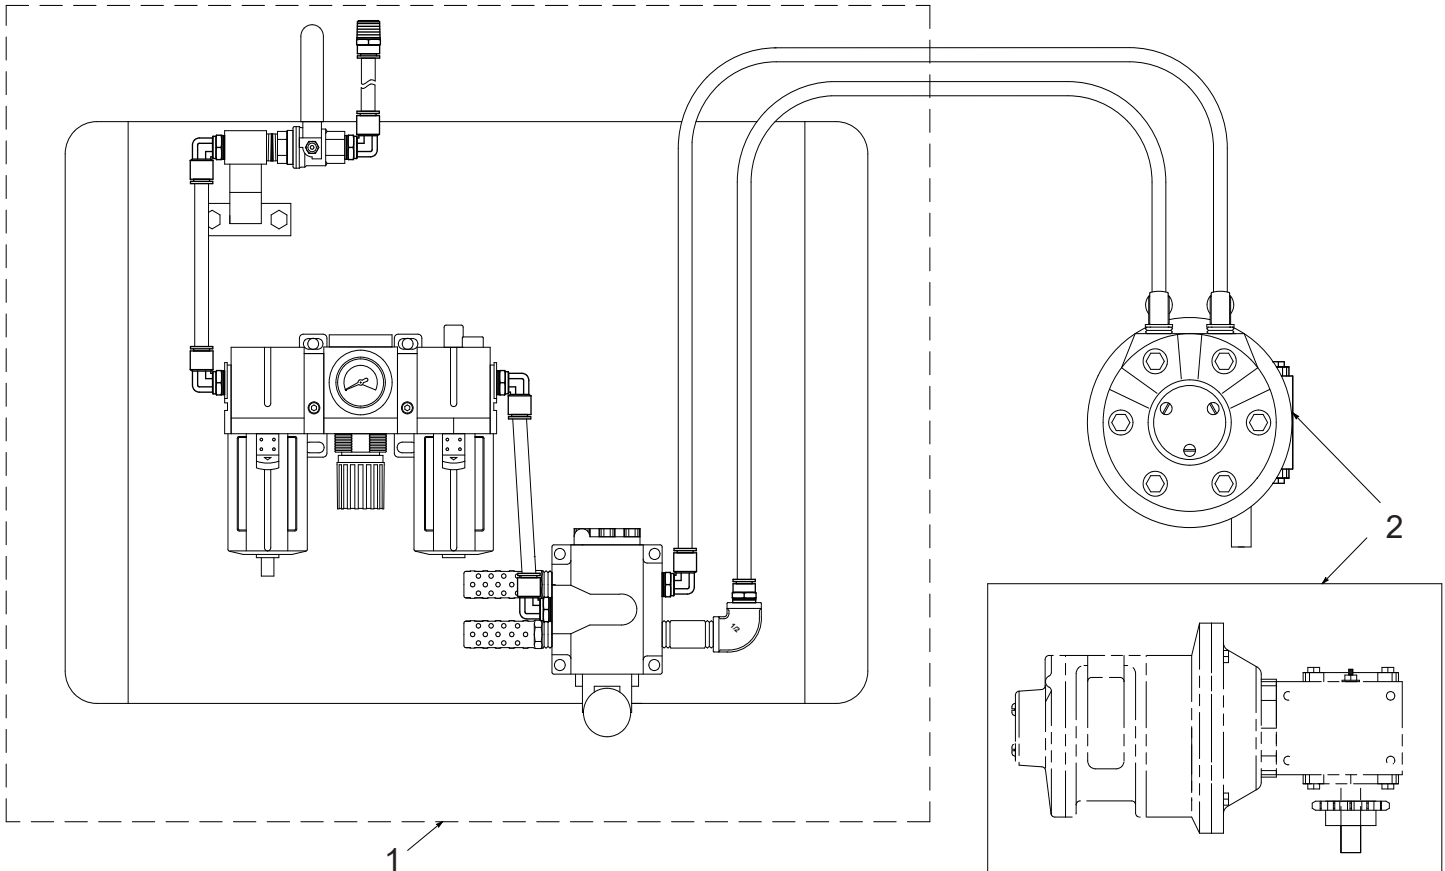


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06816-09-23	1	FILTER, Valve Assy. w/ Panel
2	06817-41-01P	1	PNEUMATIC, Motor & Gearbox Assy.

**Pneumatic Motor & Gearbox Assembly
(P/N 06817-41-01P)**

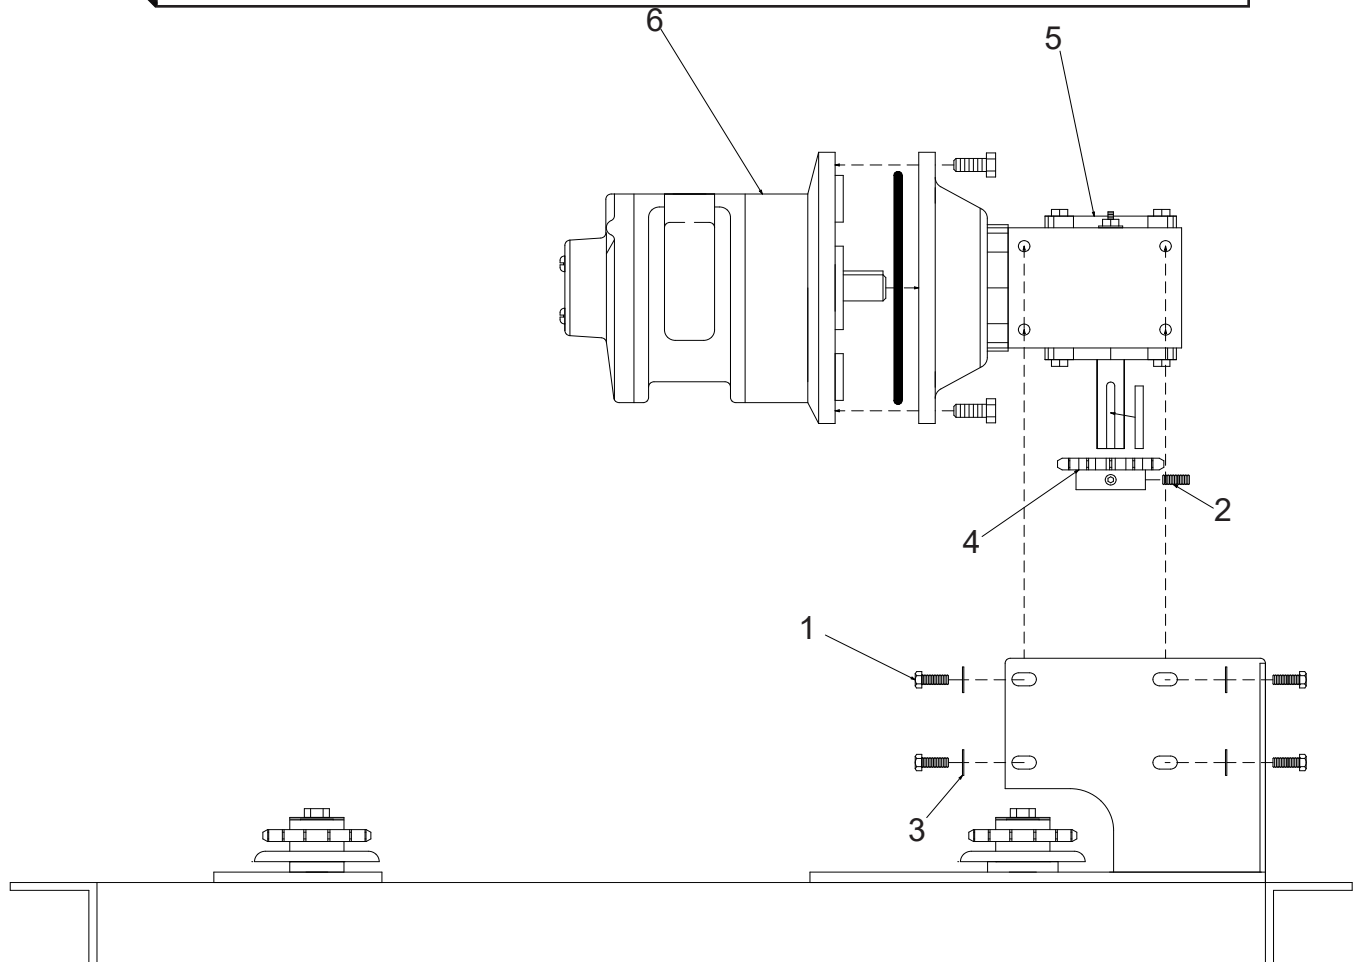

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	PP-01-12	8	SCREW, HxHdCp 5/16 - 18 x 1/2
2	PP-02-22	2	SCREW, Set CupPt 1/4 - 20 x 1/2
3	PP-05-16	8	WASHER, 5/16 (Flat)
4	PP-16-102-SS	1	SPROCKET, 40BS15 x 5/8 Pitch 40T
5	PP-16-312-SS	1	REDUCER, Speed 20:1 Stn SS
6	PP-19-50-66	1	MOTOR, Air 4hp


**Pneumatic Filter and Valve Assembly
(P/N 06816-09-23)**

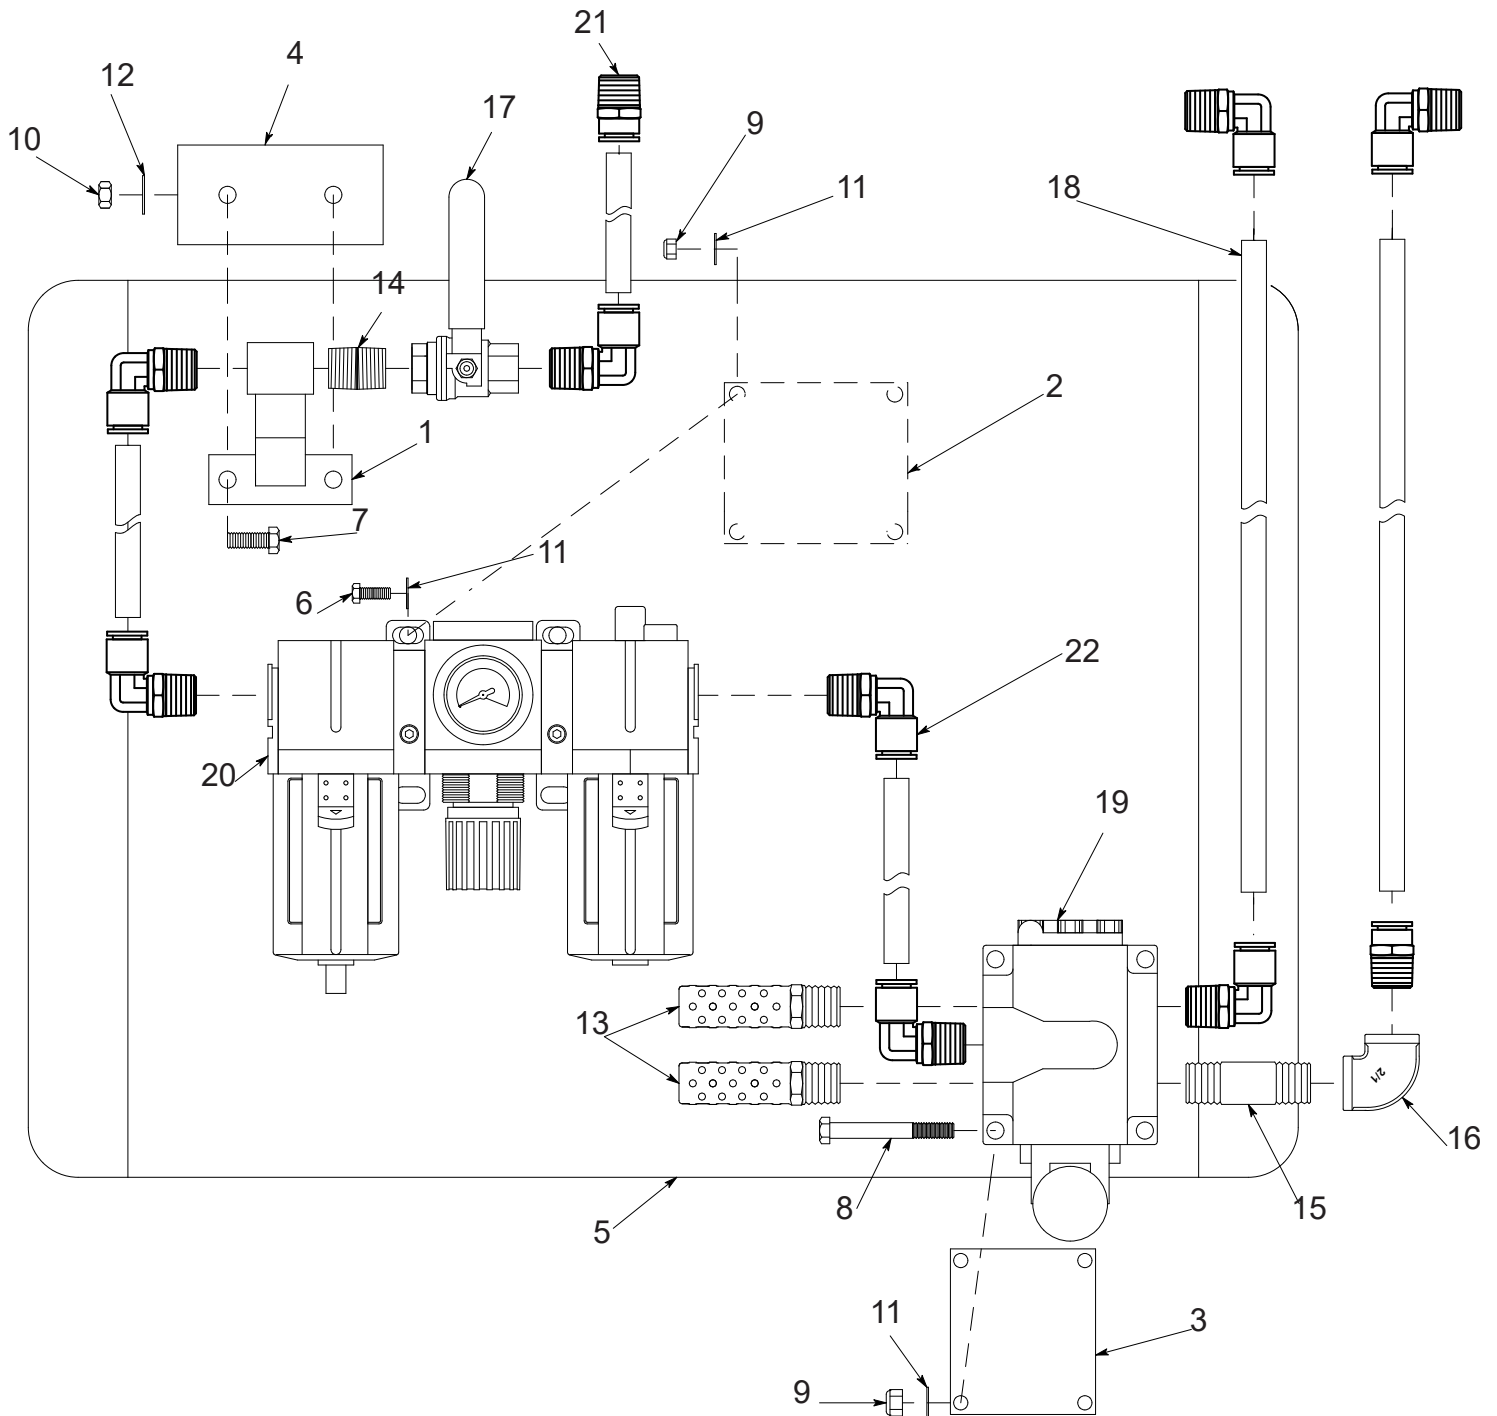

**Pneumatic Filter and Valve Assembly
(P/N 06816-09-23)**

KEY #	PART #	QTY.	DESCRIPTION
1	06632-17	1	MOUNT, 1/2 Strain & Valve
2	06640-70-03	1	PLATE, Filter Regulator
3	06640-70-05	1	PLATE, Pneumatic Valve
4	06640-70-07	1	PLATE, Shut-Off Valve
5	06816-09-25	1	PANEL, Valve and Filter Mount
6	PP-01-05	4	SCREW, HxHdCp 1/4 -20 x 1
7	PP-01-16	2	SCREW, HxHdCp 5/16 - 18 x 1 1/4
8	PP-01-74	4	SCREW, HxHdCp 1/4 - 20 x 2
9	PP-04-28	8	NUT, Nyloc 1/4 - 20
10	PP-04-32	2	NUT, Nyloc 5/16 - 18
11	PP-05-15	16	WASHER, 1/4 (Flat)
12	PP-05-16	2	WASHER, 5/16" (Flat)
13	PP-06-10-05	2	MUFFLER, 1/2mpt 332cfm
14	PP-06-148	1	NIPPLE, Close 1/2
15	PP-06-148-04	1	NIPPLE, 1/2 x 2 1/2
16	PP-06-36	1	ELBOW, 1/2
17	PP-06-67	1	VALVE, Ball 1/2 F/M
18	PP-16-60	35ft.	TUBING, 1/2"d Natural Polyethylene
19	PP-22-48-04	1	VALVE, Pneumatic 4 way / 5 port 1/2
20	PP-22-49	1	FILTER, Regulator Lub 150cfm 1/2
21	PP-25-275-5/5	2	STRAIGHT, Male 1/2 PTC x 1/2 NPT SS
22	PP-25-276-5/5	8	ELBOW, Male 1/2 PTC x 1/2 NPT SS


Hydraulic Motor Assembly (P/N 06817-41H)

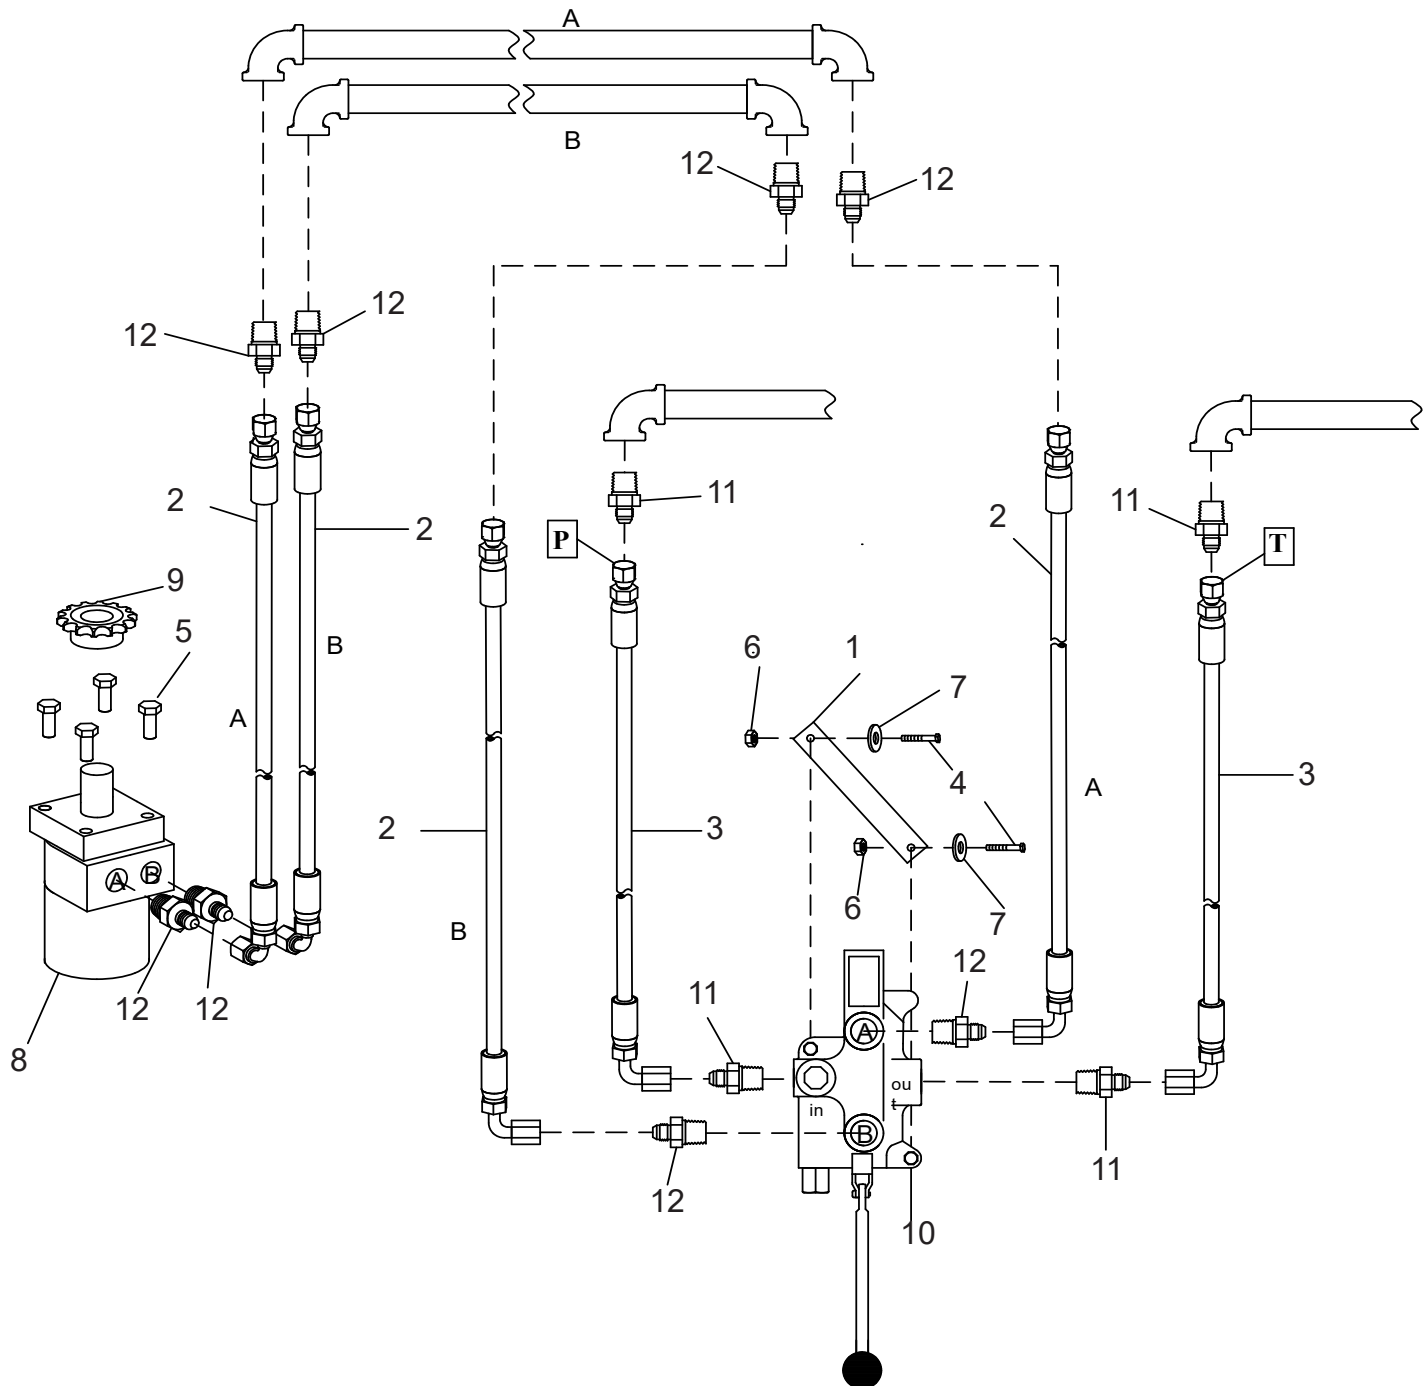

Hydraulic Motor Assembly (P/N 06817-41H)

KEY #	PART #	QTY.	DESCRIPTION
1	01215-25	1	BRACKET, Valve Mount
2	06890-59	4	HOSE, 3/8 x 72" Assy.
3	06890-59-1	2	HOSE, 1/2 x 72"
4	PP-01-19	2	SCREW, HxHdCp 5/16 - 18 x 2
5	PP-02-50	4	SCREW, SktHdCp 3/8 - 16 x 1
6	PP-04-32	2	NUT, Nyloc 5/16 - 18
7	PP-05-16	2	WASHER, 5/16 (Flat)
8	PP-16-308	1	MOTOR, Hydraulic (1" Shaft)
9	PP-16-346	1	SPROCKET, 40BS12 x 1" Bore
10	PP-22-38	1	VALVE, Hydraulic 4-Way
11	PP-27-09	4	ADAPTER, 1/2 Pipe x 1/2 Hose
12	PP-27-09-1	8	ADAPTER, 1/2 Pipe x 3/8 Hose

Raise / Lower Stunner Box (P/N 06640-29)

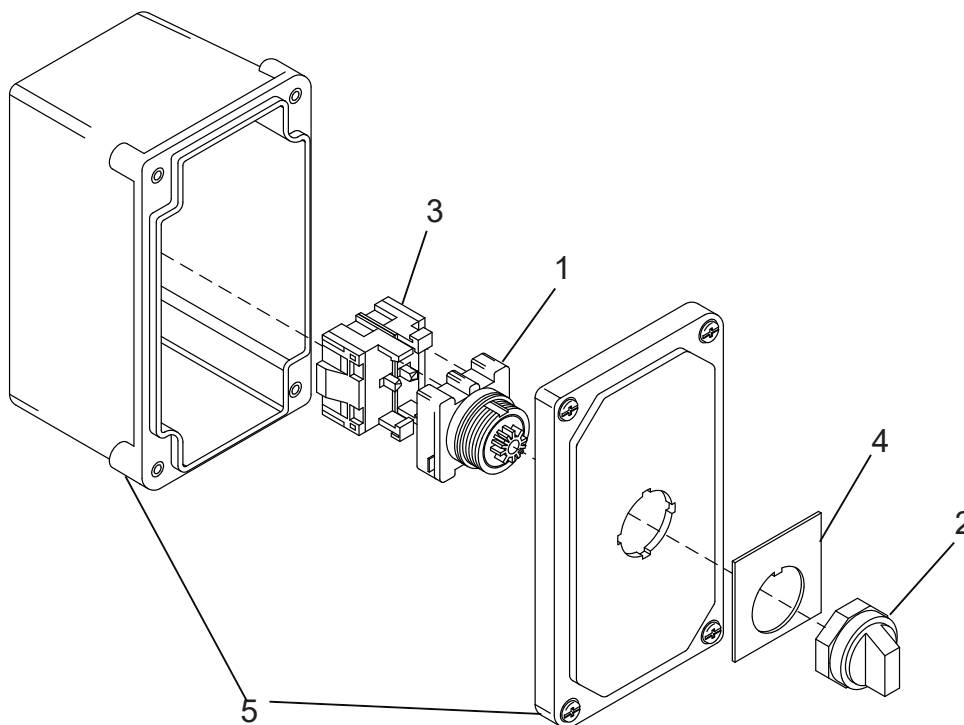


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	PP-19-536-4	1	OPERATOR, 3 Pos. Spring
2	PP-19-537-2	1	HANDLE, Operator White
3	PP-19-538-1FP	2	BLOCK, Contact Fg/Prp NO
4	PP-19-539-6	1	PLATE, Legend Stunner Raise / Lower
5	PP-19-559	1	ENCLOSURE, 1 Hole 30mm



THIS PAGE IS INTENTIONALLY LEFT BLANK


Overhead Junction Box Assembly (Cabinet Mount)
(P/N 06640-35)

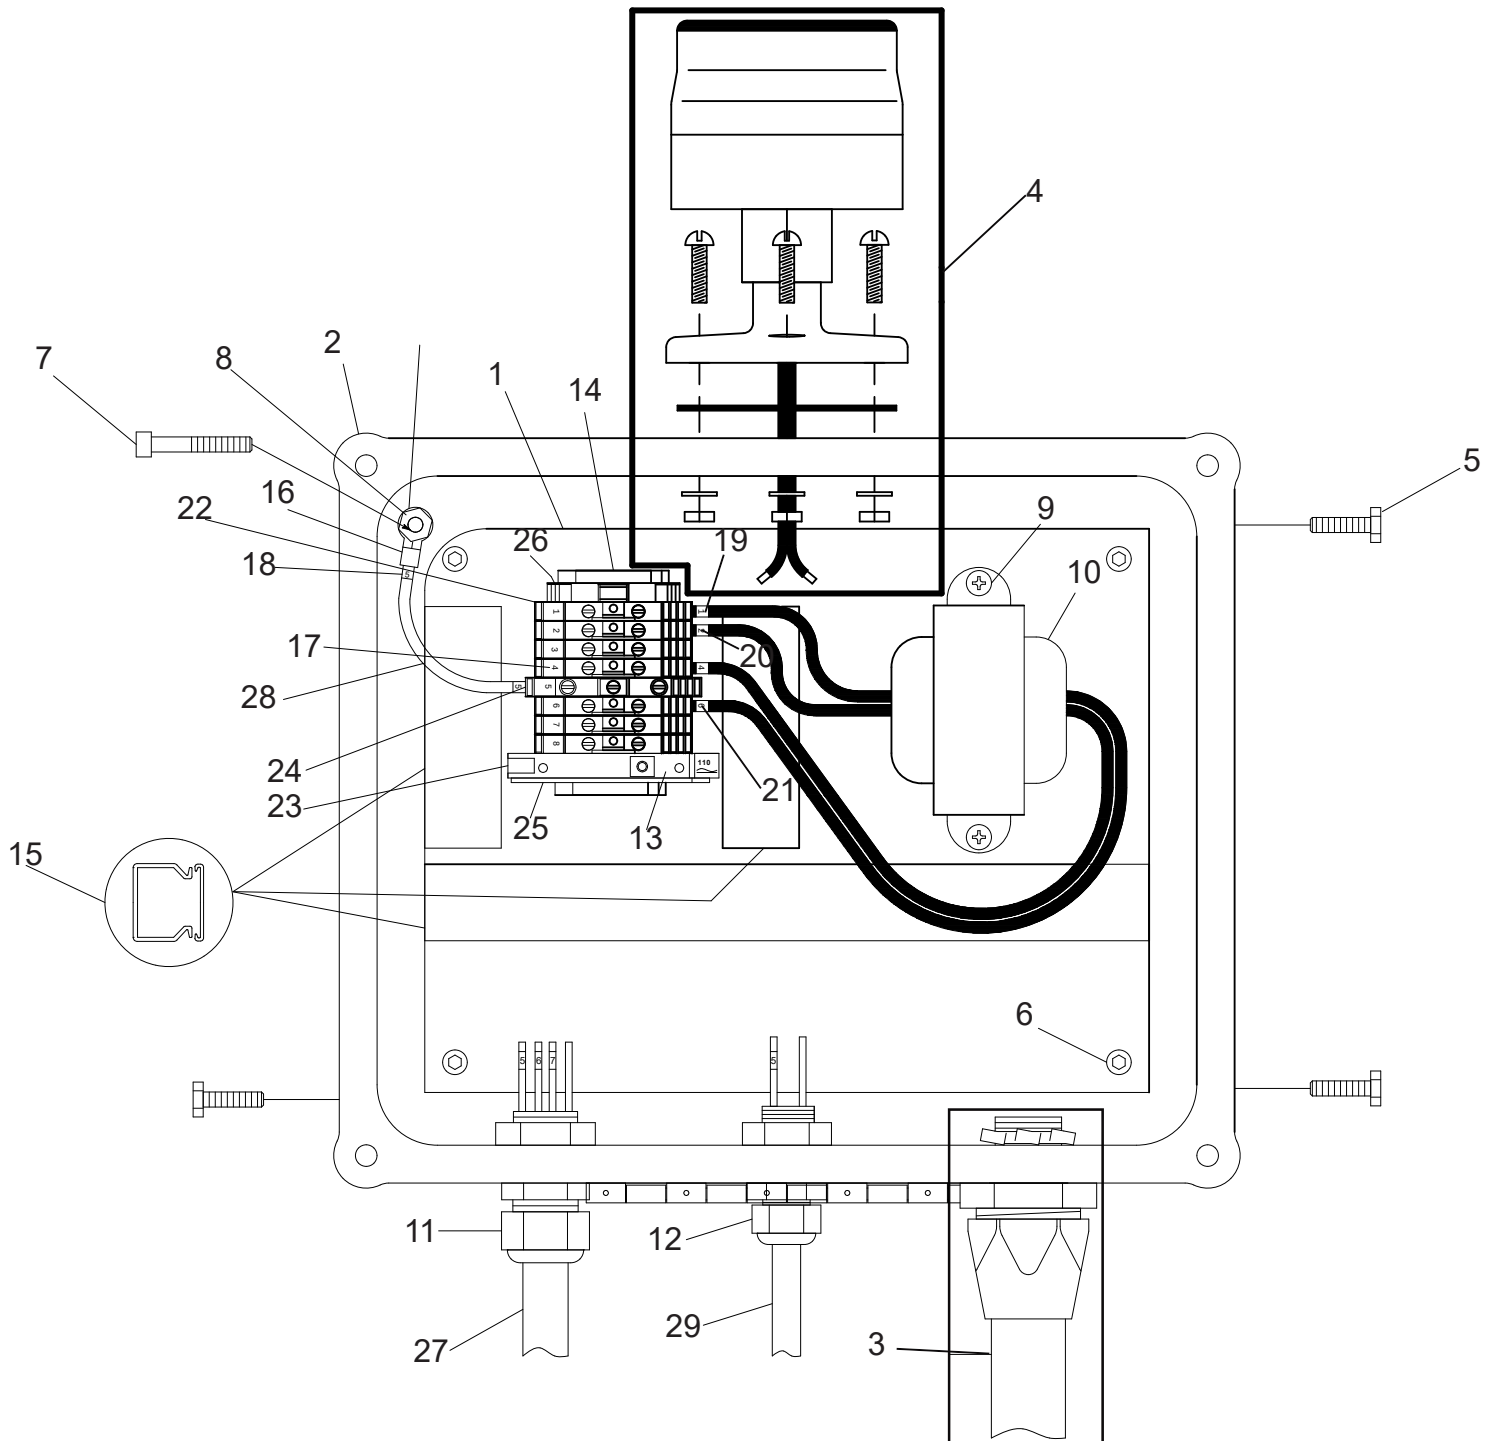

Overhead Junction Box Assembly (Cabinet Mount) (P/N 06640-35)

KEY #	PART #	QTY.	DESCRIPTION
1	06640-11	1	PANEL, Junction Box
2	06640-37	1	BOX, Overhead Junction (Cabinet Mount)
3	06640-49	1	HARNESS, Wiring Junction Box / Control Box
4	06640-65-1 or 2	1	LIGHT, Warning Red / Amber 24v Mount & Gasket
5	PP-02-97-01	3	SCREW, HxHdCp 10 - 32 x 3/4
6	PP-02-221	4	SCREW, SktHdCp 10 - 32 x 1/2
7	PP-02-224	1	SCREW, SktHdCp 10 - 32 x 1 1/4
8	PP-04-75	2	NUT, Hex RevLoc 10 - 32
9	PP-17-09	9	SCREW, PHPH 8 - 16 x 1/2
10	PP-19-165	1	TRANSFORMER, 120 / 24
11	PP-19-17-3	1	FITTING, LT Str CdGp Large
12	PP-19-17-4	1	FITTING, LT Str CdGp Small
13	PP-19-284-20	1	FUSE, 1/2 amp Slo-Blo 1/4 x 1 1/4
14	PP-19-298	.25ft	RAIL, Din Alum 35mm
15	PP-19-298-10	1.25ft	DUCT, Wire 25 x 30 w/ Cover White
16	PP-19-311	1	TERMINAL, Ring #10 x 16 - 14 Blue
17	PP-19-334-01	8	MARKER, TermBlk 5mm 1 - 10
18	PP-19-335-01	6	MARKER, Cable ID 1 - 18
19	PP-19-336-01	1	MARKER, Cable #1
20	PP-19-336-02	1	MARKER, Cable #2
21	PP-19-336-06	2	MARKER, Cable #6
22	PP-19-601-01	7	BLOCK, Terminal Din Rail
23	PP-19-601-02	1	BLOCK, Terminal Fused Din
24	PP-19-602-01	1	BLOCK, Ground Term Din Rail
25	PP-19-603-02	1	PLATE, End Term Blk Fused
26	PP-19-604-01	2	STOP, End Term Block
27	RM-1415	150ft	WIRE, 14/4 SJ (4 Color)
28	RM-1419-03	1ft	WIRE, 18ga. Green / Yellow
29	RM-1429	150ft	WIRE, Coax Heavy


Overhead Junction Box Assembly (Wall Mount)
(P/N 06640-35-01)

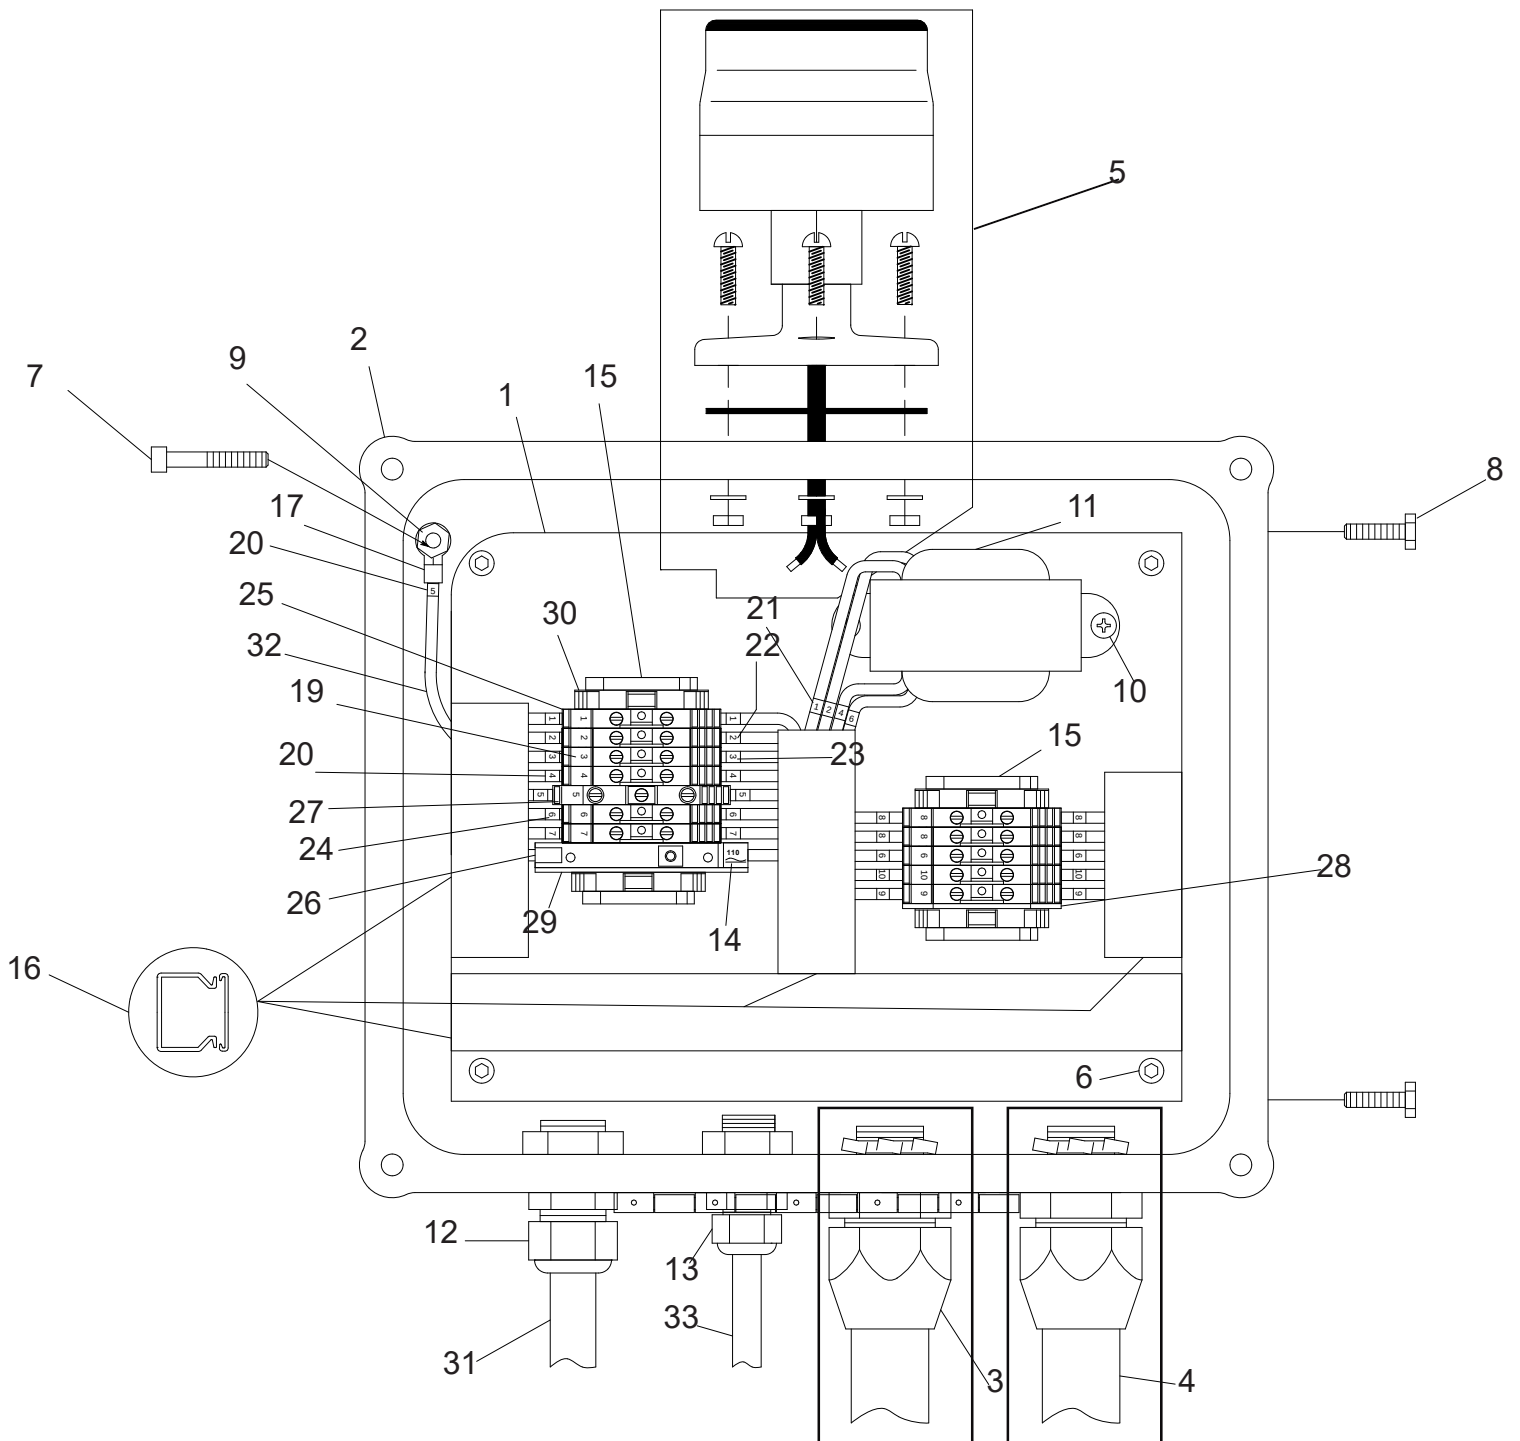

Overhead Junction Box Assembly (Wall Mount) (P/N 06640-35-01)

KEY #	PART #	QTY.	DESCRIPTION
1	06640-11	1	PANEL, Junction Box
2	06640-37-02	1	BOX, Overhead Junction Drilled (Wall Mount)
3	06640-49-01	1	HARNESS, Wiring Distribution Box (Wall Mount)
4	06640-49-01/3	1	HARNESS, Wiring Switch Box (Wall Mount)
5	06640-65-1	1	LIGHT, Warning Red 24v Mount and Gasket
6	PP-02-221	4	SCREW, SktHdCp 10 - 32 x 1/2
7	PP-02-224	1	SCREW, SktHdCp 10 - 32 x 1 1/4
8	PP-02-97-01	3	SCREW, HxHdCp 10 - 32 x 3/4
9	PP-04-75	2	NUT, Hex RevLoc 10 - 32 x 3/4
10	PP-17-09	13	SCREW, PHPH 8 - 16 x 1/2
11	PP-19-165	1	TRANSFORMER, 120/24
12	PP-19-17-3	1	FITTING, LT Str CdGp Large
13	PP-19-17-4	1	FITTING, LT Str CdGp Small
14	PP-19-284-20	1	FUSE, 1/2 amp Slo-Blo 1/4 x 1 1/4
15	PP-19-298	.583ft	RAIL, Din Alum 35mm
16	PP-19-298-10	1.66ft	DUCT, Wire 25 x 30w/ Cover White
17	PP-19-311	1	TERMINAL, Ring #10 x 16 - 14 Blue
18	PP-19-333-18	1	FERRULE, Insulated 18ga. Red
19	PP-19-334-01	12	MARKER, TermBlk 5mm 1 - 10
20	PP-19-335-01	7	MARKER, Cable ID 1 - 18
21	PP-19-336-01	2	MARKER, Cable #1
22	PP-19-336-02	2	MARKER, Cable #2
23	PP-19-336-03	1	MARKER, Cable #3
24	PP-19-336-06	3	MARKER, Cable #6
25	PP-19-601-01	11	BLOCK, Terminal Din Rail
26	PP-19-601-02	1	BLOCK, Terminal Fused Din
27	PP-19-602-01	1	BLOCK, Ground Term Din RI
28	PP-19-603-01	1	PLATE, End Term Block
29	PP-19-603-02	1	PLATE, End Term Blk Fused
30	PP-19-604-01	4	STOP, End Term Block
31	RM-1415	150ft	WIRE, 14/4 SJ (4 Color)
32	RM-1419-03	1ft	WIRE, Green / Yellow 18ga.
33	RM-1429	150ft	WIRE, Coax heavy

Warning Light
(P/N 06640-65-1 or 2)

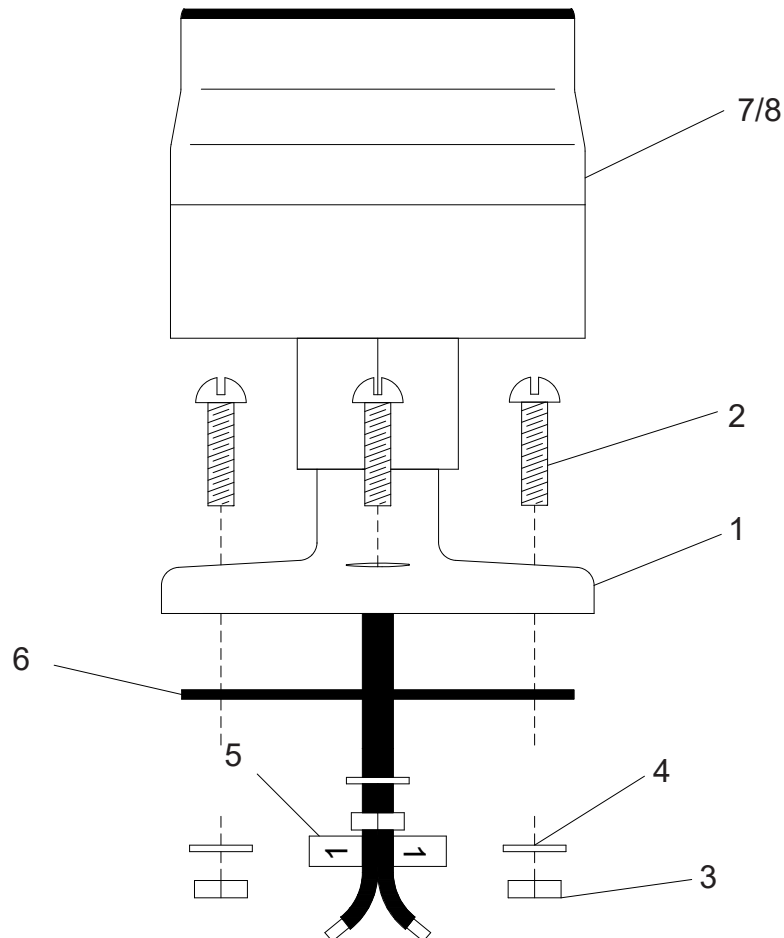


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06640-67	1	MOUNT, Warning Light 1/2mpt
2	PP-02-82	4	SCREW, s/RndHdMch 10 - 24 x 3/4
3	PP-04-13	4	NUT, Hex 10 - 24
4	PP-05-72	4	WASHER, #10
5	PP-19-335-01	2	MARKER, Cable ID 10 - 18
6	PP-19-89-49	1	GASKET, Warning Light
7	PP-19-89-50	1	LIGHT, Warn / Steady Red (for 06640-65-1)
8	PP-19-89-52	1	LIGHT, Warn / Steady Amber (for 06640-65-2)



THIS PAGE IS INTENTIONALLY LEFT BLANK

Stunner Control Panel Box (Cabinet Mount)
(P/N 06640-51)

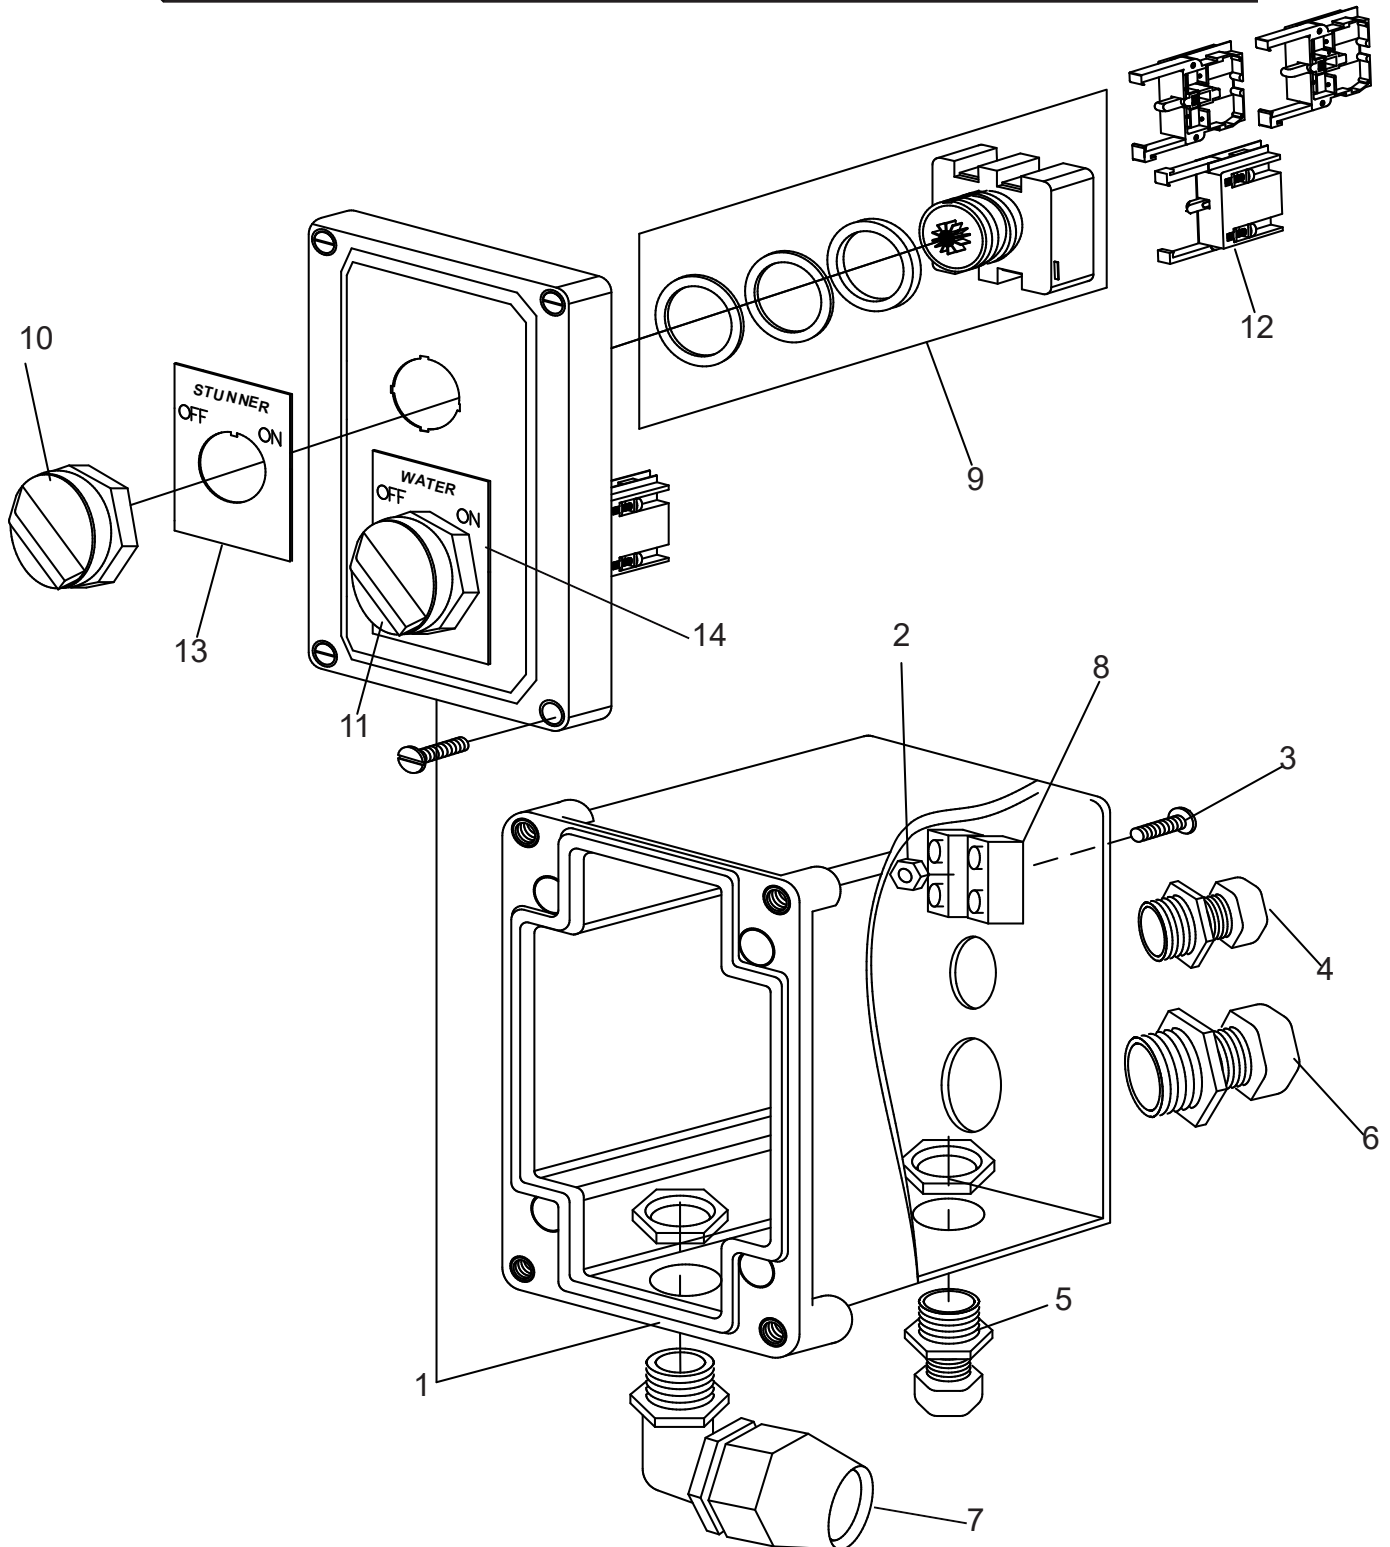


Stunner Control Panel Box (Cabinet Mount) (P/N 06640-51)

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06640-53	1	BOX, Stunner Control
2	PP-14-81	1	NUT, Hex 6 - 32
3	PP-17-220	1	SCREW, RndHdMch 6/32 x 3/4
4	PP-19-17-4	1	FITTING, LT Straight CdGp Small
5	PP-19-17-5	1	FITTING, LT Straight CdGp 2 Wire
6	PP-19-17-7	1	FITTING, LT Straight CdGp 3 Wire
7	PP-19-17-11	1	CONNECTOR, 1/2 Conduit 90 deg.
8	PP-19-500	1	STRIP, Barrier #6 3 POS
9	PP-19-536-1	2	OPERATOR, 2 Pos. Maint.
10	PP-19-537-1	1	HANDLE, Operator Red
11	PP-19-537-2	1	HANDLE, Operator White
12	PP-19-538-1FP	4	BLOCK, Contact Fg/Prp NO
13	PP-19-539-4	1	PLATE, Legend Stunner
14	PP-19-539-5	1	PLATE, Legend Water

PARTS NOT SHOWN


<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
PP-19-306	3	TERMINAL, Ring Y 12 - 10 x 1/4
PP-19-310	4	TERMINAL, Fork Red 18 - 22

Stunner Control Panel Box (Wall Mount) (P/N 06640-51-01)

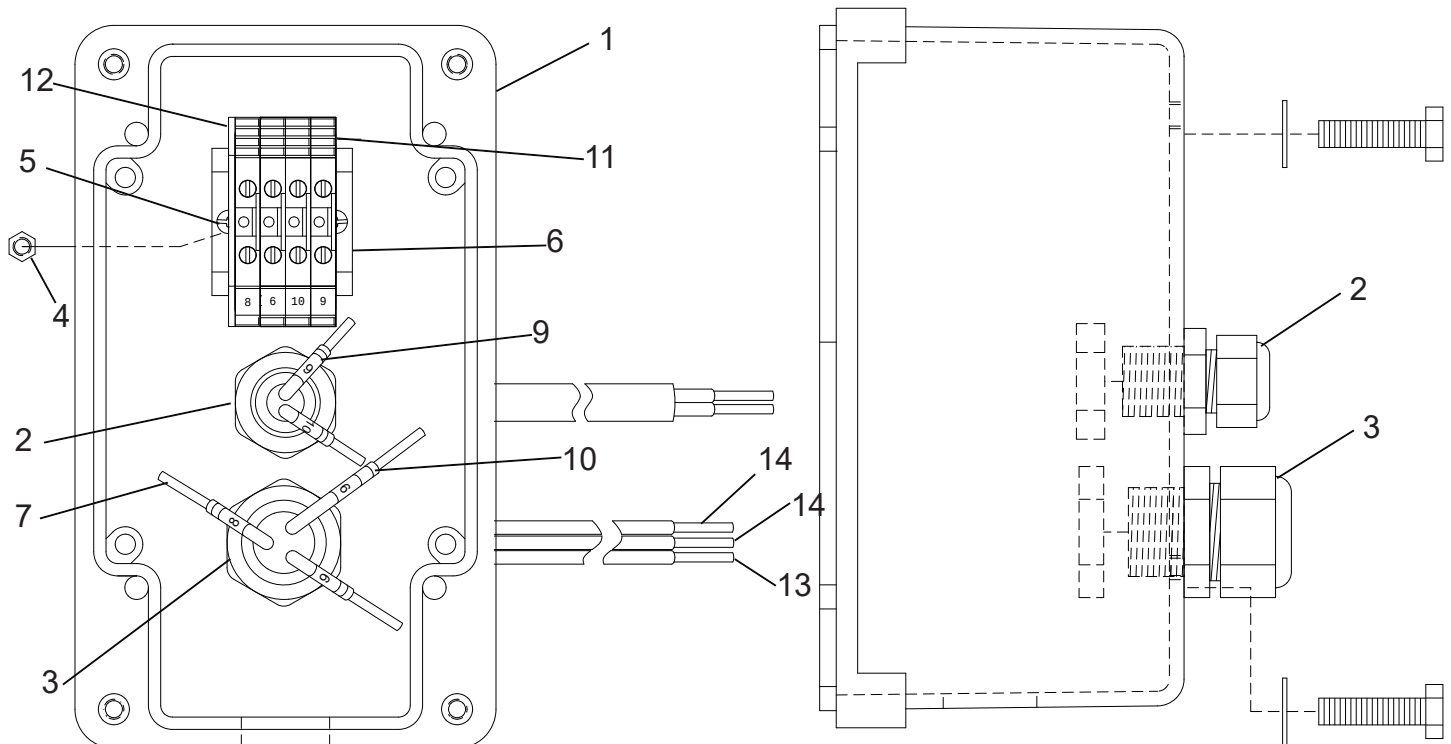


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06640-53-01	1	BOX, Distribution (Wall Mount)
2	PP-19-17-4	1	FITTING, LT Str CdGp Small
3	PP-19-17-7	1	FITTING, LT Str CdGp 3 Wire
4	PP-14-81	2	NUT, Hex 6 - 32 Zinc
5	PP-17-220	2	SCREW, RdHdMch 6 - 32 x 3/4
6	PP-19-298	.167ft	RAIL, Din Alum 35mm
7	PP-19-333-18	5	FERRULE, Insulated 18ga. Red
8	PP-19-334-01	4	MARKER, Terminal Blk 5mm 1 - 10
9	PP-19-335-01	3	MARKER, Cable ID 1 - 18
10	PP-19-336-06	2	MARKER, Cable #6
11	PP-19-601-01	4	BLOCK, Terminal Din Rail
12	PP-19-603-01	1	PLATE, End Terminal Block
13	RM-1418-01	20ft	WIRE, Stranded Blue 14ga.
14	RM-1418-02	40ft	WIRE, Stranded Red 14ga.
15	RM-1425	20ft	WIRE, 3 Conductor 18ga.

Stunner Control Panel Box (Wall Mount) (P/N 06640-51-02)

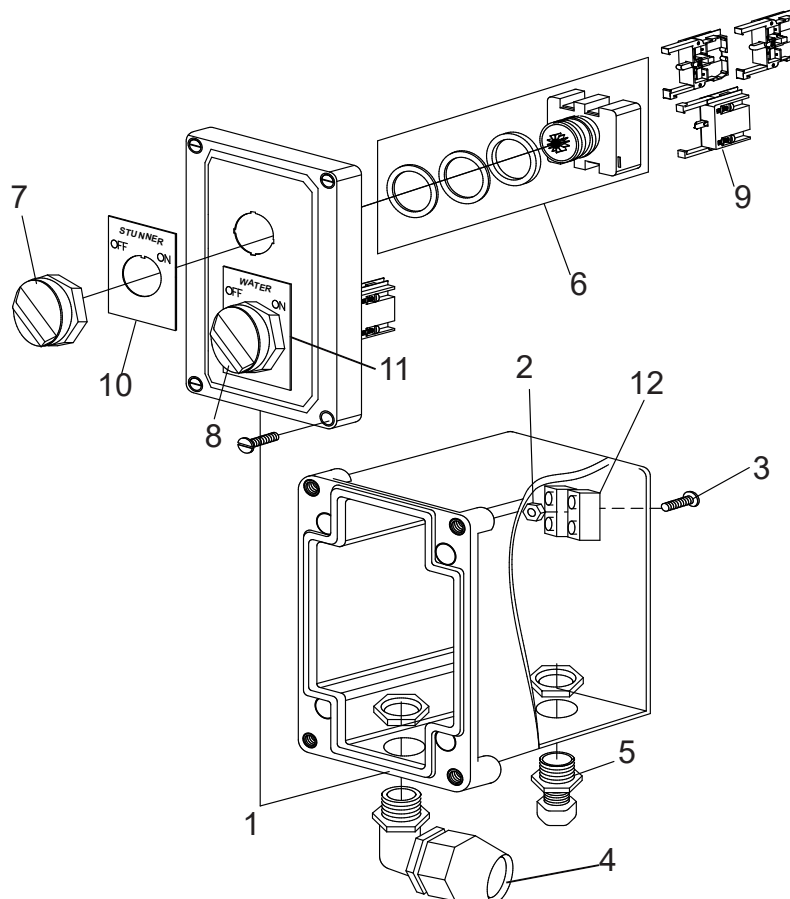


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06640-53-02	1	BOX, Stunner Control (Wall Mount)
2	PP-14-81	1	NUT, Hex 6 - 32 Zinc
3	PP-17-220	1	SCREW, RdHdMch 6 - 32 x 3/4
4	PP-19-17-11	1	CONNECTOR, 1/2" 90deg CD w/ RM-0590
5	PP-19-17-5	1	FITTING, LT Str CdGp 2 Wire
6	PP-19-536-1	2	OPERATOR, 2 Pos. Maint.
7	PP-19-537-1	1	HANDLE, Oper. Red
8	PP-19-537-2	1	HANDLE, Oper. White
9	PP-19-538-1FP	4	BLOCK, Contact FG/Prp NO
10	PP-19-539-4	1	PLATE, Legend Stunner
11	PP-19-539-5	1	PLATE, Legend Stunner Water
12	PP-19-606-01	1	BLOCK, Terminal Mount 2 Row Pos 18 - 22ga.

**Harness, Wiring Overhead Junction / Control Box
(Cabinet Mount)
(P/N 06640-49)**

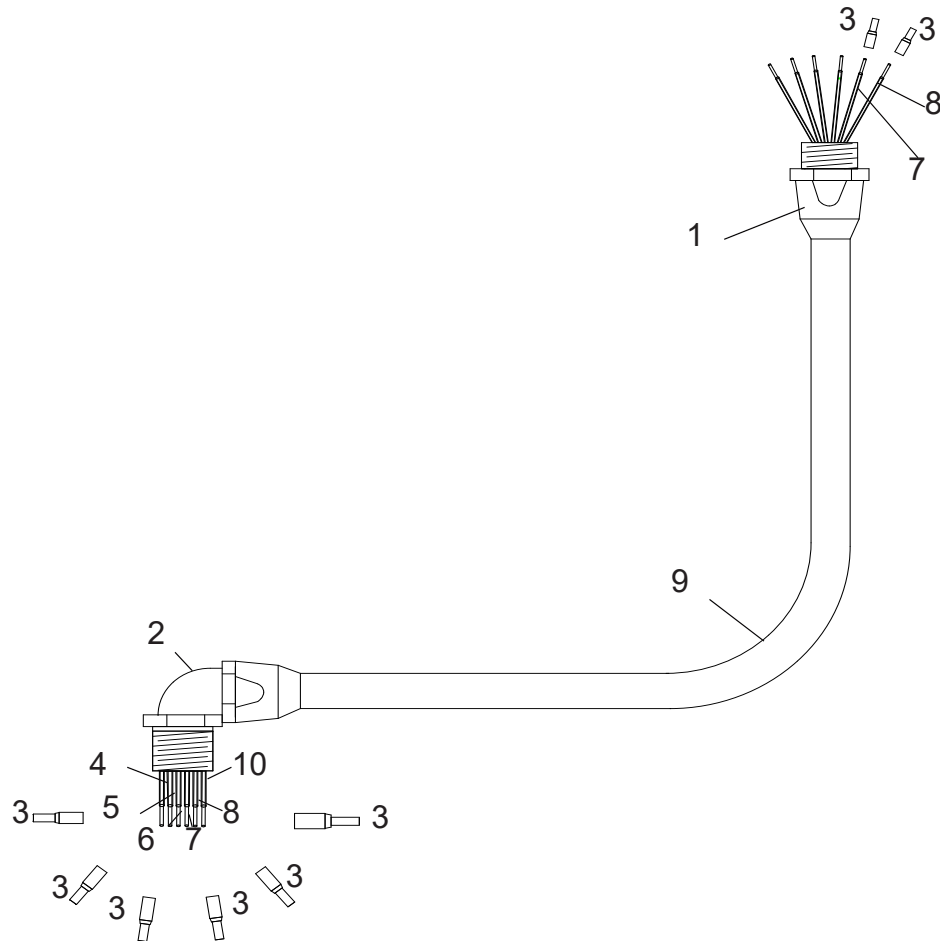


KEY #	PART #	QTY.	DESCRIPTION
1	PP-19-17-10	1	CONNECTOR, 1/2 Straight CD
2	PP-19-17-11	1	CONNECTOR, 1/2 90deg CD
3	PP-19-333-18	12	FERRULE, Insulated 18ga. Y
4	PP-19-400	12ft.	WIRE, 18ga. (White)
5	PP-19-401	12ft.	WIRE, 18ga. (Black)
6	PP-19-402	12ft.	WIRE, 18ga. (Red)
7	PP-19-403	12ft.	WIRE, 18ga. (Green)
8	PP-19-404	12ft.	WIRE, 18ga. (Yellow)
9	RM-0590	10ft.	CONDUIT, 1/2 Type A
10	RM-1418-01	12ft.	WIRE, Stranded Blue 14ga.

**Harness, Wiring Overhead Junction / Distribution Box
(Wall Mount)
(P/N 06640-49-01)**

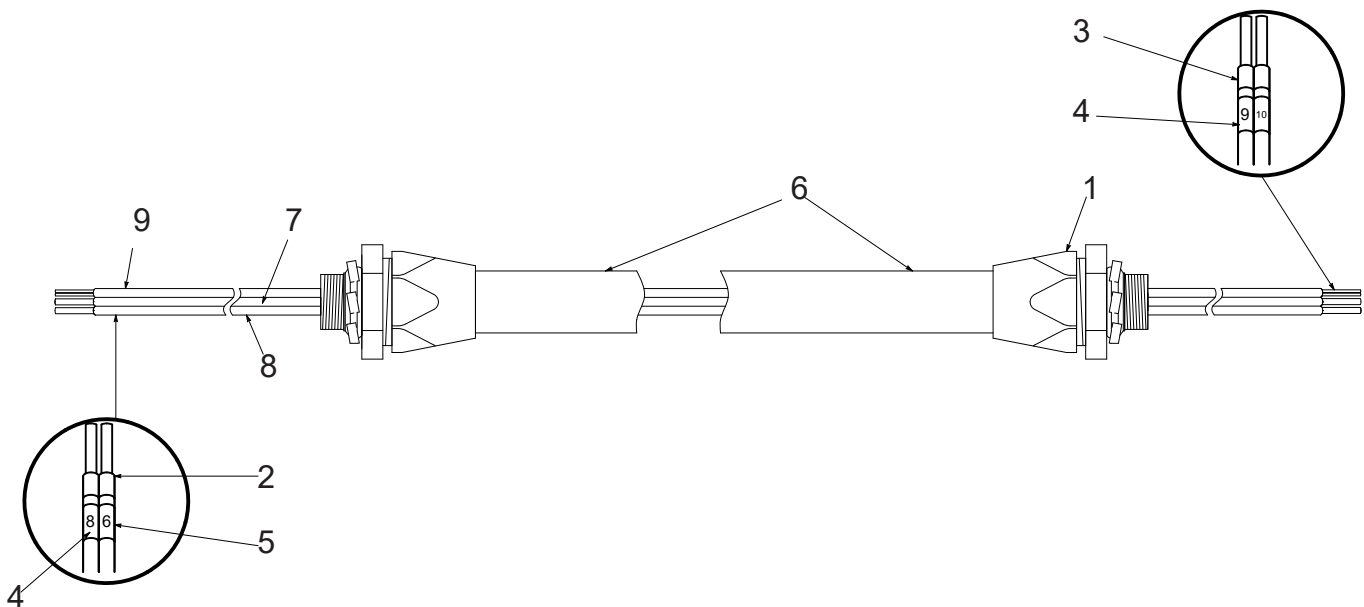


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	PP-19-17-10	2	CONNECTOR, 1/2" Straight CD
2	PP-19-333-12	6	FERRULE, Insulated 12ga. Green
3	PP-19-333-18	4	FERRULE, Insulated 18ga. Red
4	PP-19-335-01	2	MARKER, Cable ID 1 - 18
5	PP-19-336-06	2	MARKER, Cable #6
6	RM-0590	8.3ft	CONDUIT, 1/2 Type A
7	RM-1418-01	10	WIRE, Stranded 14ga. Blue
8	RM-1418-02	10	WIRE, Stranded 14ga. Red
9	RM-1425	10	WIRE, 3 Conductor 18ga.

**Harness, Wiring Overhead Junction / Switch Box
(Wall Mount)
(P/N 06640-49-01/3)**

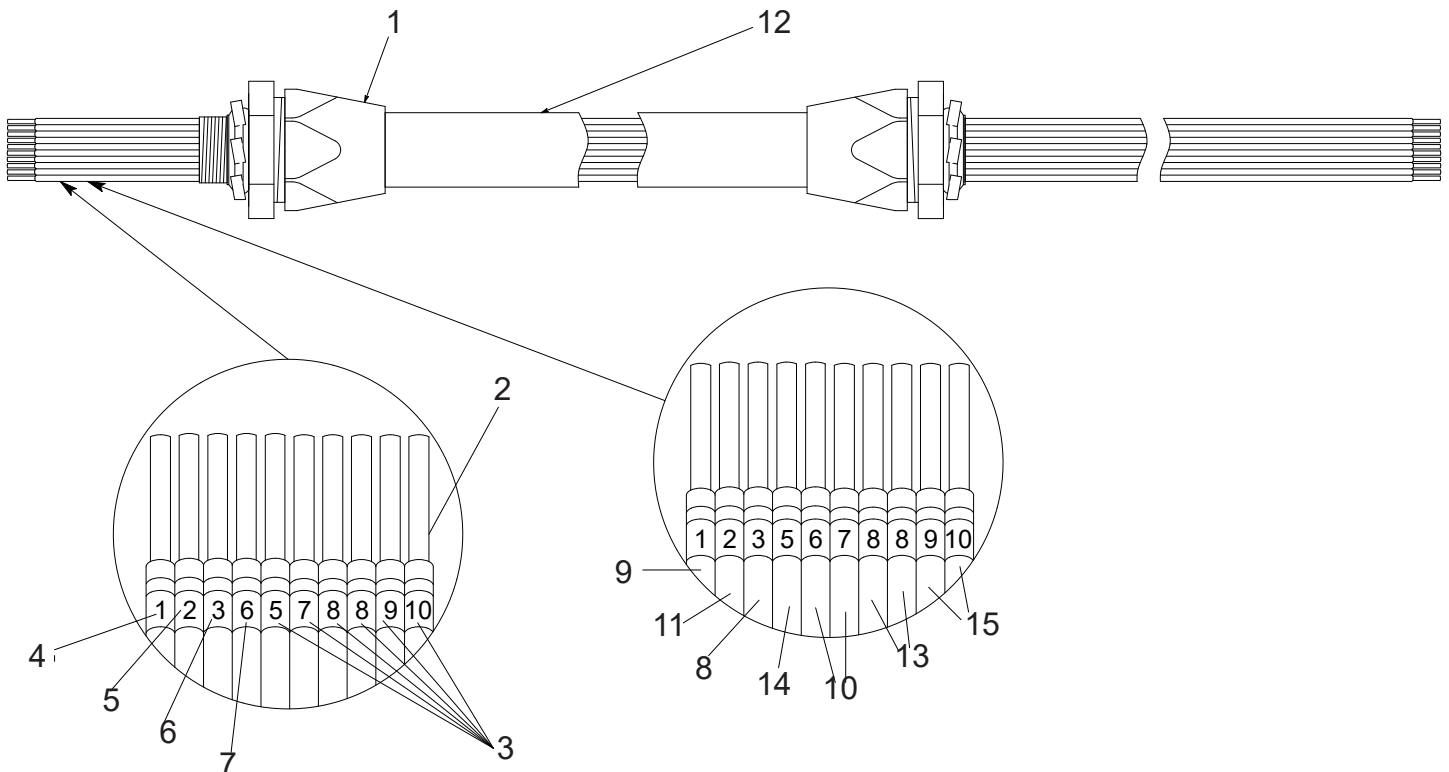


KEY #	PART #	QTY.	DESCRIPTION
1	PP-19-17-10	2	CONNECTOR, 1/2 Straight CD
2	PP-19-333-18	10	FERRULE, Insulated 18ga. Red
3	PP-19-335-01	12	MARKER, Cable ID 1 - 18
4	PP-19-336-01	2	MARKER, Cable #1
5	PP-19-336-02	2	MARKER, Cable #2
6	PP-19-336-03	2	MARKER, Cable #3
7	PP-19-336-06	2	MARKER, Cable #6
8	PP-19-400	2	WIRE, 18ga. White
9	PP-19-401	100ft	WIRE, 18ga. Black
10	PP-19-402	100ft	WIRE, 18ga. Red
11	PP-19-404	200ft	WIRE, 18ga. Yellow
12	RM-0590	2ft	CONDUIT, 1/2 Type A
13	RM-1419-02	200ft	WIRE, 18ga. Blue
14	RM-1419-03	100ft	WIRE, 18ga. Green / Yellow
15	RM-1419-04	200ft	WIRE, 18ga. Gray

Stunner Guide Bar Kit - Stainless Shackles
(P/N 06690-21-12)

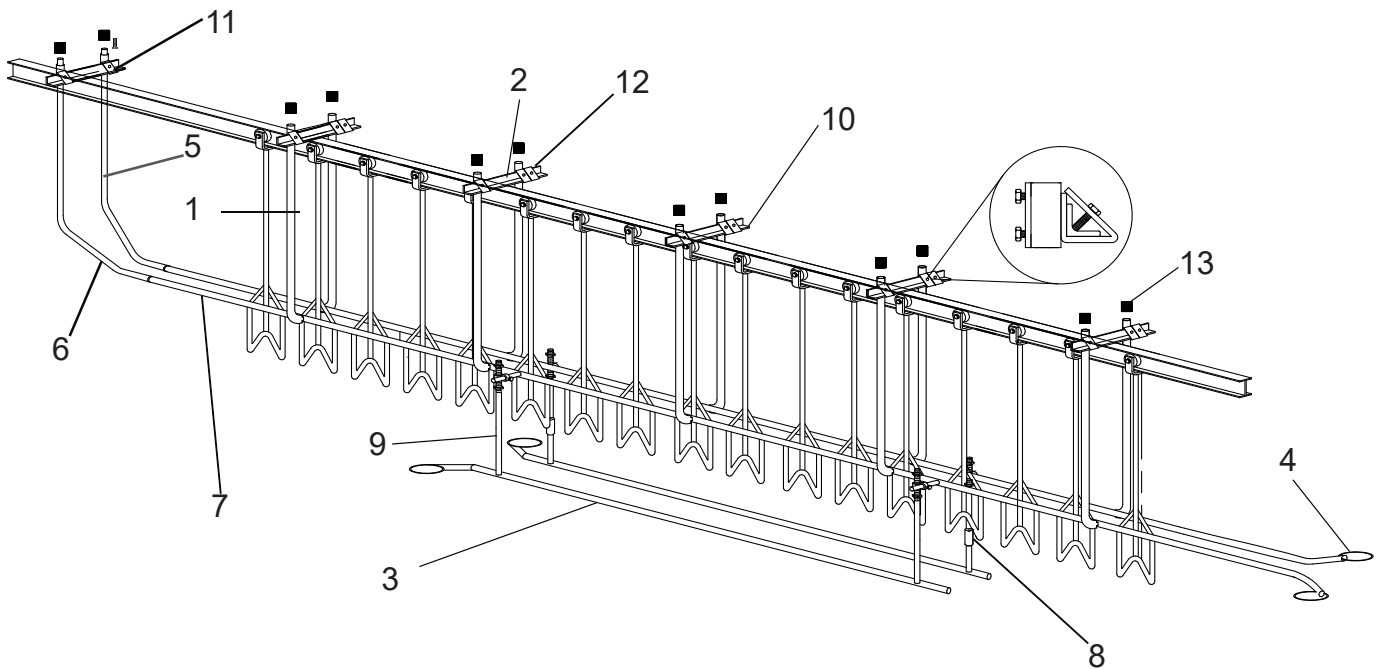


KEY #	PART #	QTY.	DESCRIPTION
1	06690-07	16	ROD, Drop 32"
2	06690-11	9	ANGLE, Guide Bar 16"
3	06690-18	2	BAR, Guide w/ Loop 6'
4	06690-18-12	2	BAR, Guide w/ Loop 12'
5	06690-23	1	ROD, Guide Bar Entrance LH
6	06690-24	1	ROD, Guide Bar Entrance RH
7	06690-25-12	2	ROD, 12' Straight
8	06690-27	2	MOUNT, Breast Bar Assy.
9	06690-27-01	2	MOUNT, Rump Bar Assy.
10	06690-61	18	HANGER, Pipe Drop w/ Screw
11	06690-65-01	8	BRACKET, Angle
12	06690-67	3	HANGER, Rod Drop w/ Screws
13	PP-25-144	18	CAP, 1" x 1" Blk

Mount, Breast Bar Assembly (P/N 06690-27)

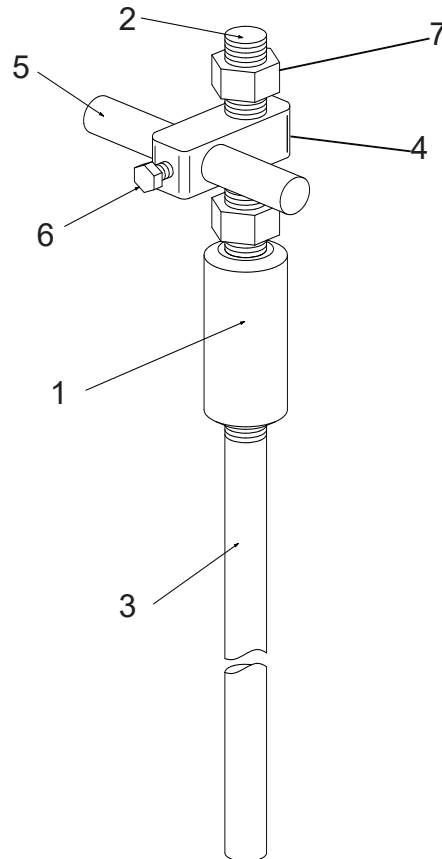


<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06690-29	1	ISOLATOR, Rump Bar
2	06690-31	1	ROD, 3/4 - 10 x 6 Threaded
3	06690-33	1	ROD, Drop 3/4 x 16
4	06690-35	1	CROSS, 3/4
5	06690-37	1	ROD, Horizontal Attachment
6	PP-01-12	1	SCREW, HxHdCp 5/16 - 18 x 1/2
7	PP-04-08	2	NUT, Hex 3/4 - 10

**Mount, Rump Bar Assembly
(P/N 06690-27-01)**

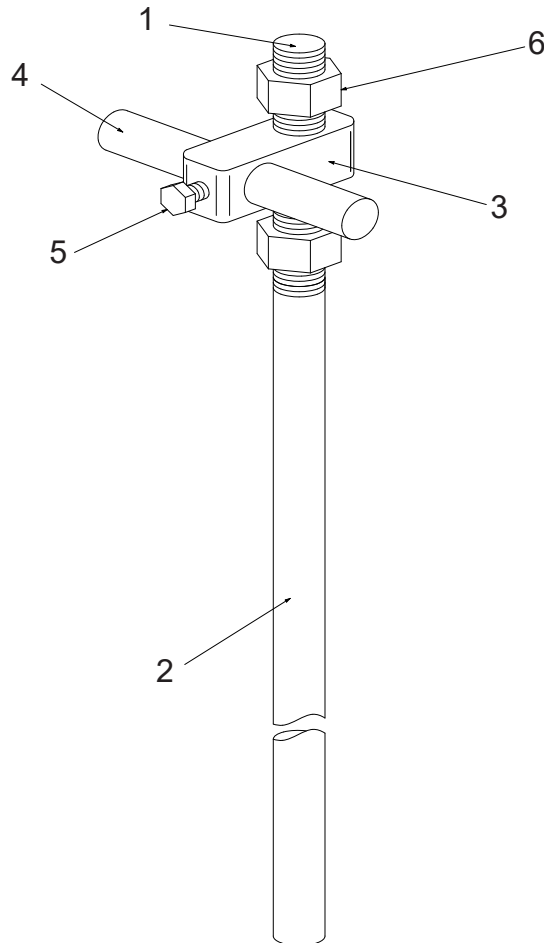

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	06690-31	1	ROD, 3/4 - 10 x 6 Threaded
2	06690-33-01	1	ROD, Vertical Rump Bar
3	06690-35	1	CROSS, 3/4
4	06690-37	1	ROD, Horizontal Attachment
5	PP-01-12	1	SCREW, HxHdCp 5/16 - 18 x 1/2
6	PP-04-08	2	NUT, Hex 3/4 - 10

**Stunner Enclosure Assembly
(P/N 07700-01C)**

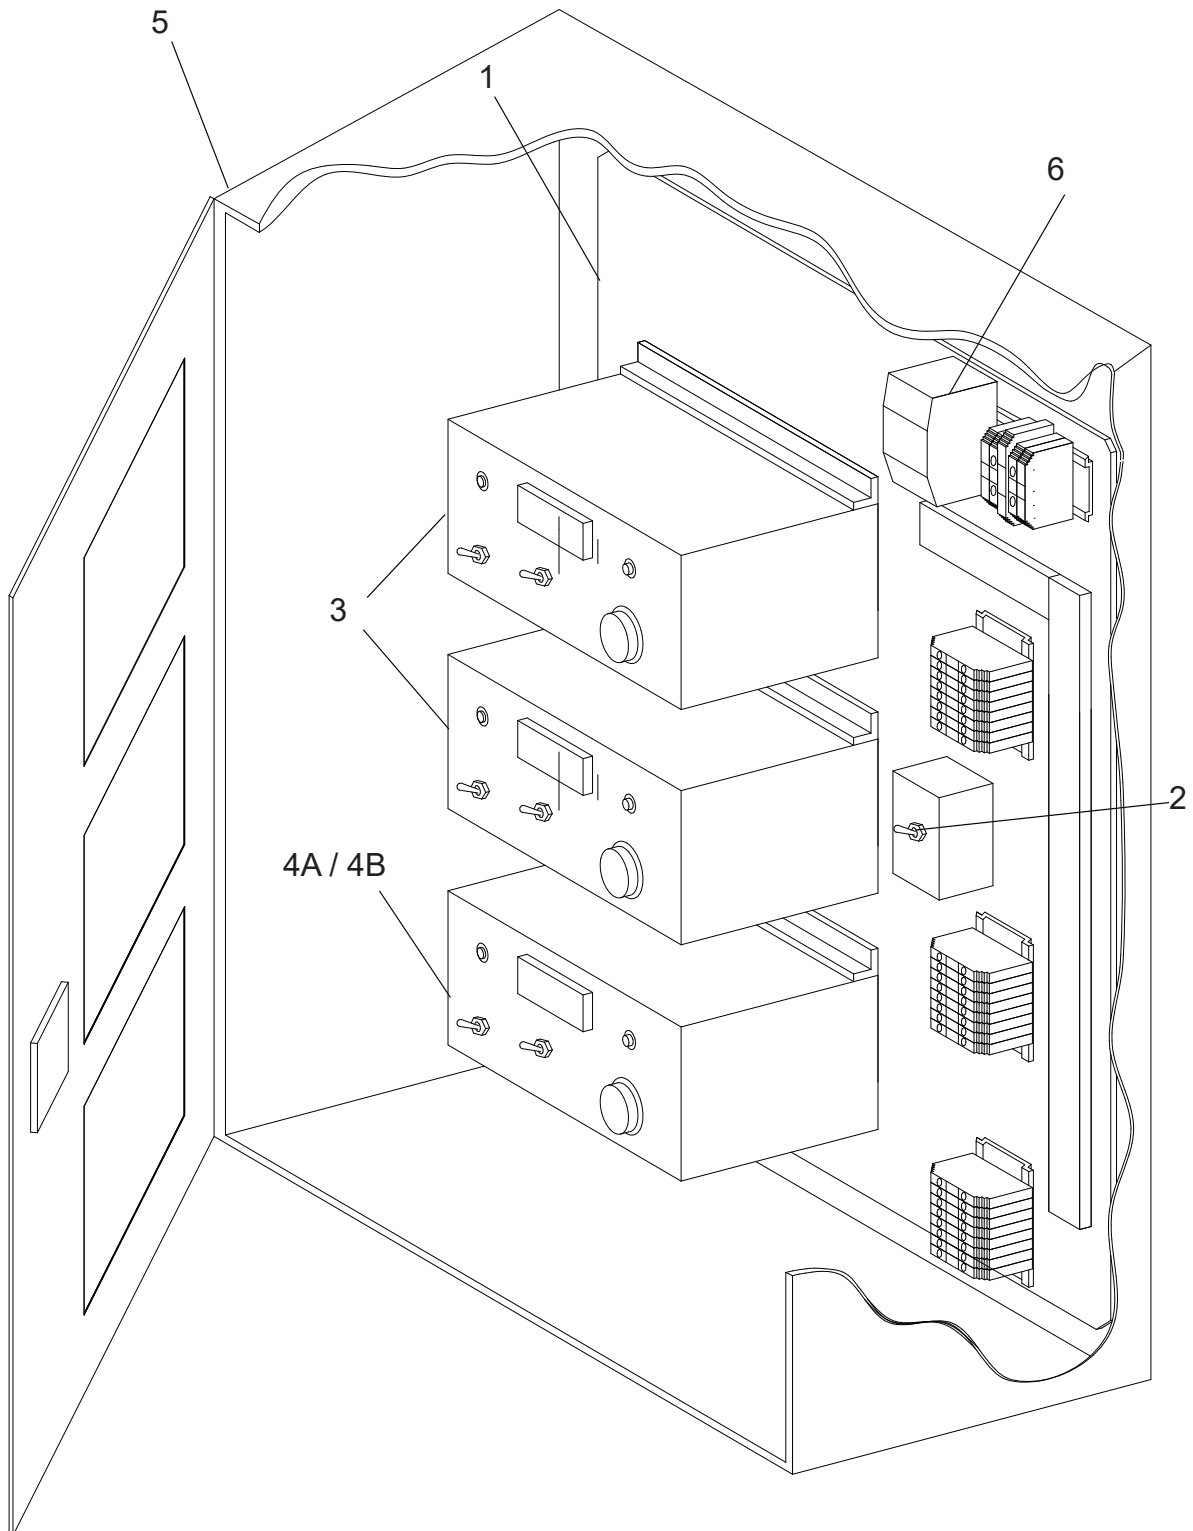


Stunner Enclosure Assembly
(P/N 07700-01C)

<u>KEY #</u>	<u>PART #</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
1	04655-03A	1	Panel, Inside (includes #2 & #6)
2	04655-31	1	Primary / Standby Selection Switch Assy.
3	06809-01	2	DC Power Supply Model 7009 0 - 45v
4A	06994-01	1	AC Power Supply Model 7100 0 - 49v
4B	06694-01-110	1	AC Power Supply Model 2013 0 - 110v
5	PP-19-157-SS	1	Enclosure, Stunner
6	PP-19-234	1	Filter w/ Suppressor 5 amp


CAUTION

Warranty will be voided if Stunner Power Supplies are opened by anyone other than an authorized SEC Technician.


Stunner System Control Box Panel Wiring Diagram

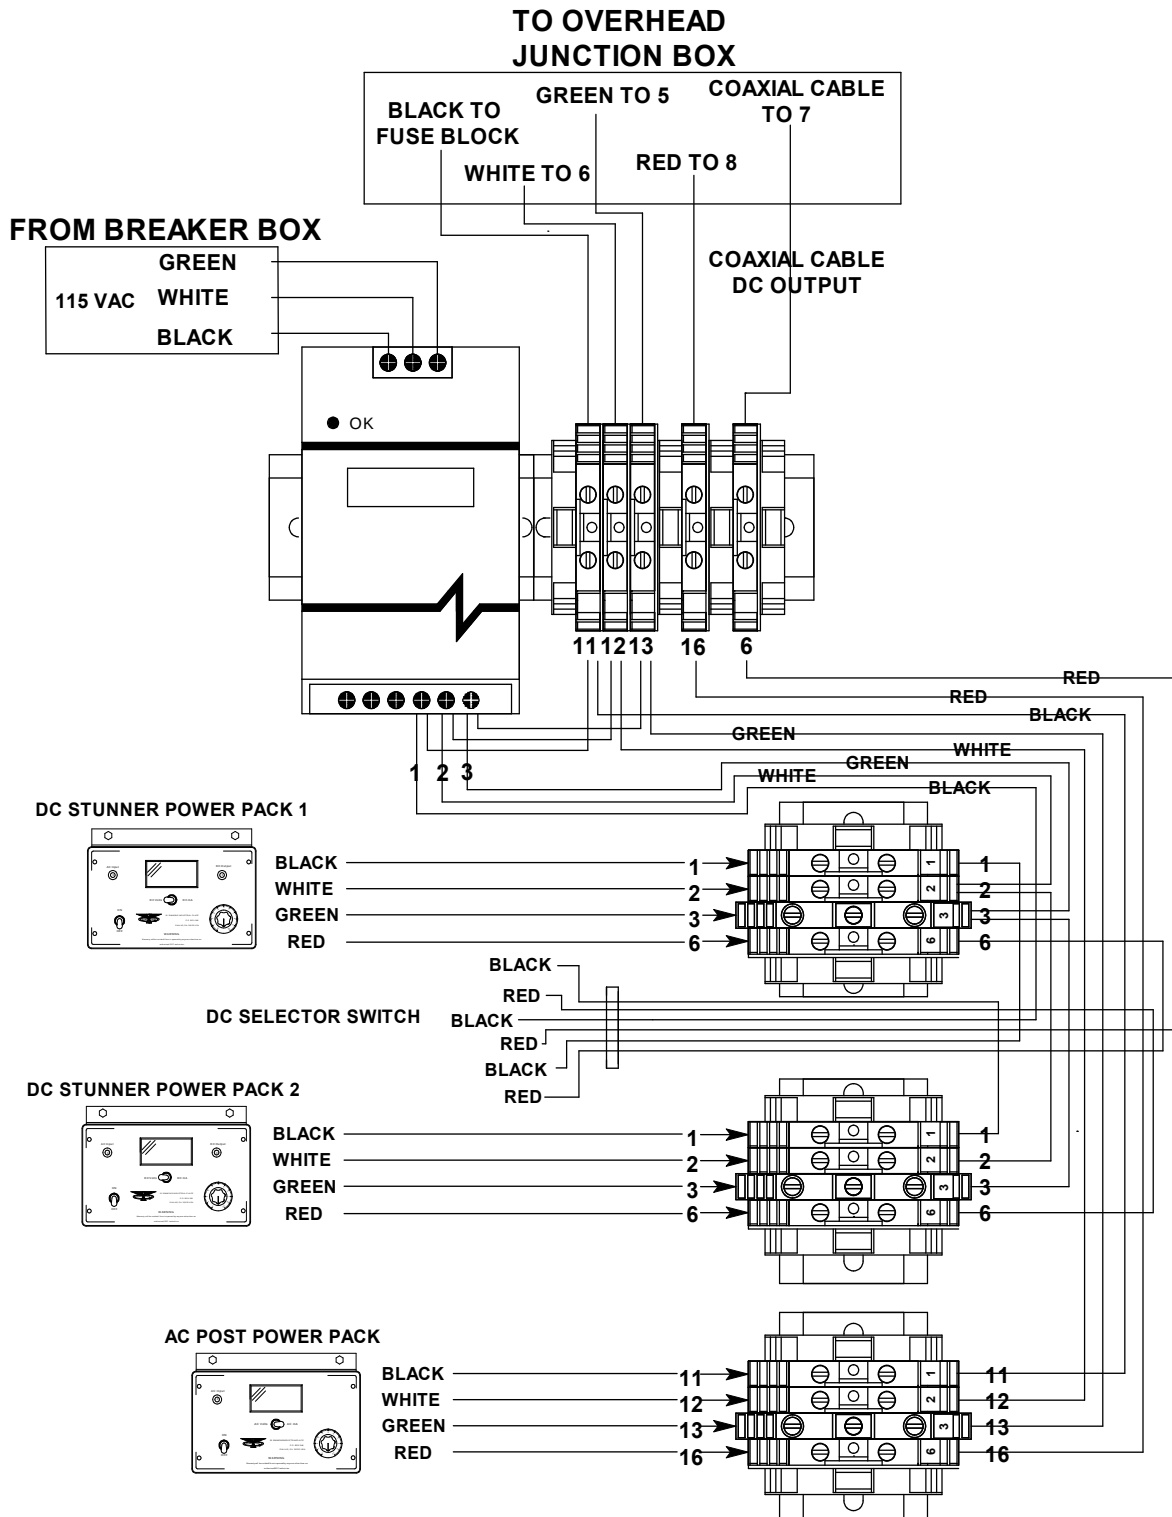

Overhead Box (Cabinet Mount) Wiring Diagram

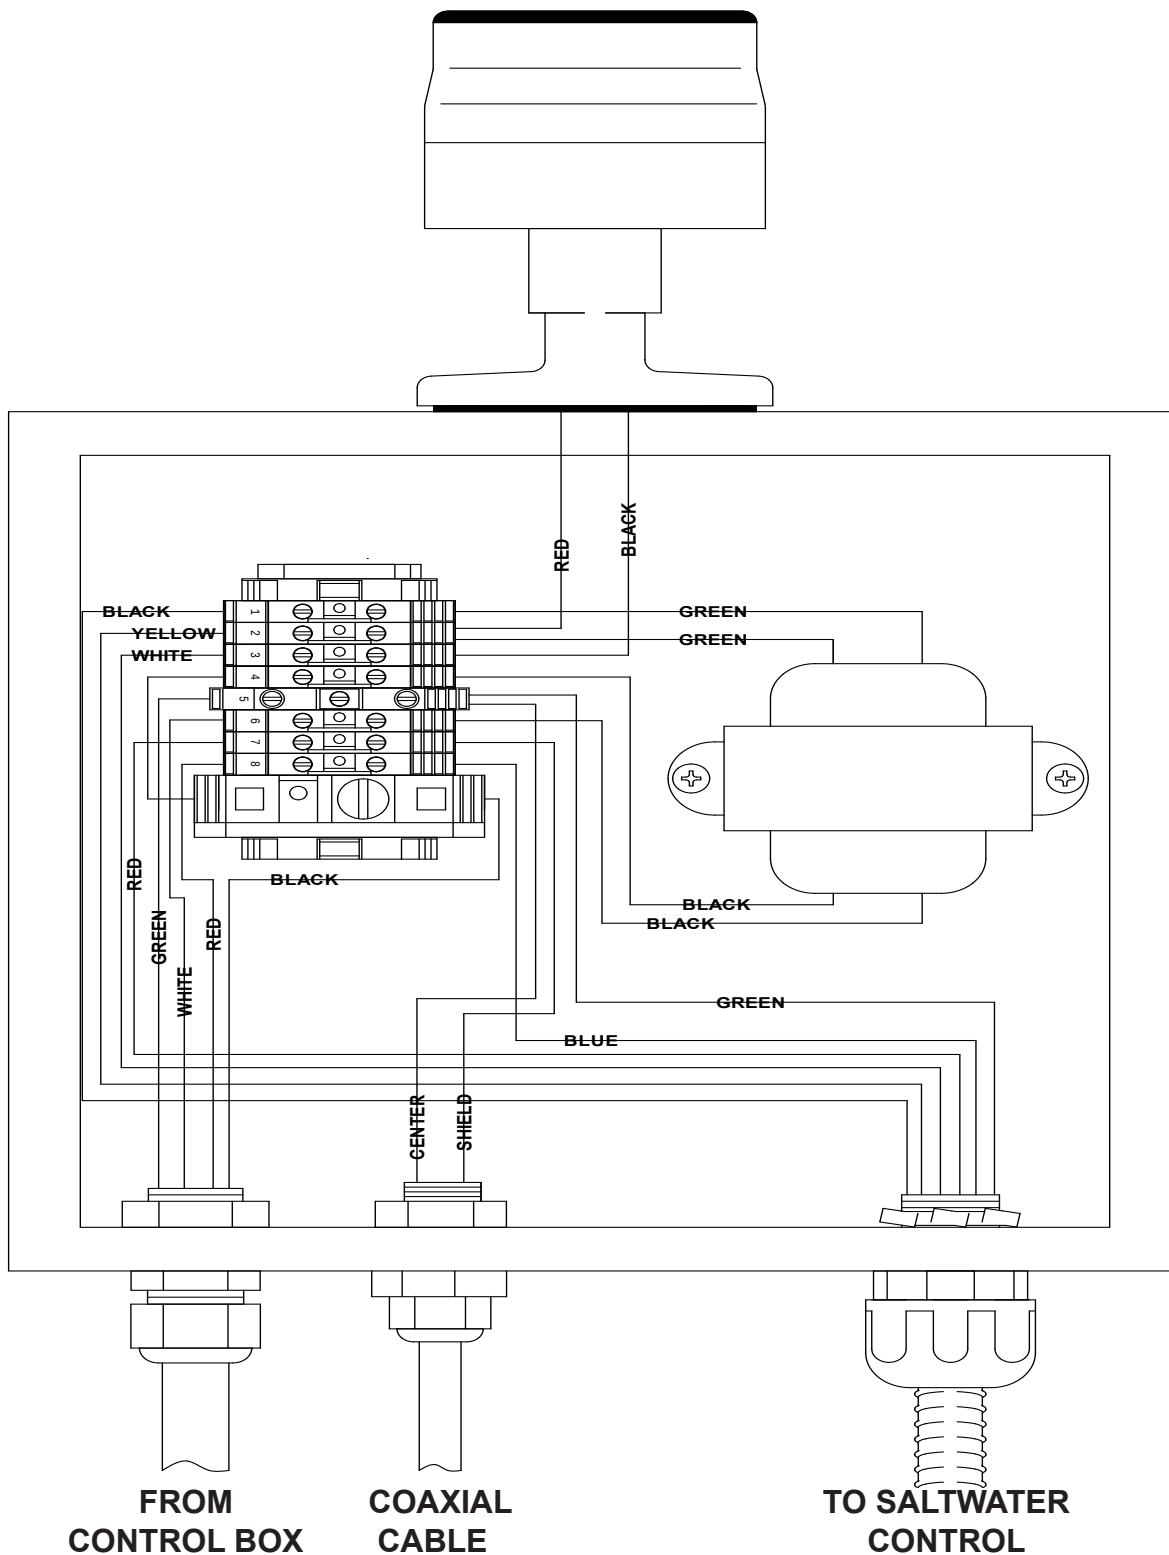

Control Box (Cabinet Mount) Wiring Diagram

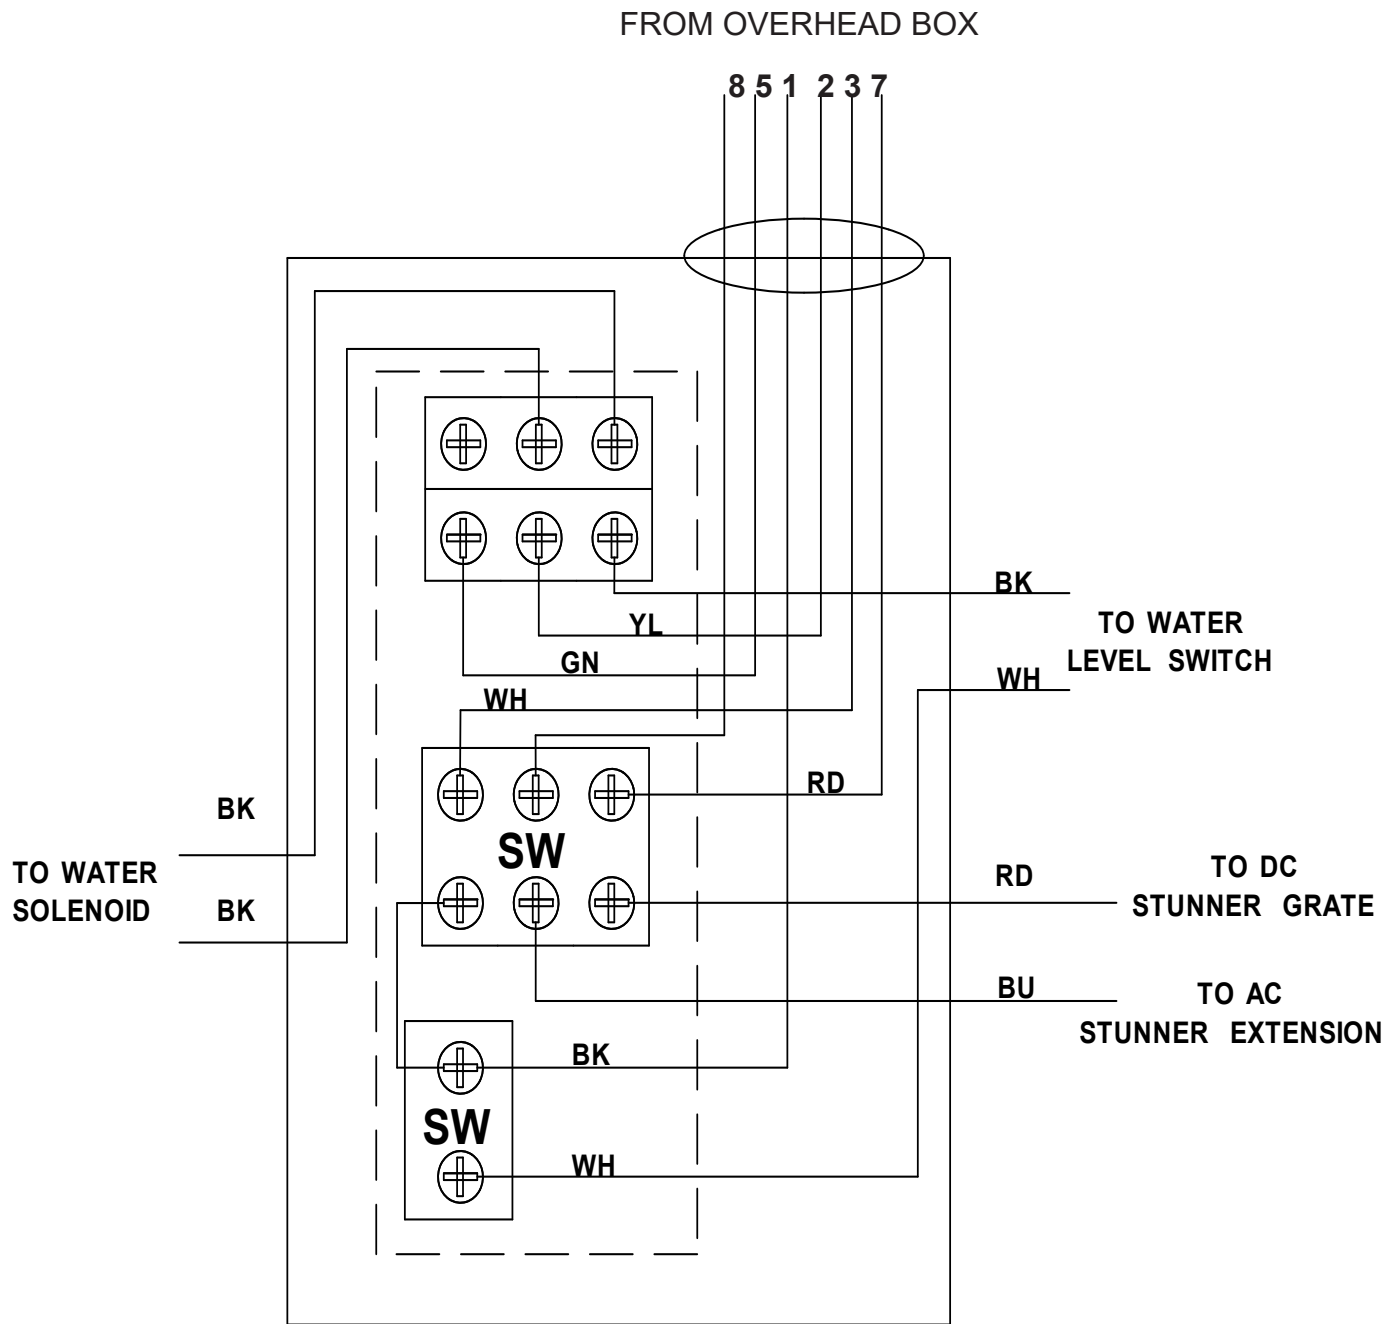

Control Box (Wall Mount)
Wiring Diagram

THIS PAGE IS INTENTIONALLY LEFT BLANK



THIS PAGE IS INTENTIONALLY LEFT BLANK

Maintenance Instructions (Daily)

Daily Prior to Start-Up

- Lower the grating from the upright position to the horizontal position in the cabinet.
- Turn on DC and AC Power packs and set to the plant desired voltage.
- Use a handheld meter to verify the voltage at the plate on the DC and AC stunner sections.
- Use the Pneumatic lift mechanism to raise or lower the stunner cabinet to the plant desired height.
- Verify that the "Red Armed" warning light is functional above the stunner.
- Verify that the water is on and the salt dispenser is full.

Daily Maintenance / Sanitation

- Insure that the stunner cabinet including the grating are cleaned and sanitized daily.
- During sanitation, lift the grate sections and latch with the grate clips.
- Clean and sanitize both the top and bottom side of the grate to remove any salt buildup that may have occurred during production.
- Leave the grating in the vertical position for a period of time to allow any excess water and salt to drain from the grate.
- Oil the hinge on the stunner grates to insure that any excess salt buildup is properly removed from the hinge.
- While the controls are in the "Off" position, turn the control dials on all three controllers to insure that they are free of buildup on the contacts and operating properly.
- Switch between the "Primary" and "Back-Up" DC controllers daily to insure that both controller are functioning normally. (Note: If you notice a voltage reading on the DC controller that is significantly higher than normal, you may have a damaged controller. Normal Maximum voltage readings should be no greater than 50 volts.)
- Operate the Pneumatic motor on the overhead up and down to insure that the lift is operating freely and operating normally.

Maintenance Instructions (Weekly and Monthly)

Weekly Maintenance

- Check the stainless steel guide bars for proper adjustment.
- Insure that the guide bars are in constant contact with the stainless steel shackles.
- Insure that the bird contact bars (Plastic Shackles only) are in constant contact with the knee area of the bird.
- Check the stainless steel chain on the overhead lift mechanism to insure that it is tight and not slipping on any of the sprockets. Tighten the take up assemblies as necessary.
- Remove the float switch from the housing & clean any accumulated dirt and buildup around the float.

Monthly Maintenance

- Visually inspect the stainless steel chain on the overhead system for excessive wear.
- Visually inspect the sprockets on the overhead system for excessive wear.
- Visually inspect the overhead chain while in operation to insure that it is functioning properly and that the chain is tight.
- Visually inspect grate wiring connections & insure they are tight & not showing signs of corrosion.
- Turn off the water and remove one of the hoses from the bottom of the salt dispenser.
- Open the lid on the dispenser and rinse the inside of the canister to remove any salt build up that may have occurred.
- Remove the water header from the base of the dispenser and clean the salt injection tubes.
- Re-attach the header to the salt dispenser.
- Re-attach the hose to the bottom of the dispenser and Turn on the water to check for leaks.
- Check the pneumatic air / water separator and blow out any excess water.
- Check the oiler to insure the proper oil level is maintained.

Maintenance Instructions (Quarterly)

Quarterly Maintenance

- Grease all of the sprockets on the overhead using the supplied grease fittings.
- Check all of the bolts in the system to insure they are properly tightened.