




Poly-clip System

EZ2000 - P600

PLASTIC #2

78536

Serial Number: _____

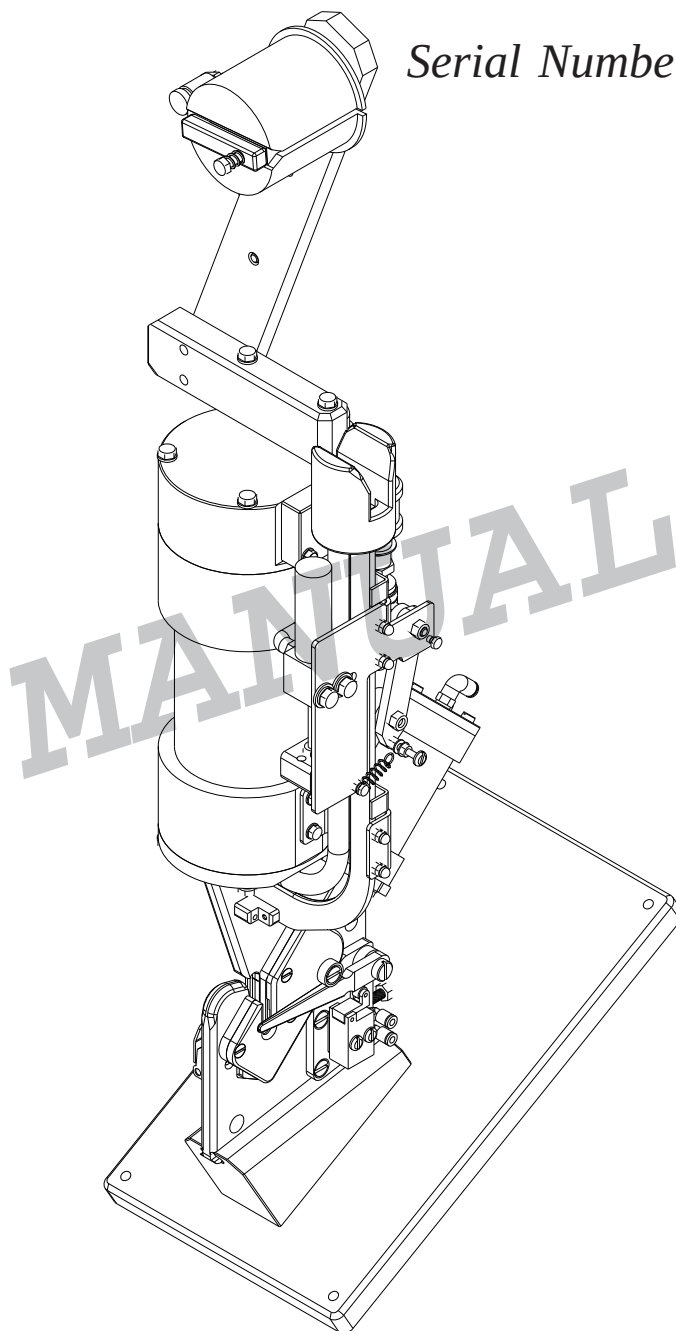

1-800-USA-CLIP

1000 Tower Road, Mundelein, IL 60060

USA

GUARANTEE

POLY-CLIP SYSTEM - DIE SUPPORT - EZ-2000 MACHINE

Poly-clip System Corporation guarantees the EZ-2000 Poly-Clip Machine against defects in material and workmanship for six (6) months from the date the machine is received. Poly-clip System Corporation will repair or replace, at their own option, any EZ-2000 Die Support, which has been determined to need replacement while under normal use, within eight (8) months after customer's receipt of the Die Support and clip usage of one million clips per year per each die support owned by the customer.

1. Normal use is construed to be the operation or use of a die support during one eight (8) hour shift five (5) days a week. When the usage is in excess of normal use, as defined, any credit will be pro-rated on that usage.
2. Clip usage will be calculated by amortizing total clips purchased in each twelve month period after receipt of the die support over the total quantity of die supports owned by the customer.
3. Customers must use original clips and parts from Poly-clip System Corporation.
4. Only Poly-clip System Corporation clips are authorized for use in order to have a valid guarantee.
5. Damage caused by forces applied by tools and / or dropping the machine or by using the machine not consistent with the use intended by Poly-clip System Corporation is not covered by the guarantee.

1 Safety Instructions

1.1 Introductory Instructions

The Poly-Clip Machine was built in conformance with the most current technological standards and is in accordance with regulations for the prevention of accidents.



It is important to note, however, that:

- The machine may present danger to life and limb for the user or for a third party.
- Danger of impairment to machine functioning and to other property of the user if the machine is:
 - used or serviced by untrained operators; and/or
 - incorrectly operated or not used in accordance with regulations.

● Important Note

Any person who is authorized to set up for operation, operate, maintain, service, and repair this machine must first read and understand the operating manual, especially the safety instructions.

The generally applicable regulations for safety and for the prevention of accidents must be observed.

1.1.1 Meaning of Symbols

The notes and symbols used in this manual have the following meaning:



Warning of Danger!

● Important Notes,

Contains important information which should be observed.

1.1.2 Warning signs on the machine

- The warning signs and symbols on the machine refer to possible points of danger and must be observed.
- Warning signs and symbols must not be removed from the machine.
- Damaged or illegible warning signs and symbols must be replaced immediately.

1.2 Application and Use of this Machine

1.2.1 Proper Application

The single clip machine is intended for the end closure, sectioning and dividing of stuffed artificial and natural casing.

In addition to its use in meat processing, the machine also has applications in the closure of bags, tube packaging and netting.

1.2.2 Improper Application

Casing, bags, netting or other types of packing with dangerous contents such as, for example, corrosive fluids, environmentally harmful material or explosive material may not be packaged and/or closed with this machine.

1.2.3 Rebuilding and Alterations

Because of safety reasons and service agreement, the user may not rebuild or alter the machine.

1.3 Who may operate the machine?

- Only trained and authorized persons who observe the operating manual, especially the chapter dealing with safety instructions, may operate this machine.
- Only qualified persons authorized by Poly-Clip may carry out this training.
- Dangerous areas on the machine and all possible dangerous situations which may arise during operation of the machine, as described in section 1.5, must be explained to persons operating the machine during training on the machine.

1.4 Setting up, Service, Maintenance, Cleaning and Repair

1.4.1 Who may carry out these tasks?

Setting up during changes in production as well as maintenance and cleaning are to be carried out only by trained operators.

Service and repair tasks may be carried out only by trained

1 Safety Instructions

1.4.2 What must be observed and carried out before beginning these tasks?

Setting up, service and maintenance, repair and cleaning must be carried out when the machine is stopped.

- The main air pressure supply must be disconnected.
- Beforehand make sure that the air pressure has depressurized by closing the gate.

1.4.3 Working with Process Materials

Observe manufacturers' safety and dosage indications and generally valid regulations when working with oil, grease or lubricants, cleaning material and other chemical substances.

Residues from oil, grease or lubricants, cleaning material and other chemical substances must be collected in accordance with the legal provisions for recycling or disposal.

Local authority regulations pertaining to sewage disposal must be observed.

1.5 Points of Danger

1.5.1 Closure



At this point, the gate squeezes the casing or packing material to a smaller diameter. Next the clip is clipped around the twisted end by the closure mechanism.

- The valve must not be actuated if the gate is not closed.

1.5.2 Cutter

The cutter has a hardened, sharp blade. If machine operation is not handled correctly, injuries may occur.

- The cutter is equipped with a safety guard. Do not remove the guard and replace if broken to avoid injury.

1.6 Transporting the Machine

The air line for the machine must be disconnected every time before it is transported; this also holds for very short distances.

When lifting or transporting the machine, never use the rail as a handle to pick up machine.

1.6.1 Loading and Unloading

Be careful when loading with or without lifting gear! While loading/unloading the machine, make sure that the lifting gear has sufficient lifting capacity.

- Never stand under swinging loads or in the loading area.

This is a life-threatening situation!

Use only suitable transport vehicles with sufficient carrying capacity.

Take measure against sliding or falling loads on transport vehicles.

The machine must be disconnected from the power supply beforehand even when transporting it short distances.

1.6.2 Remove Transport Packaging

All packaging and parts attached to the machine for transport must be removed before putting the machine into operation.

- Transport binding is tightly strapped and will spring out when cut.

If this is done incorrectly, injuries can occur.

All parts and equipment removed for transport purposes must be correctly re-mounted in accordance with regulations before putting the machine into operation.

2 Machine Description

The single clip machine EZ 2000-P600 is intended for the end closure, sectioning and dividing of stuffed casing.

In addition to its use in meat processing, the machine also has applications in the closure of bags, tube packaging and netting.

2.1 Types of Closures

There are two possibilities for closure depending on the way in which the die is inserted.

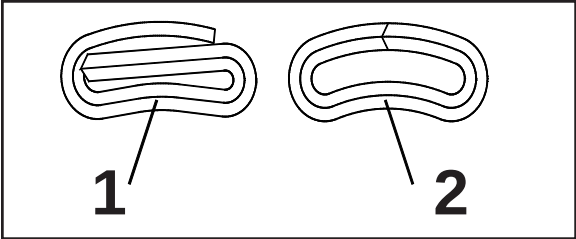


Figure 2-1

1 V-closure, e.g., for synthetic casing, bags or netting.

2 W-closure, e.g., for natural casing.

2.2 Clip Sizes


EZ P600

P-632

P-638

2.3 Specifications

Width W	8" = 200mm
Depth D	11" = 280mm
Height H	37" = 950mm
Weight	32 lbs = 14.5 kg
Air Pressure	80-90 PSI = 5-7 Bar
Air Consumption	0.01 cubic feet / stroke 0,33 standard liter / stroke

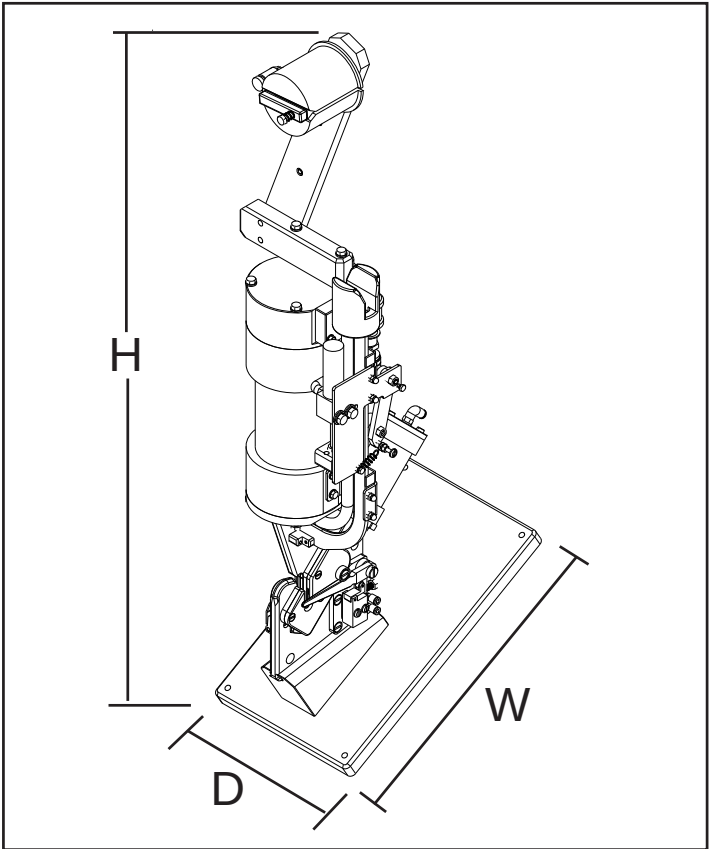

3 Installation of the Machine

3.1 Important Note

Only trained and authorized persons who observe the operating manual, especially the chapter dealing with safety instructions, may activate and operate this machine.

3.2 Machine Location

When choosing the location for the machine, the local regulations for the prevention of accidents as well as the sewage regulations must be observed. The machine must be placed on a solid and level work platform whose carrying is sufficient capacity. The work platform must be designed so that safe operation of the machine is assured and daily cleaning of the machine is facilitated. A pneumatic connection must be available.

3.3 Installation of the Machine

- Lift the machine onto the work platform.
- Open transport packaging.



TRANSPORT BINDING IS LIGHTLY STRAPPED AND WILL SPRING OUT WHEN CUT.
IF THIS IS DONE INCORRECTLY, INJURIES CAN OCCUR!

- Take out quick exhaust delivered with the package.
- Remove all mounted parts and packaging which served for transport purposes.
- Local legal regulations for the disposal of packaging must be observed.
- The work platform and the machine should be tightly bound together.

3.4 Setting Up the Filter, Regulator, Lubricator (FRL)

- Fasten FRL close to the machine (using angle bracket on the FRL).
- Connect the FRL with the machine connection using a quick-release coupling (6, figure 3-1).
- Make a connection to local compressed air supply using a **3/8" air line** (10, figure 3-1).
- Disconnect compressed air supply.
- Open oil filler cap and lubricator (3, figure 3-1).

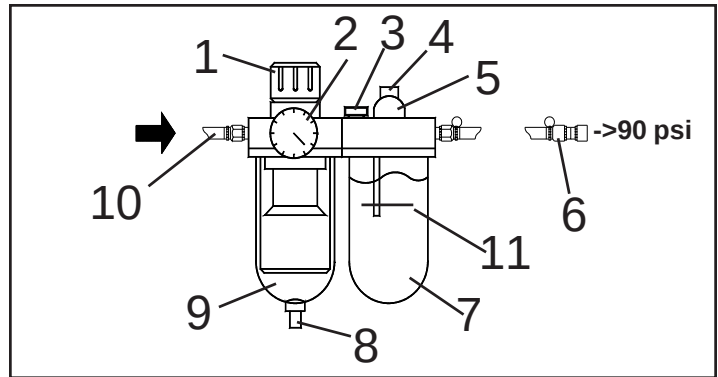


Figure 3-1

- | | |
|------------------------------|----------------------|
| 1 Air pressure screw | 7 Oil container |
| 2 Pressure gauge | 8 Water dump lever |
| 3 Oil filling cap | 9 Air filter |
| 4 Oil dosage screw | 10 Supply connection |
| 5 Oil dosage gauge | 11 Oil level mark |
| 6 Connection to clip machine | |

- Fill the lubricator with oil up to the mark on the inspection glass (7, figure 3-1).
- Close oil filler cap
- Re-connect compressed air supply.

3.4.1 Adjustment of Operating Pressure

- Read the air pressure on the FRL pressure gauge.
- Lift adjusting screw on the air filter and turn until 80-90 PSI (5-7 bar) operating pressure is shown on the pressure gauge.

3.4.2 Adjustment of Oil Dosage

Requirement: the machine is ready for operation.

- Turn the oil dosage screw on the FRL to the closed position (4, figure 3-1).



-Perform closure process approximately 50 times through use of the gate.

- Unscrew the oil dosage screw sufficiently so that after 50 cycles one drop of oil drops into the inspection glass (4, figure 3-1).

3.4.3 Draining the Air Filter

- Push the dump lever (8, figure 3-1) to the side.
- Allow the water to drain and release.
- This must be done daily for proper functioning of the FRL.

4 Initial Operation of the Machine

4.1 Important Note

Only trained and authorized people who follow the instructions in the operating manual, especially the safety instructions, may operate this machine.

4.2 Check List for Starting the Machine

- Remove all foreign objects from the machine.
- Choose the appropriate clip for correct package closure.
- Load clip spool onto spool hub.
- Check lubricator oil level and top up if necessary.
- Connect compressed air.
- Adjust working air pressure on the FRL.
- Test clips.
- Check closed clip and adjust the closure pressure if necessary (see Section 4.4.1).
- The machine is now ready for operation.

4.3 Loading the Clips

- Place the Spool onto the Spool Hub with the clips coming off the spool in a clockwise direction.
- Rotate the Spool lock 180 Degrees. This will lock the spool onto the hub.
- Insert the clips onto the magazine rod and slide it downwards.
- Push the tip of the strand of clips far enough into clip channel guide so that the first clip can be taken hold of by the punch and carried along.

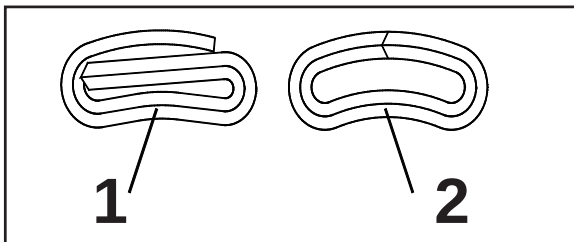


Figure 4-1

- 1 V-closure
- 2 W-closure

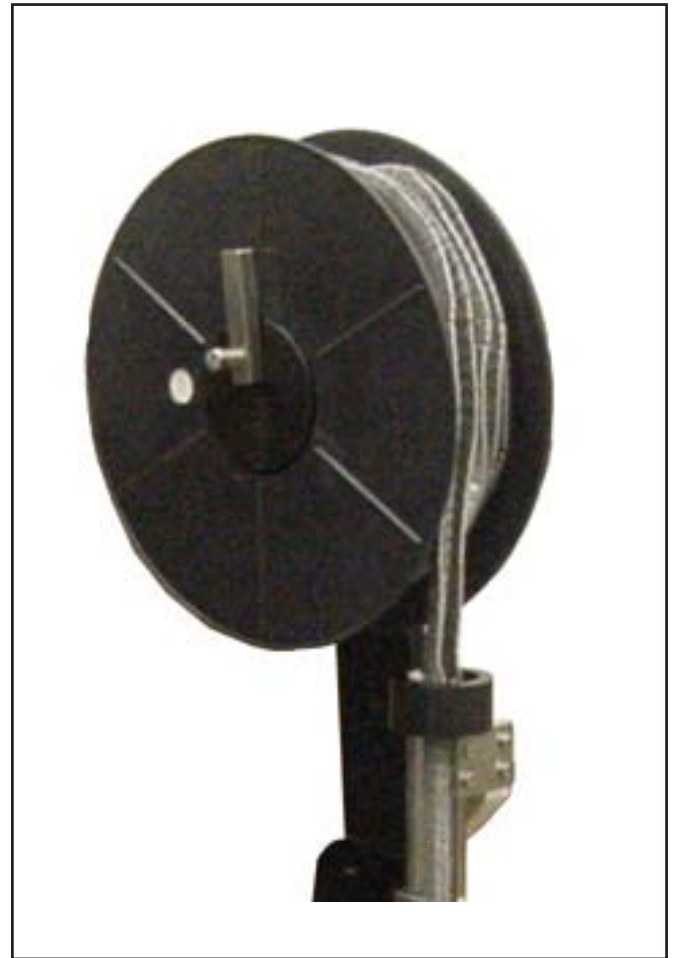


Figure 4-2A

4 Initial Operation of the Machine

4.4 Closing Pressure

Various degrees of twisting occur during packaging closure; the degree of twisting depends on the kind of material used and on its strength. The closure opening is matched to the degree of twisting by adjusting the height of the die. By further fine adjustment of the die height the closing pressure is likewise adjusted, which is required for a compact and tight closure.

4.4.1 Adjustment of Closing Pressure

- Disconnect compressed air connection.
- Loosen screw (16, 4-3).
- Use a long hex wrench to adjust the crimp screw (63, 4-3).
- Insert wrench into die support.
 - Turn to the right to tighten crimp.
 - Turn left to loosen crimp.
- See figure 4-4 for proper crimp comparison.
- Reassemble in reverse order.

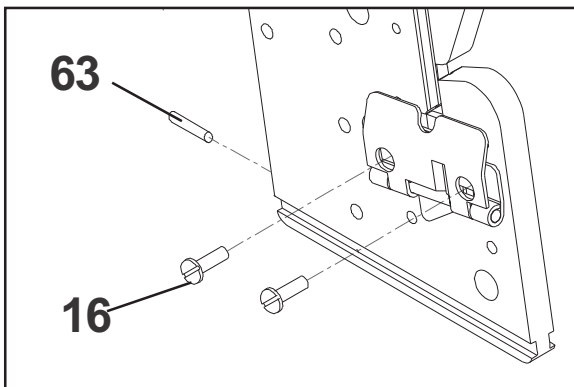


Figure 4-3

4.4.2 Checking the Adjustment of Closing Pressure

Requirement: The machine is ready to operate!

- Place the packing twist into the clip channel.
- The packing twist will now close.
- Remove and inspect the closed packing twist.
- The clip must fully enclose the packing twist and be sufficiently tight so that it cannot be loosened.
- Correct the adjustment if necessary.

4.5 Deactivation of the Machine

- Disconnect compressed air connection.
- Remove strand of clips from the magazine rail.
- Clean the machine.

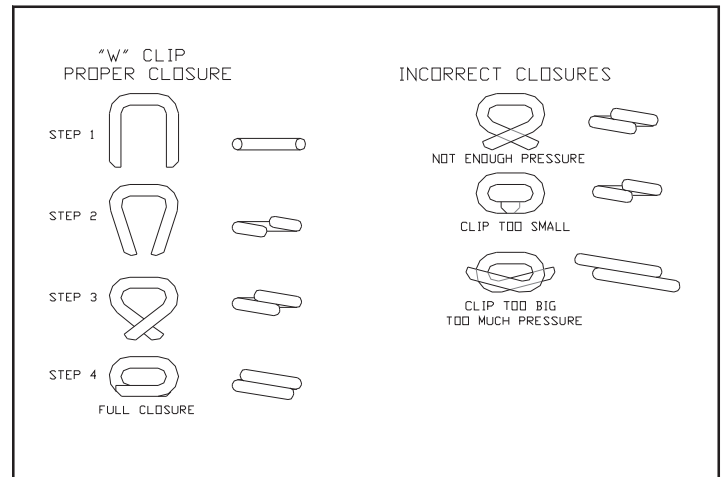


Figure 4-4

5 Trouble Shooting

5.1 Important Note

Service and repair are to be carried out only by trained and qualified persons.

5.2 Preliminary to Operation

Setting up, maintenance, cleaning and service must be carried out when the machine is stopped.



- The main compressed-air supply must be disconnected.
- The trigger must be actuated in order to check that there is no more pressurized air.

No.	Problem	Cause / Fault	Correction
1	punch jammed:	-remains of clip stuck in the clip channel -two clips stuck together in magazine	-remove clip remains -remove clips
2	clips turn or twist, or they are not correctly closed:	-clip remains at clip channel entrance -die channels rough or damaged	-remove clip remains -polish channels, or replace die
3	missing clip:	-too few clips in magazine -rail is dirty -rail has nicks -die surface is damaged	-load magazine -clean rail -polish faulty areas -replace die
4	clip too loosley closed:	-closing pressure too low -air pressure too low	-adjust die higher -correct pressure adjustment
5	clips too tightly closed:	-closing pressure too high -air pressure too high	-radjust die lower -correct pressure adjustment
6	irregular clip closure:	-die surface is damaged	-install new die
7	clip pierces:	-clip is too small	-choose another clip size
8	twisted end cannot be cut:	-cutter blunt	-install new cutter
9	damaged casing, bag or netting:	-closing pressure too high	-adjust die lower
10	closure process is not activated:	-no compressed air -operating pressure too low -air line blocked -defective valve	-check compressed air supply -increase pressure -clean air passages -install new valve parts

6 Cleaning and Maintenance

6.1 General Information

The machine must be cleaned after every use.

● Important Note

- Only trained and authorized service personnel are allowed to clean and maintain the machine.
- The operating manual, especially the chapter dealing with safety instructions, and the regulations for the prevention of accidents as generally applied must be adhered to during cleaning and maintenance.

6.1.1 Working with Process Materials

When working with oil, grease or lubricants, cleaning material and other chemical substances, observe manufacturers' safety and dosage indications and generally valid regulations.

Do not use chlorine based cleaning or maintenance or edible oil.

The cleaning and maintenance materials referred to in this operating manual and in the choice list (in the appendix) are only examples.

6.1.2 Disposal of Process Materials

Residues from oil, grease or lubricants, cleaning material and other chemical substances must be collected, in accordance with the legal provisions, for recycling or disposal.

Local authority regulations pertaining sewage disposal must be observed.

6.2 Before Cleaning and Maintenance of Machine

● Important Note

- Before cleaning and maintenance the machine must be deactivated.
- All cleaning and maintenance must be done when the machine is stopped.
- Before starting work air pressure must be released.

6.2.1 Deactivating the Machine

- Disconnect compressed air supply.
- Remove strands of clips from the rail.
- The user must make sure that the air pressure has been released.

6.2.2 After Cleaning and Maintenance of Machine

● Important Note

- Refit all machine parts removed during cleaning and maintenance.
- Before putting the machine again in operation, remove all cleaning materials and tools from the area around the machine.
- Check to see that the machine functions properly.

6.3 Cleaning and Maintenance

● Important Note

- After the machine has been deactivated as described in 6.2.1, cleaning can begin, as long as the safety instructions in this manual and the local provisions in force for the prevention of accidents are observed.

6 Cleaning and Maintenance

6.3.1 Step-by-step Cleaning Procedure

- Remove strand of clips from the rail.
- Remove coarse dirt from the machine.
- Remove the die.
- Remove the knife.
- Remove the clip guide.

Clean the machine and all removed parts as follows:

- Carefully rinse with warm water (app. 140 F).
- Check thoroughly for clean appearance.
- Lather all parts systematically.

For example with:

P3-topax-17 solution, allow 15 minutes for full effect.

To remove calcium deposits use, for example:

P3-topax-52 solution.

- After lathering and allowing 15 minutes reaction time, systematically rinse all parts with warm water (app. 140 F).

- Thoroughly re-check all problem areas on the machine and on the removed parts for cleanliness.

- Disinfect the machine and all removed parts.

For example with:

P3-topax-71 solution

P3-topax-75 solution

P3-topax-77 solution

- After disinfecting, rinse the machine and all removed parts with drinking water.

6.3.2 Step-by-step Procedure after Cleaning

- Dry machine and all removed parts with compressed air.

- Before re-fitting, apply a protective coating to all removed parts.

- Mount on the clip guide.

- Insert the die.

- Mount on the knife.

- Check the re-assembly of parts and functioning of the machine.

- Activate the machine, observing the safety instructions and the regulations for the prevention of accidents, so that water that may be in the pneumatic valves can come out.

- Deactivate the machine as described in 8.2.1.

6.3.3 Put on Protective Coating

For example:

- Displacer, especially polished parts with P3 lubrication oil.

- Spray all necessary machine parts with machine lubrication.

- Lubricate all moving parts with lubricating grease suitable for food processing applications.

Do not use edible oil or fat!

- Before longer periods of non-operation, for example weekends, spray the machine with a fine coat of machine oil.

B		7		6		5		4		3		2		1	
PARTS LIST (PART 1 OF 5)															
ITEM	PART/DWG No.	DESCRIPTION										QTY			
1	10015	WASHER										9			
2	10026	WASHER										2			
3	10030	NUT										2			
4	10032	NUT										8			
5	10070	O-RING										1			
6	10096	POLYCLIP LABEL										1			
7	10288	WASHER										2			
8	10339	SCREW										2			
9	10712	SCREW										1			
10	11042	PISTON SEAL										1			
11	11095	WASHER										8			
12	12284	SCREW										2			
13	12984	NUT										4			
14	13701	SCREW										3			
15	13927	SCREW										1			
16	13992	SCREW										2			
17	14066	SCREW										1			
18	14111	SCREW										1			
19	14270	SCREW										2			
20	16035	KNIFE SPRING										1			
21	16145	INNER SPRING										1			
22	16633	SCREW										4			
23	18017	SCREW										3			
24	18048	SCREW										1			
25	18051	SCREW										4			
26	20985	WASHER										1			
27	21050	SCREW										1			
28	22540	SCREW										2			
29	42271	SEAL WASHER										1			
30	42272	SEAL WASHER										1			

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation

POLY-CLIP SYSTEM CORPORATION														
Rev.		Drawn by	Is	Kit	Date	Scale				Drawing:				
E 3089		SEE SHEET #1		AN	05/24/06	NTS				Date:		78536		
C 3198		SEE SHEET #1		AN	02/01/07	PART NAME				Part No.		78536		
F 3198		SEE SHEET #1		SO	2-16-11	PLASTIC CLIPPER #2, ASSY				Checked by:		Rev. G		
G 3889		SEE SHEET #1		SO	2-16-11	Finish				Drawn by:		AN		

8		7		6		5		4		3		2		1	
PARTS LIST (PART 2 OF 5)															
ITEM	PART/DWG No.	DESCRIPTION										QTY			
31	42274	VALVE PISTON										1			
32	42275	O-RING STATIC SEAL										1			
33	48526	NUT										1			
34	50635	LABEL (MADE IN USA)										1			
35	50637	PLATES / LABELS										1			
36	52295	SHOULDER BOLT										2			
37	53491	SHOE										1			
38	53720	SPACER (LEVER)										2			
39	53721	LEVER										1			
40	55503-AM	BASE (ANGLE)										1			
41	57477	MOUNTING PLATE										1			
42	60774	WASHER										2			
43	60802	WASHER										1			
44	60808	WASHER										2			
45	60809	SCREW										2			
46	61131	WASHER										2			
47	61133	SCREW										2			
48	61165	SEAL										1			
49	61197	SCREW										5			
50	61209	SCREW										2			
51	61455	ROLLER										1			
52	61509	SPOOL LOCK										1			
53	61542	SCREW										2			
54	61545	SCREW										1			
55	61585	NUT										1			
56	62531	SCREW										2			
57	62532	SCREW, M5x8 H.H.										4			
58	63298	SPACER WASHER										1			
59	71176	SCREW										2			
60	71237	SPRING										1			

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation

Rev. Issued By

E 3089 SEE SHEET #1

C 3198 SEE SHEET #1

F 3198 SEE SHEET #1

G 3895 SEE SHEET #1

G 3895 SEE SHEET #1

Part

SEE SHEET #1

SEE SHEET #1

SEE SHEET #1

SEE SHEET #1

SEE SHEET #1

Rev. Issued By

AN 08/04/06

AN 05/24/06

QIV 02/01/07

SO 2-18-11

SO 2-18-11

Date

08/04/06

05/24/06

02/01/07

2-18-11

2-18-11

Part Name

POLY-CLIP SYSTEM CORPORATION

PART NAME

PLASTIC CLIPPER #2, ASSY

Scale

NTS

02/13/06

78536

Drawn by

AN

Checked by

78536

Approved by

Rev. G

SHEET 3 OF 14

8

7

6

5

4

3

2

1

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

POLY-CLIP SYSTEM CORPORATION										Scale: NTS		Drawing: 78536		
Mundelein, IL										Date: 02/13/06				
POLY-CLIP SYSTEM CORPORATION										Part No. 78536		Rev. C		
PLASTIC CLIPPER #2, ASSY										Checked by: Approved by:				
Rev. E										Drawn by: AN		2		
Rev. E										Date: 02/04/06				
Rev. E										Date: 02/01/07				
Rev. E										Date: 02/16-11				
Rev. E										Date: 02/16-11				

8		7		6		5		4		3		2		1	
PARTS LIST (PART 3 OF 5)															
ITEM	PART/DWG No.	DESCRIPTION	QTY												
61	71293	VALVE END	1												
62	71301	VALVE SLEEVE	1												
63	71316	QUICK CONNECT	1												
64	71378-D	SPOOL ARM	1												
65	71409	ELBOW	2												
66	71421	ELBOW	4												
67	71556	QUICK CONNECTOR	1												
68	71577	NIPPLE	2												
69	71610	DOWEL PIN	1												
70	71676	DOG SCREW	1												
71	71678	KNIFE 6090 RH	1												
72	71716	FITTING	1												
73	71744	FEEDER ROLLER	1												
74	71745-SS	LEVER	1												
75	71746	LG FEEDER BRACKET	1												
76	71747	FEEDER FINGER	1												
77	71777	VALVE ROLLER LEVER	1												
78	71790	SPRING	1												
79	71803	KNIFE BUMPER	1												
80	71807	FEEDER BLOCK	1												
81	71810	CYLINDER	1												
82	71941	SWIVEL DOOR	1												
83	71997	BRAKE ARM	1												
84	71998	BRAKE WHEEL	1												
85	77617	VALVE SPACER	1												
86	77623	SCREW SHOULDER	1												
87	77624	SPRING	1												
88	77956	ELBOW	1												
89	78012	TRIGGER STOP	1												
90	78015	CLAMP BAR	1												

SHEET 4 OF 14

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

Rev.	By	Date	Part Name	Part No.	Scale	Drawing
E 3089	SEE SHEET #1	01/08/04/08	POLY-CLIP SYSTEM CORPORATION	78536	02/13/06	78536
C 3198	SEE SHEET #1	05/24/08	PLASTIC CLIPPER #2, ASSY	78536	02/13/06	78536
F 3198	SEE SHEET #1	02/01/07	PLASTIC CLIPPER #2, ASSY	78536	02/13/06	78536
G 3695	SEE SHEET #1	2-18-11	PLASTIC CLIPPER #2, ASSY	78536	02/13/06	78536
G 3695	SEE SHEET #1	2-18-11	PLASTIC CLIPPER #2, ASSY	78536	02/13/06	78536

8		7		6		5		4		3		2		1	
PARTS LIST (PART 4 OF 5)															
ITEM	PART/DWG No.	DESCRIPTION										QTY			
91	78020	KNIFE GUIDE RH										1			
92	78106	SCREW										2			
93	78309	KNIFE CYL. CAP										1			
94	78310	KNIFE CYLINDER										1			
95	78311	KNIFE CYL. BOTTOM CAP										1			
96	78316	WEAR RING										2			
97	78317	POWER TOP										1			
98	78322	MAIN CYLINDER										1			
99	78323	BOTTOM CAP										1			
100	78325	RAIL BRACKET										2			
101	78374	THRUST WASHER										1			
102	78414	OUTER SPRING										1			
103	78417	MOUNT, SPOOL ARM										1			
104	78518	PISTON, EZ-2000										1			
105	78519	PISTON STOP, EZ-2000										1			
106	78520	PUNCH STUD										1			
107	78538	RAIL P45, WELDMENT										1			
108	78539	PLASTIC #2 DIE SUPPORT										1			
109	78540	PUNCH, P45										1			
110	78541	CLIP WINDOW COVER										1			
111	78543	KNIFE WEAR PLATE										1			
112	78544	RAIL FOOT PLASTIC #2										1			
113	78567	CLIP AUTOFEED GUIDE										1			
114	78574	SCREW										1			
115	78580	BUSHING										1			
116	78583	KNIFE STUD										1			
117	78598	SHOULDER SCREW										1			
118	78599	PLATE SPACER										1			
119	78750	O'RING										2			
120	78768	DIE, CLIP P638/P632										1			
SHEET 5 OF 14															
POLY-CLIP SYSTEM CORPORATION															
Mundelein, IL															
Scale: NTS															
Date: 02/13/06															
Drawing: 78536															
Part No. 78536															
Rev. G															
Checked by:															
Approved by:															
Drawn by: AN															
Sheet															
2															

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation

Rev. Issued	By	Date	See	Sheet #
E 3089	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1
C 3199	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1
F 3199	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1
G 3695	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1
G 3695	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1	SEE SHEET #1

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation

Rev. 3089		See	Sheet #1	Is	Rev. 3089	See	Sheet #1	POLY-CLIP SYSTEM CORPORATION		Kundalain, IL		Scale	NTS	Drawing
E 3089		See	Sheet #1	See	Sheet #1	See	Sheet #1	DATE		DATE		02/13/06		
C 3198		See	Sheet #1	See	Sheet #1	See	Sheet #1	PART NAME		PLASTIC CLIPPER #2, ASSY		78536		
F 3198		See	Sheet #1	See	Sheet #1	See	Sheet #1	SIZE		A		Part No. 78536		
G 3895		See	Sheet #1	See	Sheet #1	See	Sheet #1	SPEC		SO 2-16-11		Rev. G		
G 3895		See	Sheet #1	See	Sheet #1	See	Sheet #1	DATE		SO 2-16-11		Checked by: Approved by:		

8	7	6	5	4	3	2	1
PARTS LIST (PART 5 OF 5)							
ITEM	PART/DWG No.	DESCRIPTION	QTY				
121	79678	SET SCREW	1				
122	79692	SCREW	4				
123	79693	T-HANDLE SCREW	1				
124	79694	LABEL (FINGERS...)	1				
125	79696	SCREW	2				
126	79863	NUT	2				
127	79864	ACORN NUT	5				
128	79893	MUFFLER	1				
129	79896	SPRING	1				
130	152020	VALVE	1				
131	183418	ELBOW	1				

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

Rev.	By	Date	Part Name
E 3089	SEE SHEET #1	01/08/04/08	POLY-CLIP SYSTEM CORPORATION
C 3198	SEE SHEET #1	05/24/08	PLASTIC CLIPPER #2, ASSY
F 3198	SEE SHEET #1	02/01/07	PLASTIC CLIPPER #2, ASSY
G 3895	SEE SHEET #1	2-18-11	PLASTIC CLIPPER #2, ASSY
G 3895	SEE SHEET #1	2-18-11	PLASTIC CLIPPER #2, ASSY

SHEET 6 OF 14

8		7		6		5		4		3		2		1	
PARTS LIST (PART 5 OF 5)															
ITEM	PART/DWG No.				DESCRIPTION				QTY						
121	79678				SET SCREW				1						
122	79692				SCREW				4						
123	79693				T-HANDLE SCREW				1						
124	79694				LABEL (FINGERS...)				1						
125	79696				SCREW				2						
126	79863				NUT				2						
127	79864				ACORN NUT				5						
128	79893				MUFFLER				1						
129	79896				SPRING				1						
130	152020				VALVE				1						
131	183418				ELBOW				1						

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

Rev.

By

Date

Part Name

Part No.

Scale

Drawing

E 3089

SEE SHEET #1

01/08/04/08

POLY-CLIP SYSTEM CORPORATION

NTS

02/13/06

78536

C 3198

SEE SHEET #1

05/24/08

PLASTIC CLIPPER #2, ASSY

78536

F 3198

SEE SHEET #1

02/01/07

G 3895

SEE SHEET #1

2-18-11

G 3895

SEE SHEET #1

2-18-11

Drawn by: AN


Checked by:

Approved by:

78536

Rev. G

SHEET 6 OF 14

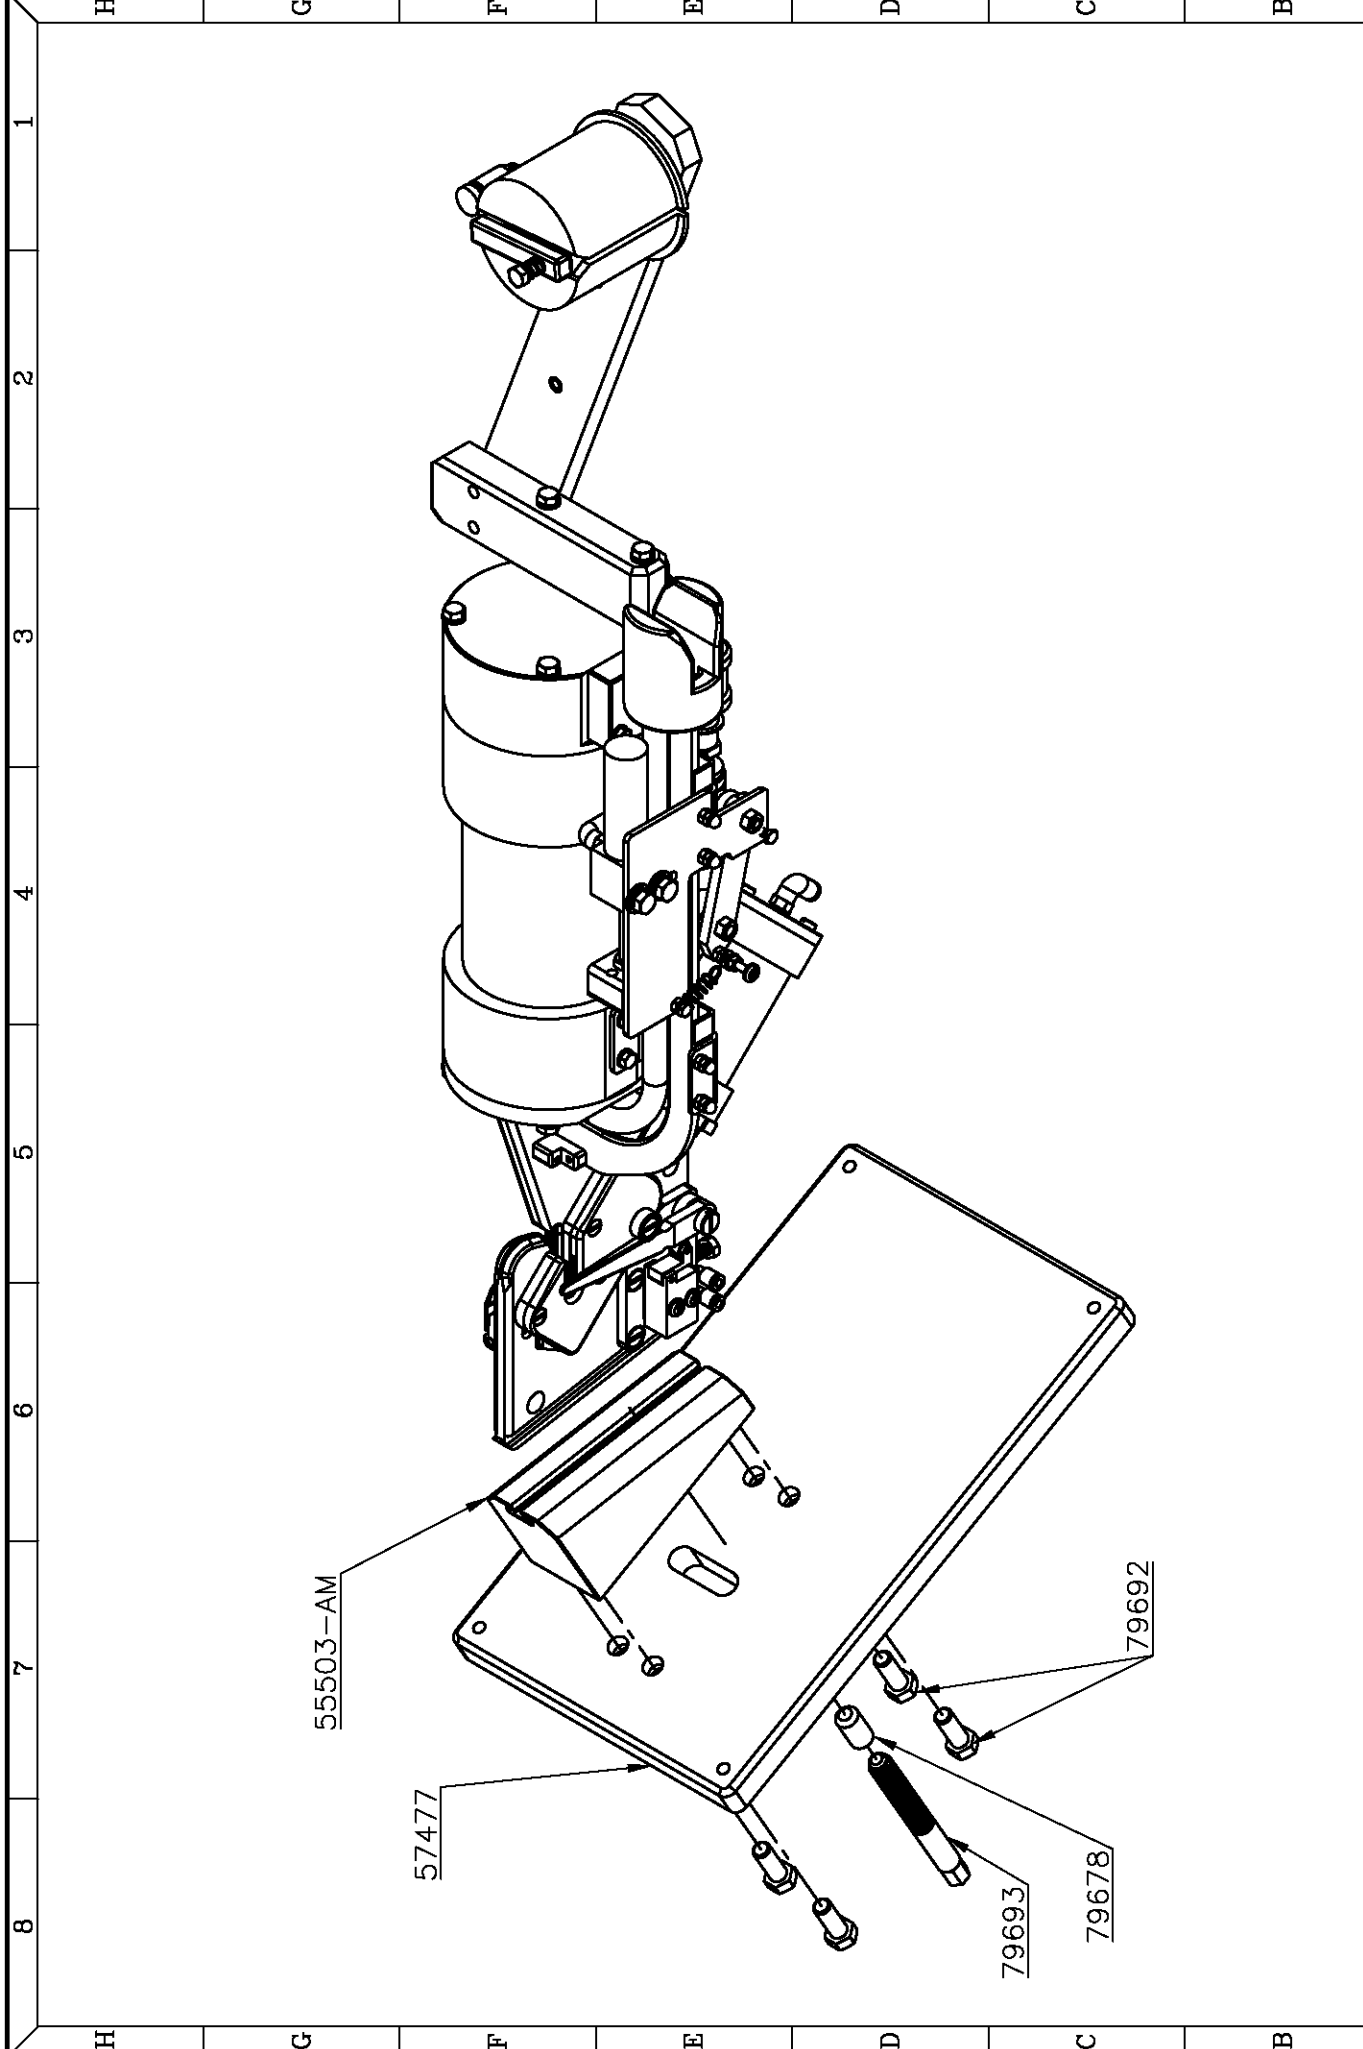

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

Rev.	Drawn by	Check by	Part No.	Scale	NTS	Drawing
A	E 3089 SEE SHEET #1	AN 05/24/06	PART NAME	Date: 02/13/06	78536	78536
C 3198 SEE SHEET #1	SEE SHEET #1	AN 02/01/07	PLASTIC CLIPPER #2, ASSY	Part No.	78536	Rev. G
F 3198 SEE SHEET #1	SEE SHEET #1	SO 2-16-11	Spec	Drawn by: AN	Checked by:	Approved by:
G 3895 SEE SHEET #1	SEE SHEET #1	SO 2-16-11	Finish:			

SHEET 7 OF 14

8

7

6


5

4

3


2

1

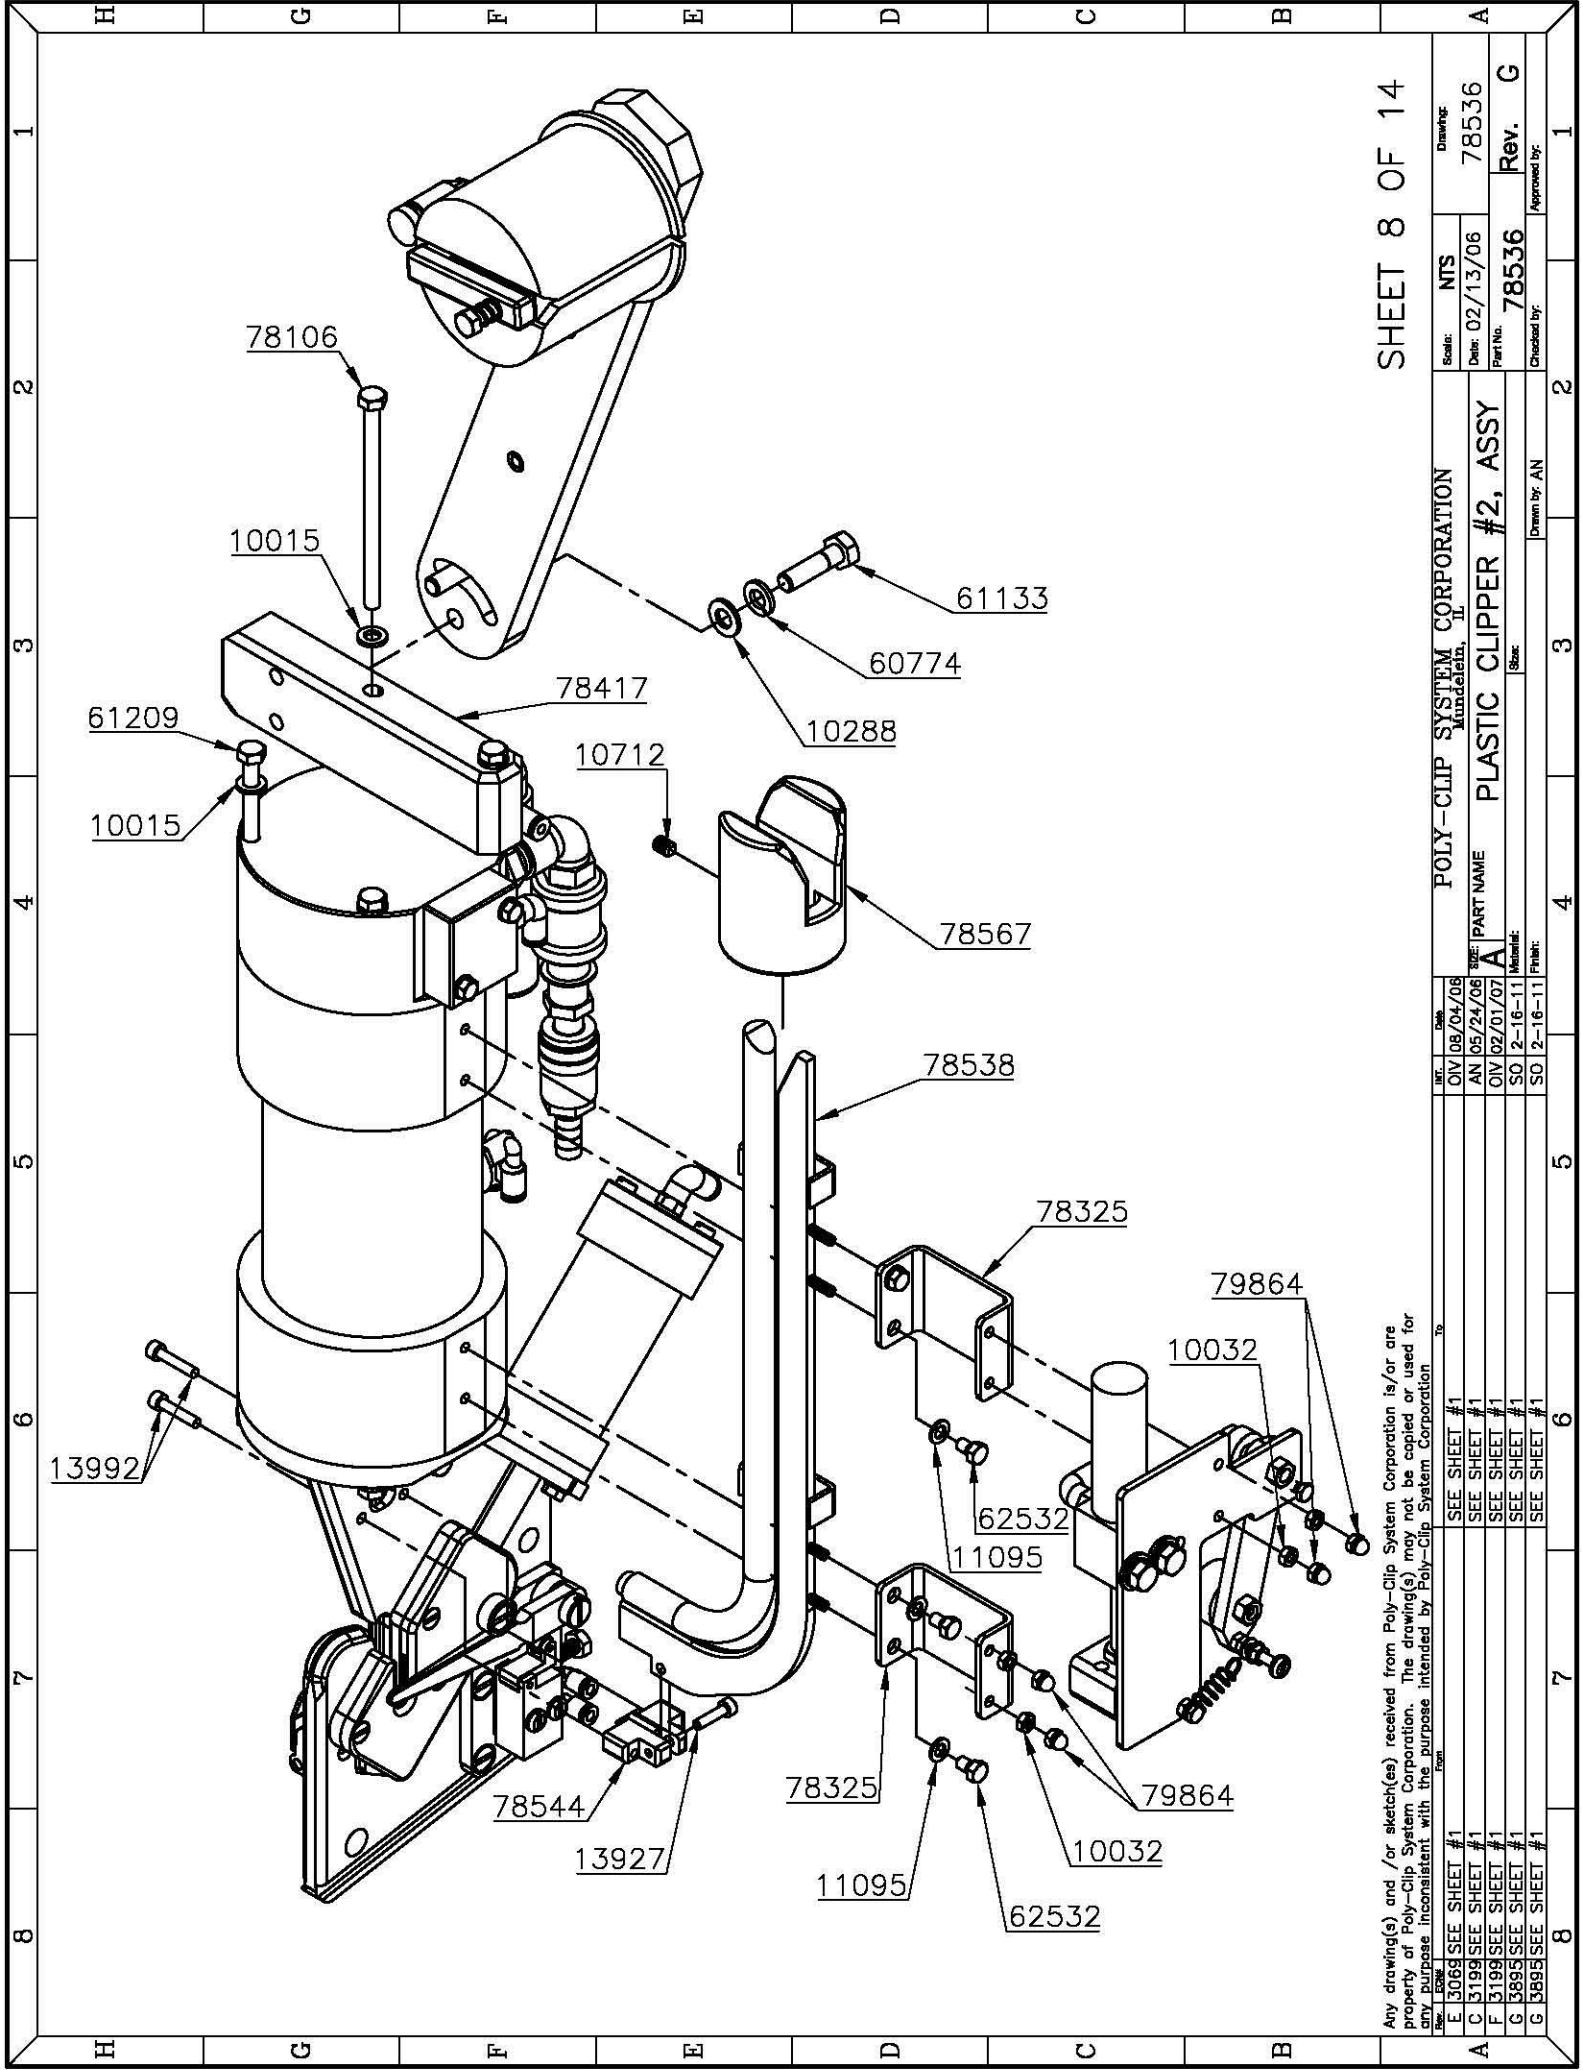

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

REV		DATE	BY	CHKD	APP'D	DESCRIPTION	SCALE	NTS	DRAWING
A	E	03/08/06	AN	05/24/06	SO	SEE SHEET #1			78536
	C	03/08/06	AN	05/24/06	SO	SEE SHEET #1			78536
	F	03/08/06	AN	05/24/06	SO	SEE SHEET #1			78536
	G	03/08/06	AN	05/24/06	SO	SEE SHEET #1			78536
PART NAME		POLY-CLIP SYSTEM CORPORATION		Mundelein, IL		PLASTIC CLIPPER #2, ASSY		Rev. G	
Part No.		78536		78536		78536		78536	
Checked by:		AN		AN		AN		AN	
Drawn by:		AN		AN		AN		AN	

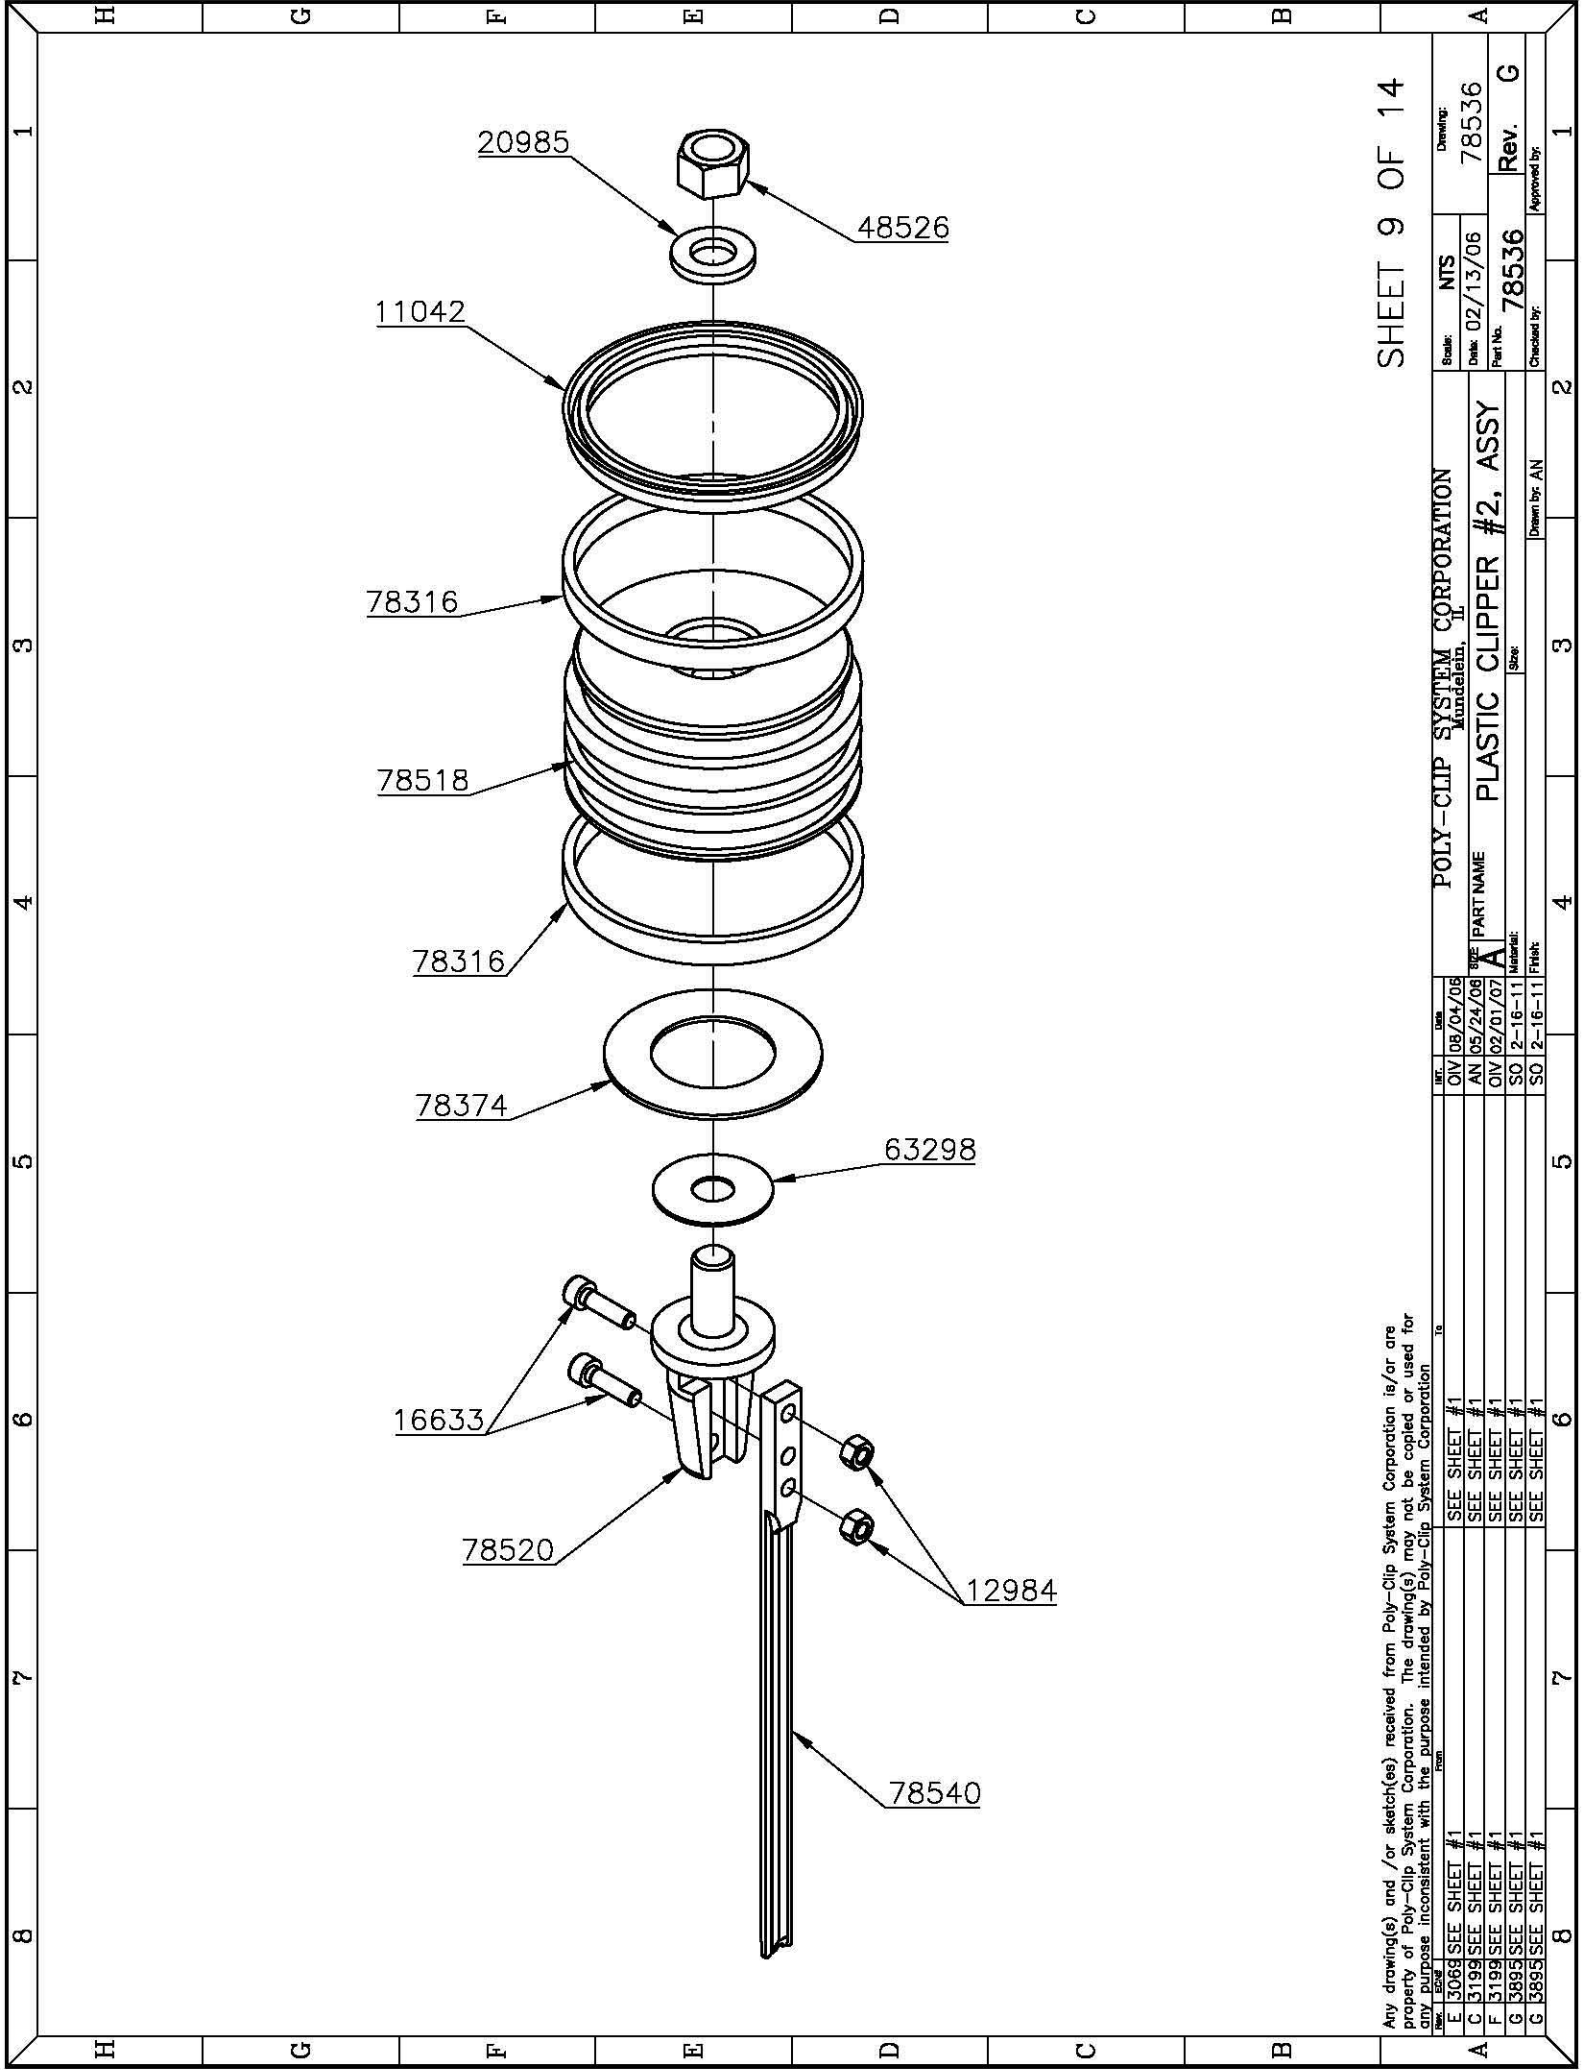


SHEET 9 OF 14

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

POLY-CLIP SYSTEM CORPORATION				Mundelein, IL			
Rev.	Issued	By	To	Rev.	Issued	By	To
E	3068	SEE SHEET #1	SEE SHEET #1	OIV	08/04/08	AN	05/24/08
C	3199	SEE SHEET #1	SEE SHEET #1	AN	05/24/08	SO	02/01/07
F	3199	SEE SHEET #1	SEE SHEET #1	OIV	02/01/07	SO	2-16-11
G	3895	SEE SHEET #1	SEE SHEET #1	SO	2-16-11	SO	2-16-11
G	3895	SEE SHEET #1	SEE SHEET #1	SO	2-16-11	SO	2-16-11


PART NAME				PLASTIC CLIPPER #2, ASSY			
SIZE				A			
FINISH				AN			
DRAWN BY				AN			
CHECKED BY				AN			
Scale:				NTS			
Date:				02/13/06			
Part No.				78536			
Rev.				G			

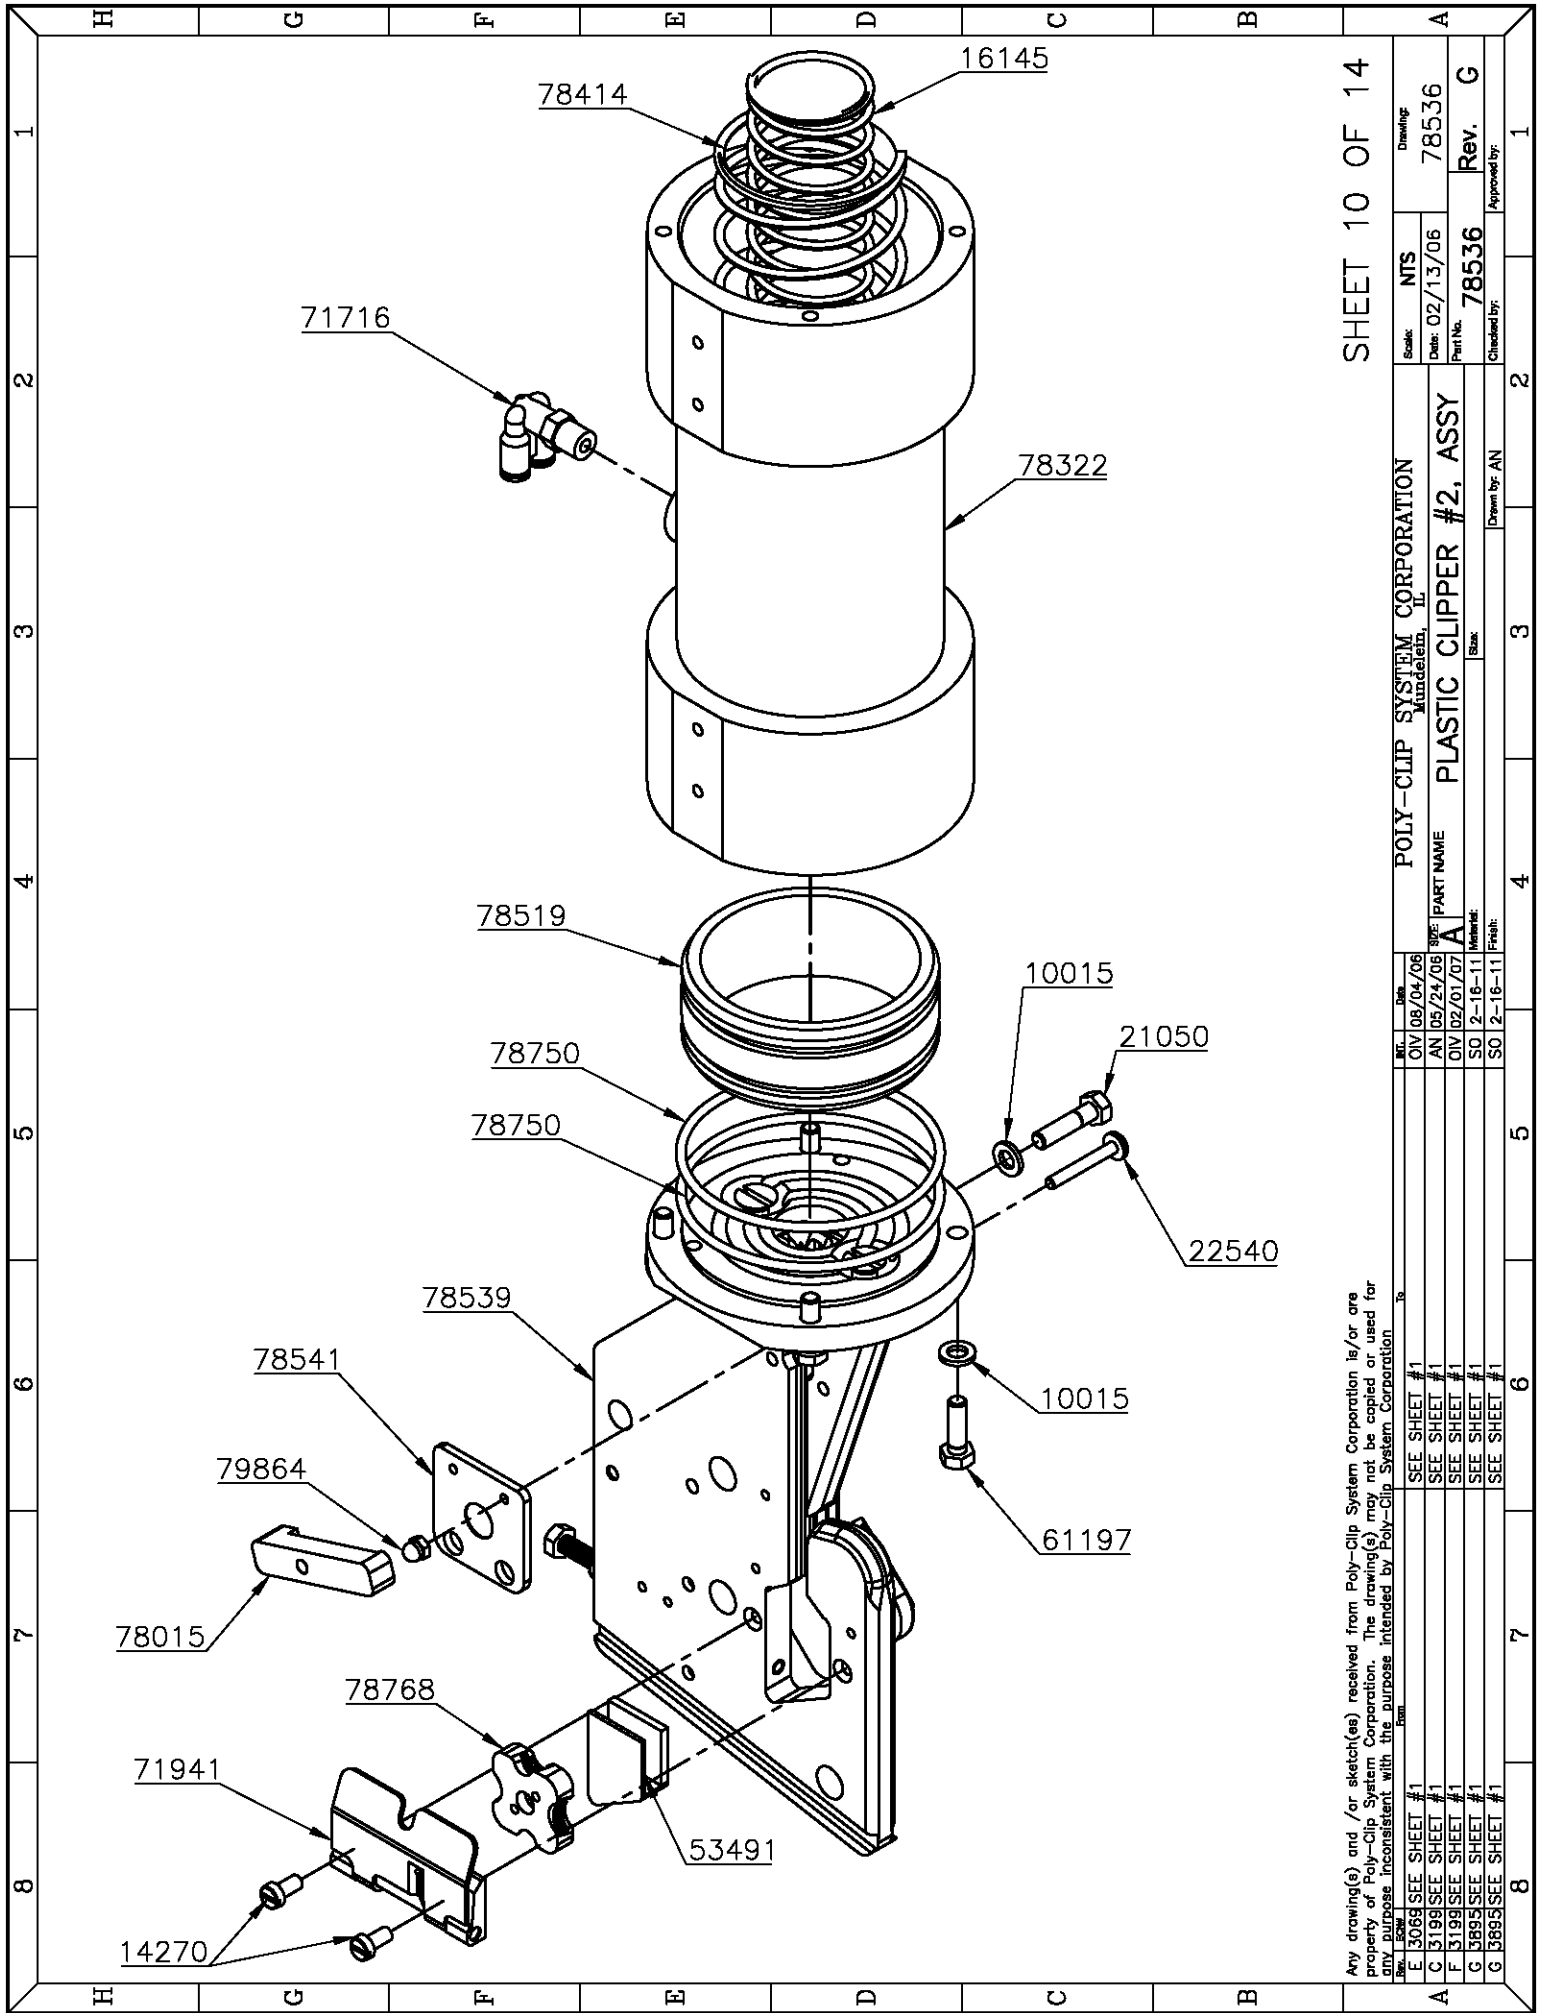

SHEET 10 OF 14

POLY-CLIP SYSTEM CORPORATION				Scale: NTS		Drawing: 78536		A	
Mundelein, IL				Date: 02/13/06		Part No: 78536		Rev. G	
PART NAME				Drawn by: AN		Checked by:		1	
SPEC: PLASTIC CLIPPER #2, ASSY				SO 2-18-11		SO 2-18-11		3	
REV: 08/04/06				AN 05/24/06		OIV 02/01/07		4	
REV: 05/24/06				OIV 02/01/07		SO 2-18-11		5	
REV: 02/01/07				SO 2-18-11		SO 2-18-11		6	
REV: 02/01/07				SO 2-18-11		SO 2-18-11		7	
REV: 02/01/07				SO 2-18-11		SO 2-18-11		8	


Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

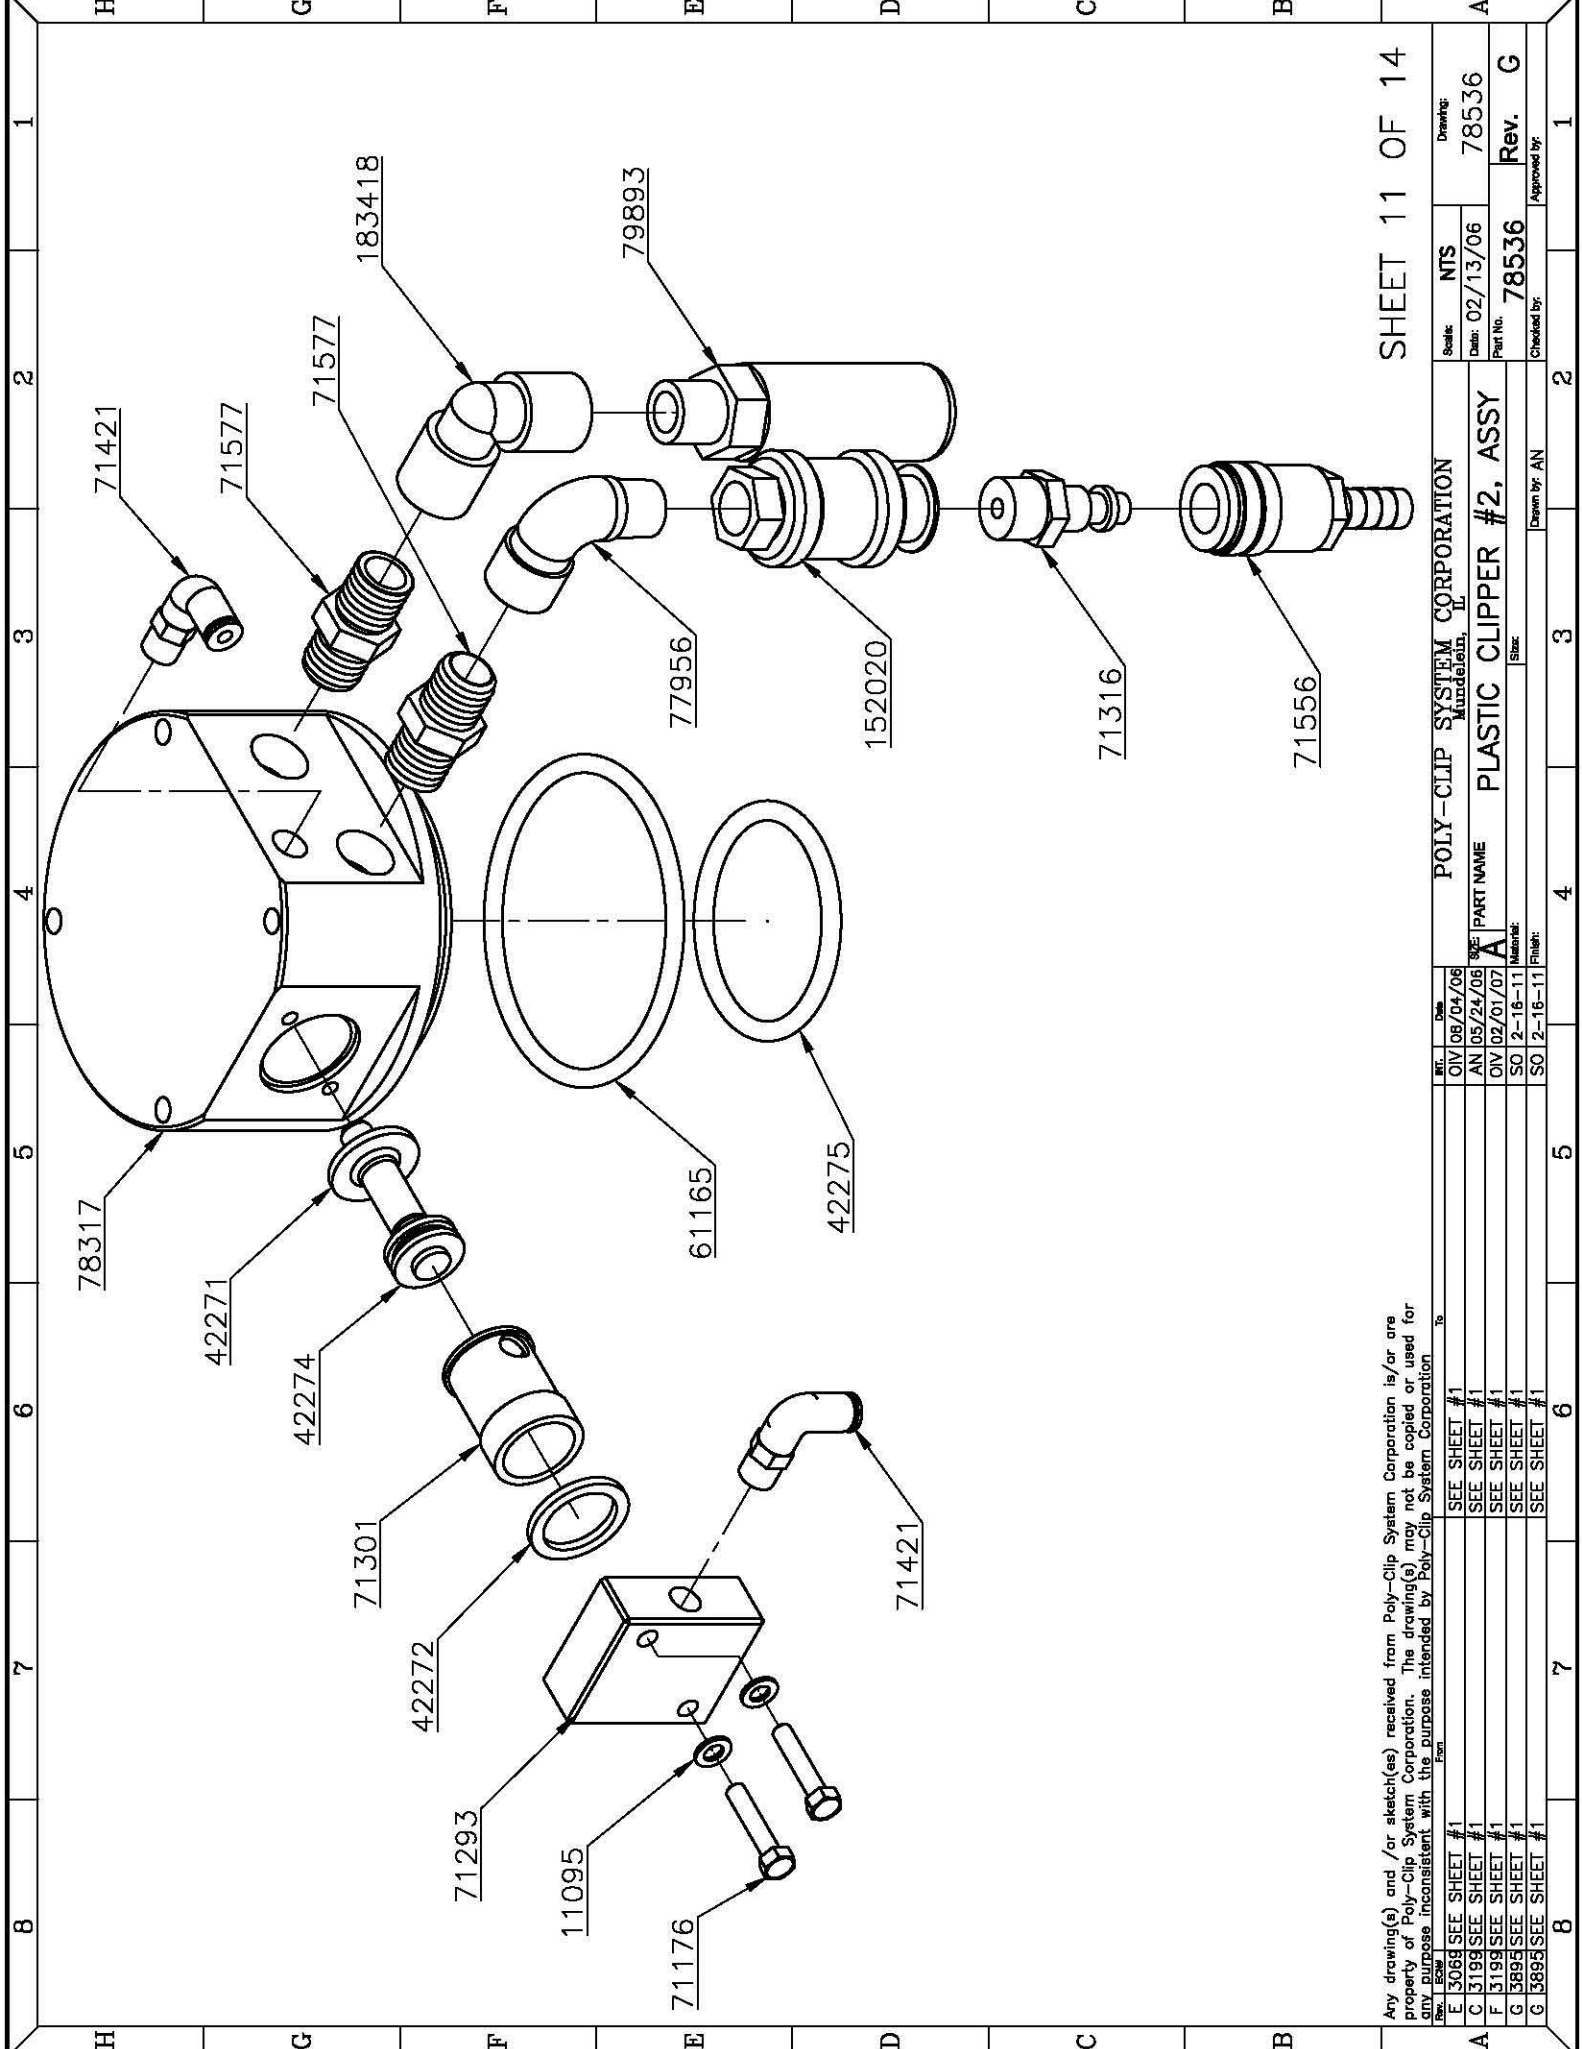

SHEET 11 OF 14


Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

Rev.		From		To		Date		By		Part Name		Scale		Drawing	
A		E 3088		SEE SHEET #1		OIV 08/04/06		AN 05/24/06		POLY-CLIP SYSTEM CORPORATION		NTS		78536	
B		C 3198		SEE SHEET #1		OIV 02/01/07		AN 02/01/07		PLASTIC CLIPPER #2, ASSY		02/13/06		78536	
C		F 3198		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	
D		G 3895		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	
E		G 3895		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	
F		G 3895		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	
G		G 3895		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	
H		G 3895		SEE SHEET #1		SO 2-16-11		SO 2-16-11		Mandrelin		AN		78536	

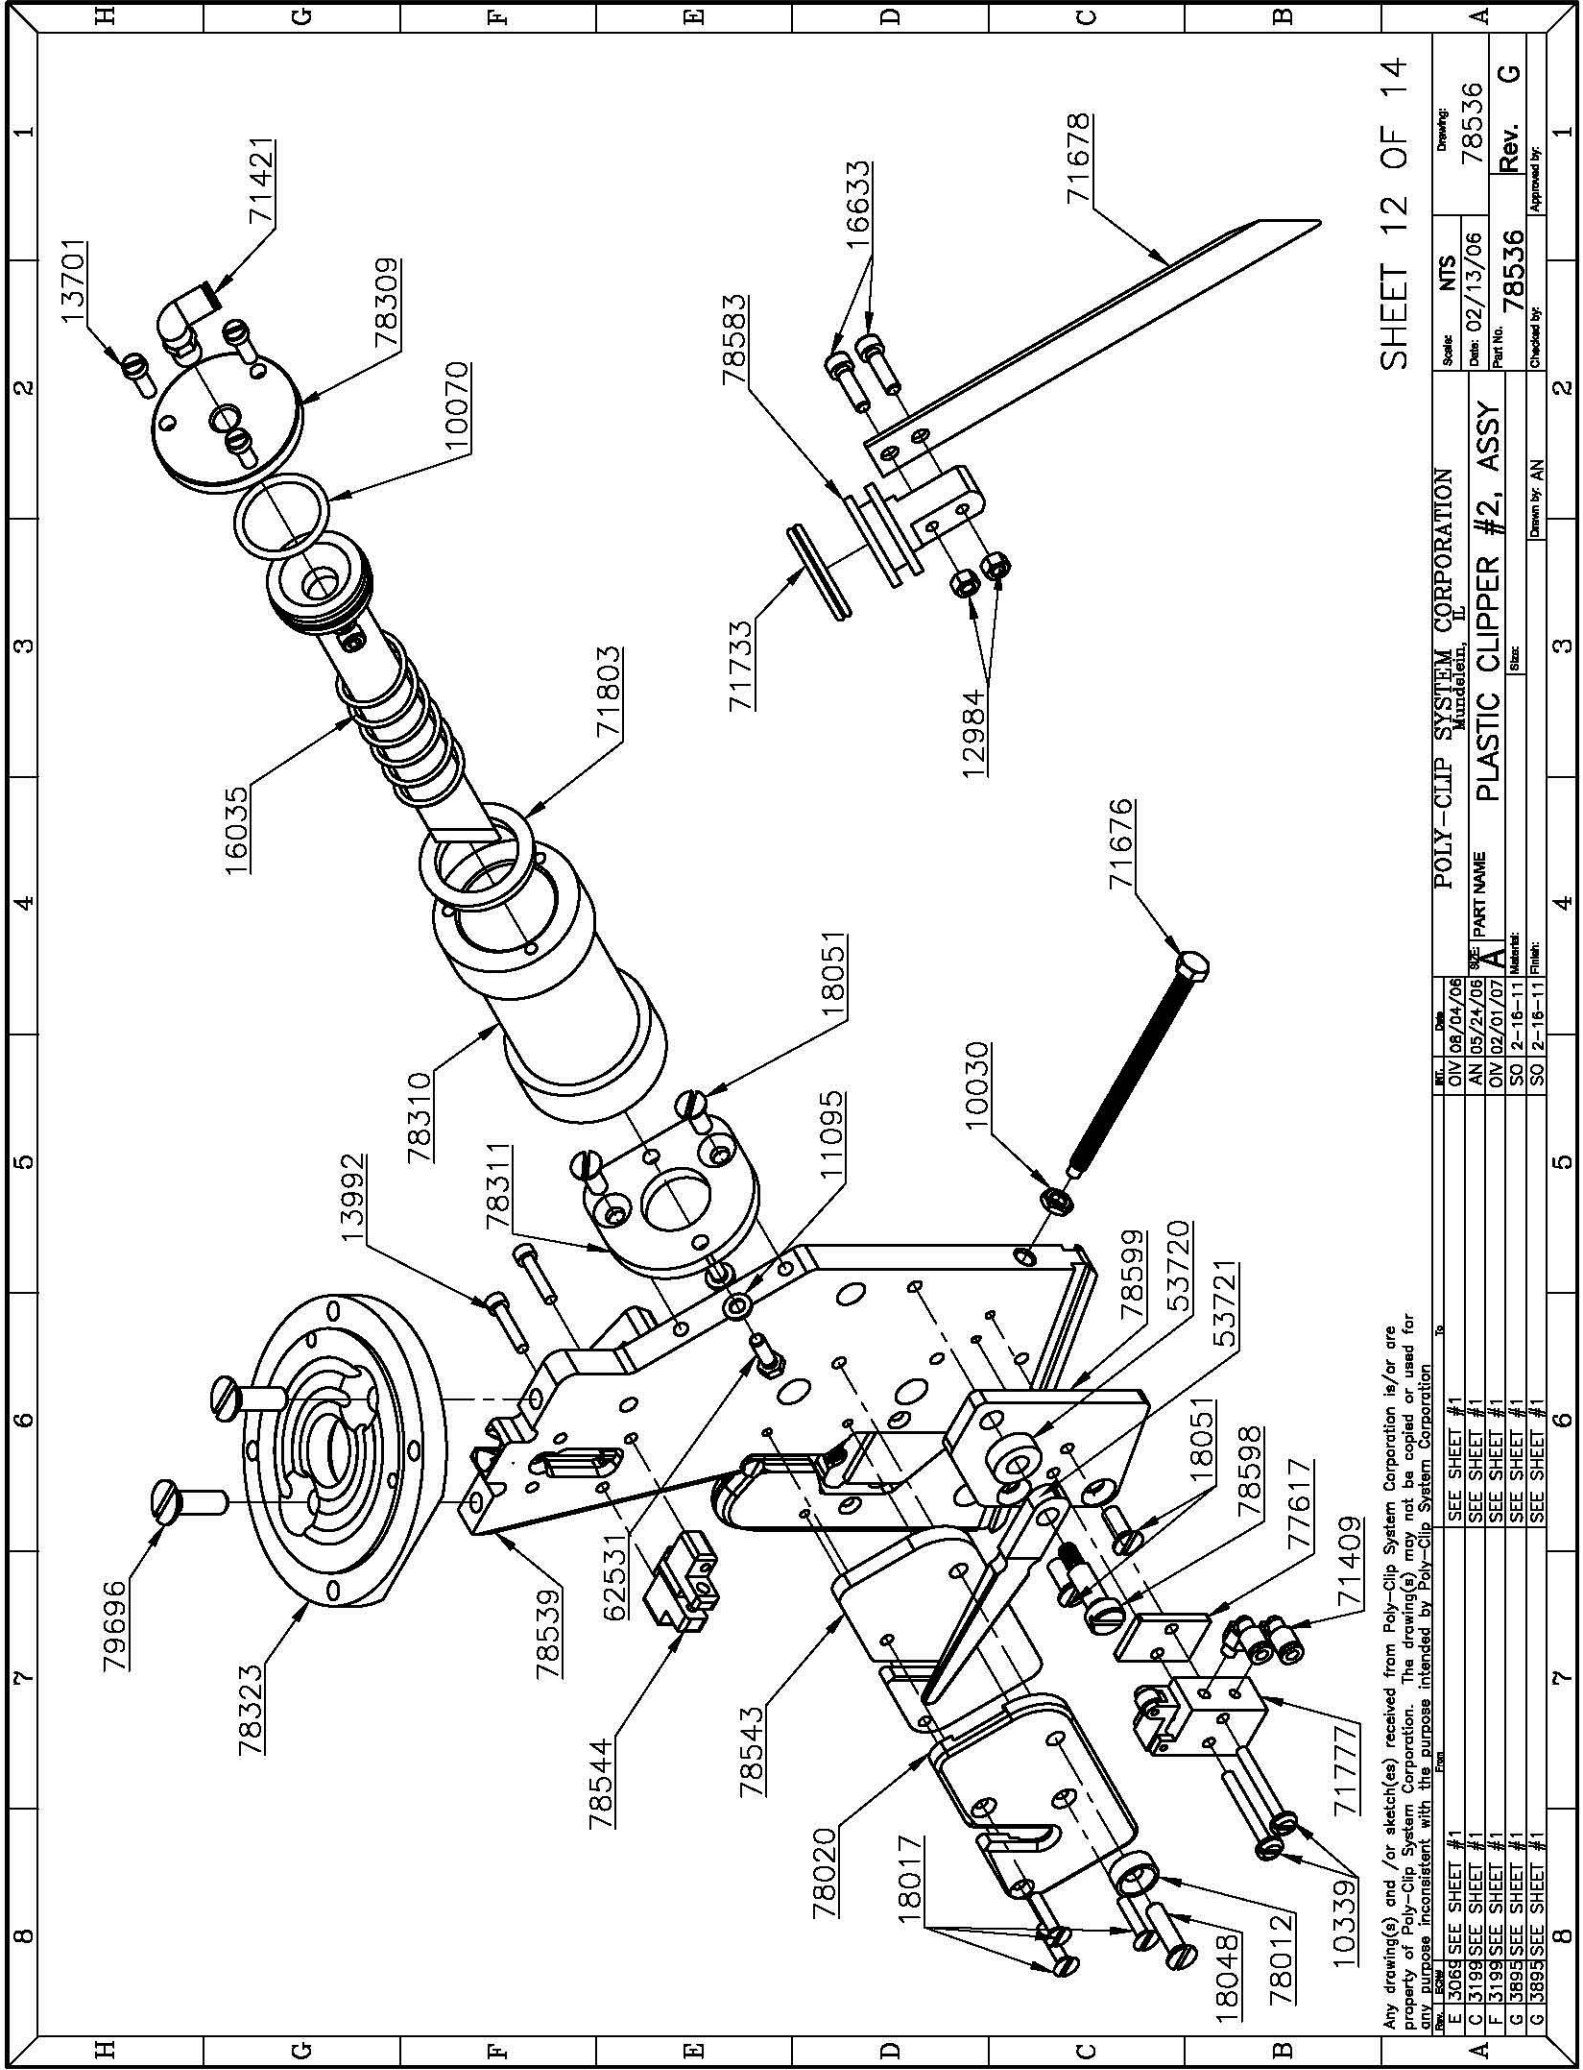

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.

POLY-CLIP SYSTEM CORPORATION				Mundelein, IL			
Rev.	Issued	By	Date	Rev.	Issued	By	Date
A	E 3089	SEE SHEET #1	01/06/04/06	NTS	02/13/06	78536	
C	3198	SEE SHEET #1	05/24/06	PART NAME			
F	3199	SEE SHEET #1	02/01/07	PLASTIC CLIPPER #2, ASSY			
G	3895	SEE SHEET #1	SO 2-16-11	Material			
G	3895	SEE SHEET #1	SO 2-16-11	Finish			
				Drawn by: AN			
				Checked by:			
				Approved by:			
				Part No. 78536			
				Rev. G			

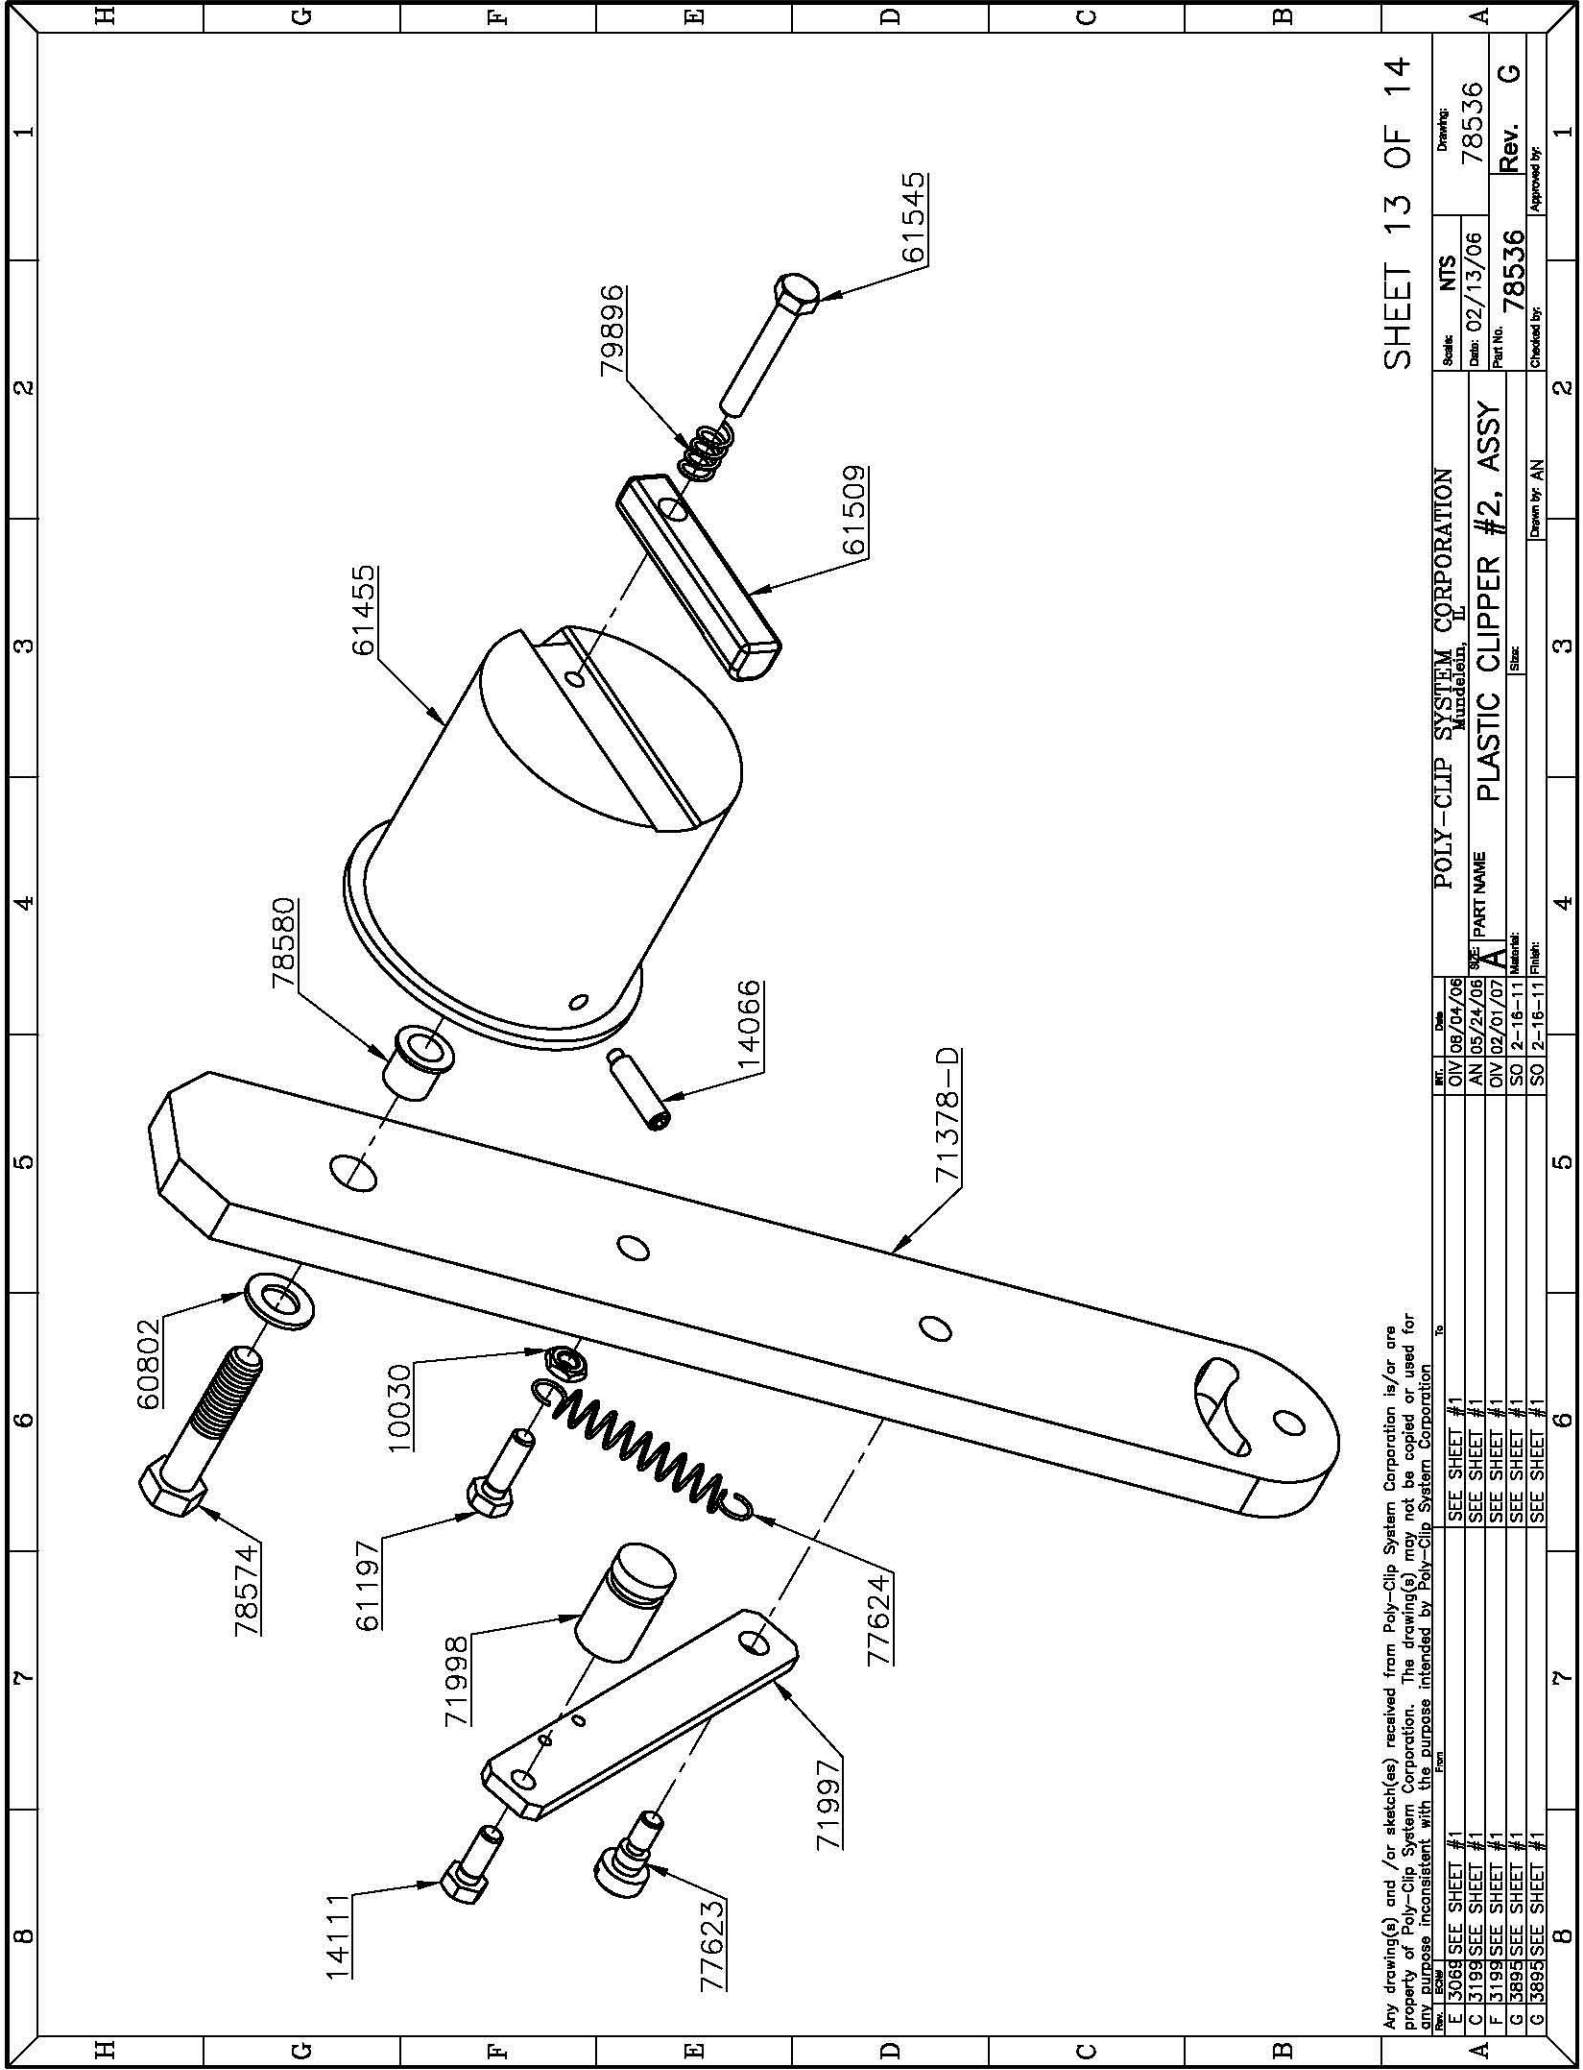

SHEET 13 OF 14

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are the property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation.


Rev.		From	To	Date		Part Name		Scale		Drawing	
A		E 3068	SEE SHEET #1	OIV 08/04/06		POLY-CLIP SYSTEM CORPORATION		NTS		78536	
C		3198	SEE SHEET #1	AN 05/24/06		Mundelein, IL		Date: 02/13/06		78536	
F		3199	SEE SHEET #1	OIV 02/01/07		PLASTIC CLIPPER #2, ASSY		Part No. 78536		Rev. G	
G		3895	SEE SHEET #1	SO 2-16-11		Spec		Drawn by: AN		Checked by:	
G		3895	SEE SHEET #1	SO 2-16-11		Finish:		1		2	



COMPRESSOR




A Compressor is The Heart of Your System

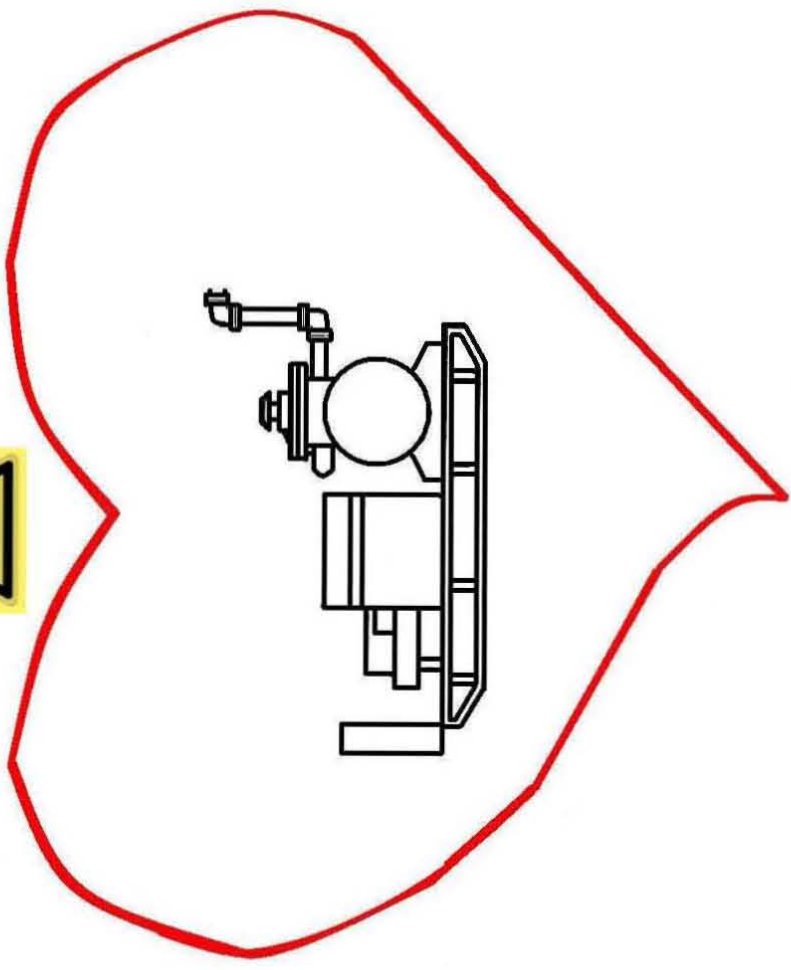



Air Supply Clipping & Bagging System

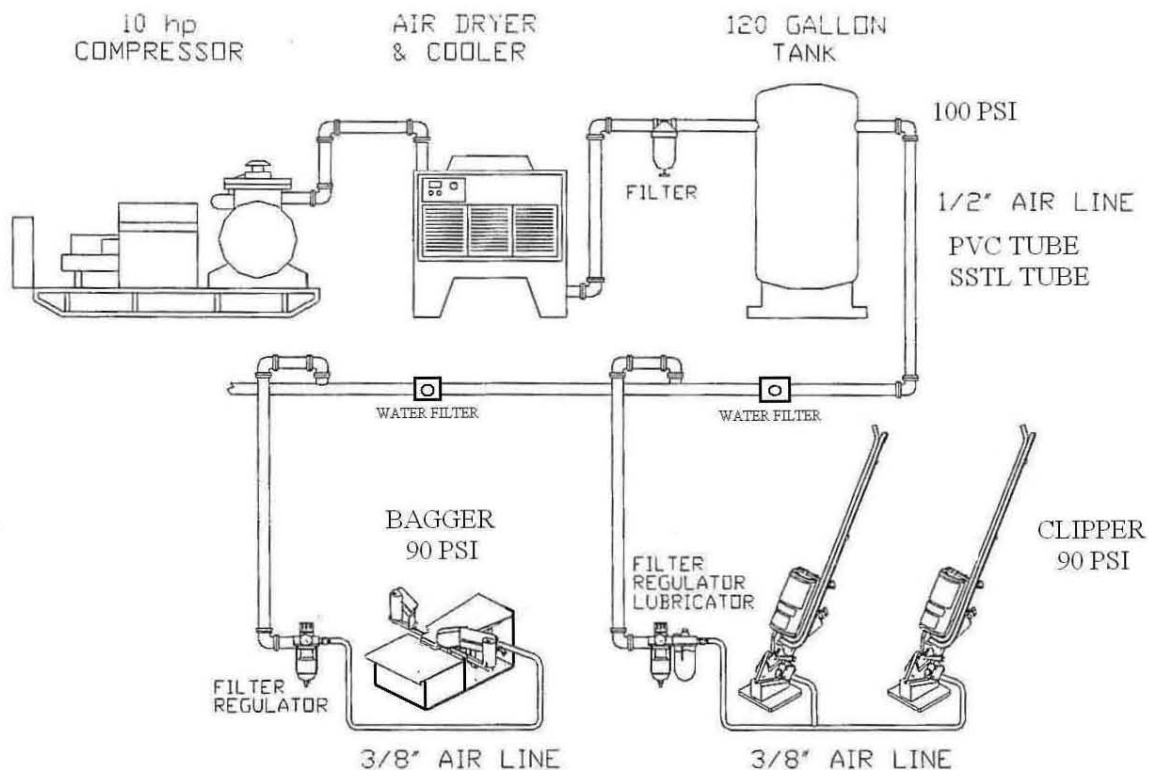


The above line layout is a complete system layout for a clipping/bagging system. At the heart of the system is a compressor. A compressor provides the necessary air supply for the clippers and baggers. It is important to obtain a compressor with a high efficiency. This will allow you to reduce your operating costs for the compressor. A good compressor will not allow for a lot of oil or moisture to be placed into the air system. It is important to use an air dryer / cooler with your compressor. This unit removes water from the air system. This is important because less water means less down time. The air tank is used to store the air. By using the tank, the compressors do not have to work as hard. This method is more efficient and will save money in the long run.



HOW TO SAVE \$\$\$ ON REPAIR COSTS

EZ Clipper

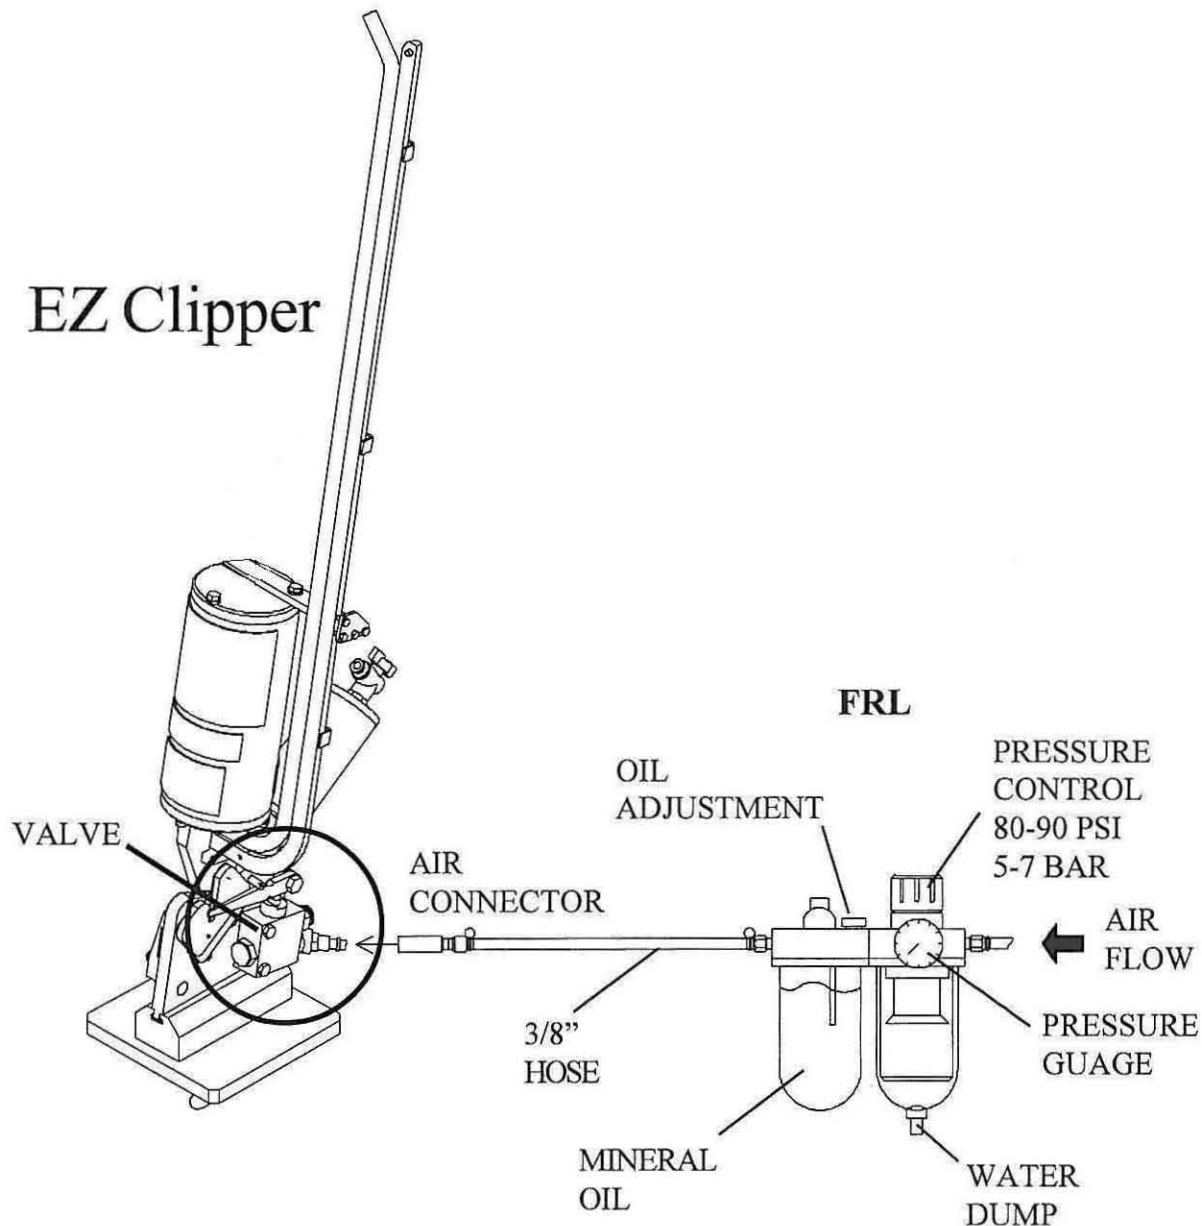

To extend the life of your valve and clipper, you need to use a Filter-Regulator-Lubricator. The FRL removes the water and other debris from your air supply. Once the water is removed, the FRL will allow a small amount of oil to be fed to your clipper. The FRL should be adjusted to one (1) drop of oil every forty (40) cycles of the clipper. By using the FRL properly, you will increase the life of the clipper and reduce the amount of maintenance costs and parts.



How to polish a die

User's Instruction Guide

① Maintaining the die



To Do:

1. Once the die becomes dirty and rough, you must start the cleaning process.
2. This is the difference between a dirty and clean die.

1.



2.



② Using an air grinder



To Do:

- In order to clean the die correctly, you must use an air grinder for the grooves.
- You can then polish the grooves with a 15 micron diamond brush and with a #3 micron diamond buff.

② Using an air grinder



To Do:

- The air grinder comes with different parts to assemble.
- Consult the manual for the specific air grinder that you use.



③ Grinding tools

To Do:

1. These are the grinding wheels
2. You will use this tool to sharpen the grinding wheel
3. Once you have the shape to fit the groove of the die, then you can begin cleaning.


1.



2.



3.

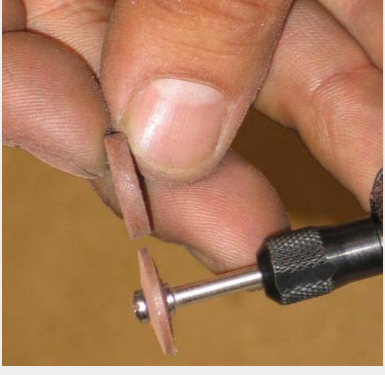

④ Cleaning

To Do:

1. Hold the die tightly in a clamp for safety and easier cleaning.
2. Do not clean the die while holding in your hands. This can cause the grinding tool to slip and hurt your fingers.



1.



2.



⑤ Finished die




To Do:


- WHEN GROOVE IS DAMAGED, YOU CAN NOT CLEAN ANYMORE. ⚠️
- DO NOT USE SCREWDRIVER OR OTHER SHARP TOOLS TO UN-JAM THE MACHINE. TURN THE AIR OFF. ⚠️
- Signs of a damaged groove:
 - Sharp edges or chips in the groove that can not be cleaned
 - Worn down sides of the groove
 - If clip continues to create shavings from the die after being cleaned ⚠️

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation

HOW TO CLEAN A MUFFLER

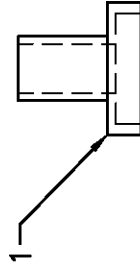


1. SCREW OFF TOP OF MUFFLER.

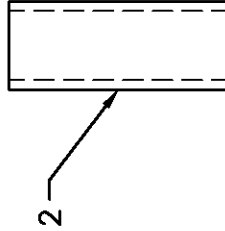

2. TAKE THE SCREEN AND BOTTOM PIECE OUT.



3. TAKE OFF BOTTOM PIECE AND WASH OR SOAK SCREEN (#2) IN CLEANING SOLUTION AND THEN DRY WITH AIR GUN.

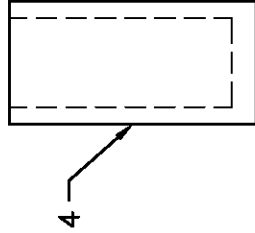

4. PERFORM STEPS 1-3 EVERY FRIDAY


UNLESS OTHERWISE SPECIFIED:
ANSI Y14.5M
ALL DIMENSIONS APPLY AFTER PLATING
INCH DIMENSIONS FOR MANUFACTURING
METRIC DIMENSIONS FOR REFERENCE ONLY
DIMENSIONS XX ± 0.015"
DIMENSIONS XXX ± 0.010"
DIMENSIONS XXXX ± 0.005"
FRACTIONS 1/XX ± 0.015"
ALL ANGLES XX° ± 0°30'
ALL DIMENSIONS ARE IN INCHES [METRIC]
REMOVE BURRS & BREAK SHARP EDGES 1/32"
DO NOT SCALE DRAWING

Rev.	EDW	Form	From	To	Wt.	Date	Poly-Clip System Corporation Mundelein, IL	Scale: 1:2	Drawing:
							USE PART NAME	Date:	
							A	Part No.	Rev. —
							Material:	Checked by:	Approved by:
							Finish:	Drawn by:	
B	8	7	6	5	4	3	2	1	

Any drawing(s) and /or sketch(es) received from Poly-Clip System Corporation is/are property of Poly-Clip System Corporation. The drawing(s) may not be copied or used for any purpose inconsistent with the purpose intended by Poly-Clip System Corporation



PT #77849
SPRING

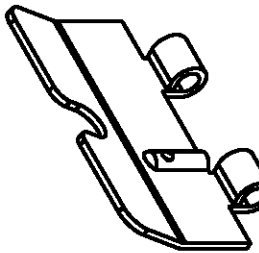

PT #77636-A
SWIVEL DOOR TOP




PT #77636-C
SSTL DOWEL PIN

UNLESS OTHERWISE SPECIFIED:
ANSI Y14.5M
ALL DIMENSIONS APPLY AFTER PLATING
INCH DIMENSIONS FOR MANUFACTURING
METRIC DIMENSIONS FOR REFERENCE ONLY
DIMENSIONS XX ± 0.015"
DIMENSIONS XXX ± 0.010"
DIMENSIONS XXXX ± 0.005"
FRACTIONS 1/XX ± 0.015"
ALL ANGLES XX° ± 0°30'
ALL DIMENSIONS ARE IN INCHES [METRIC]
REMOVE BURRS & BREAK SHARP EDGES 1/32"
DO NOT SCALE DRAWING


HOW TO REPAIR A SWIVEL DOOR

1. USE HAMMER AND SMALLER DIAMETER PIN TO HIT PT #77636-C OUT.
2. CAREFULLY REMOVE ALL PARTS.
3. INSPECT SWIVEL DOOR BASE TO MAKE SURE IT IS FLAT AND IN GOOD CONDITION.
4. REPLACE ANY NEEDED PARTS.
5. PUT PT #77849 INTO HOLE OF PT #77636. AND THEN USE A HAMMER TO HIT PT #77636-C BACK INTO PLACE.
6. IF PT #77636-C IS LOOSE, TAKE A PUNCH AND HAMMER A SMALL INDENT NEAR THE HOLE IN ORDER TO TIGHTEN THE HOLE.

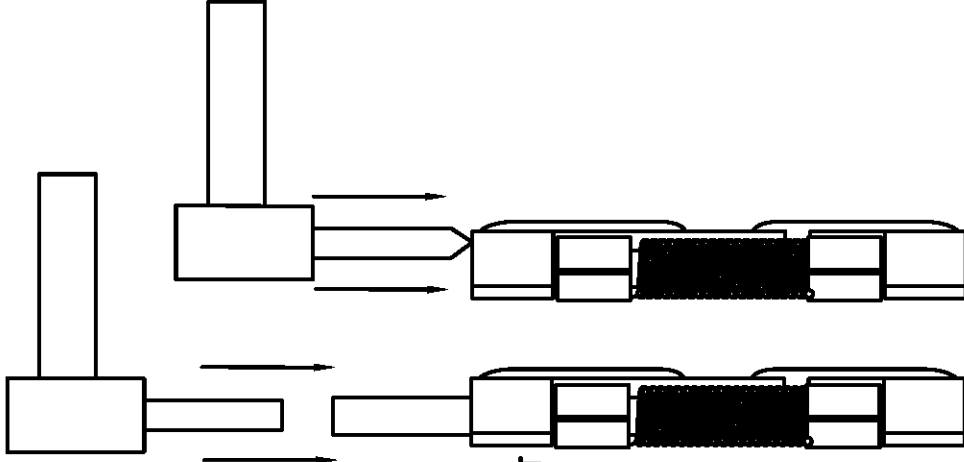

SWIVEL DOOR TOP

SWIVEL DOOR BASE MUST BE FLAT AND IN GOOD CONDITION.

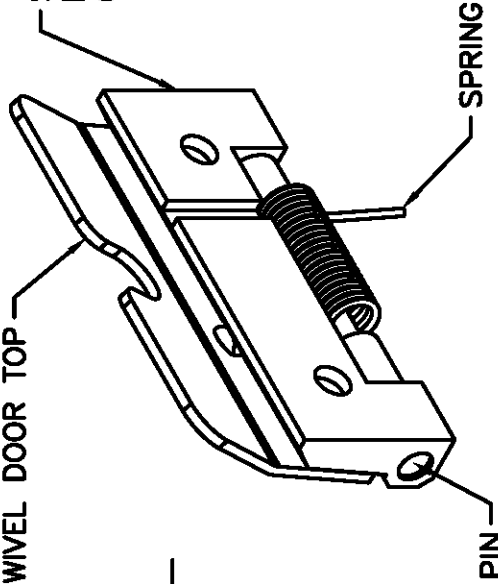

POLY-CLIP SYSTEM CORPORATION
Kendallville, IN

PART NAME
A SWIVEL DOOR REPAIR

Part No. 77636
Material: [Blank]
Finish: [Blank]
Drawing: 77636
Rev. -

Scale: 6-15-10
Date: 6-15-10
Checked by: SO
Drawn by: SO
Approved by: [Blank]