


RAYMOND

Parts Manual

Model 8210 Walkie Pallet Truck

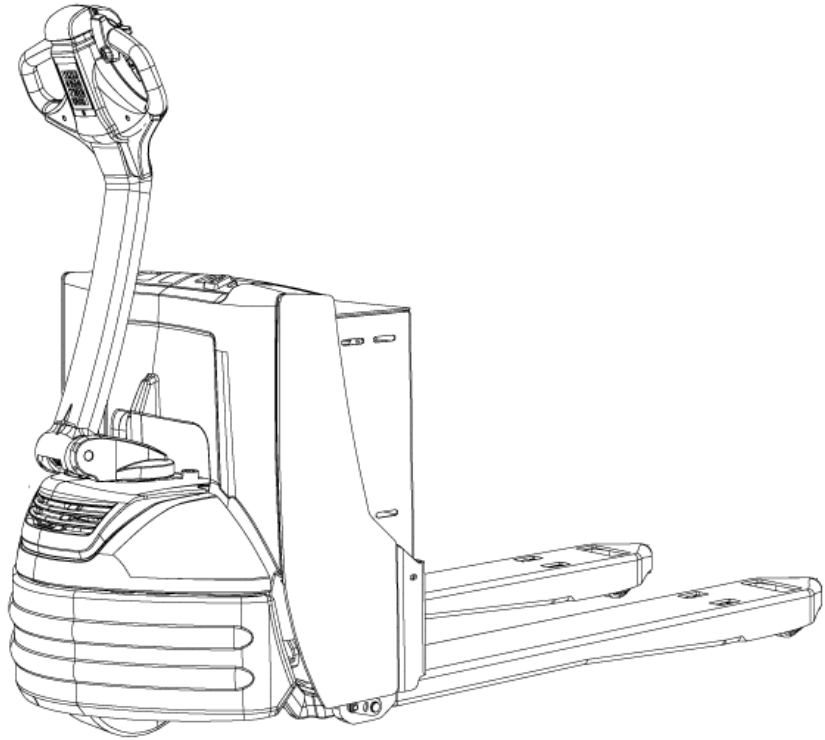

Model
8210

Serial Number
all

1146954

Jan 13, 2017

RAYMOND

Table of Contents

SECTION 1 General Information

Hardware	1-2
Critical	1-5
Recommended	1-6

SECTION 2 Finish & Accessories

Major Assemblies	2-2
Finish Instructions	2-4
Bumper and Caster Installation	2-9
Bumper Assembly	2-11
Covers	2-13

SECTION 3 Steering & Controls

Handle Installation	3-2
Handle Assembly	3-4
Handle Tiller Assembly	3-7
Handle Head Assembly	3-9
Control Head	3-11
Thumb Wheel Assembly	3-13

SECTION 4 Drive & Brake

Transmission Installation	4-2
Gearbox Assembly	4-4
Brake Assembly	4-6
Drive Wheel Assembly	4-8

SECTION 5 Electrical Comp. & System

Electrical System	5-2
Contactor Panel Standard	5-4
Contactor Panel Cold Storage	5-7
Contactor Assembly	5-11
Drive Motor Assembly	5-13
Battery Pack Assembly	5-16
EnerSys NexSys - Battery & Charger	5-22
Start Switch Installation	5-24

SECTION 6 Hydraulic Components

Hydraulic System	6-2
Pump and Motor Assembly	6-4
Lift Cylinder Assembly	6-6

SECTION 7 Mast

Lift Linkage Assembly	7-2
Load Wheel Assembly	7-8
Dual Load Wheel Assembly	7-10

Table of Contents

SECTION 8 Options & Kits

Load Backrest Installation	8-2
Caster Assembly	8-4
Caster Assembly	8-6
Tray Installation	8-8
Tray Assembly	8-10
Shrinkwrap Holder Installation	8-12
iPORT Installation	8-14
iW Essential Installation	8-16
iWarehouse Evolution	8-18
Bumper Skirt Assembly	8-20
Accessory Bar, Load Backrest Mounted	8-22
Accessory Bar Installation	8-24
Auxiliary Light Assembly	8-26
Fan Assembly	8-28

APPENDIX A Alphabetical Parts Index

APPENDIX B Numerical Parts Index

RAYMOND

SECTION 1 General Information

Hardware	1-2
Critical	1-5
Recommended	1-6

List 1-H: Hardware (Sheet 1 of 3)

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
H	313950-000	Assembly, Washer	802	10	2
H	303009-040	Bolt, Hex Socket Head	701	3	2
H	840-033	Fitting, Grease	702	8	1
H	1214006/15	Nut	504A	19	1
H	1214006/16	Nut	504A	20	3
H	301960-006	Nut	505	20	5
H	313947-000	Nut	802	12	1
H	5-015-005	Nut	701	2	2
H	750-013	Nut	505	4	8
H	1169843/004	Nut, Flange, Lock, M10	401	8	1
H	1169841/003	Nut, Hex, Flange	203	8	8
H	1169843/003	Nut, Hex, Flange Lock	503	18	1
H	1169843/002	Nut, Hex, Flange Lock. M6	810	7	4
H	5-015-004	Nut, Hex, Lock	804	2	2
H	5-016-004	Nut, Hex, Lock, M6	811	5	1
H	1214006/17	Nut, Lock	504A	21	1
H	671-041/21	Nut, Locking	802	11	1
H	313046-000	Nut, Lug	404	4	5
H	5-016-002	Nut, M4	812	6	2
H	10150120-12	Screw	305	25	1
H	10150232-02	Screw	305	24	1
H	10150232-07	Screw	305	23	1
H	10150237-90	Screw	305	26	1
H	1018204/053	Screw	812	8	2
H	1031785/001	Screw	601	3	1
H	1169615/505	Screw	501	24	2
H	1169616/533	Screw	505A	4	1
H	1212116/001	Screw	501	4	3
H	1214006/13	Screw	504A	17	2
H	1214006/65	Screw	403	6	3
H	1215449/001	Screw	305	15	5
H	1215451/001	Screw	305	16	2
H	171708	Screw	306	1	2
H	29544	Screw	810	5	4
H	301826-012	Screw	505	16	15
H	301826-020	Screw	505	17	3
H	301827-025	Screw	505	19	2
H	301955-020	Screw	401	3	10

Service Type H = Hardware

Model 8210 Pallet Truck - General Information

Hardware

List 1-H: Hardware (Sheet 2 of 3)

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
H	301955-055	Screw	301	2	1
H	301955-075	Screw	301	3	2
H	313948-000	Screw	802	16	1
H	313951-000	Screw	802	17	1
H	314017-012	Screw	301	4	2
H	5-001-003	Screw	503	7	2
H	5-001-058	Screw	811	3	1
H	5-002-056	Screw	303	10	2
H	5-002-059	Screw	303	11	2
H	5-002-531	Screw	302	1	2
H	5-002-573	Screw	505	2	2
H	5-003-007	Screw	812	5	2
H	5-003-029	Screw	812	15	4
H	5-003-502	Screw	501	6	2
H	5-004-004	Screw	303	12	1
H	5-007-027	Screw	810	4	4
H	5-007-030	Screw	809	5	3
H	5-007-508	Screw	504	3	4
H	5-007-509	Screw	504	3	4
H	7-701-002/006	Screw	305	1	1
H	5-007-522	Screw, Button Head	302	12	3
H	1169616/502	Screw, Flange Head	503	19	1
H	1169616/504	Screw, Flange Head	503	20	4
H	1169616/511	Screw, Flange Head	701	5	2
H	1169616/513	Screw, Flange Head	203	6	8
H	1169616/536	Screw, Flange Head	203	7	4
H	1169616/012	Screw, Flange Head, Hex	503	22	1
H	1169616/016	Screw, Flange Head, Hex	401	5	1
H	1169616/036	Screw, Flange Head, Hex	401	6	1
H	1169616/507	Screw, Flange Head, Hex	503	21	2
H	301827-016	Screw, Flange Head, Thread Forming	505	18	2
H	1214006/09	Screw, Hex Head	504A	13	1
H	1214006/54	Screw, Hex Head	402	19	6
H	5-004-015	Screw, M6 X 20	804	1	2
H	301740-001	Screw, Set	302	6	1
H	1214006/10	Screw, Socket Head	504A	14	6
H	1214006/11	Screw, Socket Head	504A	15	2
H	1214006/12	Screw, Socket Head	504A	16	1

Service Type H = Hardware

List 1-H: Hardware (Sheet 3 of 3)

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
H	1214006/55	Screw, Socket Head	402	20	3
H	1214006/56	Screw, Socket Head	402	21	2
H	1214006/57	Screw, Socket Head	402	22	10
H	5-002-506	Screw, Socket Head, Cap	501	5	2
H	5-007-524	Screw, Socket, Button Head	808	2	5
H	771-033	Spacer	703	1	4
H	11016-02	Washer	505	3	8
H	11936-08	Washer	302	5	2
H	1202195	Washer	503	24	2
H	1214006/18	Washer	504A	22	6
H	1214006/19	Washer	504A	23	1
H	1214006/22	Washer	504A	26	1
H	171710	Washer	306	2	2
H	1146154	Washer, Bottom	804	4	2
H	313946-000	Washer, Flat	802	13	2
H	5-018-003	Washer, Flat	504	8	4
H	5-018-006	Washer, Flat	503	30	2
H	771-156	Washer, Flat	703	2	8
H	7-775-108	Washer, Flat, Brass	503	4	1
H	1214006/20	Washer, Lock	504A	24	3
H	1214006/21	Washer, Lock	504A	25	2
H	313744-000	Washer, Lock	402	26	10
H	5-019-004	Washer, Lock	812	18	4
H	5-019-006	Washer, Lock	503	32	2
H	5-020-013	Washer, Lock, Toothed	811	6	AR
H	1202195	Washer, Serrated Conical	501	14	3
H	671-024/09	Washer, Thrust	802	7	2

Service Type H = Hardware

Model 8210 Pallet Truck - General Information

Critical

List 1-C: Critical

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
C	1202787/005	Battery Pack Assembly, With AGM Battery	505		
C	1202787/001	Battery Pack Assembly, With No Battery	505		
C	1202787/003	Battery Pack Assembly, With Wet Cell Battery	505		
C	1214006/60	Brake Assembly	403		
C	1150244/001	Card, Circuit, Sensor, Impact Monitor	807A	2	1
C	1085017/002	Card, RDP-T	806	5	1
C	1242400/001	Caster Assembly	802A		
C	1190648/001	Charger, Battery	505	25	1
C	1224300	Contactor Assembly Lift	503	27	1
C	1205262	Contactor Assembly Main	503	26	1
C	1199318	Contactor Main	504	6	1
C	1199319	Contactor Pump	504	7	1
C	1217319	Controller, Motor	503	23	1
C	1187702	Cylinder Assembly	603		
C	1207931/001	Head Assembly, Control	305		1
C	1207931/001	Head Assembly, Control (See 305)	304	1	1
C	1222217/001	iMonitor W/ Ball Joint (Display	807A	1	1
C	313621-000	Motor, Lift Pump	602	3	1
C	1207968/002	Pump and Motor Assembly	602		

Service Type C = Critical Part

List 1-R: Recommended (Sheet 1 of 2)

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
R	1192540	Battery, AGM	505	28	4
R	27234-00	Battery, Wet Cell	505	9	4
R	167846	Bearing	306	4	2
R	313063-000	Bearing	302	8	2
R	313958-000	Bearing	802	14	2
R	49910-01	Bearing	703	5	4
R	1214006/06	Bearing, Ball	504A	7	1
R	1214006/51	Bearing, Ball	402	13	1
R	1214006/53	Bearing, Ball	402	15	1
R	313737-000	Bearing, Ball	402	14	2
R	313768-000	Bearing, Ball	504A	6	1
R	671-024/04	Bearing, Cone	802	5	1
R	671-024/03	Bearing, Cup	802	5	1
R	49910-05	Bearing, Sealed	703	5	4
R	445-236	Bearing, Thrust	802	8	1
R	312672-000	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	701	18	4
R	312672-000	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	701	1	4
R	1205985/001	Card Assembly, Display	305	10	1
R	1204975/001	Card Assembly, VM	305	8	1
R	49854-01	Connector, Battery, Gray	503	10	1
R	49854-04	Connector, Battery, Red	505	10	1
R	590-587/107	Fuse (125 Amp)	504	1	1
R	590-587/117	Fuse (350 Amp)	503	28	1
R	590-587/118	Fuse (400 Amp)	503	29	1
R	1213821/400	Fuse, Potted	502	33	1
R	121381/125	Fuse, Potted (125 Amp) EE	504	4	1
R	1207699	Gasket, Display	305	12	1
R	1205531	Gasket, E Steer Handle	305	9	1
R	1210357	Gasket, Pallet Handle (Not Shown)	304	6	1
R	1047433/002	Horn	503	14	1
R	314474-000	Kit, Relief Valve	602	2	1
R	1207968/01	Kit, Solenoid Valve	602	4	1
R	313618-000	Kit, Start Switch	602	9	1
R	314131-000	O-Ring	802	20	1
R	1107328	Resistor	503	9	1
R	1056002/001	Resistor Assembly	503	12	1

Service Type R = Recommended Spare

Model 8210 Pallet Truck - General Information

Recommended

List 1-R: Recommended (Sheet 2 of 2)

SERVICE TYPE	PART NUMBER	DESCRIPTION	SERVICE GROUP	ITEM NO.	QTY
R	1214006/61	Rotor, Brake	403	3	1
R	313779-000	Seal, Ring	402	17	2
R	49553-06	Seal, Rod	603	4	1
R	1214006/07	Seal, Shaft	504A	8	1
R	313736-000	Seal, Shaft	402	16	1
R	313756-000	Seal, Shaft	504A	9	1
R	1245054	Sensor Assembly, Proximity	501	25	1
R	1099771/003	Sensor, Proximity	302	1	1
R	1214006/32	Sensor, Speed	504A	36	1
R	1214006/66	Sensor, Temperature	504A	42	1
R	167836-00	Spring	305	14	1
R	167840	Spring	306	6	1
R	312855-001	Spring, Torsion	302	7	1
R	1226372/001	Switch, Horn	305	18	1
R	1226372/002	Switch, Horn	305	27	1
R	1020341/002	Switch, Key, Main On/Off	506	3	1
R	305493-000	Switch, Main On/Off	506	2	1
R	1105029/002	Switch, Rocker	812	9	1
R	1202622	Switch, Rocker, Brake Release	506	6	1
R	632-090/018	Tire, Drive (Black Poly)	404	2	1
R	632-089/004	Tire, Drive (Black Poly, Crowned)	404	2	1
R	630-235/003	Tire, Drive (Lugged Rubber)	404	2	1
R	630-235/002	Tire, Drive (Non-Marking Rubber)	404	2	1
R	630-235/001	Tire, Drive (Smooth Black Rubber)	404	2	1
R	630-235/201	Tire, Drive (Traction Rubber)	404	2	1
R	632-090/001	Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	404	2	1
R	632-090/008	Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	404	2	1
R	313879-001	Washer, Plastic	302	11	1
R	313945-000	Wheel	802	15	1
R	313054-007	Wheel Assembly, Drive (Smooth, Grip, Rubber)	404	1	1
R	1242400/03	Wheel Kit, Caster	802A	3	1
R	312636-000	Wheel, Load	702	3	1
R	14966-01	Wiper, Cylinder Rod	603	2	1

Service Type R = Recommended Spare

RAYMOND

SECTION 2 Finish & Accessories

Major Assemblies 2-2

Finish Instructions 2-4


Bumper and Caster Installation 2-9

Bumper Assembly 2-11

Covers 2-13

Major Assemblies

Figure 2-1: Major Assemblies

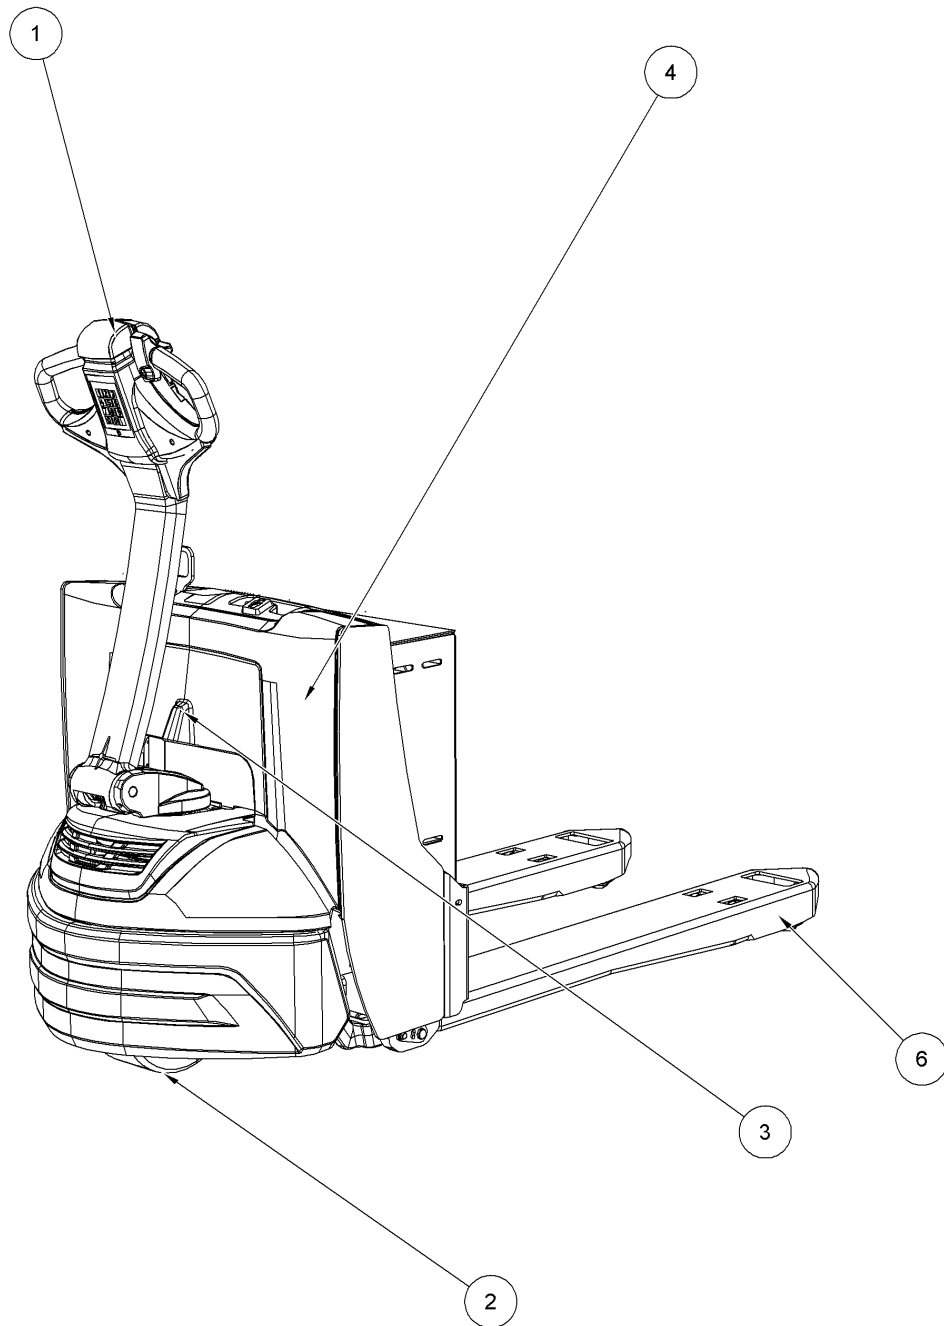


Major Assemblies

List 2-1: Major Assemblies

FIGURE 2-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Major Assemblies		
1		Ref.	Control Head Assembly		
2		Ref.	Drive Unit and Motor Assembly		
3		Ref.	Electrical System		
4		Ref.	Lift Pump Assembly		
6		Ref.	Fork Final Assembly		


Finish Instructions

Figure 2-2.a: Finish Instructions

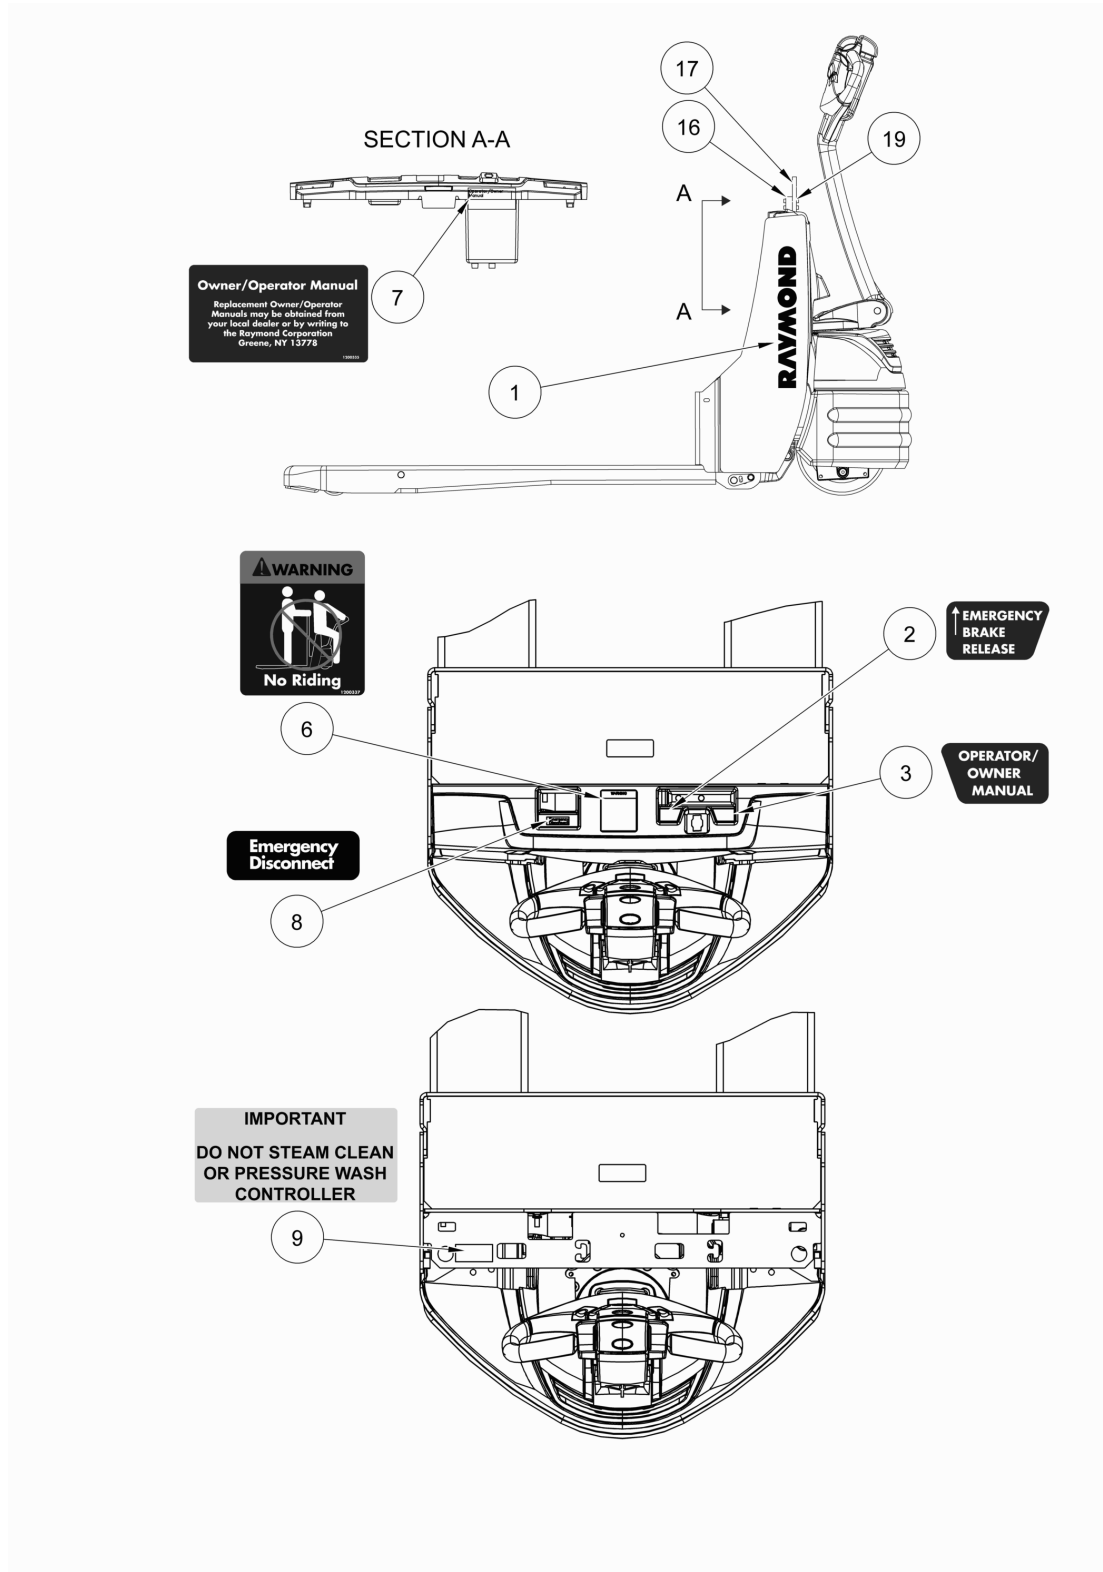


Finish Instructions

Figure 2-2.b: Finish Instructions

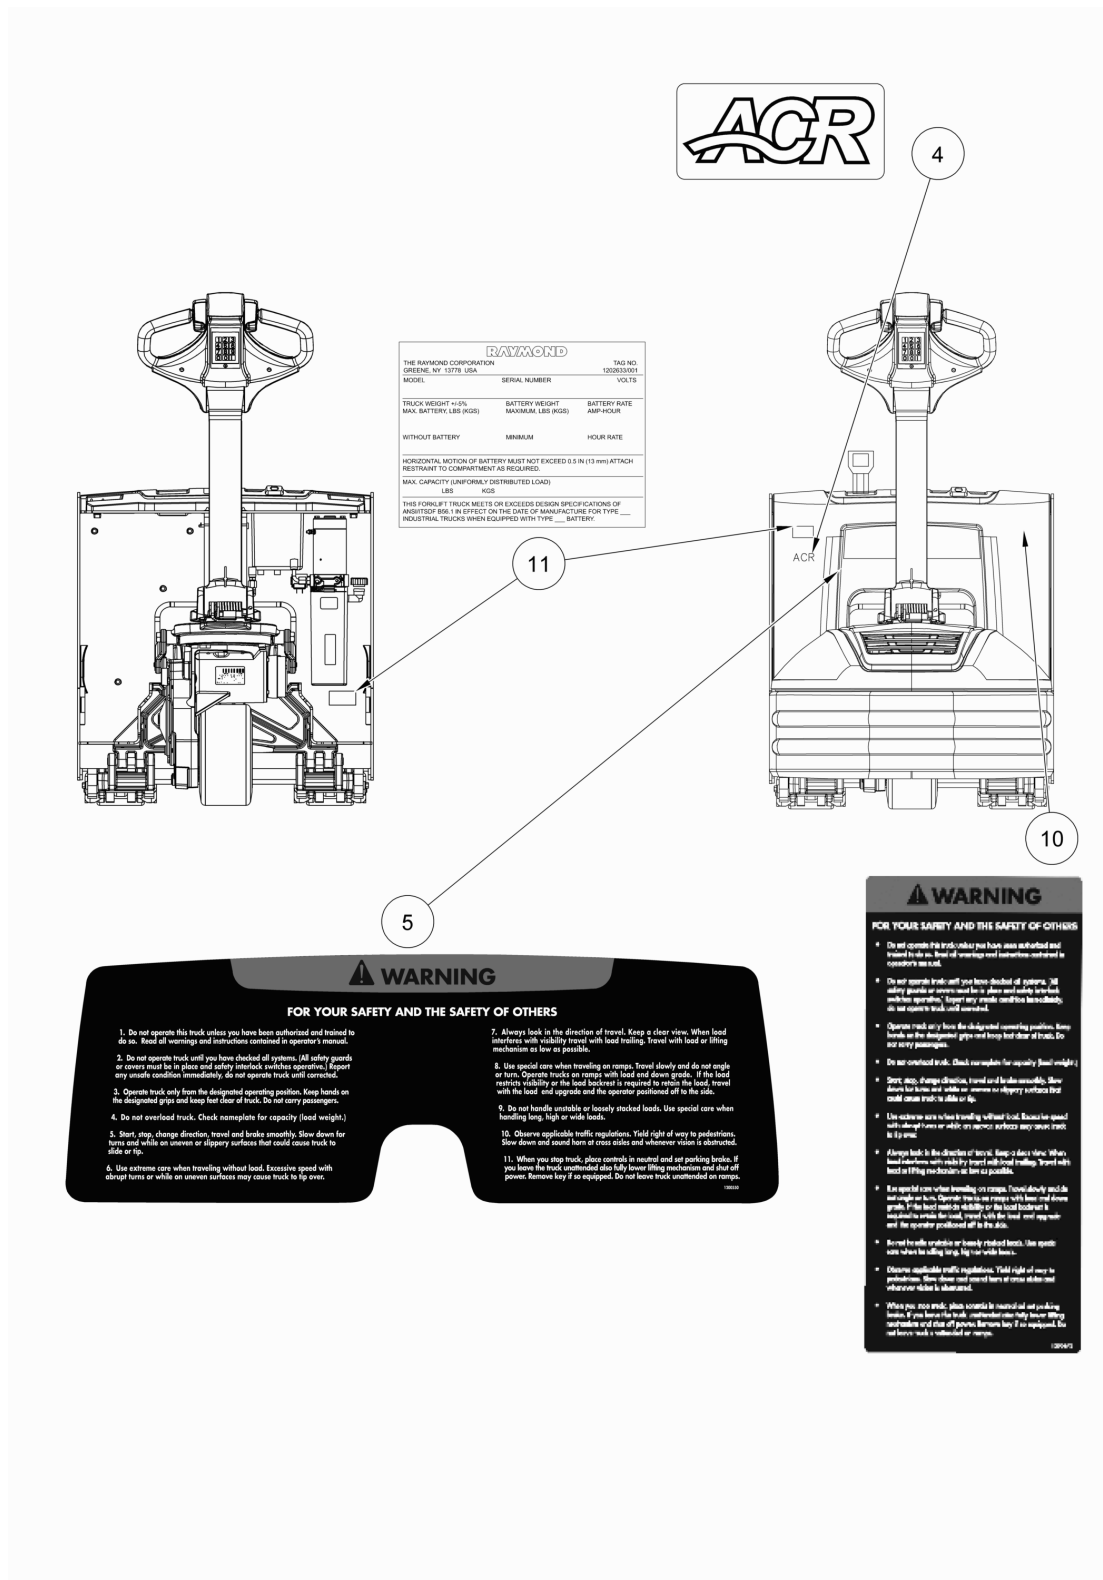


Finish Instructions

Figure 2-2.c: Finish Instructions

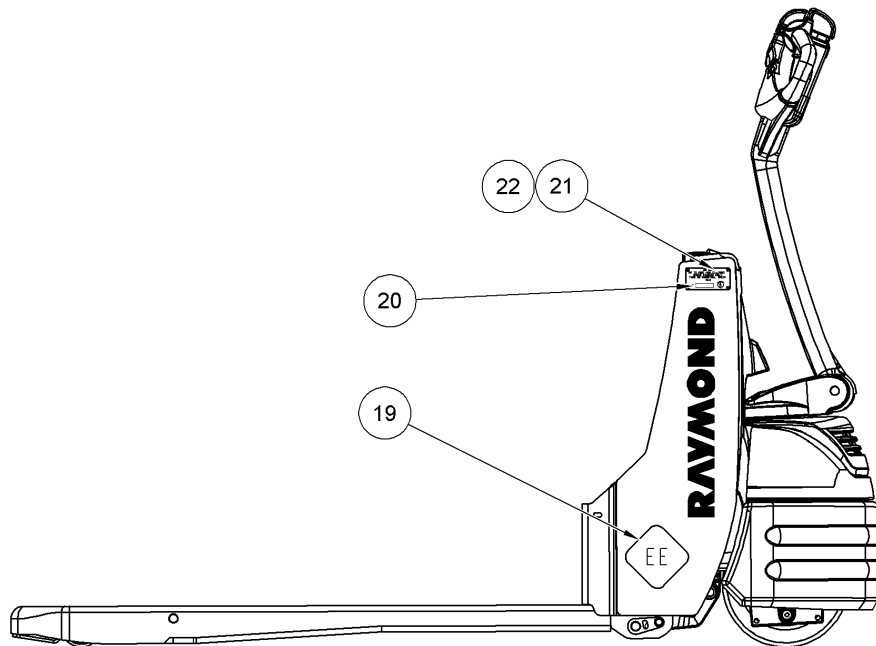

Finish Instructions

Figure 2-2.d: Finish Instructions

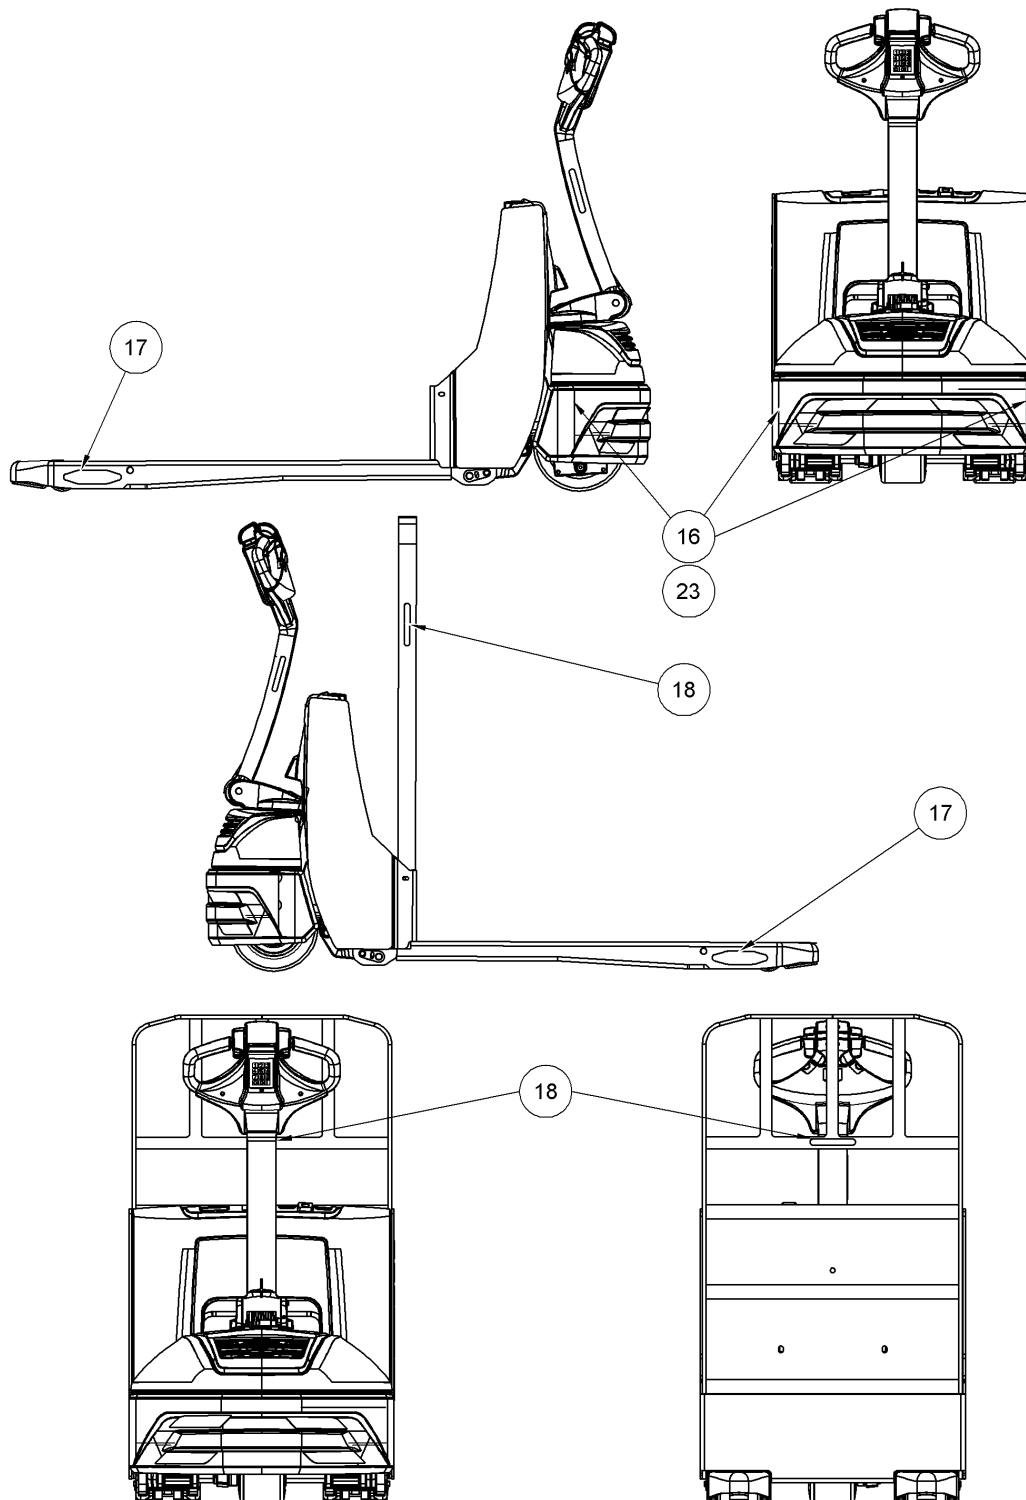


List 2-2: Finish Instructions

FIGURE 2-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Finish Instructions		
1	2	1201381/001	Decal, Raymond White		
	2	1201381/002	Decal, Raymond Black		
2	1	1200348/001	Decal, Brake Release English		
	1	1200348/002	Decal, Brake Release English, French		
	1	1200348/003	Decal, Brake Release Chinese		
3	1	1200347/001	Decal, Owner Operator English		
	1	1200347/002	Decal, Owner Operator English, French		
	1	1200347/003	Decal, Owner Operator Chinese		
4	1	1201377	Decal, ACR		
5	1	1200550	Decal, Warning English		
	1	1200339	Decal, Warning English, French		
	1	1201487	Decal, Warning Chinese		
6	1	1200337	Decal, No Riding		
	1	1200338	Decal, No Riding Chinese		
7	1	1200335	Decal, Owner/Operator		
	1	1200336	Decal, Owner/Operator Chinese		
8	1	313159-001	Decal, Emergency Disconnect		
	1	1200844	Decal, Emergency Disconnect Metric		
9	1	302402-000	Decal, Steam Clean		
	1	115705/001	Decal, Stem Clean Chinese		
11	2	1202633/001	Spec Tag		
	2	1063015/X08	Spec Tag (Metal Option)		
10	1	1200675	Decal, Warning		
16	2	1202795	Decal, Reflector Bumper		
17	2	1202796	Decal, Reflector Fork Tip		
18	6	1202797	Decal, Reflector Tiller		A
19	2	412-574	Decal, EE		
20	4	49663-00	Tack, Metal		
21	1	Ref.	Decal, Spec. Plate (EE)		
22	1	1066855/001	Decal, E		

A = Quantity 3 W/Loadbackrest

Bumper and Caster Installation

Figure 2-3: Bumper and Caster Installation

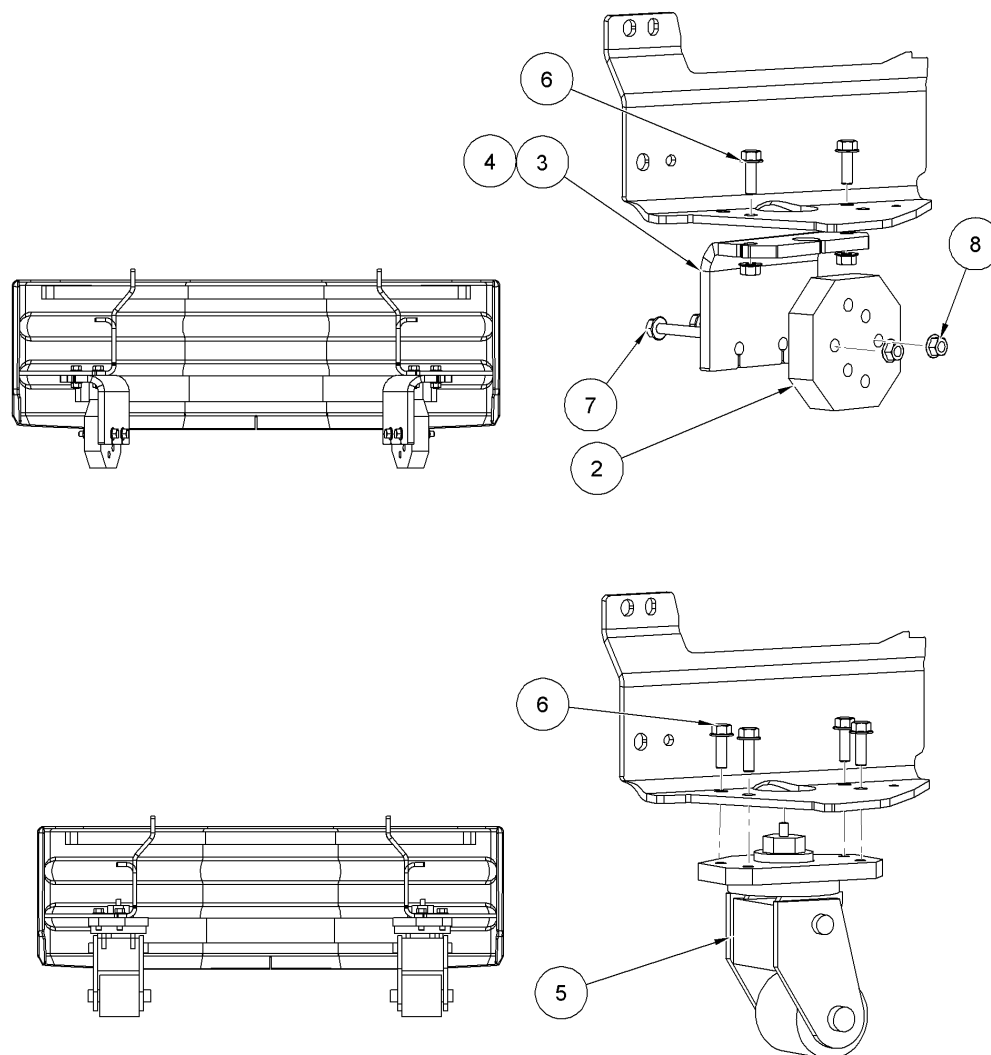


List 2-3: Bumper and Caster Installation

FIGURE 2-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Bumper and Caster Installation		
		1200534/002	Bumper and Caster Assembly		
		1200534/004	Bumper and Caster Assembly		
2	2	313494-000	Shoe, Skid, Poly		
	2	1219060/001	Shoe, Skid Iron (Painted)		
	2	1219060/002	Shoe, Skid Iron (Galvanized)		
3	2	1224618/001	Bracket, Skid (Painted)		
4	2	1224618/002	Bracket, Skid (Galvanized)		
	2	313495-001	Bracket, Skid (Galvanized)		
5	2	313729-001	Caster Assembly (See 802)		
6	8	1169616/513	Screw, Flange Head	H	
7	4	1169616/536	Screw, Flange Head	H	
8	8	1169841/003	Nut, Hex, Flange	H	

Service Type H = Hardware

Bumper Assembly

Figure 2-4: Bumper Assembly

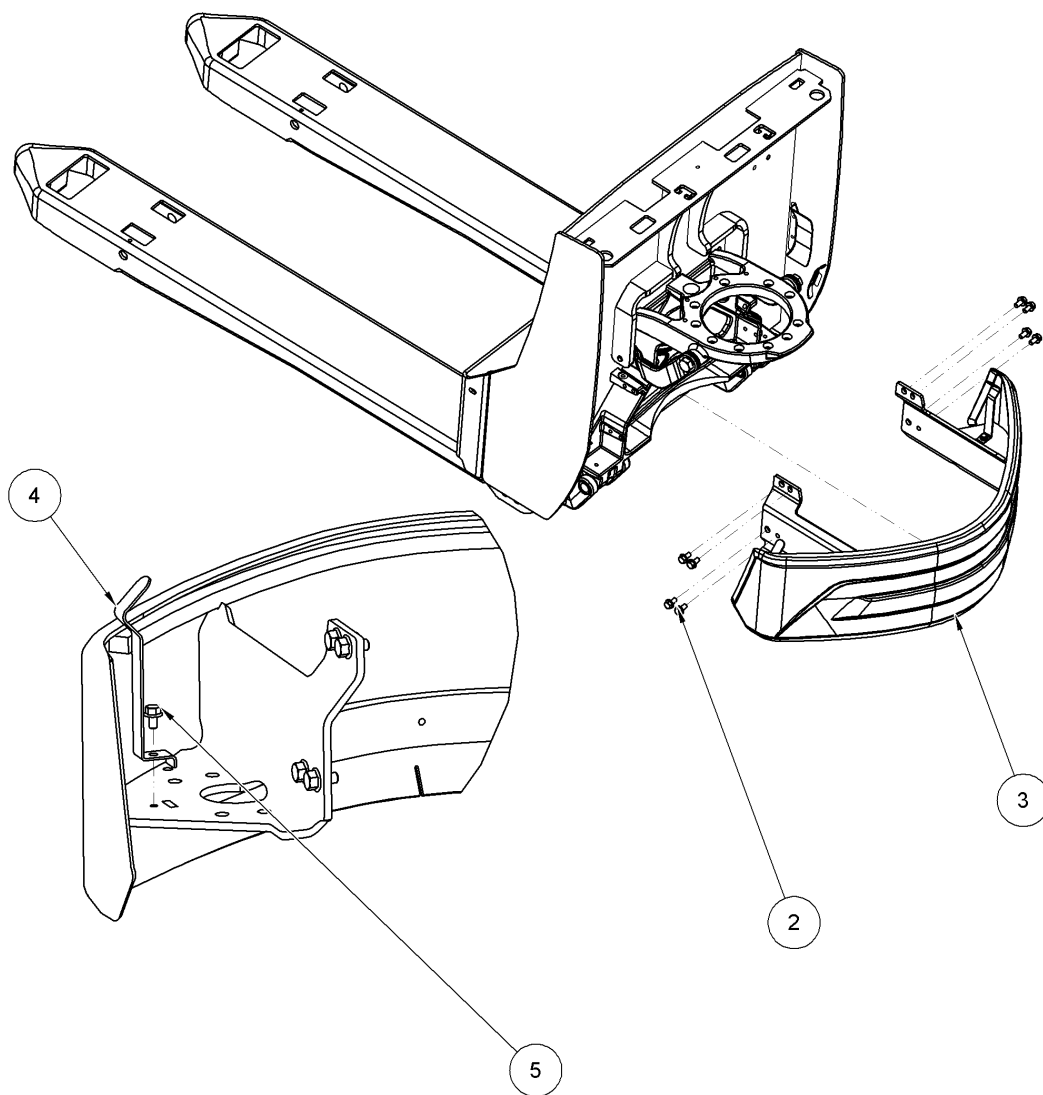


List 2-4: Bumper Assembly

FIGURE 2-4 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Bumper Assembly		
2	8	1169616/511	Screw, Flange Head	H	
3	1	1214736/001	Bumper Weldment, Black		
	1	1214736/005	Bumper Weldment, Galvanized		
	1	1214736/002	Bumper Weldment, Black, Used With Skirt (See 808)		
	1	1214736/006	Bumper Weldment, Galvanized, Used With Skirt (See 808)		
4	2	1198781	Spring, Flat		
5	2	1169616/502	Screw, Flange Head	H	

Service Type H = Hardware

Covers

Figure 2-5: Covers

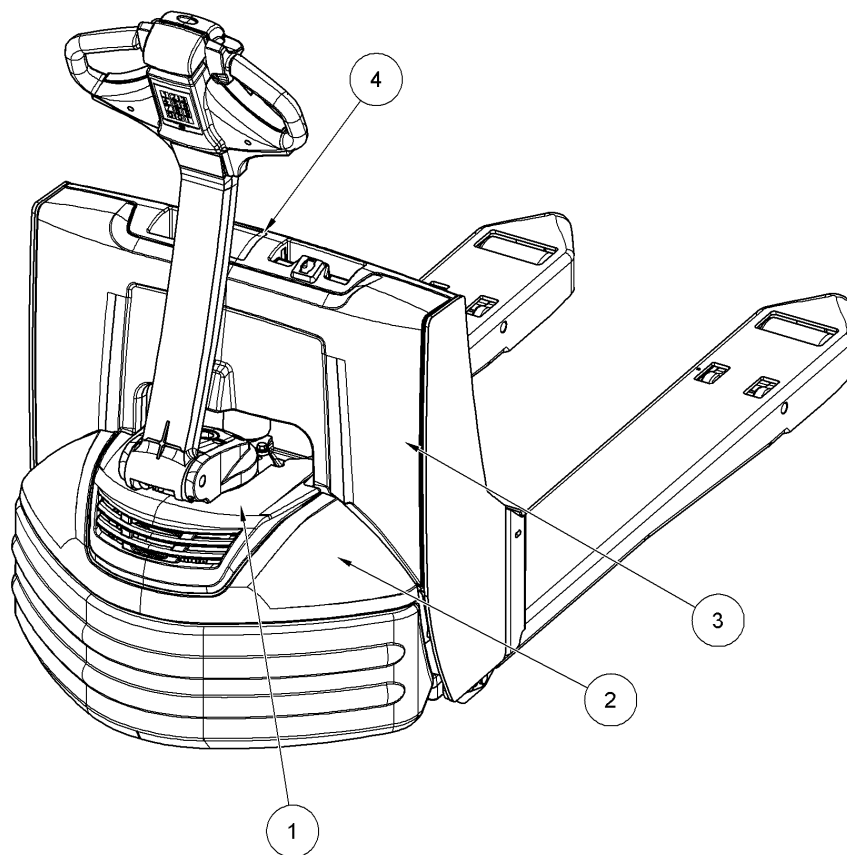

List 2-5: Covers

FIGURE 2-5 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Covers		
1	1	1193514/001	Cover, Grille		
2	1	1193515/001	Cover, Lower, Red		
	1	1193515/003	Cover, Lower, Black		
3	1	1224592/001	Cover, Upper, Red		
	1	1224592/003	Cover, Upper, Black		
4	1	1193517/001	Cover, Console, Key Switch		
	1	1193517/002	Cover, Console, Rocker Switch		

SECTION 3 Steering & Controls

Handle Installation 3-2

Handle Assembly 3-4

Handle Tiller Assembly 3-7


Handle Head Assembly 3-9

Control Head 3-11

Thumb Wheel Assembly 3-13

Handle Installation

Figure 3-1: Handle Installation

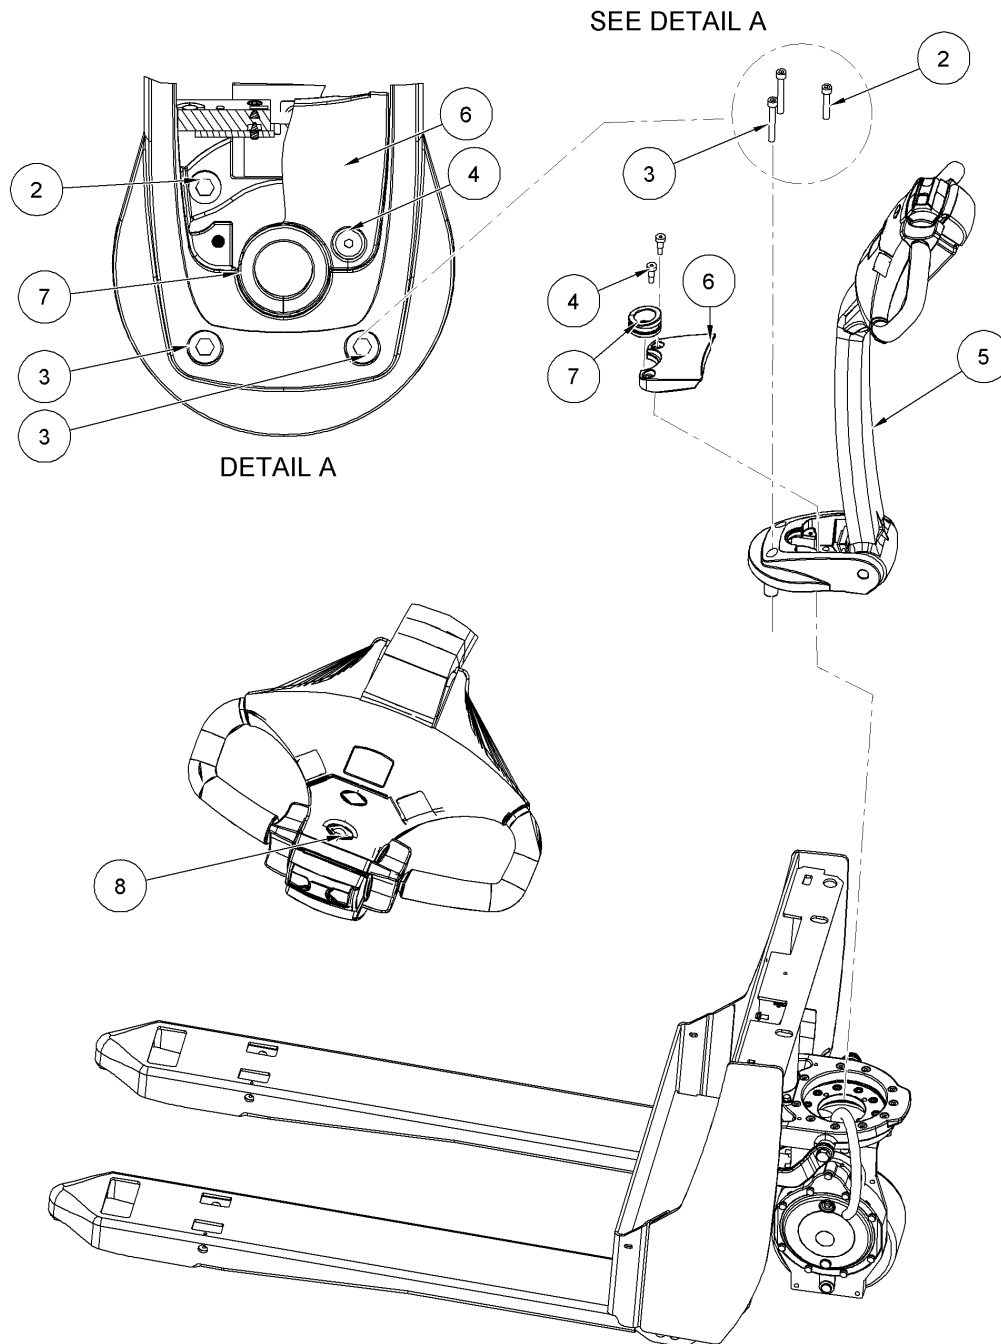

Handle Installation


List 3-1: Handle Installation

FIGURE 3-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Handle Installation		
2	1	301955-055	Screw	H	
3	2	301955-075	Screw	H	
4	2	314017-012	Screw	H	
5	1	Ref.	Handle Assembly (See 302)		
6	1	1225272	Bumper, Stop		
7	1	1195782	Grommet		
8	1	1210674	Plate, Symbol, Turtle, Click to Creep		

Service Type H = Hardware


Handle Assembly

Figure 3-2.a: Handle Assembly

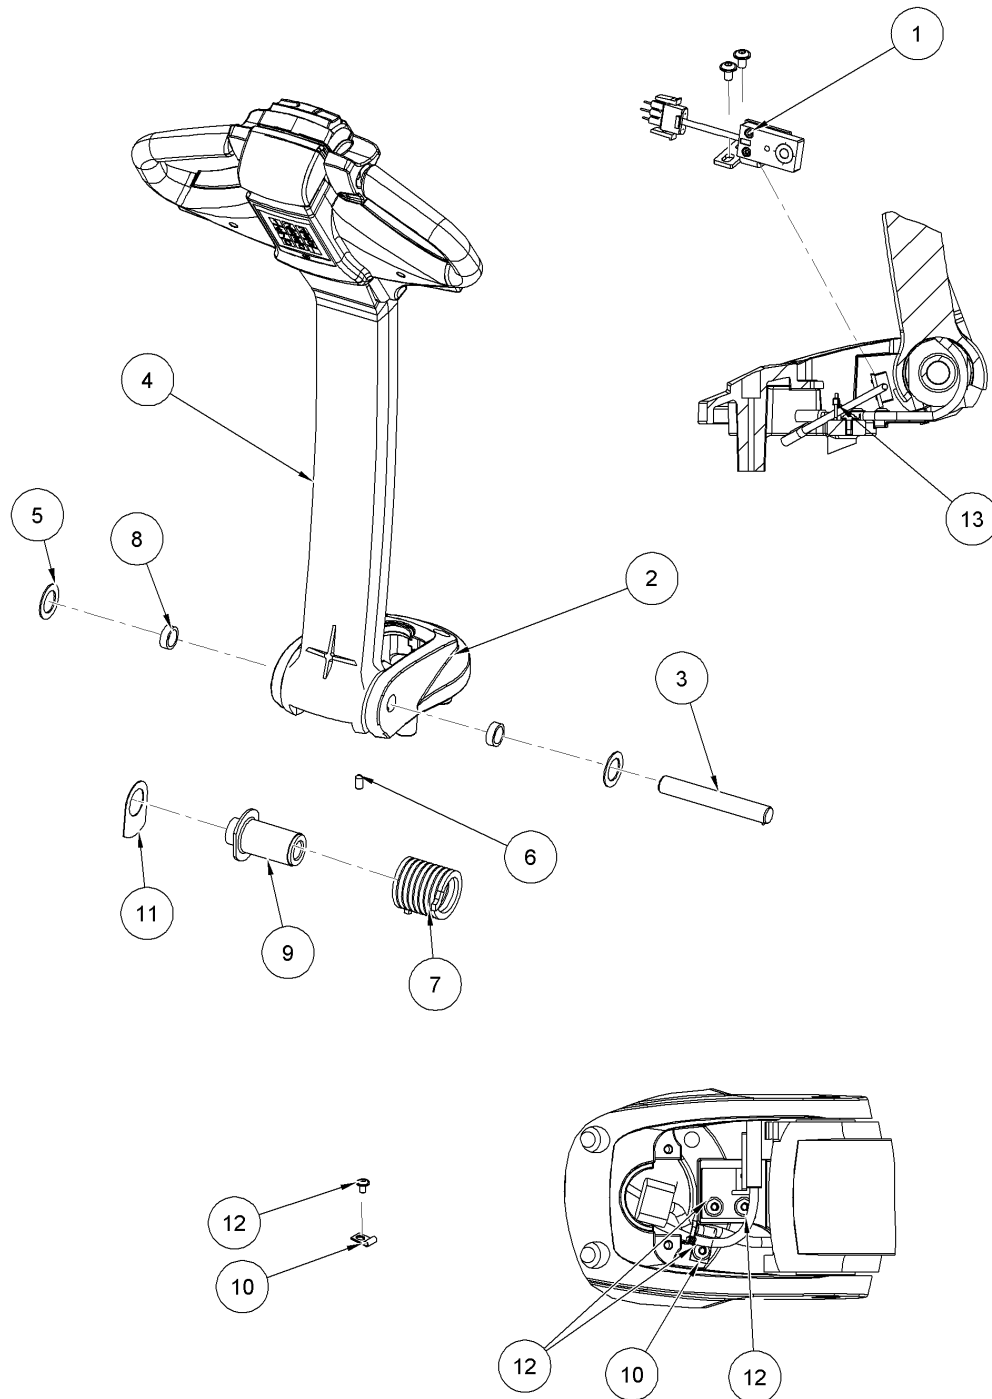

Handle Assembly

Figure 3-2.b: Handle Assembly

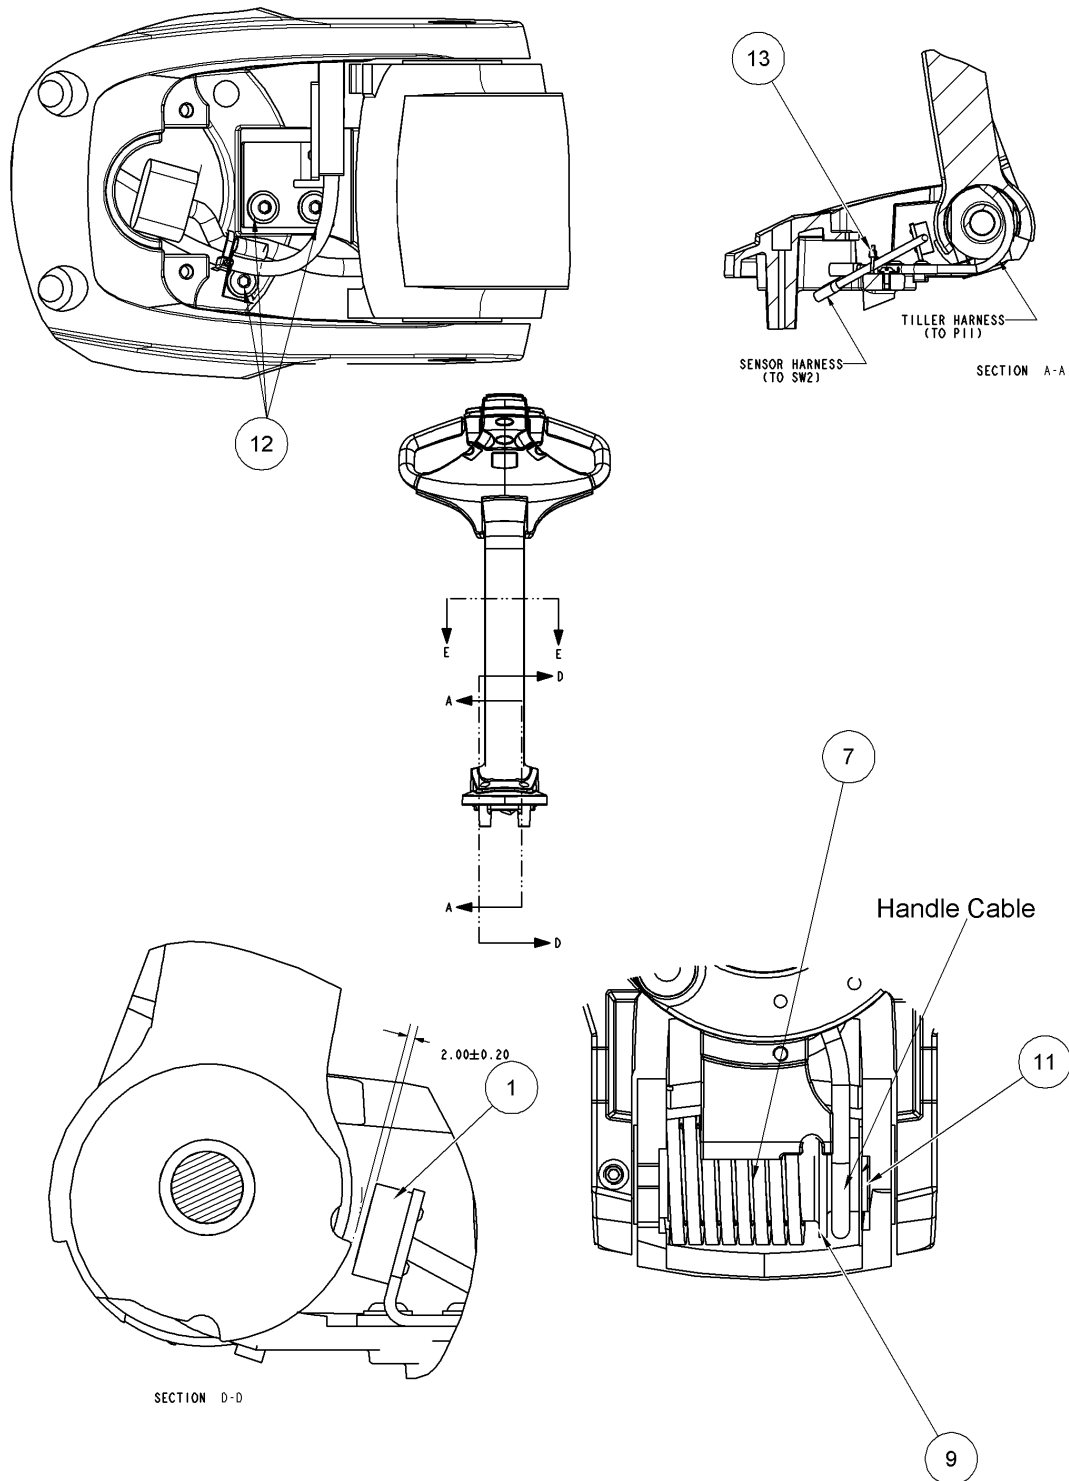


List 3-2: Handle Assembly

FIGURE 3-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Handle Assembly		
1	1	1189601	Sensor Assembly, Proximity Includes:		
	1	1099771/003	Sensor, Proximity	R	
	1	1195781	Bracket		
	2	5-002-531	Screw	H	
2	1	1192655	Cap Stem, Machined		
3	1	1195655	Pin, Pivot, Handle		
4	1	Ref.	Handle Assembly, Tiller		
5	2	11936-08	Washer	H	
6	1	301740-001	Screw, Set	H	
7	1	312855-001	Spring, Torsion	R	
8	2	313063-000	Bearing	R	
9	1	313088-000	Sleeve, Spring		
10	1	313547-000	Clamp, Wire		
11	1	313879-001	Washer, Plastic	R	
12	3	5-007-522	Screw, Button Head	H	
13	1	611-029	Strap		

Service Type R = Recommended Spare

Service Type H = Hardware

Figure 3-3: Handle Tiller Assembly

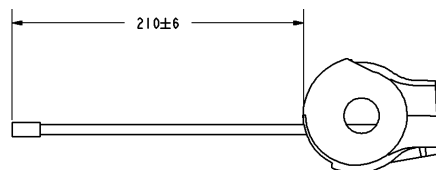


List 3-3: Handle Tiller Assembly

FIGURE 3-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Handle Tiller Assembly		
		1208728/005	Handle Assembly With Keypad		
		1208728/006	Handle Assembly Without Keypad		
1	4	5-001-058	Screw	H	
2	1	1208636/001	Handle Head Assembly (See 304)		
3	1	1226123/001	Harness Assembly		
4	1	1189480/001	Tiller		
5	1	1228349/002	Keypad, Assembly (Blank) (In Lieu of Keypad)		
6	1	1219151	Plate, Backing, Upper		
7	1	1219152	Plate, Lower		
8	1	313634-000	Relief, Strain		
9	1	1228349/001	Keypad, Assembly (Keypad)		
10	2	5-002-056	Screw	H	
11	2	5-002-059	Screw	H	
12	1	5-004-004	Screw	H	

Service Type H = Hardware

Handle Head Assembly

Figure 3-4: Handle Head Assembly

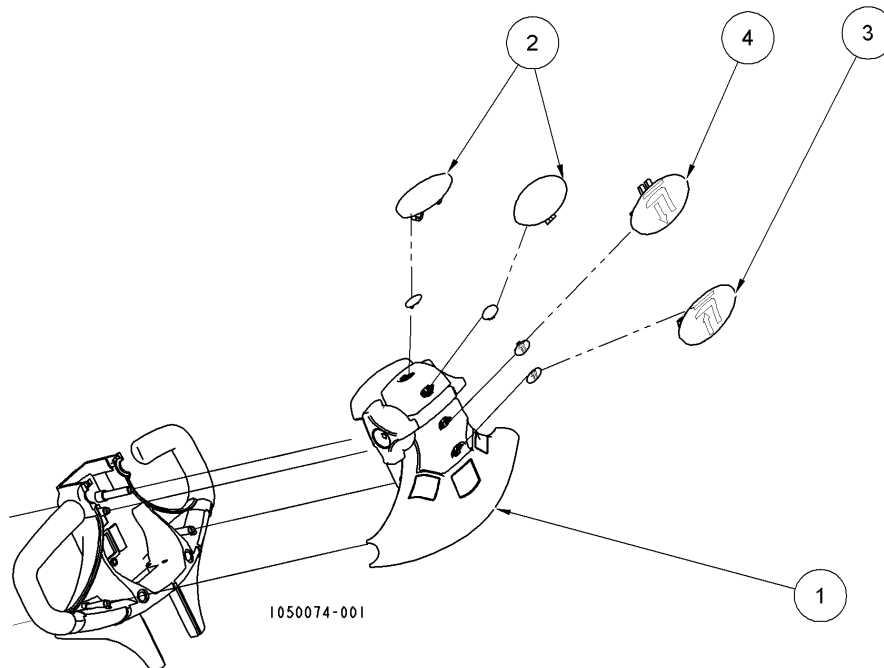

List 3-4: Handle Head Assembly

FIGURE 3-4 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Handle Head Assembly		
		1208636/001	Handle Head Assembly		
1	1	1207931/001	Head Assembly, Control (See 305)	C	
2	1	171583	Plate, Blank		
	1	1036735	Button, Blank		
3	1	171585-001	Plate, Symbol, Fork Lower		
4	1	171585-002	Plate, Symbol, Fork Lift		
5	1	1210674	Plate, Symbol, Turtle		
6	1	1210357	Gasket, Pallet Handle (Not Shown)	R	
7	1	1215074	Handle Housing (Under Item 1)		
8	1	313052-000	Handle (Not Shown)		

Service Type R = Recommended Spare

Service Type C = Critical Part

Figure 3-5: Control Head



List 3-5: Control Head

FIGURE 3-5 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Control Head		
	1	1207931/001	Head Assembly, Control	C	
1	1	7-701-002/006	Screw	H	
3	1	313051-000	Wheel Assembly, Thumb (See 306)		
4	1	7578514	Button, Lift/Lower Assembly		
6	1	7571847	Button, Horn Right		
7	1	7571848	Button, Horn Left		
8	1	1204975/001	Card Assembly, VM	R	
9	1	1205531	Gasket, E Steer Handle	R	
10	1	1205985/001	Card Assembly, Display	R	
11	1	1207695/001	Housing, Handle Upper		
12	1	1207699	Gasket, Display	R	
13	1	1208113/001	Card Assembly, Flex Circuit		
14	1	1209901	Housing, Inner Assembly Includes:		
	1	220822-00	Button, Reverser		
	1	167836-00	Spring	R	
15	5	1215449/001	Screw	H	
16	2	1215451/001	Screw	H	
17	1	1215904	Window, Display		
18	1	1226372/001	Switch, Horn	R	
19	1	7573032	Cover, Display		
20	1	171665-00	Button, Rear		
21	1	171734-00	Clamp, Cable		
22	2	171662-00	Retainer		
23	1	10150232-07	Screw	H	
24	1	10150232-02	Screw	H	
25	1	10150120-12	Screw	H	
26	1	10150237-90	Screw	H	
27	1	1226372/002	Switch, Horn	R	


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

Thumb Wheel Assembly

Figure 3-6: Thumb Wheel Assembly

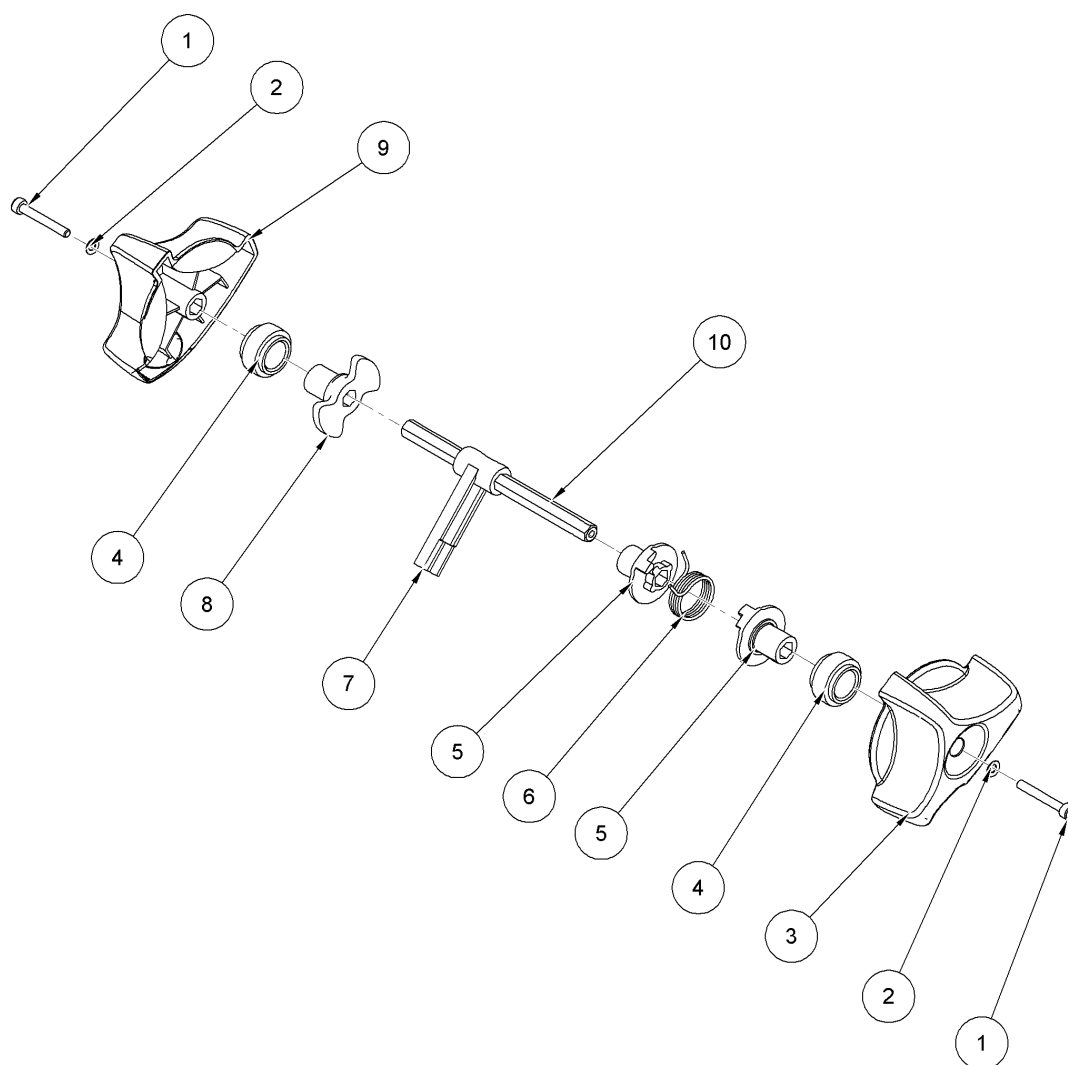

List 3-6: Thumb Wheel Assembly

FIGURE 3-6 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Thumb Wheel Assembly		
		313051-000	Wheel Assembly, Thumb		
1	2	171708	Screw	H	
2	2	171710	Washer	H	
3	1	313050-000	Rocker, Left		
4	2	167846	Bearing	R	
5	2	167844	Support		
6	1	167840	Spring	R	
7	1	167845	Arm		
8	1	167830	Lug, Stop		
9	1	313049-000	Rocker, Right		
10	1	167843	Axle		

Service Type R = Recommended Spare

Service Type H = Hardware

SECTION 4 Drive & Brake

Transmission Installation 4-2


Gearbox Assembly 4-4

Brake Assembly 4-6

Drive Wheel Assembly 4-8

Transmission Installation

Figure 4-1: Transmission Installation

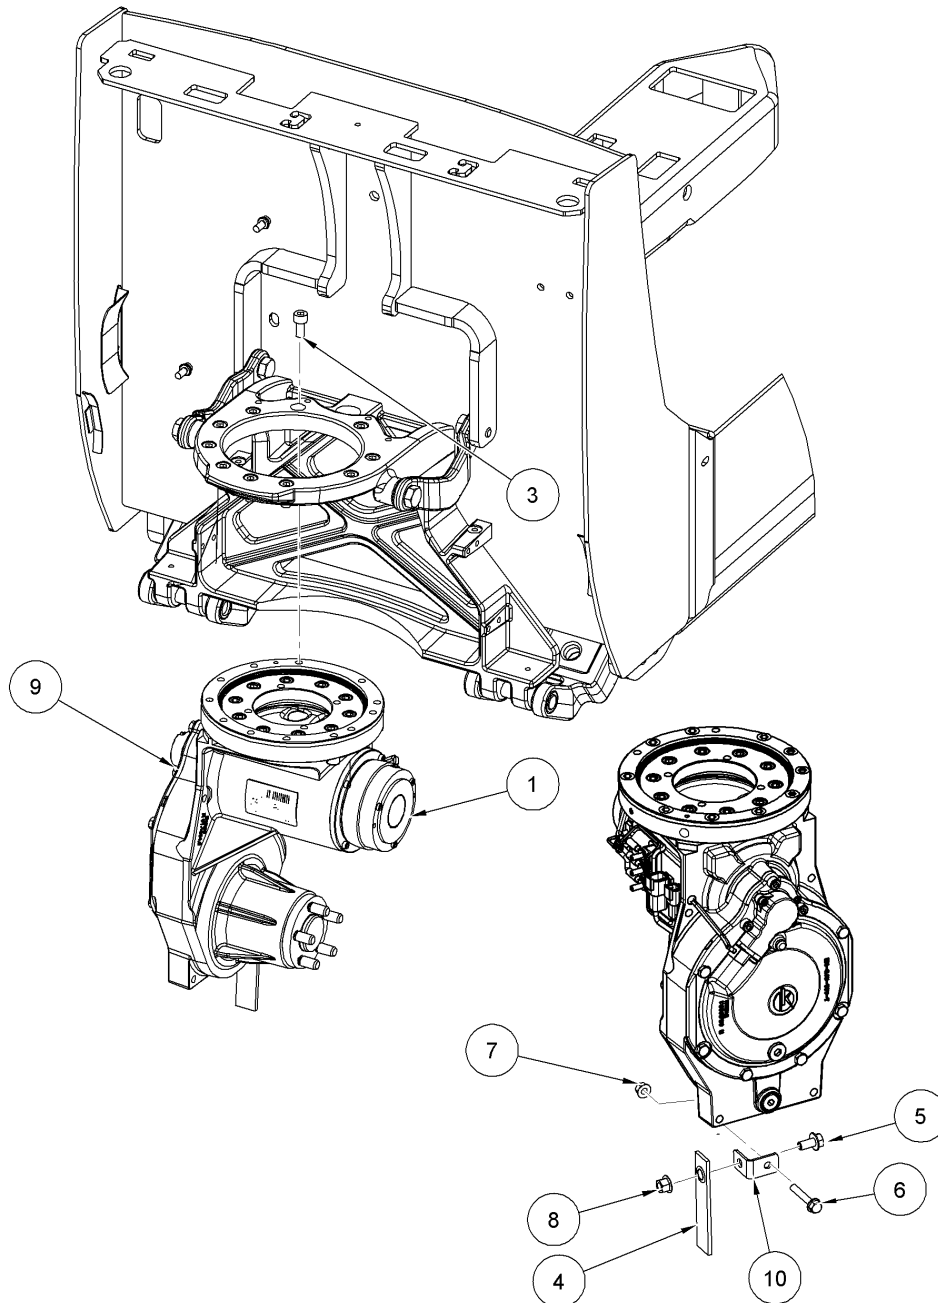

Transmission Installation


List 4-1: Transmission Installation

FIGURE 4-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Transmission Installation		
1	1	1214006/64	Cap, Brake		
3	10	301955-020	Screw	H	
4	1	306241-004	Strap, Static		
5	1	1169616/016	Screw, Flange Head, Hex	H	
6	1	1169616/036	Screw, Flange Head, Hex	H	
7	1	1169843/003	Nut, Hex, Flange Lock	H	
8	1	1169843/004	Nut, Flange, Lock, M10	H	
9	1	Ref.	Drive Unit and Motor Assembly (See 402 and 504A)		
10	1	1201804	Bracket, Static Strap		

Service Type H = Hardware

Gearbox Assembly

Figure 4-2: Gearbox Assembly

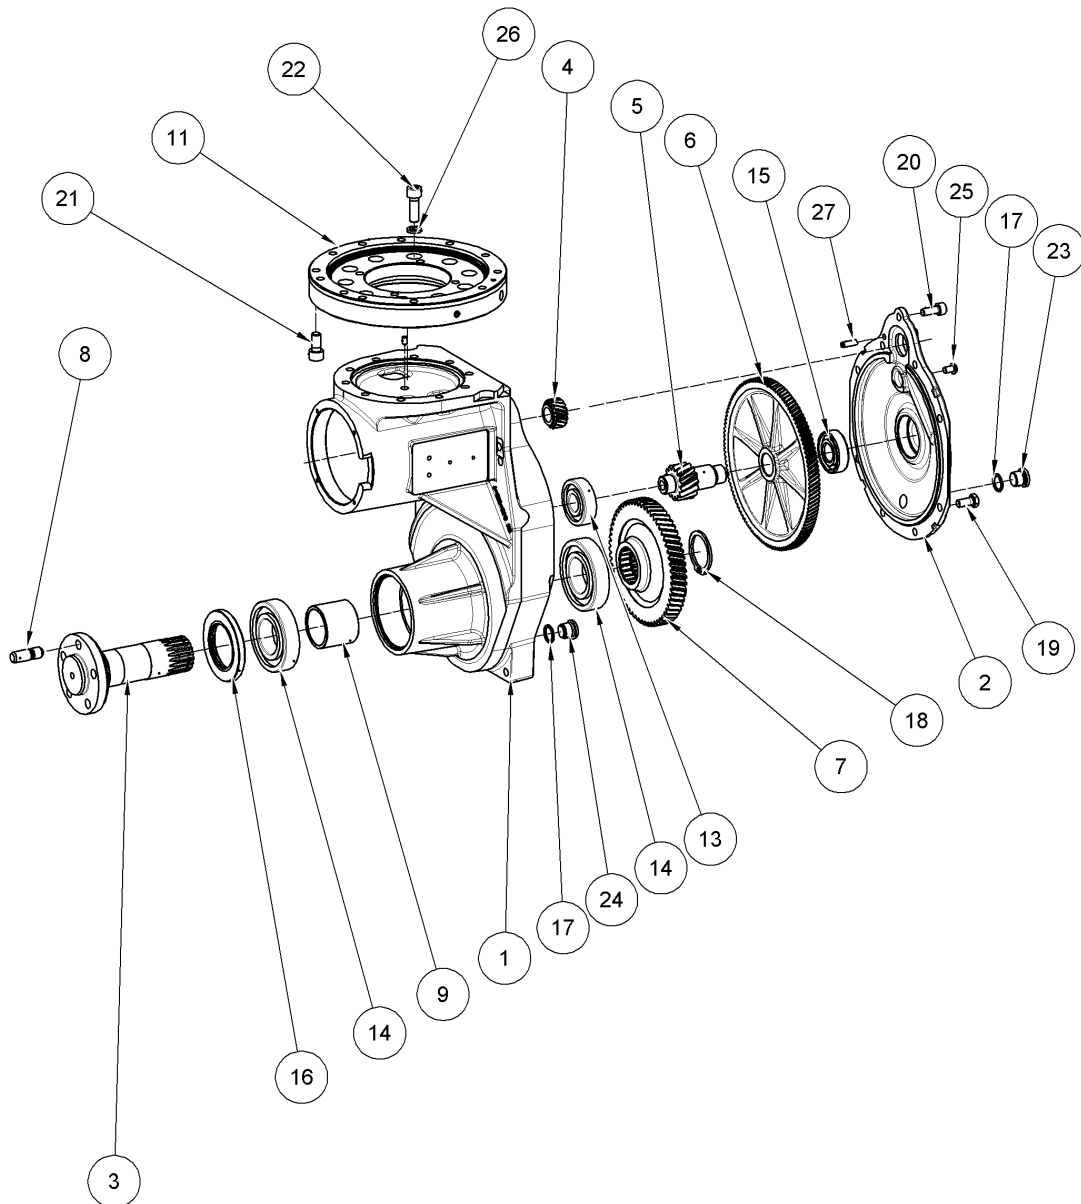

Gearbox Assembly

List 4-2: Gearbox Assembly


FIGURE 4-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Gearbox Assembly		
		1214006	Traction Motor and Gearbox Assembly		
1	1	Ref.	Housing (Not Available)		
2	1	1214006/41	Cover		
3	1	313735-000	Shaft, Flange		
4	1	1214006/42	Pinion		
5	1	1214006/43	Shaft, Pinion		
6	1	1214006/44	Gear		
7	1	1214006/45	Gear		
8	5	313734-000	Stud, Wheel		
9	1	313778-000	Ring, Spacer		
11	1	1214006/49	Bearing, Steer		
13	1	1214006/51	Bearing, Ball	R	
14	2	313737-000	Bearing, Ball	R	
15	1	1214006/53	Bearing, Ball	R	
16	1	313736-000	Seal, Shaft	R	
17	2	313779-000	Seal, Ring	R	
18	1	313782-000	Ring, Retaining		
19	6	1214006/54	Screw, Hex Head	H	
20	3	1214006/55	Screw, Socket Head	H	
21	2	1214006/56	Screw, Socket Head	H	
22	10	1214006/57	Screw, Socket Head	H	
23	1	313785-000	Plug, Fill/Level		
24	1	313780-000	Plug, Drain		
25	1	313786-000	Vent		
26	10	313744-000	Washer, Lock	H	
27	1	1214006/59	Sleeve, Clamp		

Service Type R = Recommended Spare

Service Type H = Hardware

Brake Assembly

Figure 4-3: Brake Assembly

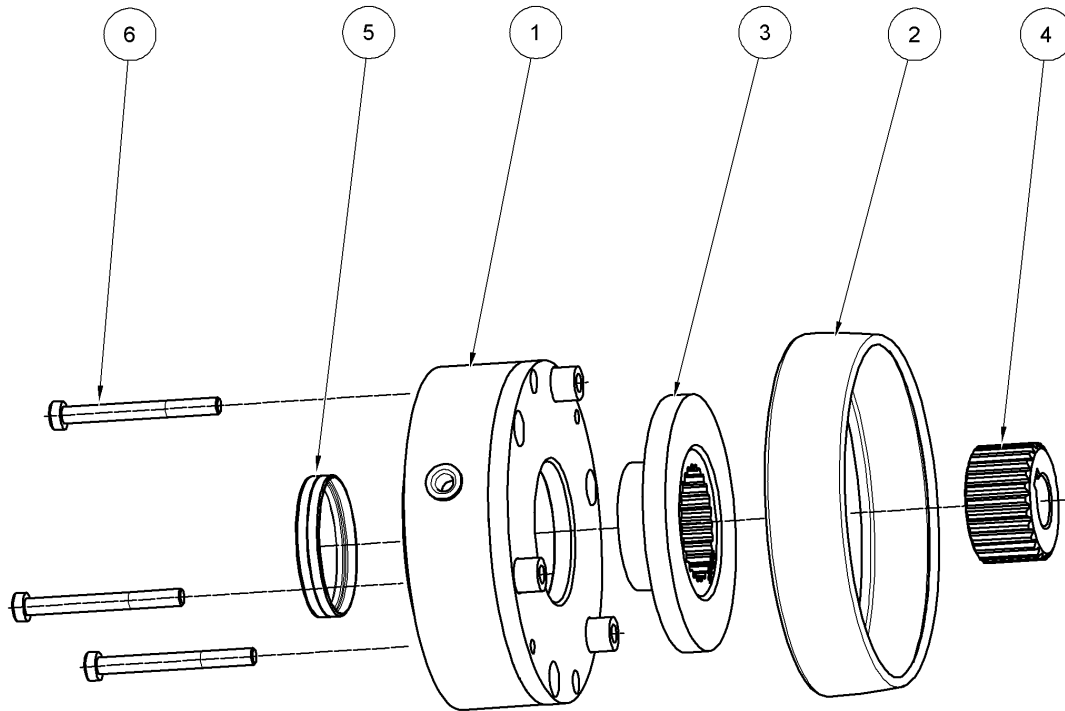

Brake Assembly

List 4-3: Brake Assembly

FIGURE 4-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Brake Assembly		
		1214006	Traction Motor and Gearbox Assembly		
		1214006/60	Brake Assembly	C	
1	1	NSS	Coil, Brake		
2	1	1214006/62	Boot, Brake		
3	1	1214006/61	Rotor, Brake	R	
4	1	1214006/63	Hub, Brake		
5	1	1214006/64	Cap		
6	3	1214006/65	Screw	H	


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

Drive Wheel Assembly

Figure 4-4: Drive Wheel Assembly

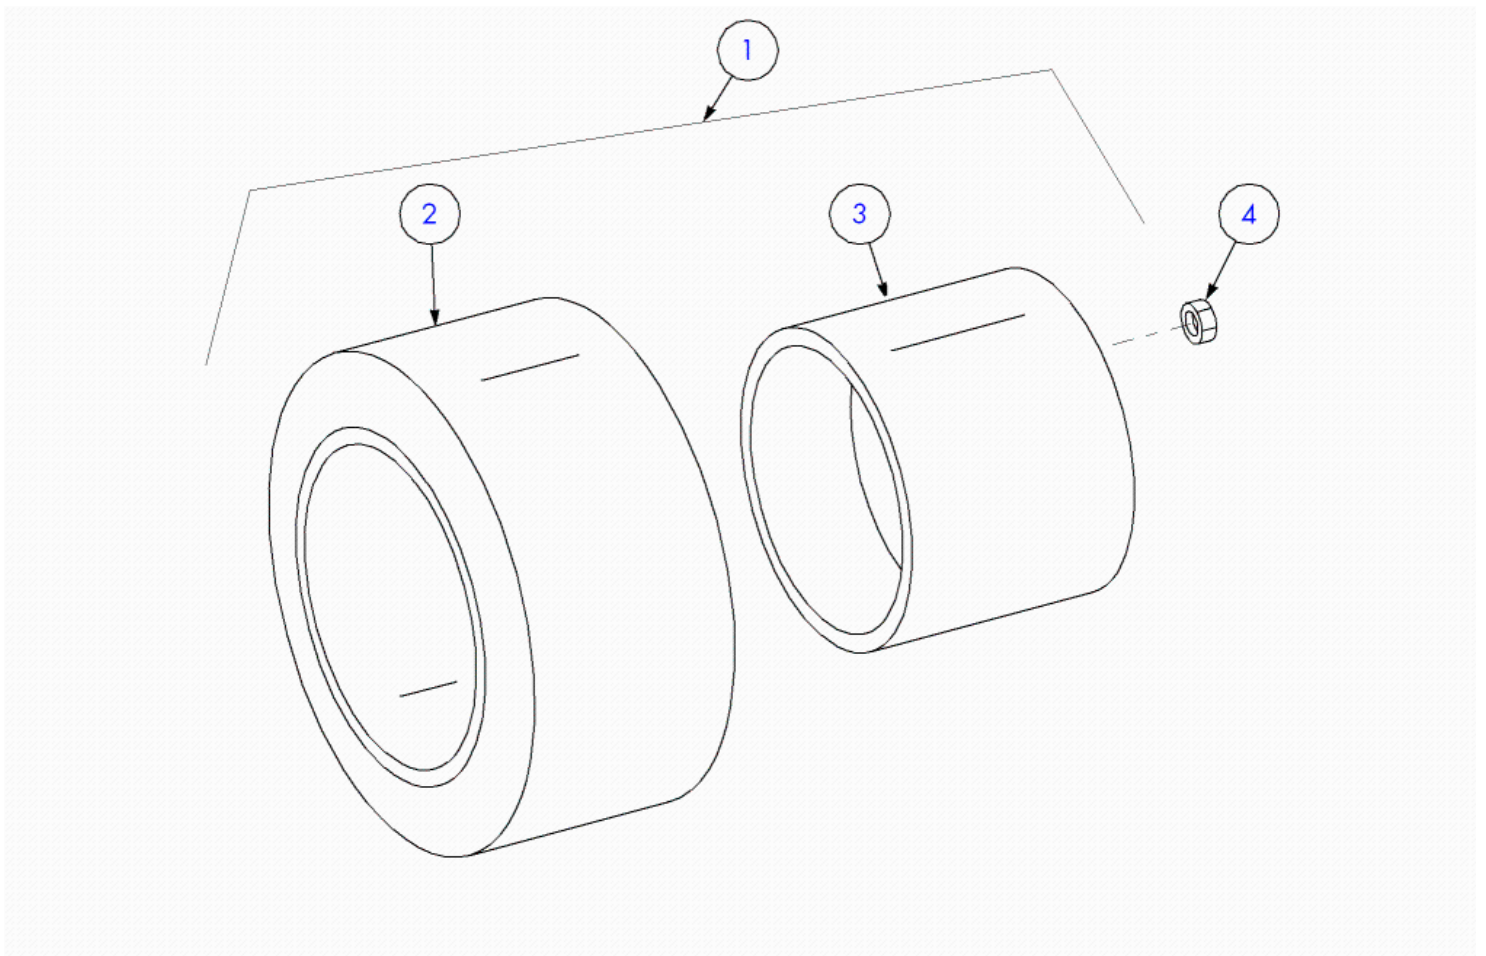

Drive Wheel Assembly

List 4-4: Drive Wheel Assembly

FIGURE 4-4 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Drive Wheel Assembly		
1	1	313054-001	Wheel Assembly, Drive (Smooth Black Rubber)		
	1	313054-002	Wheel Assembly, Drive (Black Poly)		
	1	313054-003	Wheel Assembly, Drive (Red Poly)		
	1	313054-004	Wheel Assembly, Drive (Crowned Vulkollan)		
	1	313054-005	Wheel Assembly, Drive (Non-Marking Rubber)		
	1	313054-006	Wheel Assembly, Drive (Traction Rubber)		
	1	313054-007	Wheel Assembly, Drive (Smooth, Grip, Rubber)	R	
	1	313054-008	Wheel Assembly, Drive (Smoothy)		
2	1	630-235/001	Tire, Drive (Smooth Black Rubber)	R	
	1	630-235/002	Tire, Drive (Non-Marking Rubber)	R	
	1	630-235/201	Tire, Drive (Traction Rubber)	R	
	1	630-235/003	Tire, Drive (Lugged Rubber)	R	
	1	632-089/004	Tire, Drive (Black Poly, Crowned)	R	
	1	632-090/001	Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	R	
	1	632-090/008	Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	R	
	1	632-090/018	Tire, Drive (Black Poly)	R	
3	1	312895-000	Hub		
4	5	313046-000	Nut, Lug	H	

Service Type R = Recommended Spare

Service Type H = Hardware

RAYMOND

SECTION 5 Electrical Comp. & System

Electrical System 5-2

Contactor Panel Standard 5-4

Contactor Panel Cold Storage 5-7

Contactor Assembly 5-11

Drive Motor Assembly 5-13


Battery Pack Assembly 5-16

EnerSys NexSys - Battery & Charger 5-22

Start Switch Installation 5-24

Electrical System

Figure 5-1: Electrical System

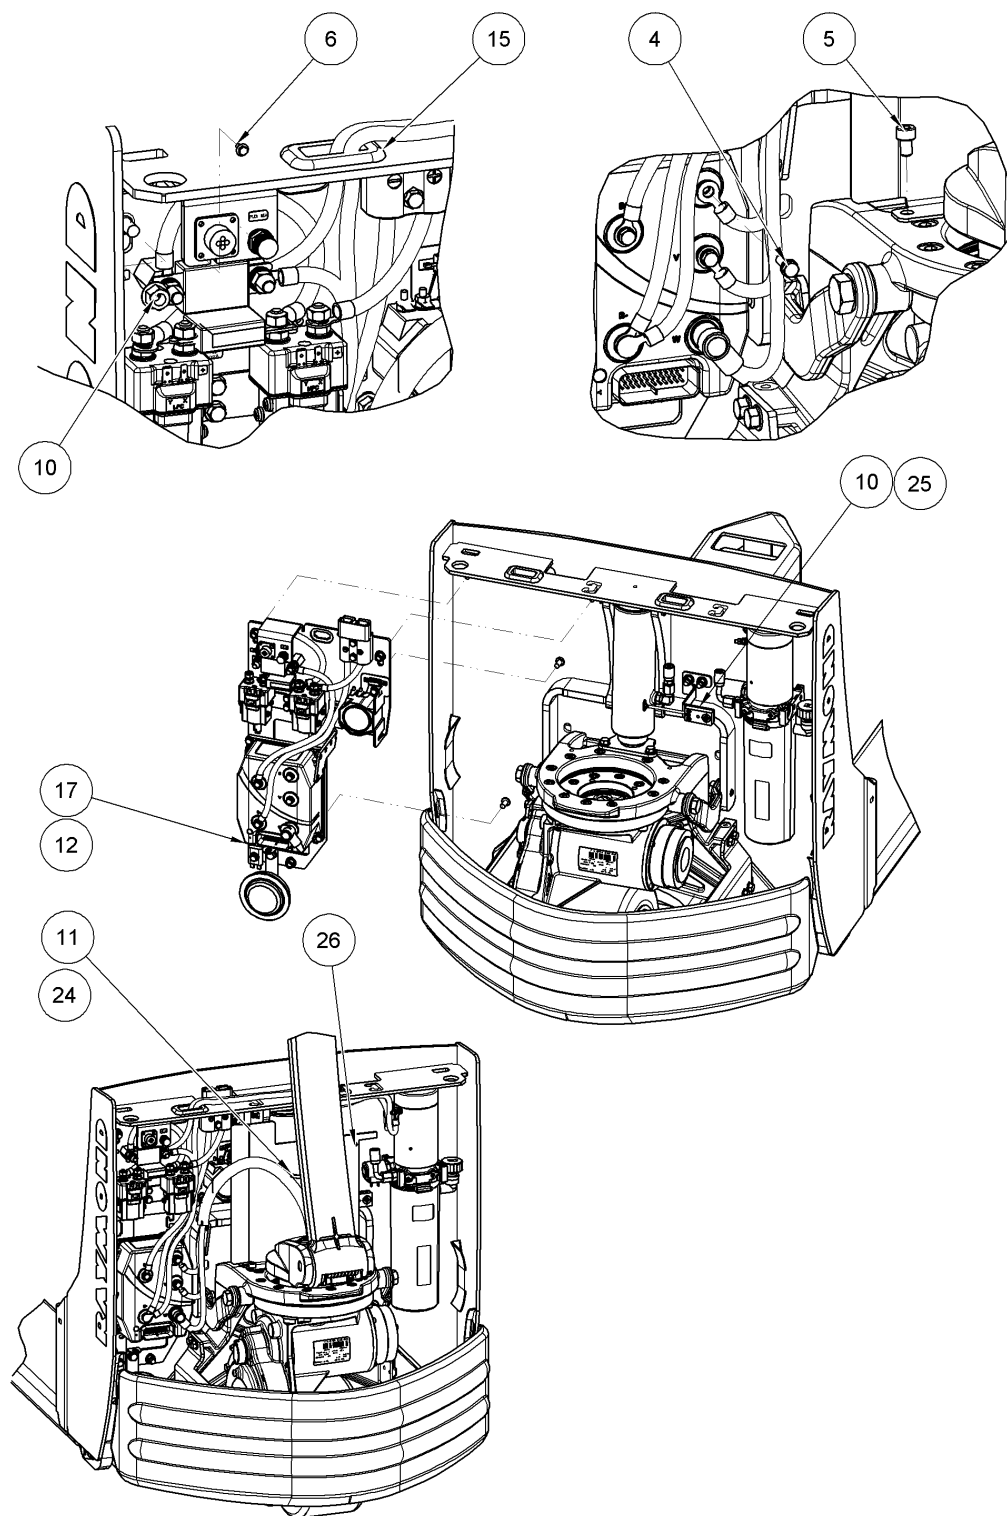

Electrical System

List 5-1: Electrical System


FIGURE 5-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Electrical System		
1	6	611-028	Strap		
4	3	1212116/001	Screw	H	
5	2	5-002-506	Screw, Socket Head, Cap	H	
6	2	5-003-502	Screw	H	
7	1	1226758/001	Harness, Wiring, Main (Not Shown)		
8	1	1155996/006	Wire Assembly, Single LPC2 to MP(RD) (Not Shown)		
9	1	1155996/007	Wire Assembly, Single TAB- to MP(BL) (Not Shown)		
10	4	1169843/003	Nut, Hex, Flange Lock	H	
11	1	1219872/001	Clamp, U Type		
12	1	Ref.	Contactor Panel, Standard (See 502)		
13	1	1196016	Bracket, Harness Routing		
14	3	1202195	Washer, Serrated Conical	H	
15	2	1202536	Grommet		
17	1	Ref.	Contactor Panel, Cold Storage (See 503)		
24	2	1169615/505	Screw	H	
25	1	1245054	Sensor Assembly, Proximity	R	
26	1	1252203	Bracket, Harness		

Service Type R = Recommended Spare

Service Type H = Hardware


Contactor Panel Standard

Figure 5-2.a: Contactor Panel Standard

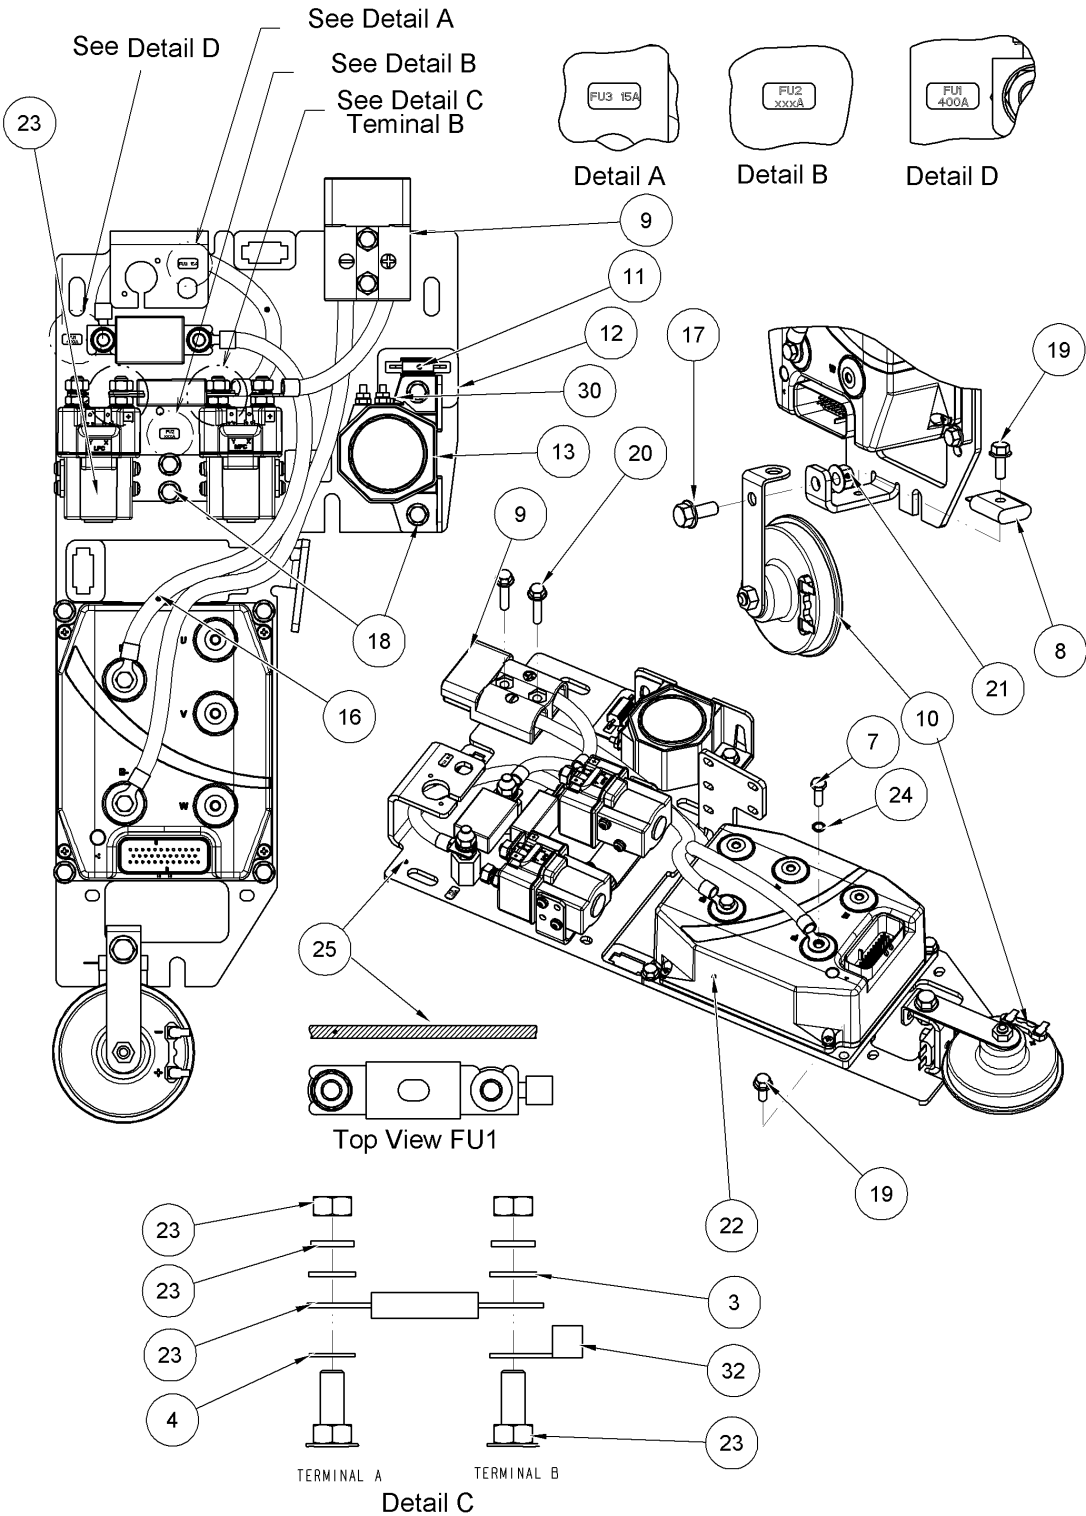

Contactor Panel Standard

Figure 5-2.b: Contactor Panel Standard

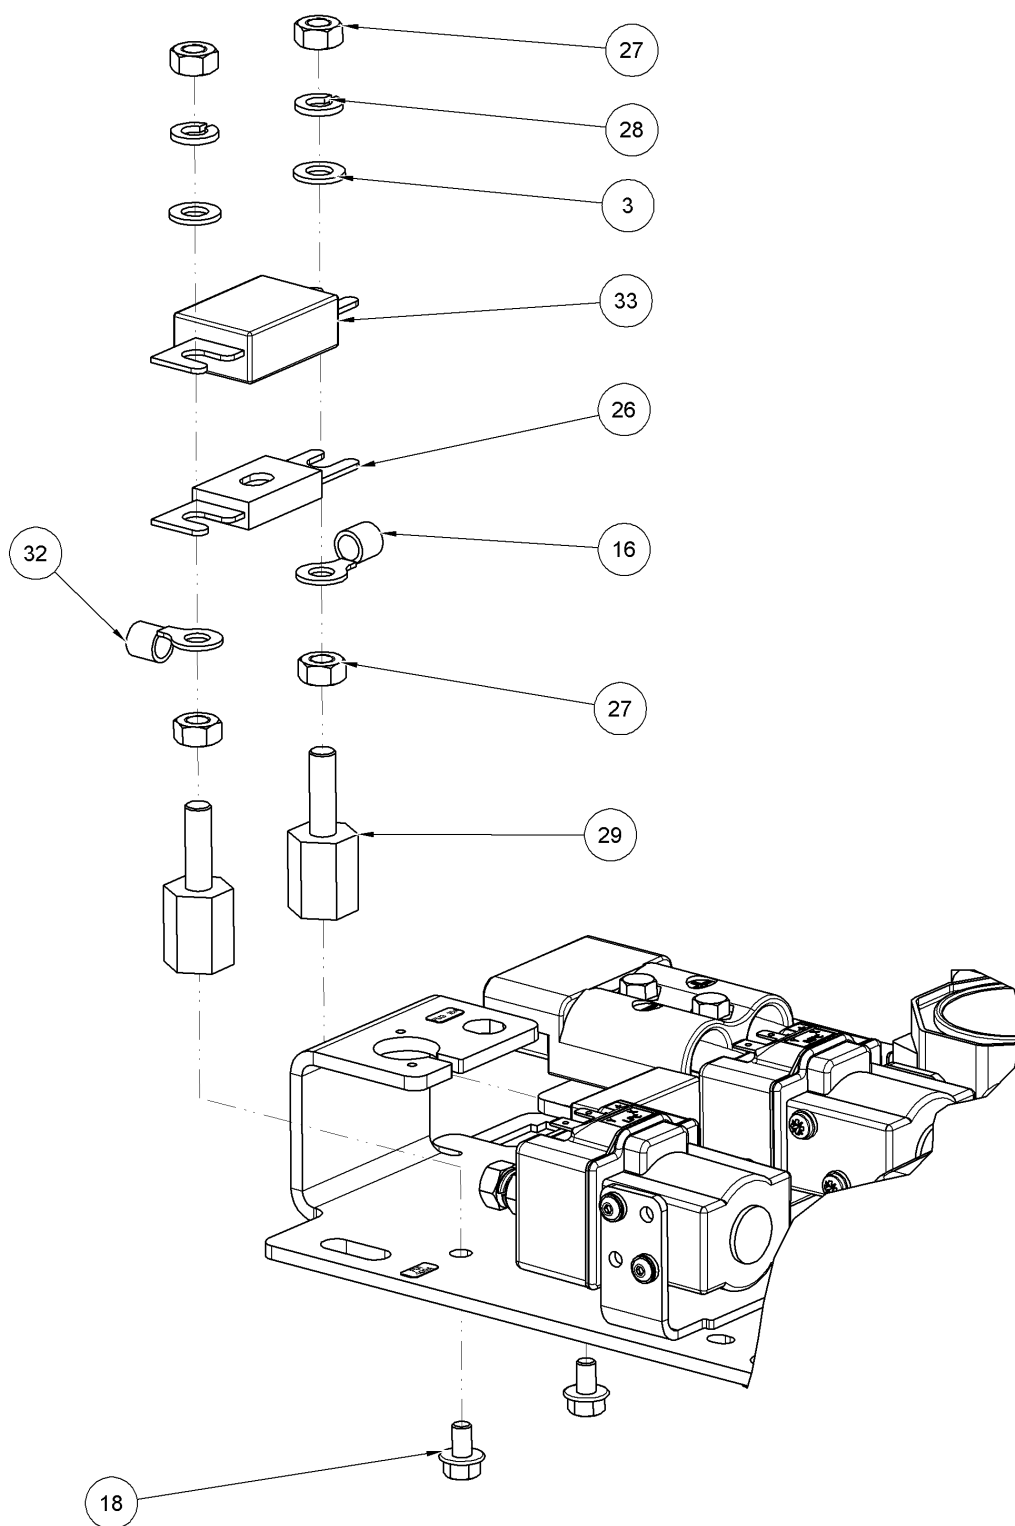

List 5-2: Contactor Panel Standard

FIGURE 5-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Contactor Panel Standard		
		1227719	Battery Connector Assembly		
1	2	411-421/001	Decal, Label		
2	6	611-028	Strap		
3	2	5-018-006	Washer, Flat	H	
4	1	7-775-108	Washer, Flat, Brass	H	
7	2	5-001-003	Screw	H	
8	1	1107328	Resistor	R	
9	1	49854-01	Connector, Battery, Gray	R	
	1	49854-04	Connector, Battery, Red	R	
	1	1155996/004	Wire Assembly, Single, Battery +		
	1	1155996/005	Wire Assembly, Single, Battery -		
10	1	1047433/001	Horn Assembly		
11	1	1056002/001	Resistor Assembly	R	A
12	1	1078465	Retainer, Resistor		A
13	1	1047433/002	Horn	R	A
16	1	1155996/008	Wire Assembly, Single		
17	1	1169616/012	Screw, Flange Head, Hex	H	
18	1	1169616/502	Screw, Flange Head	H	
19	4	1169616/504	Screw, Flange Head	H	
20	2	1169616/507	Screw, Flange Head, Hex	H	
21	1	1169843/003	Nut, Hex, Flange Lock	H	
22	1	1217319	Controller, Motor	C	
23	1	Ref.	Contactor Assembly (See 504)		
24	2	1202195	Washer	H	
25	1	1213575	Panel		
26	1	590-587/118	Fuse (400 Amp)	R	
27	4	5-015-005	Nut	H	
28	2	5-019-006	Washer, Lock	H	
29	2	7-861-002/003	Insulator, Standoff		
30	2	49771-01	Terminal		
32	1	1155996/011	Wire, Single Assembly		
33	1	1213821/400	Fuse, Potted	R	

A = Optional Travel Alarm


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware


Contactor Panel Cold Storage

Figure 5-3.a: Contactor Panel Cold Storage

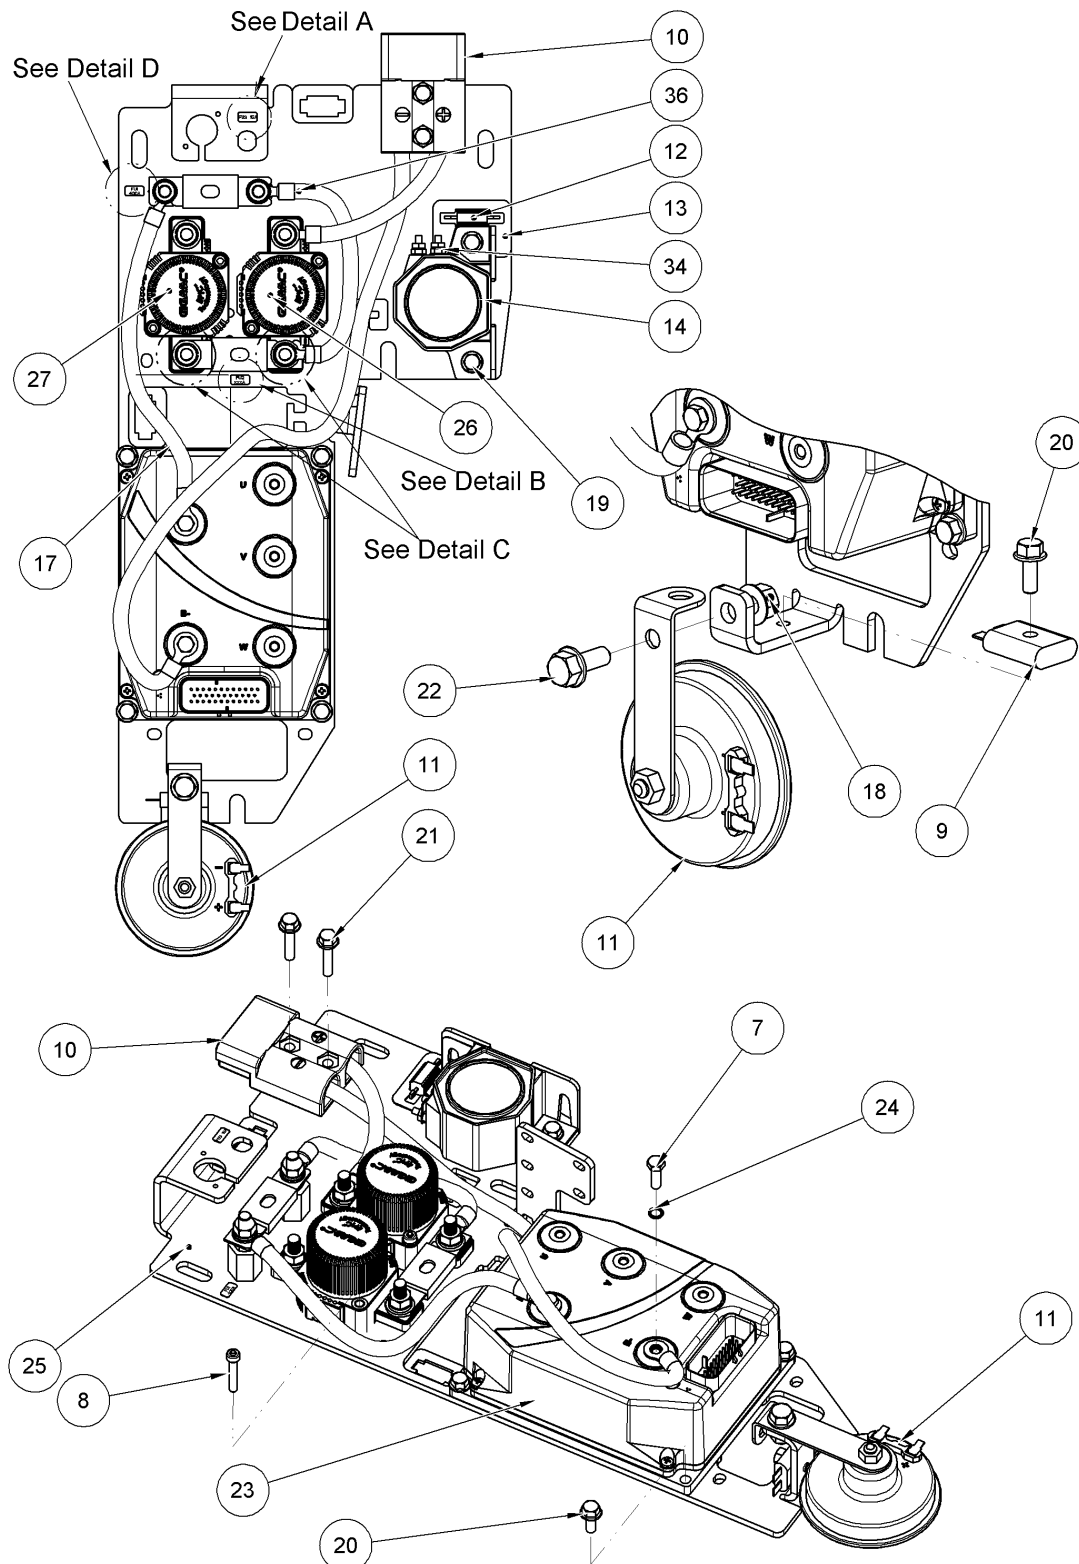

Contactor Panel Cold Storage

Figure 5-3.b: Contactor Panel Cold Storage

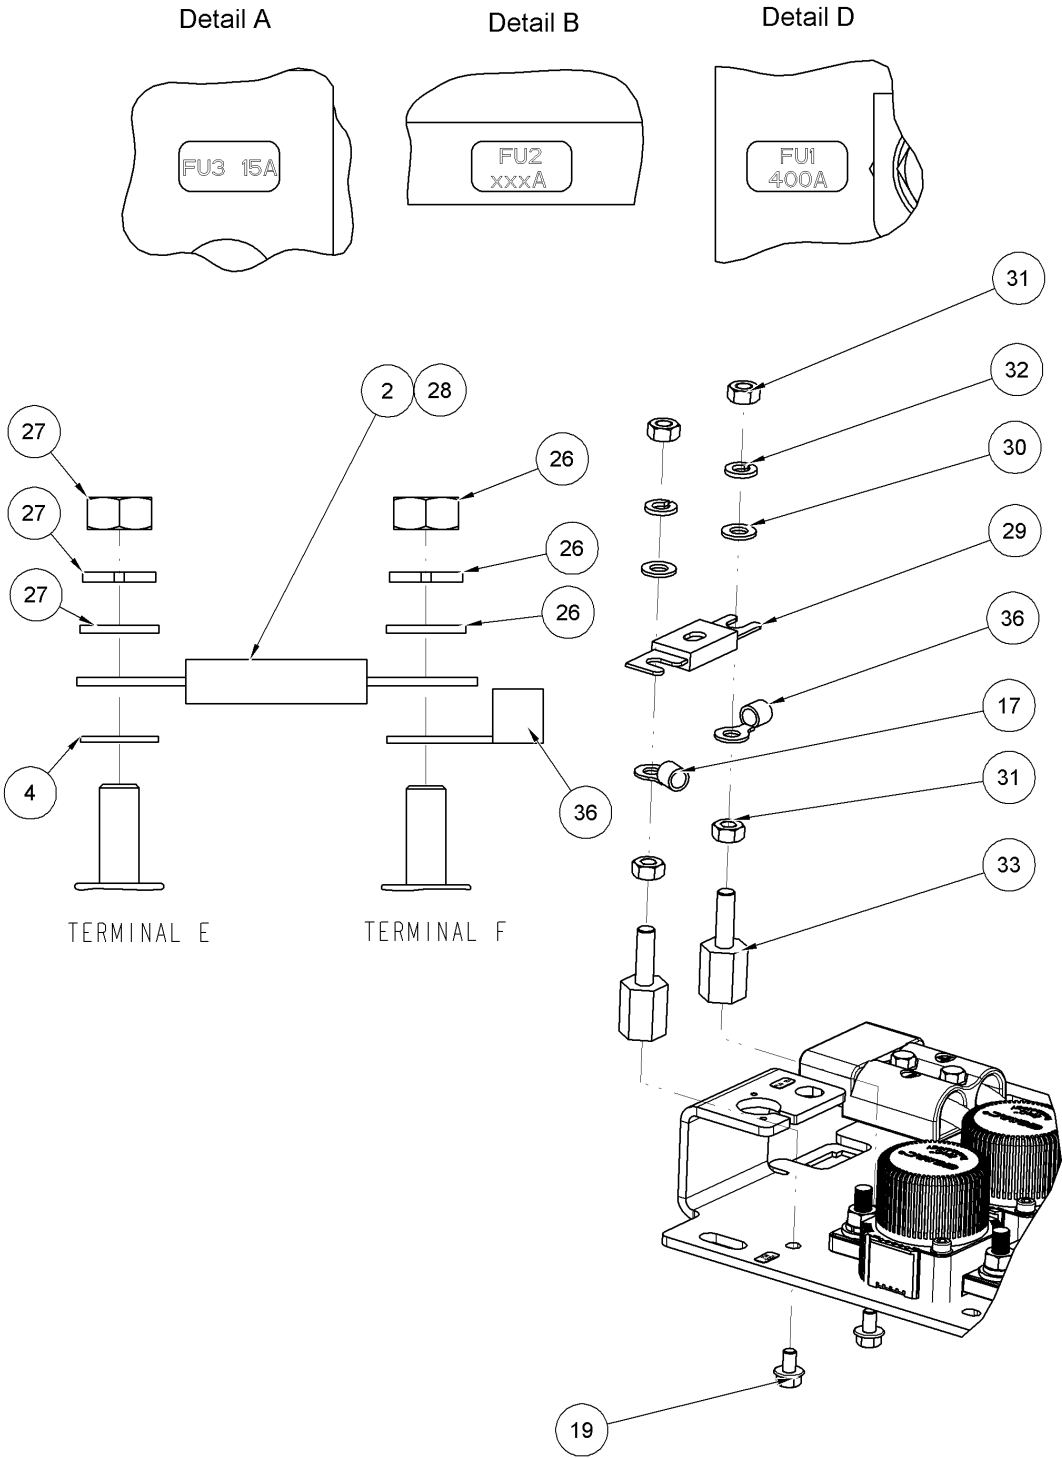

Contactor Panel Cold Storage

List 5-3: Contactor Panel Cold Storage (Sheet 1 of 2)

FIGURE 5-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Contactor Panel Cold Storage		
1	2	411-421/001	Decal, Label		
2	1	590-587/107	Fuse (125 Amp)	R	
3	6	611-028	Strap		
4	1	7-775-108	Washer, Flat, Brass	H	
7	2	5-001-003	Screw	H	
8	4	5-002-573	Screw	H	
9	1	1107328	Resistor	R	
10	1	49854-01	Connector, Battery, Gray	R	
	1	49854-04	Connector, Battery, Red	R	
	1	1155996/004	Wire Assembly, Single, Battery +		
	1	1155996/005	Wire Assembly, Single, Battery -		
11	1	1047433/001	Horn Assembly		
12	1	1056002/001	Resistor Assembly	R	A
13	1	1078465	Retainer, Resistor		A
14	1	1047433/002	Horn	R	A
17	1	1155996/012	Wire Assembly, Single		
18	1	1169843/003	Nut, Hex, Flange Lock	H	
	1	1157843/001	Wire, Single Assembly		
19	1	1169616/502	Screw, Flange Head	H	
20	4	1169616/504	Screw, Flange Head	H	
21	2	1169616/507	Screw, Flange Head, Hex	H	
22	1	1169616/012	Screw, Flange Head, Hex	H	
23	1	1217319	Controller, Motor	C	
24	2	1202195	Washer	H	
25	1	1213575	Panel		
26	1	1205262	Contactor Assembly Main	C	
27	1	1224300	Contactor Assembly Lift	C	
28	1	590-587/117	Fuse (350 Amp)	R	
29	1	590-587/118	Fuse (400 Amp)	R	
30	2	5-018-006	Washer, Flat	H	
31	4	5-015-005	Nut	H	
32	2	5-019-006	Washer, Lock	H	
33	2	7-861-002/003	Insulator, Standoff		
34	2	49771-01	Terminal		

A = Optional Travel Alarm

Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

List 5-3: Contactor Panel Cold Storage (Sheet 2 of 2)

FIGURE 5-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
36	1	1155996/013	Wire Assembly, Single		

A = Optional Travel Alarm


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

Contactor Assembly

Figure 5-4: Contactor Assembly

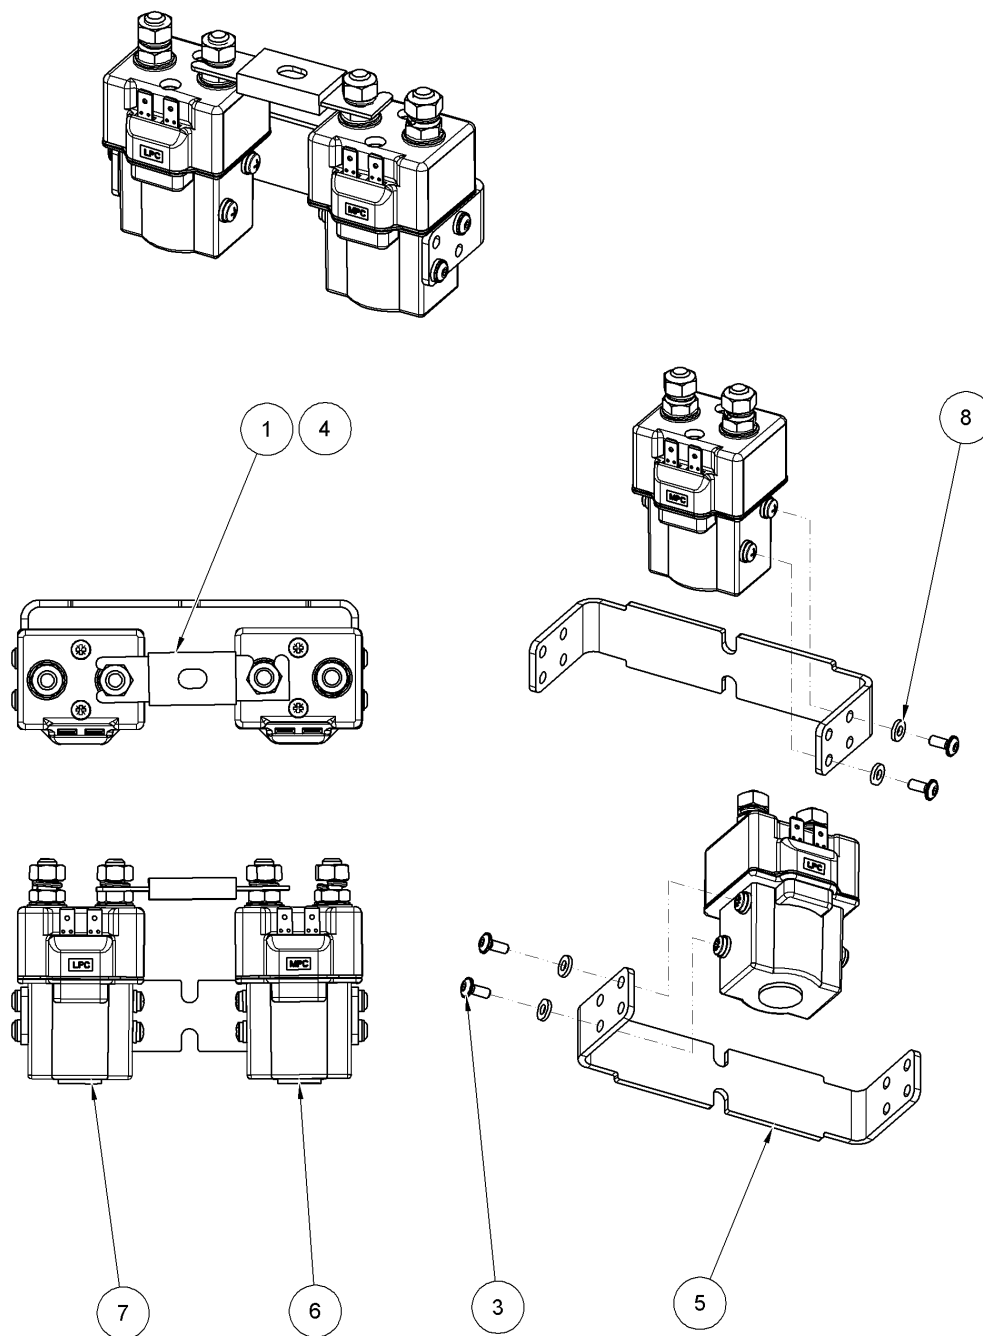

List 5-4: Contactor Assembly

FIGURE 5-4 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Contactor Assembly		
1	1	590-587/107	Fuse (125 Amp)	R	
3	4	5-007-509	Screw	H	
	4	5-007-508	Screw	H	
4	1	121381/125	Fuse, Potted (125 Amp) EE	R	
5	1	1199157	Bracket, Contactor		
6	1	1199318	Contactor Main	C	
7	1	1199319	Contactor Pump	C	
8	4	5-018-003	Washer, Flat	H	


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

Drive Motor Assembly

Figure 5-4A: Drive Motor Assembly

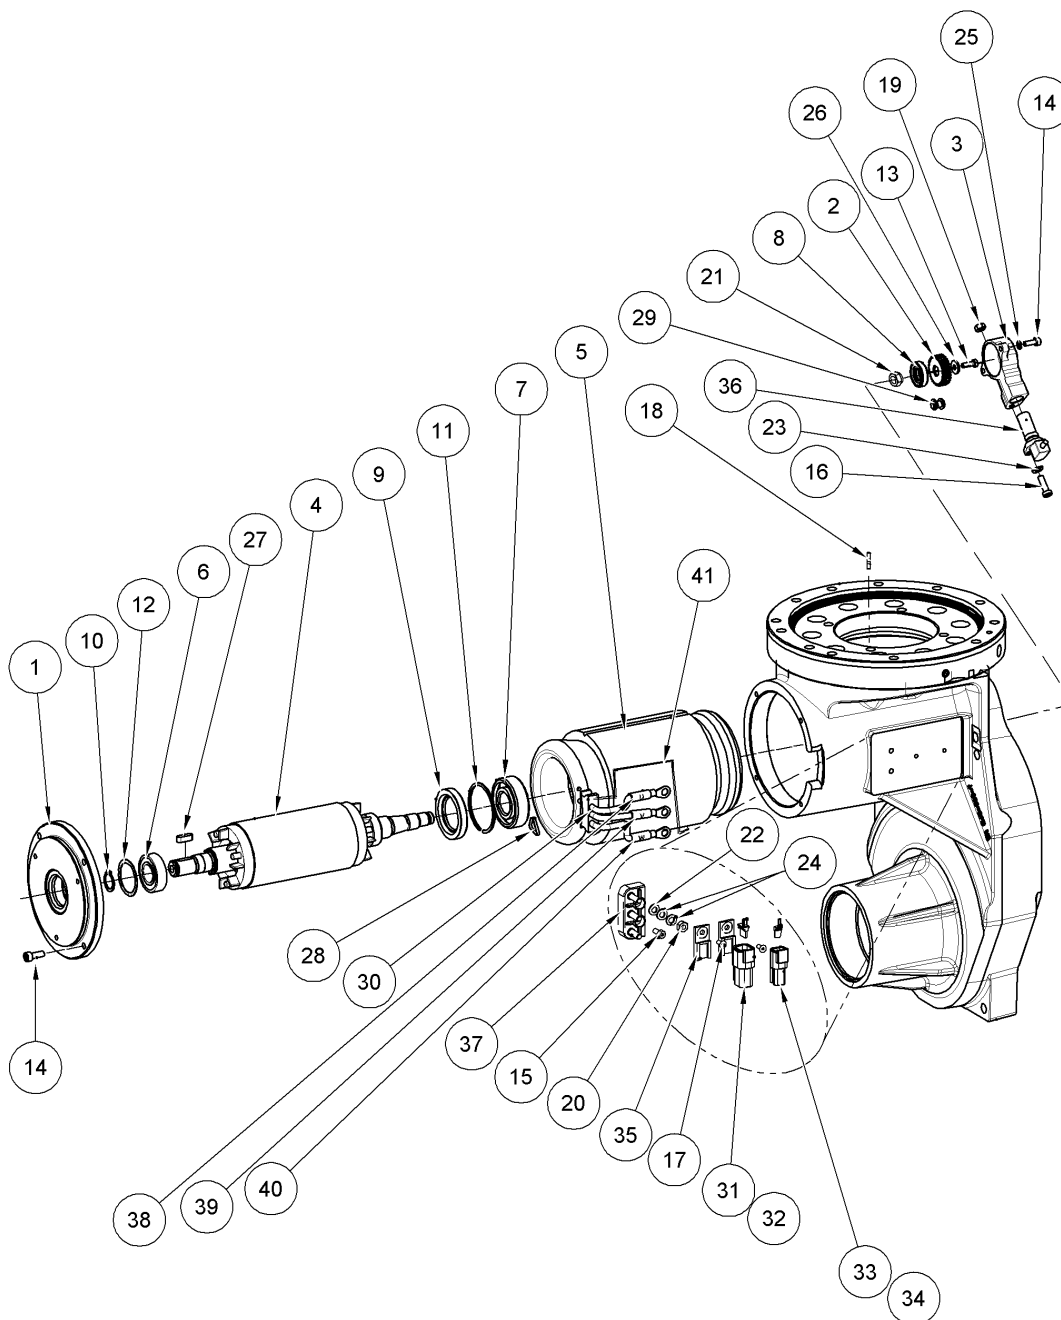

List 5-4A: Drive Motor Assembly (Sheet 1 of 2)

FIGURE 5-4A ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Drive Motor Assembly		
1	1	1214006/01	Cover, Motor		
2	1	1214006/02	Pinion, Speed Sensor		
3	1	1214006/03	Cover, Speed Sensor		
4	1	1214006/04	Rotor		
5	1	Ref.	Stator (Not Available)		
6	1	313768-000	Bearing, Ball	R	
7	1	1214006/06	Bearing, Ball	R	
8	1	1214006/07	Seal, Shaft	R	
9	1	313756-000	Seal, Shaft	R	
10	1	313759-000	Ring, Retaining		
11	1	313755-000	Ring, Retaining		
12	1	1214006/08	Spacer		
13	1	1214006/09	Screw, Hex Head	H	
14	6	1214006/10	Screw, Socket Head	H	
15	2	1214006/11	Screw, Socket Head	H	
16	1	1214006/12	Screw, Socket Head	H	
17	2	1214006/13	Screw	H	
18	1	1214006/14	Pin, Threaded		
19	1	1214006/15	Nut	H	
20	3	1214006/16	Nut	H	
21	1	1214006/17	Nut, Lock	H	
22	6	1214006/18	Washer	H	
23	1	1214006/19	Washer	H	
24	3	1214006/20	Washer, Lock	H	
25	2	1214006/21	Washer, Lock	H	
26	1	1214006/22	Washer	H	
27	1	313758-000	Key		
28	1	1032103/001	Strap		
29	1	1214006/25	Grommet		
30	1	1214006/26	Strip, Sealing		
31	1	1214006/27	Plug		
32	1	1214006/28	Wedgelocks		
33	1	1214006/29	Plug		
34	1	1214006/30	Wedgelocks		
35	2	1214006/31	Connector		
36	1	1214006/32	Sensor, Speed	R	

Service Type R = Recommended Spare

Service Type H = Hardware

Drive Motor Assembly

List 5-4A: Drive Motor Assembly (Sheet 2 of 2)


FIGURE 5-4A ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
37	1	1214006/33	Board, Terminal		
38	1	1214006/34	Label, U		
39	1	1214006/35	Label, V		
40	1	1214006/36	Label, W		
41	1	1214006/37	Sleeve, Insulating		
42	1	1214006/66	Sensor, Temperature	R	

Service Type R = Recommended Spare

Service Type H = Hardware


Battery Pack Assembly

Figure 5-5.a: Battery Pack Assembly

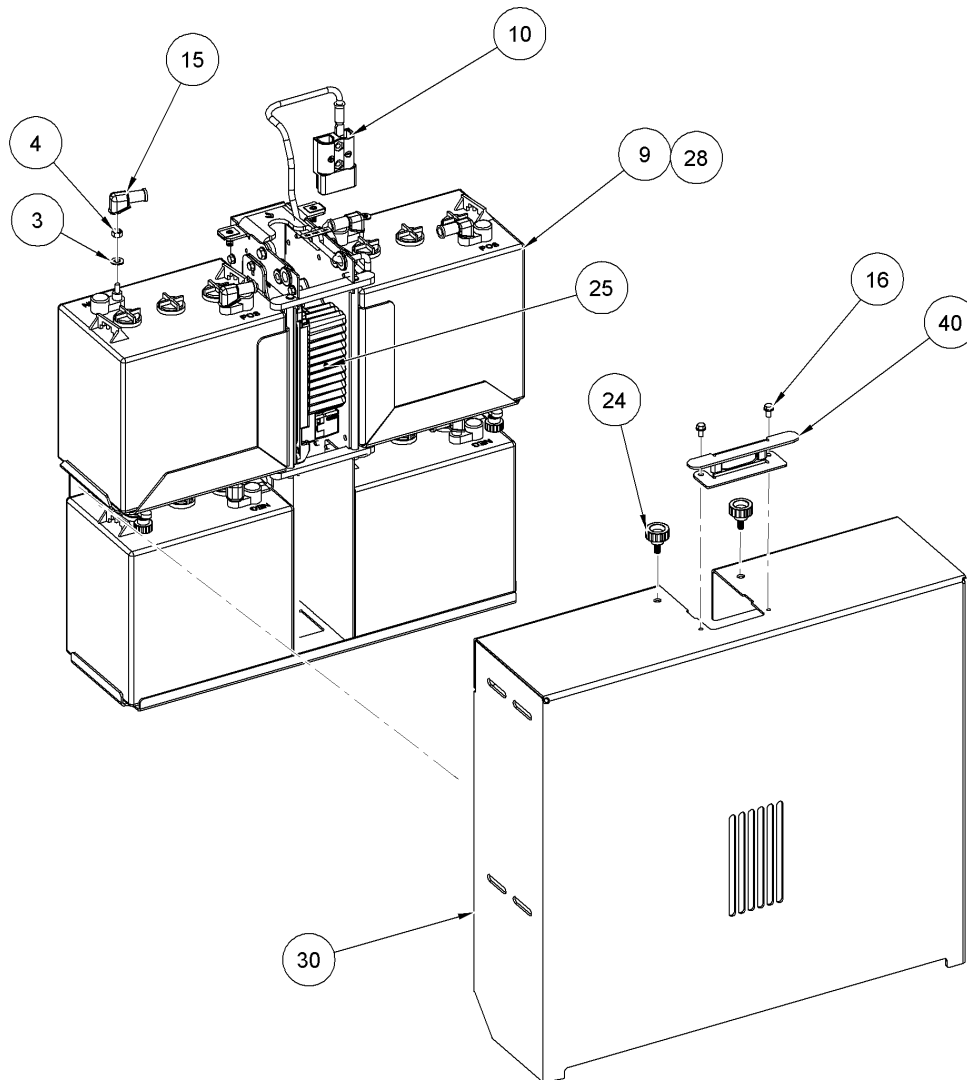


Battery Pack Assembly

Figure 5-5.b: Battery Pack Assembly

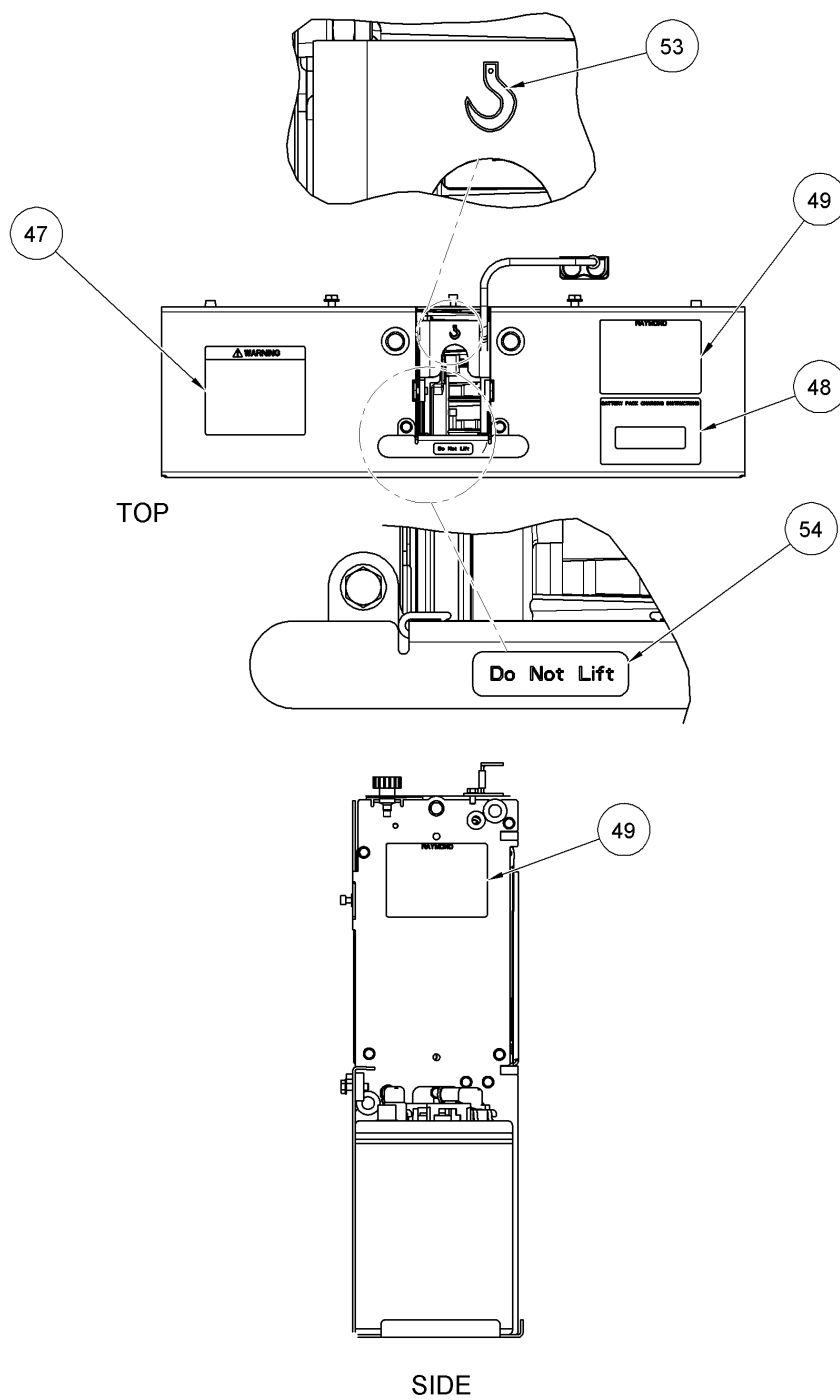


Battery Pack Assembly

Figure 5-5.c: Battery Pack Assembly

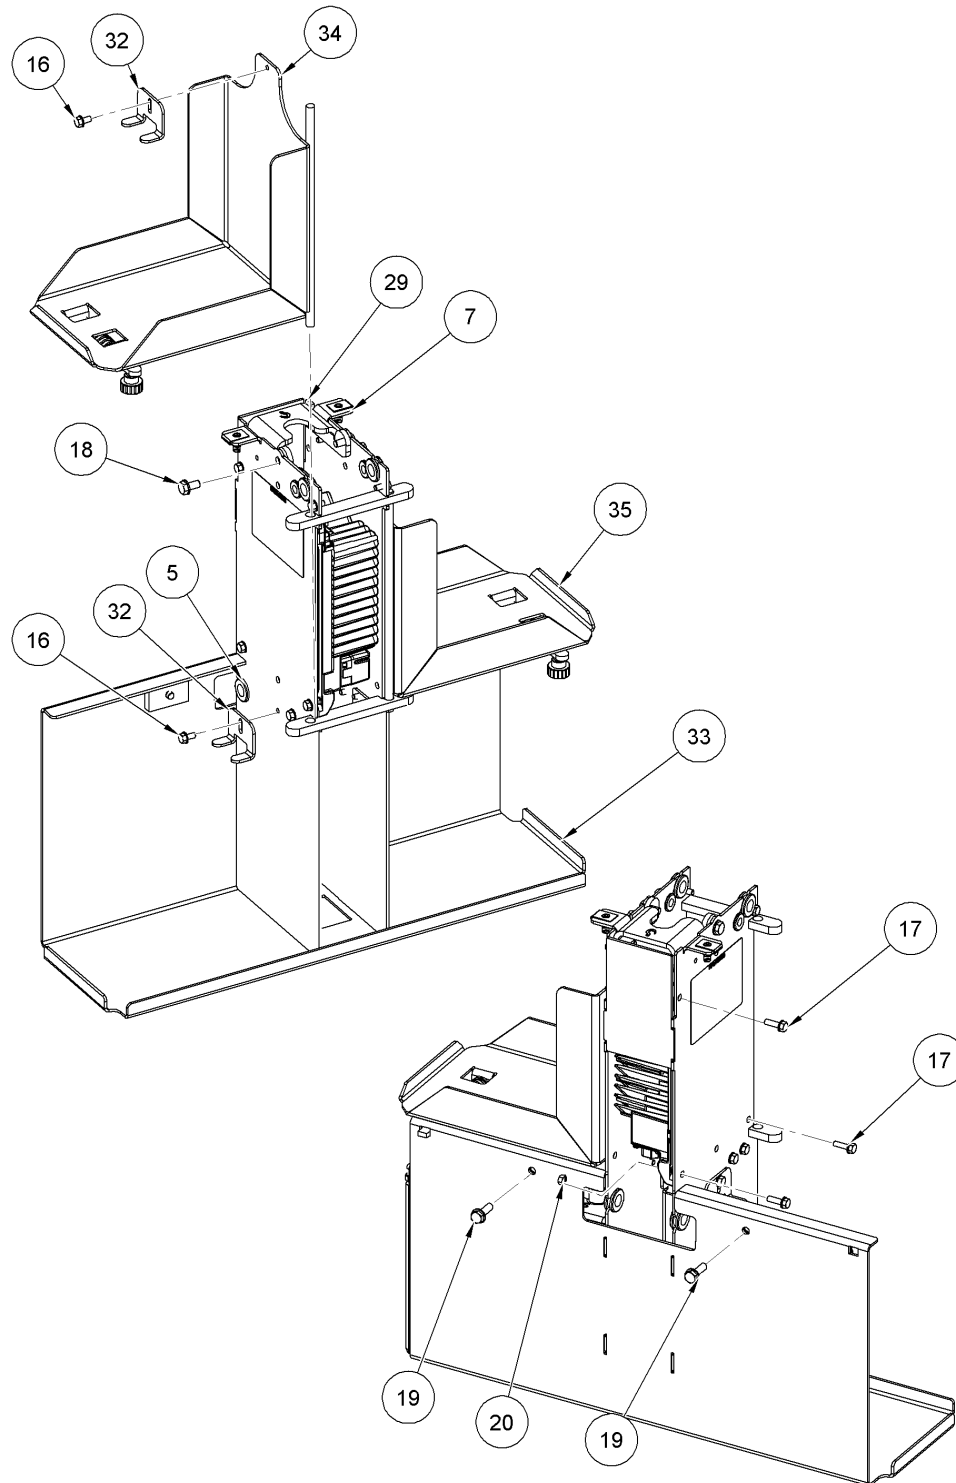

Battery Pack Assembly

Figure 5-5.d: Battery Pack Assembly

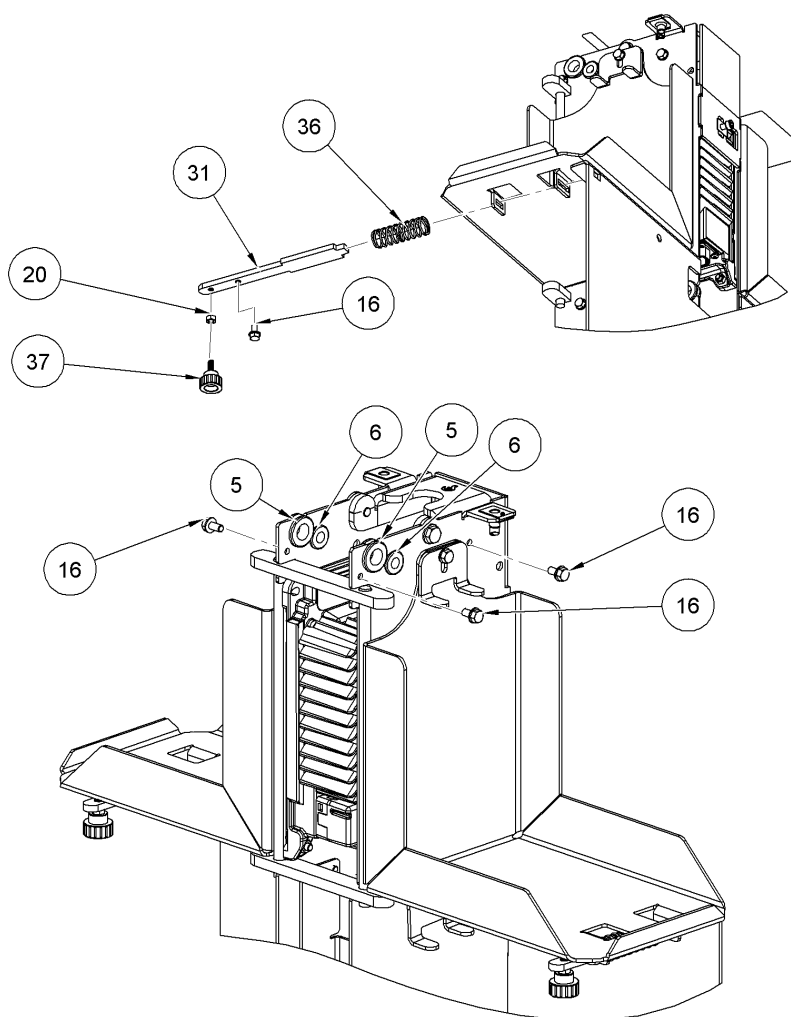

List 5-5: Battery Pack Assembly (Sheet 1 of 2)

FIGURE 5-5 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Battery Pack Assembly		
		1202787/001	Battery Pack Assembly, With No Battery	C	A
		1202787/003	Battery Pack Assembly, With Wet Cell Battery	C	B
		1202787/005	Battery Pack Assembly, With AGM Battery	C	C
2	2	5-002-573	Screw	H	
3	8	11016-02	Washer	H	
4	8	750-013	Nut	H	
5	4	11813-07	Grommet, Rubber		
6	2	11813-08	Grommet, Rubber		
7	2	2393833	Nut, Clip		
8	6	25332-01	Strap		
9	4	27234-00	Battery, Wet Cell	R	B
10	1	49854-04	Connector, Battery, Red	R	
11	1	313649-016	Cable Assembly, B-		
12	1	313649-015	Cable Assembly, B+		
15	8	301253-000	Boot		
16	15	301826-012	Screw	H	
17	3	301826-020	Screw	H	
18	2	301827-016	Screw, Flange Head, Thread Forming	H	
19	2	301827-025	Screw	H	
20	5	301960-006	Nut	H	
21	1	313225-004	Cable Assembly (660 Millimeter)		
22	1	313225-005	Cable Assembly (790 Millimeter)		
24	2	1123277	Knob		
25	1	1190648/001	Charger, Battery	C	
26	1	1192068	Thermistor Assembly		
27	1	1192069	Harness, Interface		
28	4	1192540	Battery, AGM	R	C
29	1	1198905/001	Plate		
30	1	1199328/001	Plate		
31	2	1200061/001	Bar, Latch		
32	4	1200074/001	Bracket, Battery		
33	1	1200332/001	Bracket		

A = No Battery

B = With Wet Cell Battery

C = With AGM Battery (Maintenance Free)

Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

Battery Pack Assembly

List 5-5: Battery Pack Assembly (Sheet 2 of 2)

FIGURE 5-5 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
34	1	1202107/001	Bracket Weldment		
35	1	1202108/001	Bracket Weldment		
36	2	1202810/001	Spring, Compression		
37	2	1202811	Knob		
38	1	1190648/01	Cord, Power, 2 Meter (Not Shown)		
	1	1190648/02	Cord, Power, 3 Meter (Not Shown)		
40	1	1206684	Bracket, Cord Assembly		
47	1	1205924	Decal, Warning		
48	1	1205926	Decal, Warning Label		
49	1	1205927/001	Decal, Label		A
	1	1205927/002	Decal, Label		B
	1	1205927/003	Decal, Label		C
53	1	1217496	Decal		
54	1	1217497	Decal		

A = No Battery

B = With Wet Cell Battery

C = With AGM Battery (Maintenance Free)


Service Type R = Recommended Spare

Service Type C = Critical Part

Service Type H = Hardware

EnerSys NexSys - Battery & Charger

Figure 5-5A: EnerSys NexSys - Battery & Charger

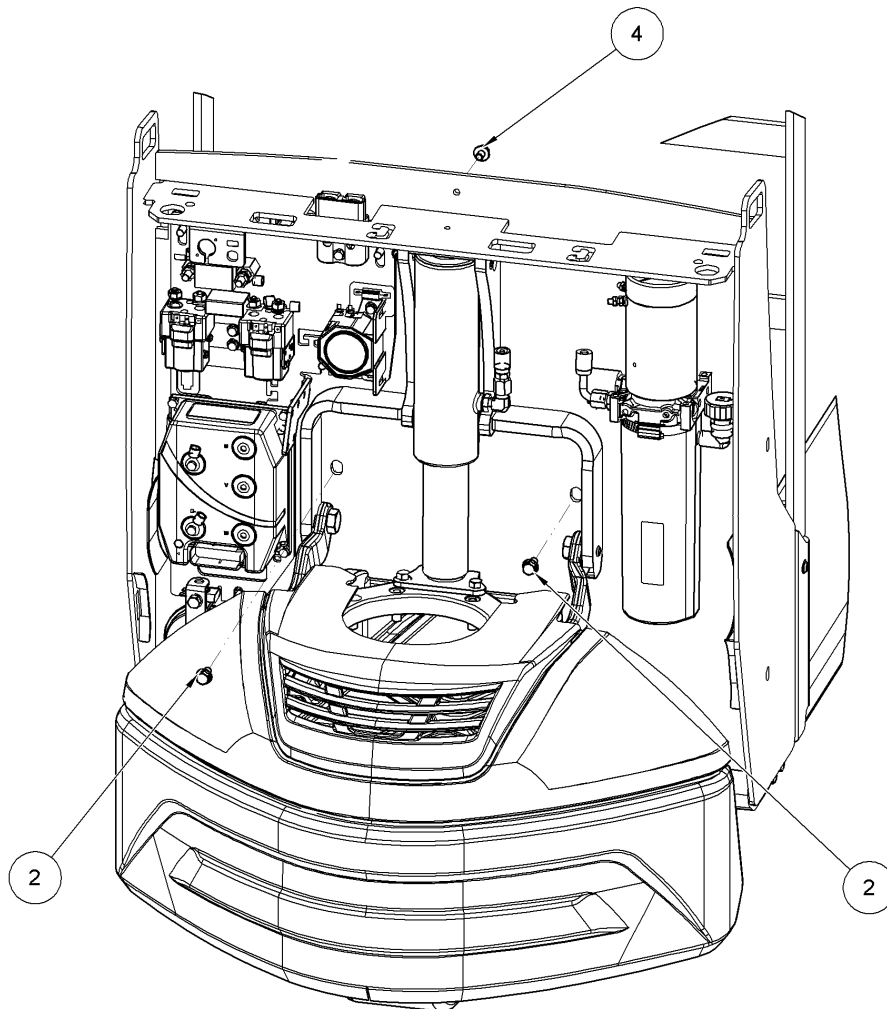

Model 8210 Pallet Truck - Electrical Comp. & System

EnerSys NexSys - Battery & Charger

List 5-5A: EnerSys NexSys - Battery & Charger

FIGURE 5-5A ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			EnerSys NexSys - Battery & Charger		
2	2	1169616/511	Screw, Flange Head	H	
4	1	1169616/533	Screw	H	
5	1	1223185/001	Battery Pack (Not Shown) (Includes)		A
	1	1223185/002	Battery Pack (Not Shown) (Includes)		B
6	1	1223185/01	Battery Block (Not Shown)		
7	1	1223185/02	Cable Assembly (Not Shown)		
8	1	1223185/03	Charger, Battery (Not Shown)		
9	1	1223185/04	Cord (Not Shown)		


A = W/Item 4

B = W/Item 2

Service Type H = Hardware

Start Switch Installation

Figure 5-6: Start Switch Installation

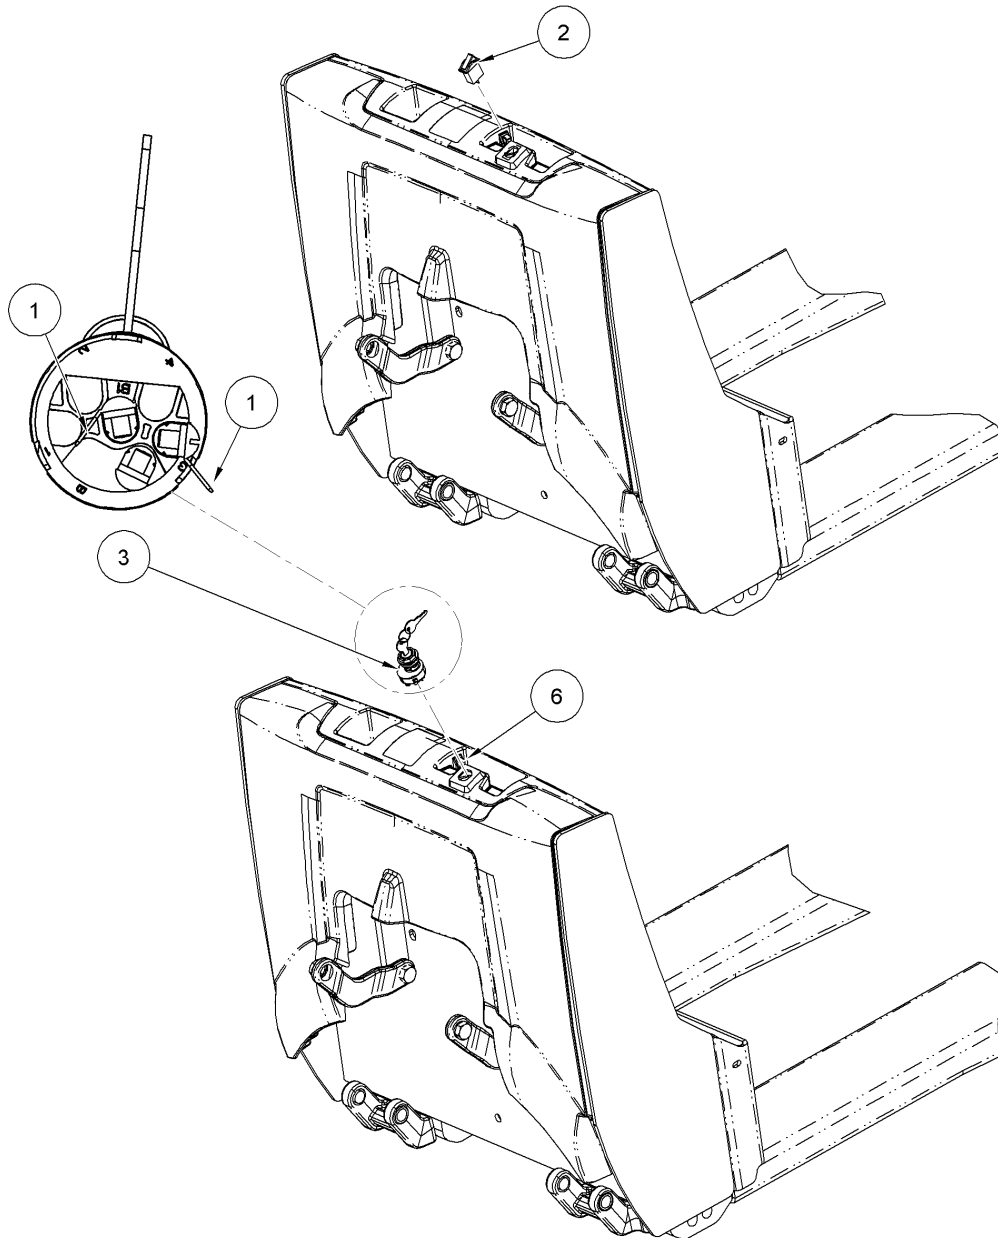

Start Switch Installation

List 5-6: Start Switch Installation

FIGURE 5-6 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Start Switch Installation		
1	2	1-010-253	Terminal		
2	1	305493-000	Switch, Main On/Off	R	
3	1	1020341/002	Switch, Key, Main On/Off	R	A
6	1	1202622	Switch, Rocker, Brake Release	R	

A = Optional

Service Type R = Recommended Spare


RAYMOND

SECTION 6 Hydraulic Components

Hydraulic System 6-2
Pump and Motor Assembly 6-4
Lift Cylinder Assembly 6-6

Hydraulic System

Figure 6-1: Hydraulic System

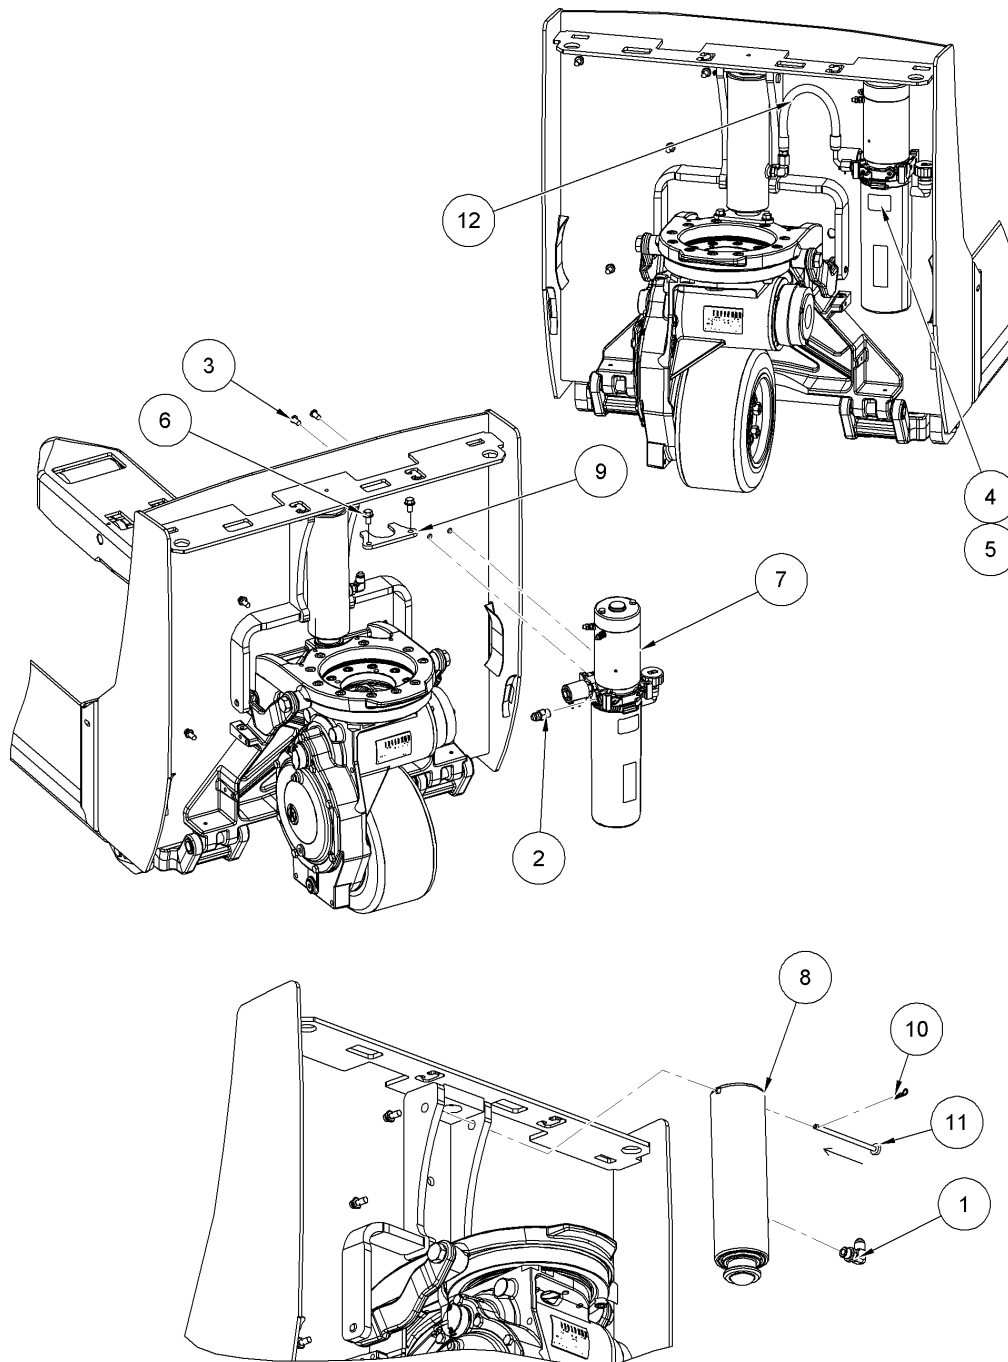

Model 8210 Pallet Truck - Hydraulic Components

Hydraulic System

List 6-1: Hydraulic System


FIGURE 6-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Hydraulic System		
1	1	800-809/003	Fitting, 90 Degree		
2	1	800-811/002	Adapter, Hydraulic		
3	1	1031785/001	Screw	H	
4	1	1074515	Decal, Hydraulic Fluid, Cold Storage		
5	1	1078717	Decal, Cold Storage Oil		
6	2	1169616/511	Screw, Flange Head	H	
7	1	1207968/002	Pump and Motor Assembly	C	
8	1	1187702	Cylinder Assembly	C	
9	1	1187703	Bracket, Retaining		
10	1	1187704	Pin, Cotter		
11	1	1187705	Pin, Retaining		
12	1	1211545	Hose Assembly		

Service Type C = Critical Part

Service Type H = Hardware

Pump and Motor Assembly

Figure 6-2: Pump and Motor Assembly

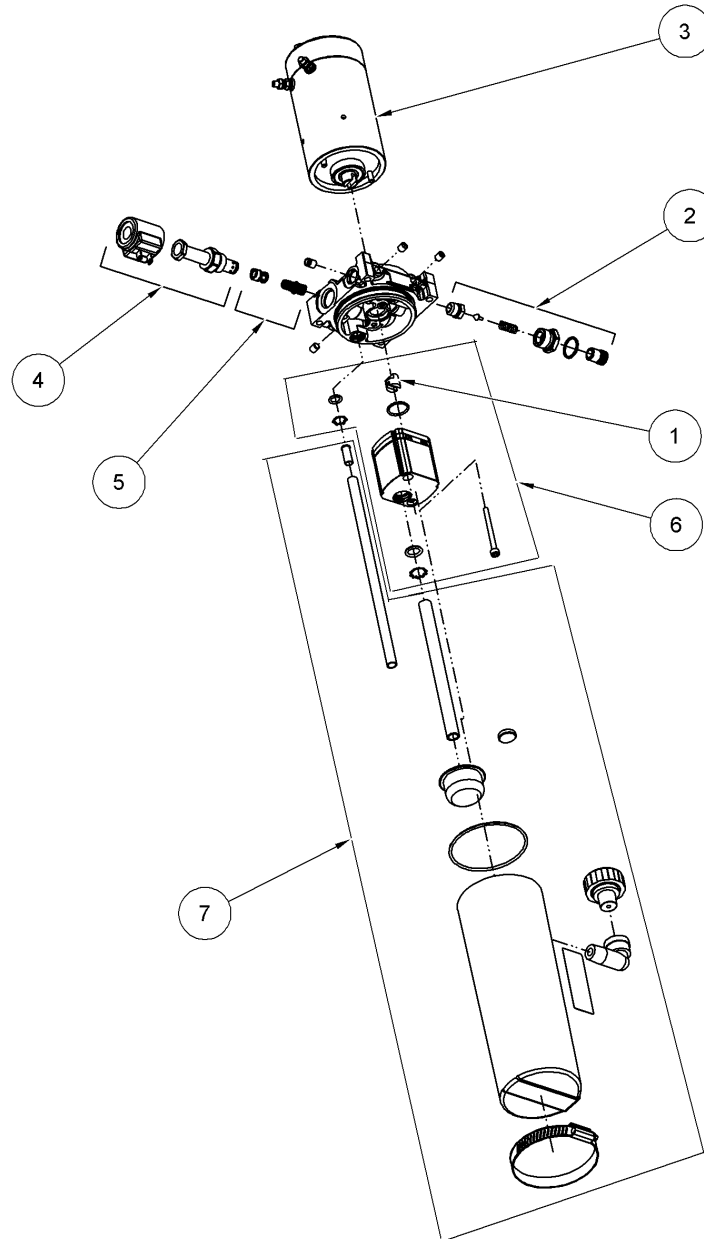

Model 8210 Pallet Truck - Hydraulic Components

Pump and Motor Assembly

List 6-2: Pump and Motor Assembly


FIGURE 6-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Pump and Motor Assembly		
		1207968/002	Pump and Motor Assembly	C	
1	1	313595-000	Coupling		
2	1	314474-000	Kit, Relief Valve	R	
3	1	313621-000	Motor, Lift Pump	C	
4	1	1207968/01	Kit, Solenoid Valve	R	
5	1	1207968/02	Kit, Flow Control (2.2 GPM)		
6	1	313615-000	Kit, Pump		
7	1	1207968/03	Kit, Reservoir		
8	2	310906-000	Tab, 45 Degrees		
9	1	313618-000	Kit, Start Switch	R	

Service Type R = Recommended Spare

Service Type C = Critical Part

Lift Cylinder Assembly

Figure 6-3: Lift Cylinder Assembly

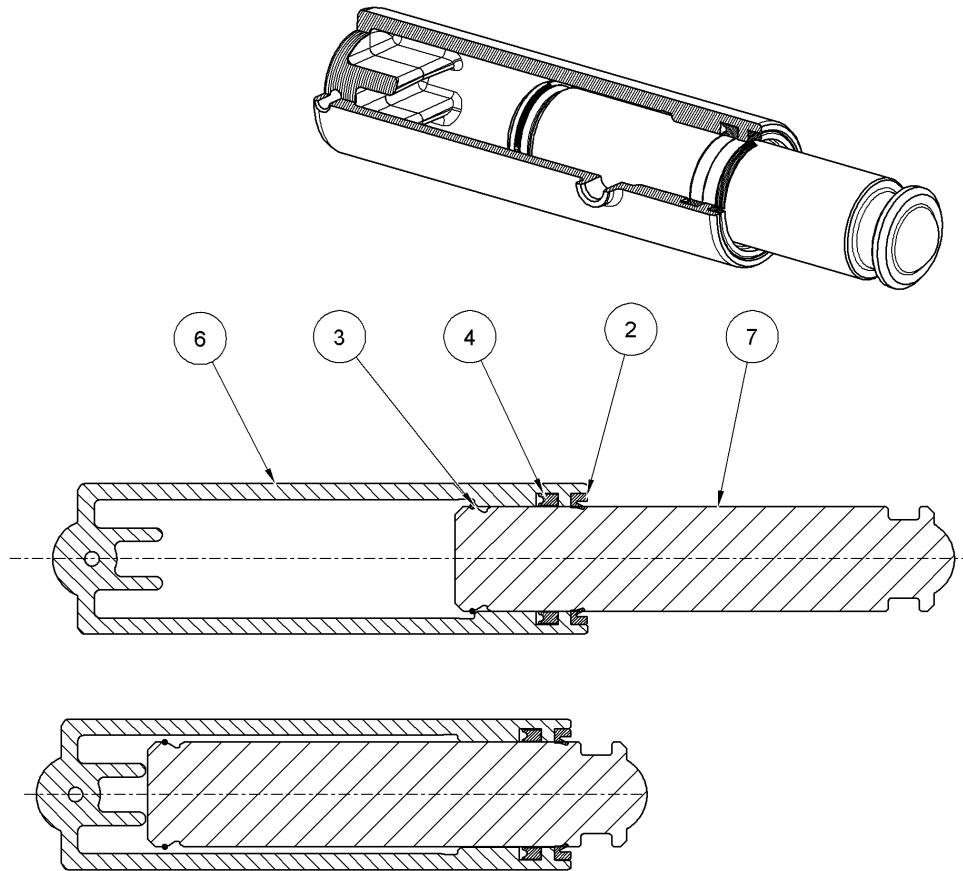

Model 8210 Pallet Truck - Hydraulic Components

Lift Cylinder Assembly

List 6-3: Lift Cylinder Assembly

FIGURE 6-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Lift Cylinder Assembly		
		1187702	Cylinder Assembly	C	
2	1	14966-01	Wiper, Cylinder Rod	R	
3	1	23075-00	Ring, Stop		
4	1	49553-06	Seal, Rod	R	
6	1	1187700	Housing, Cylinder		
7	1	1187701	Rod, Piston		

Service Type R = Recommended Spare

Service Type C = Critical Part

RAYMOND

SECTION 7 Mast


Lift Linkage Assembly 7-2

Load Wheel Assembly 7-8

Dual Load Wheel Assembly 7-10


Lift Linkage Assembly

Figure 7-1.a: Lift Linkage Assembly

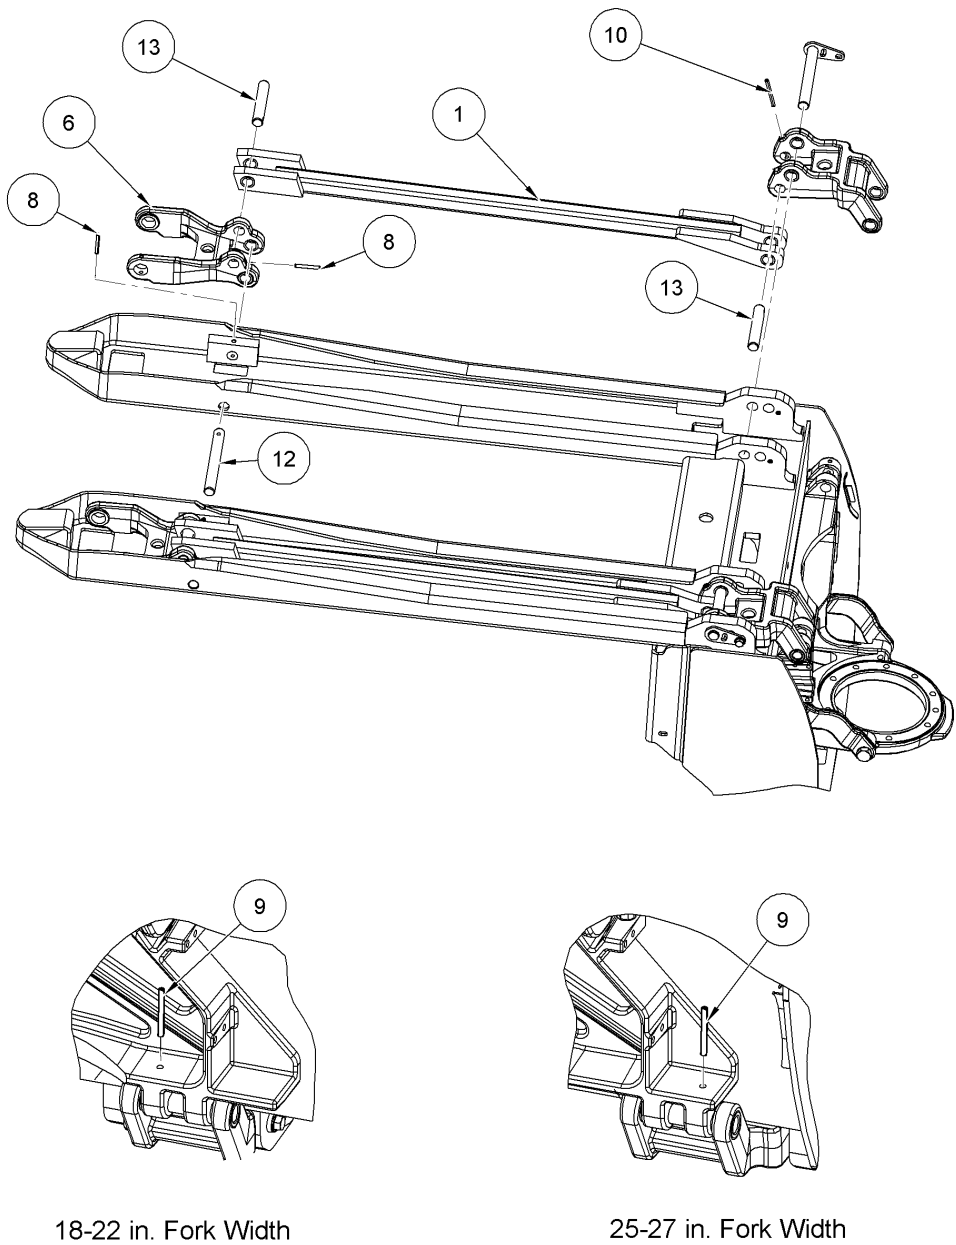

Lift Linkage Assembly

Figure 7-1.b: Lift Linkage Assembly

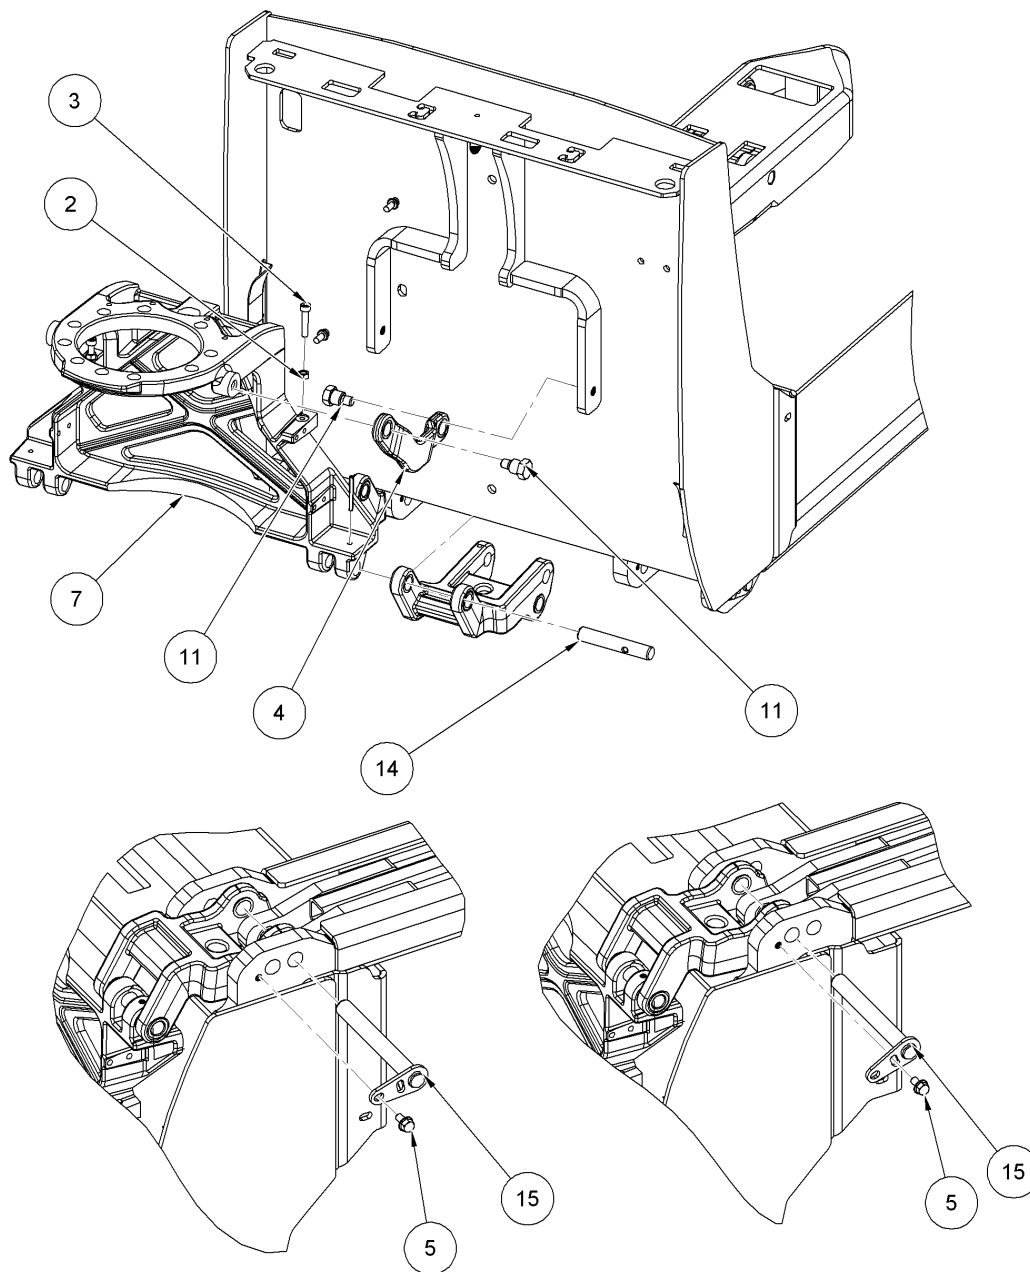


7.8 in. Battery Compartment

9.0 in. Battery Compartment


Lift Linkage Assembly

Figure 7-1.c: Lift Linkage Assembly

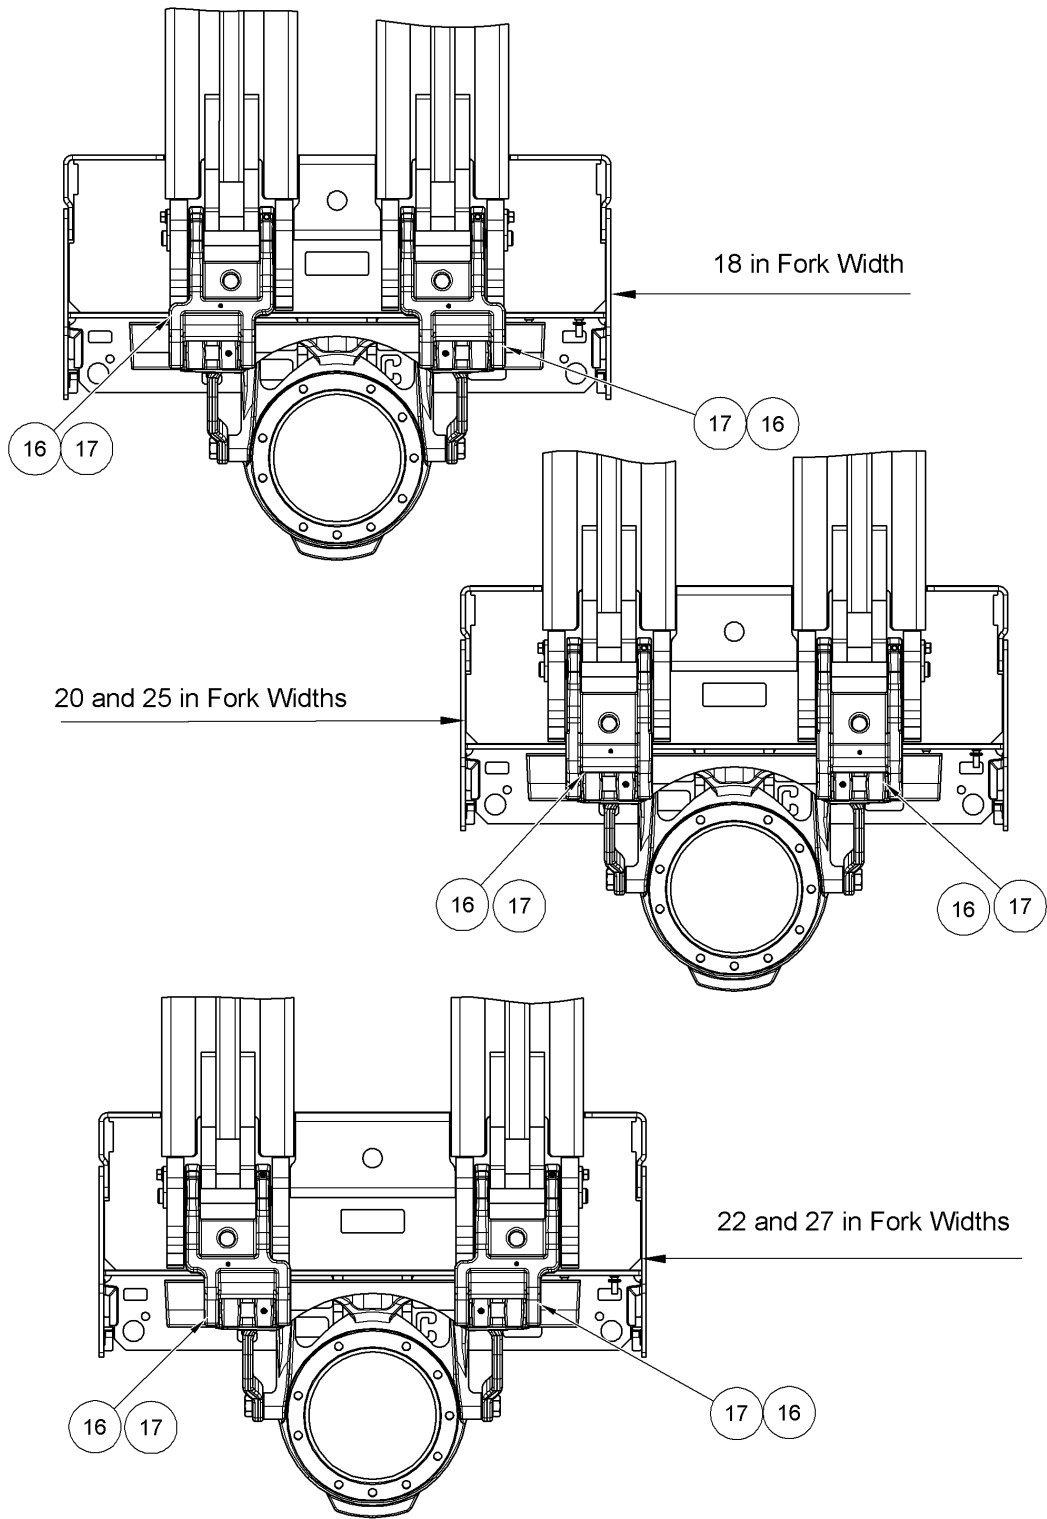

Lift Linkage Assembly

Figure 7-1.d: Lift Linkage Assembly

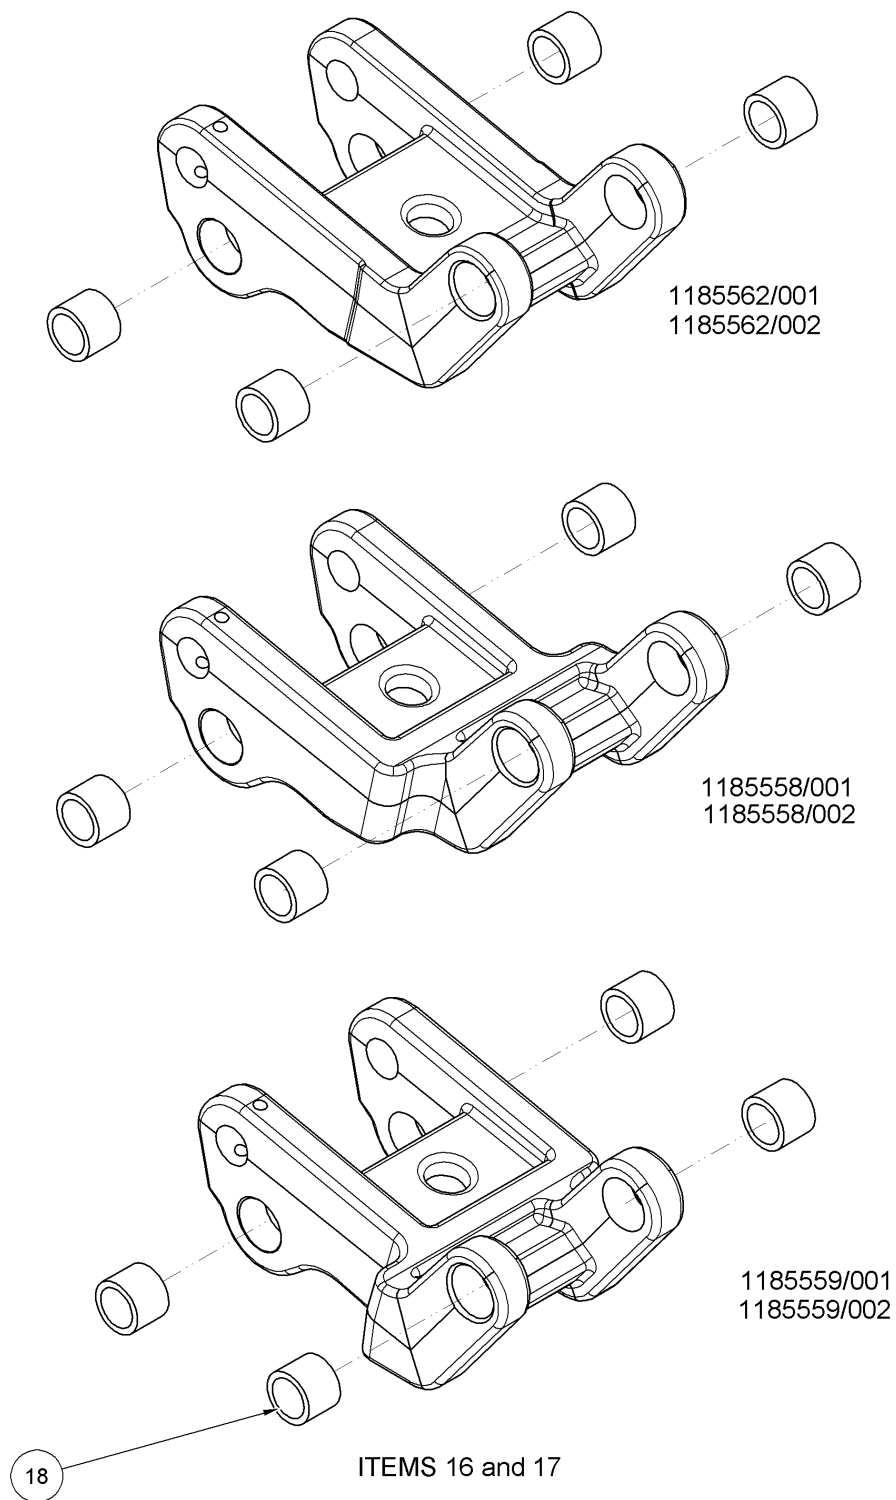

List 7-1: Lift Linkage Assembly (Sheet 1 of 2)

FIGURE 7-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Lift Linkage Assembly		
1	2	1184885/001	Pullrod Assembly, 32 in.		C
	2	1184885/002	Pullrod Assembly, 36 in.		C
	2	1184885/003	Pullrod Assembly, 42 in.		C
	2	1184885/004	Pullrod Assembly, 46 in.		C
	2	1184885/005	Pullrod Assembly, 48 in.		C
	2	1184885/006	Pullrod Assembly, 54 in.		C
	2	1184885/007	Pullrod Assembly, 60 in.		C
	2	1184885/008	Pullrod Assembly, 32 in.		D
	2	1184885/009	Pullrod Assembly, 36 in.		D
	2	1184885/010	Pullrod Assembly, 42 in.		D
	2	1184885/011	Pullrod Assembly, 46 in.		D
	2	1184885/012	Pullrod Assembly, 48 in.		D
	2	1184885/013	Pullrod Assembly, 54 in.		D
	2	1184885/014	Pullrod Assembly, 60 in.		D
	2	1184885/015	Pullrod Assembly, 32 in.		E
	2	1184885/016	Pullrod Assembly, 36 in.		E
	2	1184885/017	Pullrod Assembly, 42 in.		E
	2	1184885/018	Pullrod Assembly, 46 in.		E
	2	1184885/019	Pullrod Assembly, 48 in.		E
	2	1184885/020	Pullrod Assembly, 54 in.		E
	2	1184885/021	Pullrod Assembly, 60 in.		E
	2	1184885/022	Pullrod Assembly, 32 in.		F
	2	1184885/023	Pullrod Assembly, 36 in.		F
	2	1184885/024	Pullrod Assembly, 42 in.		F
	2	1184885/025	Pullrod Assembly, 46 in.		F
	2	1184885/026	Pullrod Assembly, 48 in.		F
	2	1184885/027	Pullrod Assembly, 54 in.		F
	2	1184885/028	Pullrod Assembly, 60 in.		F
	2	1187090/001	Pullrod Assembly, 48 in. (3in.Lowered Profile)		C
	2	1187090/002	Pullrod Assembly, 48 in. (3in.Lowered Profile)		D

A = 3 in. Fork Lowered Height

B = 3 and 3.25 in. Fork Lowered Height

C = 7.8 in. Battery Compartment (Painted)

D = 9.0 in. Battery Compartment (Painted)

E = 7.8 in. Battery Compartment (Galvanized)

F = 9.0 in. Battery Compartment (Galvanized)

Service Type R = Recommended Spare

Service Type H = Hardware

List 7-1: Lift Linkage Assembly (Sheet 2 of 2)

FIGURE 7-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
	2	1187090/003	Pullrod Assembly, 48 in. (3in.Lowered Profile)		E
	2	1187090/004	Pullrod Assembly, 48 in. (3in.Lowered Profile)		F
	4	312672-000	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	R	
2	2	5-015-005	Nut	H	
3	2	303009-040	Bolt, Hex Socket Head	H	
4	2	313186-001	Link Assembly, Upper (Includes)		
	2	312672-001	Bushing, Composite		
5	2	1169616/511	Screw, Flange Head	H	
6	2	1185537/001	Fork Trail Machining, Painted		
	2	1185537/002	Fork Trail Machining, Galvanized		
	2	1187008/001	Fork Trail Machining, Painted		A
	2	1187008/002	Fork Trail Machining, Galvanized		A
7	1	1188430/001	Frame, Pivot Machining, 25 and 27 in. Fork Width		B
	1	1188430/002	Frame, Pivot Machining, 18, 20 and 22 in. Fork Width		
8	4	1188528/001	Pin, Spirol		
9	2	1188528/002	Pin, Spirol		
10	2	1188528/003	Pin, Spirol		
11	4	1188712	Screw, Shoulder		
12	2	1189537	Pin, Wheel Fork		
13	4	1189538	Pin, Pull Rod		
14	2	1189539	Pin, Lower Link		
15	2	1210510	Pin Weldment, Flagged		
16	1	1185558/001	Link, Lower Assembly		
	1	1185558/002	Link, Lower Assembly, Galvanized		
	2	1185562/001	Link, Lower Assembly		
	2	1185562/002	Link, Lower Assembly, Galvanized		
17	1	1185559/001	Link, Lower Assembly		
	1	1185559/002	Link, Lower Assembly, Galvanized		
18	4	312672-000	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	R	

A = 3 in. Fork Lowered Height

B = 3 and 3.25 in. Fork Lowered Height

C = 7.8 in. Battery Compartment (Painted)

D = 9.0 in. Battery Compartment (Painted)

E = 7.8 in. Battery Compartment (Galvanized)


F = 9.0 in. Battery Compartment (Galvanized)

Service Type R = Recommended Spare

Service Type H = Hardware

Load Wheel Assembly

Figure 7-2: Load Wheel Assembly

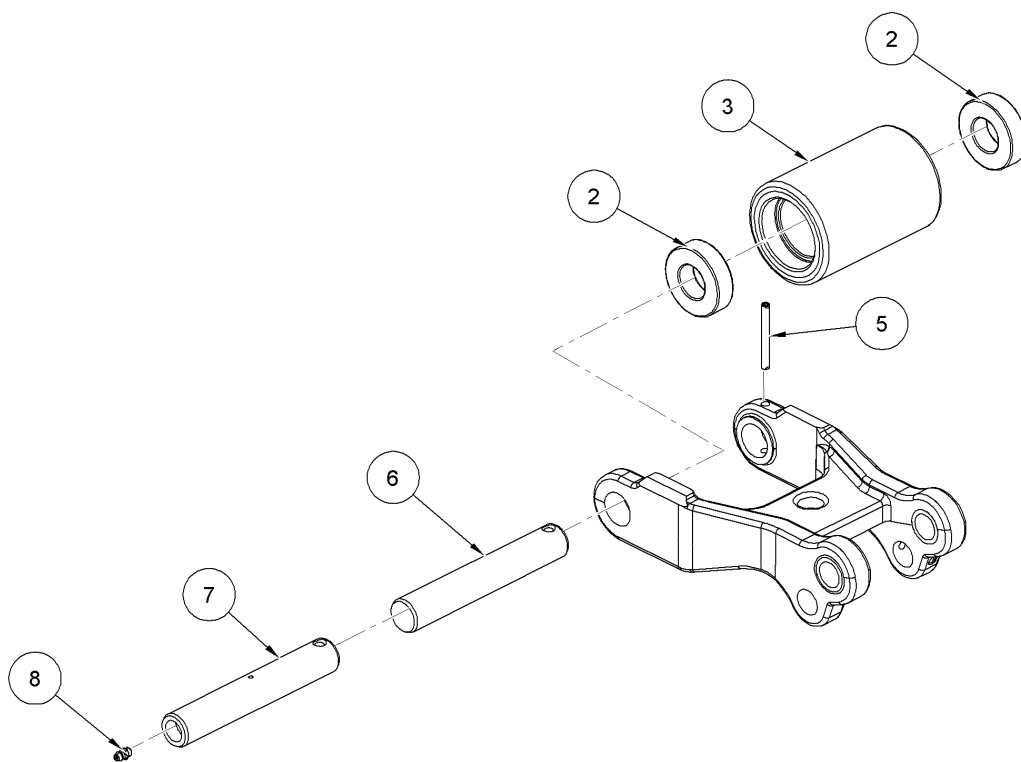

Load Wheel Assembly

List 7-2: Load Wheel Assembly

FIGURE 7-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Load Wheel Assembly		
2	2	49910-01	Bearing	R	A
	2	49910-05	Bearing, Sealed	R	
3	1	312636-000	Wheel, Load	R	
5	1	1188528/002	Pin, Spirol		
6	1	1189536	Axle, Load Wheel		
7	1	1189587	Axle, Load Wheel		A
8	1	840-033	Fitting, Grease	H	


A = Greaseable

Service Type R = Recommended Spare

Service Type H = Hardware

Dual Load Wheel Assembly

Figure 7-3: Dual Load Wheel Assembly

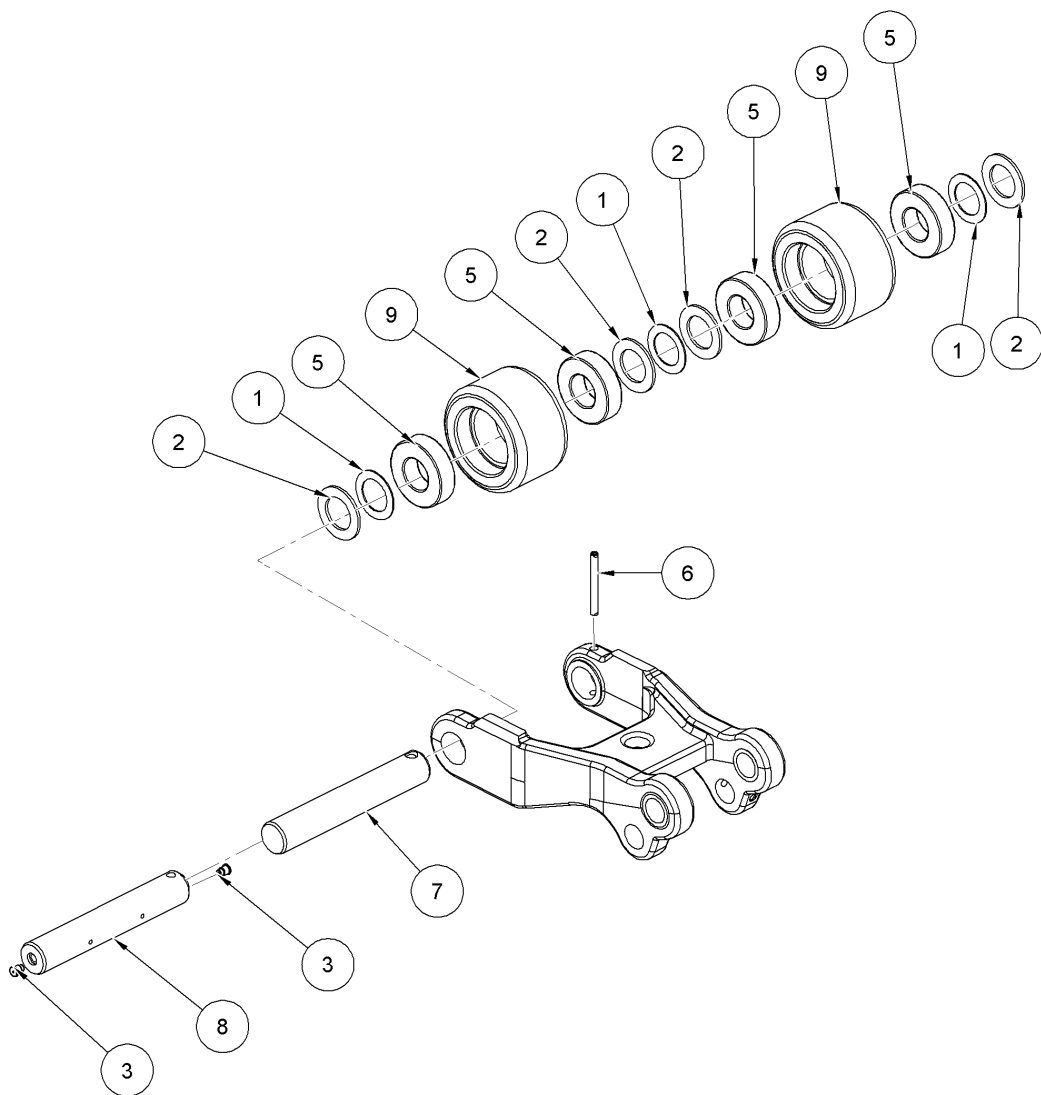

Dual Load Wheel Assembly

List 7-3: Dual Load Wheel Assembly

FIGURE 7-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Dual Load Wheel Assembly		
1	4	771-033	Spacer	H	
2	8	771-156	Washer, Flat	H	
3	2	841-111	Fitting, Grease		
5	4	49910-05	Bearing, Sealed	R	
	4	49910-01	Bearing	R	A
6	1	1188528/002	Pin, Spirol		
7	1	1189536	Axle, Load Wheel		
8	1	1189588	Axle, Load Wheel		A
9	2	1190142/001	Wheel		

A = Greaseable

Service Type R = Recommended Spare

Service Type H = Hardware


RAYMOND

SECTION 8 Options & Kits

Load Backrest Installation	8-2
Caster Assembly	8-4
Caster Assembly	8-6
Tray Installation	8-8
Tray Assembly	8-10
Shrinkwrap Holder Installation	8-12
iPORT Installation	8-14
iW Essential Installation	8-16
iWarehouse Evolution	8-18
Bumper Skirt Assembly	8-20
Accessory Bar, Load Backrest Mounted	8-22
Accessory Bar Installation	8-24
Auxiliary Light Assembly	8-26
Fan Assembly	8-28

Load Backrest Installation

Figure 8-1: Load Backrest Installation

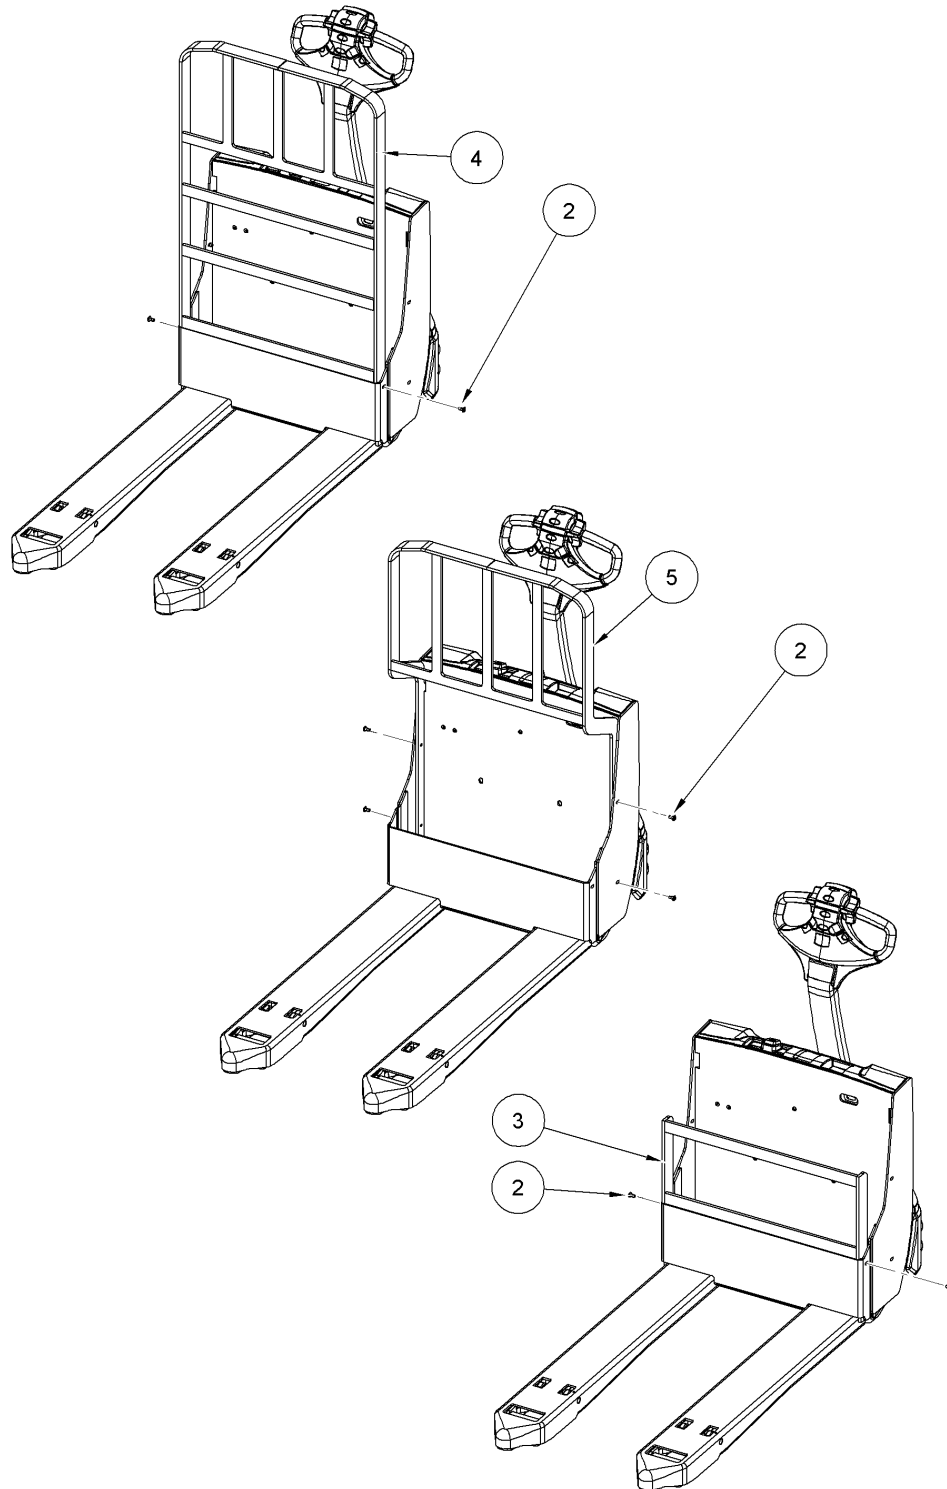

Load Backrest Installation

List 8-1: Load Backrest Installation

FIGURE 8-1 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Load Backrest Installation		
2		29544	Screw	H	
3	1	1192249	Backrest, Load With Industrial Battery (20.5 in.)		
4	1	1192345/148	Backrest, Load		A
	1	1192345/160	Backrest, Load		B
	1	1192345/172	Backrest, Load		C
5	1	1203318/001	Backrest, Load With Swing out Battery		A
	1	1203318/002	Backrest, Load With Swing out Battery		B
	1	1203318/003	Backrest, Load With Swing out Battery		C

A = 48 in.


B = 60 in.

C = 72 in.

Service Type H = Hardware

Caster Assembly

Figure 8-2: Caster Assembly

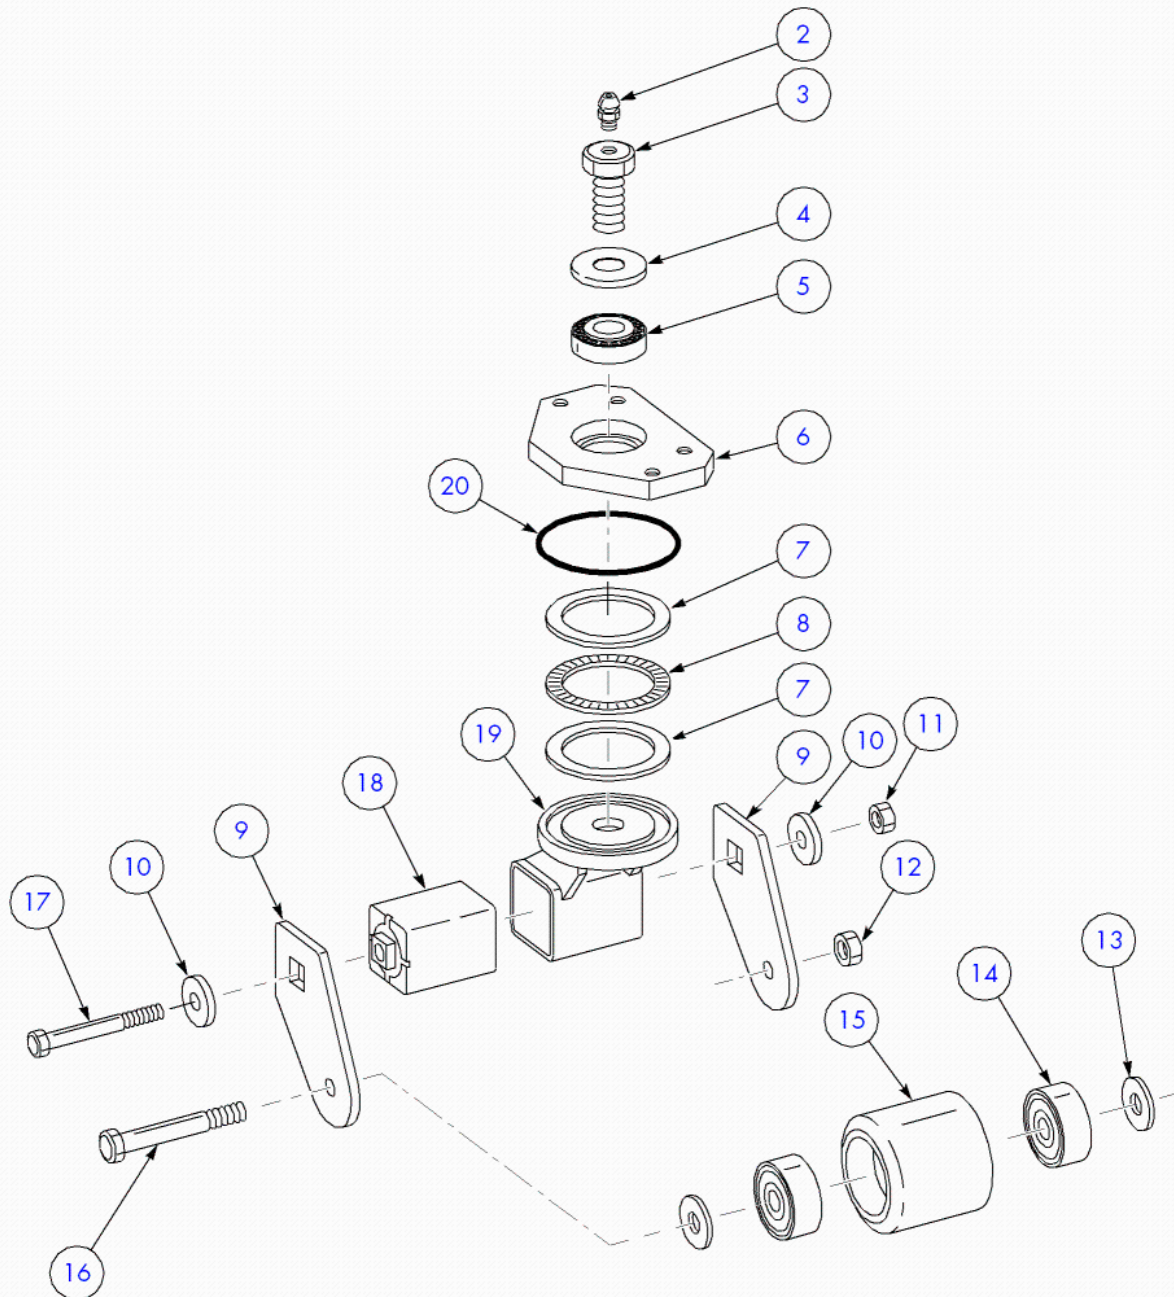

Caster Assembly

List 8-2: Caster Assembly



FIGURE 8-2 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Caster Assembly		
		313729-001	Caster Assembly		
2	1	313980-000	Fitting, Grease		
3	1	313955-000	Pin		
4	1	313953-000	Cap		
5	1	671-024/03	Bearing, Cup	R	
	1	671-024/04	Bearing, Cone	R	
6	1	313942-000	Plate		
7	2	671-024/09	Washer, Thrust	H	
8	1	445-236	Bearing, Thrust	R	
9	2	313941-000	Plate		
10	2	313950-000	Assembly, Washer	H	
11	1	671-041/21	Nut, Locking	H	
12	1	313947-000	Nut	H	
13	2	313946-000	Washer, Flat	H	
14	2	313958-000	Bearing	R	
15	1	313945-000	Wheel	R	
16	1	313948-000	Screw	H	
17	1	313951-000	Screw	H	
18	1	313949-000	Block, Torsion		
19	1	313957-000	Housing		
20	1	314131-000	O-Ring	R	

Service Type R = Recommended Spare

Service Type H = Hardware

Caster Assembly

Figure 8-2A: Caster Assembly

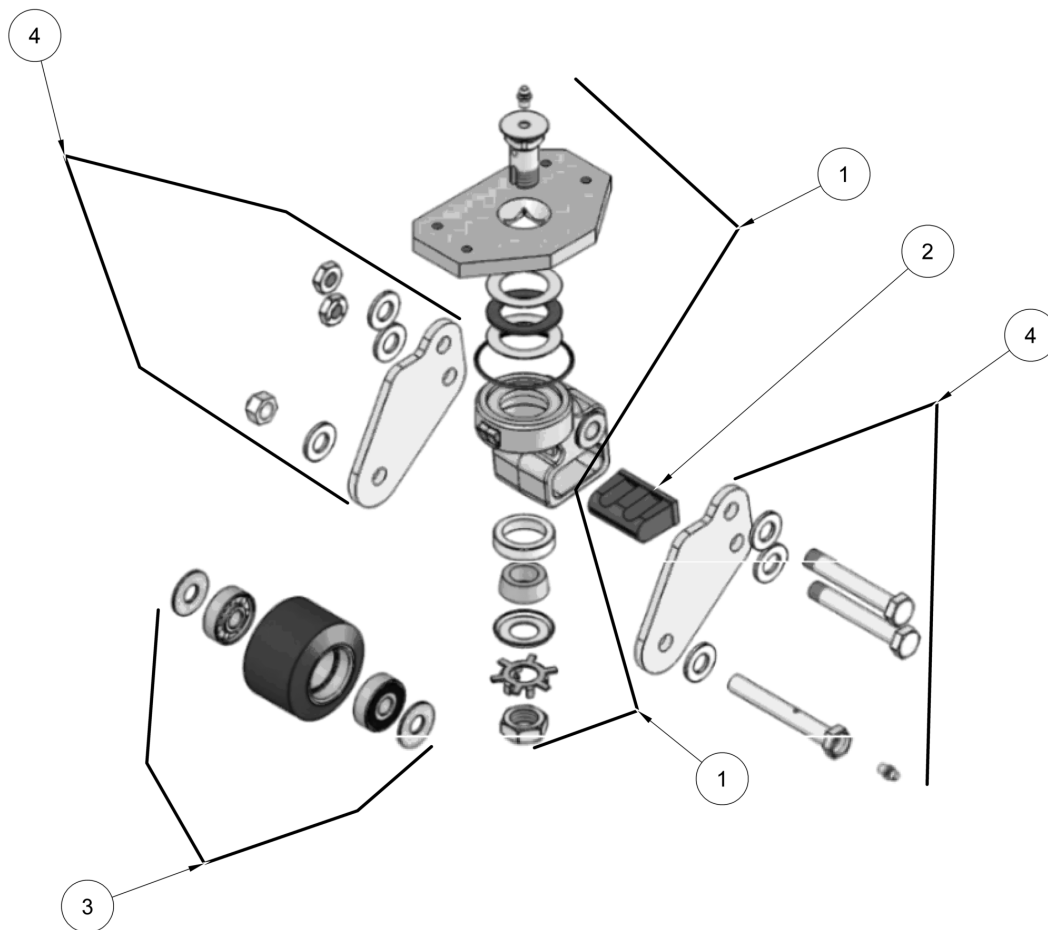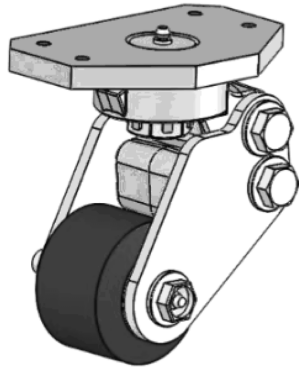

Model 8210 Pallet Truck - Options & Kits

Caster Assembly

List 8-2A: Caster Assembly


FIGURE 8-2A ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Caster Assembly		
		1242400/001	Caster Assembly	C	
1	1	1242400/01	Housing Kit, Caster		
2	1	1242400/02	Spring, Poly Block		
3	1	1242400/03	Wheel Kit, Caster	R	
4	1	1242400/04	Plate, Side, Kit		

Service Type R = Recommended Spare

Service Type C = Critical Part

Tray Installation

Figure 8-3: Tray Installation

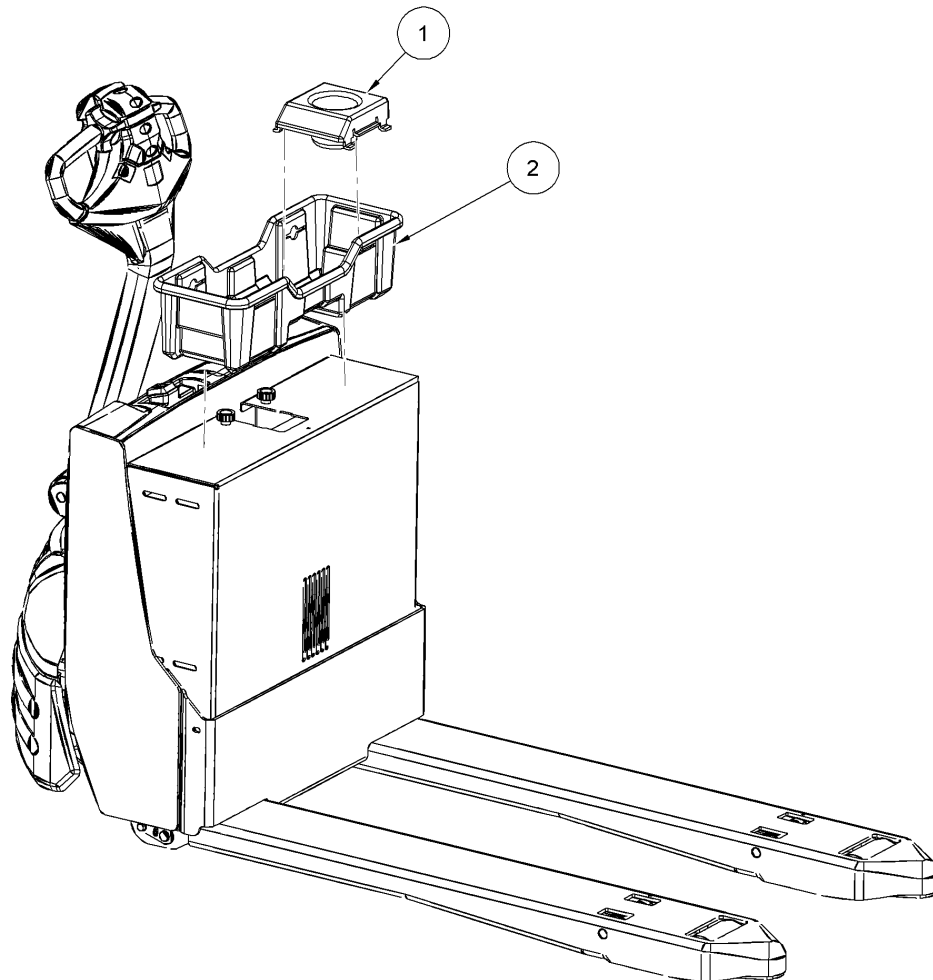


Tray Installation

List 8-3: Tray Installation

FIGURE 8-3 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Tray Installation		
1	1	1193040	Tray Insert		
2	1	1196021	Tray Assembly		

Tray Assembly

Figure 8-4: Tray Assembly

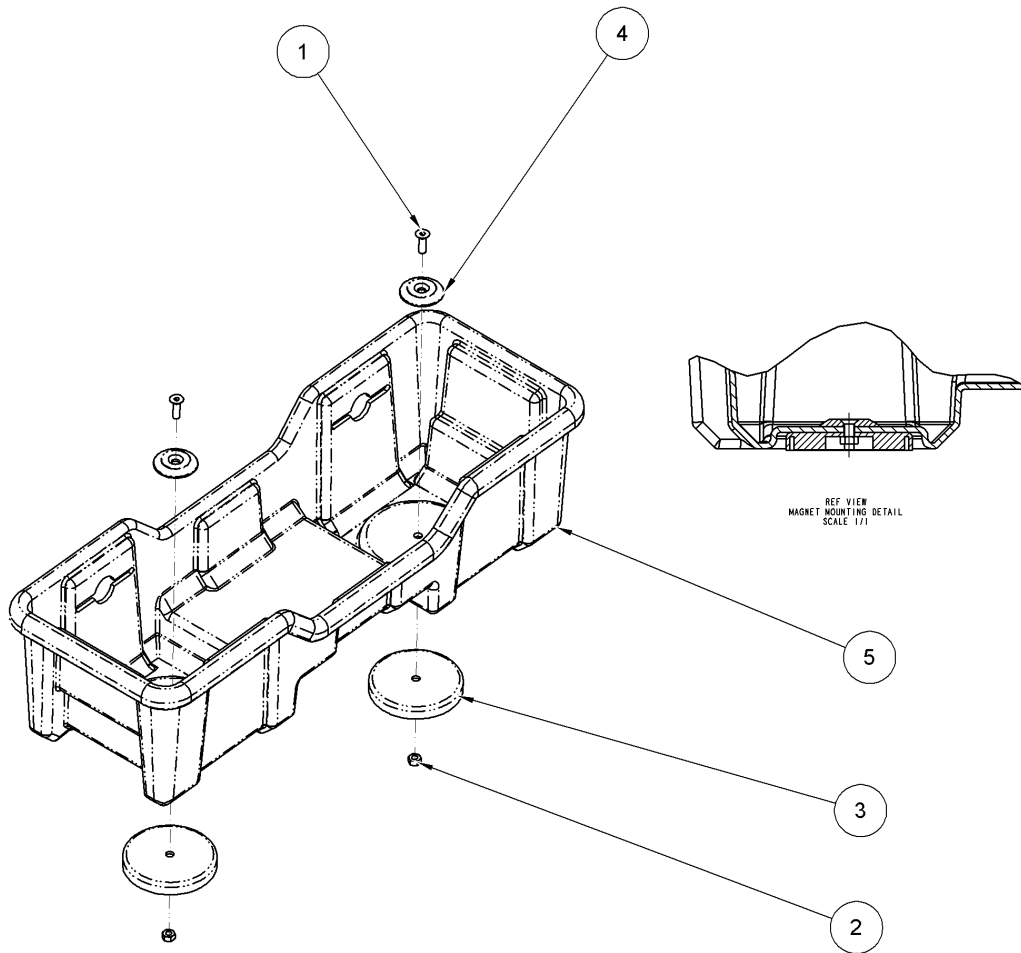

Tray Assembly


List 8-4: Tray Assembly

FIGURE 8-4 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Tray Assembly		
		1196021	Tray Assembly		
1	2	5-004-015	Screw, M6 X 20	H	
2	2	5-015-004	Nut, Hex, Lock	H	
3	2	1142043	Magnet Surface Mount		
4	2	1146154	Washer, Bottom	H	
5	1	1193283	Tray		

Service Type H = Hardware

Shrinkwrap Holder Installation

Figure 8-5: Shrinkwrap Holder Installation

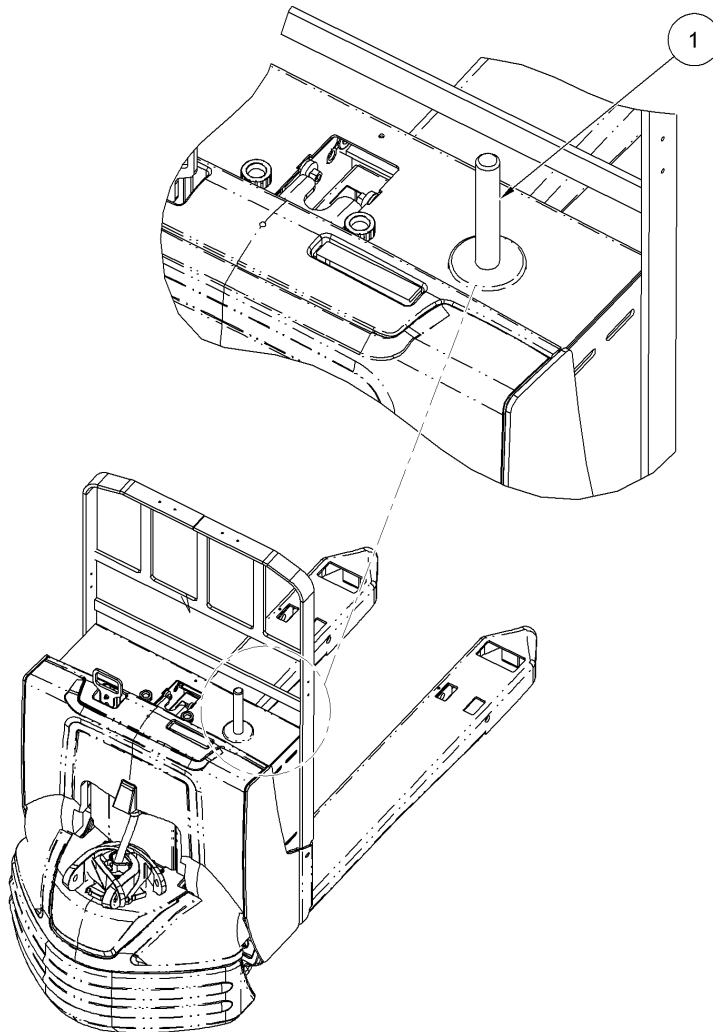


Shrinkwrap Holder Installation

List 8-5: Shrinkwrap Holder Installation

FIGURE 8-5 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Shrinkwrap Holder Installation		
1	1	1204417	Holder Assembly Shrinkwrap		

iPORT Installation

Figure 8-6: iPORT Installation

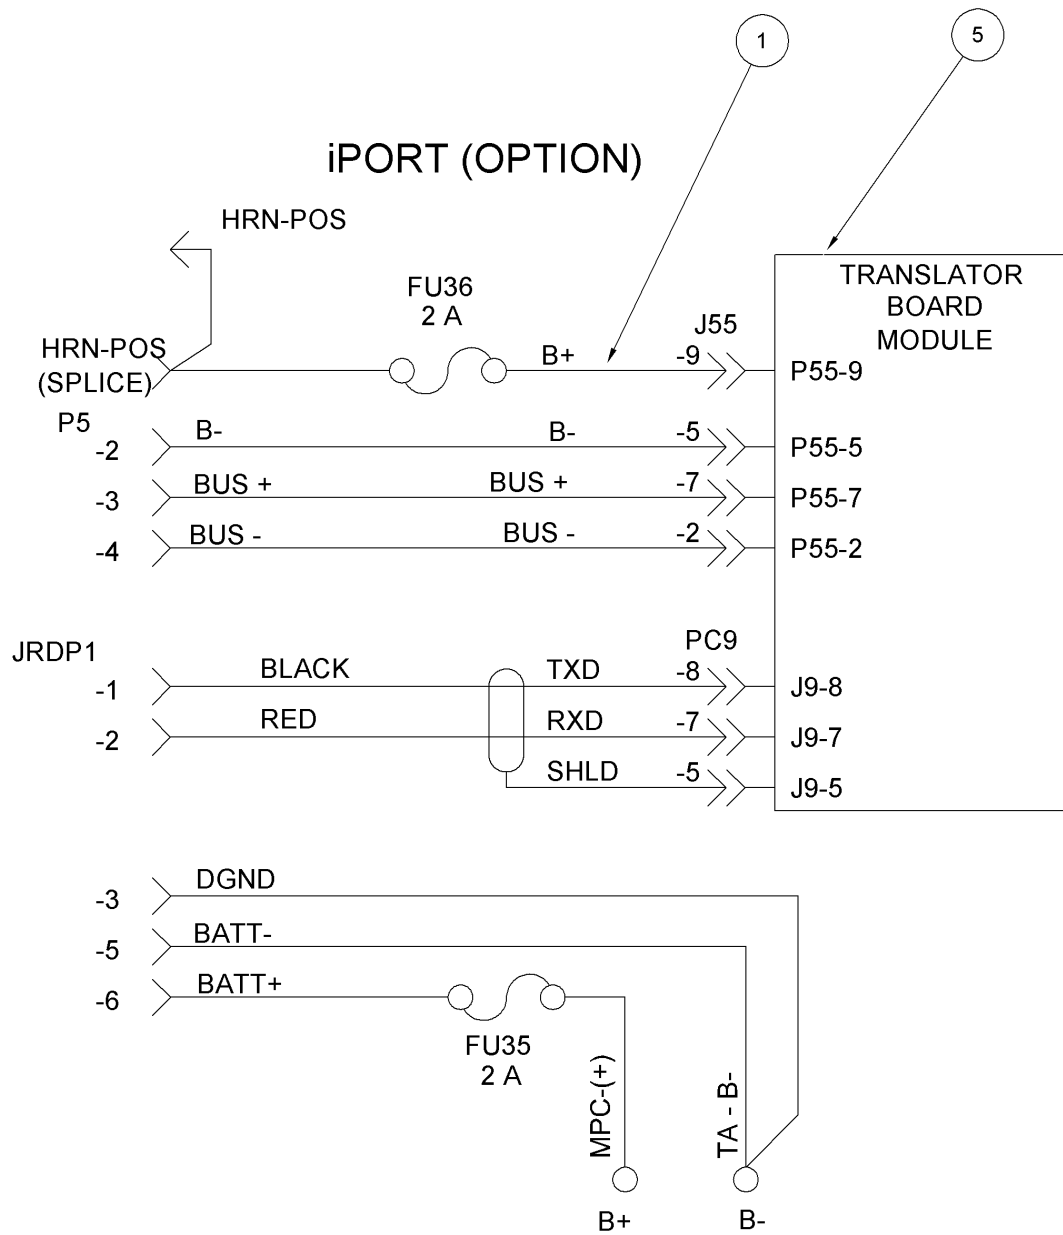

iPORT Installation


List 8-6: iPORT Installation

FIGURE 8-6 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			iPORT Installation		
1	1	1101508	Harness, Wiring		
2	8	611-046	Strap (Not Shown)		
5	1	1085017/002	Card, RDP-T	C	

Service Type C = Critical Part

iW Essential Installation

Figure 8-7: iW Essential Installation

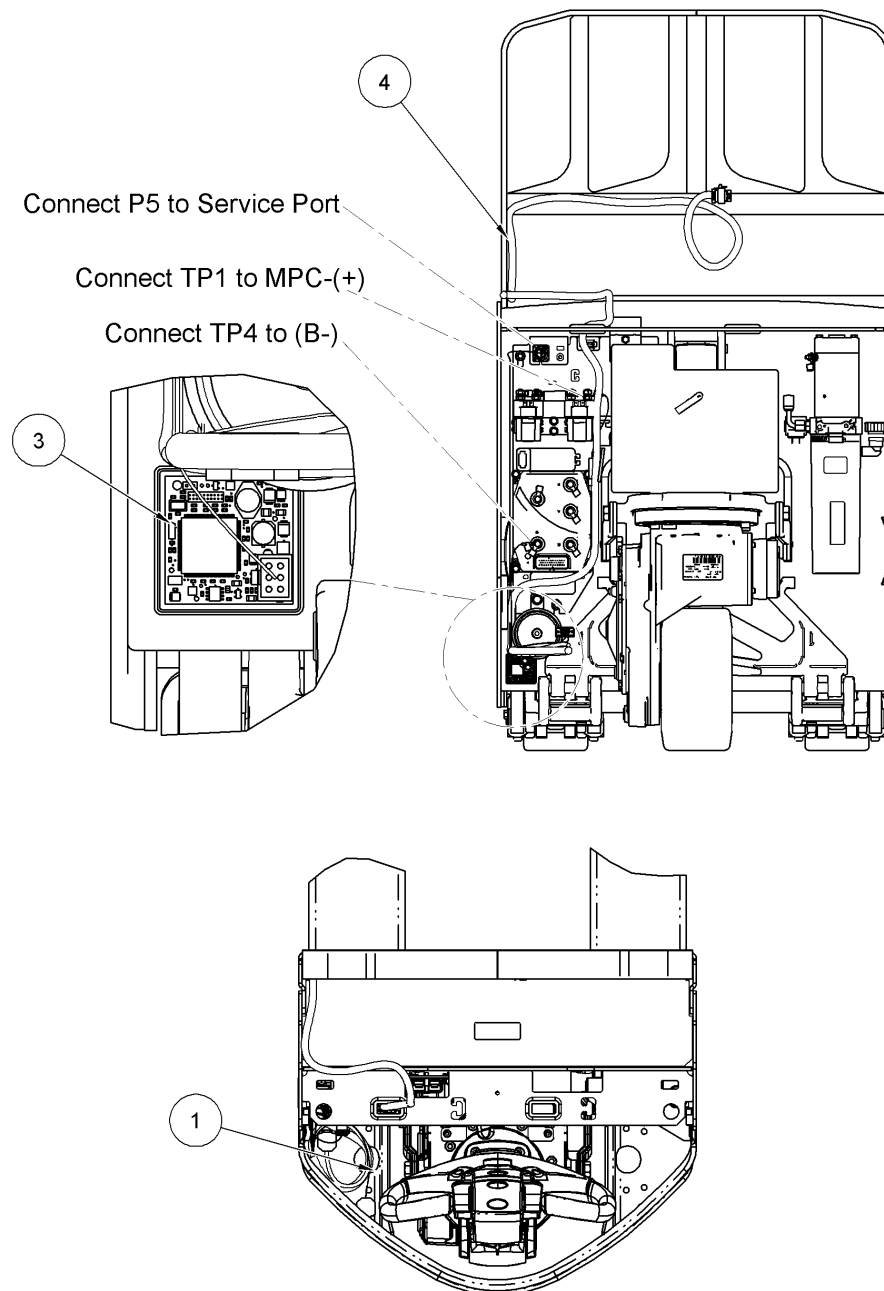

iW Essential Installation


List 8-7: iW Essential Installation

FIGURE 8-7 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			iW Essential Installation		
1	6	611-028	Strap		
3	1	1150244/001	Card, Circuit, Sensor, Impact Monitor	C	
4	1	1227479/001	Harness, Wiring		

Service Type C = Critical Part

iWarehouse Evolution

Figure 8-7A: iWarehouse Evolution

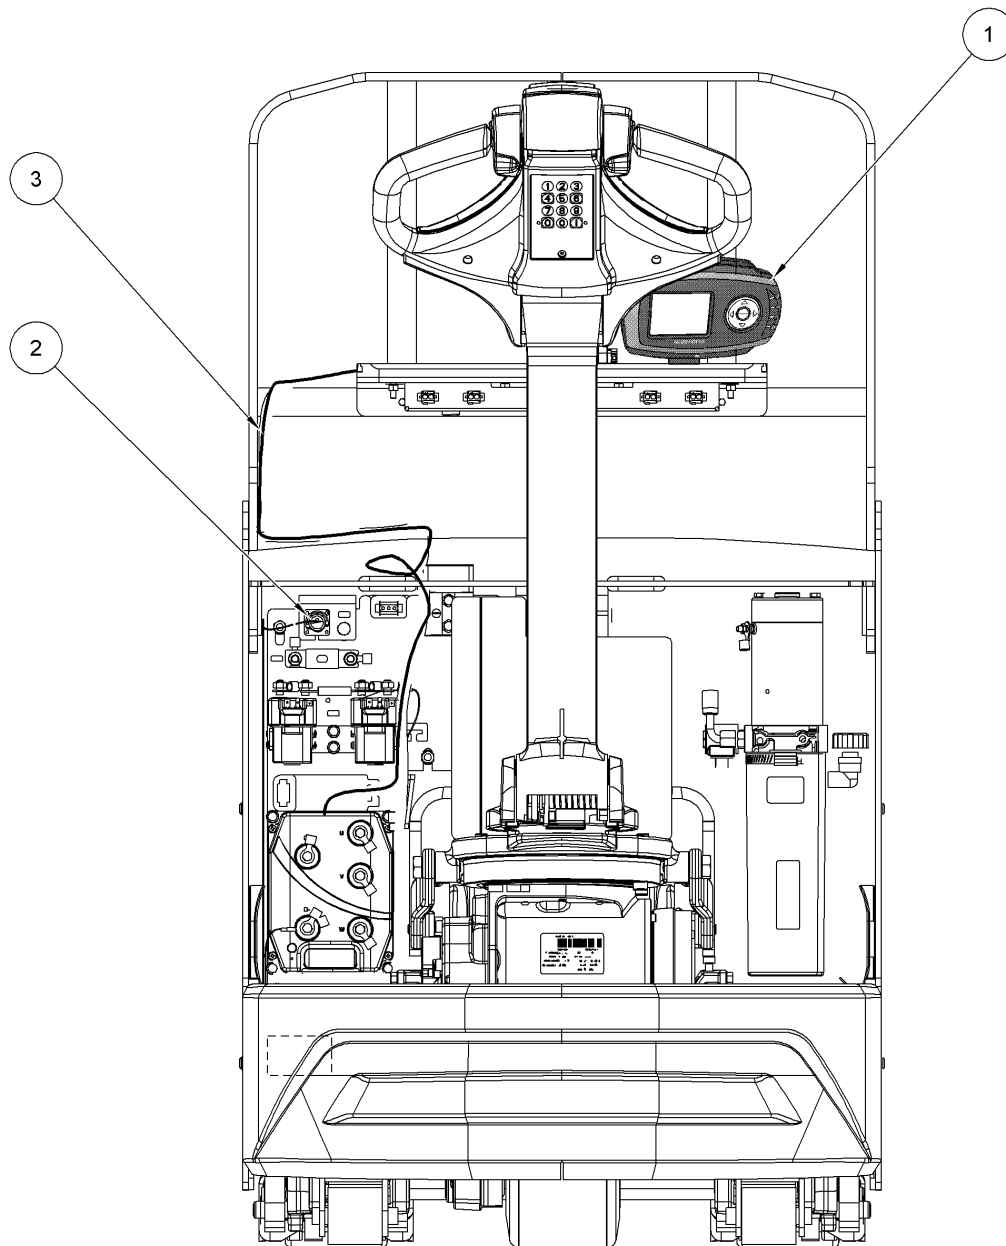

Model 8210 Pallet Truck - Options & Kits

iWarehouse Evolution


List 8-7A: iWarehouse Evolution

FIGURE 8-7A ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			iWarehouse Evolution		
		124807/002	iW Evolution , i Monitor		
		124807/003	iW Evolution , Activation Only		
1	1	1222217/001	iMonitor W/ Ball Joint (Display	C	
2	1	1150244/001	Card, Circuit, Sensor, Impact Monitor	C	
3	1	1240996/001	Harness (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP/ TP4 to PC9)		
	1	1241603/001	Harness, Wiring, (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP)		
4	1	1243686/013	Kit, iWAREHOUSE/ EVO, iMonitor (Not Shown)		
5	AR	611-028	Strap (Not Shown)		

Service Type C = Critical Part

Bumper Skirt Assembly

Figure 8-8: Bumper Skirt Assembly

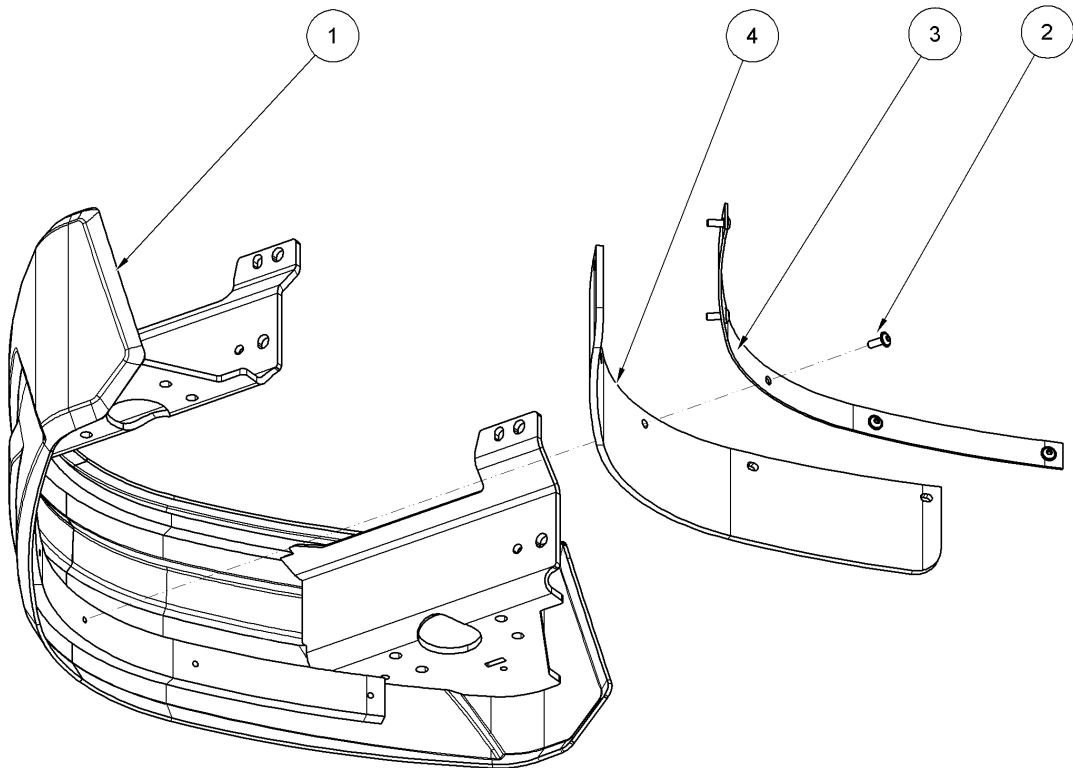

Bumper Skirt Assembly


List 8-8: Bumper Skirt Assembly

FIGURE 8-8 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Bumper Skirt Assembly		
1		Ref.	Bumper		
2	5	5-007-524	Screw, Socket, Button Head	H	
3	1	1209329	Plate, Backing		
4	1	1214819/001	Skirt, Rubber		

Service Type H = Hardware

Accessory Bar, Load Backrest Mounted

Figure 8-9: Accessory Bar, Load Backrest Mounted

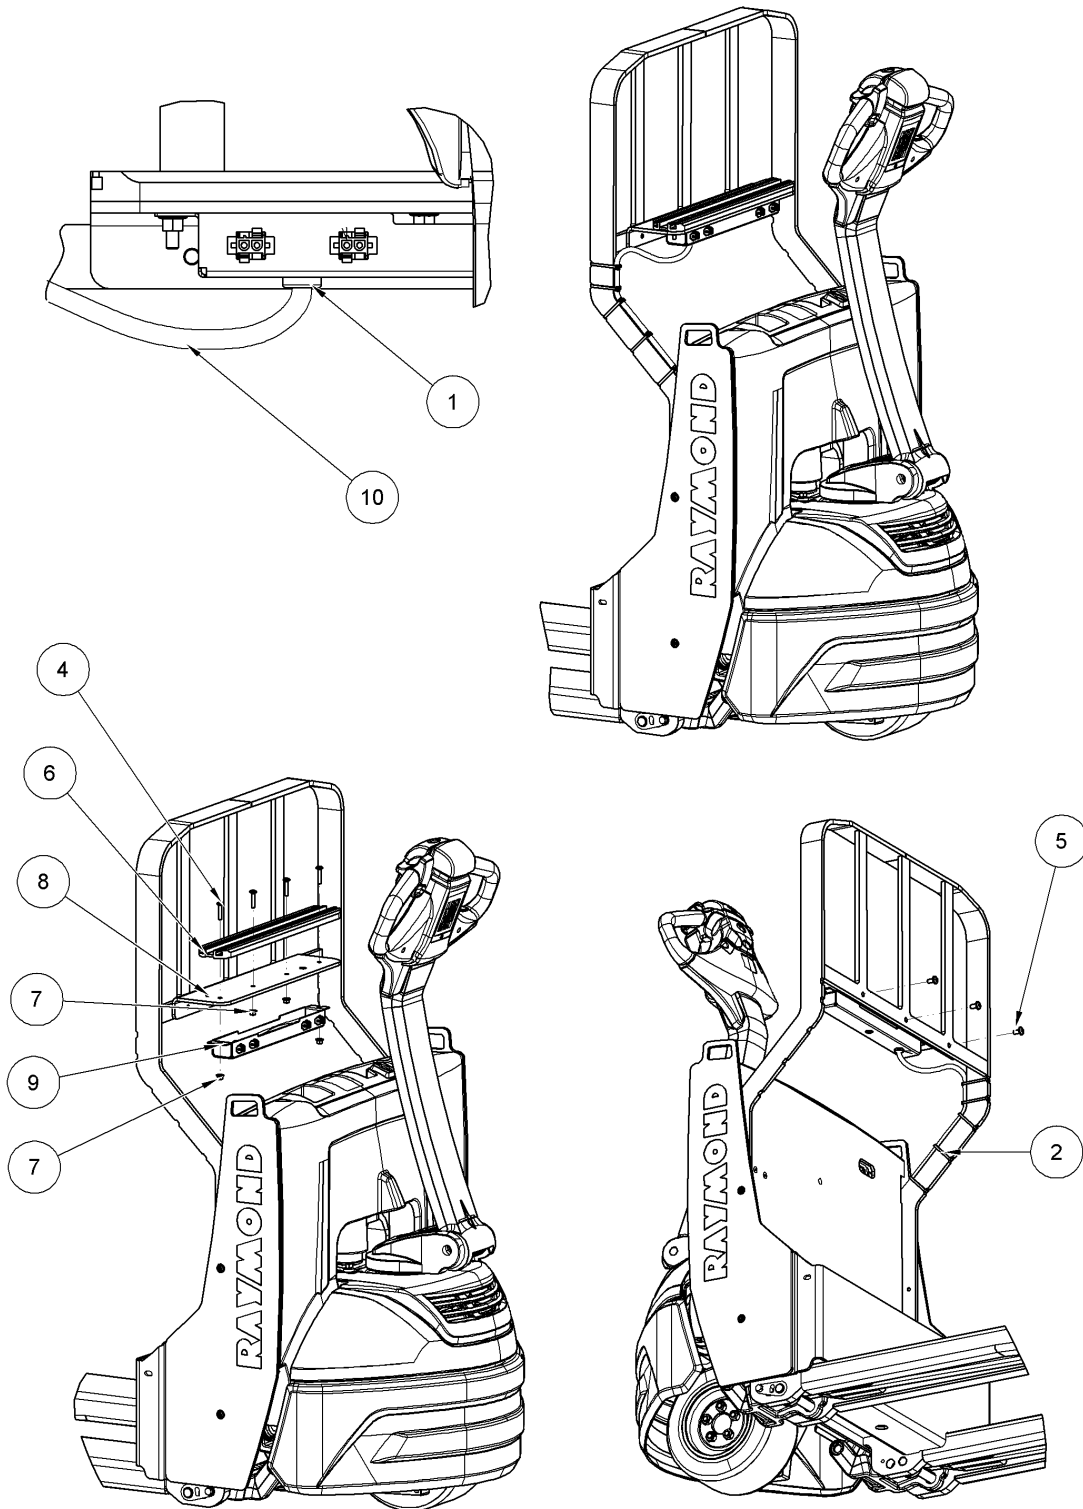

Model 8210 Pallet Truck - Options & Kits

Accessory Bar, Load Backrest Mounted


List 8-9: Accessory Bar, Load Backrest Mounted

FIGURE 8-9 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Accessory Bar, Load Backrest Mounted		
1	1	600-232/007	Clamp, Cable		
2	12	611-028	Strap		
4	4	5-007-027	Screw	H	
5	3	5-007-030	Screw	H	
6	1	1145822/002	Channel, E Bar		
7	4	1169843/002	Nut, Hex, Flange Lock. M6	H	
8	1	1216029	Frame, Accessory Bar		
9	1	1216268	Bracket, Connector		
10	1	1216353	Harness Accessory Bar		

Service Type H = Hardware

Accessory Bar Installation

Figure 8-10: Accessory Bar Installation

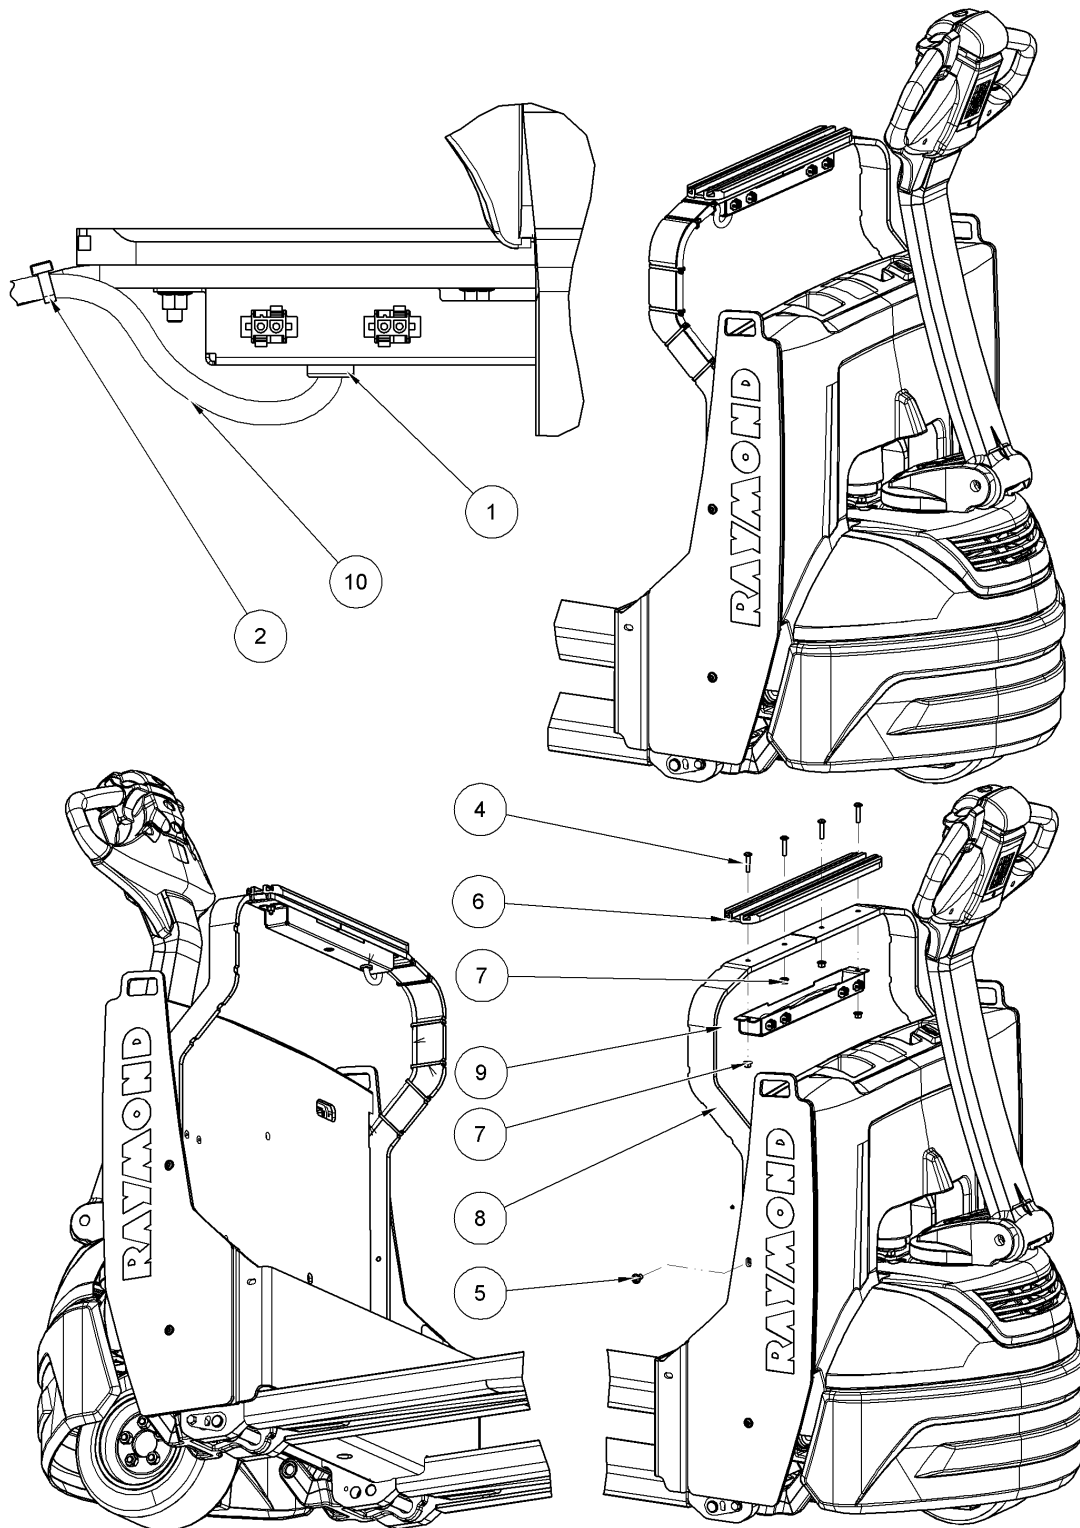

Accessory Bar Installation


List 8-10: Accessory Bar Installation

FIGURE 8-10 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Accessory Bar Installation		
1	1	600-232/007	Clamp, Cable		
2	12	611-028	Strap		
4	4	5-007-027	Screw	H	
5	4	29544	Screw	H	
6	1	1145822/002	Channel, E Bar		
7	4	1169843/002	Nut, Hex, Flange Lock. M6	H	
8	1	1215916	Frame, Accessory Bar		
9	1	1216268	Bracket, Connector		
10	1	1216353	Harness		

Service Type H = Hardware

Auxiliary Light Assembly

Figure 8-11: Auxiliary Light Assembly

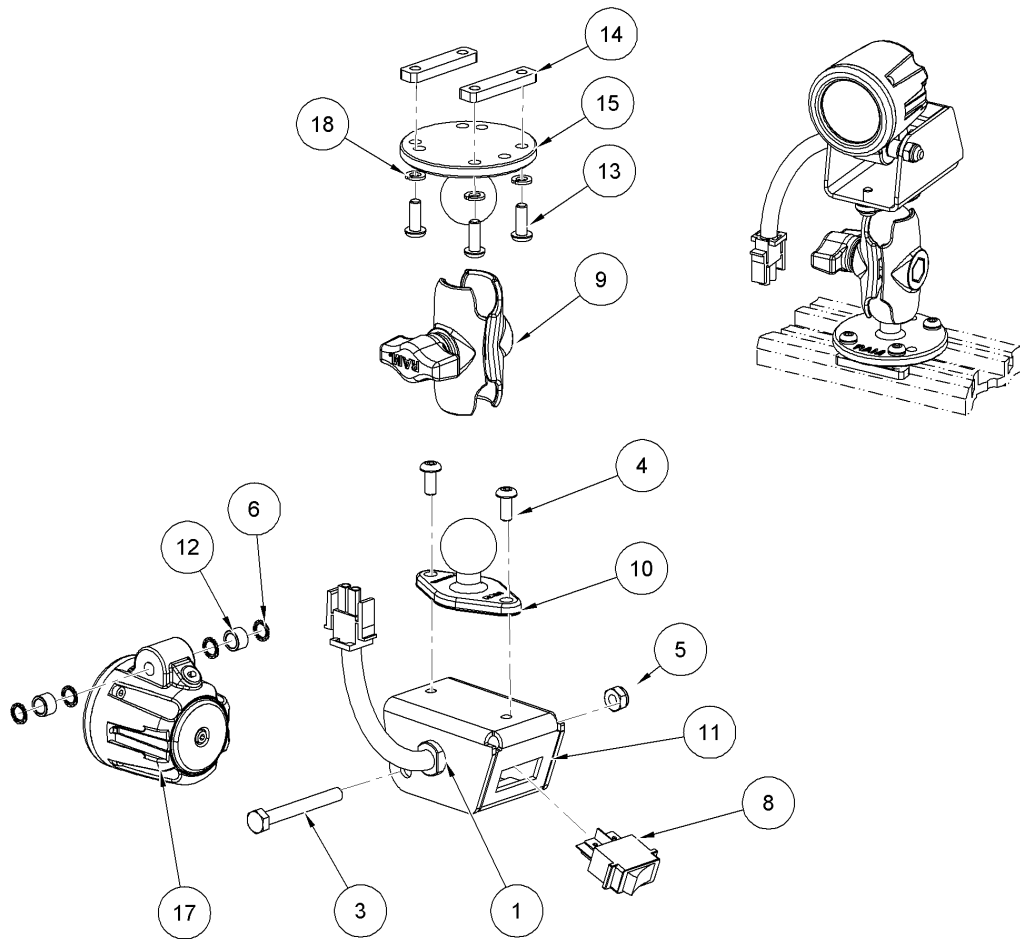

Auxiliary Light Assembly

List 8-11: Auxiliary Light Assembly


FIGURE 8-11 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Auxiliary Light Assembly		
		1143336	Light Assembly, Auxiliary		
1	1	600-232/005	Clamp, Cable		
3	1	5-001-058	Screw	H	
4	2	5-003-007	Screw	H	
5	1	5-016-004	Nut, Hex, Lock, M6	H	
6	AR	5-020-013	Washer, Lock, Toothed	H	
8	1	1105029/002	Switch, Rocker	R	
9	1	1108251	Clamp		
10	1	1108252	Clamp, Mount		
11	1	1156547	Bracket, Auxiliary Light		
12	2	1143369	Shim, Spacer		
13	4	5-003-029	Screw	H	
14	2	1143717	Plate, Mounting		
15	1	1145870	2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball		
16	1	1146074	Wire, Multiconductor (PE to SF/F)		
17	1	1143330	Auxiliary Light		
18	4	5-019-004	Washer, Lock	H	

Service Type R = Recommended Spare

Service Type H = Hardware

Fan Assembly

Figure 8-12: Fan Assembly

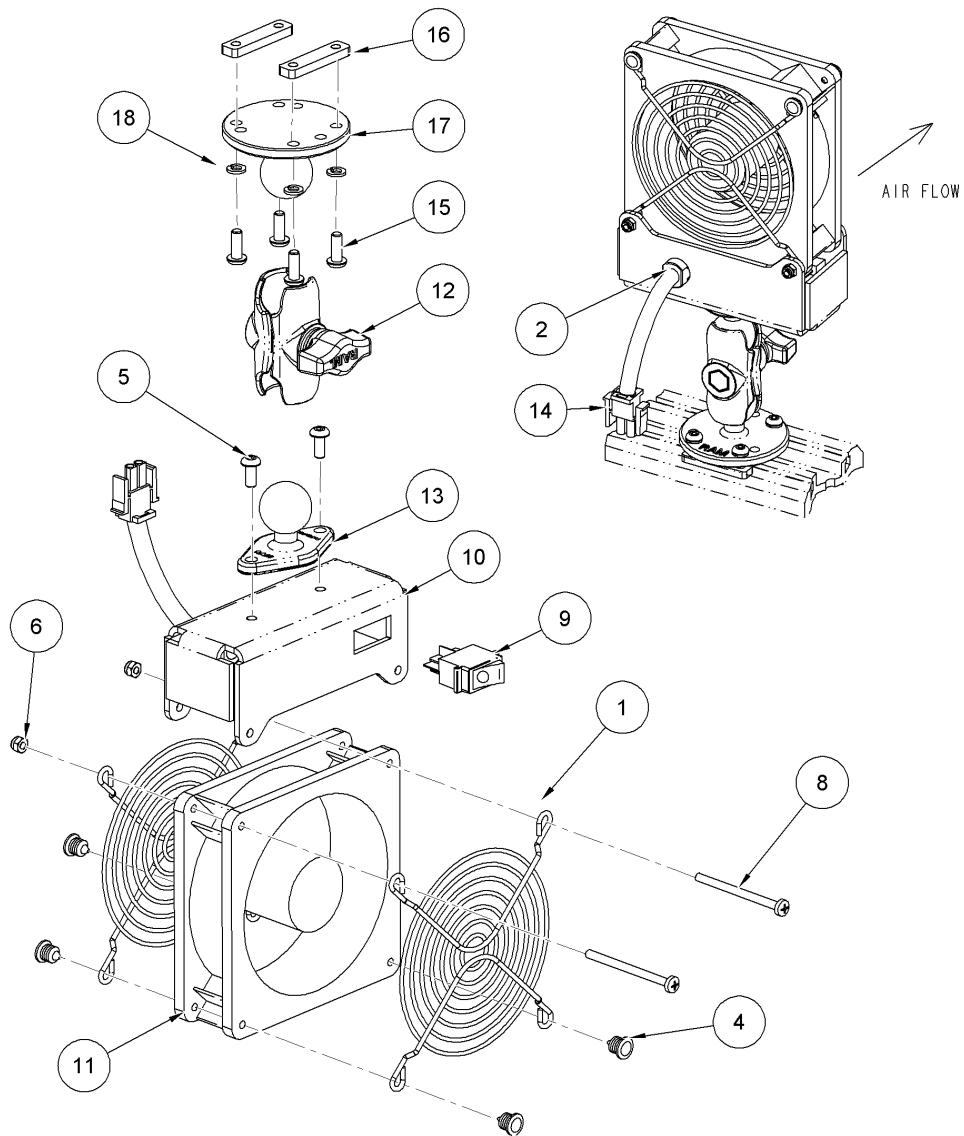

Fan Assembly

List 8-12: Fan Assembly

FIGURE 8-12 ITEM NO.	QTY	PART NUMBER	DESCRIPTION	SERVICE TYPE	USED ON
			Fan Assembly		
		1145886	Fan Assembly		
1	1	590-909	Shroud, Fan		
2	2	600-232/006	Connector, Electric Cord Grip		
4	4	1-085-106/001	Stud, Push		
5	2	5-003-007	Screw	H	
6	2	5-016-002	Nut, M4	H	
8	2	1018204/053	Screw	H	
9	1	1105029/002	Switch, Rocker	R	
10	1	1107091	Bracket		
11	1	1164326/002	Fan Assembly (Includes:)		
	1	1158588/001	Fan		
12	1	1108251	Clamp		
13	1	1108252	Clamp, Mount		
14	1	1148884	Wire, Multiconductor		
15	4	5-003-029	Screw	H	
16	2	1143717	Plate, Mounting		
17	1	1145870	2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball		
18	4	5-019-004	Washer, Lock	H	

Service Type R = Recommended Spare

Service Type H = Hardware

RAYMOND

APPENDIX A Alphabetical Parts Index

Description	Part No.	Page	Description	Part No.	Page
2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball	1145870	8-27	Bearing, Ball	313768-000	5-14
2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball	1145870	8-29	Bearing, Ball	1214006/06	5-14
Accessory Bar Installation		8-25	Bearing, Cone	671-024/04	1-6
Accessory Bar, Load Backrest Mounted		8-23	Bearing, Cone	671-024/04	8-5
Adapter, Hydraulic	800-811/002	6-3	Bearing, Cup	671-024/03	1-6
Arm	167845	3-14	Bearing, Cup	671-024/03	8-5
Assembly, Washer	313950-000	1-2	Bearing, Sealed	49910-05	1-6
Assembly, Washer	313950-000	8-5	Bearing, Sealed	49910-05	7-9
Auxiliary Light	1143330	8-27	Bearing, Sealed	49910-05	7-11
Auxiliary Light Assembly		8-27	Bearing, Steer	1214006/49	4-5
Axle	167843	3-14	Bearing, Thrust	445-236	1-6
Axle, Load Wheel	1189536	7-9	Bearing, Thrust	445-236	8-5
Axle, Load Wheel	1189587	7-9	Block, Torsion	313949-000	8-5
Axle, Load Wheel	1189536	7-11	Board, Terminal	1214006/33	5-15
Axle, Load Wheel	1189588	7-11	Bolt, Hex Socket Head	303009-040	1-2
Backrest, Load	1192345/148	8-3	Bolt, Hex Socket Head	303009-040	7-7
Backrest, Load	1192345/160	8-3	Boot	301253-000	5-20
Backrest, Load	1192345/172	8-3	Boot, Brake	1214006/62	4-7
Backrest, Load With Industrial Battery (20.5 in.)	1192249	8-3	Bracket	1195781	3-6
Backrest, Load With Swing out Battery	1203318/001	8-3	Bracket	1200332/001	5-20
Backrest, Load With Swing out Battery	1203318/002	8-3	Bracket	1107091	8-29
Backrest, Load With Swing out Battery	1203318/003	8-3	Bracket Weldment	1202107/001	5-21
Bar, Latch	1200061/001	5-20	Bracket Weldment	1202108/001	5-21
Battery Connector Assembly	1227719	5-6	Bracket, Auxiliary Light	1156547	8-27
Battery Pack Assembly		5-20	Bracket, Battery	1200074/001	5-20
Battery Pack Assembly, With AGM Battery	1202787/005	1-5	Bracket, Connector	1216268	8-23
Battery Pack Assembly, With AGM Battery	1202787/005	5-20	Bracket, Connector	1216268	8-25
Battery Pack Assembly, With No Battery	1202787/001	1-5	Bracket, Connector	1199157	5-12
Battery Pack Assembly, With No Battery	1202787/001	5-20	Bracket, Cord Assembly	1206684	5-21
Battery Pack Assembly, With Wet Cell Battery	1202787/003	1-5	Bracket, Harness	1252203	5-3
Battery Pack Assembly, With Wet Cell Battery	1202787/003	5-20	Bracket, Harness Routing	1196016	5-3
Battery, AGM	1192540	1-6	Bracket, Retaining	1187703	6-3
Battery, AGM	1192540	5-20	Bracket, Skid (Painted)	1224618/001	2-10
Battery, Wet Cell	27234-00	1-6	Bracket, Skid (Galvanized)	1224618/002	2-10
Battery, Wet Cell	27234-00	5-20	Bracket, Skid (Galvanized)	313495-001	2-10
Bearing	167846	1-6	Bracket, Static Strap	1201804	4-3
Bearing	313063-000	1-6	Brake Assembly	1214006/60	1-5
Bearing	313958-000	1-6	Brake Assembly		4-7
Bearing	49910-01	1-6	Brake Assembly	1214006/60	4-7
Bearing	313063-000	3-6	Bumper Assembly		2-12
Bearing	167846	3-14	Bumper Skirt Assembly		8-21
Bearing	49910-01	7-9	Bumper Weldment, Black	1214736/001	2-12
Bearing	49910-01	7-11	Bumper Weldment, Galvanized	1214736/005	2-12
Bearing	313958-000	8-5	Bumper and Caster Assembly	1200534/002	2-10
Bearing, Ball	1214006/06	1-6	Bumper and Caster Assembly	1200534/004	2-10
Bearing, Ball	1214006/51	1-6	Bumper and Caster Installation		2-10
Bearing, Ball	1214006/53	1-6	Bumper, Stop	1225272	3-3
Bearing, Ball	313737-000	1-6	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	312672-000	1-6
Bearing, Ball	313768-000	1-6	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	312672-000	7-7
Bearing, Ball	1214006/51	4-5	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	312672-000	1-6
Bearing, Ball	313737-000	4-5	Bushing (Greasable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	312672-000	7-7
Bearing, Ball	1214006/53	4-5	Bushing, Composite	312672-001	7-7
			Button, Blank	1036735	3-10
			Button, Horn Left	7571848	3-12
			Button, Horn Right	7571847	3-12

Description	Part No.	Page	Description	Part No.	Page
Button, Lift/Lower Assembly	7578514	3-12	Control Head		3-12
Button, Rear	171665-00	3-12	Controller, Motor	1217319	1-5
Button, Reverser	220822-00	3-12	Controller, Motor	1217319	5-6
Cable Assembly (660 Millimeter)	313225-004	5-20	Controller, Motor	1217319	5-9
Cable Assembly (790 Millimeter)	313225-005	5-20	Coupling	313595-000	6-5
Cable Assembly, B+	313649-015	5-20	Cover	1214006/41	4-5
Cable Assembly, B-	313649-016	5-20	Cover, Console, Key Switch	1193517/001	2-14
Cap	1214006/64	4-7	Cover, Console, Rocker Switch	1193517/002	2-14
Cap	313953-000	8-5	Cover, Display	7573032	3-12
Cap Stem, Machined	1192655	3-6	Cover, Grille	1193514/001	2-14
Cap, Brake	1214006/64	4-3	Cover, Lower, Black	1193515/003	2-14
Card Assembly, Display	1205985/001	1-6	Cover, Lower, Red	1193515/001	2-14
Card Assembly, Display	1205985/001	3-12	Cover, Motor	1214006/01	5-14
Card Assembly, Flex Circuit	1208113/001	3-12	Cover, Speed Sensor	1214006/03	5-14
Card Assembly, VM	1204975/001	1-6	Cover, Upper, Black	1224592/003	2-14
Card Assembly, VM	1204975/001	3-12	Cover, Upper, Red	1224592/001	2-14
Card, Circuit, Sensor, Impact Monitor	1150244/001	1-5	Covers		2-14
Card, Circuit, Sensor, Impact Monitor	1150244/001	8-17	Cylinder Assembly	1187702	1-5
Card, Circuit, Sensor, Impact Monitor	1150244/001	8-19	Cylinder Assembly	1187702	6-3
Card, RDP-T	1085017/002	1-5	Cylinder Assembly	1187702	6-7
Card, RDP-T	1085017/002	8-15	Decal	1217496	5-21
Caster Assembly	1242400/001	1-5	Decal	1217497	5-21
Caster Assembly		8-5	Decal, ACR	1201377	2-8
Caster Assembly	313729-001	8-5	Decal, Brake Release Chinese	1200348/003	2-8
Caster Assembly		8-7	Decal, Brake Release English	1200348/001	2-8
Caster Assembly	1242400/001	8-7	Decal, Brake Release English, French	1200348/002	2-8
Channel, E Bar	1145822/002	8-23	Decal, Cold Storage Oil	1078717	6-3
Channel, E Bar	1145822/002	8-25	Decal, E	1066855/001	2-8
Charger, Battery	1190648/001	1-5	Decal, EE	412-574	2-8
Charger, Battery	1190648/001	5-20	Decal, Emergency Disconnect	313159-001	2-8
Clamp	1108251	8-27	Decal, Emergency Disconnect Metric	1200844	2-8
Clamp	1108251	8-29	Decal, Hydraulic Fluid, Cold Storage	1074515	6-3
Clamp, Cable	171734-00	3-12	Decal, Label	411-421/001	5-6
Clamp, Cable	600-232/007	8-23	Decal, Label	411-421/001	5-9
Clamp, Cable	600-232/007	8-25	Decal, Label	1205927/001	5-21
Clamp, Cable	600-232/005	8-27	Decal, Label	1205927/002	5-21
Clamp, Mount	1108252	8-27	Decal, Label	1205927/003	5-21
Clamp, Mount	1108252	8-29	Decal, No Riding	1200337	2-8
Clamp, U Type	1219872/001	5-3	Decal, No Riding Chinese	1200338	2-8
Clamp, Wire	313547-000	3-6	Decal, Owner Operator Chinese	1200347/003	2-8
Coil, Brake	NSS	4-7	Decal, Owner Operator English	1200347/001	2-8
Connector	1214006/31	5-14	Decal, Owner Operator English, French	1200347/002	2-8
Connector, Battery, Gray	49854-01	1-6	Decal, Owner/Operator	1200335	2-8
Connector, Battery, Gray	49854-01	5-6	Decal, Owner/Operator Chinese	1200336	2-8
Connector, Battery, Gray	49854-01	5-9	Decal, Raymond Black	1201381/002	2-8
Connector, Battery, Red	49854-04	1-6	Decal, Raymond White	1201381/001	2-8
Connector, Battery, Red	49854-04	5-6	Decal, Reflector Bumper	1202795	2-8
Connector, Battery, Red	49854-04	5-9	Decal, Reflector Fork Tip	1202796	2-8
Connector, Battery, Red	49854-04	5-20	Decal, Reflector Tiller	1202797	2-8
Connector, Electric Cord Grip	600-232/006	8-29	Decal, Steam Clean	302402-000	2-8
Contact Assembly		5-12	Decal, Stem Clean Chinese	115705/001	2-8
Contact Assembly Lift	1224300	1-5	Decal, Warning	1200675	2-8
Contact Assembly Lift	1224300	5-9	Decal, Warning	1205924	5-21
Contact Assembly Main	1205262	1-5	Decal, Warning Chinese	1201487	2-8
Contact Assembly Main	1205262	5-9	Decal, Warning English	1200550	2-8
Contact Main	1199318	1-5	Decal, Warning English, French	1200339	2-8
Contact Main	1199318	5-12	Decal, Warning Label	1205926	5-21
Contact Panel Cold Storage		5-9	Drive Motor Assembly		5-14
Contact Panel Standard		5-6	Drive Wheel Assembly		4-9
Contact Pump	1199319	1-5	Dual Load Wheel Assembly		7-11
Contact Pump	1199319	5-12	Electrical System		5-3

Model 8210 Pallet Truck - Alphabetical Parts Index

Description	Part No.	Page	Description	Part No.	Page
EnerSys NexSys - Battery & Charger		5-23	Harness, Wiring, (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP)	1241603/001	8-19
Fan	1158588/001	8-29	Head Assembly, Control	1207931/001	1-5
Fan Assembly		8-29	Head Assembly, Control	1207931/001	3-12
Fan Assembly	1145886	8-29	Holder Assembly Shrinkwrap	1204417	8-13
Fan Assembly (Includes:)	1164326/002	8-29	Horn	1047433/002	1-6
Finish Instructions		2-8	Horn	1047433/002	5-6
Fitting, 90 Degree	800-809/003	6-3	Horn	1047433/002	5-9
Fitting, Grease	840-033	1-2	Horn Assembly	1047433/001	5-6
Fitting, Grease	840-033	7-9	Horn Assembly	1047433/001	5-9
Fitting, Grease	841-111	7-11	Hose Assembly	1211545	6-3
Fitting, Grease	313980-000	8-5	Housing	313957-000	8-5
Fork Trail Machining, Galvanized	1185537/002	7-7	Housing Kit, Caster	1242400/01	8-7
Fork Trail Machining, Galvanized	1187008/002	7-7	Housing, Cylinder	1187700	6-7
Fork Trail Machining, Painted	1185537/001	7-7	Housing, Handle Upper	1207695/001	3-12
Fork Trail Machining, Painted	1187008/001	7-7	Housing, Inner Assembly Includes:	1209901	3-12
Frame, Accessory Bar	1216029	8-23	Hub	312895-000	4-9
Frame, Accessory Bar	1215916	8-25	Hub, Brake	1214006/63	4-7
Frame, Pivot Machining, 18, 20 and 22 in. Fork Width	1188430/002	7-7	Hydraulic System		6-3
Frame, Pivot Machining, 25 and 27 in. Fork Width	1188430/001	7-7	Insulator, Standoff	7-861-002/003	5-6
Fuse (125 Amp)	590-587/107	1-6	Insulator, Standoff	7-861-002/003	5-9
Fuse (125 Amp)	590-587/107	5-9	Key	313758-000	5-14
Fuse (125 Amp)	590-587/107	5-12	Keypad, Assembly (Blank) (In Lieu of Keypad)	1228349/002	3-8
Fuse (350 Amp)	590-587/117	1-6	Keypad, Assembly (Keypad)	1228349/001	3-8
Fuse (350 Amp)	590-587/117	5-9	Kit, Flow Control (2.2 GPM)	1207968/02	6-5
Fuse (400 Amp)	590-587/118	1-6	Kit, Pump	313615-000	6-5
Fuse (400 Amp)	590-587/118	5-6	Kit, Relief Valve	314474-000	1-6
Fuse (400 Amp)	590-587/118	5-9	Kit, Relief Valve	314474-000	6-5
Fuse, Potted	1213821/400	1-6	Kit, Reservoir	1207968/03	6-5
Fuse, Potted	1213821/400	5-6	Kit, Solenoid Valve	1207968/01	1-6
Fuse, Potted (125 Amp) EE	121381/125	1-6	Kit, Solenoid Valve	1207968/01	6-5
Fuse, Potted (125 Amp) EE	121381/125	5-12	Kit, Start Switch	313618-000	1-6
Gasket, Display	1207699	1-6	Kit, Start Switch	313618-000	6-5
Gasket, Display	1207699	3-12	Knob	1123277	5-20
Gasket, E Steer Handle	1205531	1-6	Knob	1202811	5-21
Gasket, E Steer Handle	1205531	3-12	Label, U	1214006/34	5-15
Gear	1214006/44	4-5	Label, V	1214006/35	5-15
Gear	1214006/45	4-5	Label, W	1214006/36	5-15
Gearbox Assembly		4-5	Lift Cylinder Assembly		6-7
Grommet	1195782	3-3	Lift Linkage Assembly		7-6
Grommet	1202536	5-3	Light Assembly, Auxiliary	1143336	8-27
Grommet	1214006/25	5-14	Link Assembly, Upper (Includes)	313186-001	7-7
Grommet, Rubber	11813-07	5-20	Link, Lower Assembly	1185558/001	7-7
Grommet, Rubber	11813-08	5-20	Link, Lower Assembly	1185562/001	7-7
Handle Assembly		3-6	Link, Lower Assembly	1185559/001	7-7
Handle Assembly With Keypad	1208728/005	3-8	Link, Lower Assembly, Galvanized	1185558/002	7-7
Handle Assembly Without Keypad	1208728/006	3-8	Link, Lower Assembly, Galvanized	1185562/002	7-7
Handle Head Assembly		3-10	Link, Lower Assembly, Galvanized	1185559/002	7-7
Handle Head Assembly	1208636/001	3-10	Load Backrest Installation		8-3
Handle Housing (Under Item 1)	1215074	3-10	Load Wheel Assembly		7-9
Handle Installation		3-3	Lug, Stop	167830	3-14
Handle Tiller Assembly		3-8	Magnet Surface Mount	1142043	8-11
Harness	1216353	8-25	Major Assemblies		2-3
Harness (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP/ TP4 to PC9)	1240996/001	8-19	Motor, Lift Pump	313621-000	1-5
Harness Accessory Bar	1216353	8-23	Motor, Lift Pump	313621-000	6-5
Harness Assembly	1226123/001	3-8	Nut	1214006/15	1-2
Harness, Interface	1192069	5-20	Nut	1214006/16	1-2
Harness, Wiring	1101508	8-15	Nut	301960-006	1-2
Harness, Wiring	1227479/001	8-17	Nut	313947-000	1-2
			Nut	5-015-005	1-2
			Nut	750-013	1-2

Description	Part No.	Page	Description	Part No.	Page
Nut	5-015-005	5-6	Plate, Mounting	1143717	8-27
Nut	5-015-005	5-9	Plate, Mounting	1143717	8-29
Nut	1214006/15	5-14	Plate, Side, Kit	1242400/04	8-7
Nut	1214006/16	5-14	Plate, Symbol, Fork Lift	171585-002	3-10
Nut	750-013	5-20	Plate, Symbol, Fork Lower	171585-001	3-10
Nut	301960-006	5-20	Plate, Symbol, Turtle	1210674	3-10
Nut	5-015-005	7-7	Plate, Symbol, Turtle, Click to Creep	1210674	3-3
Nut	313947-000	8-5	Plug	1214006/27	5-14
Nut, Clip	2393833	5-20	Plug	1214006/29	5-14
Nut, Flange, Lock, M10	1169843/004	1-2	Plug, Drain	313780-000	4-5
Nut, Flange, Lock, M10	1169843/004	4-3	Plug, Fill/Level	313785-000	4-5
Nut, Hex, Flange	1169841/003	1-2	Pullrod Assembly, 32 in.	1184885/001	7-6
Nut, Hex, Flange	1169841/003	2-10	Pullrod Assembly, 32 in.	1184885/008	7-6
Nut, Hex, Flange Lock	1169843/003	1-2	Pullrod Assembly, 32 in.	1184885/015	7-6
Nut, Hex, Flange Lock	1169843/003	4-3	Pullrod Assembly, 32 in.	1184885/022	7-6
Nut, Hex, Flange Lock	1169843/003	5-3	Pullrod Assembly, 36 in.	1184885/002	7-6
Nut, Hex, Flange Lock	1169843/003	5-6	Pullrod Assembly, 36 in.	1184885/009	7-6
Nut, Hex, Flange Lock	1169843/003	5-9	Pullrod Assembly, 36 in.	1184885/016	7-6
Nut, Hex, Flange Lock, M6	1169843/002	1-2	Pullrod Assembly, 36 in.	1184885/023	7-6
Nut, Hex, Flange Lock, M6	1169843/002	8-23	Pullrod Assembly, 42 in.	1184885/003	7-6
Nut, Hex, Flange Lock, M6	1169843/002	8-25	Pullrod Assembly, 42 in.	1184885/010	7-6
Nut, Hex, Lock	5-015-004	1-2	Pullrod Assembly, 42 in.	1184885/017	7-6
Nut, Hex, Lock	5-015-004	8-11	Pullrod Assembly, 42 in.	1184885/024	7-6
Nut, Hex, Lock, M6	5-016-004	1-2	Pullrod Assembly, 46 in.	1184885/004	7-6
Nut, Hex, Lock, M6	5-016-004	8-27	Pullrod Assembly, 46 in.	1184885/011	7-6
Nut, Lock	1214006/17	1-2	Pullrod Assembly, 46 in.	1184885/018	7-6
Nut, Lock	1214006/17	5-14	Pullrod Assembly, 46 in.	1184885/025	7-6
Nut, Locking	671-041/21	1-2	Pullrod Assembly, 48 in.	1184885/005	7-6
Nut, Locking	671-041/21	8-5	Pullrod Assembly, 48 in.	1184885/012	7-6
Nut, Lug	313046-000	1-2	Pullrod Assembly, 48 in.	1184885/019	7-6
Nut, Lug	313046-000	4-9	Pullrod Assembly, 48 in.	1184885/026	7-6
Nut, M4	5-016-002	1-2	Pullrod Assembly, 48 in. (3in.Lowered Profile)	1187090/001	7-6
Nut, M4	5-016-002	8-29	Pullrod Assembly, 48 in. (3in.Lowered Profile)	1187090/002	7-6
O-Ring	314131-000	1-6	Pullrod Assembly, 48 in. (3in.Lowered Profile)	1187090/003	7-7
O-Ring	314131-000	8-5	Pullrod Assembly, 48 in. (3in.Lowered Profile)	1187090/004	7-7
Panel	1213575	5-6	Pullrod Assembly, 54 in.	1184885/006	7-6
Panel	1213575	5-9	Pullrod Assembly, 54 in.	1184885/013	7-6
Pin	313955-000	8-5	Pullrod Assembly, 54 in.	1184885/020	7-6
Pin Weldment, Flagged	1210510	7-7	Pullrod Assembly, 54 in.	1184885/027	7-6
Pin, Cotter	1187704	6-3	Pullrod Assembly, 60 in.	1184885/007	7-6
Pin, Lower Link	1189539	7-7	Pullrod Assembly, 60 in.	1184885/014	7-6
Pin, Pivot, Handle	1195655	3-6	Pullrod Assembly, 60 in.	1184885/021	7-6
Pin, Pull Rod	1189538	7-7	Pullrod Assembly, 60 in.	1184885/028	7-6
Pin, Retaining	1187705	6-3	Pump and Motor Assembly	1207968/002	1-5
Pin, Spirol	1188528/001	7-7	Pump and Motor Assembly	1207968/002	6-3
Pin, Spirol	1188528/002	7-7	Pump and Motor Assembly	1207968/002	6-5
Pin, Spirol	1188528/003	7-7	Pump and Motor Assembly	1207968/002	6-5
Pin, Spirol	1188528/002	7-9	Relief, Strain	313634-000	3-8
Pin, Spirol	1188528/002	7-11	Resistor	1107328	1-6
Pin, Threaded	1214006/14	5-14	Resistor	1107328	5-6
Pin, Wheel Fork	1189537	7-7	Resistor	1107328	5-9
Pinion	1214006/42	4-5	Resistor Assembly	1056002/001	1-6
Pinion, Speed Sensor	1214006/02	5-14	Resistor Assembly	1056002/001	5-6
Plate	1198905/001	5-20	Resistor Assembly	1056002/001	5-9
Plate	1199328/001	5-20	Retainer	171662-00	3-12
Plate	313942-000	8-5	Retainer, Resistor	1078465	5-6
Plate	313941-000	8-5	Retainer, Resistor	1078465	5-9
Plate, Backing	1209329	8-21	Ring, Retaining	313782-000	4-5
Plate, Backing, Upper	1219151	3-8			
Plate, Blank	171583	3-10			
Plate, Lower	1219152	3-8			

Model 8210 Pallet Truck - Alphabetical Parts Index

Description	Part No.	Page	Description	Part No.	Page
Ring, Retaining	313759-000	5-14	Screw	10150232-02	3-12
Ring, Retaining	313755-000	5-14	Screw	10150120-12	3-12
Ring, Spacer	313778-000	4-5	Screw	10150237-90	3-12
Ring, Stop	23075-00	6-7	Screw	171708	3-14
Rocker, Left	313050-000	3-14	Screw	301955-020	4-3
Rocker, Right	313049-000	3-14	Screw	1214006/65	4-7
Rod, Piston	1187701	6-7	Screw	1212116/001	5-3
Rotor	1214006/04	5-14	Screw	5-003-502	5-3
Rotor, Brake	1214006/61	1-7	Screw	1169615/505	5-3
Rotor, Brake	1214006/61	4-7	Screw	5-001-003	5-6
Screw	10150120-12	1-2	Screw	5-001-003	5-9
Screw	10150232-02	1-2	Screw	5-002-573	5-9
Screw	10150232-07	1-2	Screw	5-007-509	5-12
Screw	10150237-90	1-2	Screw	5-007-508	5-12
Screw	1018204/053	1-2	Screw	1214006/13	5-14
Screw	1031785/001	1-2	Screw	5-002-573	5-20
Screw	1169615/505	1-2	Screw	301826-012	5-20
Screw	1169616/533	1-2	Screw	301826-020	5-20
Screw	1212116/001	1-2	Screw	301827-025	5-20
Screw	1214006/13	1-2	Screw	1169616/533	5-23
Screw	1214006/65	1-2	Screw	1031785/001	6-3
Screw	1215449/001	1-2	Screw	29544	8-3
Screw	1215451/001	1-2	Screw	313948-000	8-5
Screw	171708	1-2	Screw	313951-000	8-5
Screw	29544	1-2	Screw	5-007-027	8-23
Screw	301826-012	1-2	Screw	5-007-030	8-23
Screw	301826-020	1-2	Screw	5-007-027	8-25
Screw	301827-025	1-2	Screw	29544	8-25
Screw	301955-020	1-2	Screw	5-001-058	8-27
Screw	301955-055	1-3	Screw	5-003-007	8-27
Screw	301955-075	1-3	Screw	5-003-029	8-27
Screw	313948-000	1-3	Screw	5-003-007	8-29
Screw	313951-000	1-3	Screw	1018204/053	8-29
Screw	314017-012	1-3	Screw	5-003-029	8-29
Screw	5-001-003	1-3	Screw, Button Head	5-007-522	1-3
Screw	5-001-058	1-3	Screw, Button Head	5-007-522	3-6
Screw	5-002-056	1-3	Screw, Flange Head	1169616/502	1-3
Screw	5-002-059	1-3	Screw, Flange Head	1169616/504	1-3
Screw	5-002-531	1-3	Screw, Flange Head	1169616/511	1-3
Screw	5-002-573	1-3	Screw, Flange Head	1169616/513	1-3
Screw	5-003-007	1-3	Screw, Flange Head	1169616/536	1-3
Screw	5-003-029	1-3	Screw, Flange Head	1169616/513	2-10
Screw	5-003-502	1-3	Screw, Flange Head	1169616/536	2-10
Screw	5-004-004	1-3	Screw, Flange Head	1169616/511	2-12
Screw	5-007-027	1-3	Screw, Flange Head	1169616/502	2-12
Screw	5-007-030	1-3	Screw, Flange Head	1169616/502	5-6
Screw	5-007-508	1-3	Screw, Flange Head	1169616/504	5-6
Screw	5-007-509	1-3	Screw, Flange Head	1169616/502	5-9
Screw	7-701-002/006	1-3	Screw, Flange Head	1169616/504	5-9
Screw	301955-055	3-3	Screw, Flange Head	1169616/511	5-23
Screw	301955-075	3-3	Screw, Flange Head	1169616/511	6-3
Screw	314017-012	3-3	Screw, Flange Head	1169616/511	7-7
Screw	5-002-531	3-6	Screw, Flange Head, Hex	1169616/012	1-3
Screw	5-001-058	3-8	Screw, Flange Head, Hex	1169616/016	1-3
Screw	5-002-056	3-8	Screw, Flange Head, Hex	1169616/036	1-3
Screw	5-002-059	3-8	Screw, Flange Head, Hex	1169616/507	1-3
Screw	5-004-004	3-8	Screw, Flange Head, Hex	1169616/016	4-3
Screw	7-701-002/006	3-12	Screw, Flange Head, Hex	1169616/036	4-3
Screw	1215449/001	3-12	Screw, Flange Head, Hex	1169616/012	5-6
Screw	1215451/001	3-12	Screw, Flange Head, Hex	1169616/507	5-6
Screw	10150232-07	3-12	Screw, Flange Head, Hex	1169616/507	5-9

Description	Part No.	Page	Description	Part No.	Page
Screw, Flange Head, Hex	1169616/012	5-9	Spacer	771-033	7-11
Screw, Flange Head, Thread Forming	301827-016	1-3	Spec Tag	1202633/001	2-8
Screw, Flange Head, Thread Forming	301827-016	5-20	Spec Tag (Metal Option)	1063015/X08	2-8
Screw, Hex Head	1214006/09	1-3	Spring	167836-00	1-7
Screw, Hex Head	1214006/54	1-3	Spring	167840	1-7
Screw, Hex Head	1214006/54	4-5	Spring	167836-00	3-12
Screw, Hex Head	1214006/09	5-14	Spring	167840	3-14
Screw, M6 X 20	5-004-015	1-3	Spring, Compression	1202810/001	5-21
Screw, M6 X 20	5-004-015	8-11	Spring, Flat	1198781	2-12
Screw, Set	301740-001	1-3	Spring, Poly Block	1242400/02	8-7
Screw, Set	301740-001	3-6	Spring, Torsion	312855-001	1-7
Screw, Shoulder	1188712	7-7	Spring, Torsion	312855-001	3-6
Screw, Socket Head	1214006/10	1-3	Start Switch Installation		5-25
Screw, Socket Head	1214006/11	1-3	Strap	611-029	3-6
Screw, Socket Head	1214006/12	1-3	Strap	611-028	5-3
Screw, Socket Head	1214006/55	1-4	Strap	611-028	5-6
Screw, Socket Head	1214006/56	1-4	Strap	611-028	5-9
Screw, Socket Head	1214006/57	1-4	Strap	1032103/001	5-14
Screw, Socket Head	1214006/55	4-5	Strap	25332-01	5-20
Screw, Socket Head	1214006/56	4-5	Strap	611-028	8-17
Screw, Socket Head	1214006/57	4-5	Strap	611-028	8-23
Screw, Socket Head	1214006/10	5-14	Strap	611-028	8-25
Screw, Socket Head	1214006/11	5-14	Strap, Static	306241-004	4-3
Screw, Socket Head	1214006/12	5-14	Strip, Sealing	1214006/26	5-14
Screw, Socket Head, Cap	5-002-506	1-4	Stud, Push	1-085-106/001	8-29
Screw, Socket Head, Cap	5-002-506	5-3	Stud, Wheel	313734-000	4-5
Screw, Socket, Button Head	5-007-524	1-4	Support	167844	3-14
Screw, Socket, Button Head	5-007-524	8-21	Switch, Horn	1226372/001	1-7
Seal, Ring	313779-000	1-7	Switch, Horn	1226372/002	1-7
Seal, Ring	313779-000	4-5	Switch, Horn	1226372/001	3-12
Seal, Rod	49553-06	1-7	Switch, Horn	1226372/002	3-12
Seal, Rod	49553-06	6-7	Switch, Key, Main On/Off	1020341/002	1-7
Seal, Shaft	1214006/07	1-7	Switch, Key, Main On/Off	1020341/002	5-25
Seal, Shaft	313736-000	1-7	Switch, Main On/Off	305493-000	1-7
Seal, Shaft	313756-000	1-7	Switch, Main On/Off	305493-000	5-25
Seal, Shaft	313736-000	4-5	Switch, Rocker	1105029/002	1-7
Seal, Shaft	1214006/07	5-14	Switch, Rocker	1105029/002	8-27
Seal, Shaft	313756-000	5-14	Switch, Rocker	1105029/002	8-29
Sensor Assembly, Proximity	1245054	1-7	Switch, Rocker, Brake Release	1202622	1-7
Sensor Assembly, Proximity	1245054	5-3	Switch, Rocker, Brake Release	1202622	5-25
Sensor Assembly, Proximity Includes:	1189601	3-6	Tab, 45 Degrees	310906-000	6-5
Sensor, Proximity	1099771/003	1-7	Tack, Metal	49663-00	2-8
Sensor, Proximity	1099771/003	3-6	Terminal	49771-01	5-6
Sensor, Speed	1214006/32	1-7	Terminal	49771-01	5-9
Sensor, Speed	1214006/32	5-14	Terminal	1-010-253	5-25
Sensor, Temperature	1214006/66	1-7	Thermistor Assembly	1192068	5-20
Sensor, Temperature	1214006/66	5-15	Thumb Wheel Assembly		3-14
Shaft, Flange	313735-000	4-5	Tiller	1189480/001	3-8
Shaft, Pinion	1214006/43	4-5	Tire, Drive (Black Poly)	632-090/018	1-7
Shim, Spacer	1143369	8-27	Tire, Drive (Black Poly)	632-090/018	4-9
Shoe, Skid Iron (Galvanized)	1219060/002	2-10	Tire, Drive (Black Poly, Crowned)	632-089/004	1-7
Shoe, Skid Iron (Painted)	1219060/001	2-10	Tire, Drive (Black Poly, Crowned)	632-089/004	4-9
Shoe, Skid, Poly	313494-000	2-10	Tire, Drive (Lugged Rubber)	630-235/003	1-7
Shrinkwrap Holder Installation		8-13	Tire, Drive (Lugged Rubber)	630-235/003	4-9
Shroud, Fan	590-909	8-29	Tire, Drive (Non-Marking Rubber)	630-235/002	1-7
Skirt, Rubber	1214819/001	8-21	Tire, Drive (Non-Marking Rubber)	630-235/002	4-9
Sleeve, Clamp	1214006/59	4-5	Tire, Drive (Smooth Black Rubber)	630-235/001	1-7
Sleeve, Insulating	1214006/37	5-15	Tire, Drive (Smooth Black Rubber)	630-235/001	4-9
Sleeve, Spring	313088-000	3-6	Tire, Drive (Traction Rubber)	630-235/201	1-7
Spacer	771-033	1-4	Tire, Drive (Traction Rubber)	630-235/201	4-9
Spacer	1214006/08	5-14	Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	632-090/001	1-7

Description	Part No.	Page	Description	Part No.	Page
Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	632-090/001	4-9	Washer, Serrated Conical	1202195	5-3
Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	632-090/008	1-7	Washer, Thrust	671-024/09	1-4
Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	632-090/008	4-9	Washer, Thrust	671-024/09	8-5
Traction Motor and Gearbox Assembly	1214006	4-5	Wedgelocks	1214006/28	5-14
Traction Motor and Gearbox Assembly	1214006	4-7	Wedgelocks	1214006/30	5-14
Transmission Installation		4-3	Wheel	313945-000	1-7
Tray	1193283	8-11	Wheel	1190142/001	7-11
Tray Assembly	1196021	8-9	Wheel	313945-000	8-5
Tray Assembly		8-11	Wheel Assembly, Drive (Black Poly)	313054-002	4-9
Tray Assembly	1196021	8-11	Wheel Assembly, Drive (Crowned Vulkollan)	313054-004	4-9
Tray Insert	1193040	8-9	Wheel Assembly, Drive (Non-Marking Rubber)	313054-005	4-9
Tray Installation		8-9	Wheel Assembly, Drive (Red Poly)	313054-003	4-9
Vent	313786-000	4-5	Wheel Assembly, Drive (Smooth Black Rubber)	313054-001	4-9
Washer	11016-02	1-4	Wheel Assembly, Drive (Smooth, Grip, Rubber)	313054-007	1-7
Washer	11936-08	1-4	Wheel Assembly, Drive (Smooth, Grip, Rubber)	313054-007	4-9
Washer	1202195	1-4	Wheel Assembly, Drive (Smoothy)	313054-008	4-9
Washer	1214006/18	1-4	Wheel Assembly, Drive (Traction Rubber)	313054-006	4-9
Washer	1214006/19	1-4	Wheel Assembly, Thumb	313051-000	3-14
Washer	1214006/22	1-4	Wheel Kit, Caster	1242400/03	1-7
Washer	171710	1-4	Wheel Kit, Caster	1242400/03	8-7
Washer	11936-08	3-6	Wheel, Load	312636-000	1-7
Washer	171710	3-14	Wheel, Load	312636-000	7-9
Washer	1202195	5-6	Window, Display	1215904	3-12
Washer	1202195	5-9	Wiper, Cylinder Rod	14966-01	1-7
Washer	1214006/18	5-14	Wiper, Cylinder Rod	14966-01	6-7
Washer	1214006/19	5-14	Wire Assembly, Single	1155996/008	5-6
Washer	1214006/22	5-14	Wire Assembly, Single	1155996/012	5-9
Washer	11016-02	5-20	Wire Assembly, Single	1155996/013	5-10
Washer, Bottom	1146154	1-4	Wire Assembly, Single, Battery +	1155996/004	5-6
Washer, Bottom	1146154	8-11	Wire Assembly, Single, Battery +	1155996/004	5-9
Washer, Flat	313946-000	1-4	Wire Assembly, Single, Battery -	1155996/005	5-6
Washer, Flat	5-018-003	1-4	Wire Assembly, Single, Battery -	1155996/005	5-9
Washer, Flat	5-018-006	1-4	Wire, Multiconductor	1148884	8-29
Washer, Flat	771-156	1-4	Wire, Multiconductor (PE to SF/F)	1146074	8-27
Washer, Flat	5-018-006	5-6	Wire, Single Assembly	1155996/011	5-6
Washer, Flat	5-018-006	5-9	Wire, Single Assembly	1157843/001	5-9
Washer, Flat	5-018-003	5-12	iMonitor W/ Ball Joint (Display	1222217/001	1-5
Washer, Flat	771-156	7-11	iMonitor W/ Ball Joint (Display	1222217/001	8-19
Washer, Flat	313946-000	8-5	iPORT Installation		8-15
Washer, Flat, Brass	7-775-108	1-4	iW Essential Installation		8-17
Washer, Flat, Brass	7-775-108	5-6	iW Evolution , Activation Only	124807/003	8-19
Washer, Flat, Brass	7-775-108	5-9	iW Evolution , i Monitor	124807/002	8-19
Washer, Lock	1214006/20	1-4	iWarehouse Evolution		8-19
Washer, Lock	1214006/21	1-4			
Washer, Lock	313744-000	1-4			
Washer, Lock	5-019-004	1-4			
Washer, Lock	5-019-006	1-4			
Washer, Lock	313744-000	4-5			
Washer, Lock	5-019-006	5-6			
Washer, Lock	5-019-006	5-9			
Washer, Lock	1214006/20	5-14			
Washer, Lock	1214006/21	5-14			
Washer, Lock	5-019-004	8-27			
Washer, Lock	5-019-004	8-29			
Washer, Lock, Toothed	5-020-013	1-4			
Washer, Lock, Toothed	5-020-013	8-27			
Washer, Plastic	313879-001	1-7			
Washer, Plastic	313879-001	3-6			
Washer, Serrated Conical	1202195	1-4			

RAYMOND

APPENDIX B Numerical Parts Index

Part No.	Description	Page	Part No.	Description	Page
1-010-253	Terminal	5-25	1145870	2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball	8-27
1-085-106/001	Stud, Push	8-29	1145870	2.5 in. Round Ball Base With The AMPs Hole Pattern and 1.0 in. Ball	8-29
10150120-12	Screw	1-2	1145886	Fan Assembly	8-29
10150120-12	Screw	3-12	1146074	Wire, Multiconductor (PE to SF/F)	8-27
10150232-02	Screw	1-2	1146154	Washer, Bottom	1-4
10150232-02	Screw	3-12	1146154	Washer, Bottom	8-11
10150232-07	Screw	1-2	1148884	Wire, Multiconductor	8-29
10150232-07	Screw	3-12	1150244/001	Card, Circuit, Sensor, Impact Monitor	1-5
10150237-90	Screw	1-2	1150244/001	Card, Circuit, Sensor, Impact Monitor	8-17
10150237-90	Screw	3-12	1150244/001	Card, Circuit, Sensor, Impact Monitor	8-19
1018204/053	Screw	1-2	1155996/004	Wire Assembly, Single, Battery +	5-6
1018204/053	Screw	8-29	1155996/004	Wire Assembly, Single, Battery +	5-9
1020341/002	Switch, Key, Main On/Off	1-7	1155996/005	Wire Assembly, Single, Battery +	5-6
1020341/002	Switch, Key, Main On/Off	5-25	1155996/005	Wire Assembly, Single, Battery -	5-9
1031785/001	Screw	1-2	1155996/008	Wire Assembly, Single	5-6
1031785/001	Screw	6-3	1155996/011	Wire, Single Assembly	5-6
1032103/001	Strap	5-14	1155996/012	Wire Assembly, Single	5-9
1036735	Button, Blank	3-10	1155996/013	Wire Assembly, Single	5-10
1047433/001	Horn Assembly	5-6	1156547	Bracket, Auxiliary Light	8-27
1047433/001	Horn Assembly	5-9	115705/001	Decal, Stem Clean Chinese	2-8
1047433/002	Horn	1-6	1157843/001	Wire, Single Assembly	5-9
1047433/002	Horn	5-6	1158588/001	Fan	8-29
1047433/002	Horn	5-9	1164326/002	Fan Assembly (Includes:)	8-29
1056002/001	Resistor Assembly	1-6	1169615/505	Screw	1-2
1056002/001	Resistor Assembly	5-6	1169615/505	Screw	5-3
1056002/001	Resistor Assembly	5-9	1169616/012	Screw, Flange Head, Hex	1-3
1063015/X08	Spec Tag (Metal Option)	2-8	1169616/012	Screw, Flange Head, Hex	5-6
1066855/001	Decal, E	2-8	1169616/012	Screw, Flange Head, Hex	5-9
1074515	Decal, Hydraulic Fluid, Cold Storage	6-3	1169616/016	Screw, Flange Head, Hex	1-3
1078465	Retainer, Resistor	5-6	1169616/016	Screw, Flange Head, Hex	4-3
1078465	Retainer, Resistor	5-9	1169616/036	Screw, Flange Head, Hex	1-3
1078717	Decal, Cold Storage Oil	6-3	1169616/036	Screw, Flange Head, Hex	4-3
1085017/002	Card, RDP-T	1-5	1169616/502	Screw, Flange Head	1-3
1085017/002	Card, RDP-T	8-15	1169616/502	Screw, Flange Head	2-12
1099771/003	Sensor, Proximity	1-7	1169616/502	Screw, Flange Head	5-6
1099771/003	Sensor, Proximity	3-6	1169616/502	Screw, Flange Head	5-9
1101508	Harness, Wiring	8-15	1169616/504	Screw, Flange Head	1-3
11016-02	Washer	1-4	1169616/504	Screw, Flange Head	5-6
11016-02	Washer	5-20	1169616/504	Screw, Flange Head	5-9
1105029/002	Switch, Rocker	1-7	1169616/507	Screw, Flange Head, Hex	1-3
1105029/002	Switch, Rocker	8-27	1169616/507	Screw, Flange Head, Hex	5-6
1105029/002	Switch, Rocker	8-29	1169616/507	Screw, Flange Head, Hex	5-9
1107091	Bracket	8-29	1169616/511	Screw, Flange Head	1-3
1107328	Resistor	1-6	1169616/511	Screw, Flange Head	2-12
1107328	Resistor	5-6	1169616/511	Screw, Flange Head	5-23
1107328	Resistor	5-9	1169616/511	Screw, Flange Head	6-3
1108251	Clamp	8-27	1169616/511	Screw, Flange Head	7-7
1108251	Clamp	8-29	1169616/513	Screw, Flange Head	1-3
1108252	Clamp, Mount	8-27	1169616/513	Screw, Flange Head	2-10
1108252	Clamp, Mount	8-29	1169616/533	Screw	1-2
1123277	Knob	5-20	1169616/533	Screw	5-23
1142043	Magnet Surface Mount	8-11	1169616/536	Screw, Flange Head	1-3
1143330	Auxiliary Light	8-27	1169616/536	Screw, Flange Head	2-10
1143336	Light Assembly, Auxiliary	8-27	1169841/003	Nut, Hex, Flange	1-2
1143369	Shim, Spacer	8-27	1169841/003	Nut, Hex, Flange	2-10
1143717	Plate, Mounting	8-27	1169843/002	Nut, Hex, Flange Lock. M6	1-2
1143717	Plate, Mounting	8-29	1169843/002	Nut, Hex, Flange Lock. M6	8-23
1145822/002	Channel, E Bar	8-23	1169843/002	Nut, Hex, Flange Lock. M6	8-25
1145822/002	Channel, E Bar	8-25			

Part No.	Description	Page	Part No.	Description	Page
1169843/003	Nut, Hex, Flange Lock	1-2	1187705	Pin, Retaining	6-3
1169843/003	Nut, Hex, Flange Lock	4-3	1188430/001	Frame, Pivot Machining, 25 and 27 in. Fork Width	7-7
1169843/003	Nut, Hex, Flange Lock	5-3	1188430/002	Frame, Pivot Machining, 18, 20 and 22 in. Fork Width	7-7
1169843/003	Nut, Hex, Flange Lock	5-6	1188528/001	Pin, Spirol	7-7
1169843/003	Nut, Hex, Flange Lock	5-9	1188528/002	Pin, Spirol	7-7
1169843/004	Nut, Flange, Lock, M10	1-2	1188528/002	Pin, Spirol	7-9
1169843/004	Nut, Flange, Lock, M10	4-3	1188528/002	Pin, Spirol	7-11
11813-07	Grommet, Rubber	5-20	1188528/003	Pin, Spirol	7-7
11813-08	Grommet, Rubber	5-20	1188712	Screw, Shoulder	7-7
1184885/001	Pullrod Assembly, 32 in.	7-6	1189480/001	Tiller	3-8
1184885/002	Pullrod Assembly, 36 in.	7-6	1189536	Axle, Load Wheel	7-9
1184885/003	Pullrod Assembly, 42 in.	7-6	1189536	Axle, Load Wheel	7-11
1184885/004	Pullrod Assembly, 46 in.	7-6	1189537	Pin, Wheel Fork	7-7
1184885/005	Pullrod Assembly, 48 in.	7-6	1189538	Pin, Pull Rod	7-7
1184885/006	Pullrod Assembly, 54 in.	7-6	1189539	Pin, Lower Link	7-7
1184885/007	Pullrod Assembly, 60 in.	7-6	1189587	Axle, Load Wheel	7-9
1184885/008	Pullrod Assembly, 32 in.	7-6	1189588	Axle, Load Wheel	7-11
1184885/009	Pullrod Assembly, 36 in.	7-6	1189601	Sensor Assembly, Proximity Includes:	3-6
1184885/010	Pullrod Assembly, 42 in.	7-6	1190142/001	Wheel	7-11
1184885/011	Pullrod Assembly, 46 in.	7-6	1190648/001	Charger, Battery	1-5
1184885/012	Pullrod Assembly, 48 in.	7-6	1190648/001	Charger, Battery	5-20
1184885/013	Pullrod Assembly, 54 in.	7-6	1192068	Thermistor Assembly	5-20
1184885/014	Pullrod Assembly, 60 in.	7-6	1192069	Harness, Interface	5-20
1184885/015	Pullrod Assembly, 32 in.	7-6	1192249	Backrest, Load With Industrial Battery (20.5 in.)	8-3
1184885/016	Pullrod Assembly, 36 in.	7-6	1192345/148	Backrest, Load	8-3
1184885/017	Pullrod Assembly, 42 in.	7-6	1192345/160	Backrest, Load	8-3
1184885/018	Pullrod Assembly, 46 in.	7-6	1192345/172	Backrest, Load	8-3
1184885/019	Pullrod Assembly, 48 in.	7-6	1192540	Battery, AGM	1-6
1184885/020	Pullrod Assembly, 54 in.	7-6	1192540	Battery, AGM	5-20
1184885/021	Pullrod Assembly, 60 in.	7-6	1192655	Cap Stem, Machined	3-6
1184885/022	Pullrod Assembly, 32 in.	7-6	1193040	Tray Insert	8-9
1184885/023	Pullrod Assembly, 36 in.	7-6	1193283	Tray	8-11
1184885/024	Pullrod Assembly, 42 in.	7-6	1193514/001	Cover, Grille	2-14
1184885/025	Pullrod Assembly, 46 in.	7-6	1193515/001	Cover, Lower, Red	2-14
1184885/026	Pullrod Assembly, 48 in.	7-6	1193515/003	Cover, Lower, Black	2-14
1184885/027	Pullrod Assembly, 54 in.	7-6	1193517/001	Cover, Console, Key Switch	2-14
1184885/028	Pullrod Assembly, 60 in.	7-6	1193517/002	Cover, Console, Rocker Switch	2-14
1185537/001	Fork Trail Machining, Painted	7-7	11936-08	Washer	1-4
1185537/002	Fork Trail Machining, Galvanized	7-7	11936-08	Washer	3-6
1185558/001	Link, Lower Assembly	7-7	1195655	Pin, Pivot, Handle	3-6
1185558/002	Link, Lower Assembly, Galvanized	7-7	1195781	Bracket	3-6
1185559/001	Link, Lower Assembly	7-7	1195782	Grommet	3-3
1185559/002	Link, Lower Assembly, Galvanized	7-7	1196016	Bracket, Harness Routing	5-3
1185562/001	Link, Lower Assembly	7-7	1196021	Tray Assembly	8-9
1185562/002	Link, Lower Assembly, Galvanized	7-7	1196021	Tray Assembly	8-11
1187008/001	Fork Trail Machining, Painted	7-7	1198781	Spring, Flat	2-12
1187008/002	Fork Trail Machining, Galvanized	7-7	1198905/001	Plate	5-20
1187090/001	Pullrod Assembly, 48 in. (3in.Lowered Profile)	7-6	1199157	Bracket, Contactor	5-12
1187090/002	Pullrod Assembly, 48 in. (3in.Lowered Profile)	7-6	1199318	Contactor Main	1-5
1187090/003	Pullrod Assembly, 48 in. (3in.Lowered Profile)	7-7	1199318	Contactor Main	5-12
1187090/004	Pullrod Assembly, 48 in. (3in.Lowered Profile)	7-7	1199319	Contactor Pump	1-5
1187700	Housing, Cylinder	6-7	1199319	Contactor Pump	5-12
1187701	Rod, Piston	6-7	1199328/001	Plate	5-20
1187702	Cylinder Assembly	1-5	1200061/001	Bar, Latch	5-20
1187702	Cylinder Assembly	6-3	1200074/001	Bracket, Battery	5-20
1187702	Cylinder Assembly	6-7	1200332/001	Bracket	5-20
1187703	Bracket, Retaining	6-3	1200335	Decal, Owner/Operator	2-8
1187704	Pin, Cotter	6-3	1200336	Decal, Owner/Operator Chinese	2-8
			1200337	Decal, No Riding	2-8

Part No.	Description	Page	Part No.	Description	Page
1200338	Decal, No Riding Chinese	2-8	1205985/001	Card Assembly, Display	3-12
1200339	Decal, Warning English, French	2-8	1206684	Bracket, Cord Assembly	5-21
1200347/001	Decal, Owner Operator English	2-8	1207695/001	Housing, Handle Upper	3-12
1200347/002	Decal, Owner Operator English, French	2-8	1207699	Gasket, Display	1-6
1200347/003	Decal, Owner Operator Chinese	2-8	1207699	Gasket, Display	3-12
1200348/001	Decal, Brake Release English	2-8	1207931/001	Head Assembly, Control	1-5
1200348/002	Decal, Brake Release English, French	2-8	1207931/001	Head Assembly, Control	3-12
1200348/003	Decal, Brake Release Chinese	2-8	1207968/002	Pump and Motor Assembly	1-5
1200534/002	Bumper and Caster Assembly	2-10	1207968/002	Pump and Motor Assembly	6-3
1200534/004	Bumper and Caster Assembly	2-10	1207968/002	Pump and Motor Assembly	6-5
1200550	Decal, Warning English	2-8	1207968/01	Kit, Solenoid Valve	1-6
1200675	Decal, Warning	2-8	1207968/01	Kit, Solenoid Valve	6-5
1200844	Decal, Emergency Disconnect Metric	2-8	1207968/02	Kit, Flow Control (2.2 GPM)	6-5
1201377	Decal, ACR	2-8	1207968/03	Kit, Reservoir	6-5
1201381/001	Decal, Raymond White	2-8	1208113/001	Card Assembly, Flex Circuit	3-12
1201381/002	Decal, Raymond Black	2-8	1208636/001	Handle Head Assembly	3-10
1201487	Decal, Warning Chinese	2-8	1208728/005	Handle Assembly With Keypad	3-8
1201804	Bracket, Static Strap	4-3	1208728/006	Handle Assembly Without Keypad	3-8
1202107/001	Bracket Weldment	5-21	1209329	Plate, Backing	8-21
1202108/001	Bracket Weldment	5-21	1209901	Housing, Inner Assembly Includes:	3-12
1202195	Washer	1-4	1210510	Pin Weldment, Flagged	7-7
1202195	Washer, Serrated Conical	1-4	1210674	Plate, Symbol, Turtle, Click to Creep	3-3
1202195	Washer, Serrated Conical	5-3	1210674	Plate, Symbol, Turtle	3-10
1202195	Washer	5-6	1211545	Hose Assembly	6-3
1202195	Washer	5-9	1212116/001	Screw	1-2
1202536	Grommet	5-3	1212116/001	Screw	5-3
1202622	Switch, Rocker, Brake Release	1-7	1213575	Panel	5-6
1202622	Switch, Rocker, Brake Release	5-25	1213575	Panel	5-9
1202633/001	Spec Tag	2-8	121381/125	Fuse, Potted (125 Amp) EE	1-6
1202787/001	Battery Pack Assembly, With No Battery	1-5	121381/125	Fuse, Potted (125 Amp) EE	5-12
1202787/001	Battery Pack Assembly, With No Battery	5-20	1213821/400	Fuse, Potted	1-6
1202787/003	Battery Pack Assembly, With Wet Cell Battery	1-5	1213821/400	Fuse, Potted	5-6
1202787/003	Battery Pack Assembly, With Wet Cell Battery	5-20	1214006	Traction Motor and Gearbox Assembly	4-5
1202787/005	Battery Pack Assembly, With AGM Battery	1-5	1214006	Traction Motor and Gearbox Assembly	4-7
1202787/005	Battery Pack Assembly, With AGM Battery	5-20	1214006/01	Cover, Motor	5-14
1202795	Decal, Reflector Bumper	2-8	1214006/02	Pinion, Speed Sensor	5-14
1202796	Decal, Reflector Fork Tip	2-8	1214006/03	Cover, Speed Sensor	5-14
1202797	Decal, Reflector Tiller	2-8	1214006/04	Rotor	5-14
1202810/001	Spring, Compression	5-21	1214006/06	Bearing, Ball	1-6
1202811	Knob	5-21	1214006/06	Bearing, Ball	5-14
1203318/001	Backrest, Load With Swing out Battery	8-3	1214006/07	Seal, Shaft	1-7
1203318/002	Backrest, Load With Swing out Battery	8-3	1214006/07	Seal, Shaft	5-14
1203318/003	Backrest, Load With Swing out Battery	8-3	1214006/08	Spacer	5-14
1204417	Holder Assembly Shrinkwrap	8-13	1214006/09	Screw, Hex Head	1-3
1204975/001	Card Assembly, VM	1-6	1214006/09	Screw, Hex Head	5-14
1204975/001	Card Assembly, VM	3-12	1214006/10	Screw, Socket Head	1-3
1205262	Contact Assembly Main	1-5	1214006/10	Screw, Socket Head	5-14
1205262	Contact Assembly Main	5-9	1214006/11	Screw, Socket Head	1-3
1205531	Gasket, E Steer Handle	1-6	1214006/11	Screw, Socket Head	5-14
1205531	Gasket, E Steer Handle	3-12	1214006/12	Screw, Socket Head	1-3
1205924	Decal, Warning	5-21	1214006/12	Screw, Socket Head	5-14
1205926	Decal, Warning Label	5-21	1214006/13	Screw	1-2
1205927/001	Decal, Label	5-21	1214006/13	Screw	5-14
1205927/002	Decal, Label	5-21	1214006/14	Pin, Threaded	5-14
1205927/003	Decal, Label	5-21	1214006/15	Nut	1-2
1205985/001	Card Assembly, Display	1-6	1214006/15	Nut	5-14
			1214006/16	Nut	1-2
			1214006/16	Nut	5-14
			1214006/17	Nut, Lock	1-2
			1214006/17	Nut, Lock	5-14
			1214006/18	Washer	1-4

Part No.	Description	Page	Part No.	Description	Page
1214006/18	Washer	5-14	1215451/001	Screw	3-12
1214006/19	Washer	1-4	1215904	Window, Display	3-12
1214006/19	Washer	5-14	1215916	Frame, Accessory Bar	8-25
1214006/20	Washer, Lock	1-4	1216029	Frame, Accessory Bar	8-23
1214006/20	Washer, Lock	5-14	1216268	Bracket, Connector	8-23
1214006/21	Washer, Lock	1-4	1216268	Bracket, Connector	8-25
1214006/21	Washer, Lock	5-14	1216353	Harness Accessory Bar	8-23
1214006/22	Washer	1-4	1216353	Harness	8-25
1214006/22	Washer	5-14	1217319	Controller, Motor	1-5
1214006/25	Grommet	5-14	1217319	Controller, Motor	5-6
1214006/26	Strip, Sealing	5-14	1217319	Controller, Motor	5-9
1214006/27	Plug	5-14	1217496	Decal	5-21
1214006/28	Wedgelocks	5-14	1217497	Decal	5-21
1214006/29	Plug	5-14	1219060/001	Shoe, Skid Iron (Painted)	2-10
1214006/30	Wedgelocks	5-14	1219060/002	Shoe, Skid Iron (Galvanized)	2-10
1214006/31	Connector	5-14	1219151	Plate, Backing, Upper	3-8
1214006/32	Sensor, Speed	1-7	1219152	Plate, Lower	3-8
1214006/32	Sensor, Speed	5-14	1219872/001	Clamp, U Type	5-3
1214006/33	Board, Terminal	5-15	1222217/001	iMonitor W/ Ball Joint (Display	1-5
1214006/34	Label, U	5-15	1222217/001	iMonitor W/ Ball Joint (Display	8-19
1214006/35	Label, V	5-15	1224300	Contact Assembly Lift	1-5
1214006/36	Label, W	5-15	1224300	Contact Assembly Lift	5-9
1214006/37	Sleeve, Insulating	5-15	1224592/001	Cover, Upper, Red	2-14
1214006/41	Cover	4-5	1224592/003	Cover, Upper, Black	2-14
1214006/42	Pinion	4-5	1224618/001	Bracket, Skid (Painted)	2-10
1214006/43	Shaft, Pinion	4-5	1224618/002	Bracket, Skid (Galvanized)	2-10
1214006/44	Gear	4-5	1225272	Bumper, Stop	3-3
1214006/45	Gear	4-5	1226123/001	Harness Assembly	3-8
1214006/49	Bearing, Steer	4-5	1226372/001	Switch, Horn	1-7
1214006/51	Bearing, Ball	1-6	1226372/001	Switch, Horn	3-12
1214006/51	Bearing, Ball	4-5	1226372/002	Switch, Horn	1-7
1214006/53	Bearing, Ball	1-6	1226372/002	Switch, Horn	3-12
1214006/53	Bearing, Ball	4-5	1227479/001	Harness, Wiring	8-17
1214006/54	Screw, Hex Head	1-3	1227719	Battery Connector Assembly	5-6
1214006/54	Screw, Hex Head	4-5	1228349/001	Keypad, Assembly (Keypad)	3-8
1214006/55	Screw, Socket Head	1-4	1228349/002	Keypad, Assembly (Blank) (In Lieu of Keypad)	3-8
1214006/55	Screw, Socket Head	4-5	1240996/001	Harness (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP/ TP4 to PC9)	8-19
1214006/56	Screw, Socket Head	1-4	1241603/001	Harness, Wiring, (JBD1 to SPL1/SPL2 and 3/ P5/ WPM/ J57A/ TP1/ JPP)	8-19
1214006/56	Screw, Socket Head	4-5	1242400/001	Caster Assembly	1-5
1214006/57	Screw, Socket Head	1-4	1242400/001	Caster Assembly	8-7
1214006/57	Screw, Socket Head	4-5	1242400/01	Housing Kit, Caster	8-7
1214006/59	Sleeve, Clamp	4-5	1242400/02	Spring, Poly Block	8-7
1214006/60	Brake Assembly	1-5	1242400/03	Wheel Kit, Caster	1-7
1214006/60	Brake Assembly	4-7	1242400/03	Wheel Kit, Caster	8-7
1214006/61	Rotor, Brake	1-7	1242400/04	Plate, Side, Kit	8-7
1214006/61	Rotor, Brake	4-7	1245054	Sensor Assembly, Proximity	1-7
1214006/62	Boot, Brake	4-7	1245054	Sensor Assembly, Proximity	5-3
1214006/63	Hub, Brake	4-7	124807/002	iW Evolution , i Monitor	8-19
1214006/64	Cap, Brake	4-3	124807/003	iW Evolution , Activation Only	8-19
1214006/64	Cap	4-7	1252203	Bracket, Harness	5-3
1214006/65	Screw	1-2	14966-01	Wiper, Cylinder Rod	1-7
1214006/65	Screw	4-7	14966-01	Wiper, Cylinder Rod	6-7
1214006/66	Sensor, Temperature	1-7	167830	Lug, Stop	3-14
1214006/66	Sensor, Temperature	5-15	167836-00	Spring	1-7
1214736/001	Bumper Weldment, Black	2-12	167836-00	Spring	3-12
1214736/005	Bumper Weldment, Galvanized	2-12	167840	Spring	1-7
1214819/001	Skirt, Rubber	8-21	167840	Spring	3-14
1215074	Handle Housing (Under Item 1)	3-10	167843	Axle	3-14
1215449/001	Screw	1-2			
1215449/001	Screw	3-12			
1215451/001	Screw	1-2			

Model 8210 Pallet Truck - Numerical Parts Index

Part No.	Description	Page	Part No.	Description	Page
167844	Support	3-14	312855-001	Spring, Torsion	3-6
167845	Arm	3-14	312895-000	Hub	4-9
167846	Bearing	1-6	313046-000	Nut, Lug	1-2
167846	Bearing	3-14	313046-000	Nut, Lug	4-9
171583	Plate, Blank	3-10	313049-000	Rocker, Right	3-14
171585-001	Plate, Symbol, Fork Lower	3-10	313050-000	Rocker, Left	3-14
171585-002	Plate, Symbol, Fork Lift	3-10	313051-000	Wheel Assembly, Thumb	3-14
171662-00	Retainer	3-12	313054-001	Wheel Assembly, Drive (Smooth Black Rubber)	4-9
171665-00	Button, Rear	3-12	313054-002	Wheel Assembly, Drive (Black Poly)	4-9
171708	Screw	1-2	313054-003	Wheel Assembly, Drive (Red Poly)	4-9
171708	Screw	3-14	313054-004	Wheel Assembly, Drive (Crowned Vulkollan)	4-9
171710	Washer	1-4	313054-005	Wheel Assembly, Drive (Non-Marking Rubber)	4-9
171710	Washer	3-14	313054-006	Wheel Assembly, Drive (Traction Rubber)	4-9
171734-00	Clamp, Cable	3-12	313054-007	Wheel Assembly, Drive (Smooth, Grip, Rubber)	1-7
220822-00	Button, Reverser	3-12	313054-007	Wheel Assembly, Drive (Smooth, Grip, Rubber)	4-9
23075-00	Ring, Stop	6-7	313054-008	Wheel Assembly, Drive (Smoothy)	4-9
2393833	Nut, Clip	5-20	313063-000	Bearing	1-6
25332-01	Strap	5-20	313063-000	Bearing	3-6
27234-00	Battery, Wet Cell	1-6	313088-000	Sleeve, Spring	3-6
27234-00	Battery, Wet Cell	5-20	313159-001	Decal, Emergency Disconnect	2-8
29544	Screw	1-2	313186-001	Link Assembly, Upper (Includes)	7-7
29544	Screw	8-3	313225-004	Cable Assembly (660 Millimeter)	5-20
29544	Screw	8-25	313225-005	Cable Assembly (790 Millimeter)	5-20
301253-000	Boot	5-20	313494-000	Shoe, Skid, Poly	2-10
301740-001	Screw, Set	1-3	313495-001	Bracket, Skid (Galvanized)	2-10
301740-001	Screw, Set	3-6	313547-000	Clamp, Wire	3-6
301826-012	Screw	1-2	313595-000	Coupling	6-5
301826-012	Screw	5-20	313615-000	Kit, Pump	6-5
301826-020	Screw	1-2	313618-000	Kit, Start Switch	1-6
301826-020	Screw	5-20	313618-000	Kit, Start Switch	6-5
301827-016	Screw, Flange Head, Thread Forming	1-3	313621-000	Motor, Lift Pump	1-5
301827-016	Screw, Flange Head, Thread Forming	5-20	313621-000	Motor, Lift Pump	6-5
301827-025	Screw	1-2	313634-000	Relief, Strain	3-8
301827-025	Screw	5-20	313649-015	Cable Assembly, B+	5-20
301955-020	Screw	1-2	313649-016	Cable Assembly, B-	5-20
301955-020	Screw	4-3	313729-001	Caster Assembly	8-5
301955-055	Screw	1-3	313734-000	Stud, Wheel	4-5
301955-055	Screw	3-3	313735-000	Shaft, Flange	4-5
301955-075	Screw	1-3	313736-000	Seal, Shaft	1-7
301955-075	Screw	3-3	313736-000	Seal, Shaft	4-5
301960-006	Nut	1-2	313737-000	Bearing, Ball	1-6
301960-006	Nut	5-20	313737-000	Bearing, Ball	4-5
302402-000	Decal, Steam Clean	2-8	313744-000	Washer, Lock	1-4
303009-040	Bolt, Hex Socket Head	1-2	313744-000	Washer, Lock	4-5
303009-040	Bolt, Hex Socket Head	7-7	313755-000	Ring, Retaining	5-14
305493-000	Switch, Main On/Off	1-7	313756-000	Seal, Shaft	1-7
305493-000	Switch, Main On/Off	5-25	313756-000	Seal, Shaft	5-14
306241-004	Strap, Static	4-3	313758-000	Key	5-14
310906-000	Tab, 45 Degrees	6-5	313759-000	Ring, Retaining	5-14
312636-000	Wheel, Load	1-7	313768-000	Bearing, Ball	1-6
312636-000	Wheel, Load	7-9	313768-000	Bearing, Ball	5-14
312672-000	Bushing (Greaseable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	1-6	313778-000	Ring, Spacer	4-5
312672-000	Bushing (Greaseable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	1-6	313779-000	Seal, Ring	1-7
312672-000	Bushing (Greaseable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.) (Included in Pullrod Assembly)	7-7	313779-000	Seal, Ring	4-5
312672-000	Bushing (Greaseable) (ID: 0.75 in. x OD: 1 in. x L: 0.75 in.)	7-7	313780-000	Plug, Drain	4-5
312672-001	Bushing, Composite	7-7	313782-000	Ring, Retaining	4-5
312855-001	Spring, Torsion	1-7	313785-000	Plug, Fill/Level	4-5

Part No.	Description	Page	Part No.	Description	Page
313786-000	Vent	4-5	5-002-059	Screw	1-3
313879-001	Washer, Plastic	1-7	5-002-059	Screw	3-8
313879-001	Washer, Plastic	3-6	5-002-506	Screw, Socket Head, Cap	1-4
313941-000	Plate	8-5	5-002-506	Screw, Socket Head, Cap	5-3
313942-000	Plate	8-5	5-002-531	Screw	1-3
313945-000	Wheel	1-7	5-002-531	Screw	3-6
313945-000	Wheel	8-5	5-002-573	Screw	1-3
313946-000	Washer, Flat	1-4	5-002-573	Screw	5-9
313946-000	Washer, Flat	8-5	5-002-573	Screw	5-20
313947-000	Nut	1-2	5-003-007	Screw	1-3
313947-000	Nut	8-5	5-003-007	Screw	8-27
313948-000	Screw	1-3	5-003-007	Screw	8-29
313948-000	Screw	8-5	5-003-029	Screw	1-3
313949-000	Block, Torsion	8-5	5-003-029	Screw	8-27
313950-000	Assembly, Washer	1-2	5-003-029	Screw	8-29
313950-000	Assembly, Washer	8-5	5-003-502	Screw	1-3
313951-000	Screw	1-3	5-003-502	Screw	5-3
313951-000	Screw	8-5	5-004-004	Screw	1-3
313953-000	Cap	8-5	5-004-004	Screw	3-8
313955-000	Pin	8-5	5-004-015	Screw, M6 X 20	1-3
313957-000	Housing	8-5	5-004-015	Screw, M6 X 20	8-11
313958-000	Bearing	1-6	5-007-027	Screw	1-3
313958-000	Bearing	8-5	5-007-027	Screw	8-23
313980-000	Fitting, Grease	8-5	5-007-027	Screw	8-25
314017-012	Screw	1-3	5-007-030	Screw	1-3
314017-012	Screw	3-3	5-007-030	Screw	8-23
314131-000	O-Ring	1-6	5-007-508	Screw	1-3
314131-000	O-Ring	8-5	5-007-508	Screw	5-12
314474-000	Kit, Relief Valve	1-6	5-007-509	Screw	1-3
314474-000	Kit, Relief Valve	6-5	5-007-509	Screw	5-12
411-421/001	Decal, Label	5-6	5-007-522	Screw, Button Head	1-3
411-421/001	Decal, Label	5-9	5-007-522	Screw, Button Head	3-6
412-574	Decal, EE	2-8	5-007-524	Screw, Socket, Button Head	1-4
445-236	Bearing, Thrust	1-6	5-007-524	Screw, Socket, Button Head	8-21
445-236	Bearing, Thrust	8-5	5-015-004	Nut, Hex, Lock	1-2
49553-06	Seal, Rod	1-7	5-015-004	Nut, Hex, Lock	8-11
49553-06	Seal, Rod	6-7	5-015-005	Nut	1-2
49663-00	Tack, Metal	2-8	5-015-005	Nut	5-6
49771-01	Terminal	5-6	5-015-005	Nut	5-9
49771-01	Terminal	5-9	5-015-005	Nut	7-7
49854-01	Connector, Battery, Gray	1-6	5-016-002	Nut, M4	1-2
49854-01	Connector, Battery, Gray	5-6	5-016-002	Nut, M4	8-29
49854-01	Connector, Battery, Gray	5-9	5-016-004	Nut, Hex, Lock, M6	1-2
49854-04	Connector, Battery, Red	1-6	5-016-004	Nut, Hex, Lock, M6	8-27
49854-04	Connector, Battery, Red	5-6	5-018-003	Washer, Flat	1-4
49854-04	Connector, Battery, Red	5-9	5-018-003	Washer, Flat	5-12
49854-04	Connector, Battery, Red	5-20	5-018-006	Washer, Flat	1-4
49910-01	Bearing	1-6	5-018-006	Washer, Flat	5-6
49910-01	Bearing	7-9	5-018-006	Washer, Flat	5-9
49910-01	Bearing	7-11	5-019-004	Washer, Lock	1-4
49910-05	Bearing, Sealed	1-6	5-019-004	Washer, Lock	8-27
49910-05	Bearing, Sealed	7-9	5-019-004	Washer, Lock	8-29
49910-05	Bearing, Sealed	7-11	5-019-006	Washer, Lock	1-4
5-001-003	Screw	1-3	5-019-006	Washer, Lock	5-6
5-001-003	Screw	5-6	5-019-006	Washer, Lock	5-9
5-001-003	Screw	5-9	5-020-013	Washer, Lock, Toothed	1-4
5-001-058	Screw	1-3	5-020-013	Washer, Lock, Toothed	8-27
5-001-058	Screw	3-8	590-587/107	Fuse (125 Amp)	1-6
5-001-058	Screw	8-27	590-587/107	Fuse (125 Amp)	5-9
5-002-056	Screw	1-3	590-587/107	Fuse (125 Amp)	5-12
5-002-056	Screw	3-8	590-587/117	Fuse (350 Amp)	1-6

Model 8210 Pallet Truck - Numerical Parts Index

Part No.	Description	Page	Part No.	Description	Page
590-587/117	Fuse (350 Amp)	5-9	800-811/002	Adapter, Hydraulic	6-3
590-587/118	Fuse (400 Amp)	1-6	840-033	Fitting, Grease	1-2
590-587/118	Fuse (400 Amp)	5-6	840-033	Fitting, Grease	7-9
590-587/118	Fuse (400 Amp)	5-9	841-111	Fitting, Grease	7-11
590-909	Shroud, Fan	8-29	NSS	Coil, Brake	4-7
600-232/005	Clamp, Cable	8-27			
600-232/006	Connector, Electric Cord Grip	8-29			
600-232/007	Clamp, Cable	8-23			
600-232/007	Clamp, Cable	8-25			
611-028	Strap	5-3			
611-028	Strap	5-6			
611-028	Strap	5-9			
611-028	Strap	8-17			
611-028	Strap	8-23			
611-028	Strap	8-25			
611-029	Strap	3-6			
630-235/001	Tire, Drive (Smooth Black Rubber)	1-7			
630-235/001	Tire, Drive (Smooth Black Rubber)	4-9			
630-235/002	Tire, Drive (Non-Marking Rubber)	1-7			
630-235/002	Tire, Drive (Non-Marking Rubber)	4-9			
630-235/003	Tire, Drive (Lugged Rubber)	1-7			
630-235/003	Tire, Drive (Lugged Rubber)	4-9			
630-235/201	Tire, Drive (Traction Rubber)	1-7			
630-235/201	Tire, Drive (Traction Rubber)	4-9			
632-089/004	Tire, Drive (Black Poly, Crowned)	1-7			
632-089/004	Tire, Drive (Black Poly, Crowned)	4-9			
632-090/001	Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	1-7			
632-090/001	Tire, Drive, Poly, Red, Raymond, 85 Durometer, 10 x 5 x 6.50 in.	4-9			
632-090/008	Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	1-7			
632-090/008	Tire, Flat, Poly, Yellow, Smoothy, 85 Durometer	4-9			
632-090/018	Tire, Drive (Black Poly)	1-7			
632-090/018	Tire, Drive (Black Poly)	4-9			
671-024/03	Bearing, Cup	1-6			
671-024/03	Bearing, Cup	8-5			
671-024/04	Bearing, Cone	1-6			
671-024/04	Bearing, Cone	8-5			
671-024/09	Washer, Thrust	1-4			
671-024/09	Washer, Thrust	8-5			
671-041/21	Nut, Locking	1-2			
671-041/21	Nut, Locking	8-5			
7-701-002/006	Screw	1-3			
7-701-002/006	Screw	3-12			
7-775-108	Washer, Flat, Brass	1-4			
7-775-108	Washer, Flat, Brass	5-6			
7-775-108	Washer, Flat, Brass	5-9			
7-861-002/003	Insulator, Standoff	5-6			
7-861-002/003	Insulator, Standoff	5-9			
750-013	Nut	1-2			
750-013	Nut	5-20			
7571847	Button, Horn Right	3-12			
7571848	Button, Horn Left	3-12			
7573032	Cover, Display	3-12			
7578514	Button, Lift/Lower Assembly	3-12			
771-033	Spacer	1-4			
771-033	Spacer	7-11			
771-156	Washer, Flat	1-4			
771-156	Washer, Flat	7-11			
800-809/003	Fitting, 90 Degree	6-3			