

### **3.0 Operation**

#### **3.1 Introduction**

The CSK24 is designed to remove the skin from chicken thighs, whole legs, boneless breasts, split or bone in breasts and turkey scapulas.

The Flighted Belt and Star Wheel of the skinner are motor driven. Product is placed upon the Feed Conveyor and carried into the Flighted Belt. The skin is pulled down between the Star Wheel and the Pinch Block. The skin is ejected from the Star Wheel to a slide or conveyor and the skinned product then exits to the rear of the skinner on the Exit Conveyor or Exit Chute.

#### **3.2 Familiarization**

The component parts of this machine are identified in the Spare Parts List and Assembly drawings section of this manual. The name usually describes the function of the part.

#### **3.3 Specifications**

- A. Dimensions – including standard frame. Unit approximately 35"W x 52"LX50" H (Height and length vary due to customer's needs.)
- B. Electrical Requirements
  - 1. Varies per customer specifications, usually 10amps at 480 volt, three phase 60hz
  - 2. Personnel servicing this should be trained in proper Lockout/Tagout procedures and should ensure that the electrical enclosure is properly secured to prevent water from gaining access to the electrical component
- C. Water Requirements
  - 1. 20-60 PSI, 0.75 GPM. 1/4"NPT inlet.

#### **3.4 Installation**

**WARNING! ALL PERSONNEL WORKING ON OR AROUND THIS MACHINE MUST UNDERSTAND PROPER FUNCTION AND LOCATION OF SAFETY DEVICES BEFORE STARTING UNIT.**

- A. Select a site having suitable power, water, and drainage.
- B. Connect power to the electrical box making sure that motors and transformers are wired for the specific voltage.
- C. Connect water at valve.
- D. Confirm all Emergency Stops are in the "RUN" position. The unit will not activate otherwise.
- E. Employing Emergency Stops will deactivate electric motor.



### 3.5 Operation



**WARNING! ALL PERSONNEL WORKING ON OR AROUND THIS MACHINE MUST UNDERSTAND PROPER FUNCTION AND LOCATION OF SAFETY DEVICES BEFORE STARTING UNIT.**

#### A. Daily / Before Startup


1. Check E-Stop and that all proximity switches are operating properly.
2. Verify Proper Water Supply.
3. Check conveyor belt tensions.
4. Check all chain tensions. Adjust idlers and or take ups as necessary.
5. Inspect Pinch Block for chips, cracks, etc. Replace if necessary.
6. Reinstall Pinch Block.
  - a) Place Pinch Block up against Paddle Wheel.
  - b) Slide Pull Bar for Pinch Block into place.
  - c) Hand-tighten pinch block tensioning bolts **LIGHTLY** against pull bar.  
**WARNING: DO NOT OVER TIGHTEN!!! FINGER TIGHT ONLY!!!** Over-tightening pinch block against star wheel will cause premature and uneven wear on those parts. Use a wrench to tighten the locking nuts only
  - d) Make sure the pinch block rides evenly against the star wheel. Use teeth on the star wheel and the edge of the pinch block as a guide.
  - e) Ensure Pull Bar Lock Tabs are in place.
7. Check that guards are mounted and secured properly.

#### B. Operation Screens

1. Select Run button from the Main screen.



This is the Main Menu, Pressing the Run Button will take you to the Operation screen shown at right.

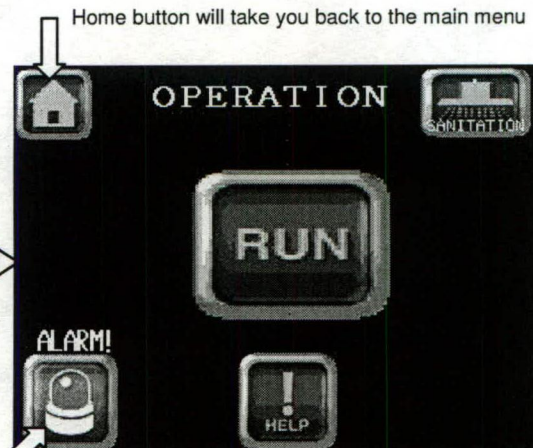

Home button will take you back to the main menu

The Operation Screen is shown displaying an Alarm. The unit will not start until all Alarms have been cleared. Press the alarm button to get an explanation of the problem.



### 3.5 Operation

#### B. Operation Screens

2. Pressing the Run Button will start the unit. Once running this button will turn into the Stop button, use this button to stop the unit in a non-emergency situation.
3. If machine will not start check for alarms. If there is any alarms present, lower left icon will read alarm as shown on previous page. Pressing this button will take you to the alarm screen and will explain the alarm.

#### C. Shutdown.

1. Turn off unit, water and electricity.
2. Remove any remaining product.


### 3.6 Cleanup / Sanitation



**WARNING!** ALL PERSONNEL WORKING ON OR AROUND THIS MACHINE MUST UNDERSTAND PROPER FUNCTION AND LOCATION OF SAFETY DEVICES BEFORE STARTING OR CLEANING UNIT. DO NOT SPRAY WATER IN MOTORS OR ELECTRICAL BOX.

#### A. Sanitation Screens

1. Enter the Sanitation Mode by pressing the Sanitation button on either the main menu or in the upper right hand corner of the operation screen.

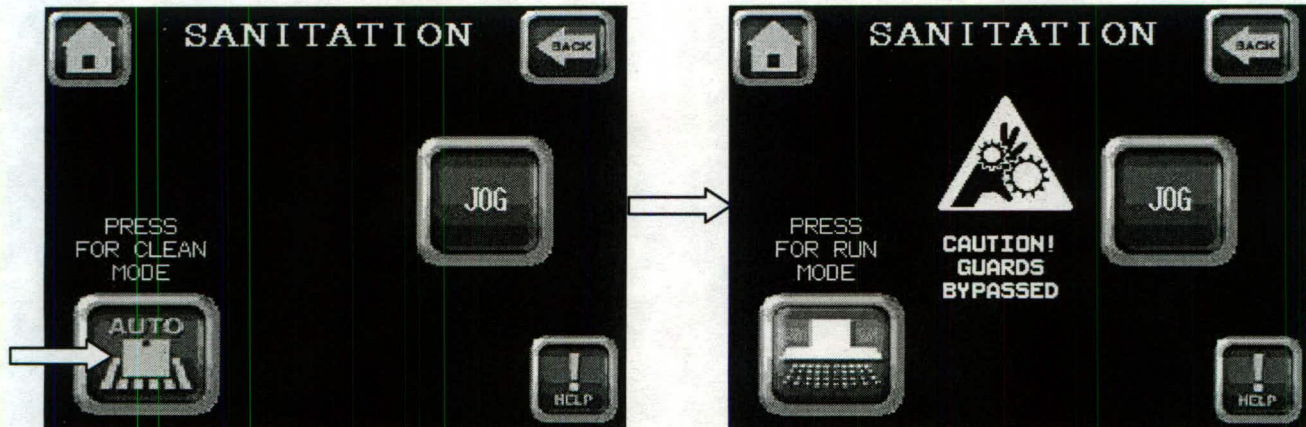

2. At the top of the sanitation menu are the home button to take you to the main menu and a back button for returning to the previous screen. A jog button is displayed but is not able to be used Until the "PRESS FOR CLEAN MODE" button is activated.
3. Once the "PRESS FOR CLEAN MODE" button is activated a warning sign will flash indicating the Lid, Front and Rear guards are bypassed and can be raised while jogging the machine. Pressing and holding the jog button now will activate machine. Machine will run until the jog button is released. Chain drive cover switch is still active in clean mode and unit cannot be jogged with chain drive cover removed.



### 3.6 Cleanup / Sanitation

#### B. Sanitation Procedures

1. Open Skinner Lid. Remove all debris.
    - a) Grab Upper Wearstrip Assembly Handle and place in an upright position, locking in place with Pull Pin. **Make sure Pull Pin is fully engaged under wearstrip.**
    - b) Remove Product Exit Slide by lifting straight up and out.
    - c) Open main chain drive cover.
    - d) Relieve tensions on Pinch Block by unscrewing bolts holding pull bar against the Pinch Block.
    - e) Remove Pinch Block by rotating Pull Bar Lock Tab to the side. While holding the Pinch Block, remove Pinch Block Pull Bar by sliding it out of the Side Panel, drive Side.
    - f) Set loose parts aside for cleaning.
  2. Retract pull pins on conveyor flip ends, rotate ends and lock in an upright position to slack conveyor belts. Conveyor Flip Ends should relieve enough belt tension to provide access sprockets and wear strips for cleaning. Conveyor belting should not have to be removed for sanitation.
  3. Rinse with water. (Disassemble as needed.)
  4. Wash and sanitize with USDA accepted agent.
  5. Rinse with water. (Reassemble.)
- DO NOT** spray in motors, operator panel or any other electrical junction boxes with high-pressure water. Cover and wash these areas by hand.