




用户按键
User KEY

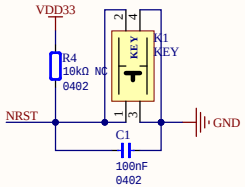


复位电路
Reset circuit

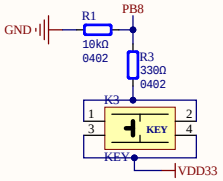


BOOT设置
BOOT Settings

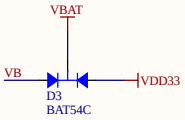



RTC电源
RTC circuit

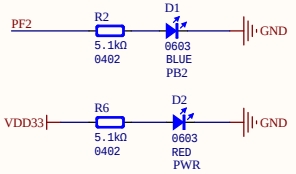



指示灯
Indicator light

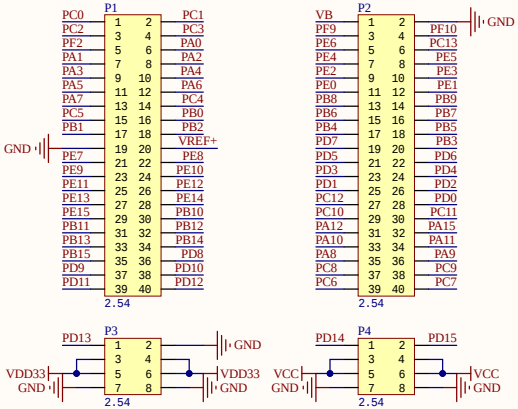


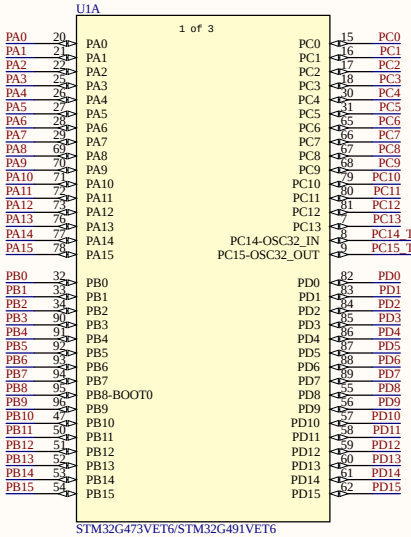


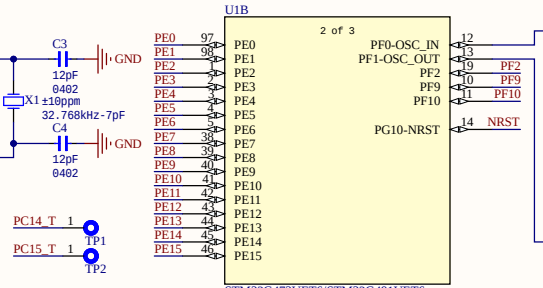

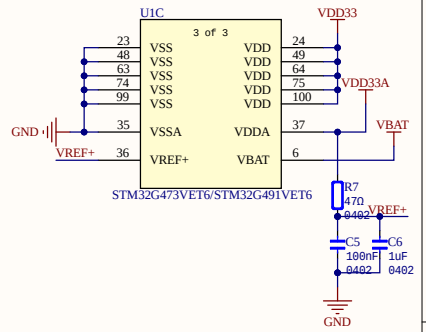


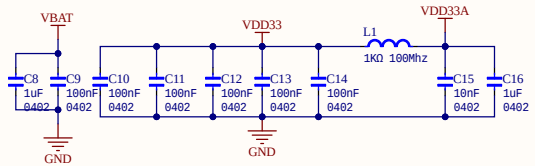

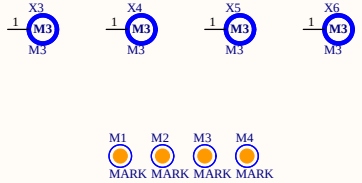


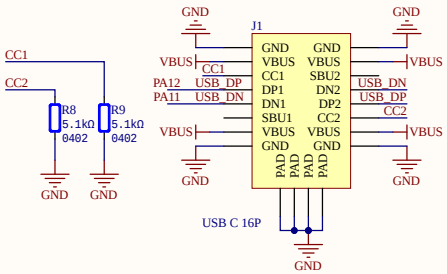

Type-C 接口
Type-C interface

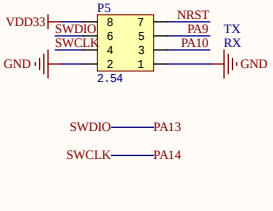

SW 调试下载接口
SW debug download interface

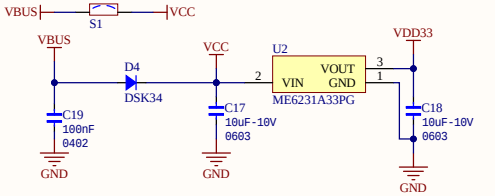

VCC -> 3.3V 电源转换
VCC -> 3.3V Power conversion
VCC IN: 3.3V - 6V

Title: **WeAct-STM32G4_100PIN-CoreBoard**		
Size: A3	Number	Revision: **V1.0**
Date: 2/02/2026		Sheet of
File: H:\Work\..\WeAct-STM32G4xxVxTxCoreBoard.SchDoc		Drawn By:

WeAct Studio