




用户按键
User KEY

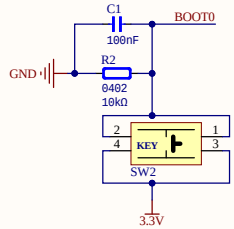


BOOT设置
BOOT Settings

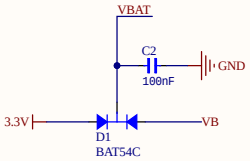


RTC电源
RTC circuit

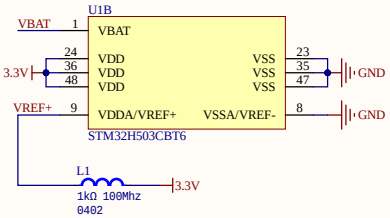


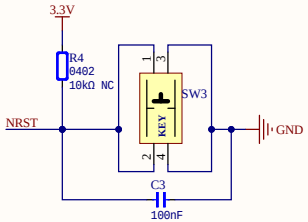



复位电路
Reset circuit

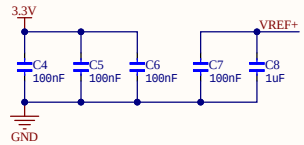


STM32电源部分
STM32 Power supply

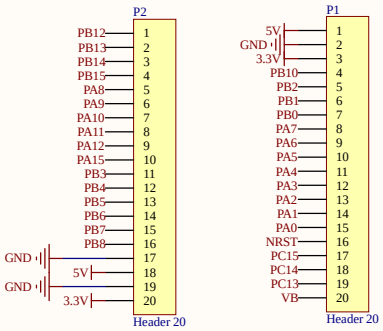


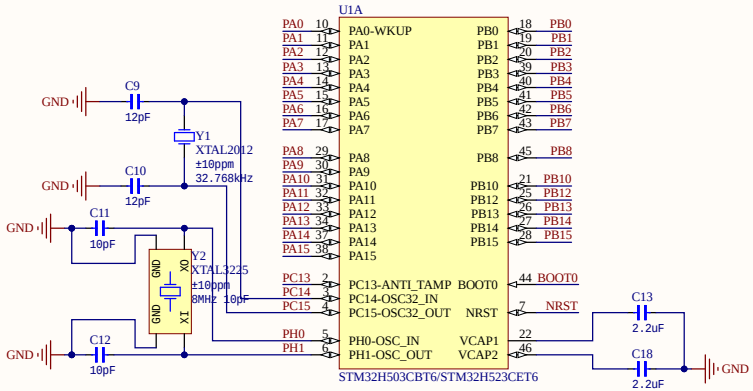

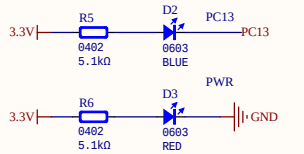


指示灯
Indicator light




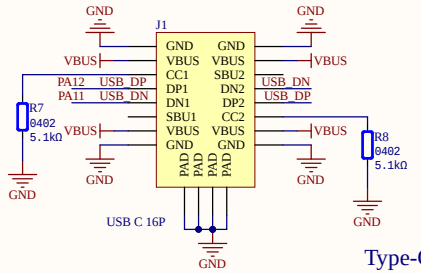


Type-C 接口
Type-C interface



SW 调试下载接口
SW debug download interface

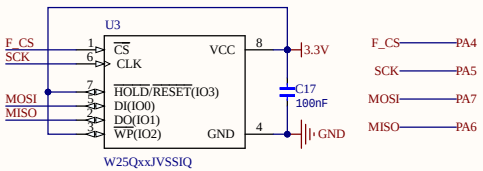

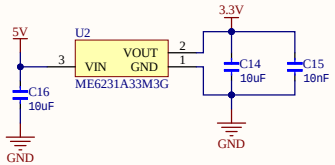

5V -> 3.3V 电源转换
5V -> 3.3V Power conversion

Title	WeAct Studio STM32H5x3Cx Core Board	
Size A3	Number	Revision V1.0
Date: 6/05/2025	Sheet of	
File: E:\WeActStudio\...\WeAct-STM32H503CxDx-CoreBoard.SchDoc	Drawn By: zhuyix	

WeAct Studio