


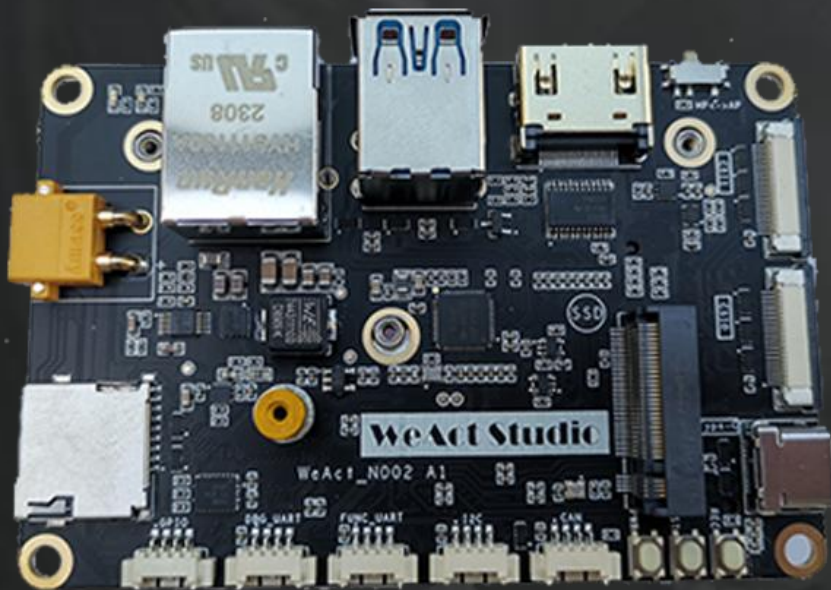

WeAct Studio

WEACT-N002

载板/底板

使用教程

WEACT Studio

目录


Revision History	3
1. 搭建烧写环境	4
2. 核心板烧写系统	7
3. 安装 NVIDIA 组件	9
4. 环境备份及镜像恢复	11
5. 系统迁移至 NVME 固态硬盘	13
6. 系统迁移至 SD 卡	16
7. 安装 JTOP (控制风扇, 查看系统信息)	19
8. 使用 CAN 进行通信	20
9. GPIO 使用	22
10. UART 使用	24
联系我们	25

REVISION HISTORY


Draft Date	Revision	Description
2023.07.16	V1.0	1. 初始版本
2024.02.16	V2.0	1. 修订版本 2. 增加 GPIO 教程
2026.07.23	V3.0	1. 增加烧录脚本 2. Orin 支持 JP7

1. 搭建烧写环境


- a) 需要一台装有 **Ubuntu18.04** 以上的电脑作为 HOST 端给 Nano/NX 烧写，或者可以在 Windows 上安装 VMware 来安装 Ubuntu
- *Jetpack 6 需要 Ubuntu20.04 以上
 - *Jetpack 7 需要 Ubuntu24.04 以上
 - VMware 上如何安装 Ubuntu18.04:
<https://blog.csdn.net/u012556114/article/details/82751089>
- b) 在 NVIDIA 下载最新的 **SDK-Manager** 并在 Ubuntu18.04 中安装（需要注册 NVIDIA 账号）
- SDK-Manager 下载地址: <https://developer.nvidia.com/nvidia-sdk-manager>
- c) 选择需要 **Target Hardware** 以及 **JetPack** 版本，**不勾选 HostMachine**（节省主机存储空间），DeepStream 根据组件需求勾选，这里以 **XavierNX** 为例选择，点击 **Continue**

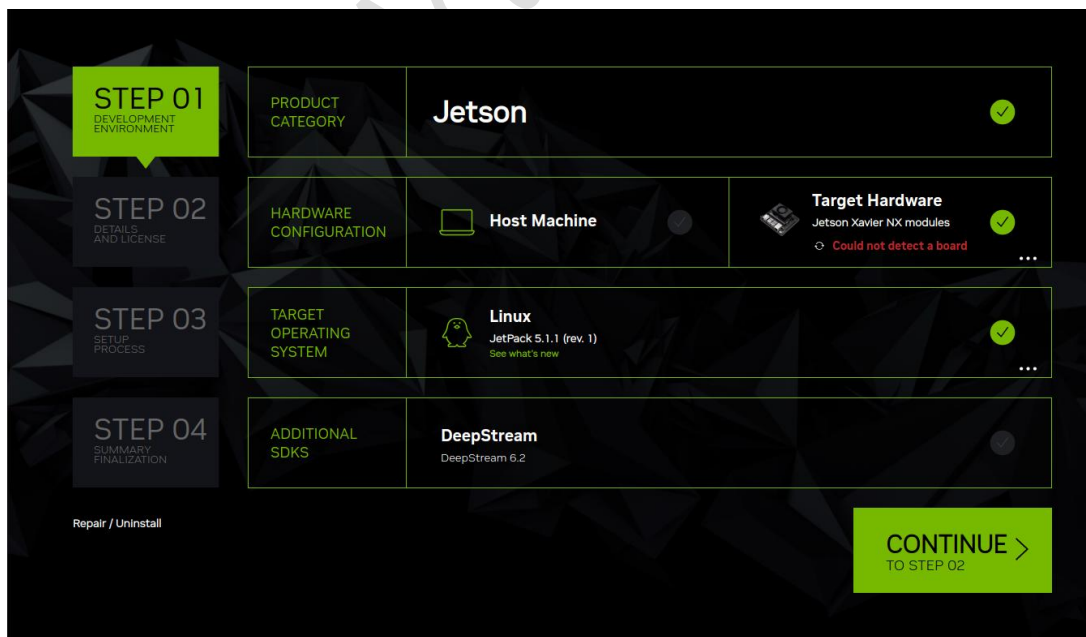


- d) 勾选 I accept the terms and conditions of the license agreements, 取消勾选 Jetson Runtime 及 SDK Components (后面安装组件会重新下载并一起安装), 点击 **CONTINUE** 进行下一步。

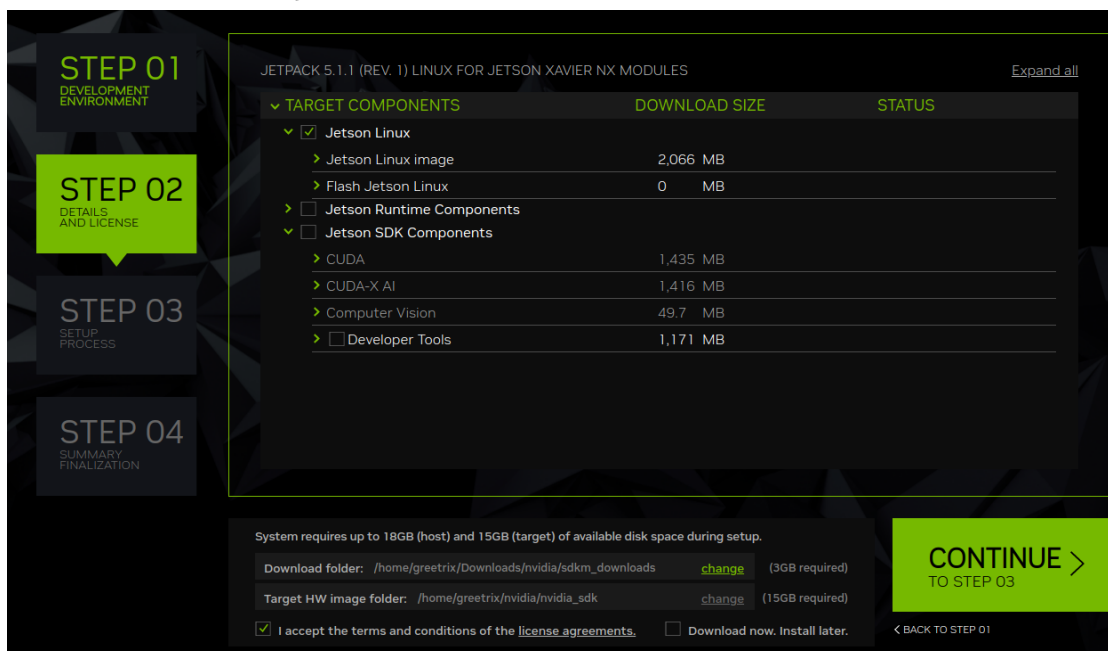


Note: 请在畅通的网络环境下进行下载以及安装, 下载或安装失败时, 可点击 **Retry** 继续, 直至全部状态为 **Installed** 并且显示绿色, 安装过程中会弹出联网烧写的信息, 选择 **Skip**。(后续步骤通过命令来烧写, 可以兼容不同核心板)

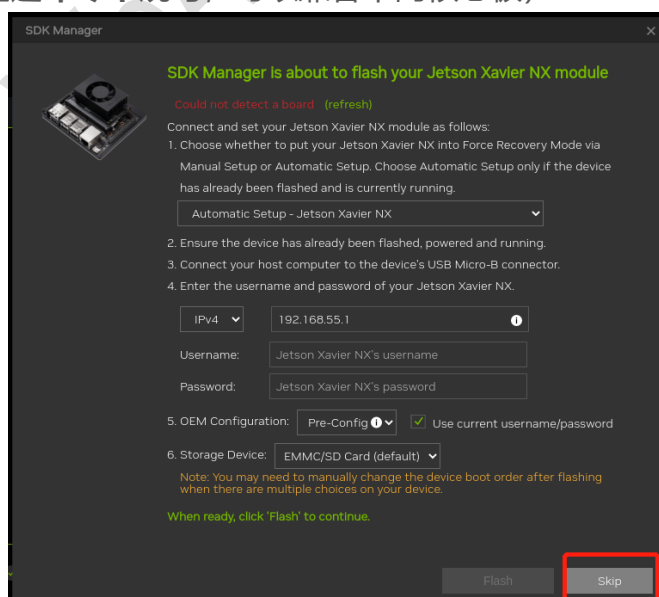

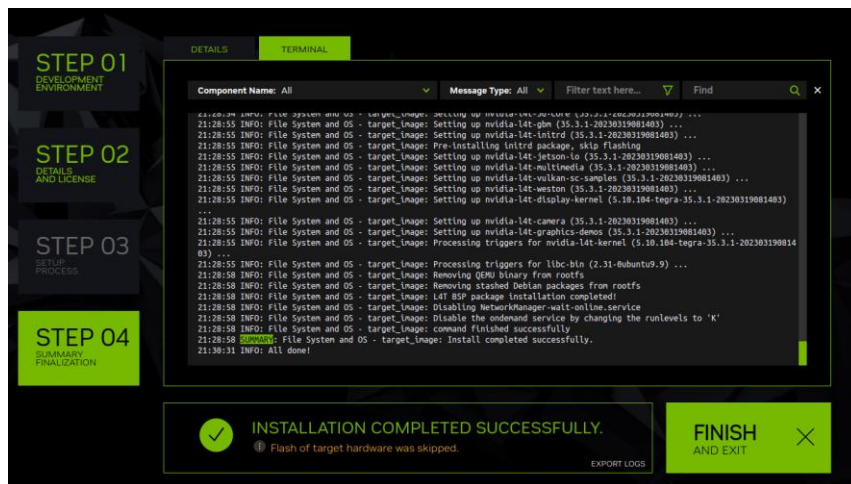


e) 安装成功后，会在 `~/nvidia/nvidia_sdk/` 下有相应版本烧写所需的文件

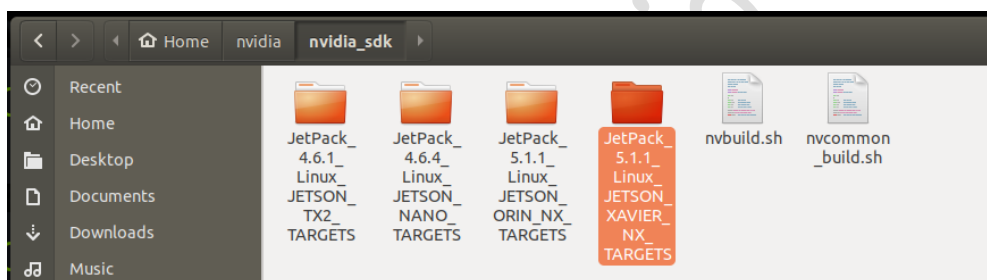

f) 在终端通过 `sudo apt-get install python` 安装 python 支持以便后续烧写环境。


2. 核心板烧写系统

1. 使用 **USB Type-C** 线材连接载板上的 **USB Type-C** 接口

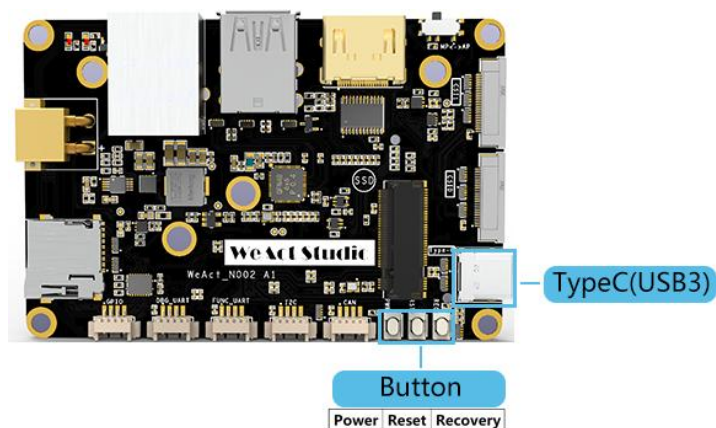

2. 将开机键拨至 **MP (手动开机)**，两种方式进入 Recovery 模式
 - a) 按住 **REC** 键，再按一下 **PWR** 键开机，松开 **REC** 键进入 Recovery 模式
 - b) 按一下 **PWR** 键开机，按住 **REC** 键，按一下 **RST** 键进入 Recovery 模式

此时 VMWare 右下角会出现 **NVIDIA** 的 **USB 驱动标志**，或者打开终端，输入 **lsusb** 命令，会发现 **Nvidia Corp**，同时风扇转速会到达最大。

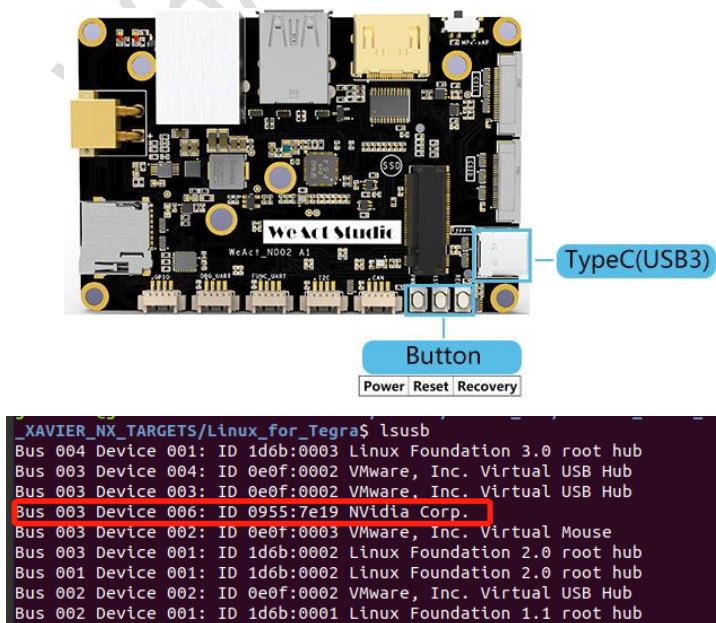

3. 进入~/nvidia/nvidia_sdk/JetPack_5.1.1_Linux_JETSON_XAVIER_NX_TARGETS/Linux_for_Tegra (以 XavierNX 为例) , 打开 Terminal

- a) sudo apt-get install git
- b) git clone https://github.com/WeActStudio/WeAct_N002
 - i. sudo bash WeAct_N002/04_Script/weact_n002_flash.sh.


或

- c) git clone https://gitee.com/WeAct-TC/weact_n002
 - i. sudo bash WeAct_N002/04_Script/weact_n002_flash.sh

*Orin 烧录默认为 Super Mode, 如果版本不支持 Super Mode 或者不使用 Super Mode, sudo bash WeAct_N002/04_Script/weact_n002_flash.sh -n

*如果核心板为 Jetson Nano SD 版本或 Jetson XavierNX SD 版本, sudo bash WeAct_N002/04_Script/weact_n002_flash.sh -s

烧写系统成功后会有 Successfully!显示, 如下图所示。

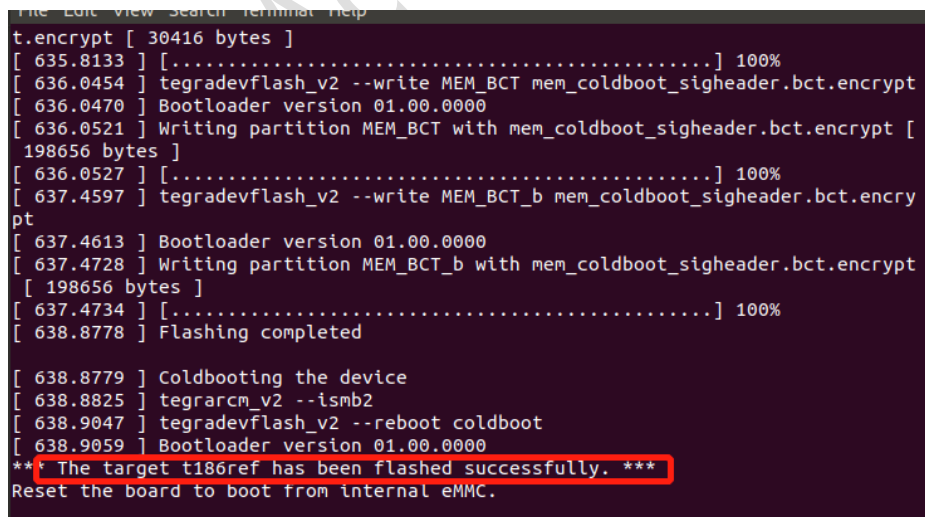


```
File Edit View Search Terminal Help
t.encrypt [ 30416 bytes ]
[ 635.8133 ] [ ..... ] 100%
[ 636.0454 ] tegradevflash_v2 --write MEM_BCT mem_coldboot_sigheader.bct.encrypt
[ 636.0470 ] Bootloader version 01.00.0000
[ 636.0521 ] Writing partition MEM_BCT with mem_coldboot_sigheader.bct.encrypt [
198656 bytes ]
[ 636.0527 ] [ ..... ] 100%
[ 637.4597 ] tegradevflash_v2 --write MEM_BCT_b mem_coldboot_sigheader.bct.encrypt
pt
[ 637.4613 ] Bootloader version 01.00.0000
[ 637.4728 ] Writing partition MEM_BCT_b with mem_coldboot_sigheader.bct.encrypt
[ 198656 bytes ]
[ 637.4734 ] [ ..... ] 100%
[ 638.8778 ] Flashing completed


[ 638.8779 ] Coldbooting the device
[ 638.8825 ] tegrarcm_v2 --ismb2
[ 638.9047 ] tegradevflash_v2 --reboot coldboot
[ 638.9059 ] Bootloader version 01.00.0000
*** The target t186ref has been flashed successfully. ***
Reset the board to boot from internal eMMC.
```


3. 安装 NVIDIA 组件


1. 选择需要 Target Hardware 以及 JetPack 版本，不勾选 HostMachine，这里以 XavierNX 为例选择，点击 Continue

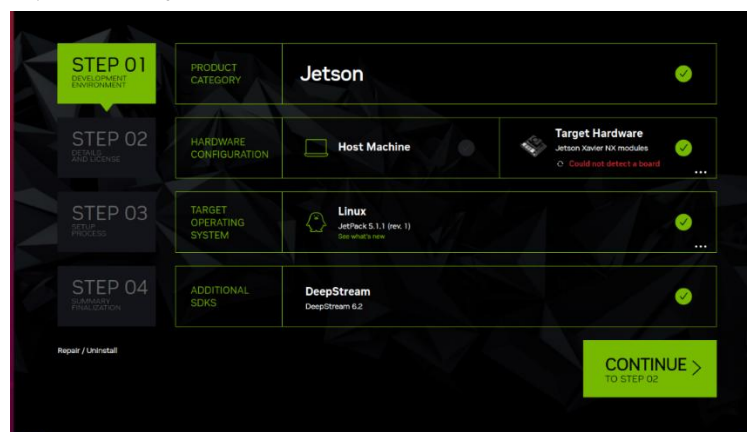

2. 勾选所需要 SDK 组件，勾选 I accept the terms and conditions of the license agreements，点击 CONTINUE 进行下一步。

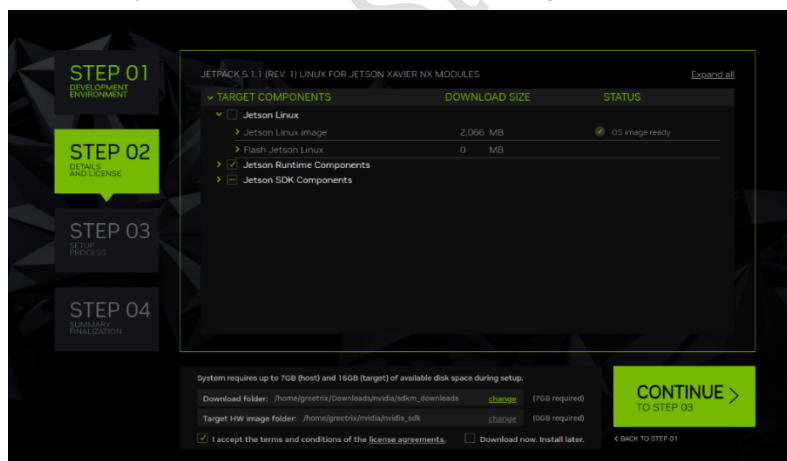


3. 使用 USB Type-C 线连接载板上的 USB Type-C 接口。

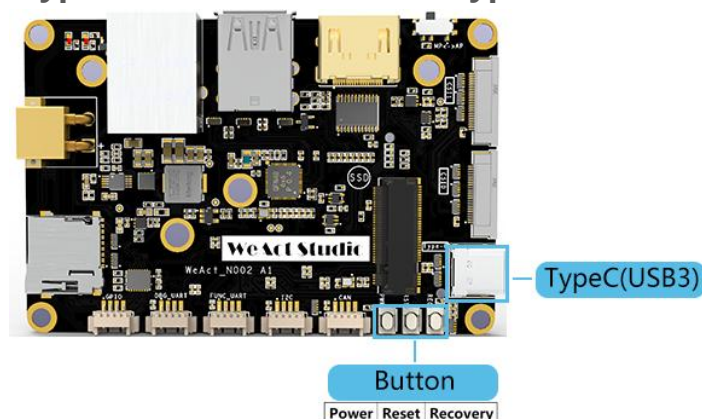

4. 将开机键拨至 MP（手动开机），按一下 PWR 键，正常开机并且进入系统，此时 VMWare 右下角会出现 NVIDIA 的 USB 驱动标志，或者打开终端，输入 `lsusb` 命令，会发现 **Nvidia Corp.**。

5. 输入 XavierNX 账号密码，XavierNX 端请保持联网状态，也可以用同局域网下的 IP（图 2，主机和 XavierNX 连接同一个路由器）

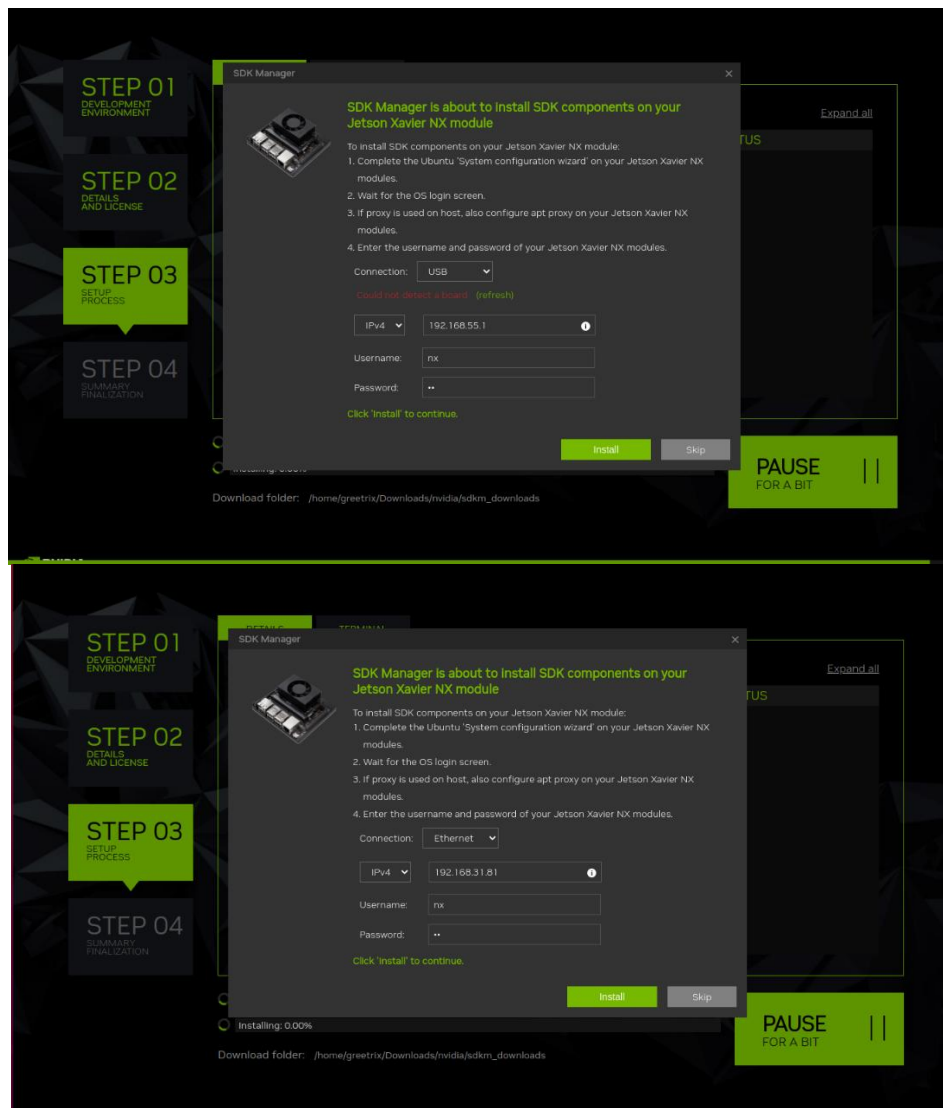

6. 等待安装完成即可。

4. 环境备份及镜像恢复

Note: 该备份仅用于 Jetson Nano/TX2NX/XavierNX

a) 系统安装在 EMMC, 以 TX2NX 为例

a) 参考第 2 章, 无论备份还是镜像烧写, 进入 Recovery 模式, 注意镜像较大, 请保证 Ubuntu 有充足的空间 (>40G) 。

b) **备份:** 这里以 TX2NX 为例 (其他设备参考上章内容修改 jetson 名称), 对核心板现有环境进行备份。进入 `~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra`, 打开终端:

使用镜像备份命令: `sudo ./flash.sh -r -k APP -G backup.img jetson-xavier-nx-devkit-tx2-nx mmcblk0p1`, 等待备份完成即可, 此时目录下会有 backup.img 的镜像 (建议复制一份至其他位置备份), 此时**备份已经成功**。

```
greetrix@greetrix-virtual-machine:~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra$ sudo ./flash.sh -r -k APP -G backup.img jetson-xavier-nx-devkit-tx2-nx mmcblk0p1
```

```
[ 9.1920 ] tegrarcm_v2 --boot recovery
[ 9.1966 ] Applet version 01.00.0000
[ 9.3692 ]
[ 10.3763 ] tegrarcm_v2 --isapplet
[ 10.3793 ] USB communication failed.Check if device is in recovery
[ 10.5068 ]
[ 10.8536 ] tegradevflash_v2 --iscpubl
[ 10.8565 ] Cannot Open USB
[ 11.3572 ]
[ 12.3617 ] tegrarcm_v2 --isapplet
[ 12.5109 ]
[ 12.5142 ] tegradevflash_v2 --iscpubl
[ 12.5163 ] Bootloader version 01.00.0000
[ 12.6843 ] Bootloader version 01.00.0000
[ 12.7463 ]
[ 12.7464 ] Reading partition
[ 12.7492 ] tegradevflash_v2 --read APP /home/greetrix/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra/backup.img
[ 12.7511 ] Bootloader version 01.00.0000
[ 12.9183 ] [.....] 100%
[ 2216.5426 ]
*** The [APP] has been read successfully. ***
Converting RAW image to Sparse image... greetrix@greetrix-virtual-machine
X2_TARGETS/Linux for Tegra$ k 4.6 Linux JETSON TX
```

c) **镜像烧写**：进入~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra，将备份好的 backup.img 拷入 Linux_for_Tegra/bootloader/下，并重命名为 system.img，回到 Linux_for_Tegra 目录下，打开终端：

使用已有镜像烧写命令：**sudo ./flash.sh -r jetson-xavier-nx-devkit-tx2-nx mmcblk0p1**，等待烧写完成即可。

```
[ 18.0000 ] Writing partition spe-fw_b with spe_sigheader.bin.encrypt
[ 18.0298 ] [.....] 100%
[ 18.0790 ] Writing partition mb2 with nvtboot_sigheader.bin.encrypt
[ 18.1057 ] [.....] 100%
[ 18.1596 ] Writing partition mb2_b with nvtboot_sigheader.bin.encrypt
[ 18.1895 ] [.....] 100%
[ 18.2416 ] Writing partition mts-preboot with preboot_d15_prod_cr_sigheader.bi
n.encrypt
[ 18.2710 ] [.....] 100%
[ 18.6760 ] Writing partition mts-preboot_b with preboot_d15_prod_cr_sigheader.
bin.encrypt
[ 18.7053 ] [.....] 100%
[ 18.7467 ] Writing partition SMD with slot_metadata.bin
[ 18.7744 ] [.....] 100%
[ 18.9037 ] Writing partition SMD_b with slot_metadata.bin
[ 18.9302 ] [.....] 100%
[ 18.9658 ] Writing partition VER_b with emmc_bootblob_ver.txt
[ 18.9922 ] [.....] 100%
[ 19.0322 ] Writing partition VER with emmc_bootblob_ver.txt
[ 19.0592 ] [.....] 100%
[ 19.0966 ] Writing partition master_boot_record with mbr_1_3.bin
[ 19.1194 ] [.....] 100%
[ 19.1525 ] Writing partition APP with system.img
[ 19.1800 ] [.....] 016%
```

```
t.encrypt
[ 1888.6372 ] Bootloader version 01.00.0000
[ 1888.8013 ] Writing partition MB1_BCT with mb1_cold_boot_bct_MB1_sigheader.b
encrypt
[ 1888.8019 ] [.....] 100%
[ 1888.8706 ]
[ 1888.8837 ] tegradeflash_v2 --write MB1_BCT_b mb1_cold_boot_bct_MB1_sighead
bct.encrypt
[ 1888.8849 ] Bootloader version 01.00.0000
[ 1889.0452 ] Writing partition MB1_BCT_b with mb1_cold_boot_bct_MB1_sigheader
t.encrypt
[ 1889.0468 ] [.....] 100%
[ 1889.1180 ]
[ 1889.1181 ] Flashing completed

[ 1889.1181 ] Coldbooting the device
[ 1889.1436 ] tegradeflash_v2 --reboot coldboot
[ 1889.1449 ] Bootloader version 01.00.0000
[ 1889.3379 ]
*** The target t186ref has been flashed successfully. ***
Reset the board to boot from internal eMMC.
```

b) 系统安装在 SD 卡或者 SSD 的设备，直接通过主机拷贝 SD 卡或者 SSD 到其他存储介质即可

5. 系统迁移至 NVME 固态硬盘

Note: 该迁移仅用于 Jetson Nano/TX2NX/XavierNX

WeAct-N002 载板支持 PCIE3.0 X 4 插槽，支持 2242 NVME SSD M.2 接口固态硬盘，

a) NVME 固态硬盘配置：

- 1. 配置前确保系统能识别到 NVME 固态硬盘，终端命令：**sudo fdisk -lu**

```
Disk /dev/nvme0n1: 119.2 GiB, 128035676160 bytes, 250069680 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
Disklabel type: gpt
```

- 2. 将 NVME 设置成 GPT 格式：

- i. 终端命令：**sudo parted /dev/nvme0n1** 进入 parted

```
tx2nx@tx2nx:~$ sudo parted /dev/nvme0n1
[sudo] password for tx2nx:
GNU Parted 3.2
Using /dev/nvme0n1
Welcome to GNU Parted! Type 'help' to view a list of commands.

(parted) █
```

- ii. 终端命令：**mklabel gpt** 将磁盘 label 设置为 gpt 格式

```
(parted) mklabel gpt
Warning: The existing disk label on /dev/nvme0n1 will be destroyed and all data on this disk will be lost. Do you want to continue?
Yes/No? Yes█
```

- iii. 终端命令：**mkpart logical 0 -1** 将磁盘 part 设置为 gpt 格式

```
(parted) mkpart logic 0 -1
Warning: The resulting partition is not properly aligned for best performance.
Ignore/Cancel? Ignore█
```

- iv. 终端命令：**print** 查看分区结果

```
(parted) print
Model: KBG40ZNS128G NVMe TOSHIBA 128GB (nvme)
Disk /dev/nvme0n1: 128GB
Sector size (logical/physical): 512B/512B
Partition Table: gpt
Disk Flags:

Number  Start   End     Size    File system  Name  Flags
  1      17.4kB  128GB   128GB                   logic
```

- v. 终端命令：**quit** 退出

- vi. 终端命令: **sudo fdisk /dev/nvme0n1**

```
(parted) quit
Information: You may need to update /etc/fstab.

tx2nx@tx2nx:~$ sudo fdisk /dev/nvme0n1

Welcome to fdisk (util-linux 2.31.1).
Changes will remain in memory only, until you decide to write them.
Be careful before using the write command.

Command (m for help):
```

- vii. Command (m for help): 输入 **N**, 选择增加新分区, 后面回车默认即可

```
Command (m for help): n
Partition number (2-128, default 2): 2
First sector (250067728-250069646, default 250068992):
Last sector, +sectors or +size{K,M,G,T,P} (250068992-250069646, default 250069646):

Created a new partition 2 of type 'Linux filesystem' and of size 327.5 KiB.
```

- viii. Command (m for help): 输入 **P**, 查看分区结果

Device	Start	End	Sectors	Size	Type
/dev/nvme0n1p1	34	250067727	250067694	119.2G	Linux filesystem
/dev/nvme0n1p2	250068992	250069646	655	327.5K	Linux filesystem

- ix. 终端命令: **quit** 退出

- x. 终端命令: **sudo mke2fs -t ext4 /dev/nvme0n1p1**, 格式化分区

```
tx2nx@tx2nx:~$ sudo mke2fs -t ext4 /dev/nvme0n1p1
mke2fs 1.44.1 (24-Mar-2018)
/dev/nvme0n1p1 contains a ext4 file system
      last mounted on / on Sun Dec 26 11:04:07 2021
Proceed anyway? (y,N)
```

- xi. 终端命令: **sudo mount /dev/nvme0n1p1 /mnt**, 成功 mount 则 NVME 配置成功

```
tx2nx@tx2nx:~$ sudo mount /dev/nvme0n1p1 /mnt
tx2nx@tx2nx:~$
```

b) NVIDIA Jetson 系统迁移 (!!!迁移前建议参考第 3 章进行系统备份):

- ✓ 下面以 TX2NX 为例, 其他设备替换命令中间的设备名称即可, 设备名称可参考上面命令
- 1. 终端命令: **git clone <https://github.com/jetsonhacks/rootOnNVMe>** 或者 **<https://github.com/jetsonhacks/rootOnNVMe>** 下载脚本
- 2. 进入 **rootOnNVMe** 文件夹, 终端命令: **./copy-rootfs-ssd.sh**, 复制系统文件

至 NVME SSD

```
tx2nx@tx2nx:/home/script/root0nNVMe-master$ ./copy-rootfs-ssd.sh
mount: /mnt: /dev/nvme0n1p1 already mounted on /mnt.
17,380,838 0% 2.40MB/s 0:00:06 (xfr#39, ir-chk=1015/44887)
```

➤ 3. 终端命令：./setup-service.sh 配置启动项

```
tx2nx@tx2nx:/home/script/root0nNVMe-master$ ./setup-service.sh
==== AUTHENTICATING FOR org.freedesktop.systemd1.reload-daemon ====
Authentication is required to reload the systemd state.
Authenticating as: tx2nx,, (tx2nx)
Password: Failed to reload daemon: Method call timed out
polkit-agent-helper-1: pam_authenticate failed: Authentication failure
Created symlink /etc/systemd/system/default.target.wants/setssdroot.service → /etc/systemd/system/setssdroot.service.
Service to set the rootfs to the SSD installed.
Make sure that you have copied the rootfs to SSD.
Reboot for changes to take effect.
```

- 4. 参考第 2 章，进入 Recovery 模式。
- 5. （烧录环境的 Ubuntu，参考前面章节）进入~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra，打开终端：sudo ./flash.sh jetson-xavier-nx-devkit-tx2-nx nvme0n1p1 更新 EMMC 内部引导

```
greetrix@greetrix-virtual-machine:~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra$ sudo ./flash.sh jetson-xavier-nx-devkit-tx2-nx nvme0n1p1
```

```
[ 37.3739 ] Coldbooting the device
[ 37.3775 ] tegradevflash_v2 --reboot coldboot
[ 37.3788 ] Bootloader version 01.00.0000
[ 37.5711 ]
*** The target t186ref has been flashed successfully. ***
Make the target filesystem available to the device and reset the board to boot from external nvme0n1p1.
```

- 6. 重启 TX2NX，终端命令：df -l，此时系统盘已经变为 NVME SSD，并且原有 EMMC 上系统已经成功迁移。

```
tx2nx@tx2nx:~$ df -l
Filesystem      1K-blocks    Used Available Use% Mounted on
/dev/nvme0n1p1 122547172 11949920 104329176 11% /
none            1578060      0    1578060  0% /dev
tmpfs           1962748      52    1962696  1% /dev/shm
tmpfs           1962748    20764    1941984  2% /run
tmpfs            5120         4        5116  1% /run/lock
tmpfs           1962748      0    1962748  0% /sys/fs/cgroup
tmpfs           392548      12    392536  1% /run/user/120
tmpfs           392548      0    392548  0% /run/user/1000
```

6. 系统迁移至 SD 卡

Note: 该迁移仅用于 Jetson Nano/TX2NX/XavierNX

a) SD 卡配置:

1. 配置前确保系统能识别到 SD 卡，终端命令：**sudo fdisk -lu**

```
Disk /dev/mmcblk1: 59.5 GiB, 63864569856 bytes, 124735488 sectors
Units: sectors of 1 * 512 = 512 bytes
Sector size (logical/physical): 512 bytes / 512 bytes
I/O size (minimum/optimal): 512 bytes / 512 bytes
```

2. 将 SD 卡设置成 GPT 格式:

i. 终端命令：**sudo fdisk /dev/mmcblk1**，进入 sd 卡配置

```
tx2nx@tx2nx:~/Desktop$ sudo fdisk /dev/mmcblk1
Welcome to fdisk (util-linux 2.31.1).
Changes will remain in memory only, until you decide to write them.
Be careful before using the write command.
```

ii. 终端命令：**g**，新建 gpt 分区表

```
Command (m for help): g
Created a new GPT disklabel (GUID: E39DF30E-48FE-B041-A6FA-5EFAEC223CEA).
```

iii. 终端命令：**n**，新建分区，其他输入回车按默认值

```
Command (m for help): n
Partition number (1-128, default 1):
First sector (2048-124735454, default 2048):
Last sector, +sectors or +size{K,M,G,T,P} (2048-124735454, default 124735454):
```

iv. 终端命令：**w**，保存分区信息

```
Command (m for help): w
The partition table has been altered.
Calling ioctl() to re-read partition table.
Syncing disks.
```

v. 终端命令：**sudo mke2fs -t ext4 /dev/mmcblk1p1**，格式化分区


```

nx@nx-desktop:~$ sudo mke2fs -t ext4 /dev/mmcblk1p1
mke2fs 1.45.5 (07-Jan-2020)
Discarding device blocks: done
Creating filesystem with 15591675 4k blocks and 3899392 inodes
Filesystem UUID: fd266d8c-21ae-4dbd-89a6-6e5cd0f6be67
Superblock backups stored on blocks:
    32768, 98304, 163840, 229376, 294912, 819200, 884736, 1605632, 26542
    08,
    4096000, 7962624, 11239424
Allocating group tables: done
Writing inode tables: done
Creating journal (65536 blocks): done
Writing superblocks and filesystem accounting information: done

```

vi. 终端命令: **sudo mount /dev/mmcblk1p1 /mnt**, 成功 mount 则 SD 卡配置成功

```

tx2nx@tx2nx:~/Desktop$ sudo mount /dev/mmcblk1p1 /mnt

```

b) NVIDIA Jetson 系统迁移 (!!!迁移前建议参考第 3 章进行系统备份):

- ✓ 下面以 TX2NX 为例, 其他设备替换命令中间的设备名称即可, 设备名称可参考上面命令
- 1. 终端命令: **git clone <https://github.com/jetsonhacks/rootOnNVMe>** 或者 **<https://github.com/jetsonhacks/rootOnNVMe>** 下载脚本
- 2. 修改 **copy-rootfs-ssd.sh** 文件, 注释掉 mount 命令

```

#!/bin/bash
# Mount the SSD as /mnt
# sudo mount /dev/nvme0n1p1 /mnt
# Copy over the rootfs from the SD card to the SSD
sudo rsync -axHAX --numeric-ids --info=progress2 --exclude={"/dev/", "/proc/", "/sys/", "/tmp/",
"/run/", "/mnt/", "/media/", "/lost+found"} / /mnt
# We want to keep the SSD mounted for further operations
# So we do not unmount the SSD

```

- 3. 进入 **rootOnNVMe** 文件夹, 终端命令: **./copy-rootfs-ssd.sh**, 复制系统文件至 SD 卡

```

nx@nx-desktop:~/rootOnNVMe$ sudo bash ./copy-rootfs-ssd.sh
276,613,277 37% 50.12MB/s 0:00:05 (xfr#2089, ir-chk=1622/4960)

```

- 4. 参考第 2 章, 进入 **Recovery 模式**。
- 5. (烧录环境的 **Ubuntu**, 参考前面章节) 进入 **~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra**, 打开终端:

将前面章节对应的刷机命令 **mmcblk0p1** 换成 **mmcblk1p1** 更新 EMMC 内部引导

- ◆ 如 **TX2NX-EMMC**: **sudo ./flash.sh jetson-xavier-nx-devkit-tx2-nx mmcblk1p1**

```

greetrix@greetrix-virtual-machine:~/nvidia/nvidia_sdk/JetPack_4.6_Linux_JETSON_TX2_TARGETS/Linux_for_Tegra$ sudo ./flash.sh jetson-xavier-nx-devkit-tx2-nx mmcblk1p1

```


```
[ 30.4511 ] Coldbooting the device
[ 30.4521 ] tegradevflash_v2 --reboot coldboot
[ 30.4531 ] Bootloader version 01.00.0000
[ 30.6253 ]
*** The target t186ref has been flashed successfully. ***
Make the target filesystem available to the device and reset the board to boot from external mmcblk1p1.
```

- 6. 重启 TX2NX，终端命令：**df -l**，此时系统盘已经变为 SD 卡，并且原有 EMMC 上系统已经成功迁移。


```
tx2nx@tx2nx:~$ df -h
Filesystem      Size  Used Avail Use% Mounted on
/dev/mmcblk1p1  59G   12G   44G   21% /
devtmpfs        1.6G     0   1.6G    0% /dev
tmpfs           1.9G   52K   1.9G    1% /dev/shm
tmpfs           1.9G   21M   1.9G    2% /run
tmpfs           5.0M   4.0K   5.0M    1% /run/lock
tmpfs           1.9G     0   1.9G    0% /sys/fs/cgroup
tmpfs           384M   12K   384M    1% /run/user/120
tmpfs           384M     0   384M    0% /run/user/1000
```

7. 安装 JTOP (控制风扇, 查看系统信息)

1. 打开终端, 通过下面命令安装 Jtop
 - a) `sudo apt-get install python3-pip python3-dev -y`
 - b) `sudo -H pip3 install jetson-stats`
 - c) `sudo systemctl restart jtop.service`
 - d) `sudo jtop`

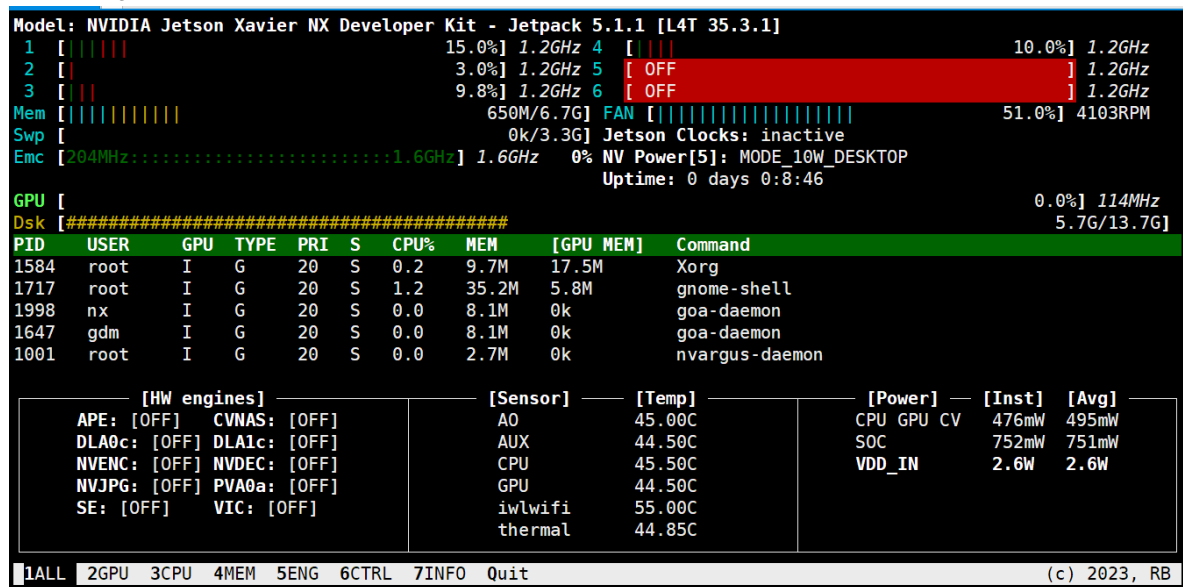

2. 点击 6CTRL, 即可手动控制风扇转速及电源方案

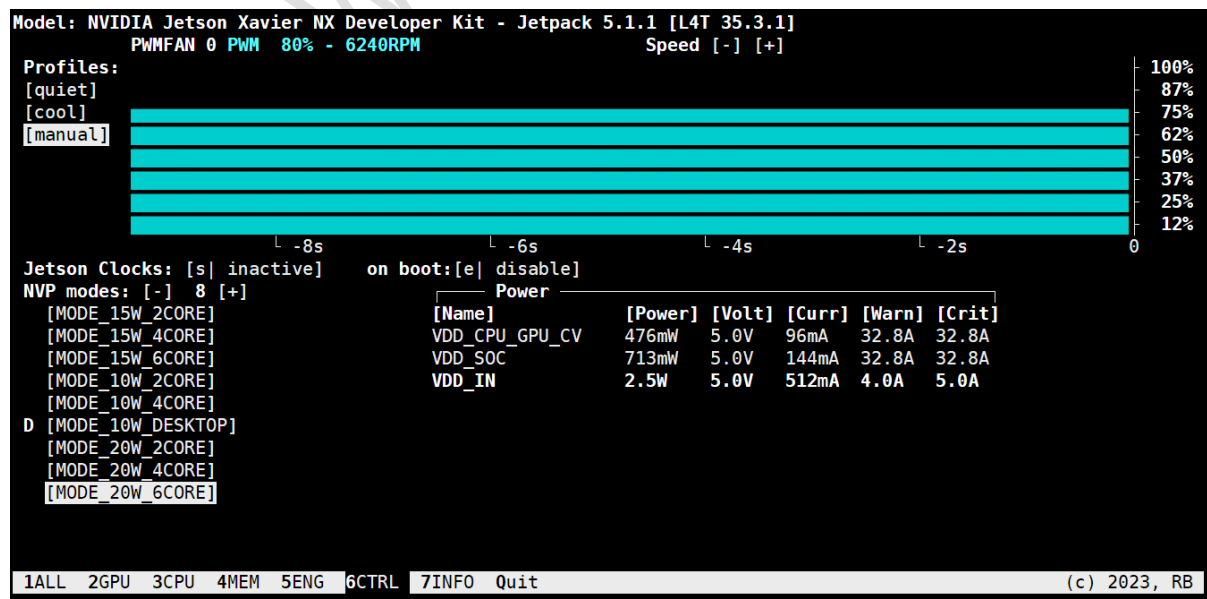

8. 使用 CAN 进行通信

1. Tx2-NX/XavierNX/OrinNano/OrinNX 上集成了 1 个 CAN 控制器 CAN0, 另外 WeAct Studio 的载板上设计了 1 个 CAN 收发器 (CAN0), 可直接挂载 CAN 物理总线使用。
2. Tx2-NX/XavierNOrinNX/OrinNanoX 自带 canbus 的驱动并集成到了镜像中, 已经支持 canbus 无需多做处理。我们需要安装 canbus 模块。(在终端输入下面命令或者放入 rc.local 里面开启自启)

```
modprobe can      // 插入 can 总线子系统
modprobe can-raw  //插入 can 协议模块
modprobe can-bcm
modprobe can-gw
modprobe can_dev
modprobe mttcan   //真正的 can 口支持
```

3. 通过 **lsmod** 检查是否安装成功。

```
nvidia@localhost:~$ lsmod
Module              Size  Used by
fuse                103841  2
mttcan              66251  0
can_dev             13306  1 mttcan
can_gw              10919  0
can_bcm             16471  0
can_raw             10388  0
can                 46600  3 can_raw,can_bcm,can_gw
zram                26166  6
overlay             48691  0
bcmdhd              934274  0
cfg80211            589351  1 bcmdhd
spidev              13282  0
nvgpu               1575721  20
bluedroid_pm        13912  0
ip_tables           19441  0
x_tables            28951  1 ip_tables
```

- #### 4. 配置 canbus 属性，和串口的波特率设置类似。

```
sudo ip link set can0 type can bitrate 500000
sudo ip link set up can0
```

5. 通过 ifconfig 查看是否配置成功。

```
nvidia@localhost:~$ ifconfig
can0: flags=193<UP,RUNNING,NOARP> mtu 16
    unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 txqueuelen 10  (UNSPEC)
    RX packets 0 bytes 0 (0.0 B)
    RX errors 0 dropped 0 overruns 0 frame 0
    TX packets 0 bytes 0 (0.0 B)
    TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
    device interrupt 131
```

6. 在一个终端通过 `cansend can0(can1) ×××` 命令来发送数据, 另一个终端通过 `candump can1(can0)` 完成实际信号收发测试

[illegible]

9. GPIO 使用

1. Jetson Nano/TX2NX/XavierNX/OrinNano/OrinNX 可直接通过 gpiod 控制 GPIO 输入输出

Jetpack 4

	Nano	TX2NX	Xavier NX
GPIO1	gpiochip0[149]	gpiochip0[105]	gpiochip0[133]
GPIO2	gpiochip0[216]	gpiochip0[76]	gpiochip0[148]
GPIO3	gpiochip0[194]	gpiochip0[18]	gpiochip1[20]
GPIO4	gpiochip0[38]	gpiochip0[13]	gpiochip0[105]

Jetpack 5

	XavierNX	Orin Nano/Orin NX
GPIO1	gpiochip1[105]	gpiochip0[105]
GPIO2	gpiochip1[118]	gpiochip0[144]
GPIO3	gpiochip2[16]	gpiochip0[85]
GPIO4	gpiochip1[84]	gpiochip0[43]

Jetpack 6/7

	Orin Nano/Orin NX
GPIO1	gpiochip0[105]
GPIO2	gpiochip0[144]
GPIO3	gpiochip0[85]
GPIO4	gpiochip0[43]

以 Orin NX Jetpack 7 GPIO1 为例, gpiochip0 是 Chip Group ID, 105 是 GPIO Number

2. 安装 gpiod/libgpiod-dev

- a) `sudo apt-get install gpiod`
- b) `sudo apt-get install libgpiod-dev`

3. GPIO 使用方法

- a) 设置高电平: `sudo gpiowrite gpiochip0 105=1`
- b) 设置低电平: `sudo gpiowrite gpiochip0 105=0`
- c) 读取: `sudo gpioread gpiochip0 105`

10. UART 使用

Jetpack 4

	Nano	TX2NX	Xavier NX
FUNC_UART	ttyTHS1	ttyTHS2	ttyTHS0

Jetpack 5

	Orin Nano/Orin NX	Xavier NX
FUNC_UART	ttyTHS0	ttyTHS0

Jetpack 6/7

	Orin Nano/Orin NX
FUNC_UART	ttyTHS1

1. 可以通过下面命令安装 cutecom/minicom 来使用 UART:
 - a) `sudo apt-get install cutecom`
 - b) `sudo apt-get install minicom`

联系我们

1. Github: <https://github.com/WeActTC>
2. 码云: <https://gitee.com/WeAct-TC>
3. 网站: <https://www.weact-tc.cn/>
4. 淘宝: <https://weactstudio.taobao.com/>



WeAct Studio
官方淘宝店