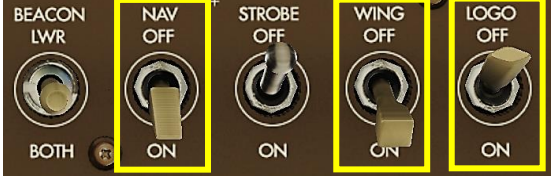
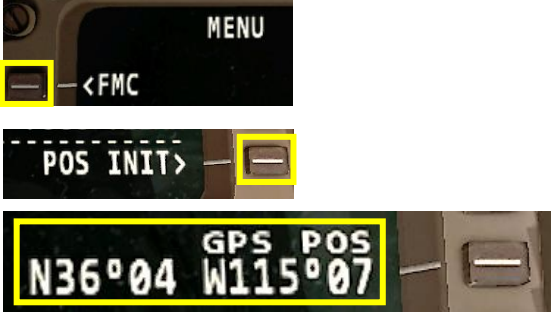
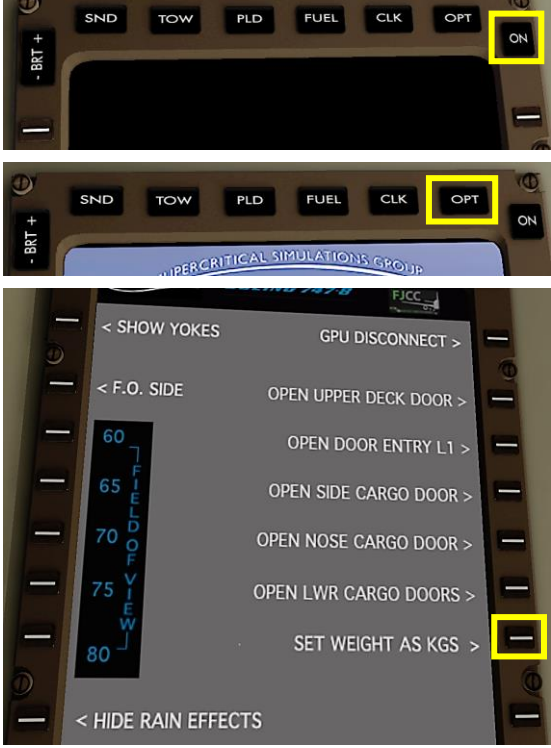


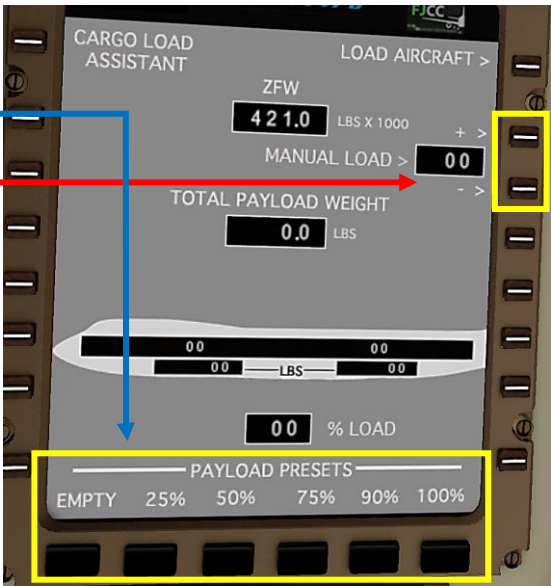
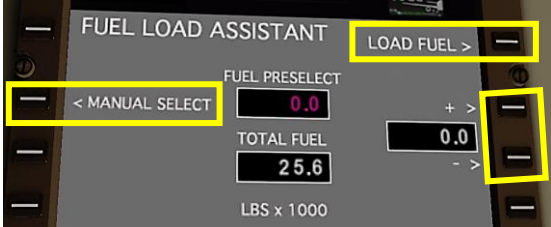
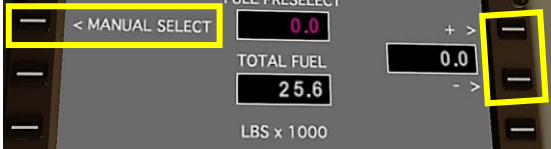
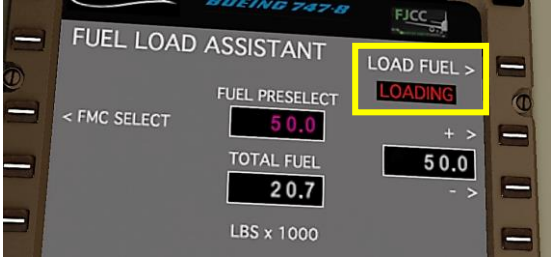
General Pre-Flight Checklist from Cold & Dark

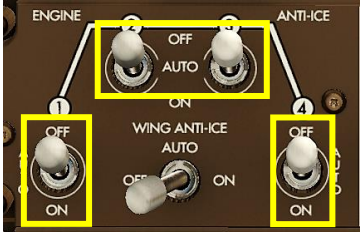
*There will be many omissions in this workflow, as many parts of the SSG 747-8 are not modeled (similarly to the default 747-400).

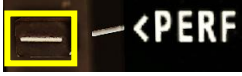
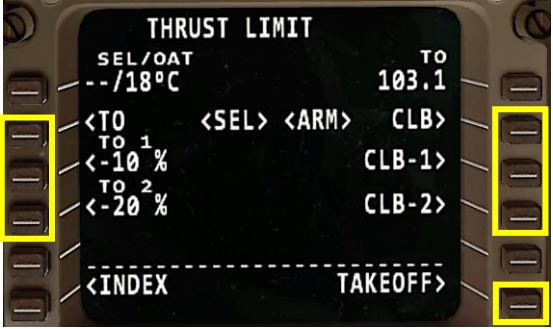
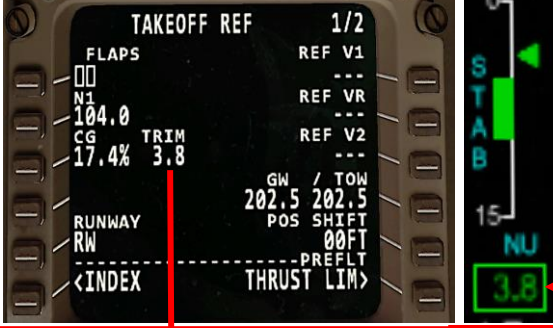
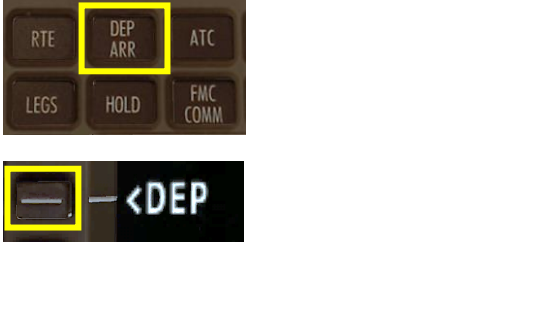
****Specific items will be completed later in the pre-flight, for example FLAPS, V SPEEDS, and OAT. Enter these only when directed.**

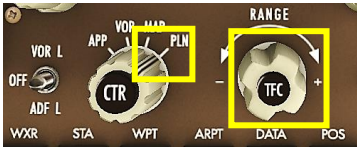
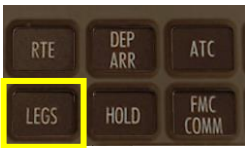
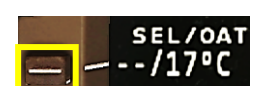
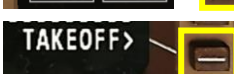
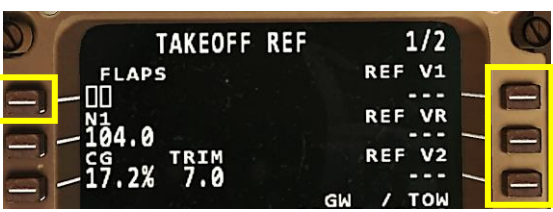
(1)	Find Center Console	
(2) (2A)	PARKING BRAKE Set (up position)	 
(3)	Find Overhead Panel	
(4) (4A) (4B) (4C)	BATTERY POWER Open Guard Set to ON Close Guard	
(5) (5A)	STAND BY POWER Set to AUTO	
(6) (6A)	BUS TIES Set to AUTO (1-2-3-4)	
(7) (7A)	GENERATOR CONTROL Set to ON (1-2-3-4)	
(8) (8A) (8B)	HYDRALIC PUMPS Set Pumps to OFF (1-2-3) Set Pump to AUX (4)	
(9) (9A)	ENGINE HYDRALIC PUMPS Set to ON (1-2-3-4)	
(10) (10A)	EXTERNAL POWER Select 1 & 2 (when Available)	
(11) (11A)	CABIN LIGHTING Set as needed	

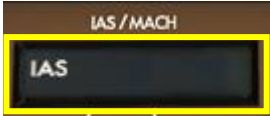
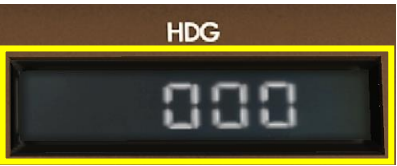
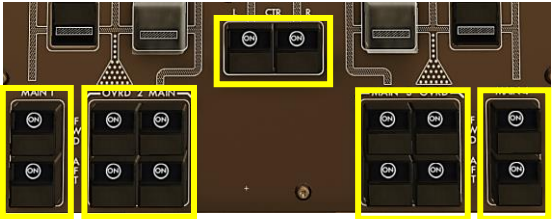
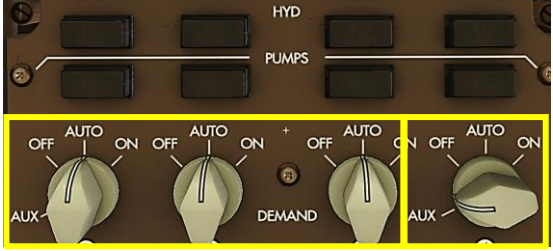
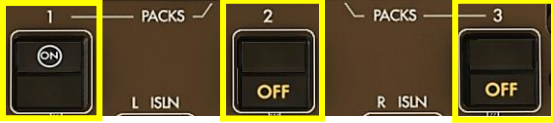
(12) (12A) (12B) (12C)	ELECTRICAL ENGINE CONTROL Open Guards (1-2-3-4) Set to NORM (1-2-3-4) Close Guards (1-2-3-4)	
(13) (13A) (13B)	UTILITY Set LFT UTILITY to ON Set RGT UTILITY to ON	
(14) (14A) (14B) (14B)	LIGHTS Set NAV to ON (mandatory) Set WING to ON (optional) Set LOGO to ON (night flying)	
(15) (15A) (15B)	IRS Set LFT-CTR-RGT to OFF Set LFT-CTR-RGT to NAV	
(16) Find FMC (Flight Management Computer)		
(17) (17A) (17B)	Select FMC Select POS INIT Ensure GPS has aligned (there is no way to confirm alignment, in the SSG)	
(17) Find Flight Assistant Pad (Left of Captain seat)		
(18) (18A) (18B)	Select ON Select OPT Set CONVERSION UNITS (as desired)	

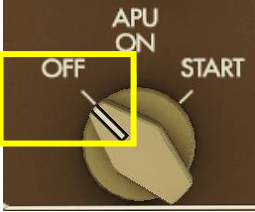
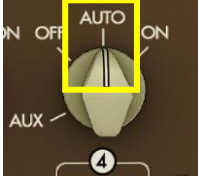
(18C)	Select PAYLOAD	
(18D)	Load PAYLOAD (as desired) Manual Load, or Preset	
(18E)	Select LOAD AIRCRAFT	
(18E)	Select FUEL	
(18F)	Change Fuel Select (from Manual to FMC)	
(18G)	Select LOAD FUEL	
(18F)	Fuel is loading	
(19)	Find Overhead Panel	
(20) (20A)	FUEL PUMPS Set all to OFF (will be all blank)	
(21) (21A)	FUEL CROSS-FEEDS Set to ON (1-2-3-4)	

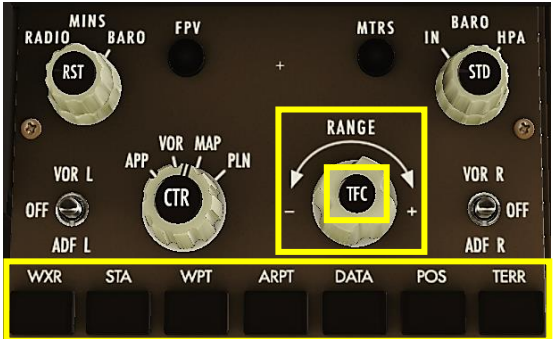
(22) (22A) (22B)	ANTI-ICE Set Engine Anti-Ice to OFF Set Wing Anti-Ice to OFF	 The image shows two sets of controls. The top set is for 'ENGINE' anti-ice, with a rotary switch set to 'OFF'. The bottom set is for 'WING ANTI-ICE', also with a rotary switch set to 'OFF'. Both switches have 'OFF', 'AUTO', and 'ON' positions. The 'OFF' position is highlighted with a yellow box.
(23) (23A)	WINDOW HEAT Set to ON	 The image shows two rectangular buttons labeled 'ON' and 'OFF'. Both buttons are highlighted with a yellow box.
(24) (24A) (24B) (24C)	YAW DAMPERS Set to ON	 The image shows two rectangular buttons labeled 'ON' and 'OFF'. Both buttons are highlighted with a yellow box.
(25) (25A) (25B) (25C) (25D)	APU Set APU to ON Set to START (hold and release) Wait for APU GENs to come on Select APU GEN 1 & 2	 The image shows three controls. On the left is a rotary switch for 'APU' with positions 'OFF', 'ON', and 'START'. In the middle is a rectangular button for 'BATTERY' with an 'ON' label. On the right is a rectangular button for 'APU GEN 2' with an 'ON' label. All three controls are highlighted with a yellow box.
(26) Find Flight Assistant Pad (Left of Captain seat)		
(27) (27A)	GPU DISCONNECT Select GPU DISCONNECT	 The image shows a rectangular button labeled 'GPU DISCONNECT >'. The button is highlighted with a yellow box.
(28) Find Overhead Panel		
(29) (29A)	PACKS Set Packs to ON (1-2-3)	 The image shows three rectangular buttons labeled 'ON' and 'OFF'. The buttons are labeled '1', '2', and '3' above them. The buttons are highlighted with a yellow box.
(30) (30A)	ISOLATION VALUES Set to LFT & RGT to ON	 The image shows two rectangular buttons labeled 'ON' and 'OFF'. The buttons are labeled 'L ISLN' and 'R ISLN' above them. The buttons are highlighted with a yellow box.
(31) (31A)	APU BLEED Set APU BLEED to ON	 The image shows a rectangular button labeled 'ON' and 'OFF'. The button is highlighted with a yellow box.
(32) Find FMC (Flight Management Computer)		
(33) (33A) (33B) (33C)	Select FMC Confirm AIRAC Cycle is current If not, update via Navigraph Select POS INIT Select ROUTE	 The image shows three screens. The top screen is labeled 'MENU' and has a button labeled '<FMC'. The middle screen is labeled 'AIRAC 1803' and '01/MAR/2018 - 28/MAR/2018'. The bottom screen is labeled 'POS INIT>' and 'ROUTE>'. All three screens are highlighted with a yellow box.

(33D)	Enter REF AIRPORT	
(33E)	Enter DEP RUNWAY	
(33F)	Select ACTIVATE	
(33G)	Select EXEC	
(33H)	Select RTE2	
(33I)	Select PREF	
(33J)	Enter Cost Index	
(33K)	Enter Reserves	
(33L)	Line Select GW/ CRZ CG	
(33M)	Once the TRIP ALT populates, either line select CRUZ ALT or enter desired ALT	
(33N)	Select THRUST LIMIT	
(33O)	Select TAKE-OFF and CLIMB	
(33P)	Select TAKEOFF	
(33Q)	Set TRIM as filed	
(33R)	Select DEP ARR	
(33S)	Select DEP	
(33T)	Select DEP RWNV	
	Select SID	
	Select SID TRANS	
	Select ARR	
	Select STAR	
	Select STAR TRANS	
	Select APPROACH	

(33U) (33V) (33W) (33X)	Select ARR RWNV Select EXEC On EFIS PANEL (above NAV DISP), Select PLAN Set RANGE to 10 On FMC, Select LEGS On FMC, Select STEP Select STEP at each waypoint, correct any discontinuities or remove any waypoints as needed	   
(34) (34A) (34B) (34C) (34D) (34E) (34F)	Select Menu Select THRUST LIM Enter OAT TEMP (as seen above N1 Select TAKEOFF Enter FLAPS VALUE Line-Select V SPEEDS Select LEGS	      
(35) Find Mode-Control Panel (MCP)		
(36)	On EFIS PANEL, Select MAP	

(36A)	Set FLT DIRS to ON	
(36B)	Enter V2 Speed from TAKEOFF PG Speed to enter = V2 Speed + 15 KTS	
(36C)	Arm LNAV and VNAV	
(36D)	Enter DEP RWNY HDG	
(36E)	Enter CRUZ ALT	
(36F)	Set AUTOBRAKES to RTO	
(37) Find Overhead Panel		
(38)	FUEL PUMPS	
(38A)	Set FUEL PUMPS to ON (1-2-3-4 + CTR)	
(39)	LIGHTS	
(39A)	Set BEACON LIGHT to BOTH	
(40)	HYDRALIC PUMPS	
(40A)	Set Pumps to AUTO (1-2-3)	
(40B)	Set Pumps to AUX (4)	
(41)	PACKS	
(41A)	Set PACKS to ON (1)	
(41B)	Set PACKS to OFF (2-3)	
(42)	ENGINE BLEEDS	
(42A)	Set ENGINE BLEEDS to ON (1-2-3-4)	

(43) (43A) (43B) (43C)	PUSHBACK Open GROUND HANDLING (SHT+G) Toggle PARKING BRAKE to ON, then OFF Determine PUSHBACK Direction, then begin pushback	
(44) (44A)	ENGINE FUEL CUTOFF (BWL Throttles) Select ENGINE CUTOFF (3-4)	
(45) (45A) (45B) (45C)	ENGINE START Pull ENGINE (3-4) STARTS EGT GUAGE begins to move (BWL N1 Panel) Select ENGINE CUTOFF (1-2) Pull ENGINE (1-2) STARTS All Engines have fired	
(46) (46A)	APU Set APU to OFF APU BLEED & APU GENS (1 & 2) will turn off	
(47) (47A)	PACKS Set PACKS to ON (2-3)	
(48) (48A)	HYDRALIC PUMPS Set HYDRALIC PUMP (4) to AUTO	

(49) (49A)	ENGINE & WING ANTI-ICE Leave OFF unless under 10°C TAT	
(50) (50A)	CENTRAL DISPLAYS Check for any errors	
(51) (51A)	LIGHTING Set TAXI to ON	
(52) (52A)	FLAPS Configure FLAPS for TAKEOFF	
(53) (53A) (53B) (53C)	EFIS PANEL Select TFC on RANGE (TCAS ON) Select MODES as needed (WXR, TERR, etc.) Set RANGE as desired	
(54) (54A)	ERRORS & WARNINGS Reset any errors and warnings	
(55) (55A)	TAXI Taxi to DEP RWNV	
(56) (56A) (56B) (56C) (56D)	TAKEOFF PREPARATION Set Parking Brake Select FLIGHT-PATH VECTOR Arm AUTO-THROTTLE Set TAXI LIGHT to OFF Set STROBE LIGHT to ON	    

(56E)	Set LANDING LIGHTS to ON	
(56F)	Engage THRUST-LEVERS to 70% (N1 Value)	
(56G)	Disengage Parking Brake	
(57) (57A)	TAKE-OFF / GO-AROUND (TOGA) Activate TOGA Power	
(58)	TAKEOFF Have a safe flight!	
		
*** Checklist for Flight Simulation ONLY *** Based on the operation of the SSG Boeing 747-8 Series		