Gamepad 1: DRIVER

Drives the robot. Pick it on the Driver Station with START + A. Same in every TeleOp (DriverControls.java).

Left trigger (LT / L2)
TURBO (hold)
full speed: 100%

Left bumper (LB / L1)
SLOW (hold)
lining up: 50%

Dpad UP
(free)

Dpad LEFT
(free)

Dpad RIGHT
(free)

Dpad DOWN
(free)

Left stick
DRIVE
almost straight = exactly straight (±20°)

Left stick: press it down
(free)

Right trigger (RT / R2)
TURBO (hold)
full speed: 100%

Right bumper (RB / R1)
SLOW (hold)
lining up: 50%

Y (triangle)
(free)

X (square)
(free)

B (circle)
(free)

A (cross)
STRAIGHT ASSIST on/off
rumble: 1 blip = ON, 2 = OFF. Starts ON

Right stick
TURN
push left / right

Right stick: press it down
(free)

Three driving speeds

SLOW hold either bumper: 50% power, for lining up
NORMAL nothing held: 80% power, everyday driving
TURBO hold either trigger: 100% power, crossing the field
Both held? SLOW wins (the safer choice).
The Driver Station shows "Drive speed" during the match.
These numbers come from SLOW_MODE_SCALE, NORMAL_SCALE and TURBO_SCALE in DriverControls.java (reprint after changing them).

Good to know

Directions match the robot: stick forward = drive forward, stick left = strafe left, right stick left = turn left.
Straight-line assist (A): left stick within 20° of straight forward / back / left / right drives exactly straight (#67).
Let go of the sticks and the robot stops quickly (BRAKE, decision 049).
Nothing moves during INIT (game rule G304.H).
Free buttons (B X Y, dpad, stick presses) can get driver jobs later, e.g. "turret to forward".

Gamepad 2: OPERATOR

Runs the mechanisms. Pick it on the Driver Station with START + B.

Left trigger (LT / L2)
EJECT (hold)
water wheel DOWN + intake OUT; then all off

Left bumper (LB / L1)
(free)

Dpad UP
(free)

Dpad LEFT
(free)

Dpad RIGHT
(free)

Dpad DOWN
(free)

Left stick
TURRET (OFF for now)
TURRET_ENABLED = false: does nothing

Left stick: press it down
(free)

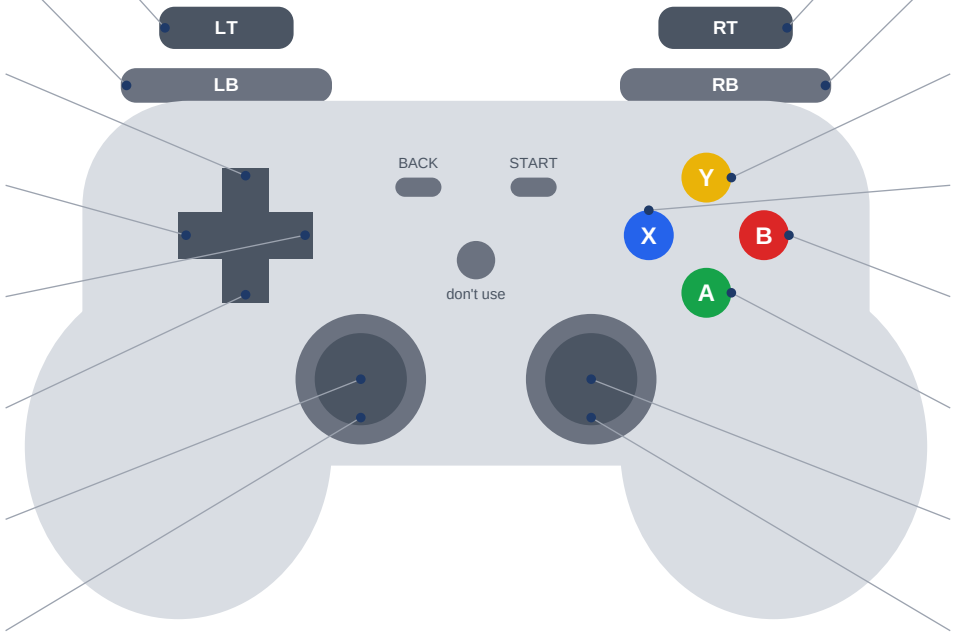

Right trigger (RT / R2)
(free)

Right bumper (RB / R1)
(free)

Y (triangle)
LAUNCH (hold)
trigger moves out of the way; NECTARs launch by thems

X (square)
TURRET REST SPOT (OFF for now)
TURRET_ENABLED = false: does nothing

B (circle)
DIRECTION (OFF for now)
DIRECTION_TOGGLE_ENABLED = false: does nothing

A (cross)
INTAKE SYSTEM (toggle)
intake IN + water wheel UP, on / off. Starts OFF

Right stick
(free)

Right stick: press it down
(free)

How it works

Flywheel: starts when START is pressed and runs the whole match.
It is NOT on a button. Watch "Launcher Status" for READY.
A = intake + water wheel on / off. **B** = switch IN / OUT.
X = turret rest spot. TURRET OFF for now (TURRET_ENABLED = false): X and the left stick do nothing.
EJECT beats everything; let go and the intake + water wheel are OFF.
Lights: PURPLE = the next ball to launch is a NECTAR.

Not on a button yet

Turret: OFF in Main TeleOp for now (decision 050). Hood up / down, turret auto-aim (later, #7). Flower flipper: waiting to see if built.
Free: dpad, bumpers, right trigger, right stick.
Code: opmodes/teleop/OperatorControls.java