Gamepad 1: DRIVER

Drives the robot. Pick it on the Driver Station with START + A. Same in every TeleOp (DriverControls.java).

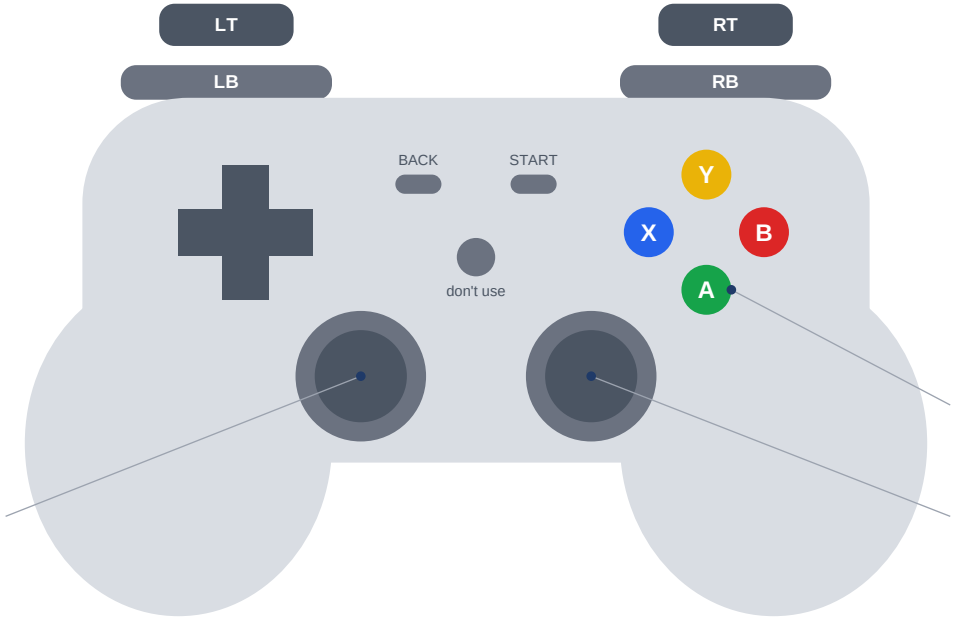

Left stick

DRIVE

almost straight = exactly straight (±20°)

A (cross)

STRAIGHT ASSIST on/off

rumble: 1 blip = ON, 2 = OFF. Starts ON

Right stick

TURN

push left / right

Good to know

Directions match the robot: left stick forward = drive forward, left stick left = strafe left, right stick left = turn left.
Straight assist (A): left stick within 20° of straight forward / back / left / right drives exactly straight.
Let go of the sticks and the robot stops quickly.
Nothing moves during INIT.

Gamepad 2: LAUNCHER

Runs the mechanisms. Pick it on the Driver Station with START + B.

Left trigger (LT / L2)
EJECT (hold)
pushes balls out; let go = all off

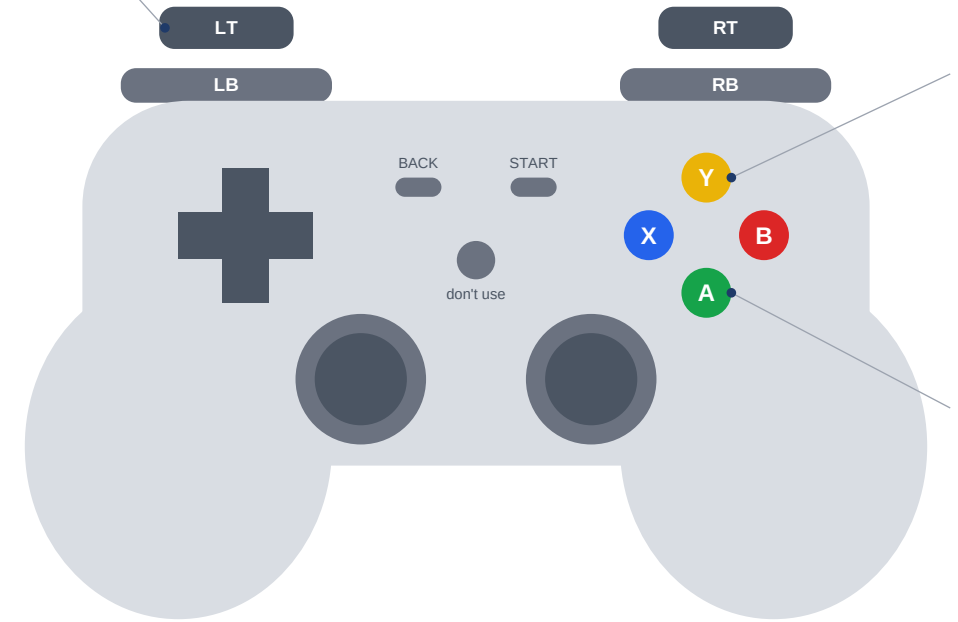

Y (triangle)
LAUNCH (hold)
NECTARs launch by themselves

A (cross)
INTAKE SYSTEM on/off
Starts OFF: you MUST press A to start it!

Good to know

You MUST press A after START! The intake + water wheel start OFF, so no balls come in until you press A.
Flywheel: starts by itself when START is pressed and runs the whole match. Watch "Launcher Status" for READY.
NECTARs launch by themselves. Hold **Y** to launch POLLEN.
EJECT (left trigger) beats everything; let go and the intake + water wheel are OFF.
Lights: PURPLE = the next ball to launch is a NECTAR.