

CONTROLLER CONNECTIONS

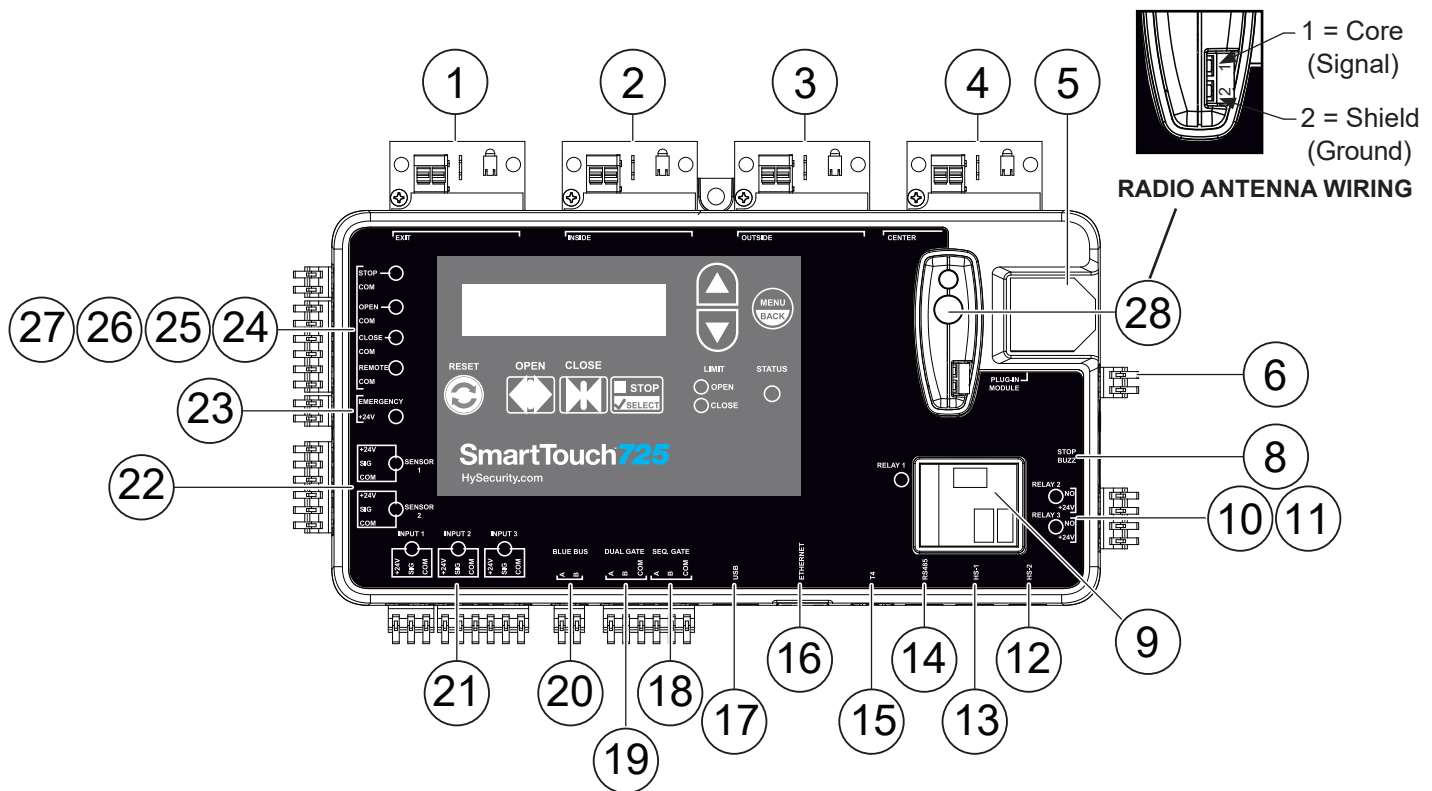


Figure 19. SmartTouch 720/725 Controller Connections

1. **Hy5B EXIT Loop** – This opens a fully closed gate or reopens a closing gate.
2. **Hy5B INSIDE Loop** – Reversing loop on secure side.
3. **Hy5B OUTSIDE Loop** – Reversing loop on public side.
4. **Hy5B CENTER Loop** – Detect vehicle in swing arc of the gate (swing gate only)
5. **(Not Used)**
6. **OXI Antenna** – For use with old OXI receivers that do not have an antenna connection.*
8. **Stop/Buzzer Harness**
9. **Relay 1** – Mechanical relay
10. **Relay 2** – Solid state relay
11. **Relay 3** – Solid state relay
12. **HS-2** – Can connect to VFD, HyInverter, or I/O Expansion Module.
13. **HS-1** – Harness connects communication to I/O Expansion Module (OT1 and OT7, MN3).
14. **RS485** – Standard VFD Input
15. **(Not Used)**
16. **Ethernet** – See Network Setup Menu in the External Communications Menu on page 80.*
17. **USB** – Used for firmware updates and fault log download.
18. **Sequenced Gate Connection**
19. **Dual Gate Connection**
20. **BlueBUS** – For use with NICE BlueBUS devices*
21. **Programmable Inputs 1-3**
22. **Programmable Sensor Inputs 1-2** – UL 325 required external entrapment sensors
23. **Emergency** – Programmable to fire department open or emergency close
24. **Remote** – Programmable for three functions, defaults to step function
25. **Close** – Close only input
26. **Open** – Open only input
27. **Stop** – Stop and reset input
28. **OXI** – Radio for NICE access control devices.*

* Some features not available on SmartTouch 720.