




The Hyundai **IONIQ 6** **ELECTRIC**

Quick Reference Guide

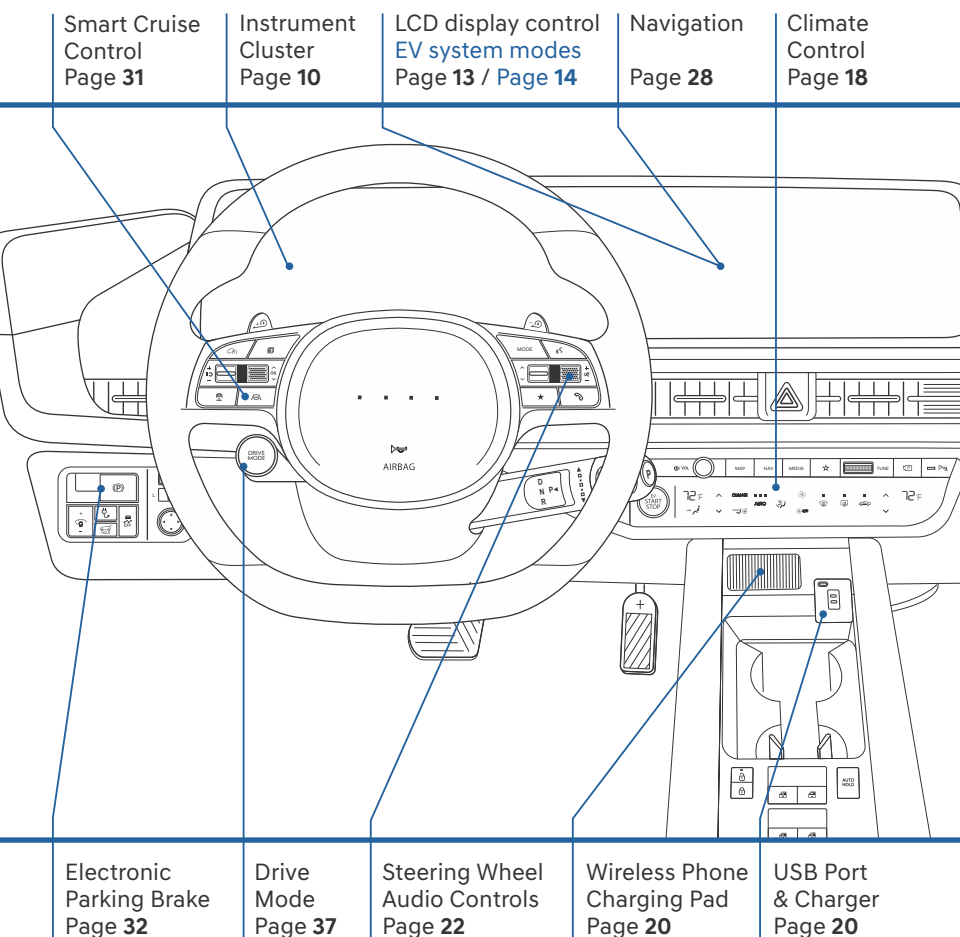



HYUNDAI VEHICLE OWNER PRIVACY POLICY


Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Care Center at:

Hyundai Customer Care
P.O. Box 20850
Fountain Valley, CA 92728
800-633-5151
consumeraffairs@hmmausa.com

Hyundai's Customer Care Center in [English](#), representatives are available:
Monday through Friday, between the hours of 6:00 AM and 5:00 PM PST and
Saturday between 6:30 AM and 3:00 PM PST (English).

For Customer Connect Center assistance in [Spanish](#) or [Korean](#), representatives are available:
Monday through Friday between 6:30 AM and 3:00 PM PST.

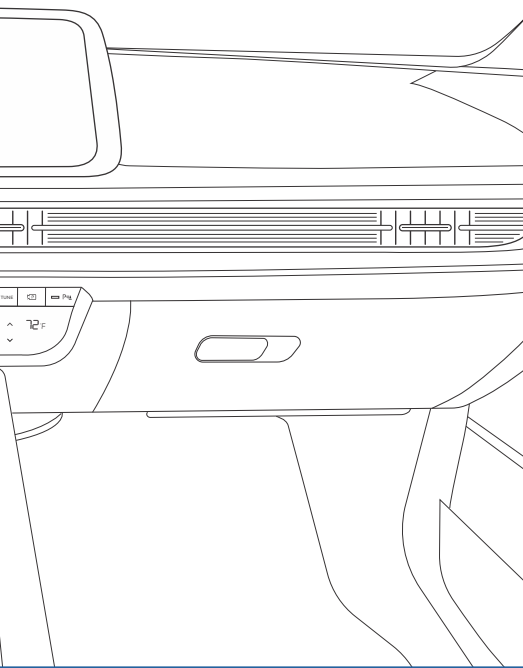

**WATCH
& LEARN**

Scan the QR code to
view more Hyundai
feature videos or go to

<https://hyundaihowtos.com>



WARNING!

To reduce the risk of serious injury
to yourself and others, read and
understand the important **SAFETY
INFORMATION** in your Owner's
Manual.

Use this Quick Reference Guide to
learn about the features that will
enhance your enjoyment of your
Hyundai.

More detailed information about
these features are available in
your Owner's Manual.

► **FEATURES AND CONTROLS**

Automatic Climate Control System	18
Aux. Battery Saver+	12
Battery Conditioning Mode	15
Charging Door	06
Cluster Display Control	13
Driver's Main Controls	04
Electric Vehicle System Modes	14
Hands-free Smart Trunk	05
Head-Up Display	09
High Voltage Battery SOC (State Of Charge) Gauge	12
Homelink Wireless Garage Control System	16
Instrument Cluster	10
Keyhole Access (Driver's Door)	08
LCD Display Modes	13
Power Trunk Operation	05
Seat - Driver Position Memory System	04
Seat - Folding Rear Seats	02
Seat - Heated/ventilated Front Seats	03
Seat - Power Driver's Seat Adjustment	02
Unlock Ac Outlet Panel	09
USB Port	20
USB Charger	20
Vehicle Power Gauge	12
Warnings And Indicators	11
Wipers And Washer	08
Wireless Phone Charging System	20

► **INFOTAINMENT**

Android Auto Setup™ & Apple Carplay®	24
Bluetooth® Audio Quality Tips	23
Bluetooth® Phone Pairing	21
Bluetooth® Phone Operation	21
Bluetooth® Operational Tips	22
Myhyundai With BlueLink App	25
Navigation	28
Radio Mode	27
Steering Wheel Audio Control	22
Voice Recognition Tips	23


► **DRIVING**

Blind-Spot Collision-Avoidance Assist (BCA)	35
Drive Mode	37
Electronic Parking Brake	32
Forward Collision-avoidance Assist (FCA)	34
Highway Driving Assist (HDA)	32
Lane Keeping Assist (LKA)	33
Lane Following Assist (LFA)	33
Regenerative Brake Level Control Paddles	29
Shift By Gear Selector	29
Smart Cruise Control (SCC)	31
Tire Pressure Monitoring System (TPMS)	36


* Some vehicles may not be equipped
with all the listed features.

POWER DRIVER'S SEAT ADJUSTMENT


Forward and backward ①




Seat height ①



Seatback angle ②



Lumbar support ③

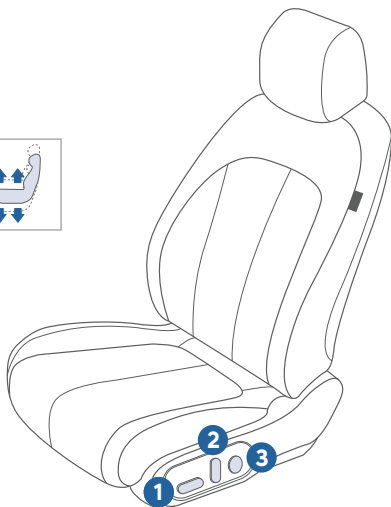

FOLDING REAR SEATS




To fold down the rear seat back:

1. Set the front seat to the upright position and if necessary, slide the front seat forward.
2. Lower the rear head restraints to the lowest position.
3. Route the seat belt webbing to the outward of the rear seat to prevent the belts from being trapped behind or under the seats. Be wary of center belt routing and locking when lowering rear seat.
4. Fold the rear seats toward the front of the vehicle.
5. To use the rear seat, lift and pull the seats rearward. Pull the seatback firmly until it clicks into place. Make sure the seat back is locked in place.

FEATURES AND CONTROLS

HEATED/VENTILATED FRONT SEATS (if equipped)

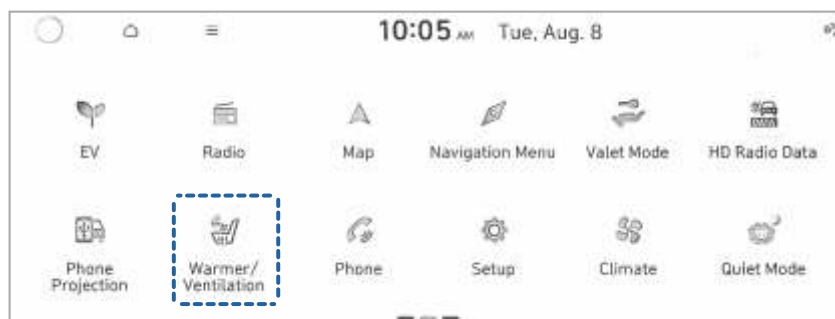


- 1 Turn ON/OFF seat Warmer/Ventilation.
- 2 Turn ON/OFF steering wheel warmer.
- 3 Displays the climate or warmer/ventilation settings screen.

While the vehicle is running, touch Heating/Ventilation icon in the infotainment home screen.

To activate seat warmer/air ventilation of each front seat, touch  icon on the infotainment screen. Adjust the temperature by pressing either  or  icons.

DRIVER POSITION MEMORY SYSTEM

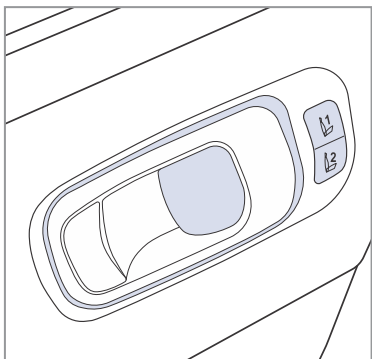

Storing Memory Positions


1. Shift to P (Park) while the Start/Stop button is in the ON position.
2. Adjust the driver's seat position, outside rearview mirror position, and head-up display height to the desired position.
3. Hold the button (1 or 2). The system will beep once and notify you '**Driver 1 (or 2) settings saved**' will appear on the infotainment screen.

NOTE: The gear position must be in P (Park).

Recalling

Press the desired memory button (1 or 2). The system will beep once.

DRIVER'S MAIN CONTROLS

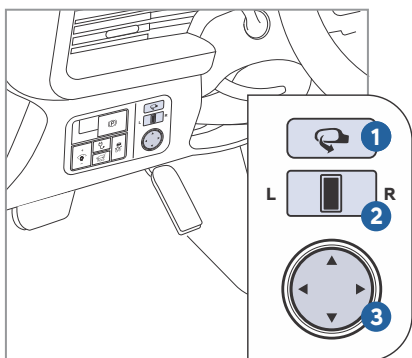

Folding outer side view mirrors

Press to fold/unfold mirrors **1**. Press the lock or unlock button on the smart key in AUTO position, and the mirrors will be folded or unfolded.

Outer side view mirror

- Press the L or R button **2**.
- Adjust the mirror by using the directional switch **3**.

Door lock


Locks **5** /unlocks **4** all doors.

Window switches


- Front doors power window switches **6**.
- Rear doors power window switches **7**.

Power window and child lock button **8**

Disables the power window switches on the rear passenger doors.




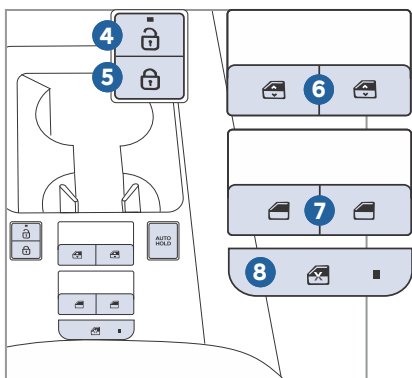


POWER TRUNK OPERATION

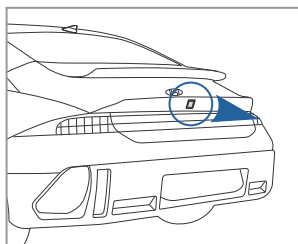


Press to open.

Smart key must be within the range.

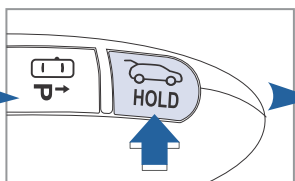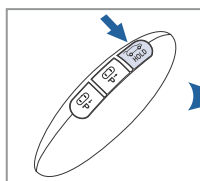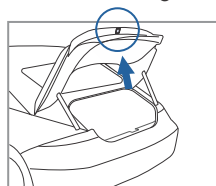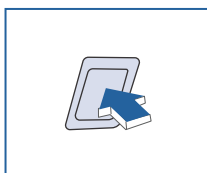

Car must be in Park (P). Press for about 1 second to open. Press and hold to close.

HANDS FREE SMART TRUNK

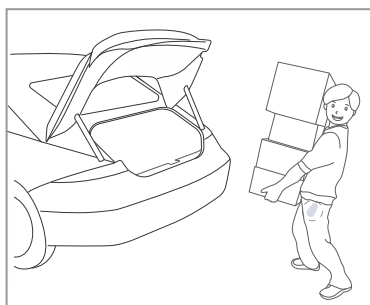

On vehicles equipped with Smart Trunk, the trunk can be opened with no-touch activation.

To activate

To enable Smart Trunk, go to User Settings mode on the LCD display, or Setup, then Vehicle on the Navigation display and under the Door menu make sure the Power Trunk and Smart Trunk boxes are checked.

Power Trunk Opening Height

For your convenience, there are four levels to adjust the trunk opening height. These can be selected in the User Settings menu.

1. Select User Settings from the LCD Display, or Setup - Vehicle from the Navigation screen.
2. Select Door Menu, then Power Trunk Opening Height
3. Choose between Level 1 ~ 3 or Full Open

Hands Free Smart Trunk Operation


The trunk can be opened with no-touch activation after the below conditions are met:

- After 15 seconds from when all doors are closed and locked
- You approach the rear of the vehicle (trunk area) for at least 3 seconds with the Smart Key in your possession.

NOTE: Feature is default OFF from factory to avoid accidental activation.

CHARGING DOOR

TO OPEN


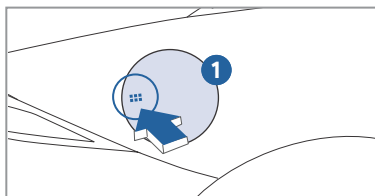


To Open Charging Door



While vehicle is unlocked, press on the icon  outside of the charging door **1** or use Voice Recognition.

After recharging, install the bottom inlet cover first before installing the upper inlet cover. Press the close button **2** to close the charging door **3**.

TO CLOSE

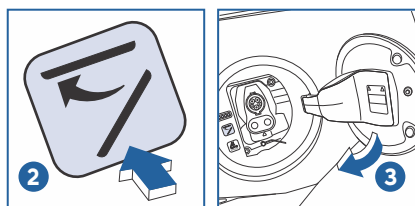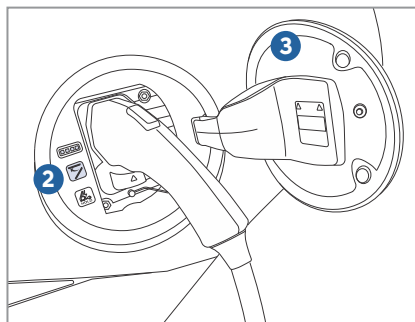

Emergency Charge Connector Release

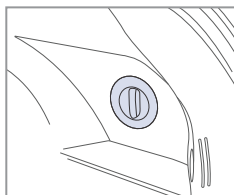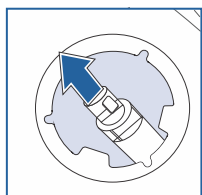

If the charging cable will not release, open the trunk and pull the emergency cable.


Scheduled Charging Override



If you have a charge schedule set and would like to charge your vehicle outside that window, you can press and hold the button after plugging your vehicle in and it will start charging.

FEATURES AND CONTROLS

Charging Connector Lock

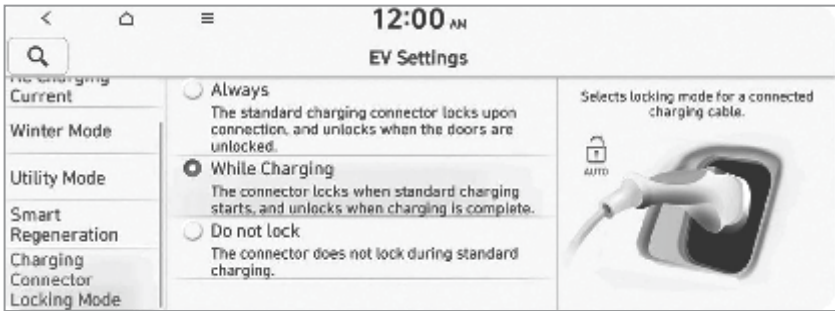


Locking mode for connected charging cable.

Select **Settings > ECO Vehicle > Charging Connector Locking Mode**

	Always lock	Lock while charging	Do not lock
Before charging	○	×	×
While charging	○	○	×
Finished charging	○	×	×


Charging Status

Electric Charging door

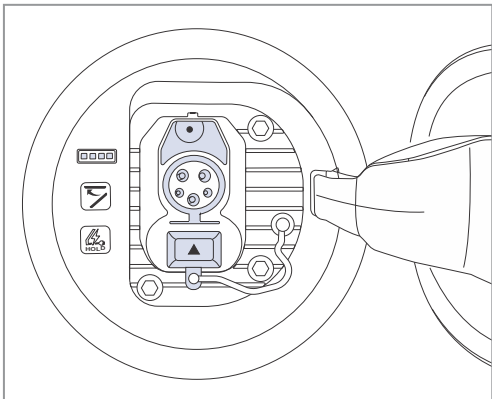


Charge Indicator light	SOC (%)
	0~24
	25~49
	50~74
	75~100


WIPERS AND WASHER

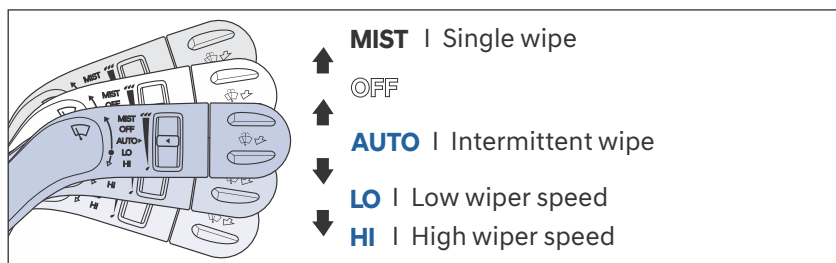

Intermittent Wipe Time Adjustment

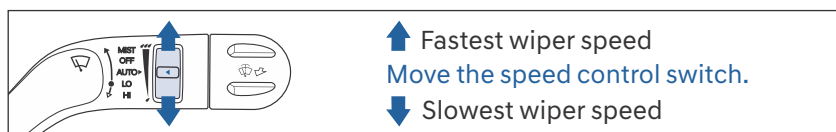


Windshield Washer

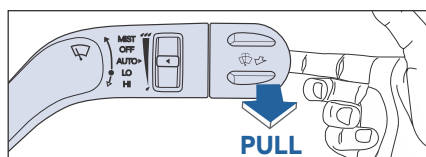

Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1 - 3 cycles.

The spray and wiper operation continues until you release the lever. If the washer does not work, you may need to add washer fluid to the washer fluid reservoir.

KEY HOLE ACCESS (driver's door)

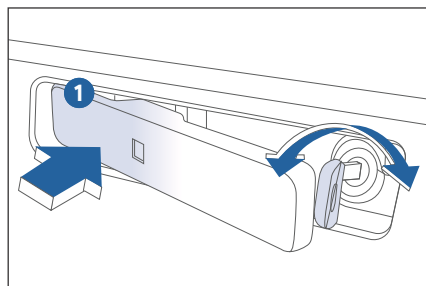


Press the front part of the door handle **1** to pull out the rear part of the door handle. While keep pressing the front part of the door handle, insert the mechanical key to the lock.

To lock door, turn the key clockwise. To unlock, turn the key counterclockwise.

UNLOCK AC OUTLET PANEL (if equipped)

Locate AC Outlet panel underneath rear seats. Unlock the AC outlet panel by using the “tip” of the mechanical key or a flat blade screwdriver to turn the lock mechanism.

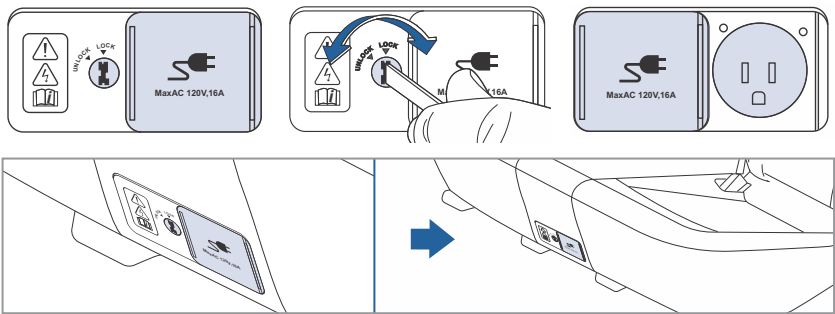


HEAD-UP DISPLAY (if equipped)

The Head-Up display is an optional feature that allows the driver to view information projected onto a transparent screen while still keeping eyes safely on the road ahead while driving.




Head-up display can be enabled from the Settings menu in the infotainment system screen. Select: **Setup > Vehicle > Head-Up Display > Enable Head-Up Display**.

NOTE: If you wear polarizing filter sunglasses, it's difficult to see the Head-Up Display information.

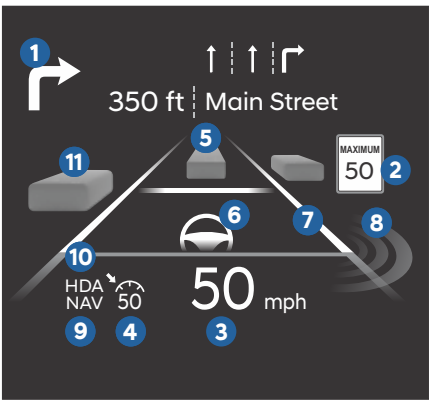

- 1 Turn by Turn (TBT) navigation
- 2 Traffic
- 3 Speedometer
- 4 SCC set speed
- 5 SCC vehicle distance
- 6 Lane Following Assist
- 7 Lane Safety
- 8 Blind-Spot Safety
- 9 Highway Auto Speed Change
- 10 Highway Driving Assist
- 11 Surrounding vehicles

INSTRUMENT CLUSTER

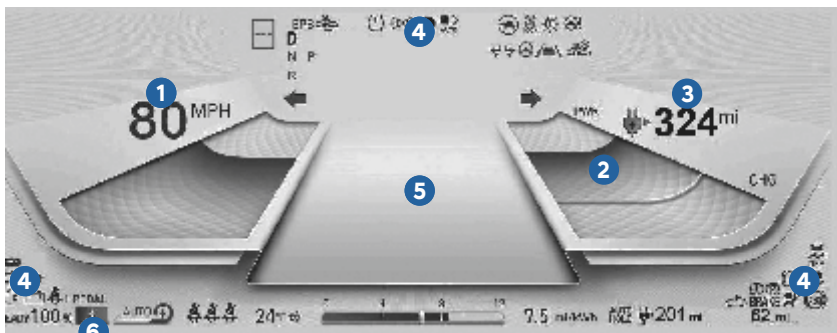

- | | |
|----------------------|---------------------------------------|
| 1 Speedometer | 4 Warning and indicator lights |
| 2 Power/Charge gauge | 5 Cluster display |
| 3 Distance to empty | 6 Battery SOC (State of Charge) gauge |

Main indicators in cluster for Electric Vehicle



Ready indicator light: When the vehicle is ready to be driven, this indicator is illuminated. When the ready indicator goes off or blinks, we recommend the vehicle be checked by an authorized HYUNDAI dealer.



Service warning light: If a problem with the electric vehicle control system occurs, the service warning light will illuminate. We recommend the vehicle be checked by an authorized HYUNDAI dealer.



Power down warning light: When the vehicle power should be limited for the safety of the electric vehicle, this warning light illuminates. Charge the battery immediately when the high voltage battery level is not enough.



Charging cable indicator: This indicator shows the charging status of the high voltage battery.

- When a charge cable is connected, the indicator illuminates in red. The approximate charge time will be displayed on the dash after a few minutes.



High voltage battery low level warning light: This warning light illuminates when the high voltage battery level is low. When the warning light turns ON, charge the battery immediately.

NOTE: DC Quick charge session is time limited and may not reach maximum charge in one session depending on initial battery % SOC. The maximum charge possible in Ioniq Electric is 94% SOC on a DC Quick charger which will show a slightly lower range than with Level-1 and 2 chargers with maximum possible charge to 100% SOC.

FEATURES AND CONTROLS

WARNINGS AND INDICATORS

* IF EQUIPPED


ELECTRIC VEHICLE RELATED WARNINGS AND INDICATORS

 READY Ready indicator light	 High Voltage Battery Level warning light	 Charging Connector indicator light	 Power Down indicator light	 Service warning light	 Regenerative Brake warning light
---	---	---	---	--	---

OTHER WARNINGS AND INDICATORS

 Immobilizer indicator	 Master warning light	 Low Washer Fluid warning light	 *	 Low Tire Pressure Warning Light / TPMS system malfunction light
 LED headlight warning light	 Light ON indicator	 *	 High Beam indicator	 High Beam Assist indicator
 Door Open indicator light	 Inattentive Driver Attention Warning light	 Airbag warning light	 Seat belt warning light	 Motor Driven Power Steering (MDPS) warning light
 Electronic Stability Control (ESC) OFF indicator	 Electronic Stability Control (ESC) indicator	 Lane Safety indicator light	 Forward Safety warning light	 *
 Turn signal indicator	 Lane Following Assist indicator light	 Cruise and Smart Cruise indicator	 *	 *
 Parking brake & Brake fluid warning light	 Anti-lock Brake System (ABS) warning light	 Electr. Brake Force Distribution (EBD) System warning light	 Electronic Parking Brake (EPB) warning light	 AUTO HOLD indicator
 *	 Wireless Charging indicator light			

VEHICLE POWER GAUGE

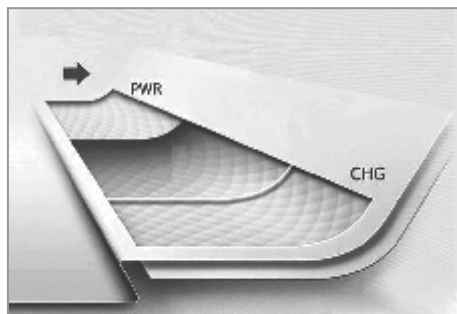


Energy Consumption Rate Conditions

POWER: Driving uphill or accelerating.

ECO: Normal Driving Conditions.

CHARGE: Using regenerative brakes (decelerating or driving downhill).

HIGH VOLTAGE BATTERY SOC (STATE OF CHARGE) GAUGE

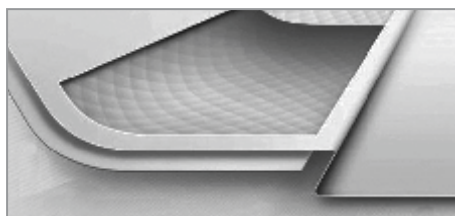


The SOC gauge shows the charging status of the high voltage battery.

L (Low): position on the indicator indicates that there is not enough energy in the high voltage battery.

H(High): position indicates that the driving battery is fully charged.

When there are 2~3 gauge bars (near the “L(Low)” area) on the gauge, the warning light turns ON and, the vehicle can drive an additional 12~18 miles depending on the driving condition. Charging is required.


AUX. BATTERY SAVER+

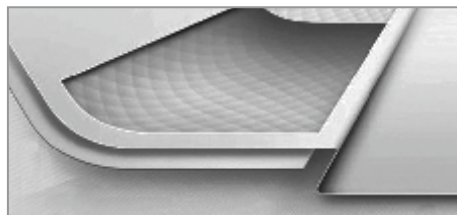

NOTE: Do not touch the high voltage electric wire (orange), connector, and all electric components and devices when the function is activating.

The Aux. Battery Saver+ function monitors the charging status of the 12 V auxiliary battery. If the auxiliary battery level is low, the main high voltage battery charges the auxiliary battery.

CLUSTER DISPLAY CONTROL

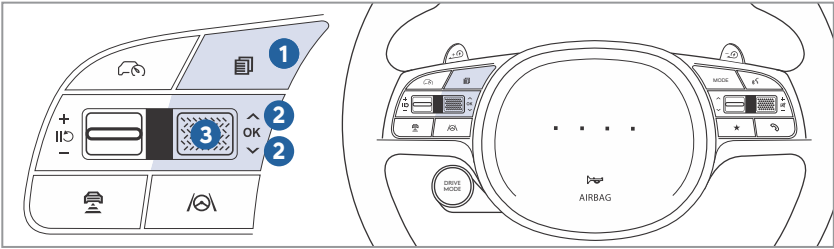

1 
MODE button
 for changing modes


2 
MOVE switch
 for changing items

3 **OK**
SELECT/RESET button
 for setting or resetting
 the selected item

LCD DISPLAY MODES

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Driving Assist		- This mode displays the state of the Advanced Lane Keeping Assist and Smart Cruise Control. - This mode displays information related to Tire Pressure.
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to one or more systems on your vehicle. Service by an authorized Hyundai dealer may be required.



ELECTRIC VEHICLE SYSTEM MODES

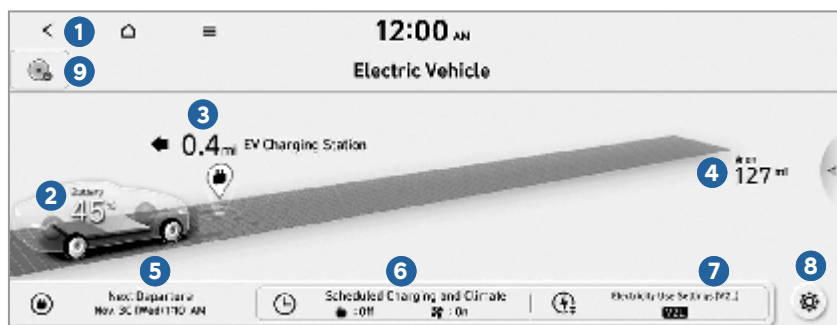

- 1 Returns to the previous step.
- 2 View the current battery level.
 ⓘ If you press the vehicle image, the energy information screen appears.
- 3 Can search for nearby charging stations.
 ⓘ The details of charging stations displayed on the map screen may not match the actual information.
- 4 View the distance to empty for the current climate control settings.
 ⓘ The details of drivable range displayed on the map screen may not match the actual information.
- 5 Set the next departure time.
 ▶ See "Setting the next departure time."
- 6 Configure settings to perform charging and/or climate control according to the departure time.
 ▶ See "Scheduling a charge and climate controls."
- 7 Set an electricity usage limit.
 ▶ See "Setting an electricity usage limit."
 - V2L: This technology uses the battery power of an electric vehicle to power electronic devices in the vehicle.
- 8 You can set to enable the Electric Vehicle mode.
 ▶ See "Configuring the EV settings."
- 9 Shows the solar roof charging status (if equipped).

BATTERY CONDITIONING MODE


Setting Battery Conditioning Mode

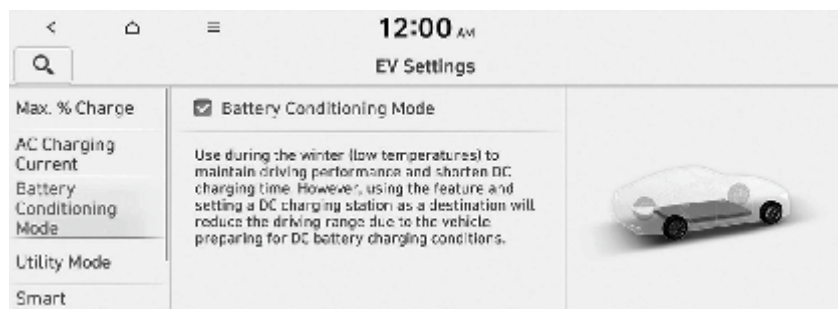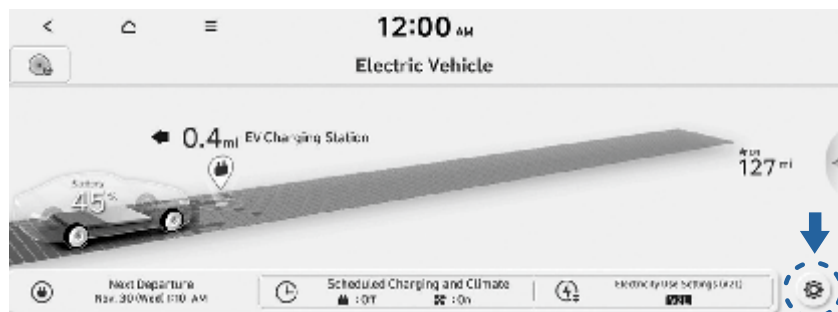

1. On the infotainment system, swipe the Home screen to the left to display the All menus screen.
2. On the All menus screen, select EV > (EV Settings) and select Battery Conditioning Mode.
3. The battery temperature while driving will be maintained adequately.

NOTE: The battery conditioning mode will operate as you drive closer to the charger destination, not always immediately.

HOMELINK WIRELESS CONTROL SYSTEM

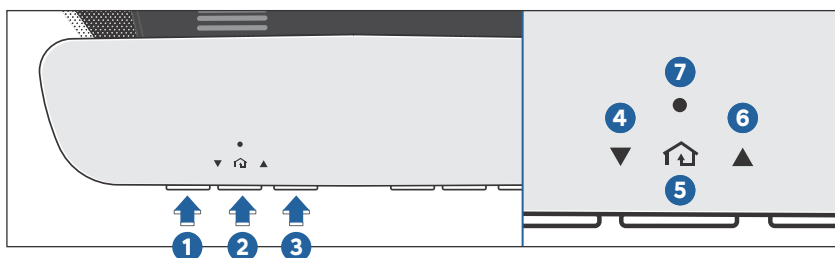

1 2 3 HomeLink Channels: 1 / 2 / 3

4 6 Garage Door Opener Status Indicator: Closing or Closed

5 HomeLink Operation Indicator

7 HomeLink User Interface Indicator

STEP 1: Press and release button **1**, **2**, or **3**.

- If the indicator **7** illuminates and shows **ORANGE** light, go to Step 3 - Programming Mode.
- If the indicator **7** illuminates and shows a solid or flashing **GREEN** light, go to Step 2 - Erasing Mode).

STEP 2: Erasing Mode - Press and hold the button you wish to program for approximately 15-25 seconds until the LED flashes in **ORANGE** for several times.

STEP 3: Programming Mode - While the HomeLink indicator light **7** is flashing **ORANGE**, press and hold the handheld remote button until the HomeLink indicator light **7** changes from **ORANGE** to **GREEN**. You may now release the handheld remote button.

STEP 4: Wait until your garage door comes to a complete stop, regardless of position, before proceeding to the next steps.


STEP 5: Press and release the HomeLink button you are programming and observe the indicator light:

- If the indicator light **7** remains **solid GREEN**, your device should operate when the HomeLink button is pressed. At this point, if your device operates, programming is complete.
- If the indicator light **7** **rapidly flashes GREEN**, firmly press, hold for 2 seconds and release the HomeLink button up to three times in a row slowly to complete the programming process. Do not press the HomeLink button rapidly. At this point if your device operates, programming is complete. If the device does not operate, continue with step 6.

FEATURES AND CONTROLS

STEP 6: Rolling Code Programming - At the garage door opener motor, (security gate motor, etc.) locate the 'Learn', 'Smart', 'Set' or 'Program' button. This can usually be found where the hanging antenna wire is attached to the motor-head unit (see the device's manual to identify this button). The name and color of the button may vary by manufacturer.

STEP 7: Firmly press and release the 'Learn', 'Smart', 'Set' or 'Program' button. You now have up to 30 seconds in which to complete the next step.

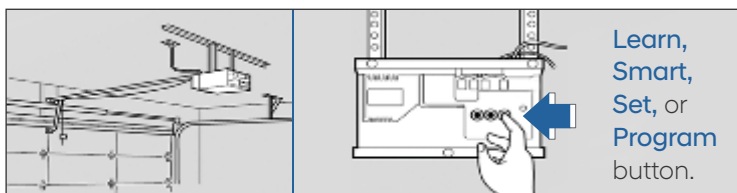

STEP 8: Return to the vehicle, firmly press, hold for 2 seconds and release, the HomeLink button up to three times in a row slowly. Do not press the HomeLink button rapidly. As soon as you see the garage door start to move, stop pressing any buttons until a few seconds after the garage door has come to a complete stop, regardless of position. At this point, programming is complete and your device should operate when the HomeLink button is pressed and released.

Two-Way Communication

Some new garage door openers come equipped with a two-way communication feature. If your garage door opener has this feature, please also continue to follow the **STEP 6: Rolling Code Programming** steps.



Indicator 4 & 6 :

- Flashes in ORANGE - Closing or Opening
- Solid GREEN - Closed or Opened

For more information and programming tips on two-way communication please visit www.homelink.com/compatible/two-waycommunication or call (800)-355-3515.

For information
scan the QR code
using your
smartphone.




HOMELINK



AUTOMATIC CLIMATE CONTROL SYSTEM



- 1 Driver's temperature control
- 2 Passenger's temperature control
- 3 Display the air flow direction
- 4 View climate infotainment system
- 5 AUTO (automatic control)
- 6 Mode selection button
- 7 Fan speed up
- 8 Fan speed down/OFF
- 9 Front windshield defroster
- 10 Rear windshield defroster
- 11 Air intake control
- 12 Driver only mode
- 13 A/C (air conditioning) ON/OFF
- 14 Heating ON/OFF
- 15 SYNC
- 16 Ambient temperature display
- 17 System OFF
- 18 Seat warmer/air ventilation infotainment system

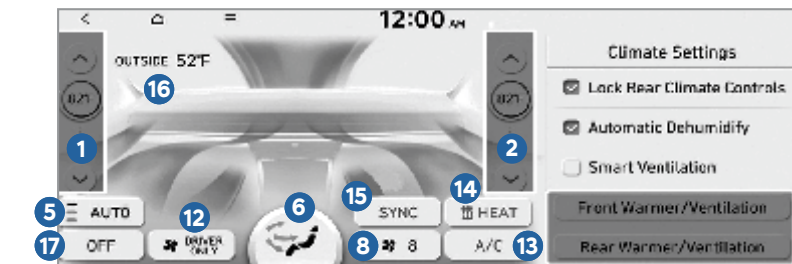


To view the climate information screen, select **Climate** in the main infotainment screen when the vehicle is ON.

Automatic Heating / Air Conditioning




1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically.

System Off



Pressing the OFF button will place the system in the OFF mode: 1. Blower will turn off. 2. Outside (fresh) air position will be selected. 3. Vented air will be at last set temperature.

Mode Selection



Changes the direction of the air flow as follow:



FEATURES AND CONTROLS


Defogging / Defrosting




1. Press the front windshield defroster button. Indicator light turns ON.



3. Set the fan speed to the highest speed.



2. Set warmest temperature.



4. The outside (fresh) air mode is selected automatically.


NOTE: To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

Air Intake Control




Recirculated air position

Air from the passenger compartment will be recirculated through the system and heated or cooled according to the function selected.




Outside (fresh) air position

Air enters the vehicle from outside and is heated or cooled according to the function selected.




Heat Button

To manually control the system, push the HEAT button to turn the heater on.



Driver Only

If you press the DRIVER ONLY button, cold air mostly blows in the direction of the driver's seat.



Rear Window Defroster

Press to activate / deactivate the rear window defroster.


Air Conditioning Auto-drying

The Air conditioning auto-drying feature dries the moisture in the air conditioner and reduces air conditioner odor. The blower motor automatically operates 30 minutes after the engine is turned off. The feature can be turned **ON** and **OFF** from the infotainment system by selecting **Setup > Vehicle settings > Climate > Climate Features > A/C Automatic Drying**.

The A/C Automatic Drying feature operates under the following conditions:

- The vehicle is turned off after operating the air conditioner for a certain period.
- The 12 V battery level is sufficient
- The outside temperature is above a certain level

WIRELESS PHONE CHARGING SYSTEM

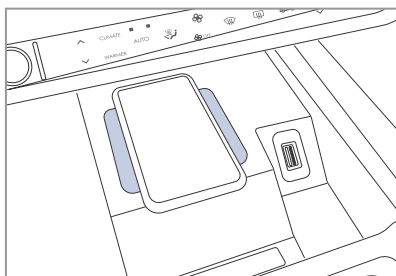

There is a wireless cellular phone charging system in front of the cup holders. The system operates with all doors closed, and the Engine Start/Stop button in the ACC/ON/START position.

Wireless charging system can be disabled in the instrument cluster settings menu.


NOTE: The wireless cellular phone charging system supports only the Qi-enabled cellular phones.

NOTE: Do not place any metallic items such as coins, keys on the charger. Avoid placing credit cards on the charger as they may be damaged by the magnetic field. The charging area may be warm while using wireless charging.

NOTE: Wireless charger will deactivate whenever a door is opened.


USB PORT

Use a USB-A cable to connect an external audio device and listen to it through the audio system in your vehicle.

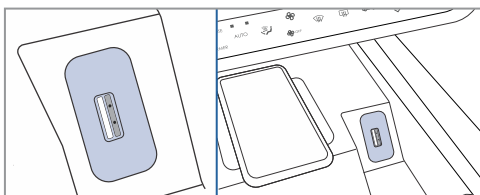


USB CHARGER

FRONT USB CHARGER

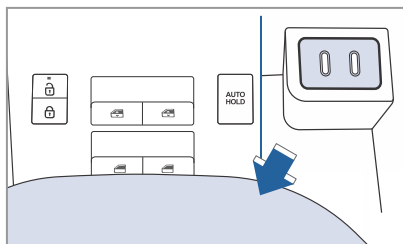

REAR USB CHARGER

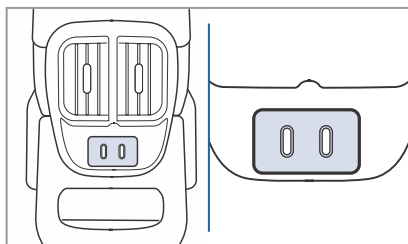

Front USB-C chargers are inside of the center console.

The USB charger is designed to recharge batteries of small size electrical devices using a USB-C cable. The electrical devices can be recharged when the Start/Stop button is in the ON or START position.




BLUETOOTH PHONE PAIRING

Pairing tutorials, phone compatibility and operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



BLUETOOTH PHONE OPERATION

Phone setup (pairing phone)

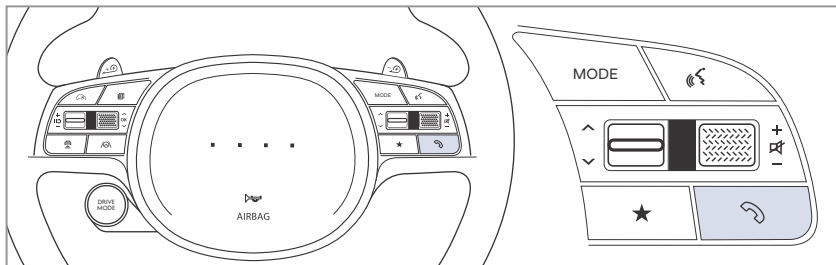

1. Turn Bluetooth® on from your mobile phone:
Setup > Device Connections > Device Connections > Add New.




2. Turn on Bluetooth on the Bluetooth device to connect and select the vehicle system on the list of searched devices.
3. Bluetooth is connected.

NOTE: Vehicle must be parked to complete pairing process.



STEERING WHEEL AUDIO CONTROL

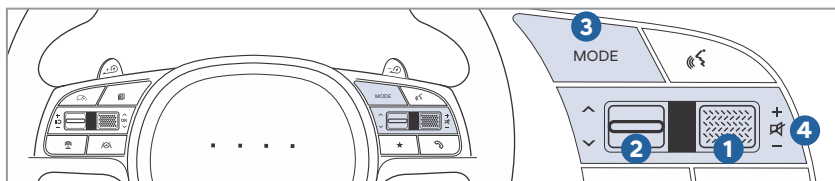

1 VOLUME

Raises or lowers the speaker volume. Press to Mute.

2 SEEK / PRESET

Changes the station. Fast forward / rewind smartphone media (as set in the app).

3 MODE

Changes the audio source.

4 MUTE


Press the volume control to MUTE. Press the volume control again to UNMUTE.

BLUETOOTH® OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume low. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering Wheel Bluetooth Control

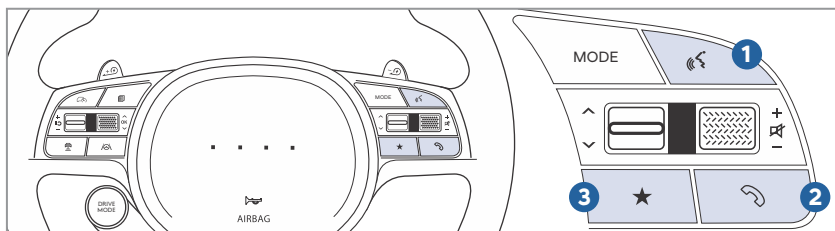

1 VOICE RECOGNITION BUTTON

Activates voice recognition of a connected smartphone via phone projection. Activates system voice recognition on vehicles equipped with navigation.

2 CALL/ANSWER/CALL END

Answer a call or end a call. Press and hold to reject an incoming call.

3 CUSTOM

Use a custom function. Press and hold to access the Custom Button settings screen.

**To Answer a Call:**

- Press the  button **1** on the steering wheel.

To Reject a Call:


- Press and hold the  button **1** on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Finish a Call:

- Press the  button on the steering wheel.

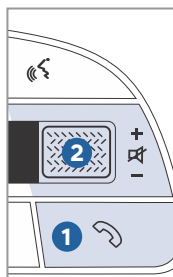

VOICE RECOGNITION TIPS

Your vehicle may be equipped with a Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off of the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sunroof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands: To start a voice command, press the  button, the following commands are available:

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute the corresponding functions.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect a call.
Dial Number	Displays the Dial number screen. After saying this command, you can say the number which you want to call.

BLUETOOTH® AUDIO QUALITY TIPS

Ensure Bluetooth device volume is set to 100% for optimal audio quality. To adjust volume to your preference, utilize the head unit knob or steering wheel control. When placing a call, reduce the volume of the head unit if distortion or echoing is present.



ANDROID AUTO™ & APPLE CARPLAY® SETUP

Setting Up Android Auto™

- From an Android Auto compatible device, download Android Auto app from the Google Play Store.
- Open the Android Auto app and proceed with the on-screen instructions to complete setup on the mobile device.



How To Start Android Auto™

- Press the SETUP button on the head unit.
- Press the PHONE PROJECTION or DEVICE CONNECTIONS buttons, select Android Auto then select ENABLE ANDROID AUTO. (Accept all terms, Conditions and requests on the head unit and phone to use Android Auto).
- Connect the Android device with the vehicle's USB port using the manufacturer's cable provided with your phone.
- From the vehicle's home screen, select the Android Auto button, where you'll see all the Android Auto supported apps.

NOTE: Android Auto compatibility requirements:

Micro-USB cable that came with your phone, OS Android™ 5.0 or higher, compatible Android smartphone, data, and wireless plan for applicable feature(s). It is recommended to always update your phone to the latest operating system release.

Setting Up Apple Carplay®

- On the head unit, press the SETUP button
- Press the PHONE PROJECTION or DEVICE CONNECTIONS buttons, select Apple CarPlay then select ENABLE APPLE CARPLAY. (Accept all terms, Conditions and requests on the head unit and phone to use Apple CarPlay).
- Connect the Apple CarPlay compatible iPhone with the vehicle's USB port using the manufacturer's cable provided with your iPhone.
- From the vehicle's home screen, select the Apple CarPlay button, where you'll see all the Apple CarPlay supported apps.




NOTE: Apple CarPlay compatibility requirements:

Apple Lightning cable, latest iOS software, iPhone 5 or later, data, and wireless plan for applicable feature(s). It is recommended to always update your phone to the latest operating system release.



MYHYUNDAI WITH BLUELINK APP

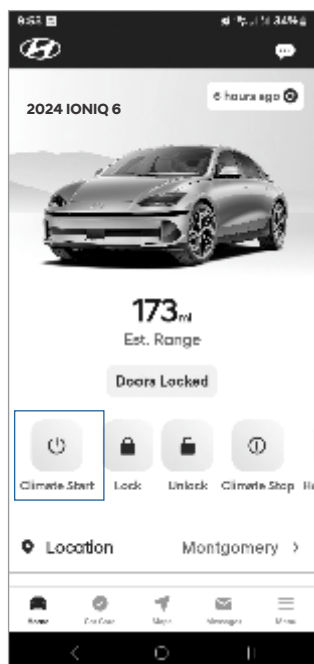

You can download the MyHyundai with Bluelink app to your compatible smart phone from following sites:

iPhone® - Apple® App Store

Android™ - Google Play™

Visit HyundaiBluelink.com FAQs to see a list of compatible devices.



Remote Climate Control

Remote Climate Control* enables you to remotely enable climate control and turn on the front window defroster, ensuring a warm or cool car is ready to go when you are.

- To use this feature, you must have a Bluelink Personal Identification Number (PIN). To create or change your PIN, log in to www.MyHyundai.com.

Remember:

- Remote Start will automatically shut off after 10 minutes or after selected engine timer runs out.
- To continue to operate the vehicle, the proximity key must be inside the vehicle with the driver, prior to pressing the brake and being able to move the gearshift from the P (Park) position.

NOTE: Remote Climate Control is not available on all models. Remote Climate Control is only available for Push Start equipped vehicle with an Automatic Transmission. Remote Climate Control with Climate Control additionally requires Fully Automatic Temperature Control.



Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security / panic system is not activated
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Climate Control will terminate:

- After 15 minutes or after selected engine timer runs out
- Brake is pressed without the proximity key inside the vehicle
- Alarm is triggered without the proximity key inside the vehicle
- Door / trunk is opened

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so, or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

WARNING!

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and / or death. Do not leave children or animals unattended in a vehicle while using the remote start function.


CAUTION!

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

NOTE: For information for Digital Key pairing please refer to the Bluelink manual.



RADIO MODE

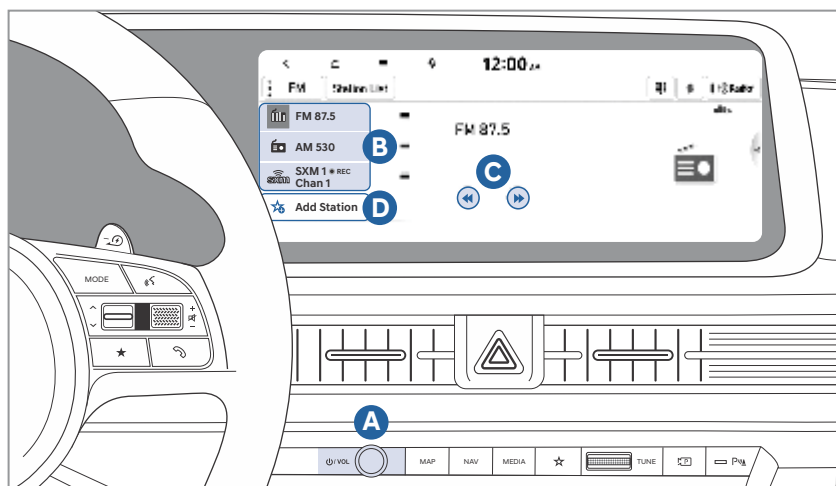

Press POWER button **A** to turn radio on.

Tuning/listening To Channels

1. Press BAND button **B** on screen to select FM/AM/SiriusXM®.
2. Select SEEK/TRACK **C** to desired channel.

NOTE: A clear view of the southern sky helps ensure SiriusXM® radio reception.

Setting Preset Memory Buttons

Press and hold any PRESET button **D** on the screen until an audible beep is heard to store current channel.

Adjusting The Sound Control

1. On the All Menus screen, press **Setup > Sound > Position**.
The sound settings screen appears.

2. Adjust to desired setting.

Individual volume settings for each audio source

1. Users can set the volume level of each source (FM, AM, SXM, USB, BT and so on) individually by adjusting volume knob.
2. Then AVN (Head unit) will save the last volume levels of each source in the system sound settings.
3. If users change the source, the volume will revert to the previously set volume for that source.



NAVIGATION


Basic features on the map screen



- 1 Displays the Home screen.
- 2 Used to change the map display mode.
- 3 You can adjust the volume of navigation or GPS warning sound.
- 4 Zoom in/out of map
- 5 The scale of the map automatically changes.
- 6 Displays the lanes in different colors.
- 7 Displays quick menu items that can be used during a guidance.
- 8 Displays the remaining distance to the destination and the estimated time of arrival. For more details, touch the information item.
- 9 Pause Route (press and hold pause to cancel route)
- 10 Displays or hides the detailed guidance.
- 11 Search for charging stations.



SHIFT BY WIRE GEAR SELECTOR

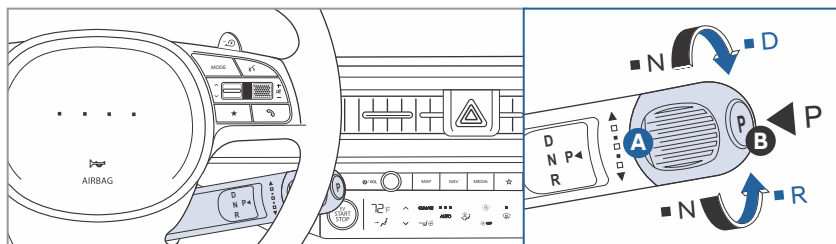


To change the gear, depress the brake pedal and rotate the rotary gear shift dial.

A Rotary gear shift dial **D** Drive **N** Neutral **R** Reverse **P** Park

B P(Park) button

To shift the gear to P (Park), press the P button while depressing the brake pedal. If you turn the vehicle off in R (Reverse), N (Neutral) or D (Drive), the gear will automatically shift to P (Park).

REGENERATIVE BRAKE LEVEL CONTROL PADDLES

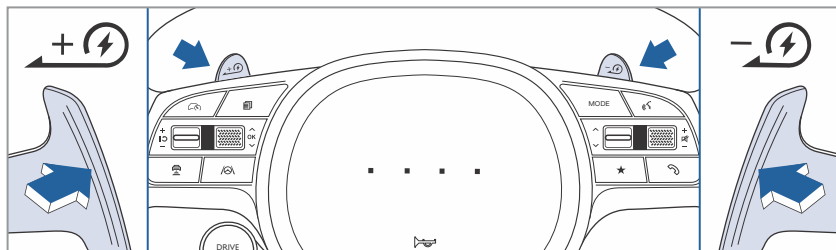

The paddle shifter is used to adjust the regenerative braking rate from 0 to 3 during decelerating or braking.

Left side  : Increases regenerative braking and deceleration.

Right side  : Decreases regenerative braking and deceleration.

The paddle shifter does not operate:

- When the two paddle shifters are pulled at the same time.
- When the Cruise Control system or Advanced Cruise Control system is activated.

NOTE: There is an available “Smart Automatic Regeneration” mode that will automatically adjust regenerative braking to slow the vehicle down as it approaches traffic. Refer to the owner’s manual for more detailed information.

**Q: What are the advantages of regenerative braking?**

A: Regenerative braking is a technology in which the electric motor connects to the generator to charge the battery during deceleration and braking. Using regenerative braking reduces energy loss and extends the drivable range, resulting in increased electric energy efficiency. It is good to use regenerative braking in urban areas where braking is frequent.

Q: There is a feeling of deceleration during regenerative braking, is that normal?

A: When regenerative braking is active, the vehicle will slow down (decelerate) more rapidly when coasting (when the foot is taken off the accelerator pedal).

NOTE: Pulling and holding the (+) paddle shifter  while coasting will activate the one pedal driving feature, resulting in MAX regeneration braking, which can bring the vehicle to an eventual stop. For more information, see "One pedal driving" in the owner's manual.

Q: How does regenerative braking differ by level?

A: There are four levels (from 0 to 3) of regenerative braking, and you can change the levels using the paddle shifter  ,  on either side of the steering wheel.


Level	Description
1-3	The higher the regenerative braking level during coasting, the greater the vehicle deceleration and battery charging amount (regenerative amount).
0	The brake disc cleaning feature will run about 10 times. During operation, regenerative braking performance may be reduced. Because of this, the electric energy efficiency may decrease.

NOTE: Depending on the drive mode (NORMAL/ECO/SPORT/SNOW), there are different levels of regenerative braking that you can use. For more information, see "Regenerative braking system" in the owner's manual.




SMART CRUISE CONTROL (SCC) (if equipped)

Smart Cruise Control detects a vehicle ahead and helps maintain the consistent distance without holding the accelerator pedal. With the vehicle on, press the **SETUP** button and then select **Vehicle > Driver Assistance > Driving Convenience > Smart Cruise Control**. **Smart Cruise Control** is selected from the infotainment system, you can change the vehicle distance, the acceleration, and the reaction speed manually.

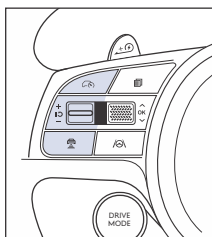


Turning SCC ON / OFF ①

Press the Driving Assist button  to turn on Smart Cruise Control. The speed will be set to the current speed on the instrument cluster.

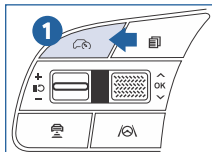


Setting Up Speed

Toggle switch **+** UP ② to Set / Increase the cruise control speed. Toggle switch **-** DOWN ③ to Set / Decrease the cruise control speed.

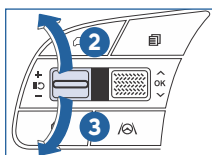


Setting Vehicle Distance ④

Press the **Vehicle distance button**  to Set and Maintain the vehicle distance without pressing the accelerator or brake pedal. Each time the button  is pressed, the vehicle distance changes as follows:

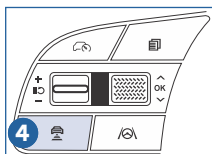

> **DISTANCE 4** about 172 ft. > **DISTANCE 3** about 130 ft >
< **DISTANCE 1** about 82 ft. < **DISTANCE 2** about 106 ft <

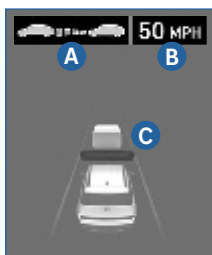

Instrument Cluster SCC Status


- ① Selected distance level
- ② Set speed
- ③ Whether there is a vehicle ahead and the target vehicle distance

To Temporary Cancel SCC ⑤

Press the  button or depress the brake pedal.

Resuming Smart Cruise Control


To resume Smart Cruise Control after the function was temporarily canceled, operate the **+**, **-** or a  switch.

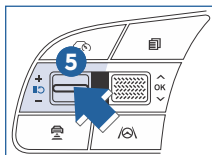

NOTE: Standard Cruise Control (CC) Operation is similar but will not adjust the vehicle speed. Refer to your Owner's Manual for CC operation.



ELECTRONIC PARKING BRAKE (EPB)

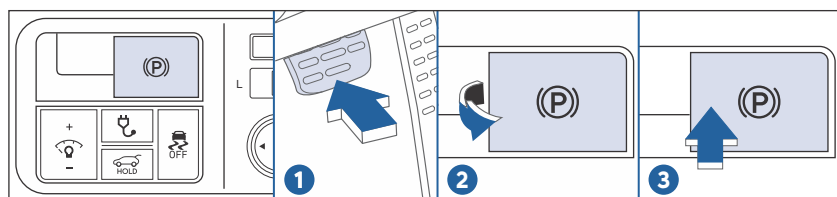


Applying Stop the vehicle then pull up the EPB switch.

Releasing Press the EPB switch while depressing the brake pedal.

Automatic Releasing

- When shifted to **P**: Depress the brake pedal and shift out of P to R or D.
- When shifted to **N**: Depress the brake pedal and shift out of N to R or D.

HIGHWAY DRIVING ASSIST (HDA) (if equipped)

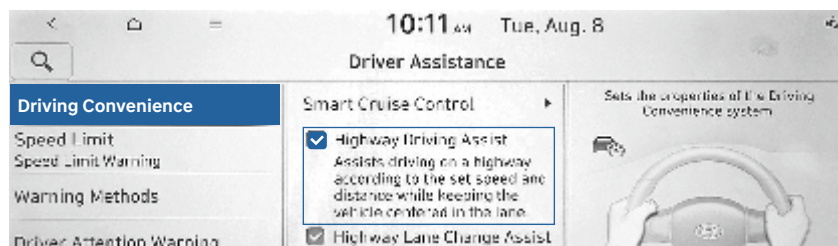

Highway Driving Assist is designed to help detect vehicles and lanes ahead, and help maintain distance from the vehicle ahead, maintain the set speed, and help center the vehicle in the lane while driving on the highway.

With the vehicle on, select or deselect '**Driver Assistance** → **Driving Convenience**' from the Settings menu to set whether to use each function.

If 'Highway Driving Assist' is selected, it helps maintain distance from the vehicle ahead, maintain the set speed, and helps center the vehicle in the lane.

NOTE: If the vehicle is turned off then on again, the system maintains the last setting.


HDA operating

- Driving on the highway main road.
- Press the Driving Assist button on the steering wheel.
If entering the main road of highways while SCC and LFA is operating, HDA will be automatically activated.
- Vehicle speed is under 110 mph (180 km/h).

If all the mentioned conditions are satisfied, HDA is **ENABLED** and the indicator on the cluster will illuminate green.



LANE KEEPING ASSIST (LKA)

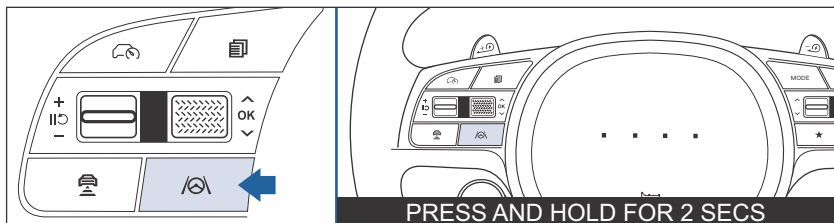


Lane Keeping Assist is designed to help detect lane markings or road edges when the vehicle speed is above 40 mph and the LKA indicator is green displayed in the instrument cluster. LKA will not operate properly if the lane line is not clear, sharp bend in the road, or in heavy fog. The system will warn the driver if the vehicle leaves the lane without using the turn signal.

With the vehicle on, press the **SETUP** button, and then select **Vehicle > Driver Assistance > Driving Safety > Lane Safety** in the infotainment system. If Lane Safety is selected, LKA automatically assists the driver's steering when lane departure is detected to help prevent the vehicle from moving out of its lane.

To turn function ON, press and hold the **Lane Driving Assist** button for about 2 seconds located on the steering wheel. The indicator light will illuminate on the cluster. Press and hold the button again to turn OFF the system. Refer to the Owner's Manual for more detailed information.

LANE FOLLOWING ASSIST (LFA)

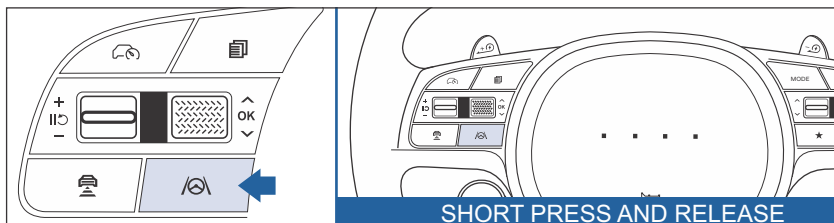

Lane Following Assist helps detect lane markings and/or a vehicle ahead on the road, and helps center your vehicle in the lane. LFA helps to assist the driver steering to help keep the vehicle centered in the lane.

To enable LFA while driving, **press and release the Lane Driving Assist button** on the steering wheel.


Operating conditions

When LFA is activated, the indicator on the cluster will illuminate. The color of the indicator will change depending on the condition of LFA.

- **Green:** When LFA assist the steering
- **White:** When LFA cannot assist the steering



FORWARD COLLISION-AVOIDANCE ASSIST (FCA)

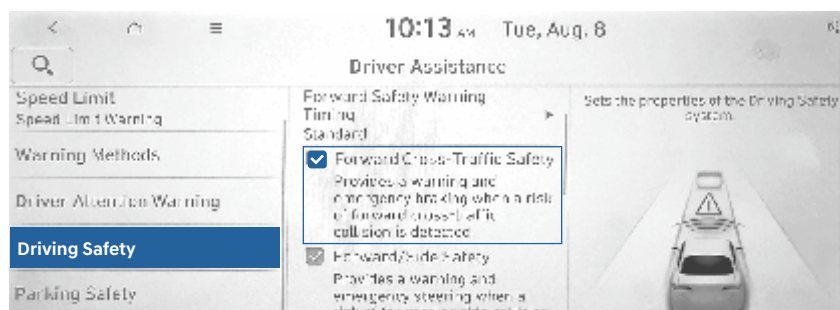

Forward Collision-Avoidance Assist is designed to help detect and monitor a vehicle, pedestrian or cyclist ahead in the roadway through front view camera and front radar to warn the driver that a collision is imminent, and if necessary, apply emergency braking.


Setting Forward Collision-Avoidance Assist



The driver can activate FCA by placing the ignition switch to the ON position and by selecting **Driver Assistance > Forward Safety** from the Settings menu to set whether or not to use each function:

- **Warning Only:** Braking assist is not applied
- **Off:** FCA deactivates


FCA activation case

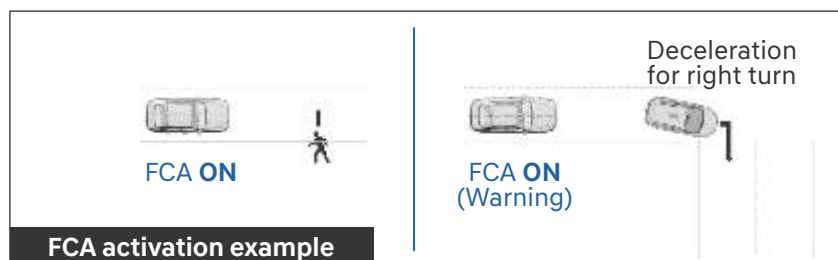



BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA)


Blind-Spot Collision-Avoidance Assist is designed to help detect and monitor approaching vehicles in the driver's blind spot area and warn the driver of a possible collision with a warning message and audible warning. In addition, if there is a risk of collision when changing lanes or driving forward out of a parking space, Blind-Spot Collision Avoidance Assist will help avoid collision by applying the brake.

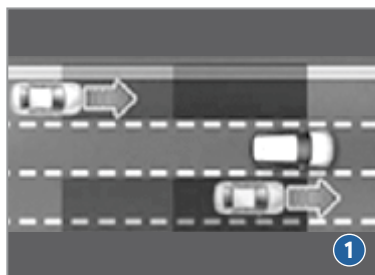

1 Vehicle detection warning



2 Collision-avoidance assist (while driving)

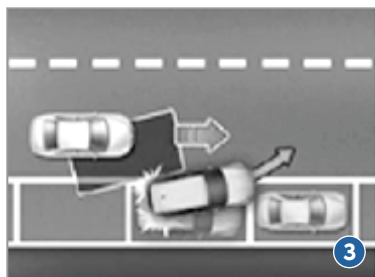

3 Collision-avoidance assist (while departing)

To turn on/off select or deselect **Driver Assistance > Blind-Spot Safety** from the Settings menu to set whether to use each function.



TIRE PRESSURE MONITORING SYSTEM (TPMS)



1



Low Tire Pressure Indicator

Illuminates if one or more of your tires are significantly under-inflated.

TPMS Malfunction Indicator

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust tire pressure to specification. If the lamp remains illuminated, we recommend the vehicle be checked by an authorized Hyundai dealer.

Low tire pressure

29



24

32

31

2

Low Tire Pressure

Tire Pressure Monitor

TPMS Malfunction Display (LCD)

Select the Driving Assist mode  by pressing the mode button  on the steering wheel to display tire pressure.


Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the cluster display 2 will indicate tire(s) requiring air.

NOTE: Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.



DRIVE MODE

You can set the proper drive mode according to the road conditions or your driving habits. Press the DRIVE MODE button **1** on the steering wheel. To change to **SNOW** mode, press and hold the button.

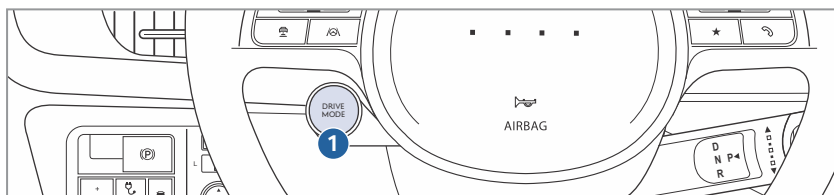

Level	Description
NORMAL	Ordinary driving mode.
ECO	Drive mode for fuel efficiency. This mode results in driving at a constant speed without rapid acceleration or deceleration.
SPORT	Drive mode for sporty and dynamic driving. This mode reacts sensitively when you press down on the pedal or rotate the steering wheel. The fuel efficiency may decrease.
SNOW	Drive mode for driving on icy or rainy roads which are slippery. This mode helps with stable acceleration and reduces tire slipping.

Tips for improving Distance to Empty

- If you operate the air conditioner / heater too much, the driving battery uses too much electricity. This may reduce the distance to empty. Therefore, it is recommended that you set the cabin temperature to **72°F AUTO**.
- When using the heater or air conditioning system use the DRIVER ONLY or scheduled air conditioner / heater function.
- Gradually depress and release the accelerator pedal when accelerating or decelerating.

Tips you should know about Distance to Empty

- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style.
- Especially distance to empty may vary significantly depending on previous driving patterns.
- When previous driving patterns include high speed driving, resulting in the high voltage battery using more electricity than usual, the estimated distance to empty is reduced. When the high voltage battery uses little electricity in ECO mode, the estimated distance to empty increases.
- In cold weather, battery conditioning helps enhance electric vehicle performance by heating the vehicle in advance.

Scheduled Maintenance		IONIQ 6			
		NORMAL USAGE		SEVERE USAGE*	
Cooling System	Inspect	8,000 or 12 mos.	Inspect	Same As Normal	
12V Auxiliary Battery Condition	Inspect	8,000 or 12 mos.	Inspect	Same As Normal	
Brake Lines, Hoses, and Connections	Inspect	8,000 or 12 mos.	Inspect	Same As Normal	
Disc Brakes and Pads	Inspect	8,000 or 12 mos.	Inspect	More Frequently	
Brake Pedal	Inspect	8,000 or 12 mos.	Inspect	Same As Normal	
Steering Gear Rack, Linkage & Boots	Inspect	8,000 or 12 mos.	Inspect	More Frequently	
Air conditioning compressor, Air Conditioner Refrigerant and Performance	Inspect	8,000 or 12 mos.	Inspect	More Frequently	
Drive Shafts and Boots	Inspect	16,000 or 24 mos.	Inspect	More Frequently	
Climate Control Air Filter	Inspect	8,000 or 12 mos.	Inspect	More Frequently	
	Replace	16,000 or 24 mos.	Replace	More Frequently	
Gear Fluid	Inspect	32,000 or 48 mos.	Replace	80,000	
Tire Rotation	Perform	8,000 or 12 mos.	Perform	Same As Normal	
Coolant	1st: Replace	120,000 or 120 mos.	Replace	Same As Normal	
	After: Replace	24,000 or 24 mos.	Replace	Same As Normal	
Brake Fluid	Inspect	8,000 or 12 mos.	Inspect	Same As Normal	
	Replace	48,000 or 48 mos.	Replace	Same As Normal	

Unit: miles (mi.) / months (mos.)

***See Owner's Manual for details.**

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

Roadside Assistance | 1-800-243-7766
 Consumer Affairs | 1-800-633-5151
 SiriusXM® Radio | 1-800-967-2346
 Bluelink® | 1-855-2BLUELINK
 | 1-855-225-8354

NP150AL2025
 (Rev 04/11/24)
 Printing 04/11/24

