

**VOICE RECOGNITION TIPS**(If equipped)

**HYUNDAI**

BLUETOOTH®

Command

Dial <Phone #> ———

Example

“Dial 7-1-4-9-6-5-3-0-0-0”

Call <Name> ———

“Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:

- Use full names instead of short or single-syllable names (“John or Dad”)
- Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

NAVIGATION

Command

Find Address ———

Example

“1-2-3-4-5 1st Street, <House #, Street, City, State>”

Find <POI Name> —

“Find McDonald’s®”

Located on Rearview Mirror

DESTINATION SEARCH BY VOICE



Command

Find <POI Name> ———

Example

“Find Lowe’s® near me”

<POI Name> ———

“Starbucks®”

- ☐ INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- ☐ SET FIRST SERVICE APPOINTMENT
- ☐ REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- ☐ WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

MAINTENANCE				
Scheduled Maintenance		Normal Usage		Severe Usage*
Engine Oil and Filter (2.0 T-GDI)*	Replace	6,000 or 6 mos.	Replace	3,000 or 3 mos.
Engine Oil and Filter (2.4 GDI)*	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel System Cleaner Additive	Add	At every Oil and Filter Service	Add	Same As Normal
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter	Replace	15,000	Replace	More Frequently
Brake Hoses and Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts and Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Exhaust Pipe and Muffler	Inspect	15,000	Inspect	Same As Normal
Front Brake Disc/Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots, Lower/Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Propeller Shaft (AWD)	Inspect	15,000	Inspect	7,500 or 6 mos.
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses, and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose and Fuel Filler Cap, Fuel Tank	Inspect	30,000	Inspect	Same As Normal
Transfer Case Oil (AWD)	Inspect	37,500	Replace	75,000
Rear Axle Oil (AWD)	Inspect	37,500	Replace	75,000
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Drive Belts	Inspect	1st: 60,000 or 72 mos. Add'l.: 15,000 or 24 mos.	Inspect	Same As Normal
Coolant	Replace	1st: 60,000 or 60 mos. Add'l.: 30,000 or 24 mos.	Replace	Same As Normal
Spark Plugs (2.0 T-GDI)	Replace	45,000	Replace	More Frequently
Spark Plugs (2.4 GDI)	Replace	105,000	Replace	More Frequently
Automatic Transaxle Fluid	No Check, No Service required		Replace	60,000
*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.				
*See Owner's Manual for details.				

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

HYUNDAI SANTA FE

Quick Reference Guide



Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
Sirius XM® Radio: **1-800-967-2346**
Blue Link: **1-855-2BLUELINK**
(1-855-225-8354)



Sales Consultant	Date	Sales Manager	Date
Customer		Date	
Email			

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx> If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 83835
Phoenix, AZ 85071-3835
800-633-5151
consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

 WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

FEATURES AND CONTROLS

Blind-spot collision-avoidance assist (BCA)	04
Cruise control/Smart cruise control	08
Forward collision-avoidance assist (FCA)	02
Door locks	11
Driver seat adjustment	12
Fuel filler door	11
Idle stop and go (ISG)	10
Lane keeping assist (LKA)	03
Leading vehicle departure alert	09
Rear cross-traffic collision-avoidance assist (RCCA)	05
Rear occupant alert (ROA)	07
Safe exit assist (SEA)	06
Wiper blades	12

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features is available in your Owner's Manual.

*Some vehicles may not be equipped with all the listed features.

FORWARD COLLISION-AVOIDANCE ASSIST (FCA) —

Forward Collision...

↩ Back

Late ☐


Normal ☒

Early ☐

The Forward Collision-Avoidance Assist (FCA) system is designed to detect and monitor the vehicle ahead or detect a pedestrian in the roadway and warn the driver if a collision is imminent.

To operate the system, select the FCA (Forward Collision Avoidance Assist) sub menu in the LCD cluster display under User Settings. Please refer to your Owner's Manual for further information.

LANE KEEPING ASSIST (LKA) —

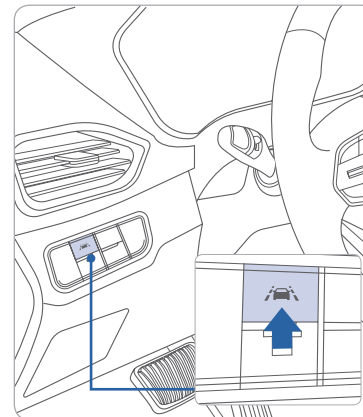


NOTE: LKAS Settings can be adjusted in the User Settings page of the instrument cluster under Driving Assist.

The Lane Keeping Assist System detects lane markers on the road, and assists the driver's steering to help keep the vehicle between lanes.

- To turn LKAS on, press the LKAS switch.
- To turn LKAS off, press the switch again.

LKAS operates only when the vehicle speed is above 38 mph and when the LKAS indicator is green displayed in the instrument cluster. LKAS will not operate properly if the lane line is not clear, sharp bend in the road, or in heavy fog. Refer to the Owner's Manual for more detailed information.

BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA) —

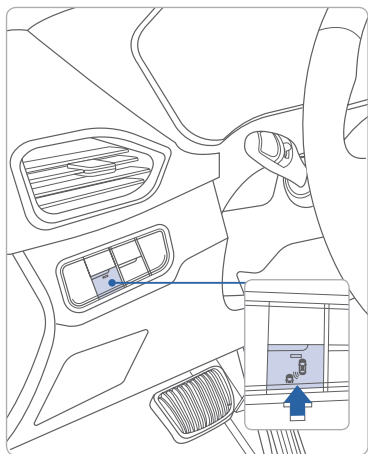

The Blind-Spot Collision-Avoidance Assist (BCA) system may apply braking power, when an approaching vehicle is detected within a certain distance next to or behind your vehicle. The instrument cluster will inform the driver of activation. Press the Blind-Spot switch. The indicator will illuminate on the button. If vehicle speed exceeds 9mph the system will activate. Press the switch again to deactivate the system.


A Blind spot collision warning (BCW)

Warning range is dependent on your vehicle speed. Example, if your vehicle speed is 9.3 mph greater than other vehicles, the warning is not active.

B Blind spot collision avoidance (BCA)

When changing lanes, the system detects the front lane through the camera installed on the windshield and detects the side/rear areas through radar sensors.

REAR CROSS-TRAFFIC COLLISION-AVOIDANCE ASSIST (RCCA) —

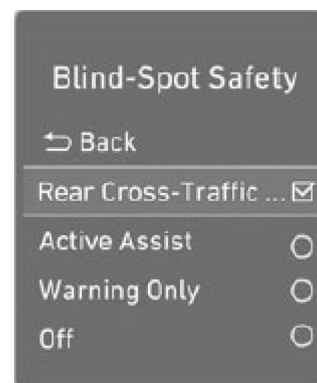

The RCCA system uses radar sensors to monitor approaching vehicles to the left and right while your vehicle is in reverse. If the risk of collision is detected while the RCCW is generated, brake is controlled. The instrument cluster will inform the driver of the brake control. If the rear view monitor system is in activation, a message will also appear on the audio or AVN screen.

Activate/Deactivate

Select the following items on the instrument cluster in order:

1. Select User Settings
2. Select Driver Assistance
3. Select Blind Spot Safety
4. Select Rear Cross Traffic Safety




SAFE EXIT ASSIST (SEA)

The Safe Exit Assist system helps prevent passengers from opening the door when a vehicle is approaching from the rear area. After the vehicle stops and an approaching vehicle from the rear area is detected, the rear door does not unlock. A “check surroundings then try again” warning message will appear on the cluster and a warning sound will go off.

When an approaching vehicle from the rear is detected and the door is already opened, a “watch for traffic” warning message appears and a warning sound will go off.

Note: If you press the switch within 10 seconds after the warning message appears, the driver acknowledges the rear status and is able to unlock the door.

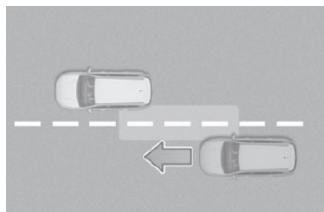


Activate/Deactivate

Select the following items on the instrument cluster in order:

1. Select user settings mode in the cluster LCD display
2. Select Driver Assistance
3. Select Blind-Spot Safety
4. Select Safe Exit Assistance

REAR OCCUPANT ALERT (ROA)

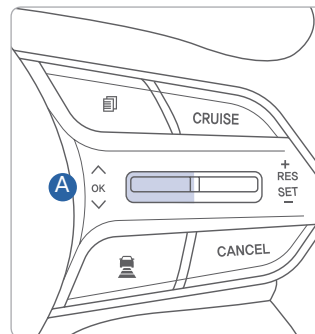

The Rear Occupant Alert system helps prevent exiting the vehicle with the rear passengers left in the vehicle.

1st Alert

When you open the front door after opening and closing the rear door and the engine is off, a “check rear seats” warning message appears.

2nd Alert

When any movement in the vehicle is detected after the driver’s door is closed and all doors are locked, the horn will activate for 25 seconds.

To stop this alert, unlock the door with the remote key or smart key.


Note: After the first alert, press the OK **A** button on the steering wheel to deactivate the second alert. If the system continues to detect movement, the horn activates up to 8 times. The system detects movement in the vehicle for 24 hours after the doors are locked.

Activate/Deactivate

Select the following items on the instrument cluster in order:

1. Select User Settings on the cluster LCD display
2. Select Convenience
3. Select Rear Seat Alert

CRUISE CONTROL/SMART CRUISE CONTROL

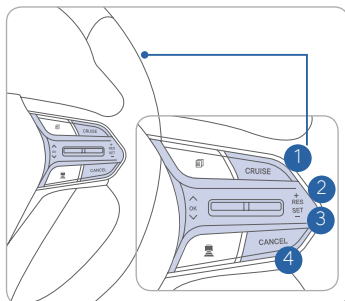


The Cruise Control system allows you to program the vehicle to maintain a constant speed without holding the accelerator pedal.

- ① To turn On/Off cruise control.
- ② Toggle switch UP to Resume or Increase the cruise control speed.
- ③ Toggle switch DOWN to Set or Decrease the cruise control speed.
- ④ To Cancel the Cruise Control.

Setting Vehicle Distance (Smart Cruise Control only)

This system assist you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.

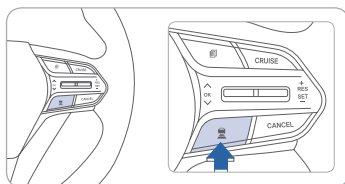

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal.

The vehicle-to-vehicle distance ① will automatically activate when you set the cruise speed ②.

Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:



Setting Cruise Control

1. Press the "CRUISE" button ① to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch (3) DOWN to set cruising speed.

Adjusting the vehicle speed

1. Toggle "+RES" switch ② UP to increase cruising speed.
2. Toggle "-SET" switch ③ DOWN to decrease cruising speed.

Note: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.

To Cancel Cruise Control

Press the "CANCEL" button ④ or depress the brake pedal.

Please refer to your Owner's Manual for more information.

LEADING VEHICLE DEPARTURE ALERT (if equipped)

The Leading Vehicle Departure Alert system alerts the driver of the departure of the vehicle in front when the vehicle is stopped and the Smart Cruise Control (SCC) is in activation.


To activate

Select the following items on the instrument cluster in order:

1. Select User Settings on the cluster LCD display.
2. Select Driver Assistance
3. Select Driving Assist
4. Select "Leading vehicle departure alert"

The system stops operation when the setting is deactivated. However, if the engine is turned off then on again, the system maintains in the previous state.

IDLE STOP AND GO (ISG)

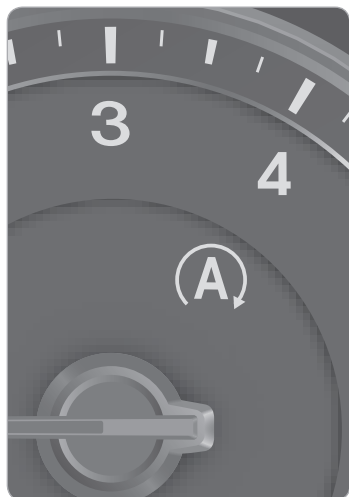

The ISG system will automatically shut off the engine when the vehicle is at a standstill (i.e. red stop light, stop sign, and traffic jam). The auto stop indicator **A** will illuminate on the instrument cluster when activated. To restart the engine in auto stop mode, release the brake pedal and press on the accelerator. The auto stop indicator goes OFF on the instrument cluster once the engine is restarted.

Prerequisite for activation:

- The driver's seatbelt is fastened.
- The driver's door and the hood are closed.
- The brake vacuum pressure is adequate.
- The battery is sufficiently charged.
- The outside temperature is between 14°F and 95°F (-10°C and 35°C).
- The engine coolant temperature is not too low.
- The system is not in the diagnostic mode.

To deactivate




Press the ISG OFF **B** button, indicator illuminates.

To activate

Press the ISG OFF **B** button, indicator turns OFF.

Note: If ISG is deactivated, it will be turned on again with key cycle.

DOOR LOCKS

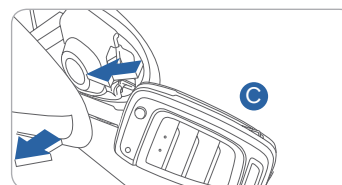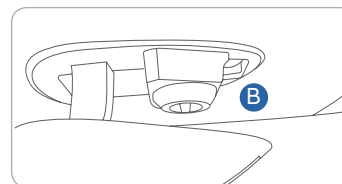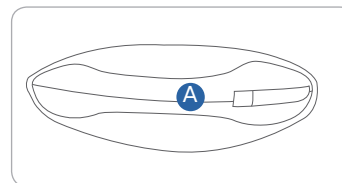


To access the key hole:

If the smart key is not working properly, there is an alternative way to unlock the doors through the keyhole on the driver's door.

1. Pull open the driver's door handle **A**
2. While holding the door handle open, use your finger or valet key to release the clip **B** behind the door handle.
3. Remove the key hole cover **C**

After removing the cover, turn the key toward the front of the vehicle to unlock and toward the rear of the vehicle to lock. Once the door is unlocked it may be opened by pulling the handle.

FUEL FILLER DOOR

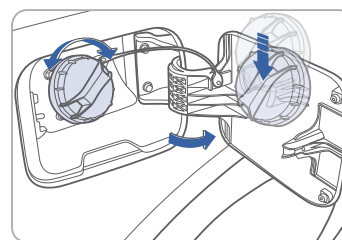



To open fuel filler door:

Turn engine off and unlock driver door.

Push the fuel filler door in.

Pull the fuel filler door outward to access the fuel tank cap.

WIPER BLADES

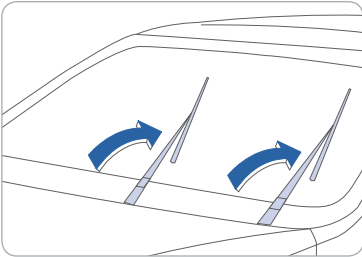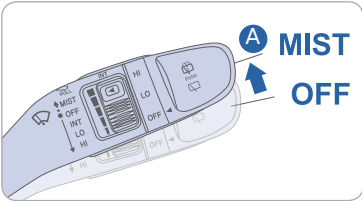


Note: To prevent damage to the hood and wiper arms, the wiper arms should only be lifted when in the top wiping position.

This vehicle has a “hidden” wiper design which means they cannot be lifted in their bottom resting position

Wiper Blade Removal

1. Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the MIST **A** position for about 2 seconds until the wipers move to the top wipe position.
2. At this position, you are able to lift the wipers off the windshield.
3. Gently put wipers back down onto windshield.
4. Turn the wipers to any ON position to return to resting position.

DRIVER SEAT ADJUSTMENT

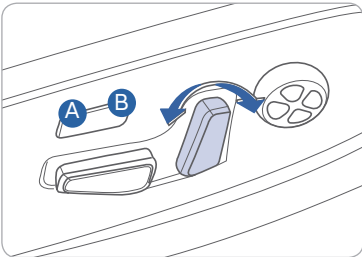

Adjusting cushion extension for leg support

1. Push the front part of switch **A** forward to move to desired length.
2. Push the rear part of the switch **B** to move backward to desired length.

Key Websites:

- Hyundai website - www.hyundai.com
- Hyundai owner website - www.myhyundai.com
- Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth
- Blue Link - www.MyHyundai.com

SANTA FE CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM “GOOD BATTERY” USING GR8 AND STAPLE TEST TICKET HERE
- ☐ SET TIRE PRESSURE LF__RF__RR__LR__
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- ☐ REVIEW QUICK REFERENCE GUIDE
- ☐ REVIEW AND TEAR OFF VOICE COMMAND / QUICK TIP CARD

BLUETOOTH® HANDS-FREE

HYUNDAI

CONNECTING YOUR PHONE

On the radio:

1. Push the **SETUP** button.

2. Select **Bluetooth**.

3. Select **Bluetooth Connection**.

4. Select **Add New**.

In your phone's Bluetooth settings:

5. Select the <Vehicle Name> on your phone.

6. Enter the passkey from the radio or accept the authorization pop-up on your phone.

SWITCHING BETWEEN PAIRED PHONES

Using Voice Command:

“Change Bluetooth device”

On the radio:

1. Push the **SETUP** button.

2. Select **Bluetooth**.

3. Select **Bluetooth Connection**.

4. Select **Connect** next to the desired phone.

For more information, visit HyundaiBluetooth.com