




The Hyundai **SONATA**

Quick Reference Guide



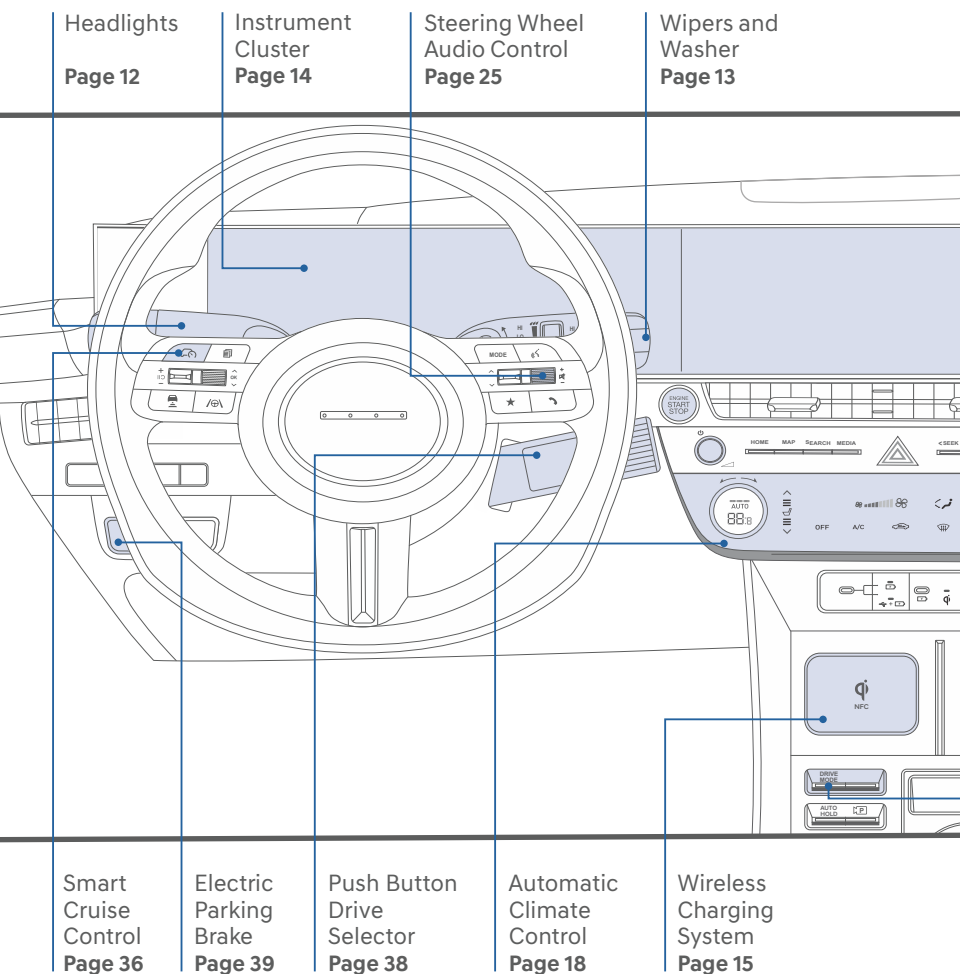


WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important **SAFETY INFORMATION** in your Owner's Manual.

NOTE: Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

Infotainment
Screen
Page 25

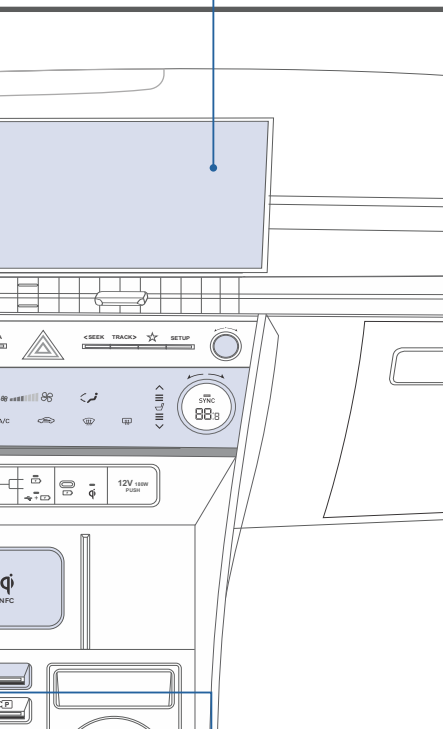

Drive
Mode
Page 34

Hyundai Vehicle Owner Privacy Policy	02
--------------------------------------	----

▶ QUICK REFERENCE HOW-TO LINKS

Scan To Learn	03
---------------	----

▶ FEATURES AND CONTROLS

Automatic Climate Control	18
Clock Adjustment	15
Digital Key Pairing	20
Driver's Door Main Controls	05
Fuel Filler Door	09
Headlights	12
Instrument Cluster	14
Instrument Panel Illumination	14
Instrument Panel Vents	10
Interior Lights	11
Lcd Display Control	16
Lcd Display Modes	16
Mechanical Key	04
Near Field Communication (NFC)	21
Panoramic Sunroof	10
Remote & Smart Key	04
Seat-front Seat Adjustment	06
Seat-headrest Adjustment	07
Seat-seat Belt Adjustment	07
Seat-seat Warmer And Ventilated Seat	07
Seat-rear Seat Cup Holders	09
Steering Wheel Adjustment	05
Trunk-smart Trunk	08
Trunk-trunk Opening	08
USB Data/smartphone Port	15
Warnings And Indicators	17
Wipers And Washer	13
Wireless Cellular Phone Charging System	15

▶ INFOTAINMENT

Android Auto™	29
Apple Carplay®	30
Audio Mode	24
Bluetooth Audio Quality Tips	22
Bluetooth Operational Tips	23
Bluetooth Phone Operation	22
Bluetooth Phone Pairing	22
Fm Radio	25
Homelink Wireless Control System	27
Navigation	26
Sound Settings	25
Steering Wheel Audio Control	25

▶ DRIVING

Blind Spot Collision Avoidance Assist (BCA)	32
Drive Mode	34
Drive Selector	38
Electronic Parking Brake (EPB)	39
Forward Collision-avoidance Assist (FCA)	32
Highway Driving Assist (HDA)	37
Lane Following Assist (LFA)	31
Lane Keeping Assist (LKA)	31
Leading Vehicle Departure Alert	37
Push Button Drive Selector	38
Rear Cross-traffic Collision-avoid. Assist (RCCA)	38
Rear Occupant Alert (ROA)	33
Smart Cruise Control (SCC)	36
Tire Pressure Monitoring System (TPMS)	35

Some vehicles may not be equipped with all the listed features.

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Care Center at:

Hyundai Customer Care
P.O. Box 20850
Fountain Valley, CA 92728
800-633-5151
consumeraffairs@hmmausa.com

Hyundai's Customer Care Center representatives are available Monday through Friday, between the hours of 6:00 AM and 5:00 PM PST and Saturday between 6:30 AM and 3:00 PM PST (English).

For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

SCAN TO LEARN

Scan to learn more about new and existing features on your Hyundai with “How-To” guides:



WATCH & LEARN



READ & LEARN

SELECTED
FOR YOUR
HYUNDAI
VEHICLE



BLUETOOTH
PHONE
PAIRING



HYUNDAI
HOW-TO
VIDEOS



ANDROID
AUTO™
SUPPORT



APPLE
CARPLAY®




HOMELINK



NOTE: Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

REMOTE & SMART KEY

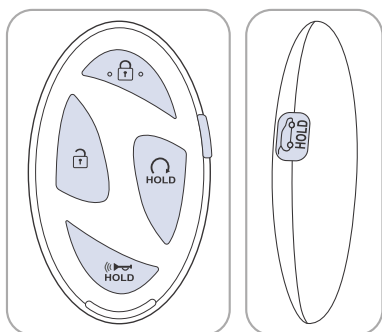

-  Lock
-  Trunk Lock
-  Unlock
-  Panic
-  Engine remote start button


NOTE: To start the vehicle remotely, press and hold the remote start button for over 2 seconds within 4 seconds after locking the doors.

MECHANICAL KEY

If the smart key does not operate normally, you can lock or unlock the driver's door by using the mechanical key.

Turn the knob **2** of the mechanical key after removing the key protector **1**.

NOTE: Mechanical key is separated from Smart Key Fob. For more information, refer to the „Using The Mechanical Key“ section of Owner's manual.

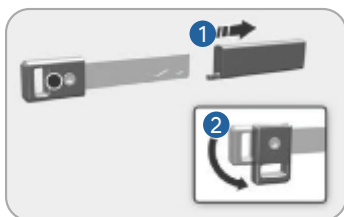

Driver's door Lock / Unlock with Touch sensor (if equipped)




- **1 To Unlock (if 2 Press Unlock enabled):**
 - Dip hand into the handle **One time** will unlock the **Driver's door** only
 - Dip hand **Two times** - Unlocks **all doors**.
- **2 To Lock:** Press the touch sensor on the outside of the handle to lock.
- **Disable/Enable 2 Press Unlock Function:** In the infotainment screen press **Setup button > Vehicle > Door > Toggle ON/OFF 2 Press Unlock**.

CAUTION:

- If you locked the door with the touch sensor on the door handle, the doors cannot be unlocked with the sensor within 3 seconds.
- If you unlocked the door with the touch sensor on the door handle, the doors cannot be locked with the sensor within 2 seconds.

STEERING WHEEL ADJUSTMENTS


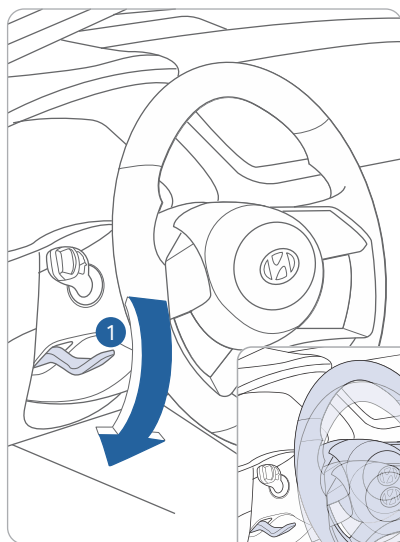


1. Pull the lever ① down.


2. Set the angle ② and distance ③.

3. Pull the lever ① up to lock position.

NOTE: Do not adjust while driving.

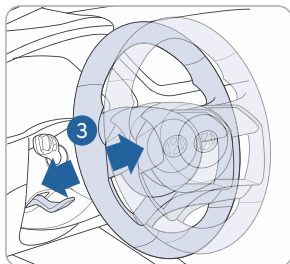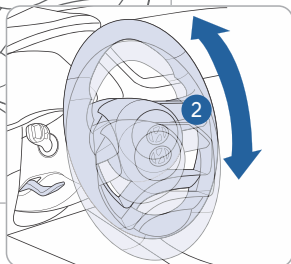

DRIVER'S DOOR MAIN CONTROLS

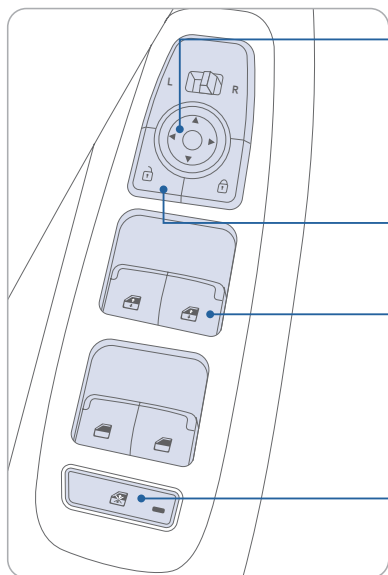

Outside Rearview Mirror

Move the lever towards L (left) or R (right) on the switch. Then adjust the mirror by using the mirror adjustment control switch.

Door Lock

Locks/unlocks all doors.

Window Auto down/up (if equipped)

Press past detent to fully open or close window.

Power window lock button


Disables the power window switches on the rear passenger doors.

FRONT SEAT ADJUSTMENT (MANUAL)


1 Forward and backward



2 Seat cushion height




3 Seatback angle




FRONT SEAT ADJUSTMENT (POWER)


1 Forward and backward





1 Seat cushion height




2 Seatback angle



3 Lumbar support

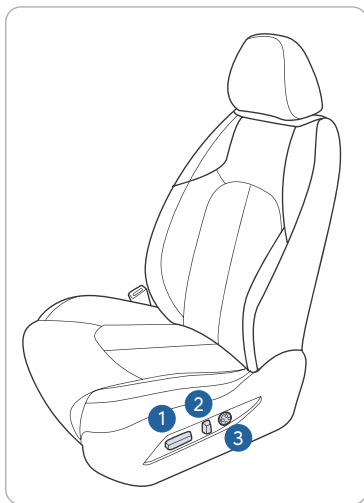



HEADREST ADJUSTMENT

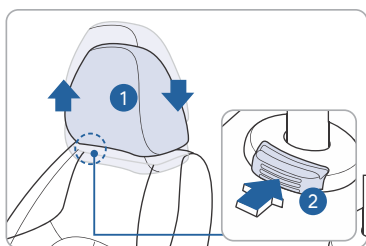


- 1 To Raise Headrest:
Pull headrest up.
- 2 To Lower Headrest:
Press lock button while pressing down on headrest.

SEAT BELT ADJUSTMENT (FRONT SEAT)

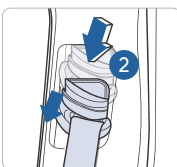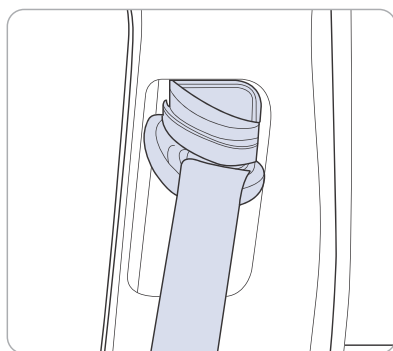

- 1 Pull up to raise.
- 2 Press button and push down to lower.

SEAT WARMER AND VENTILATED SEAT

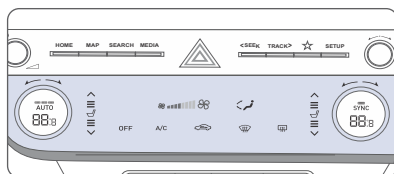


While the engine is running, press the seat warmer or ventilation switch , to warm or cool the driver's seat or front passenger's seat. Use switch , to adjust desired intensity.

1 Seat Warmer

Toggle the switch **upward** to increase heat.


OFF LOW() MED(=) HIGH()

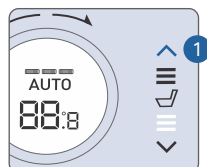

2 Seat Ventilation (if equipped)

For vehicles equipped with both, heated and ventilated seats, toggle the switch **downward** to increase cooling.

OFF LOW() MED(=) HIGH()

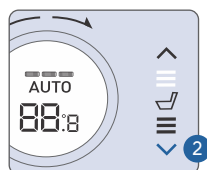

TRUNK OPENING

Opening the trunk


The trunk can be opened by:

1 Trunk Button

Unlock all doors using the remote Key FOB / Smart Key, then press the trunk button next to the rear camera.



2 Key FOB / Smart Key

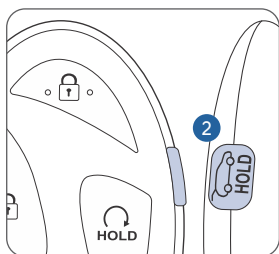

Press and hold the trunk unlock button on the side of remote key FOB / Smart Key for about 1.5 seconds.

3 Trunk Release Button

From inside the vehicle, press the trunk release button located on the driver side dash panel.



SMART TRUNK

On a vehicle equipped with a smart key, the trunk can slightly open automatically when detecting smart key within range near the trunk for more than 3 seconds.



To enable Smart Trunk function:

The Smart Trunk option is enabled in the Vehicle Settings menu in the infotainment system.



NOTE: Function is active after 15 seconds when all doors are closed and locked and key is not detected. The vehicle will also provide an audible and visual alarm while activating. For more details, refer to Owner's Manual.

FUEL FILLER DOOR

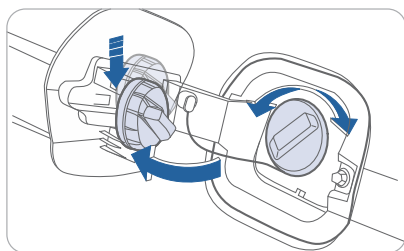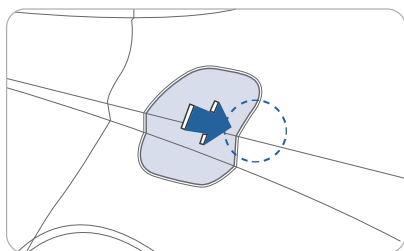

To open fuel filler door:

1. Unlock the fuel filler door
2. Press the rear center edge of the fuel filler door
3. Pull the fuel filler door out to fully open

NOTE: The fuel filler door will unlock when Driver's door is unlocked.

To unlock fuel filler door:


- Press the unlock button on your smart key.
- Press the Central Door unlock button on armrest trim of driver's door.
- Pull the driver's inside door handle outward.

The fuel filler door will lock when all doors are locked

To lock fuel filler door:


- Press the lock button on your smart key.
 - Press the Central Door lock button on armrest trim of driver's door.
- ※ All doors will automatically lock after the vehicle speed exceeds 10 mph.
Fuel door is also locked when vehicle speed exceeds 10 mph.

REAR SEAT CUP HOLDERS

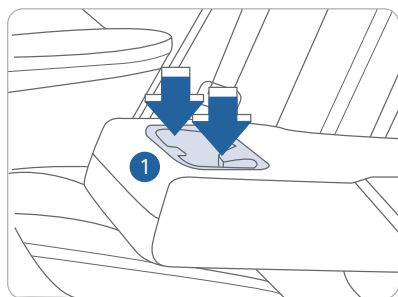

On some select trims: there are two additional cup holders in the rear seats. To access, fold down the Rectangular seat padding **1** at the base of the center head rest.

PANORAMIC SUNROOF

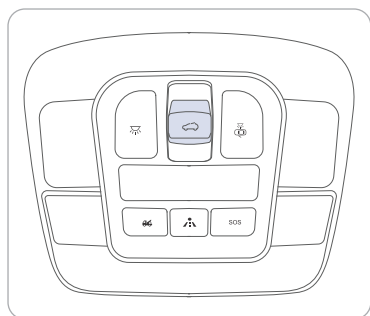

Sunshade



To open the sunshade, pull the sunroof control lever lightly backward to the first detent position. Push the sunroof control lever forward to close.


Sliding The Sunroof



Pull the sunroof control lever backward to open the sunroof. (This operation will also open the Sunshade, if it is not in the open position.)

Push the sunroof control lever forward to close the sunroof.


Tilting The Sunroof



Push the sunroof control lever upward to open the sunroof to the tilt position. (This operation will also open the Sunshade, if it is not in the open position.)

Push again the sunroof control lever upward to close the sunroof from the tilt position.


INSTRUMENT PANEL VENTS

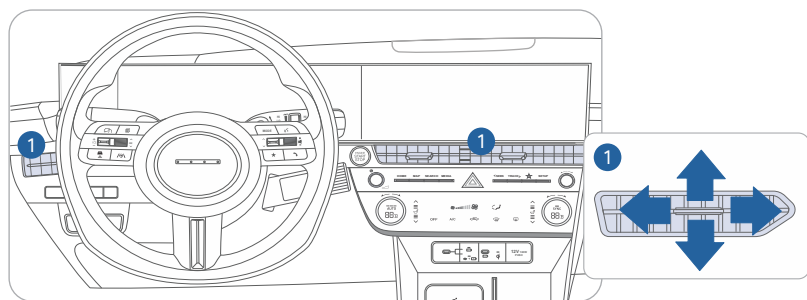

- 1 The instrument panel vent air flow can be directed **UP / DOWN** or **LEFT/RIGHT** using the vent adjustment lever.

Move the lever all the way to the  direction to **CLOSE**, and to the  direction to **OPEN** the air vents.

INTERIOR LIGHTS

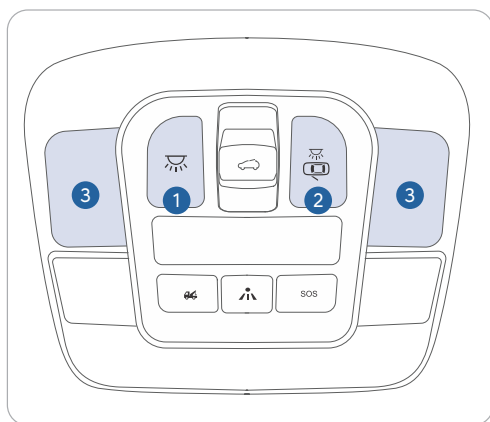

1 Master Switch

Push the switch to turn the **map lamp 3** and **room lamp 4** **ON** or **OFF**.

When the **Master Switch 1** is pushed, the other switches **3**, **4** do not operate.

2 Door Mode Switch ()

When the **Door Mode Switch 2** is pushed, **map lamp 3** and **room lamp 4** turn **ON** if any door is opened and will turn **OFF** after all doors are closed.

3 Map Lamp (Lens Switch)


Press the **lens** to turn **ON** and **OFF** for each side of map lamp.

4 Room Lamp Switch ()

Press the Room Lamp Switch to turn **ON** and **OFF** the room lamp.

When this switch is pushed, master switch cannot control room lamp.

Room Lamp (Rear)

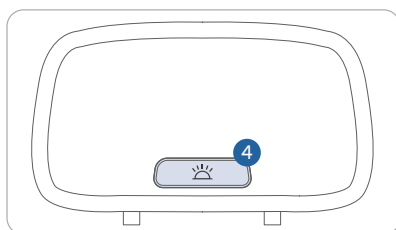


HEADLIGHTS

Headlight Delay



Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off.

NOTE: Headlights may stay on for 15 seconds after exiting and locking vehicle.

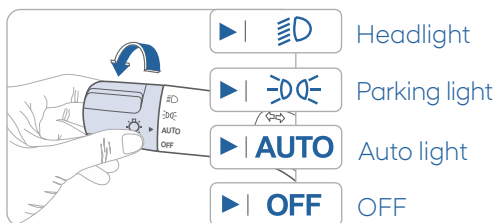



Turn and lane change signals

Flashing headlights

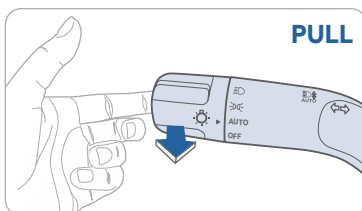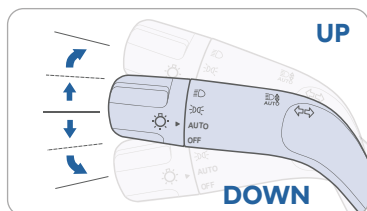

High beam


- 1 To turn high beam **ON**, push the lever away from you.
- 2 To turn high beam **OFF**, pull the lever towards you.

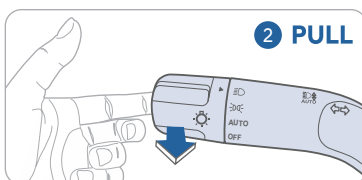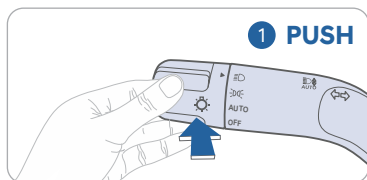

High Beam Assist

With the Engine Start/Stop button in the ON position, select **Setup > Vehicle > Lights > High Beam Assist** from the Settings menu to turn ON High Beam Assist and deselect to turn OFF the function.

1. Select **AUTO** position on lever ①.
2. Turn the high beam **ON** by pushing the lever ② away from you. High Beam Assist indicator will illuminate (D with AUTO).

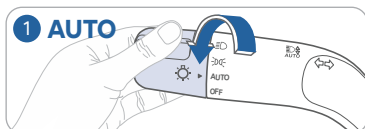


High Beam Assist system will turn ON when vehicle speed is above 25 mph.


4. To turn High Beam Assist **OFF**, push the lever ② away from you.



WIPERS AND WASHER

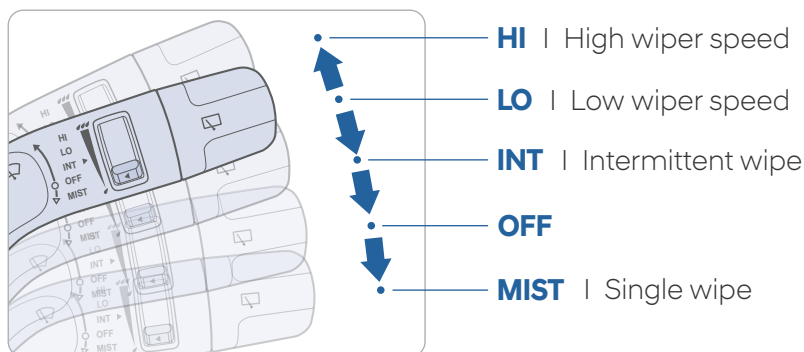


Intermittent Wipe Time Adjustment

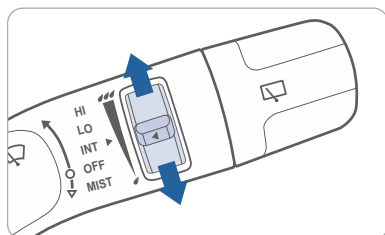

Move the control switch.

- ↑ **Fastest** wiper speed
- ↓ **Slowest** wiper speed

Windshield Washer

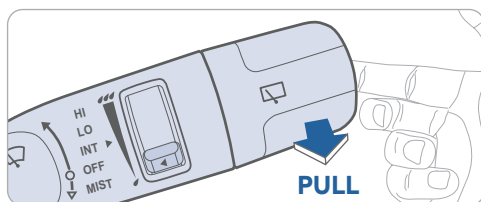

Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

The spray and wiper operation continues until you release the lever. If the washer does not work, you may need to add washer fluid to the washer fluid reservoir.

INSTRUMENT CLUSTER

Type A




Type B




- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 Cluster Display

INSTRUMENT PANEL ILLUMINATION

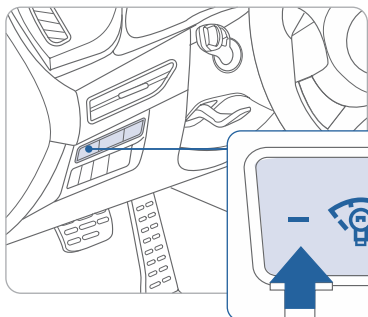

Press “-” or “+” to adjust instrument cluster illumination brightness.

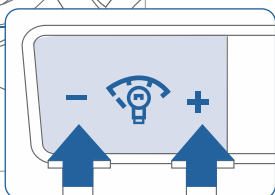

WIRELESS CELLULAR PHONE CHARGING SYSTEM



There is a wireless cellular phone charging system inside the front console. The system will operate when all doors are closed, and the ignition switch is in the ACC/ON position. The wireless charging pad is equipped with a cooling fan to help prevent overheating while charging.

- 1 Indicator light 2 Charging pad

NOTE: The wireless cellular phone charging system supports only the Qi-enabled cellular phones .

NOTE: Do not place any metallic items such as coins, keys on the charger. Avoid putting credit cards, etc. on the charger as they might get damaged by the magnetic field.

NOTE: The system will operate when all doors are closed, and the ignition switch is in the ACC/ON position.


USB DATA/SMARTPHONE PORT




The left side USB data port can toggle between **charging** or **Android Auto /Apple CarPlay**.

- 1 Press for charging only.
- 2 Press to connect to Android Auto /Apple CarPlay.
- 3 The center USB port is charge only.

CLOCK ADJUSTMENT

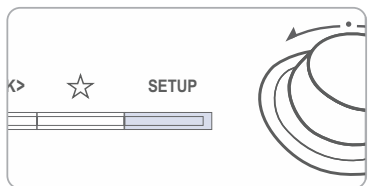

1. Press the **SETUP** button.
2. Touch the **“General Settings”** icon.
3. Touch **“Date & Time”** 1 on left side.
4. Touch the ► icon 2.
5. **Adjust** the date/time.

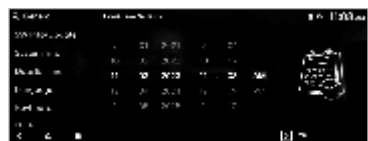


Note: If “Automatic Time Setting” is selected, the date and time cannot be altered.

LCD DISPLAY MODES

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information like the tripmeter, fuel economy, and so on.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		- Smart Cruise Control (SCC) - Lane Keeping Assist (LKA) - Lane Following Assist (LFA) - Driver Attention Warning (DAW) - Tire pressure
Drive Assist (if equipped)		This mode displays the state of: - Smart Cruise Control system - Lane Keeping Assist - Lane Following Assist - Driver Attention Warning - Tire pressure
Warning		Displays service interval and warning messages.

LCD DISPLAY CONTROL

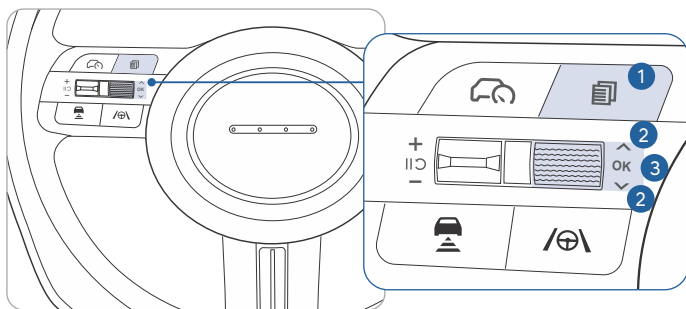

- ①  **MODE** button for changing modes
- ②  **MOVE** switch for changing items
- ③ **OK** **SELECT/RESET** button for setting or resetting the selected item

WARNINGS AND INDICATORS

 Immobilizer indicator	 Master warning light	 Malfunction Indicator Lamp (MIL)	 Low fuel level warning light	 Low Tire Pressure Warning Light / TPMS system malfunction light
 Driver Attention Warning light	 Turn signal indicator	 Cruise and Smart Cruise indicator	 Speed Limiter indicator	 Intelligent Speed Limit Assist indicator light
 LED headlight warning light	 Light ON indicator	 Low beam indicator	 High beam indicator	 High Beam Assist indicator
 Electronic Stability Control (ESC) OFF indicator	 Electronic Stability Control (ESC) indicator	 Lane Safety indicator light	 Lane Following Assist indicator light	 Forward Safety warning light
 Motor Driven Power Steering (MDPS) warning light	 AUTO HOLD indicator	 AUTO STOP indicator light	 AWD warning light	 AWD LOCK indicator
 Parking brake & Brake fluid warning light	 Anti-lock Brake System (ABS) warning light	 Electronic Brake Force Distribution (EBD) System warning light	 Electronic Parking Brake (EPB) warning light	 Engine oil pressure warning light
 Wireless Charging indicator light	 Airbag warning light	 Seat belt warning light	 Charging system warning light	 SPORT or SNOW Drive Mode indicator

AUTOMATIC CLIMATE CONTROL



- | | |
|---|--|
| <ul style="list-style-type: none"> ❶ Driver's temperature control ❷ Passenger's temperature control ❸ AUTO (automatic control) ❹ SYNC button (Same control for all seats based on driver's seat) ❺ Fan speed control | <ul style="list-style-type: none"> ❻ Mode selection ❼ OFF ❽ A/C (air conditioning) ❾ Air intake control ❿ Front windshield defroster ⓫ Rear window defroster |
|---|--|

Defogging / Defrosting



1. Press the defrost button.



2. Select warmest temperature.



3. Set the fan speed to the highest speed.



4. The air conditioning turns ON according to the detected ambient temperature and the outside (fresh) air mode is selected automatically.



Pressing the OFF button will place the system in the OFF mode.

- Climate control fan will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

NOTE: To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

► FEATURES AND CONTROLS



Manual heating and air conditioning

Air intake control



LED ON
recirculated air
position



LED OFF
outside (fresh) air
position

Mode selection



The **MODE** selection button controls the direction of the air flow through the ventilation system as follow:



Automatic heating and air conditioning




Press the **AUTO** button. The modes, fan speeds, air intake, and air conditioning are controlled automatically by the temperature setting. Turn the temperature control knob left or right to set the desired temperature.

Auto fan speed control

You can control the fan speed in three stages by pressing the **AUTO** button during automatic operation. ► **HIGH** ► **MEDIUM** ► **LOW** ►



HIGH: Provides rapid air conditioning and heating with the maximum fan speed setting.



MEDIUM: Provides air conditioning and heating with the mid-level fan speed setting.



LOW: Fan speed is set to the lowest setting range.

NOTE: If the temperature is set to either 'HI' or 'LO', the fan speed setting will be 'HIGH'. For detailed precautions and instructions, see the Owner's Manual.

DIGITAL KEY PAIRING (if equipped)


Hyundai Digital Key allows drivers to start the engine of their car using a smartphone app and Near-Field Communication (NFC). Hyundai Digital Key provides many of the same functions as your physical key. To pair your smartphone, complete the following steps:

Setting your smartphone app profile

To use the digital key feature: First, download the **Bluelink App** and create your account. For more information about Bluelink, refer to the infotainment system guide.


Registering your digital key on your smartphone

1. Turn on the vehicle with a smart key and have your smart key with you in the vehicle.
2. With the gear in P (Park), from the infotainment system Settings menu, select:
Setup > Vehicle > Digital keys > Smartphone key > My Smartphone Key.
3. After selecting **Digital Key > Set Up Digital Key** from the Bluelink App in the smartphone, **register** the **digital key** according to the guidance in the smartphone screen.
4. Press **Save** button in the infotainment system to start registration. When the digital key (smartphone) is saved, a message appears on the infotainment system.

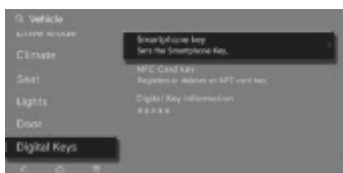

How to register your Card Key (NFC key)

1. Have both of your smart keys with you in the vehicle.
2. Select **Setup > Vehicle > Digital Keys > NFC Card Key** from the Setup menu, and check whether "Use" is selected in the infotainment system.
3. Place your card key on the vehicle **authentication pad** **A** (wireless charging pad) while the engine is on.
4. Register your card key by selecting **Setup > Vehicle > Digital Keys > NFC Card Key > Save** from the Settings menu in the infotainment system.

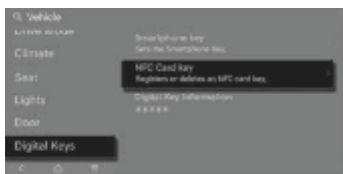

NEAR FIELD COMMUNICATION (NFC)



Lock / Unlock

To lock / unlock your vehicle using the NFC key card **2**, hold the **key card** up to the center of the **door handle** **1**.

If you try to lock your vehicle with the NFC key card under the following conditions, it will not work:

- The Smart Key is in the vehicle.
- The POWER button is in ACC or ON position.
- Any of the doors, hood and trunk are open.

Starting the vehicle

After placing your **registered digital key** (card key) on the vehicle **authentication pad** (wireless charging pad), depress the **brake pedal** and press the **Engine Start/Stop** button.

NOTE: If you overlap and use the key card with other NFC-enabled cards such as a transportation card or credit card, it will not work.

For security reasons, the vehicle can only have one NFC key card paired to it at one time. Any time that a new NFC key card is paired to the car it will disable the previously paired NFC key card.

BLUETOOTH PHONE PAIRING



Pairing tutorials, phone compatibility and operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



BLUETOOTH PHONE OPERATION

Phone setup (pairing phone)

1. Enter **Bluetooth®** menu on your mobile phone.
2. On Sonata Infotainment Unit press **Setup** button > **Device Connections** > **Add New**.
3. Select the **car name** shown on your mobile phone to pair.
4. Enter the **passkey** or **accept the authorization** popup on your phone. (The default passkey is 0000.)
5. Bluetooth is connected.

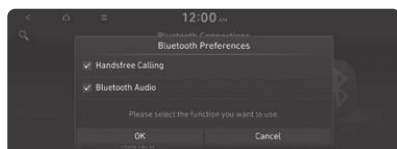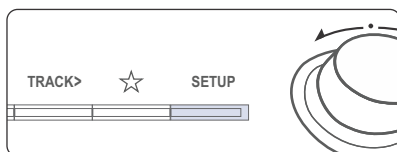

NOTE: Vehicle must be parked to complete pairing process.

BLUETOOTH AUDIO QUALITY TIPS

Ensure Bluetooth device volume is set to 100% for optimal audio quality. To adjust volume to your preference, utilize the head unit knob or steering wheel control.

When placing a call, reduce the volume of the head unit if distortion or echoing is present.

BLUETOOTH® OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. High level volume may result in distortion and echo. Keep the Bluetooth volume low.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel Bluetooth® control

1 VOICE RECOGNITION


- Short press activates system voice recognition.
- A long press activates the smartphone VR, if connected.

2 CALL/ANSWER/CALL END

Answer a call or end a call. Press and hold to reject an incoming call.

3 CUSTOM

Use a custom function. Press and hold to access the Custom Button settings screen. Tap to select the programmed function.

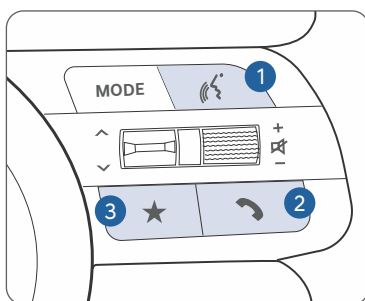

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press the  button.
2. Say the following command:
 - “Call <John>”: Connects the call to John.
 - “Call <John> <on Mobile/at Work/at Home>”
Connects the call to John’s Mobile, Home, or at Work phone number.

Dialing by Number:

1. Press the  button.
2. Say “Dial Number”.
3. Say the desired phone number.

For the complete list of commands, please refer to your Owner’s Manual.

Note: Vehicles without Navigation require a compatible Apple or Android phone connected to the USB port to use the Voice recognition button on the steering wheel. If connected via Bluetooth you cannot place a call using VR, you can only accept and end a call.

AUDIO MODE



Press POWER button **A** to turn radio on.

TUNING/LISTENING TO CHANNELS

1. Press the MEDIA button **B**.
2. Press the search backward button SEEK **C** or the search forward button TRACK to desired channel.

NOTE: A clear view of the southern sky is recommended to ensure SXM® radio reception.

SETTING PRESET MEMORY BUTTONS (FM/AM/SXM®)

Press and hold any preset button **D** until an audible beep is heard to store current channel.

NOTE: For SE models, press and hold the star icon **F** on the screen until an audible beep is heard to store current channel.

ADJUSTING THE SOUND CONTROL

1. Press **SETUP** button **E**.
2. Select **Sound** button on screen.
3. Select **Position** button on screen.
4. Touch on-screen arrows to adjust desired setting.



NOTE:

1. Users can set the volume level of each source (FM, AM, SXM®, USB, BT and etc.) individually by adjusting the **A** knob.
2. When the volume of a source is adjusted to the desired level, it will be automatically saved at that setting. Thus, when the user changes source and reverts back, the volume will be set at the last desired level. **Volume levels will vary between each source.**

FM RADIO

RADIO NOISE CONTROL MODE




1. Press the Menu button **A**.
2. Press the Radio Noise button **B**.
3. Select Radio Noise Control Mode **1**, **2** or **3** as your preference.



✖ Default: Minimum Noise Reduction **2**.

STEERING WHEEL AUDIO CONTROL

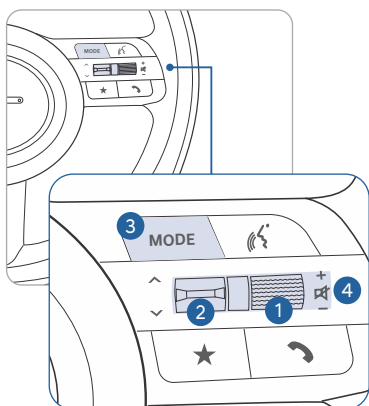

- 1 VOLUME**
Raises or lowers the speaker volume. Press to **Mute**.
- 2 SEEK / PRESET**
Changes the **station**. Fast **forward** / **rewind** smartphone media (as set in the app).
- 3 MODE**
Changes the **audio source**.
- 4 MUTE**
Press the volume control to **MUTE**. Press the volume control again to **UNMUTE**.

SOUND SETTINGS

The sound settings for various system and phone levels can be adjusted. To configure sound settings, on the **Home Screen**, press **Setup > Sound**, and the **sound settings screen** will appear. Configure the settings as needed.

NOTE: For more information on specific setting, refer to Online Manual.

NAVIGATION

Basic features on the map screen




- 1 Search for destination. Can only be used when vehicle is in Park (P)
- 2 Adjust the map orientation here (True North or point of view)
- 3 You can adjust Turn-by-Turn Navigation Volume
- 4 Map scale will automatically adjust
- 5 Zoom In/Out by changing map scale
- 6 Cancel route
- 7 Time of arrival and distance to destination
- 8 Upcoming route directions
- 9 Destination name/address
- 10 Route Overview

Destination search screen



- 1 Enter POI, address via keyboard (vehicle in P) or Voice
- 2 You can search by Previous Destinations here
- 3 You can search by Nearby Points of Interests (POIs)
- 4 You can store saved addresses (Home, Work, an other POIs here)
- 5 Shortcut panel for Saved Places, Nearby POIs and Previous Destinations

HOMELINK WIRELESS CONTROL SYSTEM (if equipped)

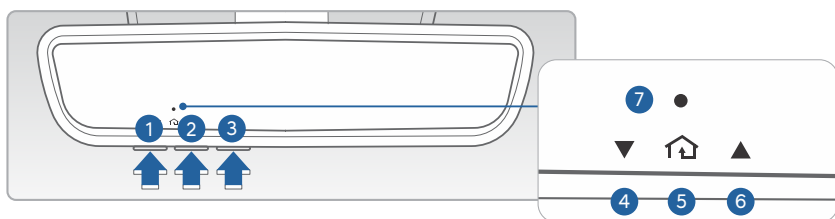


1. Press and release 1, 2 or 3 button.
 - If the indicator 7 is turned ON in Orange, go to Step 3 (programming mode)
 - If the indicator 7 is continuously turned ON or flashes in Green rapidly several times, go to Step 2 (erasing mode)
2. Press and hold the button you wish to program for approximately 15-25 seconds until the LED flashes in Orange for several times.
3. Hold the Garage Door Opener Original Transmitter near the HomeLink Mirror.
4. Press the Original Transmitter button until the indicator 7 is turned continuously ON or flashes in Green for approximately 10 seconds and it indicates the programing is completed.

NOTE: If the indicator 7 flashes in Green continuously, but if the garage door opener does not operate, please continue to follow Rolling Code Programming steps below.

Two Way Communication

Some new garage door openers come equipped with a two-way communication feature. If your garage door opener has this feature, please also continue to follow the Rolling Code Programming steps below. For more information and programming tips on two-way communication please visit www.homelink.com/compatible/two-waycommunication or call (800)-355-3515.

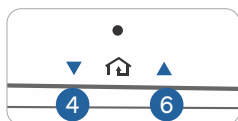


Indicator 4 & 6:

- Flashes in orange → "Closing" or "Opening"
- Solid Green → "Closed" or "Opened"

NOTE: If your garage door opener has Two-Way Communication functionality, it is possible for HomeLink to stop functioning the garage door shortly after initial programming, if the Two Way Communication Programming wasn't properly completed. If you experience this, completing the "Programming a New HomeLink Button" and "Two-Way Communication Programming" will restore door operation.

Rolling Code Programming

- You may need a ladder to access your garage door opener.
 - You may need help from a second person.
 - Be prepared some of the steps are time sensitive.
1. Firmly press and release the “Learn”, Smart”, or “Program” button of garage door opener on the ceiling while the indicator ⑦ flashes in Green. Once the button is pressed, you have approximately 30 seconds to initiate the next step.

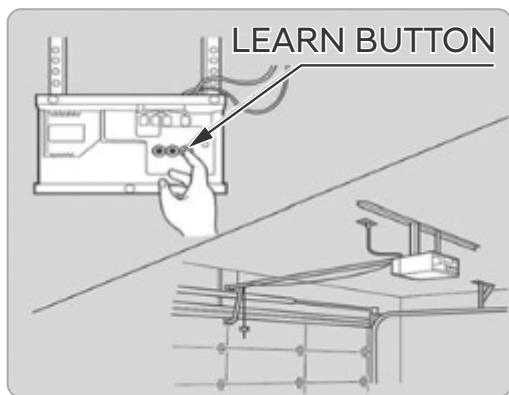

2. Return to the vehicle and firmly press the HomeLink button, hold for two seconds and release the button up to three times. Do not press the HomeLink button rapidly. At this point programming is complete and your device should operate.

For more detailed information, please refer to your Owner's manual or visit www.homelink.com or call (800) 355-3515.



NOTE: Vehicle must be ON for Homelink to work.

ANDROID AUTO™

Requirements:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

Before You Begin:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them.
 - Disconnect and then reconnect your phone.
- Using the USB cable that was provided with your phone is recommended.

NOTE: Dual Voice Recognition:

1. Pressing Voice Recognition button once will use vehicle onboard for requests.
2. Pressing and Holding Voice Recognition button will use Android Auto for requests.



Reminders:

Android Auto™ compatibility requirements for connection:

- **USB cable connection only:**
 - OS Android™ 5.0 or higher,
 - phone manufacturer's USB cable
 - data plan for applicable feature(s).
- **Standard Audio System-Value (USB cable & wireless connection):**
 - USB cable connection – OS Android™ 5.0 or higher
 - phone manufacturer's USB cable
 - data plan with applicable feature (s).


APPLE CARPLAY®

Requirements

- Apple Lightning® cable (Apple-certified cable)
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


Phone Setup

1. On your phone, go to **Settings > General > CarPlay** to allow CarPlay access.
2. On your phone, go to **Settings > Siri** and ensure Siri is turned ON.

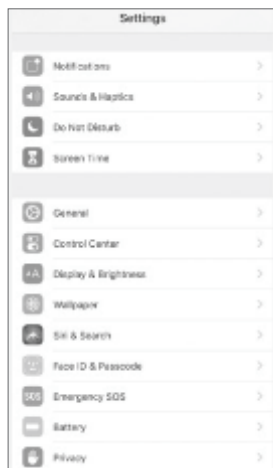


Car Setup

1. Press the SETUP button.
2. Touch the “Device Connections” icon on the screen.
3. Select Phone Projection Settings.
Select Apple CarPlay.
4. Re-numbering for following procedures.
5. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

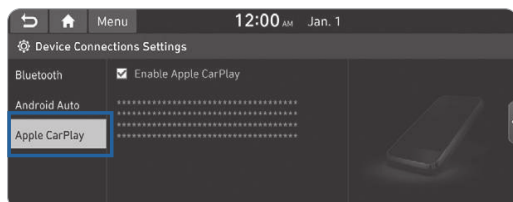

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

LANE KEEPING ASSIST (LKA)

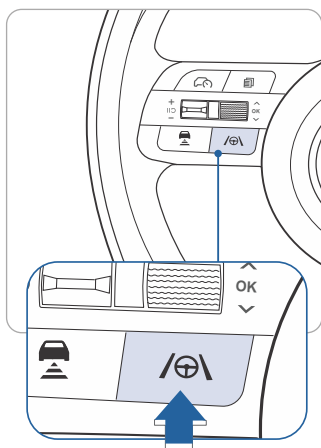

Lane Keeping Assist is designed to help detect lane markings (or road edges) while driving over a certain speed. The system will warn the driver if the vehicle leaves the lane without using the turn signal, or will automatically assist the driver's steering to help prevent the vehicle from departing the lane.


With the engine on, press and hold the Lane Driving Assist  button for about 2 seconds located on the steering wheel to turn on Lane Keeping Assist. The grey  indicator light will illuminate on the cluster. Press and hold the button again to turn off the system.

NOTE: A short press of the button will turn on and off Lane Following Assist.

LKA operates only when the vehicle speed is above 40 mph and when the LKA indicator is green displayed in the instrument cluster. LKA will not operate properly if the lane line is not clear, sharp bend in the road, or in heavy fog.

Refer to the Owner's Manual for more detailed information.

LANE FOLLOWING ASSIST (LFA)

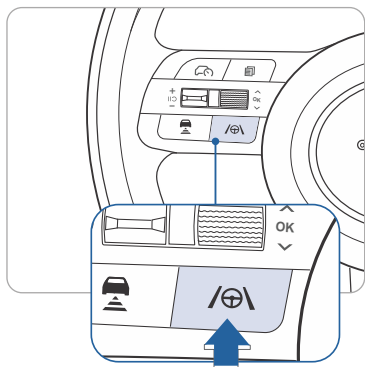

Lane Following Assist helps detect lane markers on the road using the front view camera mounted on the front windshield. LFA helps to assist the driver steering to help keep the vehicle centered in the lane.

To enable LFA while driving, press and release the Lane Driving Assist button on the steering wheel.


NOTE: Pressing and holding the same button will enable the Lane Keeping Assist feature.

Operating conditions

When LFA is activated, the indicator  on the cluster will illuminate. The color of the indicator will change depending on the condition of LFA .

- **Green:** When LFA assist the steering
- **White:** When LFA can not assist the steering

FORWARD COLLISION-AVOIDANCE ASSIST (FCA)

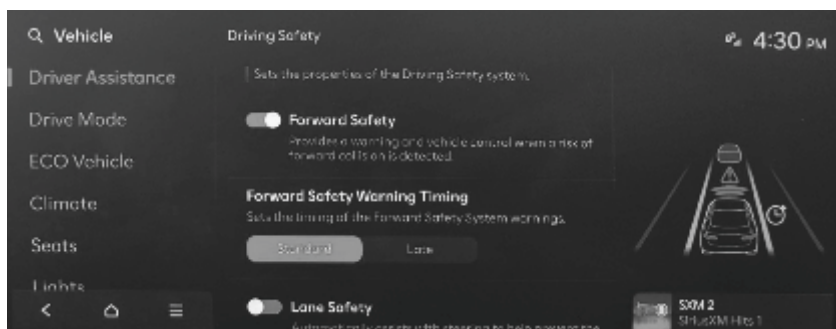


To operate FCA, select the **Forward Safety** sub menu under **Driving Assistance Settings** in infotainment system.

Forward Collision-Avoidance Assist is designed to help detect and monitor the vehicle ahead or help detect a pedestrian or cyclist in the roadway and warn the driver that a collision is imminent with a warning message and an audible warning, and if necessary, apply emergency braking.

NOTE: Please refer to your Owner's Manual for further information.

BLIND-SPOT COLLISION-AVOIDANCE ASSIST (BCA)

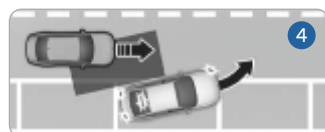

Blind-Spot Collision-Avoidance Assist helps detect approaching vehicles in the driver's blind spot areas.

① With the engine on, select **Setup > Vehicle > Driver Assistance > Driving Safety > Blind Spot Safety** from the settings menu to set whether to use each function.

BCA helps detect and informs the driver:

- ② vehicle is in the blind spot.
- ③ a vehicle is approaching at high speed.
- ④ driving forward out of a parking space.



If "**Blind-Spot Safety**" is selected, BCA warns the driver:

- with a warning message
- an audible warning depending on the collision risk levels
- braking assist is applied depending on the collision risk levels.

REAR OCCUPANT ALERT (ROA)

The Rear Occupant Alert system helps prevent exiting the vehicle with the rear passengers left in the vehicle.

ROA can be enabled from the Settings menu in the infotainment system. Select: **Setup > Vehicle > Convenience > Rear Occupant Alert**.

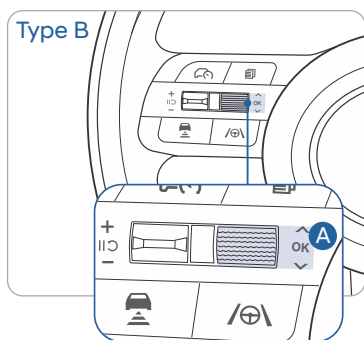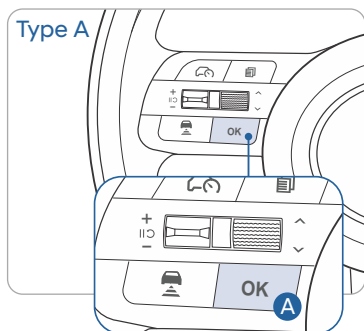

1st Alert


When you turn off the engine and open the driver's door after opening and closing the rear door, the "Check rear seats" warning message appears on the instrument cluster.

2nd Alert

When any movement in the vehicle is detected after the driver's door is closed and all doors are locked, the horn will activate for 25 seconds. To stop this alert, unlock the door with the remote key or smart key.

NOTE: After the first alert, press the "OK" button **A** on the steering wheel to deactivate the second alert. If the system continues to detect movement, the horn activates up to 8 times. The system detects movement in the vehicle for 24 hours after the doors are locked.

The record of the rear door opening and closing resets only when the driver turns the vehicle off and locks the vehicle door. Even if the rear door has not been re-opened, an alert may occur if the door record is not reset.

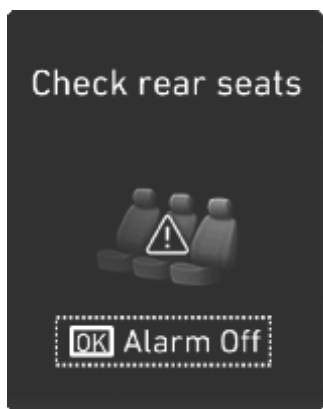

DRIVE MODE

The drive mode may be selected according to the driver's preference or road conditions. The system resets to NORMAL mode, when the engine is restarted.




The mode changes, as the following, whenever the **DRIVE MODE** switch is pushed up or down. An indicator will illuminate on the instrument cluster when the vehicle is in **SPORT** or **MY DRIVE MODE**.



NORMAL mode:

In normal mode, the engine and transmission control logic work together to provide regular daily driving performance with fuel efficiency. **NORMAL MODE** is not displayed on the instrument cluster.

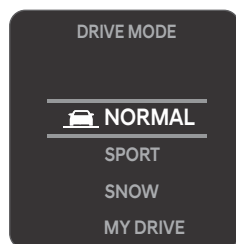

SPORT mode:

Sport mode manages the driving dynamics by automatically adjusting the steering effort, and the engine and transmission control logic for enhanced driving performance. When sport mode is activated, the engine RPM will be a little higher than normal.

SNOW mode:

SNOW mode offers special traction tuning for snow optimizing available traction in adverse conditions. Snow mode adjusts the left and right wheel slip control, engine torque, and shift patterns according to available traction levels.

MY DRIVE mode features:

SMART mode selects the proper driving mode among SMART NORMAL / SMART SPORT and SMART SPORT+ (if equipped) by judging the driver's driving habits (for example, mild or dynamic) from the brake pedal depression or the steering wheel operation.

In MY DRIVE MODE, you can adjust the vehicle performance for each function - Powertrain / Steering / AWD (if equipped).


HOW TO SET MY DRIVE MODE

Go to **Setup > Vehicle > Drive mode > MY DRIVE MODE** in the infotainment system.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



1 Low Tire Pressure Telltale / TPMS Malfunction Indicator.

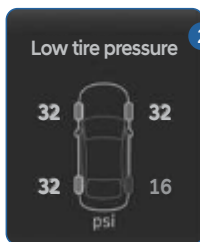

2 Low Tire Pressure Position Telltale and Tire Pressure Telltale (Shown on the cluster display).


LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires are significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, it is recommended that the vehicle be checked by an authorized HYUNDAI dealer.


LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

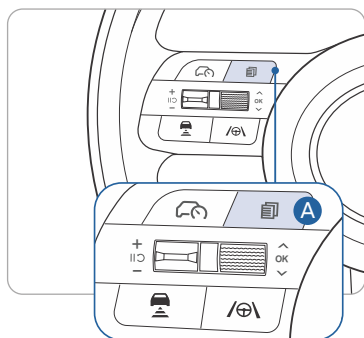


Select the Assist mode  by pressing the MODE **A** button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the cluster display will indicate which tire requires air **B**.


NOTE: Environmental factors can affect the tire pressure. The two main environmental factors are ambient air temperature and elevation. Colder ambient air will reduce tire pressure, while hotter ambient air will increase tire pressure. High elevation may also increase tire pressure.

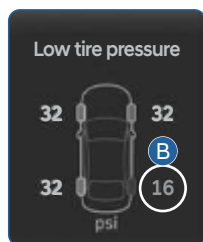


SMART CRUISE CONTROL (SCC) (if equipped)

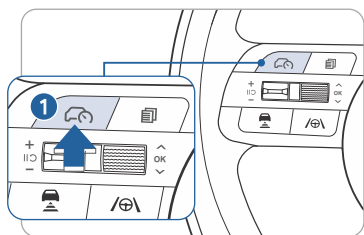

Smart Cruise Control allows you to program the vehicle to help maintain a constant speed without holding the accelerator pedal, while maintaining a consistent distance with the vehicle ahead.

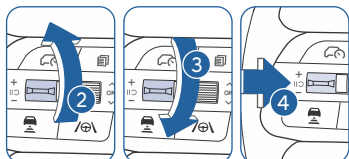

- 1 To turn **On/Off Smart Cruise Control**.
- 2 Toggle switch **UP** to **Set** or **Increase** the cruise control speed.
- 3 Toggle switch **DOWN** to **Set** or **Decrease** the cruise control speed.
- 4 To **Pause** or **Resume** Smart Cruise Control.

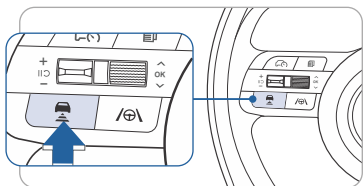

SETTING VEHICLE DISTANCE

SCC assists you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.



Press the Vehicle distance button to set and maintain the vehicle distance without pressing the accelerator or brake pedal.

The vehicle distance will automatically activate previous setting value when you activate SCC.

Each time the button is pressed, the vehicle distance changes as follows:



ADJUSTING THE VEHICLE SPEED

1. Push the **+** switch 2 **UP** to **increase** cruising speed.
2. Push the **-** switch 3 **DOWN** to **decrease** cruising speed.

NOTE: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 5 mph.


TO TEMPORARY CANCEL CRUISE CONTROL / SMART CRUISE CONTROL

Press the **||** button 4 or depress the brake pedal.

NOTE: Standard Cruise Control (CC) Operation is similar but will not adjust the vehicle speed. Refer to your Owner's Manual for CC operation.

LEADING VEHICLE DEPARTURE ALERT

The Leading Vehicle Departure Alert system alerts the driver of the departure of the vehicle in front when the vehicle is stopped.

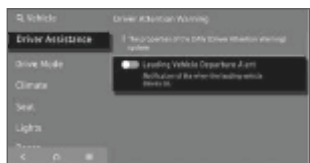

To use the function, with the engine on in the infotainment system select:

Setup > Vehicle > Driver Assistance > Driver Attention Warning > enable Leading Vehicle Departure Alert

When a detected vehicle in front departs from a stop, Leading Vehicle Departure Alert will inform the driver by displaying the "Leading vehicle is driving away" message on the instrument cluster and an audible warning will sound.


NOTE: The system stops operation when the setting is deactivated. However, if the engine is turned off then on again, the system maintains in the previous state.



HIGHWAY DRIVING ASSIST (HDA)



Operating state

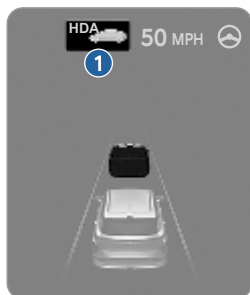

Standby state

Highway Driving Assist helps keep the vehicle between lanes, maintain a distance with the vehicle ahead, and automatically adjusts the speed to the speed limit on the highway.

To enable HDA, with the engine on, select:


Setup > Vehicle > Driver Assistance > Driving Convenience > enable Highway Driving Assist

Highway Driving Assist is available only on **controlled access roads**. HDA operates when:

- Driving on the main road of highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of highways while Lane Following assist and Smart Cruise Control are operating

- 1 HDA indicator - Green: Operating / Gray: Standby / White blink: Accelerator depressed state.
- 2 Set speed
- 3 Lane Following Assist indicator.
- 4 Whether there is a vehicle ahead and the selected headway.
- 5 Whether the lane is detected or not.

DRIVE SELECTOR

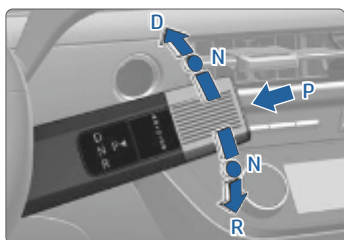

Depress the brake pedal whenever rotating the gear shift dial or shifting to P. The indicator in the instrument cluster displays the shift position when the Engine Start/Stop button is in the ON position.

P (Park)

Always come to a complete stop before shifting into P (Park). To shift from P (Park), you must depress firmly on the brake pedal and make sure your foot is off the accelerator pedal. The gear must be in P (Park) before turning the engine off.

SHIFT-LOCK SYSTEM

For your safety, the automatic transmission has a shift-lock system which prevents shifting the gear from P (Park) or N (Neutral) to R (Reverse) or D (Drive) unless the brake pedal is depressed.


SHIFTING GEARS

To shift the gear from P (Park) or N (Neutral) to R (Reverse) or D (Drive):

1. Depress and hold the brake pedal.
2. Start the engine or place the ignition switch in the ON position.
3. Depress the brake pedal and rotate to R (Reverse) or D (Drive).

CAUTION: The surface of the drive selector can get very hot when exposed to direct sunlight, be cautious when shifting gears.

REAR CROSS-TRAFFIC COLLISION-AVOIDANCE ASSIST (RCCA)

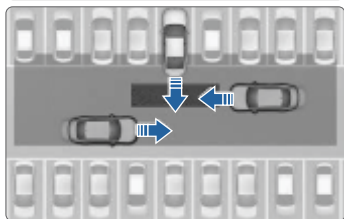


Rear Cross-Traffic Collision-Avoidance Assist is designed to help detect vehicles approaching from the left and right side while your vehicle is reversing, and warn the driver that a collision is imminent with a warning message and an audible warning. Also, braking is assisted to help prevent a collision.

With the engine on, in the infotainment system settings menu select:

Setup > Vehicle > Driver Assistance > Parking Safety > Rear Cross-Traffic Safety

ELECTRONIC PARKING BRAKE (EPB)

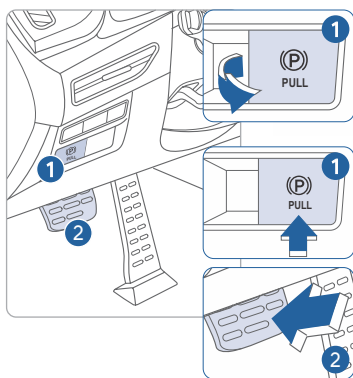

APPLYING

- Depress and hold the brake pedal ②.
- Pull up the EPB switch ①.
- Make sure the Parking Brake warning light **EPB** comes on.

MANUAL RELEASE

- Depress and hold the brake pedal ②.
- Press the EPB switch ①.
- Make sure the Parking Brake warning light **EPB** goes off.

AUTOMATIC RELEASE

With the engine running, depress the brake pedal and shift out of P (Park) or N (Neutral) to R (Reverse) or D (Drive). Make sure the doors, hood, and trunk are closed and the seat belt is fastened.

The EPB will automatically be applied when: depressing the brake pedal, engine off while Auto Hold is enabled, parked on a slope, or with the engine off in park but the vehicle still moves a bit.

NOTE: Please see the owner's manual for additional details.

AUTO HOLD



The Auto Hold feature assists in steep hill areas. It holds the brake until the accelerator pedal is pressed.

Auto Hold maintains the vehicle in a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal.

WHITE
AUTO
HOLD

1. Press the AUTO HOLD switch.

GREEN
AUTO
HOLD

2. Stop the vehicle by pressing the brake pedal. The brakes will remain engaged even if the brake pedal is released.

WHITE
AUTO
HOLD

3. The brakes will release when the accelerator pedal is pressed with transmission in D, R or manual mode.

To cancel the AUTO HOLD operation, press the AUTO HOLD switch again.

[illegible]

Scheduled Maintenance for normal usage	SONATA		
	Smartstream	2.5L GDI	2.5T GDI
Engine Oil and Filter *2 *3	Replace	8,000 or 12 mos.	8,000 or 12 mos.
Fuel Additives *4	Add	8,000 or 12 mos.	8,000 or 12 mos.
Tire Rotation	Perform	8,000 mi.	8,000 mi.
Vacuum Hose	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Air Cleaner Filter	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
	Replace	24,000 or 36 mos.	24,000 or 36 mos.
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	16,000 or 24 mos.	16,000 or 24 mos.
Air Conditioning Refrigerant	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Brake Hoses & Lines	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Drive Shafts & Boots	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Front Brake Disc/Pads, Calipers	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Rear Brake Disc/Pads	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	24,000 or 36 mos.	24,000 or 36 mos.
Suspension Mounting Bolts	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Exhaust Pipe & Muffler	Inspect	8,000 or 12 mos.	8,000 or 12 mos.
Fuel Tank Air Filter	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Vapor Hose & Fuel Filler Cap, Fuel Tank	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Brake Fluid	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Parking Brake	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Fuel Filter	Inspect	16,000 or 24 mos.	16,000 or 24 mos.
Fuel Lines, Fuel Hoses and Connections	Inspect	32,000 or 48 mos.	32,000 or 48 mos.
Drive Belts *1	Inspect, first Subsequent, every	48,000 or 72 mos. 8,000 or 12 mos.	48,000 or 72 mos. 8,000 or 12 mos.
Spark Plugs *5	Replace	96,000 mi.	48,000 mi.
Coolant	Replace, first Subsequent, every	120,000 or 120 mos. 30,000 or 24 mos.	120,000 or 120 mos. 30,000 or 24 mos.
Valve Clearance	Inspect	60,000 or 72 mos.	60,000 or 72 mos.
Automatic Transmission Fluid	No checks or services required for Normal Usage driving.		N/A
Dual Clutch Transmission fluid	Inspect	N/A	32,000 or 48 mos.
Transfer case oil (AWD)	Inspect	32,000 or 48 mos.	N/A
Rear Differential oil (AWD)	Inspect	32,000 or 48 mos.	N/A
Propeller shaft (AWD)	Inspect	16,000 or 24 mos.	N/A

Unit: miles (mi.) / months (mos.)

*1 The drive belt should be replaced when cracks occur or tension is reduced excessively. *2 Requires <API SN PLUS (or above) Full synthetic> grade engine oil. If a lower grade engine oil (mineral type, semi-synthetic, lower grade spec, etc.) is used, replace the engine oil and engine oil filter as indicated in maintenance under severe usage conditions. *3 Never add any additives to the engine oil. Engine oil additives can change the properties of engine oil and may cause serious engine failure. *4 If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized HYUNDAI dealer along with information on how to use them. Do not mix other additives. *5 For your convenience, it can be replaced prior to its interval when you do maintenance of other items.

***See Owner's Manual for details regarding Severe Usage maintenance recommendations.**

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

Roadside Assistance | 1-800-243-7766
Consumer Affairs | 1-800-633-5151
SiriusXM® Radio | 1-800-967-2346
Bluelink® | 1-855-2BLUELINK
| 1-855-225-8354

NP150DV2025
(Rév 05/20/24)
Printing 05/20/24

