
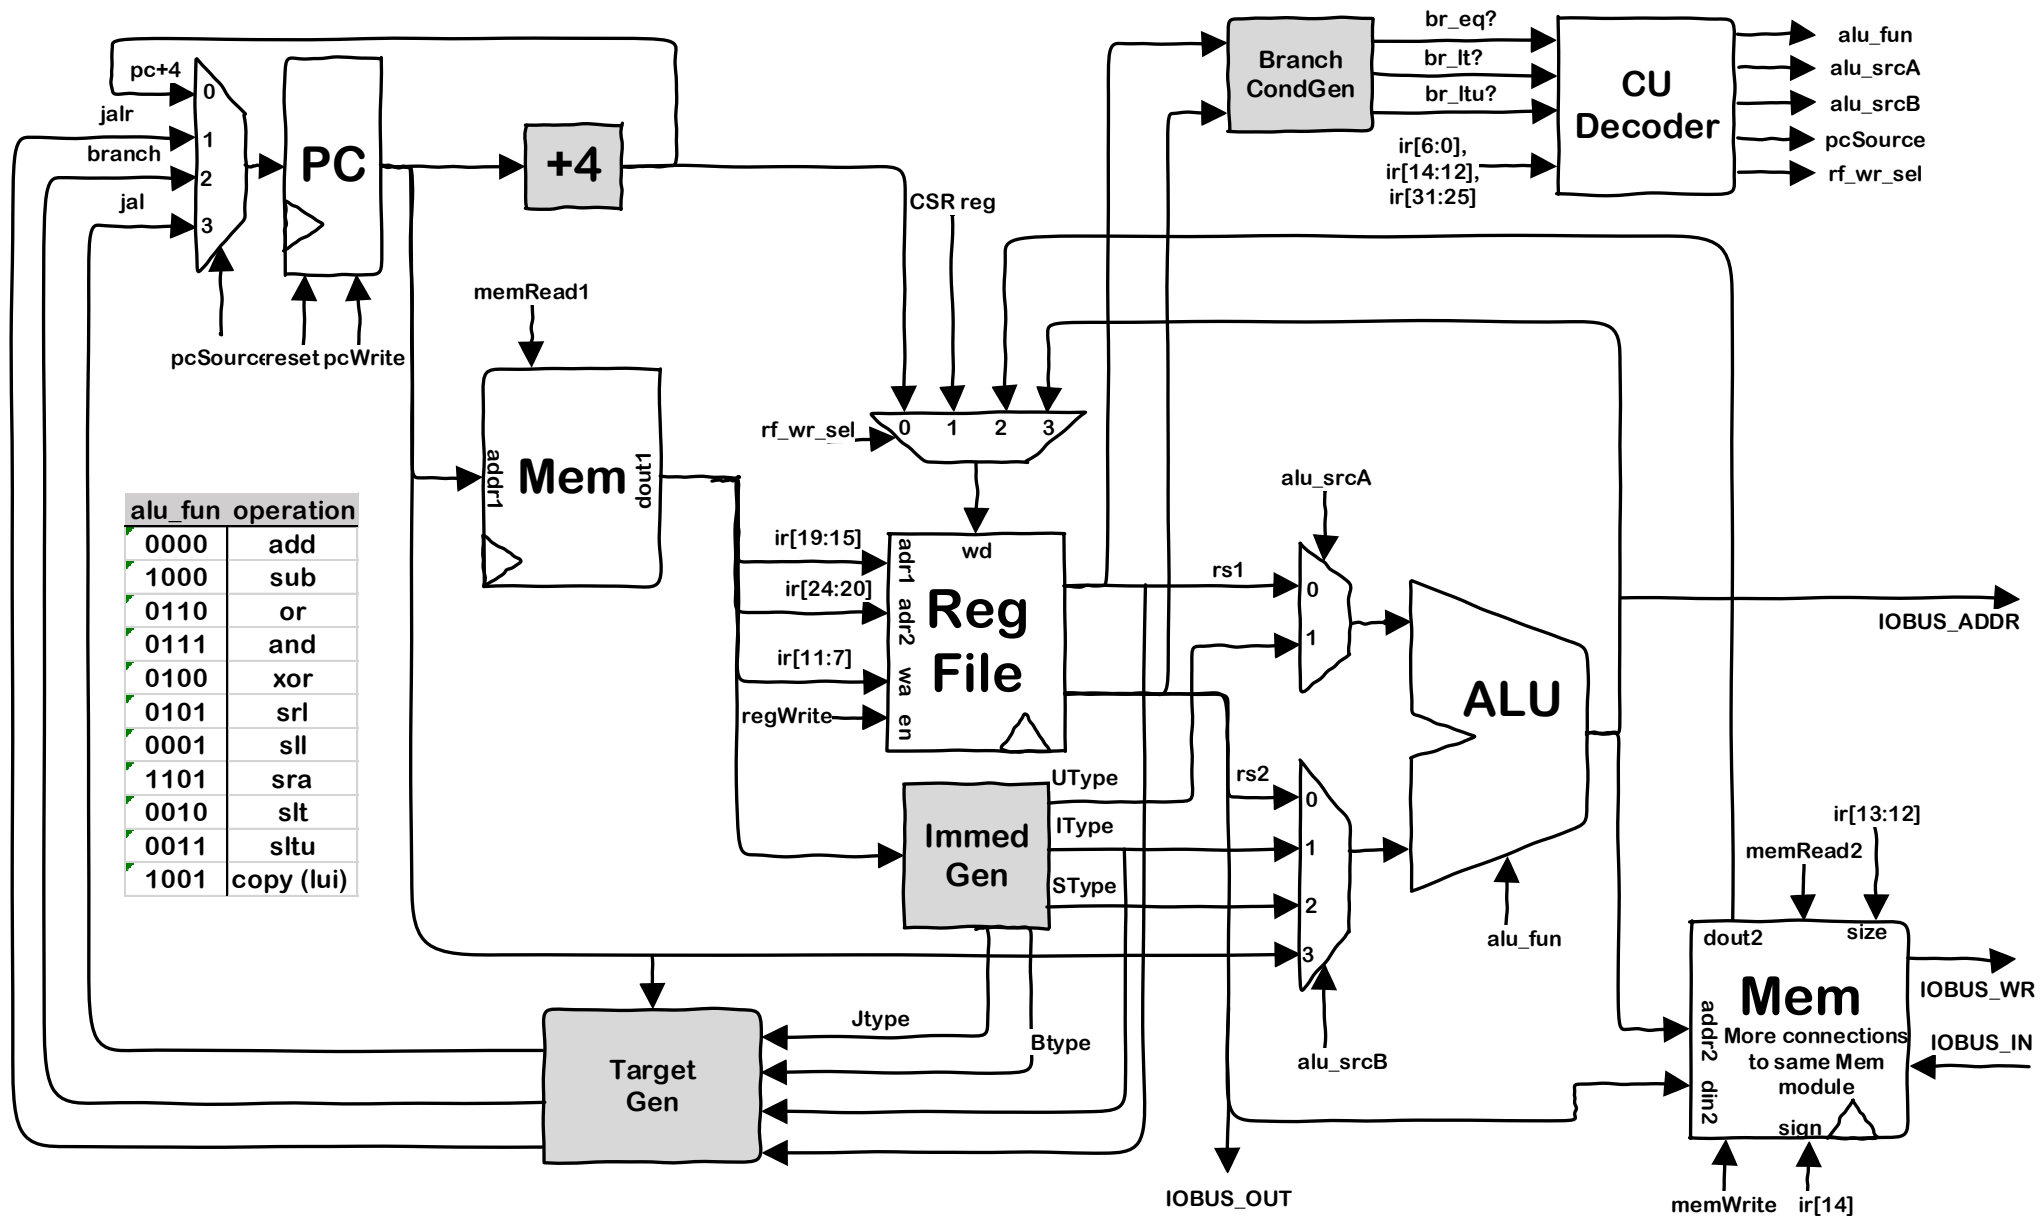


OTTER Architecture v1.6

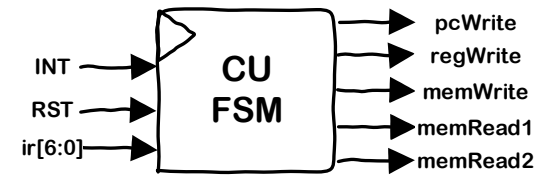

alu_fun	operation
0000	add
1000	sub
0110	or
0111	and
0100	xor
0101	srl
0001	sll
1101	sra
0010	slt
0011	sltu
1001	copy (lui)