User Guide

Error Codes and Troubleshooting SolarEdge Inverters

Version 1.1

January 2026

Table of contents

Document History 1
Revision history 1
About 1
Overview 2
Error codes 2
Warning messages 3
Communication error codes list 4
Residentials inverters error codes list 6
Commercial inverters error codes lists 27
Commercial Three Phase inverters error codes list 27
Commercial Three Phase inverters with synergy technology error codes list 39
Optimized Utility Inverter (TerraMax™) Error Codes List 43
Warning messages list 49

Revision history

Version	Date	Description
1.0	November 2025	Consolidation of existing error codes for SolarEdge devices.
1.1	January 2026	Minor document enhancements.

About

The purpose of this addendum is to provide detailed information regarding the error codes and messages displayed when using SolarEdge inverters across various system types, along with guidance on how to troubleshoot them. This document serves as a supplement to the following versions of the installation guide documents.

Overview

To support efficient troubleshooting, SolarEdge inverters present status and telemetry information through the LCD screen (when available) or the connected platform. This information includes error and warning codes with descriptive messages, each corresponding to a specific system condition.

Error codes

The error code features the following:

- The Error Code consists of four hexadecimal characters, separated by the character x in the middle (see illustration below). For example: 03x85

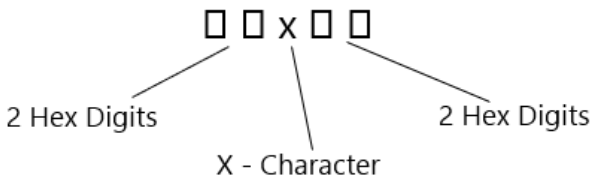

Figure 1: Error Code Structure

- The error code descriptive text consists of one or two lines that provide a basic description of the error, displayed on LCD screens (if available on the specific device).

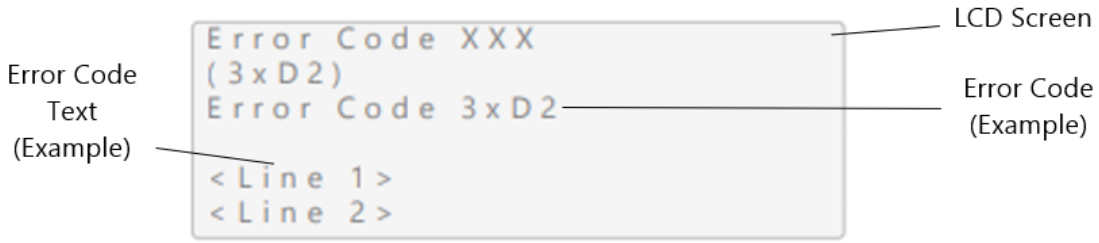

Figure 2: Error Code Displayed on the LCD Screen

- Error codes are also displayed over SolarEdge platform (see Figure 3).

Figure 3: Error Code Displayed on SolarEdge Application

Warning messages

SolarEdge systems issue warning messages that indicate specific operational statuses and system notifications. These messages are displayed on the inverter screen (if available on the specific device).

A warning message is identified by the word “Warning” followed by a number that represents the specific alert scenario. Figure 4 illustrates how a warning message appears on the inverter’s screen.

Figure 4: Warning Message Displayed on the Inverter’s screen

WARNING!

All warnings and cautions in this manual should be adhered to while troubleshooting an error.

Communication error codes list

The table below includes a list of communication-type error codes that exist in SolarEdge inverter systems.

Communication error codes list		
Error Code	**Description**	**Troubleshooting**
3xB	No Country Selected	Select the country
3x2	Software Error	Contact Support
3xA	Phase is unbalanced.	Select Power Control -> Phase Balance -> Disable.
3x11	Arc detection status interrupt.	Refer to Inverter Arc Detection and Interruption
3x6A	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x6A	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • contact support.
3x92	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x93	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • contact support.
3x94	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x95	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • contact support.
3x96	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x97	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x98	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x99	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support

Communication error codes list		
Error Code	Description	Troubleshooting
3x9A	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support
3x9B	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support
3x9C	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x9D	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x9E	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support
3xA7	Country mismatch	Select the country.
3x100	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x10E	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x114	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x125	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Contact SolarEdge support
3x136	Verify the RS 485 connections between the Inverters. Perform Follower detect in Go.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.
3x138	The device is locked, due to either human intervention, or automatically due to one or more safety features.	Need to know why the system locked in the first place. • OFF/ON to Reconnect • Contact support.

Residentials inverters error codes list

The table below includes error codes relevant to residential inverters, covering both Single Phase and Three Phase inverter types.

Residentials inverters error codes list		
Error Code	**Description**	**Troubleshooting**
2x2	Night Mode is an inverter status indicating that the input voltage is below 6 V DC.	Test the DC side and contact support for further guidance.
2x9	Ground current surge.	Check the AC connection to the inverter • Check with the grid operator if a large surge source or irregular load exists near the site. • If the grid does not have problems contact SolarEdge support.
2xA	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.
2xD	Ground current surge.	• Check the AC connection to the inverter • Check with the grid operator if a large surge source or irregular load exists near the site • If the grid does not have problems contact SolarEdge support.

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
2xE	AC voltage surge. If the fault persists:	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
2x2	Night Mode is an inverter status indicating that the input voltage is below 6V DC.	Test the DC side and contact support for further guidance.
2x9	Ground current surge.	• Check the AC connection to the inverter • Check with the grid operator if a large surge source or irregular load exists near the site. • If the grid does not have problems contact SolarEdge support.

Residentials inverters error codes list		
Error Code	**Description**	**Troubleshooting**
2xA	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.
2xD	Ground current surge.	• Check the AC connection to the inverter • Check with the grid operator if a large surge source or irregular load exists near the site. • If the grid does not have problems contact SolarEdge support.
2xE	AC voltage surge.	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
2xF	The SolarEdge system normally eliminates DC overvoltage errors.	• If the fault persists: • Turn OFF the inverter ON/OFF switch. If after five minutes, the LCD panel does not show a low safety voltage (1V per optimizer), check which string is malfunctioning and recheck its connections to the inverter. • Proceed according to Power Optimizer Troubleshooting • Re-commission all inverters in the site, as described in Commissioning the Installation.
2x10	Vref1V or Vref2V > +/-3%	Contact Support RMA
2x11	Over temperature.	• Verify proper inverter clearances. • Make sure the heat-sink fins are clean and unobstructed
2x13	SW error	Contact SolarEdge Support.
2x18	Broken or unconnected temperature sensor.	Contact SolarEdge Support.
2x19	PV solar array is not properly isolated from ground earth.	• Check the PV installation for isolation problems and ground leakage. • Only a certified PV installer must fix the faulty string before connecting it to the inverter. • Refer to www.solaredge.us/files/pdfs/application_note_isolation_fault_ troubleshooting.pdf
2x1A	Contact SolarEdge support.	
2x1C	Contact SolarEdge support.	
2x1D	Line to Neutral voltage is above threshold.	• Check the grid connection. • Check the GND connection. • Check the L1, L2 and Neutral connections. • Verify symmetric load between L1, and L2 • Consult the local grid authority.
2x1E	Line to Neutral voltage is below threshold.	• Check the grid connection. • Check the GND connection. • Check the L1, L2 and Neutral connections. • Verify symmetric load between L1, and L2 • Consult the local grid authority

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
2x1F	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
2x20	Grid voltage is below the country limit.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
2x21	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Residentials inverters error codes list		
Error Code	**Description**	**Troubleshooting**
2x25	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.

Residentials inverters error codes list		
Error Code	**Description**	**Troubleshooting**
2x26	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.
2x28	Grid is down.	When AC grid voltage returns, the inverter will restart after the reconnection time. If the problem persists, consult with the grid operator.
2x29	Grid voltage is below the country limit.	Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
2x2C	No country selected	Select the country
2x2D	Portia - DSP1 comm error (3x2)	Contact Support
2x95	Power train error	Contact Support RMA
2x96	Arc-DSP1	Refer to Inverter Arc Detection and Interruption
2x97	Arc-DSP2	Refer to Inverter Arc Detection and Interruption
2x98	Tx test (previously known as arc test error)	Refer to Inverter Arc Detection and Interruption
2xB5	Relay feedback	Contact Support RMA

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
2xB5	Relay feedback	Contact Support RMA
18x3	Night Mode is an inverter status indicating that the input voltage is below 6V DC.	Test the DC side and contact support for further guidance.
18x19	AC voltage surge	AC voltage surge. If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • erify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
18x1A	AC voltage surge	AC voltage surge. If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • erify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x1B	AC voltage surge	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • erify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
18x1C	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x1D	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x1E	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x1F	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x20	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x21	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x22	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x23	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x24	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x25	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x26	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x27	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x28	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x29	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x2A	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x2B	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x2C	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x2D	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
18x2E	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x2F	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x30	Line voltage is low.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x31	Line voltage is high.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x32	Line voltage is high.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x33	Line voltage is high.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x34	Line voltage is low	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x35	Line voltage is low	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x36	Line voltage is low	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x37	Line voltage is high	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x38	Line voltage is low	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x39	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x3B	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support
18x3C	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support
18x40	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x41	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x42	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x43	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x44	The frequency measured on L2 is Lower than the thresholds	• Reselect country code Verify AC frequency and voltages on site
18x45	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x46	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x47	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x48	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x49	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4A	The frequency measured on L2 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4B	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4C	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4D	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4E	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x4F	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x50	The frequency measured on L2 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x51	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x52	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x53	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x54	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x55	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x56	The frequency measured on L2 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x57	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x58	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x59	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x5A	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x5B	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x5C	The frequency measured on L2 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x5D	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18x60	Grid is down. When AC grid voltage returns the inverter will restart after the reconnection time	If the problem persists, consult with the grid operator.
18x62	Grid is down. When AC grid voltage returns the inverter will restart after the reconnection time.	If the problem persists, consult with the grid operator.
18x6F	Grid voltage is above the country limit	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18x70	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18x71	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xB5	DC/AC in-stage overvoltage	Contact Support RMA related
18xB6	DC/AC out-stage overvoltage	Contact Support RMA related
18xB7	DC/AC in-stage overvoltage	Contact Support RMA related
18xB8	DC/AC out-stage overvoltage	Contact Support RMA related
18xB9	DC/DC in-stage overvoltage	Contact Support RMA related
18xBA	DC/DC out-stage overvoltage	Contact Support RMA related
18xBB	Vin min	
18xBC	Power module voltage imbalance	Contact Support RMA related
18xBD	Power module voltage imbalance	Contact Support RMA related

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18xD8	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xD9	Grid voltage is above the country limit.	
18xDA	Grid voltage is above the country limit.	
18xDB	Grid voltage is below the country limit.	
18xDC	Grid voltage is below the country limit.	
18xDD	Grid voltage is below the country limit.	
18xDE	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xDF	The frequency measured on L2 is Lower than the thresholds	• Reselect country code Verify AC frequency and voltages on site
18xE0	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE1	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE2	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE3	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18xE4	The line to neutral voltage on the AC side of the system is out of range, based on the trip points set by the country code.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xE5	The line to neutral voltage on the AC side of the system is out of range, based on the trip points set by the country code.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xD8	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xD9	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18xDA	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xDB	Grid voltage is below the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xDC	Grid voltage is below the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
18xDD	Grid voltage is below the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values..
18xDE	The frequency measured on L1 is lower than the thresholds Reselect country code	• Reselect country code • Verify AC frequency and voltages on site

Residentials inverters error codes list		
Error Code	Description	Troubleshooting
18xDF	The frequency measured on L2 is Lower than the thresholds Reselect country code	• Reselect country code • Verify AC frequency and voltages on site
18xE0	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE1	The frequency measured on L1 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE2	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE3	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
18xE4	The line to neutral voltage on the AC side of the system is out of range, based on the trip points set by the country code.	Contact SolarEdge Support.
18xE5	The line to neutral voltage on the AC side of the system is out of range, based on the trip points set by the country code.	Contact SolarEdge Support.

Commercial inverters error codes lists

The tables below include a list of error codes relevant to commercial inverters as detailed below:

- Commercial Three Phase inverters error codes list
- Commercial Three Phase inverters with Synergy technology error codes list

Commercial Three Phase inverters error codes list

The following table includes the commercial three phase inverters error codes list.

Commercial Three Phase inverters error codes list		
Error Code	**Description**	**Troubleshooting**
8x3	Night Mode is an inverter status indicating that the input voltage is below 6V DC.	• Test the DC side • Contact support for further guidance
8x10	Communication	Contact SolarEdge Support.
8x11	Unexpected Mode	Contact SolarEdge Support.
8x12	Vf ESR meas	Contact SolarEdge Support.
8x13	Reset\Stop	Contact SolarEdge Support.
8x16	Main Capacitor estimation event	Contact SolarEdge Support.
8x18	RSD Error	Contact SolarEdge Support.
8x19	AC voltage surge. If the fault persists.	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x1A	AC voltage surge.	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
8x1B	AC voltage surge.	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
8x1C	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x1D	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x1E	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values
8x1F	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x20	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values
8x21	Grid voltage is above the country limit.	• Verify that the inverter is set to the correct country. • Turn OFF the inverters in the site and verify AC grid voltage. • If the inverter is located far from the connection point to the grid, use a larger gauge AC wire. • Consult the grid operator. • If permitted by local authorities, change the grid protection values

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x22	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x23	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values
8x24	Grid Voltage is below the country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x25	Grid voltage above country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values
8x26	Grid voltage below country limit.	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values
8x27	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	• Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x29	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	• Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support
8x2A	If the error flags on all three phases at the same time, there is most likely a DC related issue on site.	• Try landing one string at a time to the inverter, as well as swap strings between inverters (if there are multiple inverters), to see if the issue stays with the inverter or moved with the strings. • If the issue moves with the strings, there is likely an issue in the DC strings that need resolving, including but not limited to: Improper installation, improper stringing and design, etc. • Contact Support

Commercial Three Phase inverters error codes list		
Error Code	**Description**	**Troubleshooting**
8x2B	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.

Commercial Three Phase inverters error codes list		
Error Code	**Description**	**Troubleshooting**
8x2C	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.
8x2E	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x2F	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x30	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x31	The frequency measured on L1 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x32	The frequency measured on L2 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x33	The frequency measured on L3 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x34	The SolarEdge system normally eliminates DC overvoltage errors.	If the fault persists: • Turn OFF the inverter ON/OFF switch. If after five minutes, the LCD panel does not show a low safety voltage (1V per optimizer), check which string is malfunctioning and recheck its connections to the inverter. • Proceed according to Power Optimizer Troubleshooting • Re-commission all inverters in the site, as described in Commissioning the Installation.
8x35	The SolarEdge system normally eliminates DC overvoltage errors.	If the fault persists: • Turn OFF the inverter ON/OFF switch. If after five minutes, the LCD panel does not show a low safety voltage (1V per optimizer), check which string is malfunctioning and recheck its connections to the inverter. • Proceed according to Power Optimizer Troubleshooting • Re-commission all inverters in the site, as described in Commissioning the Installation.
8x36	AC grid voltage malfunction.	• When AC voltage returns the inverter should restart after the reconnection time. • If the problem persists, consult with the grid operator.
8x37	The SolarEdge system normally eliminates DC overvoltage errors.	If the fault persists: • Turn OFF the inverter ON/OFF switch. If after five minutes, the LCD panel does not show a low safety voltage (1V per optimizer), check which string is malfunctioning and recheck its connections to the inverter. • Proceed according to Power Optimizer Troubleshooting • Re-commission all inverters in the site, as described in Commissioning the Installation.
8x38	AC grid voltage malfunction. When AC voltage returns the inverter should restart after the reconnection time.	If the problem persists, consult with the grid operator.

Commercial Three Phase inverters error codes list		
Error Code	**Description**	**Troubleshooting**
8x39	Ground faults may occur due to insufficient insulation to the ground.	**WARNING!** *ELECTRICAL SHOCK HAZARD. Do not touch uninsulated wires when the inverter cover is removed.* *RISQUE D'ÉLECTROCUTION, ne touchez pas les fils non isolés lorsque le couvercle de l'onduleur est retiré.* Only a qualified technician should handle this problem, and only after taking proper precautions. 1. Turn the inverter ON/OFF switch to OFF. 2. Wait five minutes for the input capacitors to discharge. 3. Disconnect the AC breaker. 4. Disconnect the DC inputs. 5. Connect each DC string separately, turn the AC and the inverter ON/OFF switch to ON, until the error appears for the faulty string. • Do not connect strings with a grounding fault to the inverter. A certified installer must fix the faulty string before connecting it to the inverter • For further documentation, contact SolarEdge Support.
8x42	Grid Voltage Spike	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x43	Grid Voltage Spike	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.
8x44	Grid Voltage Spike	• Verify that the inverter is set to the correct country • Consult the grid operator. • If permitted by local authorities, change the grid protection values.

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x45	DC Voltage Spike	Contact SolarEdge support.
8x46	DC Voltage Spike	Contact SolarEdge support.
8x47	Over temperature	• Verify proper inverter clearances. • Make sure the heat-sink fins are clean and unobstructed.
8x48	Under temperature	• Make sure the inverter is installed in a location with ambient temperatures within the range specified in the datasheet.
8x4F	Wrong AC connection	Switch between L1 and L2 or L2 and L3 connections
8x52	VDC+/- capacitors banks unbalanced	Contact SolarEdge support.
8x53	VNN error	Contact SolarEdge support.
8x54	Low power	Contact SolarEdge support.
8x56	Power train error	Contact support RMA
8x57	Broken or unconnected temperature sensor.	Contact SolarEdge Support.
8x58	PV solar array is not properly isolated from ground earth.	• Check the PV installation for isolation problems and ground leakage. • Only a certified PV installer must fix the faulty string before connecting it to the inverter. • Refer to www.solaredge.us/files/pdfs/application_note_isolation_fault_troubleshooting.pdf
8x59	Relay Test	Contact SolarEdge support.
8x5B	RCD Test	Contact SolarEdge support.
8x5D	Test Iso Test	Contact SolarEdge support.

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x6A	Power off AC to the inverter	• Verify the specified fan is plugged in, has no damage to the wiring, and has no debris caught in the fan that could prevent it from spinning • Fan 1: External - Usually found on the bottom of the inverter screwed in with a small grate cover • Fan 2: Internal - Usually found on or near one of the boards inside the inverter • Power on AC to the inverter
8x6B	Power off AC to the inverter	• Verify the specified fan is plugged in, has no damage to the wiring, and has no debris caught in the fan that could prevent it from spinning • Fan 1: External - Usually found on the bottom of the inverter screwed in with a small grate cover • Fan 2: Internal - Usually found on or near one of the boards inside the inverter • Power on AC to the inverter
8x75	Capacitor over voltage	Contact Support RMA
8x76	Capacitor over voltage	Contact Support RMA
8x77	Over temperature	• Verify proper inverter clearances. • Make sure the heat-sink fins are clean and unobstructed.
8x78	Over temperature	• Verify proper inverter clearances. • Make sure the heat-sink fins are clean and unobstructed..
8x79	Over temperature	• Verify proper inverter clearances. • Make sure the heat-sink fins are clean and unobstructed.
8x7A	Over current	Contact Support RMA
8x7B	Over current	Contact Support RMA
8x7C	Over current	Contact Support RMA

Commercial Three Phase inverters error codes list		
Error Code	Description	Troubleshooting
8x7D	Driver Short	Contact Support RMA
8x7E	Driver Short	Contact Support RMA
8x7F	Driver Short	Contact Support RMA
8x80	Balancer Fault	Contact Support RMA
8x81	RCD Over Current	Contact Support RMA
8x82	EVENT_NC_TZ	Contact Support RMA
8x83	Global Fault	Contact Support RMA
8x87	The frequency measured on L1 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x88	The frequency measured on L2 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x89	The frequency measured on L3 is higher than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x8A	The frequency measured on L1 is Lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x8B	The frequency measured on L2 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site
8x8C	The frequency measured on L3 is lower than the thresholds	• Reselect country code • Verify AC frequency and voltages on site

Commercial Three Phase inverters with synergy technology error codes list

The table below lists error codes relevant to the commercial three-phase inverters with Synergy technology.

- For troubleshooting details, please contact SolarEdge Support.

Commercial Three Phase inverters with Synergy technology error codes list	
Error Code	Error Code Text
32x0	WAKEUP
32x1	LOCATION_ACQUIRING
32x2	SPD_ENABLED
32x3	BATTERY_CONNECTED
32x4	BATTERY_DISCONNECTED
32x5	PD_EVENT
32x6	PID_ACTIVATED
32x7	PID_DEACTIVATED
32x8	ERROR_PID_DISCHARGE
32x9	ERROR_PID_NO_DC_READ
32xA	DC_SWITCH_TOGGLE
32xB	ERROR_PID_OUT_V_DONT_RISE
32xC	ERROR_PID_NIGHT_OVER_VOLTAGE
32xD	ERROR_PID_NIGHT_UNDER_VOLTAGE
32xE	WAKEUP_NUMBER_OF_RESET
32xF	APP_UPGRADE_FAIL
32x10	ERROR_SPD_DC_LEFT_TRIGGERED
32x11	ERROR_SPD_DC_CENTER_TRIGGERED
32x12	ERROR_SPD_DC_RIGHT_TRIGGERED
32x13	ERROR_SPD_AC_TRIGGERED
32x14	TEMPRATURE_DC_P_LEFT_WARNING_START
32x15	TEMPRATURE_DC_P_CENTER_WARNING_START
32x16	TEMPRATURE_DC_P_RIGHT_WARNING_START
32x17	TEMPRATURE_DC_P_LEFT_CRITICAL_START
32x18	TEMPRATURE_DC_P_CENTER_CRITICAL_START
32x19	TEMPRATURE_DC_P_RIGHT_CRITICAL_START
32x1A	TEMPRATURE_DC_P_LEFT_WARNING_STOP
32x1B	TEMPRATURE_DC_P_CENTER_WARNING_STOP
32x1C	TEMPRATURE_DC_P_RIGHT_WARNING_STOP

Commercial Three Phase inverters with Synergy technology error codes list	
Error Code	Error Code Text
32x1D	TEMPRATURE_DC_N_LEFT_WARNING_START
32x1E	TEMPRATURE_DC_N_CENTER_WARNING_START
32x1F	TEMPRATURE_DC_N_RIGHT_WARNING_START
32x20	TEMPRATURE_DC_N_LEFT_CRITICAL_START
32x21	TEMPRATURE_DC_N_CENTER_CRITICAL_START
32x22	TEMPRATURE_DC_N_RIGHT_CRITICAL_START
32x23	TEMPRATURE_DC_N_LEFT_WARNING_STOP
32x24	TEMPRATURE_DC_N_CENTER_WARNING_STOP
32x25	TEMPRATURE_DC_N_RIGHT_WARNING_STOP
32x26	TEMPRATURE_AC_L1_WARNING_START
32x27	TEMPRATURE_AC_L2_WARNING_START
32x28	TEMPRATURE_AC_L3_WARNING_START
32x29	EVENT_TEMPRATURE_AMB_WARNING_START
32x2A	TEMPRATURE_AC_L1_CRITICAL_START
32x2B	TEMPRATURE_AC_L2_CRITICAL_START
32x2C	TEMPRATURE_AC_L3_CRITICAL_START
32x2D	EVENT_TEMPRATURE_AMB_CRITICAL_START
32x2E	TEMPRATURE_AC_L1_WARNING_STOP
32x2F	TEMPRATURE_AC_L2_WARNING_STOP
32x30	TEMPRATURE_AC_L3_WARNING_STOP
32x31	EVENT_TEMPRATURE_AMB_WARNING_STOP
32x32	EVENT_FAN_LOW_RPM_ERROR
32x33	EVENT_FAN_HIGH_RPM_ERROR
32x34	EVENT_ABS_TEMPRATURE_DC_P_LEFT_CRITICAL_START
32x35	EVENT_ABS_TEMPRATURE_DC_P_CENTER_CRITICAL_START
32x36	EVENT_ABS_TEMPRATURE_DC_P_RIGHT_CRITICAL_START
32x37	EVENT_ABS_TEMPRATURE_DC_P_LEFT_WARNING_STOP
32x38	EVENT_ABS_TEMPRATURE_DC_P_CENTER_WARNING_STOP
32x39	EVENT_ABS_TEMPRATURE_DC_P_RIGHT_WARNING_STOP
32x3A	EVENT_ABS_TEMPRATURE_DC_N_LEFT_CRITICAL_START
32x3B	EVENT_ABS_TEMPRATURE_DC_N_CENTER_CRITICAL_START
32x3C	EVENT_ABS_TEMPRATURE_DC_N_RIGHT_CRITICAL_START
32x3D	EVENT_ABS_TEMPRATURE_DC_N_LEFT_WARNING_STOP
32x3E	EVENT_ABS_TEMPRATURE_DC_N_CENTER_WARNING_STOP

Commercial Three Phase inverters with Synergy technology error codes list	
Error Code	Error Code Text
32x3F	EVENT_ABS_TEMPRATURE_DC_N_RIGHT_WARNING_STOP
32x40	EVENT_ABS_TEMPRATURE_AC_L1_CRITICAL_START
32x41	EVENT_ABS_TEMPRATURE_AC_L2_CRITICAL_START
32x42	EVENT_ABS_TEMPRATURE_AC_L3_CRITICAL_START
32x43	EVENT_ABS_TEMPRATURE_AC_L1_WARNING_STOP
32x44	EVENT_ABS_TEMPRATURE_AC_L2_WARNING_STOP
32x45	EVENT_ABS_TEMPRATURE_AC_L3_WARNING_STOP
32x46	EVENT_SPD_DC_LEFT_ENABLED
32x47	EVENT_SPD_DC_CENTER_ENABLED
32x48	EVENT_SPD_DC_RIGHT_ENABLED
32x49	EVENT_SPD_AC_ENABLED
32x4A	EVENT_TEMPRATURE_DC_P_LEFT_LOCK
32x4B	EVENT_TEMPRATURE_DC_P_CENTER_LOCK
32x4C	EVENT_TEMPRATURE_DC_P_RIGHT_LOCK
32x4D	EVENT_TEMPRATURE_DC_N_LEFT_LOCK
32x4E	EVENT_TEMPRATURE_DC_N_CENTER_LOCK
32x4F	EVENT_TEMPRATURE_DC_N_RIGHT_LOCK
32x50	EVENT_TEMPRATURE_AC_L1_LOCK
32x51	EVENT_TEMPRATURE_AC_L2_LOCK
32x52	EVENT_TEMPRATURE_AC_L3_LOCK
32x53	EVENT_POWER_OFF
32x54	EVENT_WATCHDOG
32x55	EVENT_HARD_FAULT
32x56	EVENT_ASSERT
32x57	EVENT_STACK_OVERFLOW
32x58	EVENT_HEAP_OVERFLOW
32x59	EVENT_APPLICATION_RESET
32x5A	EVENT_TEMPRATURE_DC_P_LEFT_NTC_DISABLE
32x5B	EVENT_TEMPRATURE_DC_P_CENTER_NTC_DISABLE
32x5C	EVENT_TEMPRATURE_DC_P_RIGHT_NTC_DISABLE
32x5D	EVENT_TEMPRATURE_DC_N_LEFT_NTC_DISABLE
32x5E	EVENT_TEMPRATURE_DC_N_CENTER_NTC_DISABLE
32x5F	EVENT_TEMPRATURE_DC_N_RIGHT_NTC_DISABLE
32x60	EVENT_TEMPRATURE_AC_L1_NTC_DISABLE

Commercial Three Phase inverters with Synergy technology error codes list	
Error Code	Error Code Text
32x61	EVENT_TEMPRATURE_AC_L2_NTC_DISABLE
32x62	EVENT_TEMPRATURE_AC_L3_NTC_DISABLE
32x63	EVENT_TEMPRATURE_AMB_NTC_DISABLE

Optimized Utility Inverter (TerraMax™) Error Codes List

This section includes list of error codes relevant to the TerraMax™ inverters:

TerraMax™ Error Codes List		
Error Code	**Description**	**Troubleshooting**
33xD	The inverter fan is not working.	• Check the physical cable connection • Clean the fan • Replace the fan • If issue remains, contact the SolarEdge Support team.
33x10	Internal communication error	Contact SolarEdge Support.
33x14	TerraMax™ PID Night	Contact SolarEdge Support.
33x19	AC voltage surge	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x1A	AC voltage surge.	If the fault persists: • Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

TerraMax™ Error Codes List		
Error Code	Description	Troubleshooting
33x1B	AC voltage surge	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x1C	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x1D	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

TerraMax™ Error Codes List		
Error Code	Description	Troubleshooting
8x1E	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x1F	AC voltage surge	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x20	AC voltage surge	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

TerraMax™ Error Codes List		
Error Code	Description	Troubleshooting
33x21	AC voltage surge	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
8x22	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x23	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf

TerraMax™ Error Codes List		
Error Code	Description	Troubleshooting
33x24	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x25	AC voltage surge	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x26	Line voltage is low	• Check the AC connection to inverter. • Verify that the inverter is set to the correct country. • Check with the grid operator if a large surge source or irregular load exists near the site. • Verify that the output wire size matches the distance between the inverter and the location of the grid connection. • Use a larger gauge wire for the AC output. • Refer to the AC Wiring Application Note at http://www.solaredge.us/files/pdfs/application-note-recommended-wiring.pdf
33x36	Anti islanding	Contact SolarEdge Support
33x38	Anti islanding	Contact SolarEdge Support

TerraMax™ Error Codes List		
Error Code	Description	Troubleshooting
33x56	Power train error	Contact SolarEdge Support
33x58	Isolation Test	Contact SolarEdge Support
33x59	Relay Test	Contact SolarEdge Support
33xB8	Pairing Error	• Re-initiate pairing process. • If the issue persists, contact SolarEdge Support
33xB9	Locked	Contact SolarEdge Support
33X86	The DC SPD is not functioning.	• Validate that the DC SPD board is installed correctly as instructed in the installation guide. • If the issue persists, it is possible that the DC SPD board absorbed an electrical surge. In this case, the board should be replaced. • Upon remediation of the failure, the event 33XDB is received.
33X85	The AC SPD is not functioning.	• Validate that the AC SPD board is installed correctly as instructed in the installation guide. • If the issue persists, it is possible that the AC SPD board absorbed an electrical surge. In this case, the board should be replaced. • Upon remediation of the failure, the event 33XDA is received.
33x9C	The temperature of the Y of the AC terminal block is high/critical. Y = L1 conductor, L2 conductor, L3 conductor	• Validate that the AC lugs are properly installed. • Validate that the torque of the screws in the AC terminal block is set to 35 Nm. • If the issue persists, contact the SolarEdge Support team.
33X47	Inverter temperature is critical, the production has stopped.	• Check that the inverter has been installed according to the instructions in the installation guide. • If the issue persists, contact the SolarEdge Support team.

Warning messages list

The table below lists warning codes that are relevant to the SolarEdge inverters. These messages are displayed on the inverter screen (if available on the specific device).

Warning Messages List		
Warning Message	Warning Cause	Troubleshooting
WARNING 1	Fan Failure	Contact Support
WARNING 2	Fan Failure	Contact Support
WARNING 3	Fan Failure	Contact Support
WARNING 4	Fan Failure	Contact Support
WARNING 5	Raised when trying to access Menus during production.	Turn Toggle Switch to OFF.
WARNING 6	Fan Failure	Contact Support
WARNING 7	Fan Failure	Contact Support