



DAL MEL Group

737 Minimum Equipment List

Document Reference: DAL/MEL/1002

Revision: 50.0.1 Date: 24-Apr-2026

FM.1 Table of Contents

FM.2	Approval Certificate
FM.3	List of Revisions
0	Introduction / Navigation Equipment
11	Placards
21	Air Conditioning
22	Autoflight
23	Communications
24	Electrical Power
25	Equipment / Furnishings
26	Fire Protection
27	Flight Controls
28	Fuel
29	Hydraulic Power
30	Ice and Rain Protection
31	Indicating / Recording System
32	Landing Gear
33	Lights
34	Navigation
35	Oxygen
36	Pneumatic
38	Water / Waste
46	Information Systems

47	Inert Gas System
49	Airborne Auxiliary Power (APU)
52	Doors
53	Fuselage
73	Engine Fuel and Control
74	Engine Ignition
77	Engine Indicating
78	Engine Exhaust
79	Engine Oil
80	Engine Starting

FM.2 Approval Certificate



Approval Certificate

Approval Reference:	Revision 50.0.1 complies with FAA B737 MMEL Revision 62 dated 11/28/ 2022
Approval Date:	11-Mar-2026
Approval Authority:	FAA
Approved by:	Donald M. Gaines, Jr.
Approver Title:	Principal Operations Inspector
Document Title:	737 Minimum Equipment List
Document Reference:	DAL/MEL/1002
Revision:	50.0.1
Revision Date:	24-Apr-2026

FM.3 List of Revisions

Revision Date	Description of Revision	Revision	Publication Date
29-Sep-2022	Initial Aerodocs Publish	40.0.0	08-Dec-2022
29-Sep-2022	Corrected link to TOPP 40-40-05, Appx A	40.0.1	17-Jan-2023
29-Sep-2022	Redirecting hyperlinks to TOPP 40-40-05 Appendix A	40.0.2	22-Feb-2023
15-Mar-2023	Incorporates MMEL Rev 62	41.0.0	15-Mar-2023
15-Mar-2023	Update AMM Hyperlinks to OTIS-X Cloud	41.0.1	30-May-2023
15-Mar-2023	Suspend relief for Anti-Skid	41.0.2	04-Aug-2023
15-Mar-2023	Added DAR per Flight Control and Delta POI to support Canadian ADS-B regulatory compliance.	41.0.3	10-Aug-2023
16-Aug-2023	Audit B737 MEL	42.0.0	16-Aug-2023
01-Nov-2023	Incorporates Internal Company Requests	43.0.0	01-Nov-2023
14-Feb-2024	Incorporates Internal Company Requests	44.0.0	14-Feb-2024
10-Apr-2024	Incorporates Internal Company Requests	45.0.0	10-Apr-2024
21-Aug-2024	Incorporates Internal Company Requests	46.0.0	21-Aug-2024
18-Dec-2024	Incorporates Internal Company Requests	47.0.0	18-Dec-2024
09-Apr-2025	Incorporate Boeing DDG Supplement 58-1 and Internal Company Requests	48.0.0	09-Apr-2025
09-Apr-2025	Suspending relief per Flight Operations and Tech Ops leadership	48.0.1	02-Jun-2025
27-Aug-2025	Incorporate Internal Requests	49.0.0	27-Aug-2025
11-Mar-2026	Incorporate Internal Requests	50.0.0	11-Mar-2026
11-Mar-2026	Suspend relief for 4 items as per Tech Ops Engineering to prohibit single pack operations.	50.0.1	24-Apr-2026

FM.4 Revision Highlights

Section Number	Description of Change
21-00-01 Air Conditioning Packs	21-00-01A/01B/01D/01E Suspended relief as per Engineering to prohibit single pack operations.

FM.5 List of Effective Sections

FM.2 Approval Certificate		
Section	Status N=New R=Revised	Revision
FM.2 Approval Certificate	N	24-Apr-2026

FM.3 List of Revisions		
Section	Status N=New R=Revised	Revision
FM.3 List of Revisions	N	24-Apr-2026

0 Introduction / Navigation Equipment		
Section	Status N=New R=Revised	Revision
0 Introduction / Navigation Equipment		11-Mar-2026
0.1 TOPP 40-40-05, Appendix A - MEL/CDL Instructions		27-Aug-2025
0.2 Navigation Equipment		11-Mar-2026

11 Placards		
Section	Status N=New R=Revised	Revision
11 Placards		27-Aug-2025
11-00-01 Aircraft Placards/Markings Repair Installed		27-Aug-2025

21 Air Conditioning		
Section	Status N=New R=Revised	Revision
21 Air Conditioning	R	24-Apr-2026
21-00-01 Air Conditioning Packs	R	24-Apr-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-02 Pack Airflow / Shut-Off Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-03 Pack Trip Warning Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-05 Pack Ram Air Systems (Ram Air Door)		11-Mar-2026
(O) PROCEDURES		11-Mar-2026

21 Air Conditioning		
Section	Status N=New R=Revised	Revision
(M) PROCEDURES		11-Mar-2026
21-00-07 RAM DOOR FULL OPEN Indicating Lights		27-Aug-2025
21-00-10 Cabin Rate Of Climb Indicator		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-11 Cabin Altitude Warning System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
21-00-12 Cabin Altitude Indicator		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-13 Cabin Differential Pressure Indicator		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-14 Cabin Pressure Control System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-15 Main Outflow Valve Automatic Mode Actuators		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-16 Pressure Relief Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-17 Temperature Indicators		27-Aug-2025
21-00-18 DUCT Overheat Warning Lights		27-Aug-2025
21-00-19 Passenger Cabin Temperature Control System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-21 Flight Deck Temperature Control Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-26 Ground Preconditioned Air Connection Check Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-27 Electrical / Electronic Equipment Cooling Blowers		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		27-Aug-2025

21 Air Conditioning		
Section	Status N=New R=Revised	Revision
21-00-31 Recirculation Fan(s)		27-Aug-2025
21-00-32 Pack Temperature Control System(s) (Electronic Pack / Zone Controller)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
21-00-33 Pack Temperature Control Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-34 Standby Pack Temperature Control Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-35 Trim Air Pressure Regulating And Shutoff Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-36 Trim Air Modulating Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-38 Outflow Valve Position Indicator		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-39 Trim Air Check Valves		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-40 Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-41 Door Area Heater Systems		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-42 Equipment Cooling Low Flow Detector Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-43 Equipment Cooling Air Filter		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
21-00-44 Fan Bypass Check Valves		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
21-00-49 Return Air Grille		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

21 Air Conditioning		
Section	Status N=New R=Revised	Revision
21-00-50 Flight Deck Foot Air Diffusers		27-Aug-2025

22 Autoflight		
Section	Status N=New R=Revised	Revision
22 Autoflight		11-Mar-2026
22-00-00 LLM Category II/III Status (Lower Landing Minimums)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
22-00-01 Auto Flight Systems		27-Aug-2025
22-00-02 Autopilot Disengaged Warning System		11-Mar-2026
22-00-03 Yaw Damper		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
22-00-04 Autothrottle System		27-Aug-2025
22-00-05 Mach Trim System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
22-00-06 Flight and Approach Mode Annunciations		27-Aug-2025
22-00-08 Autothrottle Disengage Lights		27-Aug-2025
22-00-11 Stab Out Of Trim Light		27-Aug-2025
22-00-14 Mode Control Panel Selectors		11-Mar-2026
22-00-15 Mode Control Panel Switches / Paddles		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
22-00-16 Mode Control Panel Windows		27-Aug-2025
22-00-17 Takeoff / Go-Around (TO/GA) Switches		27-Aug-2025
22-00-18 Mode Control Panel Switch Lights		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
22-00-19 Thrust Mode Display		27-Aug-2025

23 Communications		
Section	Status N=New R=Revised	Revision
23 Communications		11-Mar-2026
23-00-01 Flight Deck Speaker System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
23-00-02 Passenger Address System		27-Aug-2025

23 Communications		
Section	Status N=New R=Revised	Revision
(O) PROCEDURES		27-Aug-2025
23-00-03 VHF Communication Systems		27-Aug-2025
23-00-04 Crewmember Interphone System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
23-00-06 Selective Call System (SELCAL)		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
23-00-09 ACARS System		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
23-00-10 Cockpit Voice Recorder System (CVR)		11-Mar-2026
(M) PROCEDURES		11-Mar-2026
23-00-11 HF Communication Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
23-00-12 Emergency Locator Transmitter (ELT)		11-Mar-2026
(M) PROCEDURES		27-Aug-2025
23-00-14 Headset Boom Microphones		27-Aug-2025
23-00-15 Pre-Recorded Passenger Announcement System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
23-00-16 Push-To-Talk (PTT) Switches		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
23-00-17 Flight Deck Hand Microphones (Captain and First Officer)		27-Aug-2025
23-00-18 Satellite Communication System (SATCOM)		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
23-00-19 Alerting System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
23-00-20 Handset Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
23-00-29 Passenger Cabin Medical Communications System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
23-00-30 Low Frequency Underwater Locating Device (LF-ULD)		27-Aug-2025
23-00-97 PBCS Monitored Performance		27-Aug-2025
23-00-98 Long Range Communication System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
23-00-99 In-Flight Entertainment (IFE) System (System Deactivated)		11-Mar-2026
(O) PROCEDURES		27-Aug-2025

23 Communications		
Section	Status N=New R=Revised	Revision
(M) PROCEDURES		11-Mar-2026

24 Electrical Power		
Section	Status N=New R=Revised	Revision
24 Electrical Power		27-Aug-2025
24-00-01 Engine Driven Generator System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
24-00-02 APU Generator System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
24-00-03 Engine Driven Generator DRIVE Lights		27-Aug-2025
24-00-07 Frequency Meter		27-Aug-2025
24-00-08 AC Volts Indication		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
24-00-11 External Power System		27-Aug-2025
24-00-12 GEN OFF BUS Lights		27-Aug-2025
24-00-14 BAT DISCHARGE Light		27-Aug-2025
24-00-15 TR UNIT Light		27-Aug-2025
24-00-16 ELEC Light		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
24-00-17 DC Ammeter Indication		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
24-00-18 DC Volts Indication		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
24-00-19 APU GEN OFF BUS Light		27-Aug-2025

25 Equipment / Furnishings		
Section	Status N=New R=Revised	Revision
25 Equipment / Furnishings		11-Mar-2026
25-00-01 Megaphones		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
25-00-03 Required Flight Attendant Seats		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		27-Aug-2025

25 Equipment / Furnishings		
Section	Status N=New R=Revised	Revision
25-00-05 Cargo Compartment Restraint Components		11-Mar-2026
(M) PROCEDURES		27-Aug-2025
25-00-06 Passenger Seats		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
25-00-09 "Fasten Seat Belts While Seated" Signs or Placards		27-Aug-2025
25-00-10 Non-Essential Equipment and Furnishings (NEF)		27-Aug-2025
25-00-11 Observer's Seat (Including Associated Equipment)		11-Mar-2026
25-00-12 Portable Flashlight Holders / Flashlights		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
25-00-16 Cargo Compartment Lining Panels and Floor Panels		11-Mar-2026
25-00-17 Emergency Medical Equipment		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		27-Aug-2025
25-00-18 Passenger Flotation Equipment		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
25-00-20 Exterior Lavatory Door Ashtrays		27-Aug-2025
25-00-21 Flight Crew Seats		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
25-00-22 Galley / Lavatory Waste Receptacle Access Doors / Covers		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		27-Aug-2025
25-00-24 Overhead Storage Bin(s) / Cabin, Galley And Lavatory Storage Compartment / Closets		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
25-99-01 PED Mount		27-Aug-2025

26 Fire Protection		
Section	Status N=New R=Revised	Revision
26 Fire Protection		27-Aug-2025
26-00-01 Fire Extinguisher Bottle Discharge Lights		27-Aug-2025
26-00-02 Engine Overheat and Fire Detection Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025

26 Fire Protection		
Section	Status N=New R=Revised	Revision
26-00-03 Portable Fire Extinguishers (Passenger Cabin Only)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-04 Wheel Well Fire Detection System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-06 APU Fire Shutoff System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
26-00-07 APU Fire Extinguisher System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
26-00-08 APU Fire Detection System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-09 Engine / APU Fire Extinguisher Test System (EXT TEST) (Squib Test)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-10 Fire Warning Bell		27-Aug-2025
26-00-12 Wing-Body Overheat Detector System (Left)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-13 Wing-Body Overheat Detector System (Right)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-15 Lavatory Fire Extinguisher Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-16 Lavatory Smoke Detection Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-18 Wing-Body Overheat Test System (Flight Deck Test Feature)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-19 Lower Cargo Compartment Fire Detection Systems / Suppression Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
26-00-25 Engine Start Lever Fire Indication Lights		27-Aug-2025

26 Fire Protection		
Section	Status N=New R=Revised	Revision
(O) PROCEDURES		27-Aug-2025

27 Flight Controls		
Section	Status N=New R=Revised	Revision
27 Flight Controls		11-Mar-2026
27-00-04 Leading Edge Flap/Slat Position Light Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
27-00-07 Auto Speed Brake System		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		11-Mar-2026
27-00-08 Flap Load Limiter System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
27-00-10 FEEL DIFF PRESS Light System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
27-00-11 Auto Slat Fail Light System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
27-00-12 Auto Slat Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
27-00-14 Rudder Trim Indicator		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
27-00-16 SPEED BRAKES EXTENDED Light		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
27-00-17 Wheel To Rudder Interconnect System (WTRIS)		27-Aug-2025
27-00-20 Speed Brake Load Alleviation System		11-Mar-2026
(O) PROCEDURES		11-Mar-2026
(M) PROCEDURES		11-Mar-2026
27-00-21 STBY RUD ON Light		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
27-00-23 Elevator Tab Control Springs		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

28 Fuel		
Section	Status N=New R=Revised	Revision
28 Fuel		27-Aug-2025
28-00-01 Fuel Boost Pumps (Main Tanks)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-02 Fuel Boost Pumps (Center Tank)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-03 Fuel Boost Pump Low Pressure Warning Light System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-04 APU Fuel Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-05 Crossfeed VALVE OPEN Light		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-06 Flight Deck Fuel Quantity Indicators (Main Tanks)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-07 Flight Deck Fuel Quantity Indicator (Center Tank)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-08 Fuel Temperature Indicator		27-Aug-2025
28-00-09 Fuel Quantity Totalizer		27-Aug-2025
28-00-10 Pressure Fueling System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-12 Refueling Control Panel Quantity Indicators		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-16 Fuel Measuring Sticks / Dripsticks		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-21 Fuel Quantity Test Switch		27-Aug-2025
28-00-22 SPAR VALVE CLOSED Lights		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
28-00-25 Center Tank Fuel Boost Pump Automatic Shutoff System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
28-00-26 Fuel Shutoff Valve Battery and Charger (Engine Spar Valve)		27-Aug-2025

28 Fuel		
Section	Status N=New R=Revised	Revision
(M) PROCEDURES		27-Aug-2025

29 Hydraulic Power		
Section	Status N=New R=Revised	Revision
29 Hydraulic Power		27-Aug-2025
29-00-02 System B Engine Driven Hydraulic Pump Depressurization Function		27-Aug-2025
29-00-03 System Pressure Indications (A and B)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
29-00-04 System A Pump Low Pressure Indication Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-05 System B Pump Low Pressure Indication Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-07 System A and B Overheat Light System		27-Aug-2025
29-00-09 Hydraulic Quantity Low Level Light System (Standby System)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-10 System A Engine Driven Hydraulic Pump Depressurization Function		27-Aug-2025
29-00-11 System A Quantity Indication System (Flight Deck)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-12 Standby System Low Pressure Light		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-13 Hydraulic Reservoir Pressurization System Sources		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-15 System B Quantity Indication System (Flight Deck)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
29-00-16 Hydraulic Reservoir Air Pressure Indicator (Wheel Well)		27-Aug-2025
29-00-17 Hydraulic Reservoir Quantity Indicator (Wheel Well)		27-Aug-2025
29-00-18 Hydraulic Reservoir Fill System (Wheel Well)		27-Aug-2025

30 Ice and Rain Protection		
Section	Status N=New R=Revised	Revision
30 Ice and Rain Protection		27-Aug-2025
30-00-01 Wing Anti-Ice Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-02 Wing Anti-Ice Valve Position Lights		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-03 Engine and Nose Cowl Anti-Ice Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-04 Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
30-00-05 Pitot / Static Probes Heaters		27-Aug-2025
30-00-06 Vertical Stabilizer Pitot Heater (Elevator and Rudder Feel Systems)		27-Aug-2025
30-00-07 Total Air Temperature Probe Heater		27-Aug-2025
30-00-08 Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s)		27-Aug-2025
30-00-09 PITOT, PITOT / STATIC AND TEMPERATURE PROBE HEATER Lights		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-11 Electrically Heated Windshields		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
30-00-12 Windshield De-Fog System		27-Aug-2025
30-00-13 Windshield Wiper System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-17 Cowl Anti-Ice Lights		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-18 Alpha Vane Heater Light Systems		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-19 Drain Mast Heaters		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
30-00-21 Control Stand Wing Anti-Ice Switches		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
30-00-22 Air Data Probe Heat Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025

31 Indicating / Recording System		
Section	Status N=New R=Revised	Revision
31 Indicating / Recording System		27-Aug-2025
31-00-01 Clocks		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
31-00-02 Flight Data Recorder (FDR) System with Teledyne Digital Flight Data Acquisition Unit (DFDAU)		27-Aug-2025
31-00-07 Aircraft Condition Monitoring System (ACMS)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
31-00-08 Common Display System (CDS)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
31-00-09 Remote Light Sensor System		27-Aug-2025
31-00-10 Speed Reference Selector		27-Aug-2025
31-00-14 TAKEOFF CONFIG Light		27-Aug-2025
(O) PROCEDURES		27-Aug-2025

32 Landing Gear		
Section	Status N=New R=Revised	Revision
32 Landing Gear		27-Aug-2025
32-00-02 Anti-Skid System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-03 Parking Brake Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-04 Parking Brake Light		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-07 Automatic Brake System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-08 Rudder Pedal Nose Wheel Steering System (Rotary Actuator)		27-Aug-2025
32-00-09 Direct Reading Tire Pressure Gauge		27-Aug-2025
32-00-10 Alternate Anti-Skid Valves		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-12 Nose Wheel Steering Switch		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-13 Hydraulic Brake Pressure Indicator		27-Aug-2025

32 Landing Gear		
Section	Status N=New R=Revised	Revision
(M) PROCEDURES		27-Aug-2025
32-00-14 Gear Retraction Braking System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
32-00-16 Landing Gear Actuation System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-17 Proximity Switch Electronics Unit (PSEU) System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-19 Main Landing Gear Uplock Springs		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-20 Landing Gear Frangible Fitting		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-21 Flap Landing Warning Switch, S138		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
32-00-22 Two Position Tail Skid		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

33 Lights		
Section	Status N=New R=Revised	Revision
33 Lights		11-Mar-2026
33-00-01 Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
33-00-02 Cabin Interior Illumination		11-Mar-2026
33-00-03 Passenger Lighted Information Signs and Notice System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-04 Lower Cargo Compartment Light Systems (Fwd / Aft)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-05 High Intensity or Strobe Lights System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-06 Anti-Collision Beacons		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

33 Lights		
Section	Status N=New R=Revised	Revision
33-00-07 Wing Illumination Lights		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-08 Landing Lights		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-09 Taxi Light		27-Aug-2025
33-00-10 Runway Turn Off Lights		27-Aug-2025
33-00-11 Wing Tip Position Lights		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
33-00-14 Exterior Emergency Lighting System		27-Aug-2025
33-00-15 Interior Emergency Exit Lighting System		27-Aug-2025
33-00-16 System Annunciator Lights, Left and Right (Pilot's Light Shield)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
33-00-17 Flight Deck Master Lights Test and Individual Light's Press-to-Test Features		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
33-00-18 Wheel Well Lights		27-Aug-2025
33-00-19 Floor Proximity Emergency Escape Path Marking System		27-Aug-2025
33-00-20 LOGO Light System		27-Aug-2025
33-00-23 Master Dim System		27-Aug-2025
33-00-25 Service Area Light Systems		27-Aug-2025

34 Navigation		
Section	Status N=New R=Revised	Revision
34 Navigation		11-Mar-2026
34-00-00 LLM Category II/III Status (Lower Landing Minimums)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
34-00-10 RNP-10 Status		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
34-00-01 Mach / Airspeed Indications		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-02 Mach / Airspeed Warning Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

34 Navigation		
Section	Status N=New R=Revised	Revision
34-00-03 Standby Altimeter Vibrator		27-Aug-2025
34-00-04 Static Air Temperature Indication		27-Aug-2025
34-00-05 Total Air Temperature Indication		27-Aug-2025
34-00-07 Standby Horizon Indicator (Standby Attitude)		27-Aug-2025
34-00-08 Angle of Attack Indications		27-Aug-2025
34-00-11 Standby Magnetic Compass		11-Mar-2026
34-00-12 Flight Director Systems		11-Mar-2026
34-00-13 Distance Measuring Equipment Systems		27-Aug-2025
34-00-14 Marker Beacon Receiver System		27-Aug-2025
34-00-15 Weather Radar		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
34-00-17 VOR Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-18 ATC Transponder and Automatic Altitude Reporting Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
34-00-20 Radio Altimeter Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
34-00-23 True Airspeed Indication		11-Mar-2026
34-00-25 Altitude Alerting System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-26 Ground Proximity Warning System (GPWS)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
34-00-32 Instrument Transfer Switching System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-35 Inertial Reference Systems (IRS)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-36 Flight Management Computer System (FMCS)		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		11-Mar-2026
34-00-38 Pitch Limit Indication (PLI)		27-Aug-2025
34-00-40 Traffic Collision and Avoidance System (TCAS)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

34 Navigation		
Section	Status N=New R=Revised	Revision
34-00-43 Radio Height Alert		27-Aug-2025
34-00-44 Head-Up Display System (HUD/HGS)		27-Aug-2025
34-00-45 Global Positioning System (GPS)		27-Aug-2025
34-00-48 EFIS Control Panel Map Switches		27-Aug-2025
34-00-49 Right IRS DC Power Supply System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
34-00-54 Integrated Standby Flight Display (ISFD) System		27-Aug-2025
34-00-55 Vertical Situation Display (VSD) System		27-Aug-2025
34-00-56 Global Navigation Satellite Landing System (GLS)		27-Aug-2025

35 Oxygen		
Section	Status N=New R=Revised	Revision
35 Oxygen		11-Mar-2026
35-00-02 Passenger Service Units (PSU's)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
35-00-03 Oxygen Pressure Indicators		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
35-00-04 Portable Oxygen Dispensing Units		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
35-00-05 Passenger Oxygen System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
35-00-06 PBE Smoke Hood Seals (Cockpit And Passenger Cabin)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025

36 Pneumatic		
Section	Status N=New R=Revised	Revision
36 Pneumatic		27-Aug-2025
36-00-01 Manifold Isolation Shutoff Valve		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
36-00-02 Ground Pneumatic Connector Check Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
36-00-03 Precooler Control Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
36-00-04 Pneumatic Pressure Indication Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
36-00-05 Engine Bleed Air Shutoff Valves (PRSOV)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
36-00-06 Dual Bleed Light System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
36-00-08 Engine Bleed Trip Off Lights		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
36-00-09 High Stage Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

38 Water / Waste		
Section	Status N=New R=Revised	Revision
38 Water / Waste		11-Mar-2026
38-00-01 Potable Water Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
38-00-02 Lavatory Waste Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
38-00-03 Vacuum Blower		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

38 Water / Waste		
Section	Status N=New R=Revised	Revision
38-00-05 International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

46 Information Systems		
Section	Status N=New R=Revised	Revision
46 Information Systems		27-Aug-2025
46-00-01 Electronic Flight Bag (EFB) Systems		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
46-00-02 Onboard Network System (ONS)		27-Aug-2025

47 Inert Gas System		
Section	Status N=New R=Revised	Revision
47 Inert Gas System		27-Aug-2025
47-00-01 Nitrogen Generation System (NGS)		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

49 Airborne Auxiliary Power (APU)		
Section	Status N=New R=Revised	Revision
49 Airborne Auxiliary Power (APU)		27-Aug-2025
49-00-01 Auxiliary Power Unit		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
49-00-02 APU Annunciator LOW OIL PRESSURE and OVER SPEED Lights		27-Aug-2025
49-00-04 APU Annunciator MAINT Light		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
49-00-05 APU EGT Indicator		27-Aug-2025
49-00-06 APU Inlet Door		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
49-00-07 APU Bleed Air Valve		27-Aug-2025

49 Airborne Auxiliary Power (APU)		
Section	Status N=New R=Revised	Revision
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
49-00-09 APU Surge Control Valve		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
49-00-12 APU Annunciator FAULT Light		27-Aug-2025
49-00-15 Start Power Unit (SPU)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
49-00-16 Start Converter Unit		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

52 Doors		
Section	Status N=New R=Revised	Revision
52 Doors		11-Mar-2026
52-00-03 Door Warning Light System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-05 Left Main Cabin Door Pressure Stop Fittings		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-06 Lower Cargo Doors Pressure Stop Fittings		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-07 Entry / Service Door Hold-Open Latch Release Lever		27-Aug-2025
52-00-09 Lower Cargo Doors Door Balance Mechanism		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-14 Lower Cargo Doors Hold Open Mechanism / Device		11-Mar-2026
(M) PROCEDURES		27-Aug-2025
52-00-15 Overwing Exit Flight Lock System		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-17 Enhanced Flight Deck Security Door Automatic Locking System		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
52-00-18 Flight Deck Security Door Dead Bolt		27-Aug-2025

52 Doors		
Section	Status N=New R=Revised	Revision
52-00-20 Flight Deck Door Panel Pressure Relief Latches		27-Aug-2025
52-00-22 Flight Deck Door Hold Open Device (e.g. Door Stop, Foot Plunger, etc.)		27-Aug-2025
52-00-25 Cargo Door Exterior Handle Recess/Hinge Spring Assemblies		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

53 Fuselage		
Section	Status N=New R=Revised	Revision
53 Fuselage		27-Aug-2025
53-00-00 RVSM Status		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

73 Engine Fuel and Control		
Section	Status N=New R=Revised	Revision
73 Engine Fuel and Control		27-Aug-2025
73-00-04 Fuel Filter Differential Pressure Warning Systems		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
73-00-05 Fuel Flow Indication Systems		27-Aug-2025
73-00-06 Fuel Used Indicators		27-Aug-2025
73-00-10 Fuel Control ENG VALVE CLOSED Indicating System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
73-00-11 Electronic Engine Control (EEC)		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
73-00-12 Electronic Engine Control (EEC) Alternate Power Supply System		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
73-00-90 EEC BITE - RECENT FAULTS		27-Aug-2025

74 Engine Ignition		
Section	Status N=New R=Revised	Revision
74 Engine Ignition		11-Mar-2026
74-00-01 Ignition Systems		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		11-Mar-2026

77 Engine Indicating		
Section	Status N=New R=Revised	Revision
77 Engine Indicating		27-Aug-2025
77-00-02 N1 Tachometers		27-Aug-2025
77-00-05 Vibration Indicating Systems		27-Aug-2025

78 Engine Exhaust		
Section	Status N=New R=Revised	Revision
78 Engine Exhaust		11-Mar-2026
78-00-01 Thrust Reverser Systems		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		11-Mar-2026
78-00-07 REVERSER Lights (Aft Overhead Panel)		11-Mar-2026
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		11-Mar-2026

79 Engine Oil		
Section	Status N=New R=Revised	Revision
79 Engine Oil		27-Aug-2025
79-00-01 Oil Quantity Indication Systems		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
79-00-02 Oil Filter Bypass Warning Systems		27-Aug-2025
(M) PROCEDURES		27-Aug-2025
79-00-04 Oil Low Pressure Warning Systems		27-Aug-2025

80 Engine Starting		
Section	Status N=New R=Revised	Revision
80 Engine Starting		27-Aug-2025
80-00-01 Starter Valve Open Indications		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
80-00-02 Engine Starter Auto Cutout		27-Aug-2025
80-00-03 Starter Valves		27-Aug-2025
(O) PROCEDURES		27-Aug-2025
(M) PROCEDURES		27-Aug-2025

0 Introduction / Navigation Equipment

- 0.1** **TOPP 40-40-05, Appendix A - MEL/CDL Instructions**
- 0.2** **Navigation Equipment**

0 Introduction / Navigation Equipment

0.1 TOPP 40-40-05, Appendix A - MEL/CDL Instructions

Access the MEL Instructions (TOPP 40-40-05, Appendix A) via the following links:

- If you are viewing this manual in the *Comply365 application*, click [here](#)
- If you are viewing this manual on *Deltanet*, click [here](#)

0.2 Navigation Equipment

RNAV Equipment

The chart below should be used when making MEL compliance or aircraft equipage decisions prior to the dispatch event. Equipment failures that occur after that event will be referenced in the appropriate AOM. The values referenced below are not intended to reduce the minimum values published on any approach chart or reduce any crew qualification restriction.

To use the chart, locate the MEL number for the deferred system. Read the columns to the right of the appropriate MEL number to determine the number of systems required for the type of operation under consideration.

MEL Item on Deferral		Number Required					
		RNAV EN- ROUTE	ADS-B NOTE 5	RNP-4	RNAV SID/ STAR	RNAV Approach	
						RNAV (GPS), RNAV (GNSS), RNP, GPS, NDB, or VOR using LNAV/VNAV	RNAV (RNP) or RNP (AR)
22-00-01:	Autopilot Systems or	1 or	0	1 or	1 or	1	2 and
22-00-15:	MCP – F/D Switches &	1 and	0	1 and	1 and	0	2 and
34-00-12:	Flight Director Systems NOTE 1	1	0	1	1	0	2
22-00-04:	Autothrottle System	0	0	0	0	0	1
22-00-06:	Flight/Approach Mode Annunciations	0	0	0	1 NOTE 2	1 NOTE 2	2
22-00-08:	Autothrottle Disengage Lights	0	0	0	0	0	1
22-00-15:	MCP – LNAV Switch	0	0	0	1	1	1
22-00-15:	MCP – VNAV Switch	0	0	0	0	1	1
22-00-17:	TO/GA Switches	0	0	0	0	1	1
23-00-09A:	ACARS	0	0	1	0	0	0
23-00-18A:	SATCOM	0	0	1	0	0	0
23-00-18C:	SATCOM Data	0	0	1	0	0	0
24-00-01: 24-00-02:	Electrical Power Source (AC) (APU may be used as second source)	2	0	2	2	2	2
34-00-13:	Distance Measuring Equipment	1	1	0	1	1	1
34-00-18B:	ATC Transponder and Automatic Altitude Reporting Systems	0	1	0	0	0	0
34-00-18C:	ADS-B Out Extended Squitter Transmissions	0	1	0	0	0	0
34-00-20:	Radio Altimeter R/T	0	0	0	1 NOTE 3	1	2
34-00-26:	GPWS (Set TERR)	0	0	0	0	0	1
34-00-35:	ADIRU IRS	1	1	1	1	1	2

CONTINUED ON NEXT PAGE

MEL Item on Deferral	Number Required					
	RNAV EN-ROUTE	ADS-B NOTE 5	RNP-4	RNAV SID/STAR	RNAV Approach	
					RNAV (GPS), RNAV (GNSS), RNP, GPS, NDB, or VOR using LNAV/VNAV	RNAV (RNP) or RNP (AR)
34-00-36: FMCS – FMC Alert Lights	1	1	1	1	1	1
34-00-36: FMCS – Computer	1	1	2	1	1	2
34-00-36: FMCS – MCDU	1	1	2	1	1	2
34-00-36: FMCS – Navigation Databases	1 NOTE 4	1	1 NOTE 4	1 NOTE 4	1 NOTE 4	1 NOTE 4
34-00-45: Global Positioning System	0	1	2	0	1	2
34-00-48F: Decision Height/Mins Selector	0	0	0	0	1	1

1. HUD may be used in place of Captain's Flight Director.
2. LNAV Mode Annunciation required.
3. For RNAV off the runway operations, ensure Flight Director selected as master corresponds to the operative Radio Altimeter.
4. Authorized with 1 or 0 if MEL 34-00-36 NAV Database (O) procedure is successfully accomplished.
5. ATC approval for aircraft without ADS-B capability supercedes requirements on this chart.

RNAV

RNAV (area navigation) equipped aircraft are capable of navigation independent of ground-based navigational aids. The 737 FMC logic uses GPS as the primary update to the FMC position. If GPS data becomes unavailable, FMC position will be determined by radio (DME) or inertial (IRS) updating.

A Predictive Receiver Autonomous Integrity Monitoring (PRAIM) analysis is required to **dispatch** to an RNAV approach. When required for dispatch, PRAIM is used by the OCC to predict adequate satellite coverage for RNAV approaches at ETA +/- one hour.

RNAV (GPS), GPS, NDB, VOR Using LNAV / VNAV

A Non-ILS approach based on the use of an on-board FMS database for navigation.

RNAV (RNP)

A non-ILS approach based on the use of a on-board FMS database for navigation containment, monitoring and alerting. The aircraft is the sole source of navigation integrity.

Performance Based Communications and Surveillance (PBCS) Equipment Requirements

MEL Item Deferred		Number Required
23-00-03D	VHF Data Link	1
23-00-03E		
23-00-09A	ACARS	1
23-00-18A	SATCOM System	1
23-00-18C	SATCOM Data Link	1
34-00-36C	FMC	1
34-00-36E	MCDU	1
34-00-45	Global Positioning System (GPS)	1
Note: Failure of any of the above components may result in loss of Data link functionality (CPDLC / ADS-C) beyond VHF range, making the aircraft no PBCS approved. Note: Refer to Airway Manual, Navigation, Airspace, Performance Based Communication and Surveillance (PBCS), PBCS requirements/procedures		

	737 Minimum Equipment List 0 Introduction / Navigation Equipment	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

Low Weather Minimum Requirements

APPROACH CATEGORIES

The following definitions should be used when making MEL compliance or aircraft equipage decisions prior to the dispatch event. Equipment failures that occur after that event will be referenced in the appropriate AOM (ILS Approach Equipment Requirements). The values referenced below are not intended to reduce the minimum values published on any approach chart or reduce any crew qualification restriction.

Basic Turbojet Minimums:

A precision or non-precision approach to no less than RVR 4000 (1200m) or $\frac{3}{4}$ SM (1200m) visibility, and a DH of no less than 200 ft or MDH of no less than 250 ft.

Category I Non-ILS:

A non-precision approach to no less than RVR 2400 (550m) or $\frac{1}{2}$ SM (800m) visibility, and a MDH of no less than 250 ft.

Category I ILS/GLS:

A precision approach to no less than RVR 1800 (550m) or $\frac{1}{2}$ SM (800m) visibility, and a DH of no less than 200 ft.

Category II ILS:

A precision approach to no less than RVR 1200 (350m) and a DH of no less than 100 ft.

A precision approach to no less than RVR 1000 (300m) and a DH of no less than 100 ft. (Autoland or HGS required)

Category III/ILS :

A precision approach to no less than RVR 600 (175m) and a DH of no less than 50 ft.

Note: See Airway Manual for ground-based equipment requirements.

Category III Hybrid - Autoland and AIII (400 RVR):

A precision approach to no less than Touchdown RVR 400 feet and a DH of no less than 30 feet.

EQUIPMENT REQUIREMENTS: HUD AIII MODE USED

To use the chart, locate the MEL number for the system deferred. Read the columns to the right of the appropriate MEL number to determine the number of systems required for the type of approach under consideration.

MEL Item Deferred	Number Required for Approach						
	Basic Turbojet Min.	CAT I Non-ILS	CAT I ILS	SA CAT I ILS	CAT II ILS	SA CAT II ILS	CAT III ILS
22-00-01: Autopilot Systems and / or 34-00-12: Flight Director Systems	0	0	0 and 1 NOTE 1	0 and 1 NOTE 1	0 and 1 NOTE 1	0 and 1 NOTE 1	0 and 1 NOTE 1
22-00-01: Autoland System	0	0	0 NOTE 1	0 NOTE 1	0 NOTE 1	0 NOTE 1	0 NOTE 1
22-00-01: Autopilot System Disengage Switches	0	0	0 NOTE 1	0 NOTE 1	0 NOTE 1	0 NOTE 1	0 NOTE 1
22-00-02: Autopilot Disengaged Warning Lights	0	0	0	0	0	0	0
22-00-02: Autopilot Disengaged Aural Warning (Wailer)	0	0	0	0	0	0	0
22-00-04: Autothrottle System	0	0	0 NOTE 5	0 NOTE 5	0 NOTE 5	0 NOTE 5	0 NOTE 5
22-00-06: Flight and Approach Mode Annun.	0	0	1 NOTE 2	1 NOTE 2	2 NOTE 2	2 NOTE 2	2 NOTE 2
22-00-15: MCP F/D Switches	0	0	1 NOTE 1	1 NOTE 1	1 NOTE 1	1 NOTE 1	1 NOTE 1
22-00-15: MCP VOR/LOC Switch	NOTE 4	NOTE 4	1	1	1	1	1
22-00-17: TO/GA Switches	0	0	1	1	1	1	1 NOTE 3
30-00-13: Windshield Wiper System	0	0	0	2	2	2	2
32-00-02: Anti-Skid System	0	0	0	0	0	0	1
32-00-03: Parking Brake Valve	0	0	0	0	0	0	1
32-00-10: Alternate Anti-Skid Valves	0	0	0	0	0	0	2
34-00-13: DME (34-00-12 grouped above w/ 22-00-01)	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4

CONTINUED ON NEXT PAGE

MEL Item Deferred	Number Required for Approach						
	Basic Turbojet Min.	CAT I Non-ILS	CAT I ILS	SA CAT I ILS	CAT II ILS	SA CAT II ILS	CAT III ILS
34-00-14: Marker Beacon Receiver	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4	NOTE 4
34-00-17: VOR Systems	NOTE 4	NOTE 4	1	1	2	2	2
34-00-17: ILS Systems (LOC & G/S)	NOTE 4	NOTE 4	1	1	2	2	2
34-00-20: Radio Altimeter Systems	0	0	1	2	2	2	2
34-00-44: Head-Up Display (HUD)	NOTE 6	1	1	1	1	1	1
34-00-48: Decision Height/ Minimums Selector	0	0	0	0	2	2	2
34-00-49: Right IRS DC Fail Light	0	0	0	0	1	1	1

HUD AIII MODE USED

1. Flight director, displayed on F/O's PFD, required for cross check.
2. G/S, LOC, TO/GA, and GA mode annunciations required on 1 FMA.
3. Captain's TO/GA switch must operate normally.
4. One or more of these systems may be required as noted on the approach plate.
5. Autoland – Not Authorized
6. SA ILS CAT I Approaches – Not Authorized.

EQUIPMENT REQUIREMENTS: HUD AIII MODE NOT USED

To use the chart, locate the MEL number for the system deferred. Read the columns to the right of the appropriate MEL number to determine the number of systems required for the type of approach under consideration.

MEL Item Deferred		Number Required for Approach						
		Basic Turbojet Min.	CAT I Non-ILS	CAT I ILS	CAT II ILS	SA CAT II ILS	CAT III ILS	CAT I GLS
22-00-01:	Autopilot Systems & / or	NOTE 1	1 and	1 NOTE 2 or	2 and	2 and	2 and	1 or
34-00-12:	Flight Director Systems		0	1	2 NOTE 2	2 NOTE 2	2 NOTE 2	1
22-00-01:	Autoland System	0	0	0	1	1	1	0
22-00-01D:	Autopilot System Disengage Switches	NOTE 1	1	1 NOTE 3	2	2	2	1 NOTE 3
22-00-01E:	Autopilot System Disengage Switches	NOTE 1	1	2	2	2	2	2
22-00-02:	Autopilot Disengaged Warning Lights	NOTE 1	2	0 NOTE 3	2	2	2	0 NOTE 3
22-00-02:	Autopilot Disengaged Aural Warn (Wailer)	NOTE 1	1	0 NOTE 3	1	1	1	0 NOTE 3
22-00-04:	Autothrottle System	0	0	0	1	1	1	0
22-00-06:	Flight and Approach Mode Annunc.	NOTE 1	1 NOTE 10	1 NOTE 10	2 NOTE 4	2 NOTE 4	2 NOTE 4	1 NOTE 10
22-00-08:	Autothrottle Disengage Lights	0	0	0	2	2	2	0
22-00-11:	Stab Out Of Trim Light	0	0	0 NOTE 3	1	1	1	0 NOTE 3
22-00-15:	MCP A/P CMD Engage Switches	NOTE 1	0	1 NOTE 3	2	2	2	1 NOTE 3
22-00-15:	MCP Autothrottle ARM Switch	0	0	0	1	1	1	0
22-00-15:	MCP A/T SPEED Switch	0	0	0	1	1	1	0
22-00-15:	MCP F/D Switches	0	0	1	2	2	2	1
22-00-15:	MCP APP Switch	NOTE 1	1	1	1	1	1	1
22-00-15:	MCP VOR/LOC Switches	NOTE 6	NOTE 6	1	1	1	1	1

CONTINUED ON NEXT PAGE

MEL Item Deferred	Number Required for Approach						
	Basic Turbojet Min.	CAT I Non-ILS	CAT I ILS	CAT II ILS	SA CAT II ILS	CAT III ILS	CAT I GLS
22-00-17: TO/GA Switches	0	0	1	1	1	1 NOTE 5	1
30-00-13: Windshield Wiper System	0	0	0	2	2	2	0
32-00-02: Anti-Skid System	0	0	0	1	1	1	0
32-00-03: Parking Brake Valve	0	0	0	1	1	1	0
32-00-10: Alternate Anti-Skid Valves	0	0	0	2	2	2	0
34-00-13: DME(34-00-12 grouped above w/ 22-00-01)	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6
34-00-14: Marker Beacon Receiver	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6	NOTE 6
34-00-17: VOR Systems	NOTE 6	NOTE 6	1	2	2	2	1
34-00-17: ILS Systems (LOC & G/S)	NOTE 6	NOTE 6	1	2	2	2	0
34-00-20: Radio Altimeter R/T	0	0	1	2	2	2	1
34-00-44: Head-Up Display (HUD)	NOTE 7	0	0	0	0	0	0
34-00-45: Global Positioning System (GPS)	0	0	0	0	0	0	2
34-00-48: Decision Height/ Minimums Selector	0	0	0	2	2	2	2
34-00-49: Right IRS DC Fail Light	0	0	0	1	1	1	0
34-00-56: Global Navigation Satellite Landing System (GLS)	0	0	0	0	0	0	2

HUD AIII NOT USED

1. Both the autopilot and flight director will be utilized for all ILS approaches when the reported weather is below 4,000 RVR or 3/4 mile.
2. Two (2) Autopilots needed for autoland.
3. At least one Flight Director must operate normally.
4. G/S, LOC, FLARE, TO/GA, and GA mode annunciations required on 1 FMA.
5. Captain's TO/GA switch must operate normally.
6. One or more of these systems may be required as noted on the approach plate.
7. SA ILS CAT I Approaches – Not Authorized.
8. Autoland and autothrottle systems must be operative for CAT II when RVR is less than 1200 but not less than 1000.
9. HUD required for SA CAT I approach.

CONTINUED ON NEXT PAGE

10. G/S, LOC,TO/GA, and G/A Mode annunciations required on 1 FMA.

EQUIPMENT REQUIREMENTS: CAT III HYBRID APPROACH-AUTOLAND AND HUD OPERATIVE AND USED FOR THE APPROACH:

To use the chart, locate the MEL number for the system deferred. Read the columns to the right of the appropriate MEL number to determine the number of systems required for the type of approach required under consideration.

MEL Item Deferred		Number Required for Approach
		CAT III ILS
22-00-01:	Autopilot Systems and	2 and
34-00-12:	Flight Director	2
22-00-01:	Autoland System	1
22-00-01:	Control Wheel Autopilot System Disengage Switches	2
22-00-02:	Autopilot Disengage Warning Lights	2
22-00-02:	Autopilot Disengage Warning System - Aural Warning (Wailer)	1
22-00-04:	Autothrottle System	1
22-00-06:	Flight and Approach Mode Annunciations:	2
22-00-08:	Autothrottle Disengage Lights	2
22-00-11:	STAB OUT OF TRIM Light	1
22-00-15:	MCP A/P CMD Engage Switches	2
22-00-15:	MCP A/T SPEED Switch	1
22-00-15:	MCP F/D Switches	2
22-00-15:	MCP APP Switch	1
22-00-17:	TO/GA Switches	1 NOTE 2
30-00-13:	Windshield Wiper System	2
32-00-02:	Anti-Skid System	1
32-00-03:	Parking Brake Valve	1
32-00-10:	Alternate Anti-Skid Valves	2
34-00-12	Flight Director Systems	2
34-00-13:	DME (34-00-12 grouped above with 22-00-01)	NOTE 1
34-00-14:	Marker Beacon Receiver	NOTE 1
34-00-17:	VOR Systems	2
34-00-17:	ILS Systems (LOC and G/S)	2
34-00-20:	Radio Altimeter R/T	2
34-00-44:	Heads-Up Display (HUD)	1

CONTINUED ON NEXT PAGE

		Number Required for Approach
34-00-48:	Decision Height / Minimums Selector	2
34-00-49:	Right IRS DC FAIL Light	1

CAT III HYBRID APPROACH

1. One or more of these systems may be required as noted on the approach plate.
2. Captain's TO/GA switch must operate normally.

11 Placards

Table of Contents

11-00-01	Aircraft Placards/Markings Repair Installed
11-00-01	Aircraft Placards/Markings Repair Installed

11-00-01 Aircraft Placards/Markings Repair Installed

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	-	-	-	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION	REMARKS OR EXCEPTIONS					
11-00-01	Aircraft Placards/Markings Repair Installed "Contact MCC" Administrative Control Item	Item may be used to track repair provided: 1. MCC determines that placard is FAA required, 2. Install repair per TOPP 40-40-05 , 3. Enter in log book repair is applied per TOPP 40-40-05 , and 4. Enter in log book that repair is deferred per MEL 11-00-01. <i>Note: If MCC determines that placard is not FAA required, use TOPP 40-40-08 (NEF).</i>					

MEL ITEM	TAB LOCATION	PLACARD TEXT
11-00-01	Logbook	_____ REPAIRED PER TOPP 40-40-05

21 Air Conditioning

Table of Contents

21-00-01	Air Conditioning Packs
21-00-01A	Air Conditioning Packs - Left Pack
21-00-01B	Air Conditioning Packs - Right Pack
21-00-01C	Air Conditioning Packs - Both Packs
21-00-01D	Air Conditioning Packs - Left Pack
21-00-01E	Air Conditioning Packs - Right Pack
21-00-01F	Air Conditioning Packs - Both Packs
21-00-02	Pack Airflow / Shut-Off Valves
	PACK AIRFLOW / SHUT-OFF VALVES
21-00-02A	Pack Airflow / Shut-Off Valves
21-00-02B	Pack Airflow / Shut-Off Valves
21-00-02C	High Flow Mode
21-00-02D	APU High Flow Mode
21-00-02E	Electronic Flow Control
21-00-02F	Pack Flow Sensors
21-00-02G	Pack Flow Sensors
21-00-02H	Pack Inlet Pressure Sensors
21-00-02I	Pack Inlet Pressure Sensors
21-00-03	Pack Trip Warning Systems
21-00-03	Pack Trip Warning Systems
21-00-05	Pack Ram Air Systems (Ram Air Door)
21-00-05	Pack Ram Air Systems (Ram Air Door)
21-00-07	RAM DOOR FULL OPEN Indicating Lights
21-00-07	RAM DOOR FULL OPEN Indicating Lights
21-00-10	Cabin Rate Of Climb Indicator
21-00-10A	Cabin Rate of Climb Indicator
21-00-10B	Cabin Rate of Climb Indicator
21-00-10C	Cabin Rate of Climb Indicator
21-00-10D	Cabin Rate of Climb Indicator
21-00-11	Cabin Altitude Warning System
21-00-11A	Cabin Altitude Warning System
21-00-11B	CABIN ALTITUDE Light
21-00-12	Cabin Altitude Indicator
21-00-12A	Cabin Altitude Indicator
21-00-12B	Cabin Altitude Indicator
21-00-12C	Cabin Altitude Indicator
21-00-12D	Cabin Altitude Indicator
21-00-13	Cabin Differential Pressure Indicator
21-00-13A	Cabin Differential Pressure Indicator
21-00-13B	Cabin Differential Pressure Indicator
21-00-13C	Cabin Differential Pressure Indicator
21-00-13D	Cabin Differential Pressure Indicator
21-00-14	Cabin Pressure Control System
	CABIN PRESSURE CONTROL SYSTEM
21-00-14A	Automatic Modes
21-00-14B	Automatic Modes

21-00-14C Automatic Modes
 21-00-14D Automatic Modes
 21-00-14E Manual Mode
 21-00-14F Manual Mode
 21-00-14G Manual Mode

21-00-15 Main Outflow Valve Automatic Mode Actuators

21-00-15A Main Outflow Valve Automatic Mode Actuators
 21-00-15B Main Outflow Valve Automatic Mode Actuators
 21-00-15C Main Outflow Valve Automatic Mode Actuators
 21-00-15D Main Outflow Valve Automatic Mode Actuators
 21-00-15E Main Outflow Valve Manual Mode Actuator
 21-00-15F Main Outflow Valve Manual Mode Actuator
 21-00-15G Main Outflow Valve Manual Mode Actuator

21-00-16 Pressure Relief Valves

21-00-16A Pressure Relief Valves
 21-00-16B Pressure Relief Valves
 21-00-16C Pressure Relief Valves
 21-00-16D Pressure Relief Valves

21-00-17 Temperature Indicators

TEMPERATURE INDICATORS
 21-00-17A Supply Duct
 21-00-17B Pass Cabin
 21-00-17C Pack

21-00-18 DUCT Overheat Warning Lights

DUCT Overheat Warning Lights
 21-00-18 ZONE TEMP

21-00-19 Passenger Cabin Temperature Control System

PASSENGER CABIN TEMPERATURE CONTROL SYSTEM
 21-00-19A FWD / AFT
 21-00-19B FWD / AFT
 21-00-19C FWD / AFT
 21-00-19D FWD / AFT
 21-00-19E FWD / AFT

21-00-21 Flight Deck Temperature Control Systems

FLIGHT DECK TEMPERATURE CONTROL SYSTEMS
 21-00-21A Primary / Back-up Modes
 21-00-21B Primary / Back-up Modes
 21-00-21C Primary / Back-up Modes
 21-00-21D Primary / Back-up Modes
 21-00-21E Primary / Back-up Modes

21-00-26 Ground Preconditioned Air Connection Check Valve

21-00-26A Ground Preconditioned Air Connection Check Valve
 21-00-26B Ground Preconditioned Air Connection Check Valve
 21-00-26C Ground Preconditioned Air Connection Check Valve
 21-00-26D Ground Preconditioned Air Connection Check Valve

21-00-27 Electrical / Electronic Equipment Cooling Blowers

ELECTRICAL / ELECTRONIC EQUIPMENT COOLING BLOWERS
 21-00-27 CDS (Common Display System)

21-00-31 Recirculation Fan(s)

21-00-31A Recirculation Fan(s)

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

21-00-31B Recirculation Fan(s)
21-00-31C Recirculation Fan(s)

21-00-32 Pack Temperature Control System(s) (Electronic Pack / Zone Controller)

21-00-32 Pack Temperature Control System(s) (Electronic Pack / Zone Controller or Pack Flow Controller)

21-00-33 Pack Temperature Control Valves

21-00-33A Pack Temperature Control Valves (Inoperative Closed)
21-00-33B Pack Temperature Control Valves (Deactivated Closed)
21-00-33C Pack Temperature Control Valves (Associated Pack Not Used)

21-00-34 Standby Pack Temperature Control Valves

21-00-34A Standby Pack Temperature Control Valves
21-00-34B Standby Pack Temperature Control Valves
21-00-34C Standby Pack Temperature Control Valves

21-00-35 Trim Air Pressure Regulating And Shutoff Valve

21-00-35A Trim Air Pressure Regulating and Shutoff Valve
21-00-35B Trim Air Pressure Regulating and Shutoff Valve

21-00-36 Trim Air Modulating Valves

21-00-36A Trim Air Modulating Valves
21-00-36B Trim Air Modulating Valves
21-00-36C Trim Air Modulating Valves
21-00-36D Trim Air Modulating Valves

21-00-38 Outflow Valve Position Indicator

21-00-38 Outflow Valve Position Indicator

21-00-39 Trim Air Check Valves

21-00-39 Trim Air Check Valves

21-00-40 Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve

21-00-40A Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve
21-00-40B Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve
21-00-40C Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve
21-00-40D Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve

21-00-41 Door Area Heater Systems

21-00-41A Entry Door Area and Overwing Emergency Exit Hatch Area Heater Systems
21-00-41B Mid-Exit Door Area Heater System

21-00-42 Equipment Cooling Low Flow Detector Systems

21-00-42 Equipment Cooling Low Flow Detector Systems

21-00-43 Equipment Cooling Air Filter

21-00-43 Equipment Cooling Air Filter

21-00-44 Fan Bypass Check Valves

21-00-44A Fan Bypass Check Valves
21-00-44B Fan Bypass Check Valves
21-00-44C Fan Bypass Check Valves

21-00-49 Return Air Grille

21-00-49 Return Air Grille

21-00-50 Flight Deck Foot Air Diffusers

21-00-50 Flight Deck Foot Air Diffusers

21-00-01 Air Conditioning Packs

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD		REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
THIS MEL ITEM IS NOT AUTHORIZED FOR USE					
21-00-01A	Air Conditioning Packs - Left Pack (B737-800) "DISP.APPR.REQ'D"	Y	1	0	C (O) Left Pack may be inoperative provided: 1. Flight altitude remains at or below FL 250, and 2. Right Pack is operative. <i>Note: If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the operating pack to increase air flow when the flaps are extended for takeoff and landing.</i> Theater Restrictions May Apply
THIS MEL ITEM IS NOT AUTHORIZED FOR USE					
21-00-01B	Air Conditioning Packs - Right Pack (B737-800) "DISP.APPR.REQ'D"	Y	1	0	C (O) Right Pack may be inoperative provided: 1. Flight altitude remains at or below FL 250, and 2. Left Pack is operative. <i>Note: If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the operating pack to increase air flow when the flaps are extended for takeoff and landing.</i> Theater Restrictions May Apply
21-00-01C	Air Conditioning Packs - Both Packs (B737-800) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) Both Packs may be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Recirculation fan(s) operates normally, 3. Both E/E equipment cooling exhaust fans operate normally, and 4. Cargo compartments remain empty, or are verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions). Theater Restrictions May Apply

CONTINUED ON NEXT PAGE

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH		REPAIR CATEGORY		REMARKS OR EXCEPTIONS	
ITEM NO.	NAME/DESCRIPTION	FLIGHT CREW MAY PLACARD	N	1	0	C	REMARKS OR EXCEPTIONS
THIS MEL ITEM IS NOT AUTHORIZED FOR USE							
21-00-01D	Air Conditioning Packs - Left Pack (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C		(O) (M) Except for Extended Operations (ETOPS), Left Pack may be inoperative provided: - Flight altitude remains at or below FL 250, - Right Pack is operative, - Forward cargo heat duct is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C). Note: <i>If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the operating pack to increase air flow when the flaps are extended for takeoff and landing.</i> Theater Restrictions May Apply
THIS MEL ITEM IS NOT AUTHORIZED FOR USE							
21-00-01E	Air Conditioning Packs - Right Pack (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C		(O) (M) Except for Extended Operations (ETOPS), Right Pack may be inoperative provided: - Flight altitude remains at or below FL 250, - Left Pack is operative, - Forward cargo heat duct is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C). Note: <i>If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the operating pack to increase air flow when the flaps are extended for takeoff and landing.</i> Theater Restrictions May Apply
21-00-01F	Air Conditioning Packs - Both Packs (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C		(O) (M) Except for Extended Operations (ETOPS), Both Packs may be inoperative provided: - Flight is conducted in an unpressurized configuration, - Recirculation fans operate normally, - Both E/E equipment cooling exhaust fans operate normally, - Cargo compartments remain empty, or are verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), - Forward cargo heat duct is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C). Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-01A	Associated Pack Switch	Left Air Conditioning Pack INOP
21-00-01B	Associated Pack Switch	Right Air Conditioning Pack INOP
21-00-01C	Associated Pack Switch	Both Air Conditioning Pack(s) INOP
21-00-01D	Associated Pack Switch	Left Air Conditioning Pack INOP
21-00-01E	Associated Pack Switch(es)	Right Air Conditioning Pack INOP
21-00-01F	Associated Pack Switch(es)	Both Air Conditioning Pack(s) INOP

(O) PROCEDURES

21-00-01A

Left Air Conditioning Pack Inoperative (B737-800 ONLY).

Note: *If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the right pack to increase air flow when the flaps are extended for takeoff and landing.*

1. Limit altitude to FL 250.
2. Position the left PACK switch to OFF.
3. Perform normal engine start.
4. If APU is unavailable and after both engines running, ISOLATION VALVE switch to CLOSED. End of procedure.
5. If APU is available, use to supply bleed air to the right pack for increased airflow during ground operations, takeoff, and below 10,000' AFE during approach and landing. The following procedure will apply:

Note: *Because this is not a performance limited takeoff, bleeds off numbers are not required. Use the TDU or other power setting as shown on the WDR.*

CAUTION

AFTER DE-ICING, DUE TO DE-ICING FLUID RUNOFF, USE OF THE APU BLEED DURING TAKEOFF MAY CAUSE SMOKE AND/OR FUMES IN THE AIRCRAFT. WAIT APPROXIMATELY 1 MINUTE AFTER DEICING IS COMPLETE TO RESTORE BLEED AIR FOR PACK OPERATION.

Note: *Configure as follows after engine start unless wing anti-ice is needed for taxi.*

Note: *If wing anti-ice is required for taxi, configure as follows just PRIOR to takeoff.*

A. After both engines are running and prior to takeoff:

- i. R PACK switch to AUTO.
- ii. ISOLATION VALVE switch to OPEN.
- iii. L PACK switch remains OFF.
- iv. Engine No. 1 BLEED air switch to OFF.
- v. APU BLEED air switch to ON.
- vi. Engine No. 2 BLEED air switch to OFF.
- vii. WING ANTI-ICE switch to OFF.

B. AFTER takeoff and prior to 17,000' MSL:

Note: *The WING ANTI-ICE switch must remain OFF until the engine BLEED air switches are repositioned to ON.*

- i. APU BLEED air switch to OFF.
- ii. Engine No. 2 BLEED air switch to ON.
- iii. R PACK switch remains AUTO.
- iv. ISOLATION VALVE switch to CLOSE.
- v. L PACK switch remains OFF.
- vi. Engine No. 1 BLEED air switch to ON.
- vii. If no longer needed, shutdown APU.

Note: *A CHECK AIR COND PANEL message may be generated 2 minutes after takeoff.*

C. When below 17,000' MSL and prior to landing, unless wing ANTI ICE is required:

- i. Start APU and wait two minutes, then:
- ii. WING ANTI-ICE switch to OFF
- iii. Engine No. 1 BLEED to OFF
- iv. APU BLEED air switch to ON.
- v. Engine No. 2 BLEED to OFF
- vi. ISOLATION VALVE switch to OPEN
- vii. Right Pack switch remains in AUTO
- viii. Left Pack switch remains OFF

CAUTION ENSURE THAT THE CABIN ALTITUDE IS STABLE OR DESCENDING. IF UNABLE TO MAINTAIN CABIN PRESSURIZATION, REVERT BACK TO ENGINE BLEED AIR FOR PACK OPERATION.

21-00-01A	AIR CONDITIONING PACKS – LEFT PACK
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 270 lbs. per hour of APU usage.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-01B

Right Air Conditioning Pack Inoperative (B737-800 ONLY).

Note: If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the left pack to increase airflow when the flaps are extended for takeoff and landing.

1. Limit altitude to FL 250.
2. Position the Right PACK switch to OFF.
3. Perform normal engine start.
4. If APU unavailable and after both engines running, ISOLATION VALVE switch to CLOSED. End of procedure.
5. If APU is available, use to supply bleed air to the left pack for increased airflow during ground operations, takeoff, and below 10,000' AFE during approach and landing. The following procedure will apply:

Note: Because this is not a performance limited takeoff, bleeds off numbers are not required. Use the TDU or other power setting as shown on the WDR.

CAUTION AFTER DE-ICING, DUE TO DE-ICING FLUID RUNOFF, USE OF THE APU BLEED DURING TAKEOFF MAY CAUSE SMOKE AND/OR FUMES IN THE AIRCRAFT. WAIT APPROXIMATELY 1 MINUTE AFTER DEICING IS COMPLETE TO RESTORE BLEED AIR FOR PACK OPERATION.

Note: Configure as follows after engine start unless wing anti-ice is needed for taxi.

Note: If wing anti-ice is required for taxi, configure as follows just PRIOR to takeoff.

- A. After both engines are running and prior to takeoff:
 - i. R PACK switch remains OFF

CONTINUED ON NEXT PAGE

- ii. ISOLATION VALVE switch to CLOSED
 - iii. L PACK switch to AUTO
 - iv. Engine No.1 BLEED air switch to OFF.
 - v. APU BLEED air switch to ON.
 - vi. Engine No.2 BLEED air switch to OFF.
 - vii. WING ANTI-ICE switch to OFF.
- B. After takeoff and prior to 17,000' MSL:

Note: The WING ANTI-ICE switch must remain OFF until the engine BLEED air switches are repositioned to ON.

- i. Engine No. 2 BLEED air switch to ON.
- ii. APU BLEED air switch to OFF.
- iii. Engine No. 1 BLEED air switch to ON.
- iv. L PACK switch remains AUTO.
- v. ISOLATION VALVE switch remains CLOSED.
- vi. R PACK switch remains OFF.
- vii. If no longer needed, shutdown APU.

Note: Keep the pack switch for the right (inoperative) pack in the OFF position and the ISOLATION VALVE switch in the CLOSE position for the entire flight.

Note: A CHECK AIR COND PANEL message may be generated 2 minutes after takeoff.

- C. When below 17,000' MSL and prior to landing, unless Wing ANTI ICE is required:
- i. Start APU and wait two minutes, then:
 - ii. WING ANTI-ICE switch to OFF
 - iii. R PACK switch remains OFF.
 - iv. ISOLATION VALVE switch remains CLOSE.
 - v. L PACK switch remains in AUTO.
 - vi. Engine No. 1 BLEED air switch to OFF.
 - vii. APU BLEED air switch to ON.
 - viii. Engine No. 2 BLEED air switch to OFF.

CAUTION ENSURE THAT THE CABIN ALTITUDE IS STABLE OR DESCENDING. IF UNABLE TO MAINTAIN CABIN PRESSURIZATION, REVERT BACK TO ENGINE BLEED AIR FOR PACK OPERATION.

21-00-01B	AIR CONDITIONING PACKS – RIGHT PACK
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 270 lbs. per hour of APU usage.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-01C

1. Limit altitude to 10,000 ft. for passenger flights.
2. Non-passenger flights above 10,000 ft. require flight crew to be on oxygen.
3. Except for ditching, keep the outflow valve in the full open position
4. Limit climb and descent rates to 500 FPM. to avoid passenger discomfort.
5. Position the ISOLATION VALVE switch to CLOSE after starting engines.
6. To improve passenger cabin and crew compartment temperatures:
 - A. If possible, pre-condition the cabin to a low temperature prior to dispatch. A low initial cabin temperature will result in a lower peak temperature.
 - B. Maintain the highest allowable flight altitude.
 - C. Minimize cabin heat by pulling the shades down and turning off unnecessary lights.
 - D. Position RECIRC FAN switch(es) to AUTO.
 - E. Estimated stabilized temperatures at the end of 30 minutes of flight are shown in this table:

Note: *Prolonged operation at TAT below 10 degrees C / 50 degrees F can cause freezing of unheated water systems located in the aft lower lobe.*

Note: *Operation at TAT above 32 degrees C / 90 degrees F is not recommended due to the resulting high temperatures in the passenger and crew cabins.*

Note: *Limit number of passengers to 45.*

TAT	NO. OF PASS	PASS. CABIN TEMPERATURE		CREW CABIN TEMPERATURE	
°C		°F	°C	°F	°C
-1	0	50	10	70	21
-1	45	70	21	75	24
10	0	70	21	90	32
10	45	80	27	95	35
21	0	90	32	110	43
21	45	95	35	110	43
32	0				
32	45				

21-00-01D

Left Air Conditioning Pack Inoperative (B737-900ER).

Note: *If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the operating pack to increase air flow when the flaps are extended for takeoff and landing.*

1. Temperature sensitive cargo and live animals should not be carried in the forward cargo compartment.
2. Limit altitude to FL 250.
3. Set R RECIRC FAN switch OFF.
4. Set the LEFT PACK switch to HIGH to maintain smoke penetration requirements.

Note: *Steps 3 and 4 will force the overboard exhaust valve into the smoke removal configuration in the event of a Smoke, Fire or Fumes event. The pack will not operate due to maintenance deactivating the flow control and shut off valve for the associated pack.*

5. Perform a normal engine start.
6. If APU unavailable and after both engines running, ISOLATION VALVE switch to CLOSED. End of procedure.

7. If APU is available, use to supply bleed air to the Right pack for increased airflow during ground operations, takeoff, and below 10,000' AFE during approach and landing. The following procedure will apply:

Note: *Because this is not a performance limited takeoff, bleeds off numbers are not required. Use the TDU or other power setting as shown on the WDR.*

CAUTION

AFTER DE-ICING, DUE TO DE-ICING FLUID RUNOFF, USE OF THE APU BLEED DURING TAKEOFF MAY CAUSE SMOKE AND/OR FUMES IN THE AIRCRAFT. WAIT APPROXIMATELY 1 MINUTE AFTER DEICING IS COMPLETE TO RESTORE BLEED AIR FOR PACK OPERATION.

Note: *Configure as follows after engine start unless wing anti-ice is needed for taxi.*

Note: *If wing anti-ice is required for taxi, configure as follows just PRIOR to takeoff.*

A. After both engines are running and prior to takeoff:

- i. R PACK switch to AUTO.
- ii. ISOLATION VALVE switch to OPEN.
- iii. L PACK switch remains in HIGH.
- iv. Engine No. 1 BLEED air switch to OFF.
- v. APU BLEED air switch to ON.
- vi. Engine No. 2 BLEED air switch to OFF.
- vii. WING ANTI-ICE switch to OFF.

B. AFTER takeoff and prior to 17,000' MSL:

Note: *The WING ANTI-ICE switch must remain OFF until the engine BLEED air switches are repositioned to ON.*

- i. APU BLEED air switch to OFF.
- ii. Engine No. 2 BLEED air switch to ON.
- iii. R PACK switch remains AUTO.
- iv. ISOLATION VALVE switch to CLOSE.
- v. L PACK switch remains in HIGH.
- vi. Engine No. 1 BLEED air switch to ON.
- vii. If no longer needed, shutdown APU

Note: *A CHECK AIR COND PANEL message may be generated 2 minutes after takeoff.*

C. When below 17,000' MSL and prior to landing, unless wing ANTI ICE is required:

- i. Start APU and wait two minutes, then:
- ii. WING ANTI-ICE switch to OFF
- iii. Engine No. 1 BLEED to OFF
- iv. APU BLEED air switch to ON.
- v. Engine No. 2 BLEED to OFF
- vi. Right Pack switch remains in AUTO
- vii. ISOLATION VALVE switch to OPEN
- viii. Left Pack switch remains in HIGH

CAUTION

ENSURE THAT THE CABIN ALTITUDE IS STABLE OR DESCENDING. IF UNABLE TO MAINTAIN CABIN PRESSURIZATION, REVERT BACK TO ENGINE BLEED AIR FOR PACK OPERATION

21-00-01D	AIR CONDITIONING PACKS – LEFT PACK
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 270 lbs. per hour of APU usage.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-01E

Right Air Conditioning Pack Inoperative (B737-900ER).

Note: *If operational and not restricted from use by another MEL, APU pneumatics should be used to supply the left pack to increase airflow when the flaps are extended for takeoff and landing*

1. Temperature sensitive cargo and live animals should not be carried in the forward cargo compartment.
2. Limit altitude to FL 250.
3. Set R RECIRC FAN switch OFF.
4. Set the RIGHT PACK switch to HIGH to maintain smoke penetration requirements.

Note: *Steps 3 and 4 will force the overboard exhaust valve into the smoke removal configuration in the event of a Smoke, Fire or Fumes event. The pack will not operate due to maintenance deactivating the flow control and shut off valve for the associated pack.*

5. Perform a normal engine start.
6. If APU unavailable and after both engines running, ISOLATION VALVE switch to CLOSED. End of procedure.
7. If APU is available, use to supply bleed air to the left pack for increased airflow during ground operations, takeoff, below 10,000' AFE during approach and landing. The following procedure will apply:

Note: *Because this is not a performance limited takeoff, bleeds off numbers are not required. Use the TDU or other power setting as shown on the WDR.*

CAUTION

AFTER DE-ICING, DUE TO DE-ICING FLUID RUNOFF, USE OF THE APU BLEED DURING TAKEOFF MAY CAUSE SMOKE AND/OR FUMES IN THE AIRCRAFT. WAIT APPROXIMATELY 1 MINUTE AFTER DEICING IS COMPLETE TO RESTORE BLEED AIR FOR PACK OPERATION.

Note: *Configure as follows after engine start unless wing anti-ice is needed for taxi.*

Note: *If wing anti-ice is required for taxi, configure as follows just PRIOR to takeoff.*

- A. After both engines are running and prior to takeoff:
 - i. R PACK switch remains in HIGH.
 - ii. ISOLATION VALVE switch to CLOSE.
 - iii. L PACK switch to AUTO.
 - iv. Engine No. 1 BLEED air switch to OFF.
 - v. APU BLEED air switch to ON.
 - vi. Engine No. 2 BLEED air switch to OFF.

CONTINUED ON NEXT PAGE

- vii. WING ANTI-ICE switch to OFF.
- B. AFTER takeoff and prior to 17,000' MSL:

Note: The WING ANTI-ICE switch must remain OFF until the engine BLEED air switches are repositioned to ON.

- i. Engine No. 2 BLEED air switch to ON.
- ii. APU BLEED air switch to OFF.
- iii. Engine No. 1 BLEED air switch to ON.
- iv. L PACK switch remains AUTO.
- v. ISOLATION VALVE switch remains CLOSE.
- vi. R PACK switch remains in HIGH.
- vii. If no longer needed, shutdown APU

Note: Keep the pack switch for the right (inoperative) pack in the HIGH position and the ISOLATION VALVE switch in the CLOSE position for the entire flight.

Note: A CHECK AIR COND PANEL message may be generated 2 minutes after takeoff.

- C. When below 17,000' MSL and prior to landing, unless wing ANTI ICE is required for landing:
 - i. Start APU and wait two minutes, then:
 - ii. WING ANTI-ICE switch to OFF
 - iii. R PACK switch remains in HIGH.
 - iv. ISOLATION VALVE switch remains CLOSE.
 - v. L PACK switch remains in AUTO.
 - vi. Engine No. 1 BLEED air switch to OFF.
 - vii. APU BLEED air switch to ON.
 - viii. Engine No. 2 BLEED air switch to OFF.

CAUTION ENSURE THAT THE CABIN ALTITUDE IS STABLE OR DESCENDING. IF UNABLE TO MAINTAIN CABIN PRESSURIZATION, REVERT BACK TO ENGINE BLEED AIR FOR PACK OPERATION.

21-00-01E	AIR CONDITIONING PACKS – RIGHT PACK
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 270 lbs. per hour of APU usage.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-01F

Both Air Conditioning Packs Inoperative (B737-900ER)

1. Limit altitude to 10,000 feet for passenger flights.
2. Non-Passenger flights above 10,000 feet require flight crew to be on oxygen.
3. Except for ditching, keep the outflow valve in the full open position.

CONTINUED ON NEXT PAGE

4. Limit climb and descent rates to 500 FPM to avoid passenger discomfort.
5. Set R RECIRC FAN switch to OFF.
6. Set one of the PACK switches in HIGH.
7. Position the ISOLATION VALVE switch to CLOSE after starting engines.
8. To improve passenger cabin and crew compartment temperatures:
 - A. If possible, pre-condition the cabin to a low temperature prior to dispatch. A low initial cabin temperature will result in a lower peak temperature.
 - B. Maintain the highest allowable flight altitude.
 - C. Minimize cabin heat by pulling the shades down and turning off unnecessary lights.
 - D. Position L RECIRC FAN switch to AUTO.
 - E. Estimated stabilized temperatures at the end of 30 minutes of flight are shown in this table (next page):

Note: *Limit number of passengers to 45.*

Note: *Prolonged operation at TAT below 10 degrees C / 50 degrees F can cause freezing of unheated water systems located in the aft lower lobe.*

TAT	NO. OF PASS	PASS. CABIN TEMPERATURE		CREW CABIN TEMPERATURE	
°C		°F	°C	°F	°C
-1	0	50	10	70	21
-1	45	70	21	75	24
10	0	70	21	90	32
10	45	80	27	95	35
21	0	90	32	110	43
21	45	95	35	110	43
32	0				
32	45				

(M) PROCEDURES

21-00-01C

Configure airplane for unpressurized flight ([AMM 21-00-00/901](#)):

1. Manually position the outflow valve in the full open position.
 - A. Position the Pressurization Mode selector to MAN.
 - B. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates full open.
2. Deactivate (locked closed) the flow control and shutoff valve for the associated pack:
 - A. For the left flow control and shutoff valve, disconnect and stow the D488 electrical connector.
 - B. For the right flow control and shutoff valve, disconnect and stow the D492 electrical connector.
 - C. Do these steps to lock the flow control and shutoff valve in the closed position:
 - i. Pull out the manual control shaft.
 - ii. Push in the manual control shaft.
3. Pull and secure the P6-4 Panel circuit breaker A/C OVERBOARD EXH VALVE RECONFIG CONT.
4. Position one of the PACK switches in HIGH and placard.

21-00-01D, 21-00-01E

Secure the forward cargo heat duct closed ([AMM 21-00-00/901](#)):

1. Access the shutoff valve:
 - A. Remove the forward cargo compartment forward bulkhead liner to gain access to the forward cargo heat duct shutoff valve.
 - B. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - C. Reinstall the forward cargo compartment forward bulkhead liner.
2. Deactivate (lock closed) the flow control and shutoff valve for the associated pack:
 - A. For the left flow control and shutoff valve, disconnect and stow the D488 or D15830 electrical connector.
 - B. For the right flow control and shutoff valve, disconnect and stow the D492 or D15834 electrical connector.

Note: Connectors D15830 and D15834 are applicable to Ships 3853 thru 3930.

- A. Do these steps to lock the flow control and shutoff valve in the closed position:
 - i. Pull out the manual control shaft.
 - ii. Push in the manual control shaft.
3. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

 [Link to Learning Video \(for ships 3801 thru 3852 and 3931 thru 3963\)](#)

Figure 21-1: Flow Control and Shutoff Valve (Ships 3801 thru 3852 and 3931 thru 3963)


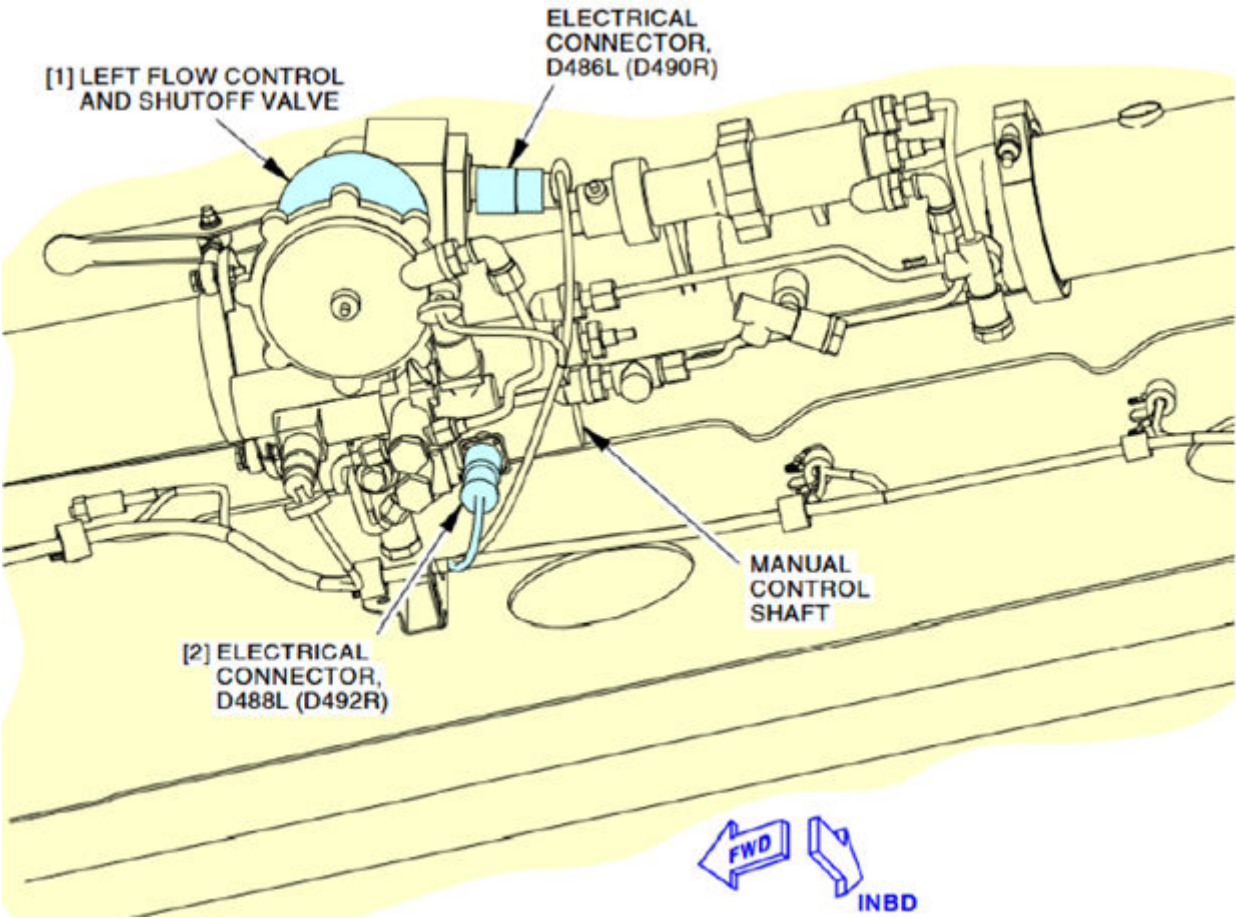


Figure 21-2: Flow Control and Shutoff Valve (Ships 3853 thru 3930)

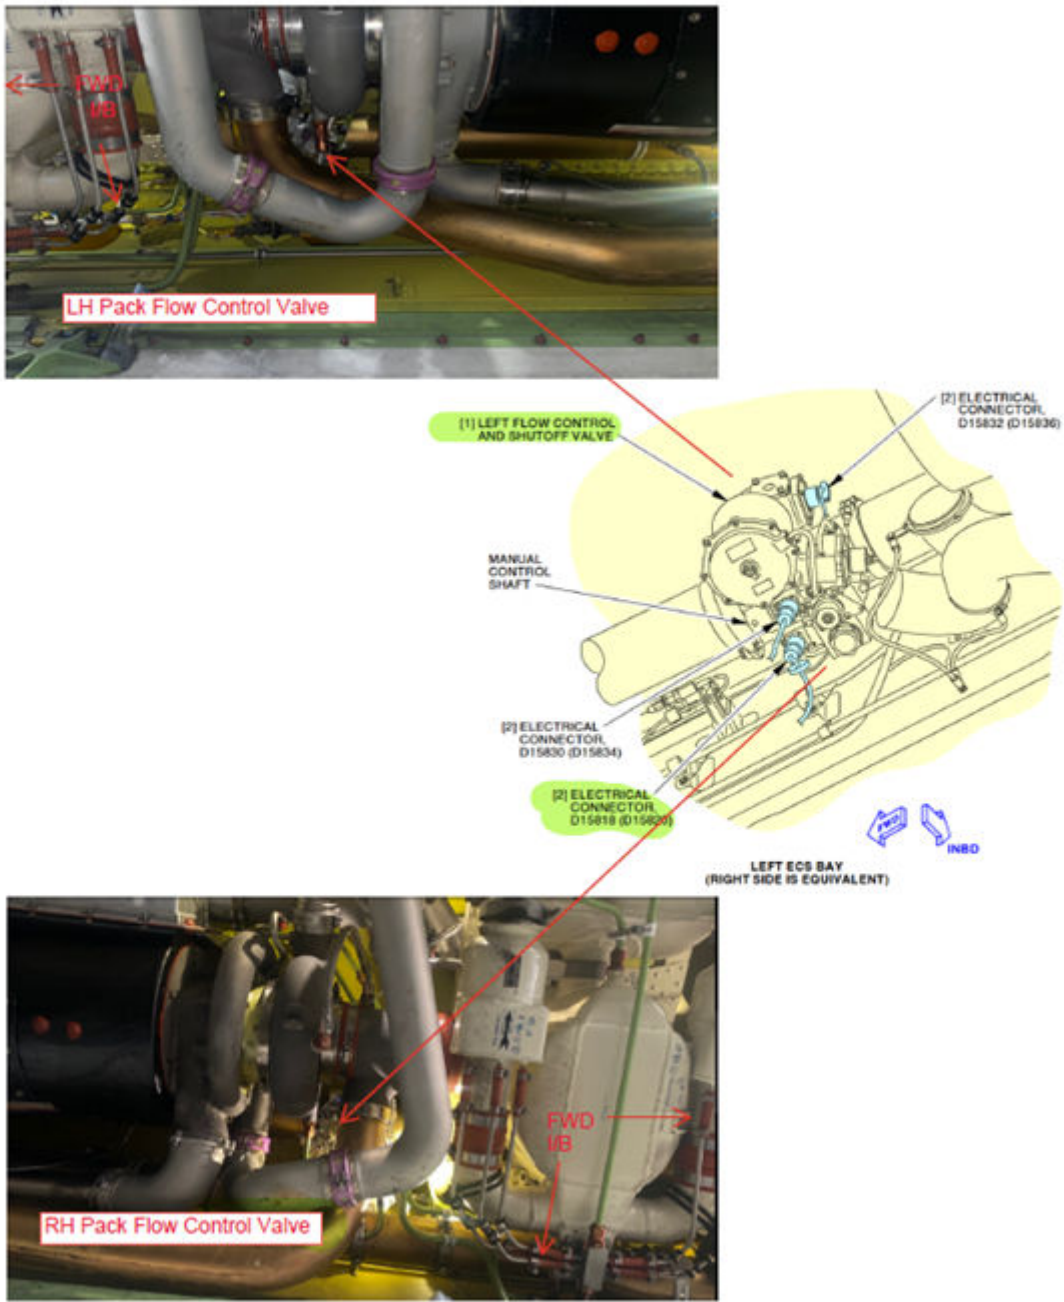

21-00-01F


Configure airplane for unpressurized flight ([AMM 21-00-00/901](#)):

1. Manually position the outflow valve in the full open position.
 - A. Position the Pressurization Mode selector to MAN.
 - B. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates full open.
2. Deactivate (lock closed) the flow control and shutoff valve for the associated pack:
 - A. For the left flow control and shutoff valve, disconnect and stow the D488 or D15830 electrical connector.
 - B. For the right flow control and shutoff valve, disconnect and stow the D492 or D15834 electrical connector.

Note: Connectors D15830 and D15834 are applicable to Ships 3853 thru 3930.

- C. Do these steps to lock the flow control and shutoff valve in the closed position:
 - i. Pull out the manual control shaft.
 - ii. Push in the manual control shaft.
3. Secure the forward cargo heat duct closed ([AMM 21-00-00/901](#)):
 - A. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
4. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

Figure 21-3: Pack Flow Control and Shutoff Valve

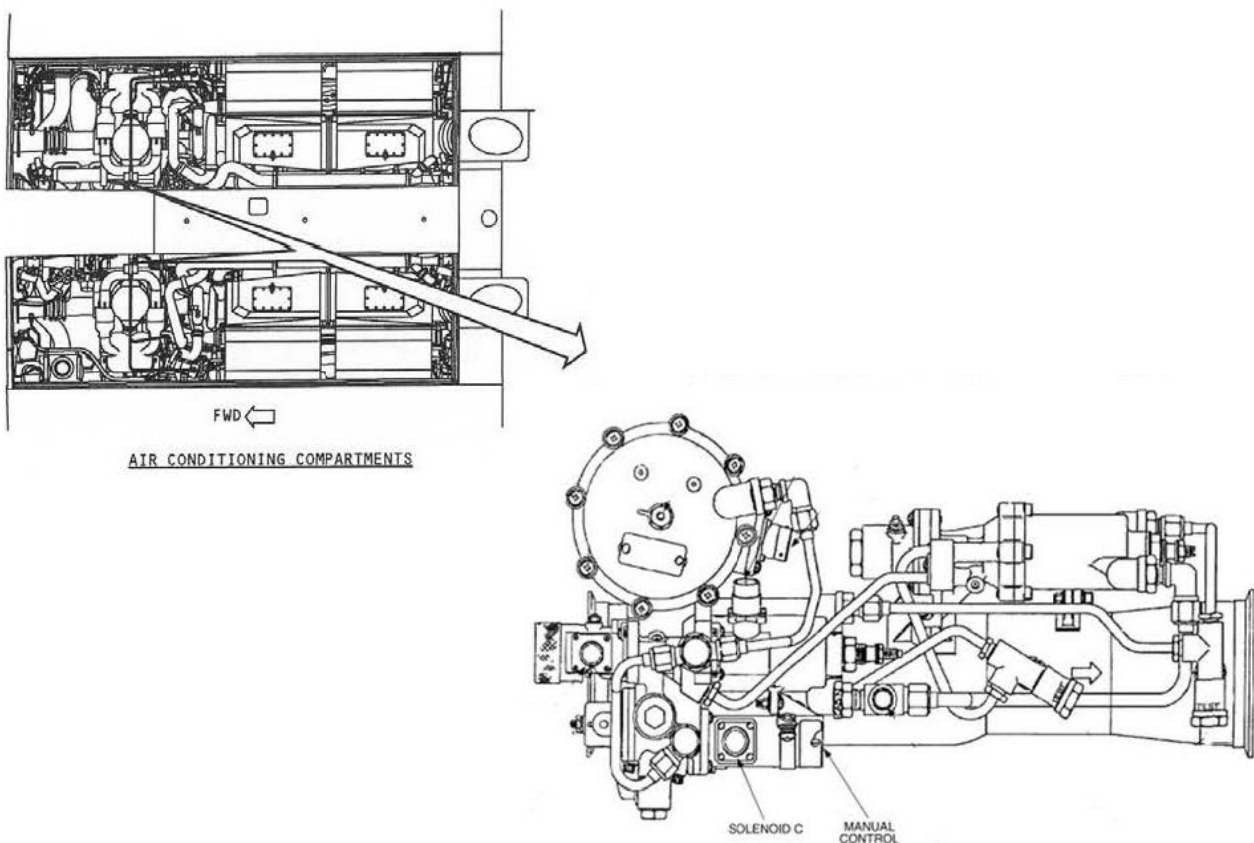

Note: When deactivating the valve, push in the manual control shaft. To reactivate the valve, pull out the manual control shaft

21-00-02 Pack Airflow / Shut-Off Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PACK AIRFLOW / SHUT-OFF VALVES					
21-00-02A	Pack Airflow / Shut-Off Valves “DISP.APPR.REQ’D”	N	2	1	C (O) (M) May be inoperative provided: 1. Associated valve is deactivated closed, 2. Associated Air Conditioning Pack is considered inoperative and deferred per MEL 21-00-01A, 21-00-01B, 21-00-01D or 21-00-01E as applicable, and 3. Flight altitude remains at or below FL 250.
21-00-02B	Pack Airflow / Shut-Off Valves “DISP.APPR.REQ’D”	N	2	0	C (O) (M) May be inoperative provided: 1. Valves are deactivated closed, 2. Flight is conducted in an unpressurized configuration, 3. Associated Air Conditioning Pack is considered inoperative and deferred per MEL 21-00-01C or 21-00-01F as applicable, and 4. Cargo compartments remain empty, or are verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions).
21-00-02C	High Flow Mode	Y	2	0	C May be inoperative.
21-00-02D	APU High Flow Mode	Y	2	0	C May be inoperative.
21-00-02E	Electronic Flow Control (B737-900ER Aircraft 3853-3930) “DISP.APPR.REQ’D”	Y	2	0	C (O) One or both may be inoperative provided: 1. Appropriate performance corrections are applied, 2. Procedures are used to ensure AFT lower cargo compartment remain empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), and 3. Performance corrections are applied. Note: This item is AD related Note: Backup pneumatic flow control will result in larger flow transients and airflow noise associated with bleed air pressure changes. Note: With Electronic Flow Control Valve in backup pneumatic flow control, the associated PACK light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.
21-00-02F	Pack Flow Sensors (B737-900ER Aircraft 3853-3930)	N	2	0	C (M) May be inoperative provided pack inlet pressure sensor(s) for associated air conditioning pack(s) is verified to operate normally.
21-00-02G	Pack Flow Sensors (B737-900ER Aircraft 3853-3930)	Y	2	0	C Maybe inoperative provided associated Electronic Flow Control is considered inoperative and deferred per MEL 21-00-02E.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-02H	Pack Inlet Pressure Sensors (B737-900ER Aircraft 3853-3930)	N	2	0	C (M) May be inoperative provided pack flow sensor(s) for associated air conditioning pack(s) is verified to operate normally.
21-00-02I	Pack Inlet Pressure Sensors (B737-900ER Aircraft 3853-3930)	Y	2	0	C Maybe inoperative provided associated Electronic Flow Control is considered inoperative and deferred per MEL 21-00-02E.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-02A	Associated Pack Switch	___ PACK AIRFLOW / SHUT-OFF VALVE INOP
21-00-02B	Associated Pack Switch(es)	___ PACK AIRFLOW / SHUT-OFF VALVE(S) INOP
21-00-02C	Associated Pack Switch(es)	___ PACK AIRFLOW / HIGH FLOW MODE INOP
21-00-02D	Associated Pack Switch(es)	___ APU HIGH FLOW INOP
21-00-02E	Associated Pack Switch(es)	___ ELECTRONIC FLOW CONTROL INOP
21-00-02F	Associated Pack Switch(es)	___ PACK FLOW SENSOR(S) INOP
21-00-02G	Associated Pack Switch(es)	___ PACK FLOW SENSOR(S) INOP
21-00-02H	Associated Pack Switch(es)	___ PACK INLET PRESSURE SENSOR(S) INOP
21-00-02I	Associated Pack Switch(es)	___ PACK INLET PRESSURE SENSOR(S) INOP

(O) PROCEDURES

With Pack High Flow Mode or APU High Flow Mode inoperative, cabin ventilation rates will be reduced.

21-00-02A

If one pack is not used refer to MEL 21-00-01A,B,D,or E for (O) procedures.

21-00-02B

If both packs are not used refer to MEL 21-00-01C or F for (O) procedures.

21-00-02E

1. Use procedures to verify the aft lower cargo compartment remains empty or contains only empty cargo handling equipment, ballast (ballast may be loaded in ULDs), and/or Fly Away Kits. (see MEL Instructions)

Note: Failure of the Electronic Flow Control Valve torque motor or primary Pack Flow Temperature Controller failure will result in backup pneumatic flow control. PFTC fault messages 21-51036, 21-51069, 21-51070, 21-51250, 21-51251, 21-51252, or 21-51503 may be present.

Note: MEL dispatch options 21-00-01 maybe used as an alternative means of dispatching with one inoperative air conditioning pack that has failed electronic flow control and the other air conditioning pack operating normally with electronic flow control.

21-00-02E	ELECTRONIC FLOW CONTROL
EFFECTIVITY	B737-900ER Aircraft 3853 thru 3930
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 2.5% for each engine with inoperative electronic flow control.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF 1. Reduce RATOW by 1,900 lbs for each engine with inoperative electronic flow control. 2. Reduce T/O CLIMB LIMIT by 1,900 lbs for each engine with inoperative electronic flow control. LANDING 1. Reduce RWY ALLOWABLE LANDING WEIGHT by 1,900 lbs for each engine with inoperative electronic flow control. 2. Reduce LANDING CLIMB LIMIT WEIGHT by 1,900 lbs for each engine with inoperative electronic flow control. OTHER CORRECTIONS None

(M) PROCEDURES

21-00-02A

1. Deactivate associated Pack Air Flow Shutoff Valve per [AMM Task 21-00-00-040-805](#).
2. Defer the associated air conditioning pack per [MEL 21-00-01A](#), [21-00-01B](#), [21-00-01D](#) or [21-00-01E](#) as applicable.

21-00-02B

1. Deactivate associated Pack Air Flow Shut off Valve per [AMM Task 21-00-00-040-805](#).
2. Defer both air conditioning packs per [MEL 21-00-01C](#) or [21-00-01F](#) as applicable.

Figure 21-4: Pack Flow Control and Shutoff Valve (Ships 3853 thru 3930)



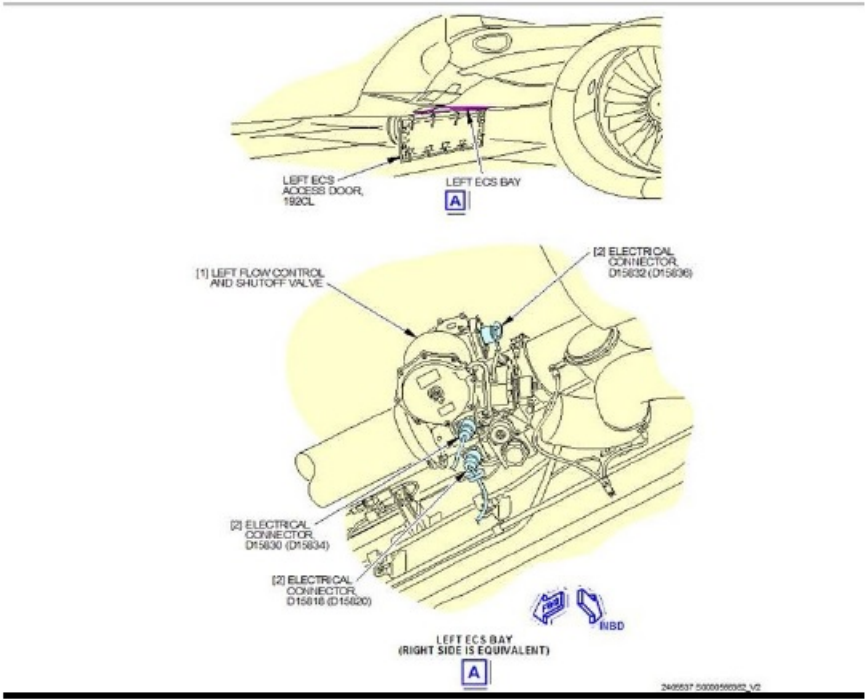


Figure 21-5: Pack Flow Control and Shutoff Valve (All except Ships 3853 thru 3930)

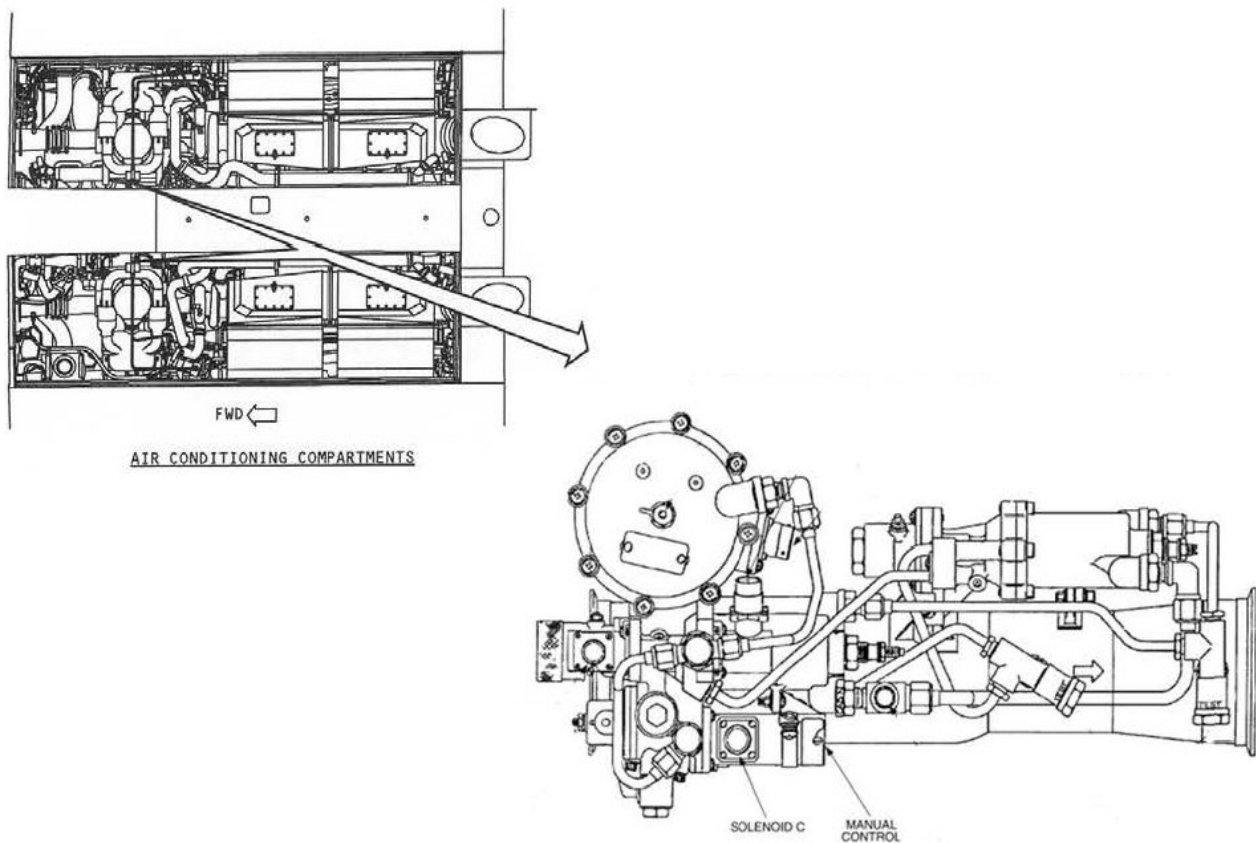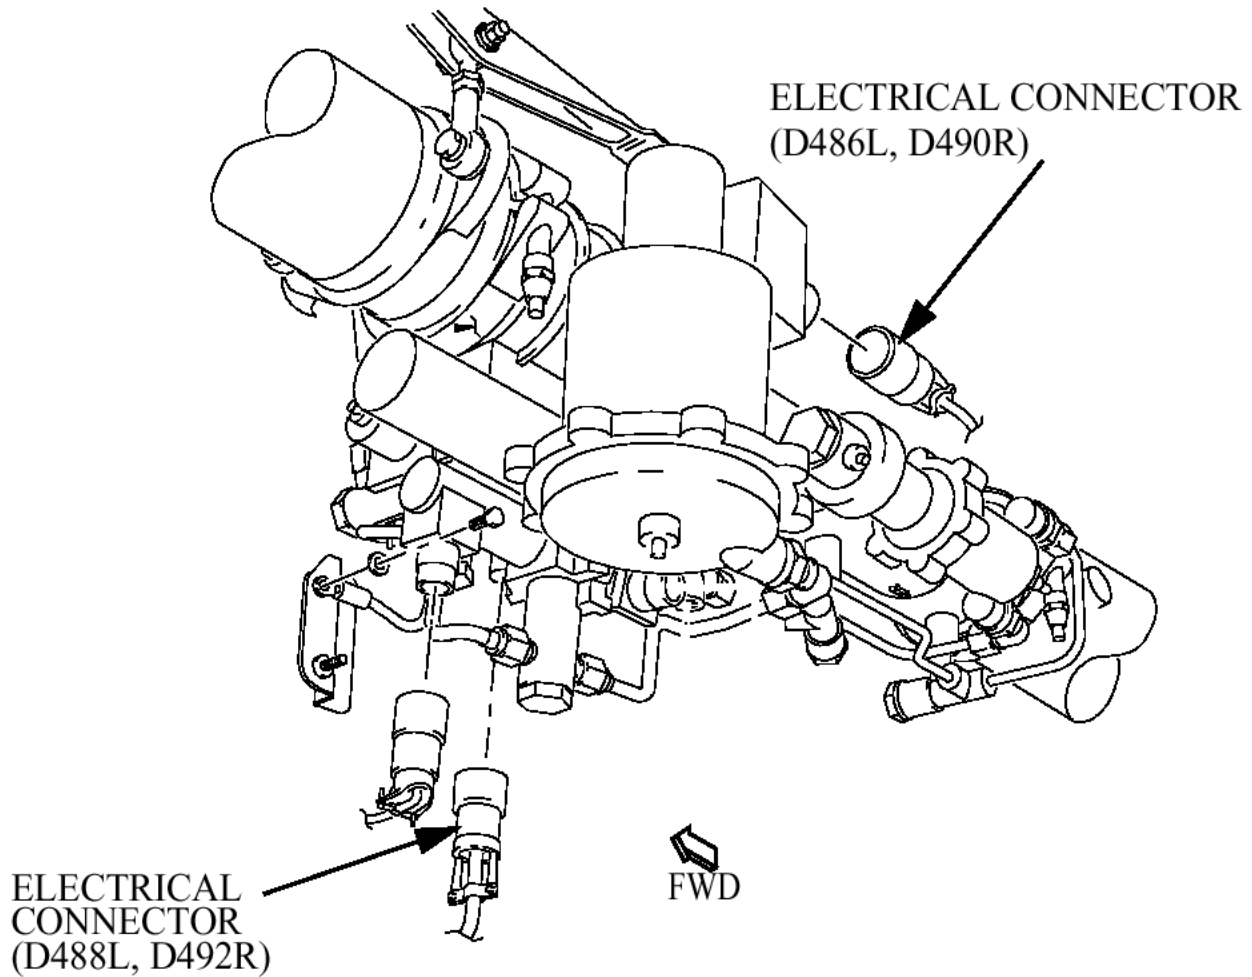

Note: When deactivating the valve, push in the manual control shaft. To reactivate the valve, pull out the manual control shaft.

Figure 21-6: Electrical Connectors


21-00-02F

Note: With Pack Flow Sensor failed, the associated PACK light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.

1. Verify normal operation of Pack Inlet Pressure Sensor for associated air conditioning pack as follows:
 - A. Check for Existing Faults on the Pack Flow Temperature Controller BITE display.
 - B. Ensure the following Pack Inlet Pressure Sensor faults are not listed under Existing Faults: 21-51061, 21-51230, 21-51231, 21-51232, 21-51233.

21-00-02H

Note: With Pack Inlet Pressure Sensor failed, the associated PACK light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.

1. Verify normal operation of Pack Flow Sensor for associated air conditioning pack as follows:
 - A. Check for Existing Faults on the Pack Flow Temperature Controller BITE display.
 - B. Ensure the following Pack Flow Sensor faults are not listed under Existing Faults: 21-51066, 21-51067, 21-51068, 21-51239, 21-51240, 21-51246, 21-51247, 21-51248, 21-51249.

21-00-03 Pack Trip Warning Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-03	Pack Trip Warning Systems “DISP.APPR.REQ’D”	N	2	0	C (O) (M) May be inoperative provided associated pack is deferred per MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E as applicable.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-03	Associated Pack Switch	____ Pack Trip Warning System INOP

(O) PROCEDURES

With Pack High Flow Mode or APU High Flow Mode inoperative, cabin ventilation rates will be reduced.

Refer to MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E as appropriate for (O) procedures.

(M) PROCEDURES

Defer associated pack per MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E as applicable.

21-00-05 Pack Ram Air Systems (Ram Air Door)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	2	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
21-00-05	Pack Ram Air Systems (Ram Air Door) "DISP.APPR.REQ'D"				C	(O) (M)	May be inoperative in the FLIGHT OPEN position provided: 1. Operations are not conducted on runways covered with slush or on gravel runways, 2. Associated pack is not operated during takeoff or landing on wet runways or runways with standing water, and 3. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-05	Associated Pack Switch(es)	____ Pack Ram Air System INOP

(O) PROCEDURES

Note: With the ram air modulating system deactivated, the AIR COND light and the associated PACK light may or may not illuminate during Master Caution recall. If illuminated, the AIR COND and associated PACK light will extinguish when reset.

1. During takeoff and landing when operating on wet runways or on runways with standing water:

- A. Position associated PACK switch(es) to OFF.

Note: For the B737-900ER aircraft, if the pack is deferred in accordance with MEL 21-00-01 position the PACK switch(es) per the (O) procedure for the applicable relief in MEL 21-00-01.

- B. Position the ISOLATION VALVE switch to CLOSE.


21-00-05	PACK RAM AIR SYSTEMS (RAM AIR DOOR)
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 140 lbs per inoperative system. Increase BLOCK FUEL by 0.4% per inoperative system.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-05 PACK RAM AIR SYSTEMS (RAM AIR DOOR)	
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 160 lbs per inoperative system. Increase BLOCK FUEL by 0.4% per inoperative system.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 s less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

(M) PROCEDURES

For ships 3701-3774 and 3931-3950 without Smart Ram Air Door Actuator (SRADA) (Refer to [AMM Task 21-00-00-040-806](#))

- Pull and secure the associated circuit breakers located on the P6-4 Panel:
 - AIR CONDITIONING RAM AIR MOD LEFT (RIGHT)
 - AIR CONDITIONING RAM AIR MOD CONT L (R)
- Open the associated ram air actuator panel.
- Disconnect and stow the electrical connector.
- Remove bolt connecting the actuator rod end to the bellcrank.
- Separate actuator rod from bell crank and reinstall and secure bolt in the bell crank.
- Rotate the bell crank to align the rigging pin holes on the shaft assembly with the holes on the bearing housing support.
- Install bolt (BACB30UU3P36D or equivalent) through the rigging pin holes.
- Install nut (BACN10JD3 or equivalent) and cotter pin (BACP18BC01D06P or equivalent) on the bolt.
- Use safety wire to secure the actuator rod end to the attach bolt in the bell crank.
- Close the ram air actuator panel.
- Close the associated circuit breakers.

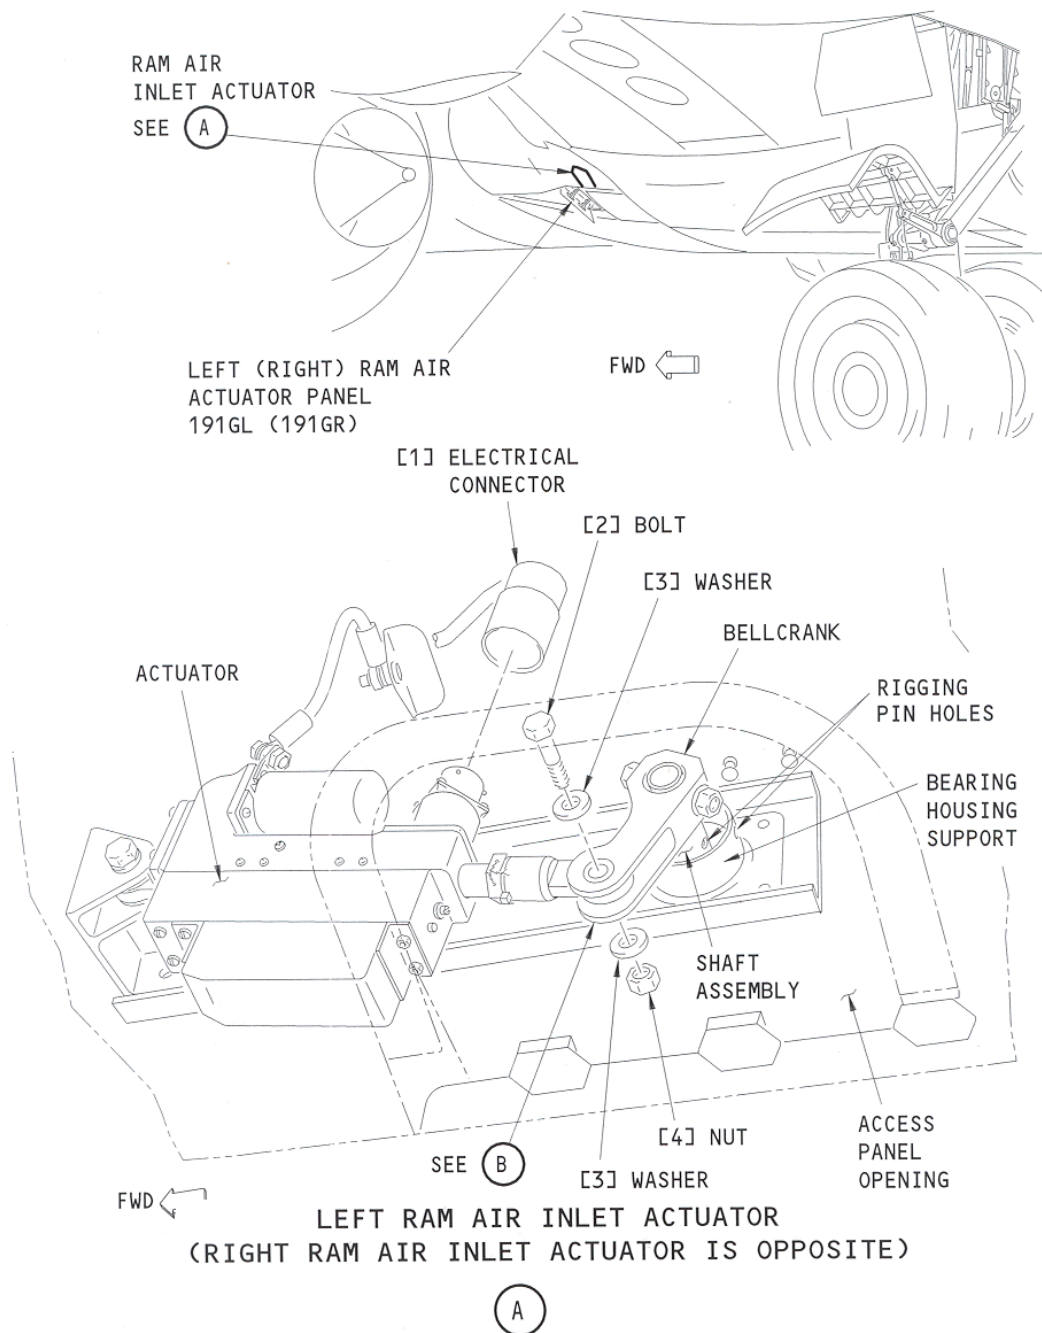Figure 21-7: Ram Air Modulation System Deactivation (Without SRADA)


	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

For ships 3775-3777, 3801-3930, and 3951-3963 with Smart Ram Air Door Actuator (SRADA) (Refer to [AMM Task 21-00-00-040-806](#))

1. Pull and secure the associated circuit breakers located on the P6-4 Panel:
 - A. AIR CONDITIONING RAM AIR MOD LEFT(RIGHT)
 - B. AIR CONDITIONING RAM AIR MOD CONT L(R)
 - C. AIR CONDITIONING PACK CONTROL LEFT DC (RIGHT DC)
 - D. AIR CONDITIONING PACK CONTROL LEFT AC (RIGHT AC)
 - E. AIR CONDITIONING PACK CONT R
 - F. AIR CONDITIONING PACK CONT L
2. Open the associated ram air inlet and exit actuator panels.
3. Deactivate the ram air inlet modulating system.
 - A. Disconnect and stow the two electrical connectors
 - B. Remove bolt, washers and nut that connect the actuator rod end to the bellcrank.
 - C. Disconnect the actuator rod end from the bellcrank and reinstall and tighten the bolt, washer, and nut in the bellcrank.
 - D. Rotate the bellcrank to align the rigging pin holes on the shaft assembly with the holes on the bearing housing support.
 - E. Install a bolt (BACB30UU3P36D or equivalent) with a 0.1875 inch shank diameter and 2.2 inch shank length through the rigging pin holes. The shank end must be drilled for a cotter pin.
 - F. Install a nut (BACN10JD3 or equivalent) and cotter pin (BACP18BC01D06P or equivalent) with a 0.047 inch diameter and a 0.75 inch length on the bolt.
 - G. Use lockwire to safety the actuator rod end to the attach bolt in the bellcrank.
 - H. Close the associated ram air inlet actuator panel.
4. Deactivate the ram air exit modulating system.
 - A. Disconnect and stow the two electrical connectors.
 - B. Remove bonding jumper from the structure attached to SRADA (Smart Ram Air Door Actuator).
 - C. Remove actuator and mounting hardware. Reinstall mounting hardware without actuator. Retain hardware for remounting the replacement actuator.

Note: *If possible, place the removed actuator in the POP storage bin per [TOPP 60-70-35](#). If available, part should be placed in an orange bag with a PROJECT POP - DO NOT REMOVE placard on the bag. A log book entry is required if part has been placed in the bin.*

 - D. Remove bolt (BACB30PW4-9), nut (BACN10YR3CM), and washers (NAS1149E0463P and NAS1149E0316R) from the forward most drive link (213A3338-5/-6).
 - E. Once free, open the exit louvers until the forward most hole in the link assembly lines up with the hole in the forward most drive link arm.
 - F. Reinstall the hardware removed in step 4.d) in the same order it was uninstalled.
 - G. The louvers should be open approximately 56 degrees relative to the airplane skin.
 - H. Close the associated ram air exit actuator panel.
5. Close the associated circuit breakers located on the P6-4 Panel:
 - A. AIR CONDITIONING RAM AIR MOD LEFT (RIGHT)
 - B. AIR CONDITIONING RAM AIR MOD CONT L(R)
 - C. AIR CONDITIONING PACK CONTROL LEFT DC (RIGHT DC)
 - D. AIR CONDITIONING PACK CONTROL LEFT AC (RIGHT AC)
 - E. AIR CONDITIONING PACK CONT R
 - F. AIR CONDITIONING PACK CONT L

Figure 21-8: Ram Air Modulation System Deactivation (With SRADA)

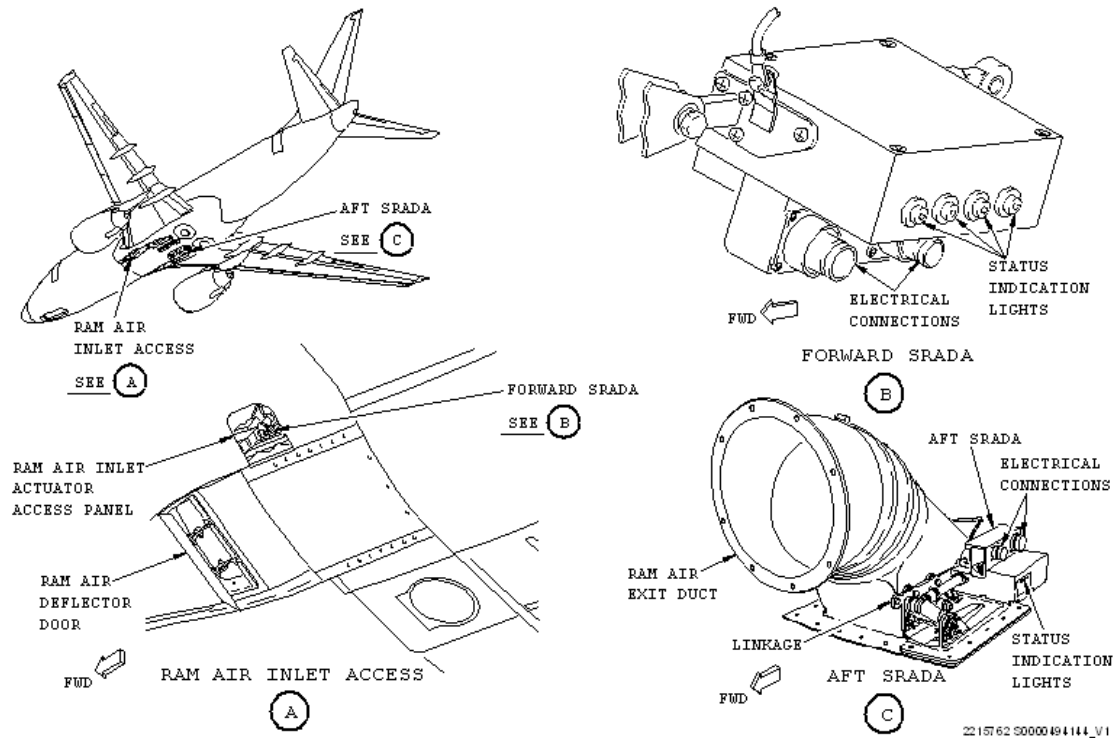


Figure 21-9: Ram Air Inlet Actuator


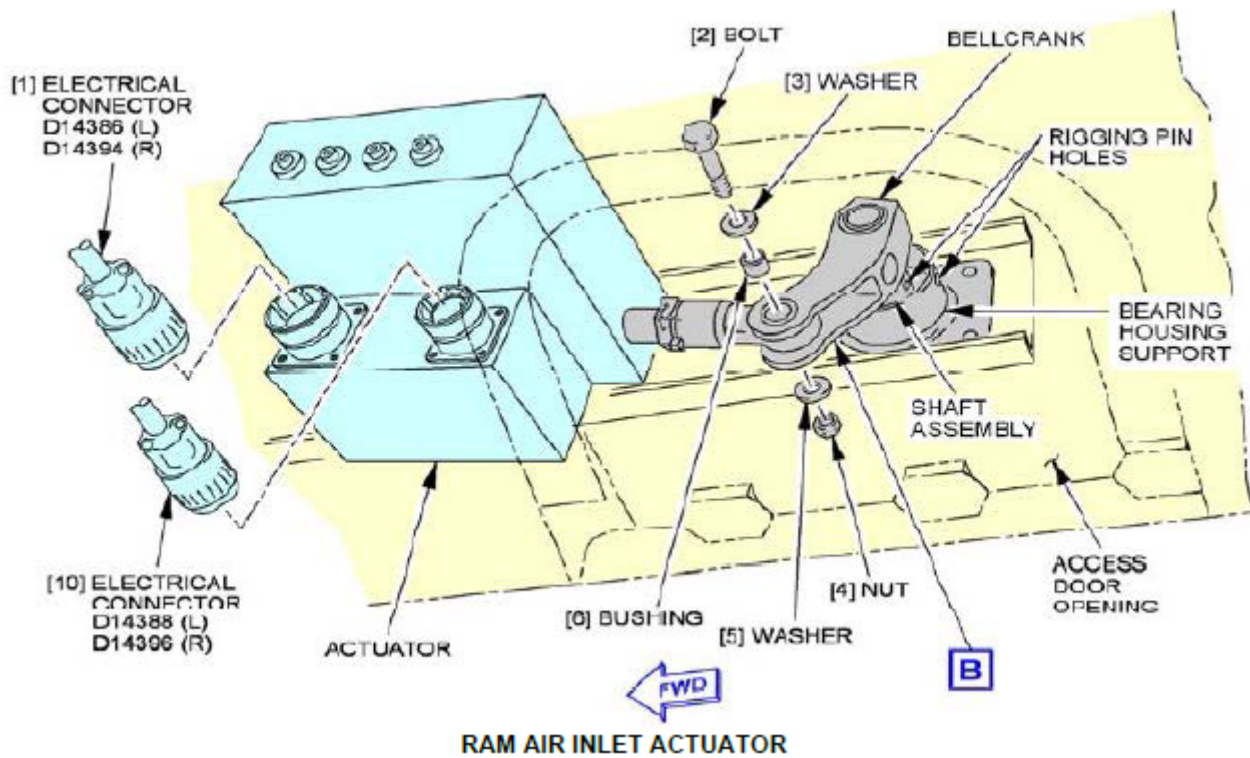


Figure 21-10: Ram Air Exhaust Actuator

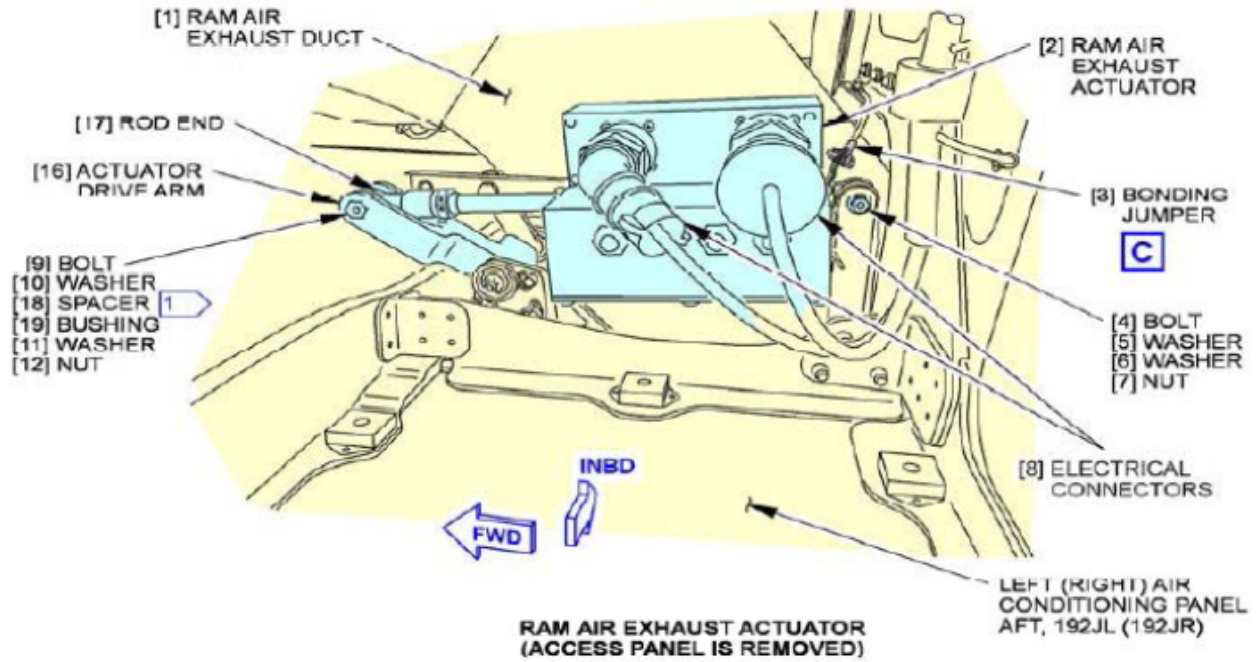

21-00-07 RAM DOOR FULL OPEN Indicating Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-07	RAM DOOR FULL OPEN Indicating Lights	Y	2	0	C	May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-07	Affected Ram Door Full Open Light(s)	____ Ram Door Full Open Light INOP

21-00-10 Cabin Rate Of Climb Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-10A	Cabin Rate of Climb Indicator	Y	1	0	C May be inoperative provided AUTO and ALTN control modes operate normally.
21-00-10B	Cabin Rate of Climb Indicator (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, and 3. Recirculation fan(s) operate normally.
21-00-10C	Cabin Rate of Climb Indicator (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), 3. Outflow valve is positioned to 25% open position, and 4. Recirculation fan(s) operate normally.
21-00-10D	Cabin Rate of Climb Indicator (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, 3. Recirculation fans operate normally, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-10A	Cabin Rate of Climb Indicator	Cabin Rate of Climb Indicator INOP
21-00-10B	Cabin Rate of Climb Indicator	Cabin Rate of Climb Indicator INOP
21-00-10C	Cabin Rate of Climb Indicator	Cabin Rate of Climb Indicator INOP
21-00-10D	Cabin Rate of Climb Indicator	Cabin Rate of Climb Indicator INOP

(O) PROCEDURES

21-00-10B, 21-00-10C

1. Limit altitude to 10,000 feet for passenger flights.
2. Non-passenger flights above 10,000 feet MSL require flight crew to be on oxygen.
3. Except for ditching, keep the outflow valve in the 25% open position.
4. Only one pack may be used in flight.
5. For galley 4B food cart chiller installed, use only one chiller inflight.
6. To avoid passenger discomfort, limit climb and descent rates to 500 FPM.
7. For A/C 3772, and 3773 only, verify the lower forward cargo compartment remains empty or contains only ballast empty cargo handling equipment (ballast may be loaded in ULDs) or fly away kits.

21-00-10B CABIN RATE OF CLIMB INDICATOR	
21-00-10C	
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

21-00-10D

1. Limit altitude to 10,000 feet for passenger flights.
2. Non-passenger flights above 10,000 feet require flight crew to be on oxygen.
3. Except for ditching, keep the outflow valve in the 25% open position.
4. Use only one pack in flight.
5. Position R RECIRC FAN switch to OFF.
6. Position the PACK switch to HIGH after completing the AFTER TAKEOFF Normal Checklist.
7. For galley 4B food cart chiller installed, use only one chiller in flight.
8. Limit climb and descent rates to 500 FPM to avoid passenger discomfort.

21-00-10D CABIN RATE OF CLIMB INDICATOR	
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

(M) PROCEDURES

21-00-10B, 21-00-10C

1. Position the outflow valve to the 25% open position as follows:

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

- A. Place the Pressurization Mode Selector in the MAN position.
- B. Hold the VALVE toggle switch in the OPEN or CLOSED position until valve position indicator indicates 25% open.
2. Pull and secure the Air Conditioning Overboard Exhaust Valve Reconfiguration Control (A/C OVBD EXH RECONFIG CONT) circuit breaker on the P6-4 Panel.
3. With Passenger Cabin Telecommunications System installed (Airphones), pull and secure the ENTERTAINMENT PASS TEL CTU circuit breaker located on the P6-1 Panel.

21-00-10D

Configure the airplane for unpressurized flight ([AMM 21-00-00/901](#)).

1. Manually position the outflow valve in the 25% open position:
 - A. Position the Pressurization Mode selector to MAN.
 - B. Hold the VALVE toggle switch in the OPEN position until valve position indicates 25% open.
2. Secure the forward cargo heat duct closed:
 - A. With shutoff valve 4063-20605-01 installed:
 - i. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - B. With shutoff valve 4063-20605-01 NOT installed:
 - i. Remove the forward cargo heat duct check valve.
 - ii. Install cap BOE2221-0011 in the heat duct.
3. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

21-00-11 Cabin Altitude Warning System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-11A	Cabin Altitude Warning System "DISP.APPR.REQ'D"	Y	1	0	C	May be inoperative provided flight altitude remains at or below 10,000 feet MSL
21-00-11B	CABIN ALTITUDE Light "DISP.APPR.REQ'D"	Y	2	1	C	(O) May be inoperative provided: 1. Associated TAKEOFF CONFIG warning light operates normally, and 2. Before engine start PRIOR TO EACH DEPARTURE, the flightcrew performs a briefing on cabin altitude warning indications and procedures. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-11A	ALT HORN CUTOFF Switch	Cabin Altitude Warning System INOP
21-00-11B	Adjacent to light	CABIN ALTITUDE light INOP

(O) PROCEDURES

21-00-11B

- Whenever the intermittent warning horn sounds on the ground, confirm the airplane is properly configured for takeoff.

PRIOR TO EACH DEPARTURE:

- Cabin altitude warning indications and procedures must be included in the takeoff briefing conducted by the flight crew before engine start. This briefing must include the following:
 - Whenever the intermittent warning horn sounds in flight at an airplane flight altitude above 10,000 MSL:
 - Immediately don oxygen masks and set regulators to 100%.
 - Establish crew communications.
 - Do the Cabin Altitude Warning or Rapid Depressurization non-normal checklist.

Note: Both pilots must verify on the overhead Cabin Altitude panel that the cabin altitude is stabilized below 10,000 feet before removing oxygen masks.

21-00-12 Cabin Altitude Indicator


NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-12A	Cabin Altitude Indicator	Y	1	0	C (O) May be inoperative provided: - Cabin differential pressure indicator operates normally, and - A chart is provided to crew to convert differential pressure to cabin altitude.
21-00-12B	Cabin Altitude Indicator (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: - flight is conducted in an unpressurized configuration, - Outflow valve is positioned to 25% open position, and - Recirculation fan(s) operate normally.
21-00-12C	Cabin Altitude Indicator (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: - Flight is conducted in an unpressurized configuration, - Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), - Outflow valve is positioned to 25% open position, and - Recirculation fan(s) operate normally.
21-00-12D	Cabin Altitude Indicator (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: - Flight is conducted in an unpressurized configuration, - Outflow valve is positioned to 25 % open position, - Recirculation fans operate normally, - Forward cargo heat duct is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-12A	Cabin Altitude Indicator	Cabin Altitude Indicator INOP
21-00-12B	Cabin Altitude Indicator	Cabin Altitude Indicator INOP
21-00-12C	Cabin Altitude Indicator	Cabin Altitude Indicator INOP
21-00-12D	Cabin Altitude Indicator	Cabin Altitude Indicator INOP

(O) PROCEDURES

21-00-12A

Use the following chart to find cabin altitude.

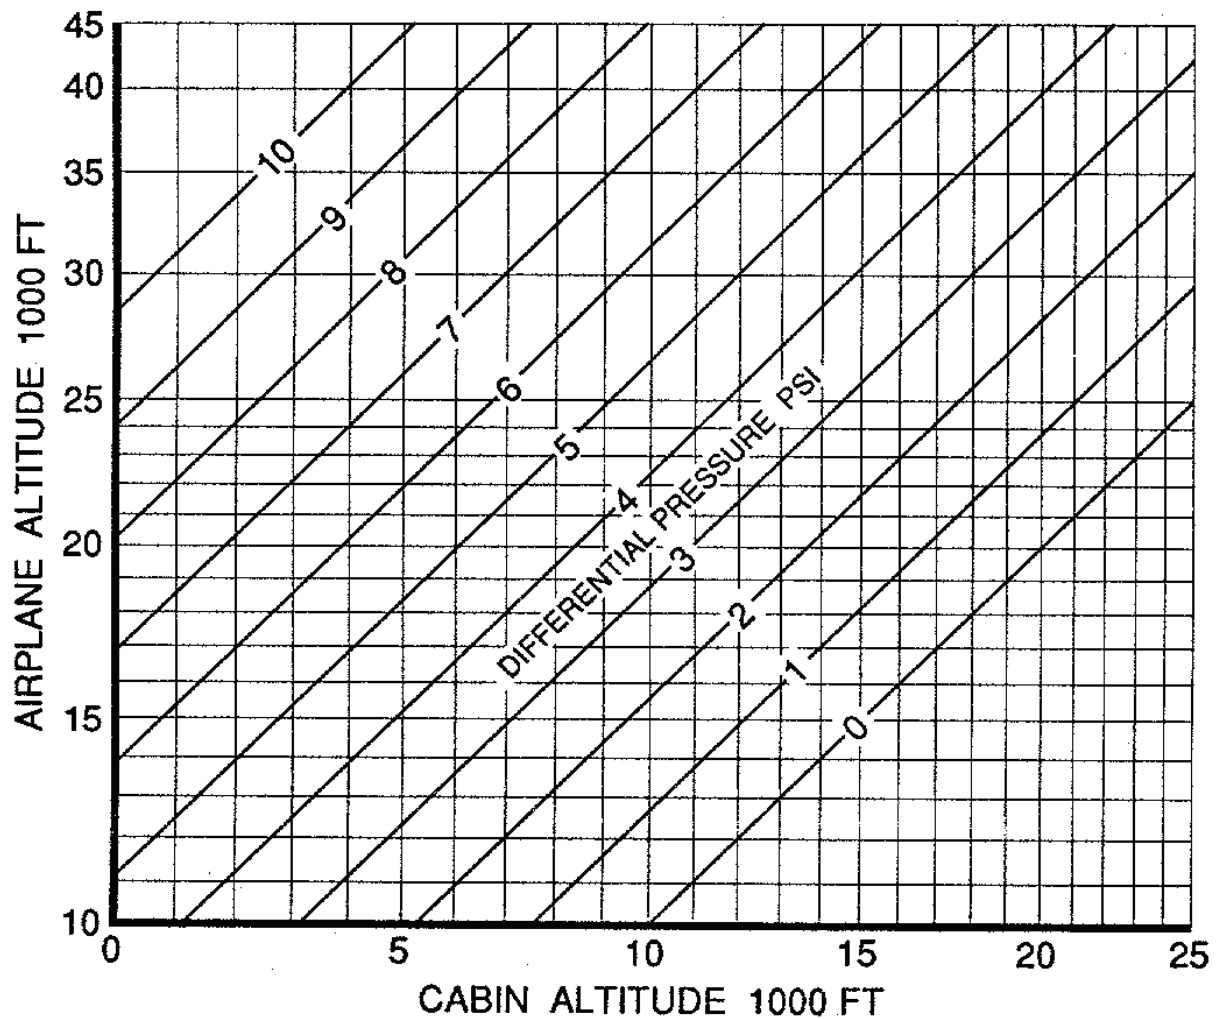

21-00-12B

Operate aircraft unpressurized. Refer to [MEL 21-00-10B](#) for (O) procedures.

21-00-12C

Operate aircraft unpressurized. Refer to [MEL 21-00-10C](#) for (O) procedures.

21-00-12D

Operate aircraft unpressurized. Refer to [MEL 21-00-10D](#) for (O) procedures.

(M) PROCEDURES

21-00-12B

Configure the airplane for unpressurized flight using [MEL 21-00-10B](#) (M) procedures.

21-00-12C

Configure the airplane for unpressurized flight using [MEL 21-00-10C](#) (M) procedures.

21-00-12D

Configure the airplane for unpressurized flight using [MEL 21-00-10D](#) (M) procedures.

21-00-13 Cabin Differential Pressure Indicator


NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-13A	Cabin Differential Pressure Indicator	Y	1	0	C (O) May be inoperative provided: 1. Cabin altitude indicator operates normally, and 2. A chart is provided to crew to convert cabin altitude to differential pressure.
21-00-13B	Cabin Differential Pressure Indicator (A/C 3701-3771, 3774-3777) “DISP.APPR.REQ’D”	Y	1	0	C (O) (M) May be inoperative provided: 1. flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, and 3. Recirculation fan(s) operate normally.
21-00-13C	Cabin Differential Pressure Indicator (A/C 3772, 3773) “DISP.APPR.REQ’D”	Y	1	0	C (O) (M) May be inoperative provided: 1. flight is conducted in an unpressurized configuration, 2. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away Kits (see MEL Instructions), 3. Outflow valve is positioned to 25% open position, and 4. Recirculation fan(s) operate normally.
21-00-13D	Cabin Differential Pressure Indicator (B737-900ER) “DISP.APPR.REQ’D”	N	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, 3. Recirculation fans operate normally, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-13A	Cabin Differential Pressure Indicator	Cabin Differential Pressure Indicator Digital Control System INOP
21-00-13B	Cabin Differential Pressure Indicator	Cabin Differential Pressure Indicator Digital Control System INOP
21-00-13C	Cabin Differential Pressure Indicator	Cabin Differential Pressure Indicator Digital Control System INOP
21-00-13D	Cabin Differential Pressure Indicator	Cabin Differential Pressure Indicator Digital Control System INOP

(O) PROCEDURES

21-00-13A

Use the following chart to determine cabin differential pressure.

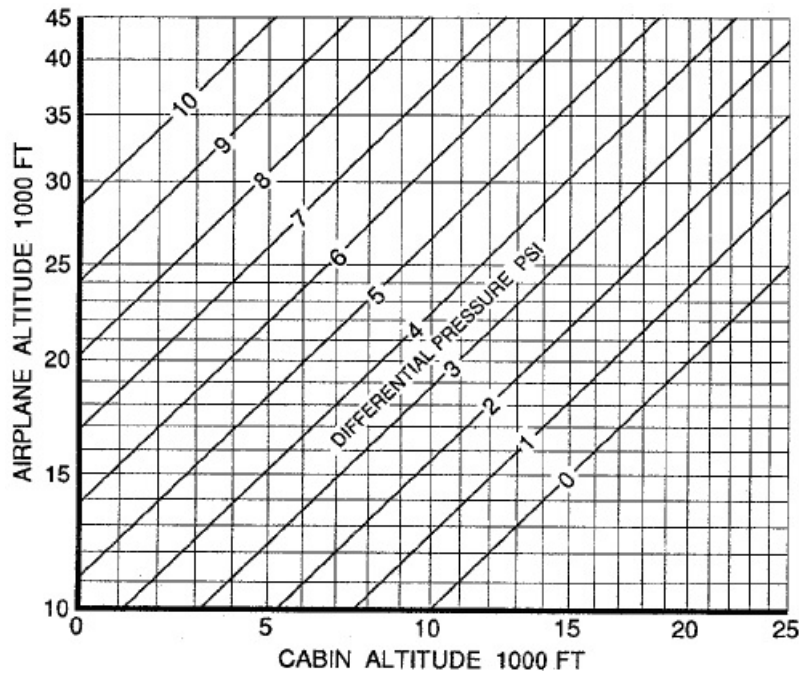

21-00-13B

Operate aircraft unpressurized. Refer to [MEL 21-00-10B](#) for (O) procedures.

21-00-13C

Operate aircraft unpressurized. Refer to [MEL 21-00-10C](#) for (O) procedures.

21-00-13D

Operate aircraft unpressurized. Refer to [MEL 21-00-10D](#) for (O) procedures.

(M) PROCEDURES

21-00-13B

Configure the airplane for unpressurized flight using [MEL 21-00-10B](#) (M) procedures.

21-00-13C

Configure the airplane for unpressurized flight using [MEL 21-00-10C](#) (M) procedures.

21-00-13D

Configure the airplane for unpressurized flight using [MEL 21-00-10D](#) (M) procedures.

21-00-14 Cabin Pressure Control System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
CABIN PRESSURE CONTROL SYSTEM					
21-00-14A	Automatic Modes	Y	2	1	C (O) (M) May be inoperative provided: 1. Manual mode operates normally, and 2. Inoperative controller is deactivated.
21-00-14B	Automatic Modes (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fan(s) operates normally, and 3. Extended overwater flight is prohibited.
21-00-14C	Automatic Modes (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fan(s) operates normally, and 3. Extended overwater flight is prohibited. 4. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away kits (see MEL Instructions).
21-00-14D	Automatic Modes (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in the 25% open position or removed, 2. Recirculation fans operate normally, 3. Extended overwater flight is prohibited, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).
21-00-14E	Manual Mode (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fan(s) operates normally, and 3. Extended overwater flight is prohibited.
21-00-14F	Manual Mode (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fan(s) operate normally, 3. Extended overwater flight is prohibited, and 4. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away kits (see MEL Instructions).

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-14G	CABIN PRESSURE CONTROL SYSTEM Manual Mode (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C
					(O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fans operate normally, 3. Extended overwater flight is prohibited, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-14A	Cabin Pressurization Panel	Cabin Pressure Control System Automatic Mode ____ Mode INOP
21-00-14B	Cabin Pressurization Panel	Cabin Pressure Control System Automatic Modes ____ Mode INOP
21-00-14C	Cabin Pressurization Panel	Cabin Pressure Control System Automatic Modes ____ Mode INOP
21-00-14D	Cabin Pressurization Panel	Cabin Pressure Control System Automatic Modes ____ Mode INOP
21-00-14E	Cabin Pressurization Panel	Cabin Pressure Control System Manual Mode ____ Mode INOP
21-00-14F	Cabin Pressurization Panel	Cabin Pressure Control System Manual Mode ____ Mode INOP
21-00-14G	Cabin Pressurization Panel	Cabin Pressure Control System Manual Mode ____ Mode INOP

Note: Some DCPCS faults indicated by an AUTO FAIL Light are recoverable. Momentarily re-positioning the Pressurization Mode Selector to ALTN and then back to AUTO. If the AUTO FAIL Light remains extinguished with the Pressurization Mode Selector in AUTO, the fault has been corrected and the controller is operating normally.

(O) PROCEDURES

21-00-14A

1. Normal operation of manual mode may be confirmed as follows:
 - A. Position the Pressurization Mode Selector to MAN.
 - B. Use the VALVE toggle switch to observe that the outflow valve position indicator moves to full open, to full closed and then back to full open.

Note: Place L and R PACK switches on the P5 forward overhead panel to OFF position or at least one exterior door or window is open to prevent uncontrolled pressurization of the cabin.

2. Place Pressurization Mode Selector to ALTN prior to dispatch.

Note: Subsequent illumination of the AUTO FAIL light during flight will require placing the Pressurization Mode Selector to MAN for manual mode operation.

21-00-14B, 21-00-14E

Operate aircraft unpressurized. Refer to [MEL 21-00-10B](#) for (O) procedures.

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

21-00-14C, 21-00-14F

Operate aircraft unpressurized. Refer to [MEL 21-00-10C](#) for (O) procedures.

21-00-14D, 21-00-14G

Operate aircraft unpressurized. Refer to [MEL 21-00-10D](#) for (O) procedures.

Note: *Temperature sensitive cargo and live animals should not be carried in the forward cargo compartment.*

(M) PROCEDURES

21-00-14A

Pull and secure the associated P6-4 panel circuit breaker PRESSURIZATION CONTROL-AUTO 1 or AUTO 2 to deactivate the inoperative channel.

21-00-14B, 21-00-14C

1. Configure airplane for unpressurized flight ([AMM 21-00-00/901](#)):
 - A. Manually position the outflow valve in the 25% open position:
 - i. Position the Pressurization Mode selector to MAN.
 - ii. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates 25% open.
 - iii. Manually position the outflow valve in the 25% open position:
 - iv. Pull and secure these P6-4 panel circuit breakers:
 - a. A/C OVERBOARD EXH VALVE RECONFIG CONT.
 - b. PRESSURIZATION CONTROL AUTO 1
 - c. PRESSURIZATION CONTROL AUTO 2
 2. If the outflow valve cannot be positioned to the 25% open position:
 - A. Pull and secure these P6-4 panel circuit breakers:
 - i. PRESSURIZATION CONTROL MANUAL
 - ii. PRESSURIZATION CONTROL AUTO 1
 - iii. PRESSURIZATION CONTROL AUTO 2
 - iv. PRESSURIZATION CONTROL IND
 - v. PRESSURIZATION CONTROL LCD LTG
 - B. Remove the outflow valve ([AMM 21-31-03/401](#)). Stow electrical connectors.
 - C. Pull and secure this P6-4 panel circuit breaker:
 - i. A/C OVERBOARD EXH VALVE RECONFIG CONT.

Note: *If the outflow valve cannot be positioned to the 25% open position using the above procedure, Maintenance is Required and Flight Crew May NOT Placard.*

21-00-14D

1. Configure airplane for unpressurized flight:
 - A. Manually position the outflow valve in the 25% open position:
 - i. Position the Pressurization Mode selector to MAN.
 - ii. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates 25% open.
 - iii. Pull and secure these P6-4 panel circuit breakers:
 - a. A/C OVERBOARD EXH VALVE RECONFIG CONT.
 - b. PRESSURIZATION CONTROL AUTO 1
 - c. PRESSURIZATION CONTROL AUTO 2
 - B. If the outflow valve cannot be positioned to the 25% open position, remove the outflow valve ([AMM 21-31-03/401](#)). Stow electrical connectors.
 - i. Pull and secure these P6-4 Panel circuit breakers:
 - a. PRESSURIZATION CONTROL MANUAL
 - b. PRESSURIZATION CONTROL AUTO 1
 - c. PRESSURIZATION CONTROL AUTO 2
 - d. PRESSURIZATION CONTROL IND

- e. PRESSURIZATION CONTROL LCD LTG
 - ii. Remove the outflow valve ([AMM 21-31-03/401](#)). Stow electrical connectors.
 - iii. Pull and secure this P6-4 panel circuit breaker:
 - a. A/C OVERBOARD EXH VALVE RECONFIG CONT.
- 2. Secure the forward cargo heat duct closed:
 - A. With shutoff valve 4063-20605-01 installed:
 - i. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - B. With shutoff valve 4063-20605-01 NOT installed:
 - i. Remove the forward cargo heat duct check valve.
 - ii. Install cap BOE2221-0011 in the heat duct.
- 3. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

21-00-14E, 21-00-14F

Configure airplane for unpressurized flight ([AMM 21-00-00/901](#))

- 1. Position the outflow valve in the 25% open position:
 - A. Set parking brake.
 - B. Start both engines ([AMM 71-00-00/201](#)).
 - C. Run the engines for two minutes to allow them to stabilize.
 - D. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.
 - E. Monitor the outflow valve position indicator as it goes to the closed position.
 - F. When the outflow valve is in the 25% position, pull and secure these P6-4 circuit breakers:
 - i. PRESSURIZATION CONTROL AUTO 1
 - ii. PRESSURIZATION CONTROL AUTO 2.
 - G. Retard thrust levers and shut down both engines.
- 2. If the outflow valve can not be positioned to the 25% open position, remove the outflow valve ([AMM 21-31-03/401](#)). Stow electrical connectors.
 - A. Pull and secure these P6-4 Panel circuit breakers:
 - i. PRESSURIZATION CONTROL MANUAL
 - ii. PRESSURIZATION CONTROL AUTO 1
 - iii. PRESSURIZATION CONTROL AUTO 2
 - iv. PRESSURIZATION CONTROL IND
 - v. PRESSURIZATION CONTROL LCD LTG
 - vi. A/C OVERBOARD EXH VALVE RECONFIG CONT.

21-00-14G

- 1. Configure airplane for unpressurized flight:
 - A. Position the outflow valve in the 25% open position:
 - i. Set parking brake.
 - ii. Start both engines ([AMM 71-00-00/201](#)).
 - iii. Run the engines for two minutes to allow them to stabilize.
 - iv. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.
 - v. Monitor the outflow valve position indicator as it goes to the closed position.
 - vi. When the outflow valve is in the 25% position, pull and secure these P6-4 circuit breakers:
 - a. PRESSURIZATION CONTROL AUTO 1
 - b. PRESSURIZATION CONTROL AUTO 2.
 - vii. Retard thrust levers and shut down both engines.
 - B. If the outflow valve cannot be positioned to the 25% open position, remove the outflow valve ([AMM 21-31-03/401](#)). Stow electrical connectors.
 - i. Pull and secure these P6-4 Panel circuit breakers:
 - a. PRESSURIZATION CONTROL MANUAL
 - b. PRESSURIZATION CONTROL AUTO 1
 - c. PRESSURIZATION CONTROL AUTO 2
 - d. PRESSURIZATION CONTROL IND
 - e. PRESSURIZATION CONTROL LCD LTG

CONTINUED ON NEXT PAGE

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

- ii. Remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
 - iii. Pull and secure this P6-4 panel circuit breaker:
 - a. A/C OVERBOARD EXH VALVE RECONFIG CONT.
- 2. Secure the forward cargo heat duct closed:
 - A. With shutoff valve 4063-20605-01 installed:
 - i. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - B. With shutoff valve 4063-20605-01 NOT installed:
 - i. Remove the forward cargo heat duct check valve.
 - ii. Install cap BOE2221-0011 in the heat duct.
- 3. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

21-00-15 Main Outflow Valve Automatic Mode Actuators

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-15A	Main Outflow Valve Automatic Mode Actuators	Y	2	1	C May be inoperative provided the manual mode actuator operates normally.
21-00-15B	Main Outflow Valve Automatic Mode Actuators (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in the 25% open position or removed, 2. Recirculation fan(s) operates normally, and 3. Extended overwater flight is prohibited.
21-00-15C	Main Outflow Valve Automatic Mode Actuators (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away kits (see MEL Instructions), 2. Outflow valve is deactivated in the 25% open position or removed, 3. Recirculation fans operate normally, and 4. Extended overwater flight is prohibited.
21-00-15D	Main Outflow Valve Automatic Mode Actuators (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fans operate normally, 3. Extended overwater flight is prohibited, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).
21-00-15E	Main Outflow Valve Manual Mode Actuator (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in the 25% open position or removed, 2. Recirculation fan(s) operate normally, and 3. Extended overwater flight is prohibited.
21-00-15F	Main Outflow Valve Manual Mode Actuator (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away kits (see MEL Instructions), 2. Outflow valve is deactivated in the 25% open position or removed, 3. Recirculation fans operate normally, and 4. Extended overwater flight is prohibited.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-15G	Main Outflow Valve Manual Mode Actuator (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative for unpressurized flight provided: 1. Outflow valve is deactivated in 25% open position or removed, 2. Recirculation fans operate normally, 3. Extended overwater flight is prohibited, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-15A	Cabin Pressurization Panel	Main Outflow Valve Automatic Mode ____ Actuator INOP
21-00-15B	Cabin Pressurization Panel	Main Outflow Valve Automatic Mode ____ Actuators INOP
21-00-15C	Cabin Pressurization Panel	Main Outflow Valve Automatic Mode ____ Actuators INOP
21-00-15D	Cabin Pressurization Panel	Main Outflow Valve Automatic Mode ____ Actuators INOP
21-00-15E	Cabin Pressurization Panel	Main Outflow Valve Manual Mode Actuator INOP
21-00-15F	Cabin Pressurization Panel	Main Outflow Valve Manual Mode Actuator INOP
21-00-15G	Cabin Pressurization Panel	Main Outflow Valve Manual Mode Actuator INOP

(O) PROCEDURES

21-00-15B, 21-00-15E

Operate aircraft unpressurized. Refer to MEL 21-00-10B for (O) procedures.

21-00-15C, 21-00-15F

Operate aircraft unpressurized. Refer to MEL 21-00-10C for (O) procedures.

21-00-15D, 21-00-15G

Operate aircraft unpressurized. Refer to MEL 21-00-10D for (O) procedures.

Note: Temperature sensitive cargo and live animals should not be carried in the forward cargo compartment.

(M) PROCEDURES

21-00-15B, 21-00-15C

Configure airplane for unpressurized flight:

1. Position the outflow valve in the 25% open position using one of the two following methods:
 - A. For Automatic Mode Actuators inoperative:
 - i. Position the Pressurization Mode selector to MAN.
 - ii. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates 25% open.
 - B. For Manual Mode Actuator inoperative:
 - i. Set parking brake.
 - ii. Start both engines (AMM 71-00-00/201).
 - iii. Run the engines for two minutes to allow them to stabilize.
 - iv. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.
 - v. Monitor the outflow valve position indicator as it goes to the closed position.
 - vi. When the outflow valve is in the 25% position, pull and secure these P6-4 circuit breakers:

CONTINUED ON NEXT PAGE

- a. PRESSURIZATION CONTROL AUTO 1
 - b. PRESSURIZATION CONTROL AUTO 2.
- vii. Retard thrust levers and shut down both engines. If the outflow valve cannot be positioned to the 25% open position, remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
- 2. If the outflow valve cannot be positioned to the 25% open position, remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
- 3. Pull and secure these P-6 Panel circuit breakers:
 - A. PRESSURIZATION CONTROL MANUAL
 - B. PRESSURIZATION CONTROL AUTO 1
 - C. PRESSURIZATION CONTROL AUTO 2
 - D. PRESSURIZATION CONTROL IND
 - E. PRESSURIZATION CONTROL LCD LTG
 - F. A/C OVERBOARD EXH VALVE RECONFIG CONT.

21-00-15D

Configure airplane for unpressurized flight:

- 1. Position the outflow valve in the 25% open position using one of the two following methods:
 - A. For Automatic Mode Actuators inoperative:
 - i. Position the Pressurization Mode selector to MAN.
 - ii. Hold the VALVE toggle switch in the OPEN position until valve position indicator indicates 25% open.
 - B. For Manual Mode Actuator inoperative:
 - i. Set parking brake.
 - ii. Start both engines (AMM 71-00-00/201).
 - iii. Run the engines for two minutes to allow them to stabilize.
 - iv. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.
 - v. Monitor the outflow valve position indicator as it goes to the closed position.
 - vi. When the outflow valve is in the 25% position, pull and secure these P6-4 circuit breakers:
 - a. PRESSURIZATION CONTROL AUTO 1
 - b. PRESSURIZATION CONTROL AUTO 2.
 - vii. Retard thrust levers and shut down both engines.
- 2. If the outflow valve cannot be positioned to the 25% open position, remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
- 3. Pull and secure these P-6 Panel circuit breakers:
 - A. PRESSURIZATION CONTROL MANUAL
 - B. PRESSURIZATION CONTROL AUTO 1
 - C. PRESSURIZATION CONTROL AUTO 2
 - D. PRESSURIZATION CONTROL IND
 - E. PRESSURIZATION CONTROL LCD LTG
- 4. Secure the forward cargo heat duct closed:
 - A. With shutoff valve 4063-20605-01 installed:
 - i. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - B. With shutoff valve 4063-20605-01 NOT installed:
 - i. Remove the forward cargo heat duct check valve.
 - ii. Install cap BOE2221-0011 in the heat duct.
- 5. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F (23 degrees C).

21-00-15E, 21-00-15F

Configure airplane for unpressurized flight (AMM 21-00-00/901)

- 1. Position the outflow valve in the 25% open position:
 - A. Set parking brake.
 - B. Start both engines (AMM 71-00-00/201).
 - C. Run the engines for two minutes to allow them to stabilize.
 - D. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.

- E. Monitor the outflow valve position indicator as it goes to the closed position.
- F. When the outflow valve is in the 25% position, open and collar these P6-4 panel circuit breakers:
 - i. PRESSURIZATION CONTROL AUTO 1
 - ii. PRESSURIZATION CONTROL AUTO 2
- G. Retard thrust levers and shut down both engines.
- H. Open and collar this P6-4 panel circuit breaker:
 - i. A/C OVERBOARD EXH VALVE RECONFIG CONT
2. If the outflow valve cannot be positioned to the 25% open position:
 - A. Open and collar these P6-4 panel circuit breakers:
 - i. PRESSURIZATION CONTROL MANUAL
 - ii. PRESSURIZATION CONTROL AUTO 1
 - iii. PRESSURIZATION CONTROL AUTO 2
 - iv. PRESSURIZATION CONTROL IND
 - v. PRESSURIZATION CONTROL LCD LTG
 - B. Remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
 - C. Open and collar this P6-4 panel circuit breaker:
 - i. A/C OVERBOARD EXH VALVE RECONFIG CONT

21-00-15G

Configure airplane for unpressurized flight (AMM 21-00-00/901)

1. Position the outflow valve in the 25% open position:
 - A. Set parking brake.
 - B. Start both engines (AMM 71-00-00/201).
 - C. Run the engines for two minutes to allow them to stabilize.
 - D. Advance thrust levers as necessary to make sure that N1 is greater than 60% and N2 is greater than 89%.
 - E. Monitor the outflow valve position indicator as it goes to the closed position.
 - F. When the outflow valve is in the 25% position, open and collar these P6-4 panel circuit breakers:
 - i. PRESSURIZATION CONTROL AUTO 1
 - ii. PRESSURIZATION CONTROL AUTO 2
 - G. Retard thrust levers and shut down both engines.
 - H. Open and collar this P6-4 panel circuit breaker:
 - i. A/C OVERBOARD EXH VALVE RECONFIG CONT
2. If the outflow valve cannot be positioned to the 25% open position:
 - A. Open and collar these P6-4 panel circuit breakers:
 - i. PRESSURIZATION CONTROL MANUAL
 - ii. PRESSURIZATION CONTROL AUTO 1
 - iii. PRESSURIZATION CONTROL AUTO 2
 - iv. PRESSURIZATION CONTROL IND
 - v. PRESSURIZATION CONTROL LCD LTG
 - B. Remove the outflow valve (AMM 21-31-03/401). Stow electrical connectors.
 - C. Open and collar this P6-4 panel circuit breaker:
 - i. A/C OVERBOARD EXH VALVE RECONFIG CONT
3. Secure the forward cargo heat duct closed:
 - A. With shutoff valve 4063-20605-01 installed:
 - i. Locate the manual lever on top of the forward cargo heat duct shutoff valve and move the lever from the fully open (O) position to the fully closed (C) position.
 - B. With shutoff valve 4063-20605-01 NOT installed:
 - i. Remove the forward cargo heat duct check valve.
 - ii. Install cap BOE2221-0011 in the heat duct.
4. Use an operative pack or ground cart to provide cooling when the airplane is electrically powered on the ground and airport temperatures are at or above 73 degrees F / 23 degrees C.

21-00-16 Pressure Relief Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-16A	Pressure Relief Valves	N	2	1	C	(M) May be inoperative closed for pressurized flight.
21-00-16B	Pressure Relief Valves (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	2	0	C	(O) (M) Both may be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to the 25% open position, and 3. Recirculation fan(s) operates normally.
21-00-16C	Pressure Relief Valves (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	2	0	C	(O) (M) Both may be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or Fly Away kits (see MEL Instructions), 3. Outflow valve is positioned to 25% open position, and 4. Recirculation fan(s) operate normally.
21-00-16D	Pressure Relief Valves (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C	(O) (M) Both may be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, 3. Recirculation fans operate normally, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-16A	Cabin Altitude / Differential Pressure Indicator	____ Pressure Relief Valve INOP
21-00-16B	Cabin Altitude / Differential Pressure Indicator	____ Pressure Relief Valve(s) INOP
21-00-16C	Cabin Altitude / Differential Pressure Indicator	____ Pressure Relief Valve(s) INOP
21-00-16D	Cabin Altitude / Differential Pressure Indicator	____ Pressure Relief Valve(s) INOP

(O) PROCEDURES

21-00-16B

Operate aircraft unpressurized. Refer to MEL 21-00-10B for (O) procedures.

21-00-16C

Operate aircraft unpressurized. Refer to MEL 21-00-10C for (O) procedures.

21-00-16D

Operate aircraft unpressurized. Refer to MEL 21-00-10D for (O) procedures.

(M) PROCEDURES

21-00-16A

Install a blanking plate in place of the inoperative pressure relief valve per [AMM Task 21-00-00-040-811](#).

Note: *Make certain that the holes to accept locating pins and ambient sense tube are drilled through blanking plate.*

21-00-16B

Refer to [MEL 21-00-10B](#) for (M) procedures.

21-0016C

Refer to [MEL 21-00-10C](#) for (M) procedures.

21-00-10D

Refer to [MEL 21-00-10D](#) for (M) procedures.

21-00-17 Temperature Indicators

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
TEMPERATURE INDICATORS						
21-00-17A	Supply Duct (B737-800) (B737-900ER)	Y	3	0	C	May be inoperative provided associated ZONE TEMP light operates normally.
21-00-17B	Pass Cabin	Y	-	0	C	May be inoperative.
21-00-17C	Pack (B737-800) B737-900ER)	Y	2	0	C	May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-17A	Air Temp Source Selector	Supply Duct Temp Indicator INOP
21-00-17B	Air Temp Source Selector	Pass Cabin Temp Indicator INOP
21-00-17C	Air Temp Source Selector	Pack Temp Indicator INOP

21-00-18 DUCT Overheat Warning Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	DUCT Overheat Warning Lights				
21-00-18	ZONE TEMP	Y	3	0	C
					May be inoperative provide associated supply duct temperature indicator operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-18	Affected ZONE TEMP Warning Light	____ ZONE TEMP Warning Light INOP

21-00-19 Passenger Cabin Temperature Control System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PASSENGER CABIN TEMPERATURE CONTROL SYSTEM					
21-00-19A	FWD / AFT (B737-800) (B737-900ER)	Y	2	0	C
(O) May be dispatched with faults indicated by ZONE TEMP Light(s) during MASTER CAUTION recall provided associated temperature control system is checked to operate normally PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)					
21-00-19B	FWD / AFT (B737-800)	Y	2	0	C
(O) (M) May be inoperative provided: 1. Trim Air Pressure Regulating and Shutoff Valve remains CLOSED, and 2. The Trim Air switch remains OFF.					
21-00-19C	FWD / AFT (B737-800)	N	2	0	C
(O) (M) May be inoperative provided associated Trim Air Modulating Valve is deactivated CLOSED.					
21-00-19D	FWD / AFT (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C
(O) (M) May be inoperative provided: 1. Trim Air Pressure Regulating and Shutoff Valve remains CLOSED, 2. Forward cargo heat duct is secured closed, 3. Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and 4. One air conditioning pack is considered inoperative and deferred per MEL 21-00-01D or 21-00-01E as applicable.					
21-00-19E	FWD / AFT (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C
(O) (M) May be inoperative provided: 1. Associated Trim Air Modulating Valve is deactivated CLOSED, 2. Forward cargo heat duct is secured closed, 3. Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and 4. One air conditioning pack is considered inoperative and deferred per MEL 21-00-01D or 21-00-01E as applicable.					

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-19A	Passenger Cabin Temp Selector	Passenger Cabin Temp ____ Control(s) INOP
21-00-19B	1. Passenger Cabin Temp Selector 2. Trim Air Switch	1. Passenger Cabin Temp ____ Control(s) INOP 2. DO NOT OPERATE
21-00-19C	1. Passenger Cabin Temp Selector 2. Trim Air Switch	1. Passenger Cabin Temp ____ Control(s) INOP 2. DO NOT OPERATE
21-00-19D	1. Passenger Cabin Temp Selector 2. Trim Air Switch	1. Passenger Cabin Temp ____ Control(s) INOP 2. DO NOT OPERATE
21-00-19E	1. Passenger Cabin Temp Selector 2. Trim Air Switch	1. Passenger Cabin Temp ____ Control(s) INOP 2. DO NOT OPERATE

CONTINUED ON NEXT PAGE

(O) PROCEDURES

21-00-19A

PRIOR TO EACH DEPARTURE:

1. Make sure that the passenger cabin temperature is stabilized between 70°F and 80°F.
2. Position the AIR TEMP Selector to affected PASS CAB SUPPLY DUCT – FWD or AFT.
3. Rotate the associated Cabin Temperature Selector full clockwise and observe that the corresponding SUPPLY DUCT temperature increases.
4. Rotate the associated Cabin Temperature Selector full counter clockwise and observe that the corresponding SUPPLY DUCT temperature decreases.

21-00-19B, 21-00-19C

Operate all zone temperature selectors normally. The left pack will control the flight deck temperature and the right pack will control the passenger cabin temperature using the average of the two cabin zone temperature settings.

21-00-19D

1. Use [MEL 21-00-01](#) (O) procedures.
2. Operate with TRIM AIR switch OFF.
3. Use normal procedures to operate the temperature selectors.

21-00-19E

1. Use [MEL 21-00-01](#) (O) procedures.
2. Use normal procedures to operate the temperature selectors.

Note: With a trim air modulating valve deactivated, the associated FWD CAB or AFT CAB ZONE TEMP light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.

(M) PROCEDURES

21-00-19B

Position the TRIM AIR switch OFF.

21-00-19C

Deactivate trim air modulating valve(s) (locked closed) ([AMM 21-00-00-040-822](#)):

1. Position the associated Zone Temperature Selector (FWD CAB and/or AFT CAB) OFF.
2. Locate the associated trim air modulating valve(s) in the right hand air conditioning bay. Using the valve manual override, position the valve(s) to the CLOSED position as indicated on the valve visual indicator(s).
3. Disconnect and stow the electrical connector from the valve(s). This will disable the associated cabin zone temperature control and ensure the trim air modulating valve(s) remains closed.
4. Position the associated zone temperature selectors(s) to the normal range.

21-00-19D

1. Position the TRIM AIR switch to OFF.
2. Use [MEL 21-00-01D](#) or [MEL 21-00-01E](#) (M) procedures to deactivate one pack and secure the forward cargo heat duct closed.

21-00-19E

Deactivate trim air modulating valve(s) (locked closed) and secure the forward cargo heat duct closed ([AMM 21-00-00-040-822](#)):

1. Position the FWD CAB and/or AFT CAB Temperature Selector to OFF.
2. Locate the associated trim air modulating valve(s) in the right ECS bay.
3. Turn the manual override until the visual position indicator shows the full closed position.
4. Disconnect and stow the electrical connector from the valve(s).

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

5. Position the associated Temperature Selector(s) to the normal temperature range.
6. Use [MEL 21-00-01D](#) or [MEL 21-00-01E](#) (M) procedures to deactivate one pack and secure the forward cargo heat duct closed.

21-00-21 Flight Deck Temperature Control Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
FLIGHT DECK TEMPERATURE CONTROL SYSTEMS					
21-00-21A	Primary / Back-up Modes	Y	2	1	C (O) may be inoperative provided remaining temperature control is verified to operate normally.
21-00-21B	Primary / Back-up Modes (B737-800)	Y	2	0	C (O) (M) May be inoperative provided Trim Air Pressure Regulating and Shutoff Valve remains CLOSED.
21-00-21C	Primary / Back-up Modes (B737-800)	N	2	0	C (O) (M) May be inoperative provided associated Trim Air Modulation Valve is deactivated CLOSED.
21-00-21D	Primary / Back-up Modes (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative provided: - Trim Air Pressure Regulating and Shutoff Valve remains closed, - Forward cargo heat duct is secured closed, - Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and - One air conditioning pack is considered inoperative and deferred per MEL 21-00-01D or 21-00-01E as applicable.
21-00-21E	Primary / Back-up Modes (B737-900ER) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative provided: - Associated Trim Air Modulating Valve is deactivated CLOSED, - Forward cargo heat duct is secured closed, - Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and - One air conditioning pack is considered inoperative and deferred per MEL 21-00-01D or 21-00-01E as applicable.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-21A	Cockpit Temp Selector	Cockpit Temp Control ____ Mode INOP
21-00-21B	Cockpit Temp Selector	Cockpit Temp ____ Control Primary / Back-up Modes INOP
21-00-21C	Cockpit Temp Selector	Cockpit Temp ____ Control Primary / Back-up Modes INOP
21-00-21D	Cockpit Temp Selector	Cockpit Temp ____ Control Primary / Back-up Modes INOP
21-00-21E	Cockpit Temp Selector	Cockpit Temp ____ Control Primary / Back-up Modes INOP

(O) PROCEDURES

21-00-21A

use the following procedure to verify that one of the flight deck temperature control systems (Primary or Back-up) is operating normally:

- Press and release either system annunciator panel on the light shield. The ZONE TEMP light for the CONT CAB, the AIR COND annunciator panel light and the MASTER CAUTION light will illuminate if a fault in the either the primary or secondary controller is present.

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

2. Press and release either MASTER CAUTION light on the light shield. The ZONE TEMP light, AIR COND panel light and the MASTER CAUTION lights will extinguish. A ZONE TEMP light that extinguishes upon MASTER CAUTION reset is confirmation of a single controller failure.

Note: *When an intermittent controller fault is present, Step 1 may result in the absence of a ZONE TEMP and AIR COND annunciator light. This indicates that both primary and secondary controllers are currently operable but continued MEL deferral is advised until the system can be evaluated. Continue with Step 3 to assure that supply duct temperatures respond to temperature selector inputs.*

3. Confirm that the Flight Deck supply duct temperature responds to the Temperature Selector as follows:
 - A. Select the Air Temperature Source Selector to SUPPLY DUCT – CONT CABIN.
 - B. Select the CONT CAB Temperature Selector to the full clockwise position (full warm) and observe that the SUPPLY DUCT – CONT CABIN temperature increases.
 - C. Select the CONT CAB Temperature Selector to the full counter-clockwise position (full cold) and observe that the SUPPLY DUCT – CONT CABIN temperature decreases.
4. Operate all the zone temperature selectors normally.

Note: *With both flight deck temperature control systems inoperative, the left pack will control the flight deck temperature and the right pack will control the passenger cabin temperature. With the TRIM AIR switch positioned to OFF, the two cabin zone temperature setting will be averaged.*

21-00-21B, 21-00-21C

Operate all the zone temperature selectors normally.

Note: *With both flight deck temperature control systems inoperative, the left pack will control the flight deck temperature and the right pack will control the passenger cabin temperature. With the TRIM AIR switch positioned to OFF, the two cabin zone temperature setting will be averaged.*

21-00-21D

1. Use [MEL 21-00-01](#) (O) procedures.
2. Operate with TRIM AIR switch OFF.
3. Use normal procedures to operate the temperature selectors.

21-00-21E

1. Use [MEL 21-00-01](#) (O) procedures.
2. Use normal procedures to operate the temperature selectors.

Note: *With a trim air modulating valve deactivated, the associated FWD CAB or AFT CAB ZONE TEMP light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.*

(M) PROCEDURES

21-00-21B

Position the TRIM AIR switch to OFF.

21-00-21C

Deactivate flight deck trim air modulating valve (locked closed) ([AMM 21-00-00-040-822](#)):

1. Position the CONT CAB zone temperature selector to OFF.
2. Locate the associated trim air modulating valve in the left hand air conditioning bay. Using the valve manual override, position the valve to the CLOSED position as indicated on the valve visual indicator.
3. Disconnect and stow the electrical connector from the valve. This will disable the associated cabin zone temperature control and ensure that the trim air modulating valve remains closed.
4. Position the associated zone temperature selector to the normal range.

21-00-21D

1. Position the TRIM AIR switch to OFF.

CONTINUED ON NEXT PAGE

 DELTA	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
--	---	---

2. Defer one pack per [MEL 21-00-01D](#) or [21-00-01E](#) as applicable.

21-00-21E

Deactivate flight deck trim air modulating valve (locked closed) and secure the forward cargo heat duct closed ([AMM 21-00-00-040-822](#)):

1. Position the CONT CAB Temperature Selector to OFF.
2. Locate the flight deck trim air modulating valve in the left ECS bay.
3. Turn the manual override until the visual position indicator shows the full closed position.
4. Disconnect and stow the electrical connector from the valve.
5. Position the CONT CAB Temperature Selector to the normal temperature range.
6. Secure the forward cargo heat duct closed and defer one pack per [MEL 21-00-01D](#) or [21-00-01E](#) as applicable.

21-00-26 Ground Preconditioned Air Connection Check Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-26A	Ground Preconditioned Air Connection Check Valve	Y	1	0	C May be inoperative closed.
21-00-26B	Ground Preconditioned Air Connection Check Valve (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, Outflow valve is positioned to the 25% open position, and 2. Recirculation fan(s) operate normally.
21-00-26C	Ground Preconditioned Air Connection Check Valve (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), 3. Outflow valve is positioned to the 25% open position, and 4. Recirculation fan(s) operate normally.
21-00-26D	Ground Preconditioned Air Connection Check Valve (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, 3. Recirculation fans operate normally, 4. Forward cargo heat duct is secured closed, and 5. Ambient airport temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-26A	Cabin Pressure Control Panel	Ground Preconditioned Air Connection Check Valve INOP CLOSED
21-00-26B	Cabin Pressure Control Panel	Ground Preconditioned Air Connection Check Valve INOP
21-00-26C	Cabin Pressure Control Panel	Ground Preconditioned Air Connection Check Valve INOP
21-00-26D	Cabin Pressure Control Panel	Ground Preconditioned Air Connection Check Valve INOP

(O) PROCEDURES

21-00-26B

Operate aircraft unpressurized. Refer to [MEL 21-00-10B](#) for (O) procedures.

21-00-26C

Operate aircraft unpressurized. Refer to [MEL 21-00-10C](#) for (O) procedures.

21-00-26D

Operate aircraft unpressurized. Refer to [MEL 21-00-10D](#) for (O) procedures.

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

(M) PROCEDURES

21-00-26B

Use [MEL 21-00-10B](#) (M) procedures to position the outflow valve to the 25% open position.

21-00-26C

Use [MEL 21-00-10C](#) (M) procedures to position the outflow valve to the 25% open position.

21-00-26D

Use [MEL 21-00-10D](#) (M) procedures to position the outflow valve to the 25% open position and secure the forward cargo heat duct closed.

21-00-27 Electrical / Electronic Equipment Cooling Blowers

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
ELECTRICAL / ELECTRONIC EQUIPMENT COOLING BLOWERS					
21-00-27	CDS (Common Display System)	N	4	3	B (O) (M) One fan may be inoperative provided: 1. All remaining fans are verified to operate normally, and 2. Both low flow detectors are verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-27	Equipment Cooling Switch Panel	Equipment Cooling Fan CDS INOP

(O) PROCEDURES

(O) PROCEDURE NOTES

Note: If the EQUIP COOLING SUPPLY OFF light illuminates during flight (both supply fans inoperative), continued flight beyond 30 minutes can result in loss of the Captain's Display Units and the lower center Display Unit.

Note: If the EQUIP COOLING EXHAUST OFF light illuminates during flight (both exhaust fans inoperative), continued flight beyond 30 minutes can result in loss of the First Officer's Display Units and the upper center Display Unit.

1. On the P5 Equipment Cooling Panel, put the applicable SUPPLY or EXHAUST switch to the operative fan position (NORM or ALTN).
 - A. Make sure that the applicable cooling supply or exhaust OFF light goes off.

(M) PROCEDURES

Perform [AMM Task 21-00-00-040-839](#).

21-00-31 Recirculation Fan(s)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-31A	Recirculation Fan(s) “DISP.APPR.REQ’D”	Y	2	1	C	Left fan may be inoperative provided the left pack is operating when OAT is above 100 degrees F (38 degrees C).
21-00-31B	Recirculation Fan(s) “DISP.APPR.REQ’D”	Y	2	1	C	Right fan may be inoperative provided: 1. The left pack is operating when OAT is above 100 degrees F (38 degrees C), and 2. Flight is conducted pressurized.
21-00-31C	Recirculation Fan(s) “DISP.APPR.REQ’D”	Y	2	0	C	May be inoperative provided: 1. OAT remains below 100 degrees F (38 degrees C), and 2. Flight is conducted pressurized.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-31A	Associated Recirculation Fan Switch	____ Recirculation Fan INOP
21-00-31B	Associated Recirculation Fan Switch	____ Recirculation Fan INOP
21-00-31C	Associated Recirculation Fan Switch(es)	____ Recirculation Fan INOP

OPERATIONS note: Position affected Recirculation Fan Switch(es) to OFF.

21-00-32 Pack Temperature Control System(s) (Electronic Pack / Zone Controller)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y			REMARKS OR EXCEPTIONS
21-00-32	Pack Temperature Control System(s) (Electronic Pack / Zone Controller or Pack Flow Controller)	Y	4	2	C (O) One system (primary or standby) on each pack may be inoperative provided remaining system on associated pack is checked to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-32	Associated PACK Light	_____ Pack Temperature Control System _____ Controller INOP

(O) PROCEDURES

verify that remaining system on associated pack operates normally as follows:

1. Press and release a system annunciator panel on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light may illuminate.
2. Press and release a MASTER CAUTION light on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light will extinguish.
3. Illumination of the affected lights when recalled and extinguishing when reset verifies that the remaining pack temperature control system operates normally.

Note: The ZONE TEMP light(s) may illuminate during recall but must extinguish after MASTER CAUTION Light is pressed.

21-00-33 Pack Temperature Control Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-33A	Pack Temperature Control Valves (Inoperative Closed)	Y	2	0	C (O) One or both may be inoperative closed provided associated Standby Pack Temperature Control Valve(s) is verified to operate normally.
21-00-33B	Pack Temperature Control Valves (Deactivated Closed)	N	2	0	C (O) (M) One or both may be inoperative provided: - Associated Temperature Control Valve(s) is deactivated closed, and - Associated Standby Temperature Control Valve(s) is verified to operate normally.
21-00-33C	Pack Temperature Control Valves (Associated Pack Not Used) "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) One or both may be inoperative provided associated pack(s) is considered inoperative and deferred MEL 21-00-01A, 21-00-01B, 21-00-01C, 21-00-01D, 21-00-01E, or 21-00-01F as applicable. Note: For -900 aircraft pack deferral, Maintenance is Required and Flight Crew May NOT Placard.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-33A	Associated Pack Switch(es)	___ Pack Temperature Control Valve(s) INOP
21-00-33B	Associated Pack Switch	___ Pack Temperature Control Valve(s) INOP
21-00-33C	Associated Pack Switch(es)	___ Pack Temperature Control Valve(s) INOP

(O) PROCEDURES

21-00-33A, 21-00-33B

If the associated pack is to be used, verify that the remaining pack temperature control system operates normally as follows:

- Press and release a system annunciator panel on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light will illuminate if a fault in the either the primary or secondary controller is present.
- Press and release a MASTER CAUTION light on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light will extinguish. A PACK light that extinguishes upon MASTER CAUTION reset is confirmation of a single controller failure.

Note: When an intermittent controller fault is present, Step 1 may result in the absence of a PACK and AIR COND annunciator light. This indicates that both primary and secondary controllers are currently operable but continued MEL deferral is advised until the system can be evaluated.

21-00-33C

If one pack is not used refer to MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E for (O) procedures.

If both packs are not used refer to 21-00-01C or 21-00-01F for (O) procedures.

(M) PROCEDURES

21-00-33B

Deactivate and lock the associated Pack Temperature Control Valve closed per AMM Task 21-00-00-040-840.

21-00-33C

Defer one or both packs per MEL 21-00-01A, 21-00-01B, 21-00-01C, 21-00-01D, 21-00-01E, or 21-00-01F as applicable.

21-00-34 Standby Pack Temperature Control Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
21-00-34A	Standby Pack Temperature Control Valves	N	2	0	C	(O) May be inoperative provided associated Pack Temperature Control Valve(s) is checked to operate normally.
21-00-34B	Standby Pack Temperature Control Valves "DISP.APPR.REQ'D"	N	2	1	C	(O) (M) May be inoperative provided associated pack is deferred per MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E as applicable.
21-00-34C	Standby Pack Temperature Control Valves "DISP.APPR.REQ'D"	N	2	0	C	(O) (M) Both may be inoperative provided both packs are deferred per 21-00-01C or 21-00-01F as applicable.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-34A	Associated pack Switch(es)	Standby Pack Temperature Control Valves INOP
21-00-34B	Associated pack Switch	Standby Pack Temperature Control Valve INOP
21-00-34C	Associated pack Switch(es)	Standby Pack Temperature Control Valves INOP

(O) PROCEDURES

21-00-34A

If the associated pack is to be used, verify that one of the pack temperature control systems operates normally as follows:

1. Press and release a system annunciator panel on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light may illuminate.
2. Press and release a MASTER CAUTION light on the lightshield. The affected PACK light, AIR COND light, and MASTER CAUTION light will extinguish.
3. Illumination of the affected lights when recalled and extinguishing when reset verifies that the remaining pack temperature control system operates normally.

21-00-34B

If one pack is not used refer to MEL 21-00-01 for (O) procedures.

21-00-34C

If both packs are not used refer to MEL 21-00-01 for (O) procedures.

(M) PROCEDURES

21-00-034B

Defer associated pack per MEL 21-00-01A, 21-00-01B, 21-00-01D, or 21-00-01E as applicable.

21-00-34C

Defer both packs per 21-00-01C or 21-00-01F as applicable.

21-00-35 Trim Air Pressure Regulating And Shutoff Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-35A	Trim Air Pressure Regulating and Shutoff Valve (B737-800)	N	1	0	C	(M) May be inoperative secured closed.
21-00-35B	Trim Air Pressure Regulating and Shutoff Valve (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C	(O) (M) May be inoperative provided: 1. Forward cargo heat duct is secured closed, 2. Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and 3. One air conditioning pack is considered inoperative and deferred per 21-00-01D or 21-00-01E as applicable.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-35A	Trim Air Switch	Trim Air Pressure Regulating and Shutoff Valve INOP
21-00-35B	Trim Air Switch	Trim Air Pressure Regulating and Shutoff Valve INOP

(O) PROCEDURES

21-00-35B

Refer to 21-00-01D or 21-00-01E as applicable for (O) procedures.

(M) PROCEDURES

21-00-35A

- Position the TRIM AIR switch to OFF.
- manually close the trim air pressure and regulating valve (located in the right air conditioning bay next to the keel beam, inboard of the Air Cycle Machine (ACM)) using the valve manual override.
- Pull and secure the TRIM AIR PRESS circuit breaker on the P6-4 panel.

21-00-35B

- Position the TRIM AIR switch to OFF.
- manually close the trim air pressure and regulating valve (located in the right air conditioning bay next to the keel beam, inboard of the Air Cycle Machine (ACM)) using the valve manual override.
- Pull and secure the TRIM AIR PRESS circuit breaker on the P6-4 panel.
- Defer one pack per 21-00-01D or 21-00-01E as applicable.

21-00-36 Trim Air Modulating Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
21-00-36A	Trim Air Modulating Valves (B737-800)	N	3	0	C	(O) (M) May be inoperative closed.	
21-00-36B	Trim Air Modulating Valves (B737-800)	Y	3	0	C	(O) May be inoperative in any position provided the Trim Air Pressure Regulating and Shutoff Valve remains closed.	
21-00-36C	Trim Air Modulating Valves (B737-900ER) “DISP.APPR.REQ’D”	N	3	0	C	(O) (M) May be inoperative closed provided: 1. Forward cargo heat duct is secured closed, 2. Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and 3. One air conditioning pack is considered inoperative and deferred per 21-00-01D or 21-00-01E as applicable.	
21-00-36D	Trim Air Modulating Valves (B737-900ER) “DISP.APPR.REQ’D”	N	3	0	C	(O) (M) May be inoperative in any position provided: 1. Trim Air Pressure Regulating and Shutoff Valve remains closed, 2. Forward cargo heat duct is secured closed, and 3. Airport ambient temperature does not exceed 103 degrees F (39 degrees C), and 4. One air conditioning pack is considered inoperative and deferred per 21-00-01D or 21-00-01E as applicable.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-36A	Trim Air Switch	Trim Air Modulating Valve(s) INOP CLOSED
21-00-36B	Trim Air Switch	Trim Air Modulating Valve(s) INOP
21-00-36C	Trim Air Switch	Trim Air Modulating Valve(s) INOP CLOSED
21-00-36D	Trim Air Switch	Trim Air Modulating Valve(s) INOP

(O) PROCEDURES

21-00-36A

Use normal procedures to operate the temperature selectors.

With a trim air modulating valve closed, the associated CONT CAB, FWD CAB, or AFT CAB ZONE TEMP light will illuminate during Master Caution recall and will extinguish when Master Caution is reset.

21-00-36B

1. Operate with TRIM AIR switch OFF.
2. Use normal procedures to operate the temperature selectors.

21-00-36C

Refer to MEL 21-00-01 for (O) procedures for inoperative pack.

21-00-36D

1. Operate with TRIM AIR switch OFF.
2. Refer to MEL 21-00-01 for (O) procedures for inoperative pack,

(M) PROCEDURES

21-00-36A

Secure the trim air modulating valve(s) closed ([AMM 21-00-00-040-822](#)).

1. Position the associated CONT CAB, FWD CAB or AFT CAB temperature selector to OFF.
2. Disconnect and stow the electrical connector from the inoperative valve.

Note: *The valve for the flight deck is in the left ECS bay. The valves for the forward and aft passenger cabin are in the right ECS bay.*

3. Turn the manual override on the associated Trim Air Modulating valve until the visual position indicator shows the full closed position.
4. Position the associated temperature selector back to the normal operating range.

21-00-36C

Secure the trim air modulating valve(s) and the forward cargo heat duct closed ([AMM 21-00-00-040-822](#)).

1. Position the CONT CAB, FWD CAB or AFT CAB temperature selector for the inoperative valve to OFF.
2. Disconnect and stow the electrical connector from the inoperative valve.

Note: *The valve for the flight deck is in the left ECS bay. The valves for the forward and aft passenger cabin are in the right ECS bay.*

3. Turn the manual override on the associated Trim Air Modulating valve until the visual position indicator shows the full closed position.
4. Position the associated temperature selector back to the normal operating range.
5. Apply [21-00-01D](#) or [21-00-01E](#) to deactivate one pack and secure the forward cargo heat duct closed.

21-00-36D

1. Position the TRIM AIR switch to OFF.
2. Apply [21-00-01D](#) or [21-00-01E](#) to deactivate one pack and secure the forward cargo heat duct closed.

21-00-38 Outflow Valve Position Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-38	Outflow Valve Position Indicator	Y	1	0	C	(O) (M) May be inoperative provided valve is verified to be operating normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-38	Outflow Valve Position Indicator	Outflow Valve Position Indicator INOP

(O) PROCEDURES

1. If procedures call for the outflow valve to be in the full open or closed position, hold the Outflow Valve switch to OPEN or CLOSED for approximately 40 seconds.

(M) PROCEDURES

1. Provide electrical power.
2. Check that the following PRESSURIZATION CONTROL circuit breakers on the P6-4 Panel are pushed in and closed:
 - A. PRESSURIZATION CONTROL-MAN
 - B. PRESSURIZATION CONTROL-AUTO 1
 - C. PRESSURIZATION CONTROL-AUTO 2
 - D. PRESSURIZATION CONTROL-IND
 - E. PRESSURIZATION CONTROL-LCD LTG
3. Verify visually that the outflow valve is in the fully opened position.
4. Position the mode selector to MAN.
5. Check that the MANUAL light illuminates.
6. Hold the VALVE switch in the CLOSED position for 30 seconds.
7. Check visually that the aft outflow valve has moved to the full closed position.
8. Position the mode selector to AUTO.
9. Check that the MANUAL light extinguishes.
10. Check visually that the aft outflow valve has moved to the full open position.

21-00-39 Trim Air Check Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-39	Trim Air Check Valves	N	2	1	C (M) May be inoperative closed.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-39	Trim Air Switch	Trim Air Check Valves INOP

(M) PROCEDURES

An inoperative trim air check valve is configured in the “closed” position by installing a blanking plate on the downstream side of the inoperative trim air check valve.

Manufacture blanking plate as follows:

Diameter - 3.00 (+0.10 or -0.00) inches, Thickness - 0.040 inch


Allowable material:

1. Titanium 6AL-4V per MIL-T-9046 type 3 Comp C
2. Inconel 718 per AMS 5596
3. 301 CRES per MIL-S-5059 1/2, 3/4 or full hard

WARNING	REMOVE THE PRESSURE FROM THE PNEUMATIC SYSTEM. PRESSURE IN THE PNEUMATIC SYSTEM CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.
----------------	---

1. Remove pressure from the pneumatic system
 - A. Place 1 BLEED, 2 BLEED and APU BLEED switches on the P5 –10 air conditioning control panel to OFF.
 - B. The two trim air check valves are both located in the right air conditioning equipment bay.
 - C. Remove clamp on forward side of the inoperative check valve and install blanking plate. Reinstall clamp, tighten clamp (55 inch-pounds).
2. Perform Leakage check.
 - A. Supply pneumatic power.
 - B. Place the applicable PACK switch to AUTO and the TRIM AIR switch OFF.
 - C. Check valve flange for leakage, minor leakage is acceptable.
 - D. Close air conditioning door.
3. Return aircraft to normal condition.

Figure 21-11: Trim Air Check Valve

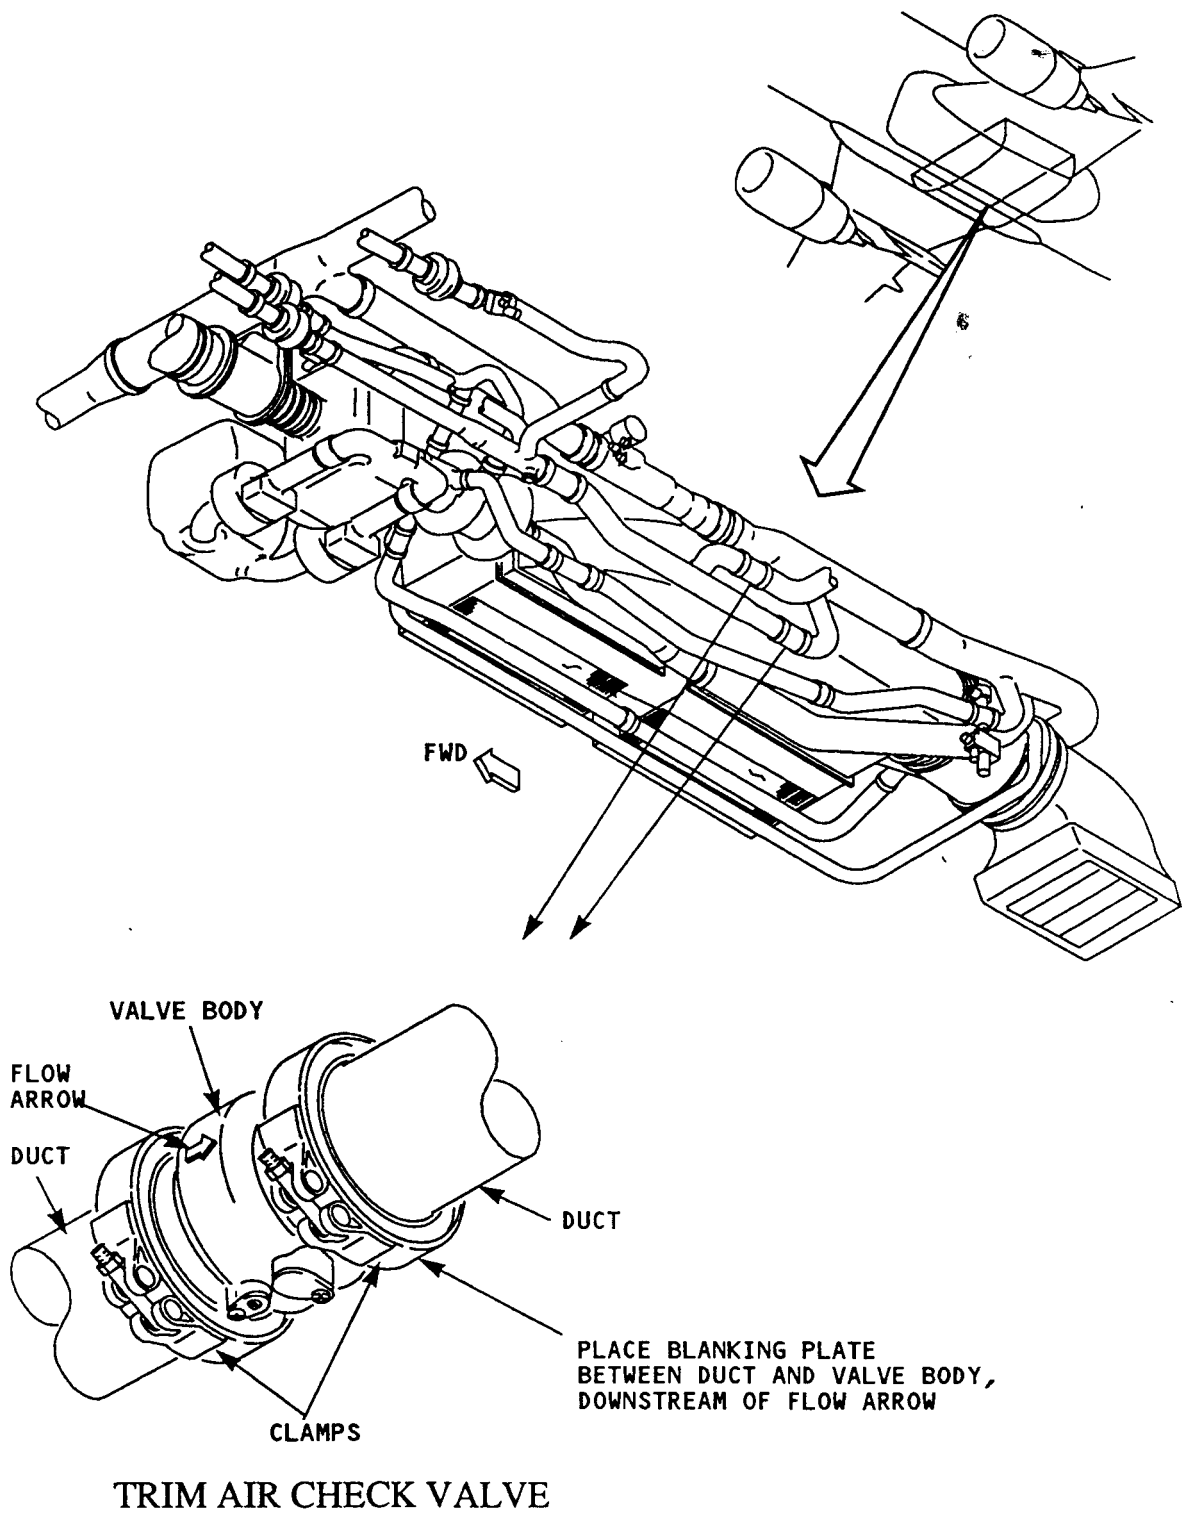

21-00-40 Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-40A	Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve (A/C 3701-3771, 3774-3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative in the open position provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to the 25% open position, and 3. Recirculation fan(s) operate normally.
21-00-40B	Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve (A/C 3772, 3773) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative in the open position provided: 1. Flight is conducted in an unpressurized configuration, 2. Lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions), 3. Outflow valve is positioned to the 25% open position, and 4. Recirculation fan(s) operate normally.
21-00-40C	Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative in OPEN position provided: 1. Flight is conducted in an unpressurized configuration, 2. Outflow valve is positioned to 25% open position, 3. Recirculation fans operate normally, 4. Forward cargo heat duct is secured closed, and 5. Airport ambient temperature does not exceed 103 degrees F (39 degrees C).
21-00-40D	Equipment Cooling Automatic Flow Control Valve / Overboard Exhaust Valve "DISP.APPR.REQ'D"	N	1	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Actuator is verified to be in the smoke position, and 2. both packs operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-40A	Equipment Cooling Switch Panel	Automatic Flow Control Valve / Overboard Exhaust Valve INOP OPEN
21-00-40B	Equipment Cooling Switch Panel	Automatic Flow Control Valve / Overboard Exhaust Valve INOP OPEN
21-00-40C	Equipment Cooling Switch Panel	Automatic Flow Control Valve / Overboard Exhaust Valve INOP OPEN
21-00-40D	Equipment Cooling Switch Panel	Automatic Flow Control Valve / Overboard Exhaust Valve INOP CLOSED

(O) PROCEDURES

Note: Both air conditioning packs are required to maintain pressurization when the valve is failed with actuator in the smoke position. Descent may be required if an air conditioning pack fails enroute.

	737 Minimum Equipment List 21 Air Conditioning	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

21-00-40A

Operate aircraft unpressurized. Refer to [MEL 21-00-10B](#) for (O) procedures.

21-00-40B

Operate aircraft unpressurized. Refer to [MEL 21-00-10C](#) for (O) procedures.

21-00-40C

Operate aircraft unpressurized. Refer to [MEL 21-00-10D](#) for (O) procedures.

21-00-40D

Refer to the Remarks or Exceptions Column.

(M) PROCEDURES

21-00-40A

Use [MEL 21-00-10B](#) (M) procedures to configure the airplane.

21-00-40B

Use [MEL 21-00-10C](#) (M) procedures to configure the airplane.

21-00-40C


Use [MEL 21-00-10D](#) (M) procedures to configure the airplane.

21-00-40D

VALVE INOPERATIVE PARTIALLY OPEN.

1. Verify that the actuator is in the SMOKE (S) position. If valve has not failed in the SMOKE position, the following procedure can be attempted to position and deactivate the valve in the SMOKE position:
 - A. Put the airplane in the air mode using the BITE in the Proximity Switch Electronics Unit (PSEU) ([AMM 32-09-00](#)).
 - B. Position one of the air conditioning pack switches to HIGH.
 - C. Position the right recirculation fan switch to OFF.
 - D. After 10 seconds, pull and secure P6-4 Panel Air Conditioning Overboard Exhaust Valve Control circuit breaker.
 - E. Disconnect, cap and stow electrical connector D11880 on the overboard exhaust valve.
 - F. Verify valve is in the SMOKE position.
 - G. Close P6-4 Panel Air Conditioning Overboard Exhaust Valve Control circuit breaker.
 - H. Restore airplane to its required configuration.

Figure 21-12: Equipment Cooling Overboard Exhaust Valve

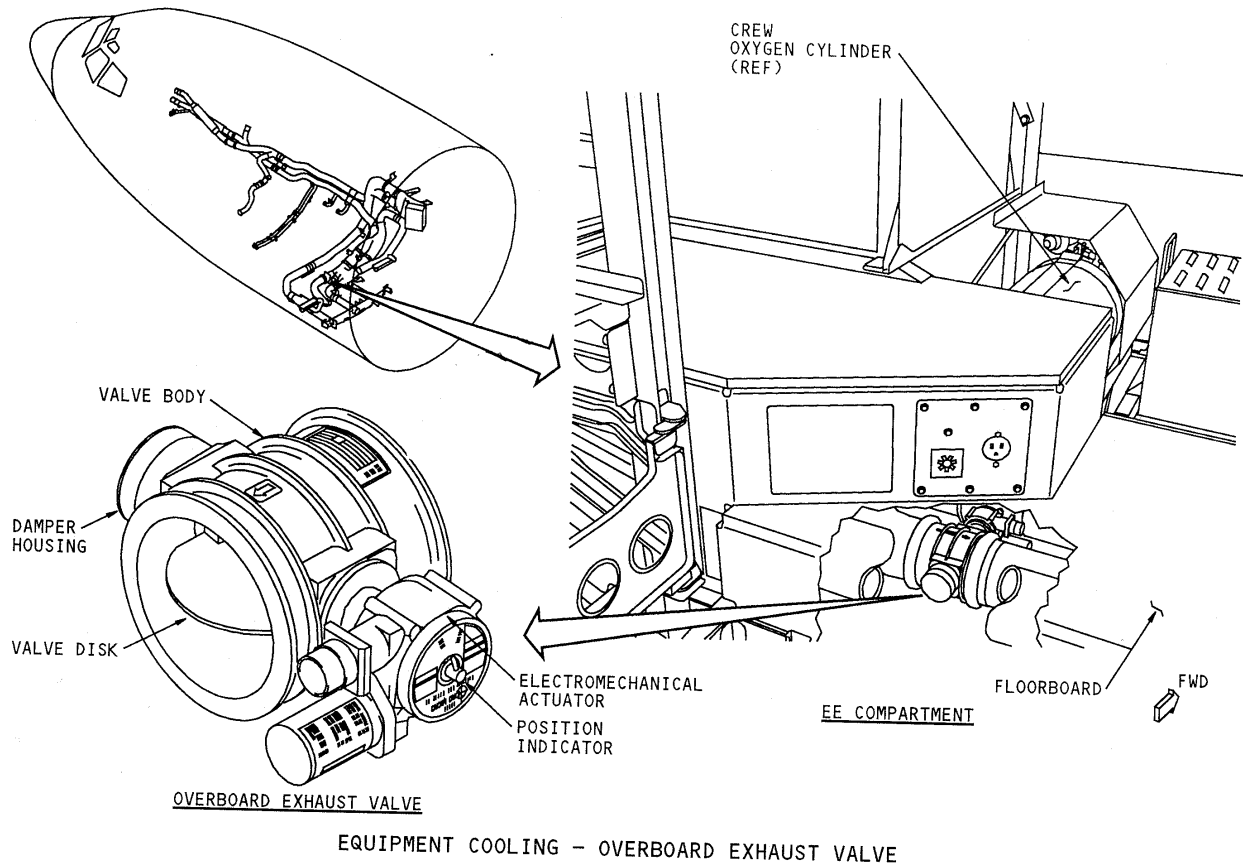

21-00-41 Door Area Heater Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-41A	Entry Door Area and Overwing Emergency Exit Hatch Area Heater Systems	N	3	0	D	(M) May be inoperative deactivated.
21-00-41B	Mid-Exit Door Area Heater System	Y	1	0	D	(M) May be inoperative deactivated.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-41A	Logbook	_____ AREA HEATER SYSTEM(S) INOP
21-00-41B	Logbook	MID EXIT DOOR AREA HEATER SYSTEM INOP

(M) PROCEDURES

21-00-41A

Deactivate the entry door area and overwing emergency exit hatch area heater systems:

- To deactivate the inoperative forward entry door and overwing emergency exit hatch area heater systems, pull and secure the FWD DOOR AREA HEATER (C1280) circuit breaker on the P91 Power Distribution Panel.

Note: Opening circuit breaker C1280 deactivates both the forward entry door area heater and all overwing exit hatch heaters.

- To deactivate the inoperative aft entry door area heater system, pull and secure the AFT DOOR AREA HEATER (C1279) circuit breaker on the P91 Power Distribution Panel.

21-00-41B

Deactivate the mid-exit door area heater system:

- Pull and secure the MID EXIT DOOR AREA HEATER circuit breaker on the P6-12 panel.

21-00-42 Equipment Cooling Low Flow Detector Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-42	Equipment Cooling Low Flow Detector Systems	N	2	1	B (O) (M) May be inoperative provided associated fans (supply or exhaust) are verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-42	Associated Equipment Cooling Off Light	Equipment Cooling Low Flow Detector Systems INOP

(O) PROCEDURES

Refer to the Remarks or Exceptions column.

Note: Captain's displays are cooled by the supply fans.

Note: First Officer's displays are cooled by the exhaust fans.

(M) PROCEDURES

1. Verify that a fan in the affected cooling system is operating normally as follows:
 - A. For an exhaust system low flow detector failure, verify the exhaust fans are operating by feeling for air exiting the Overboard Exhaust vent at the bottom of the airplane near the centerline. Select the other exhaust fan and repeat.
 - B. For a supply system low flow detector failure, verify the supply fans are operating by feeling the selected fan motor for vibration. Select the other supply fan and repeat.
2. Verify that the components in the unaffected cooling system operate normally as follows:
 - A. Open circuit breaker EQUIP COOLING SUPPLY (EXHAUST) FAN CONTROL NORMAL on the P6-4 Panel.
 - B. Verify that the EQUIP COOLING Supply (EXHAUST) OFF light illuminates.
 - C. Position the EQUIP COOLING SUPPLY (EXHAUST) switch to ALTERNATE.
 - D. Verify that the EQUIP COOLING SUPPLY (EXHAUST) OFF light extinguishes.
 - E. Open circuit breaker EQUIP COOLING SUPPLY (EXHAUST) FAN CONTROL ALTN on the P6-4 panel.
 - F. Verify that the EQUIP COOLING SUPPLY (EXHAUST) OFF light illuminates.
 - G. Close the EQUIP COOLING SUPPLY (EXHAUST) FAN CONTROL NORMAL and EQUIP COOLING SUPPLY (EXHAUST) FAN CONTROL ALTN circuit breakers on the P6-4 panel.
 - H. Verify that the EQUIP COOLING SUPPLY (EXHAUST) OFF light extinguishes.
 - I. Position the EQUIP COOLING SUPPLY (EXHAUST) switch to NORMAL.
3. To prevent the equipment cooling ground crew call horn from sounding on the ground with a low flow detector system inoperative, the associated Equipment Cooling Low Flow Detect Exhaust/Supply circuit breaker on the P18-3 panel may be opened and collared. Also refer to MEL Item 34-00-35C when dispatching in this configuration.

21-00-43 Equipment Cooling Air Filter

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
21-00-43	Equipment Cooling Air Filter	N	1	0	C (M) Equipment Cooling System may be operated with filter removed.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-43	Equipment Cooling Switch	Equipment Cooling Air Filter Removed

(M) PROCEDURES

1. Remove electrical power from the airplane.
2. Remove the forward right bulkhead liner.
3. Remove the equipment cooling air filter.
4. Re-install forward right bulkhead liner and apply electrical power as necessary.

21-00-44 Fan Bypass Check Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-44A	Fan Bypass Check Valves “DISP.APPR.REQ’D”	Y	2	0	C	May be inoperative open/missing provided airport ambient temperature remains below 80 degrees F (27 degrees C).
21-00-44B	Fan Bypass Check Valves	N	2	0	C	May be inoperative open/missing provided associated pack is considered inoperative and deferred per MEL 21-00-01A, 21-00-01B, 21-00-01C, 21-00-01D, 21-00-01E, or 21-00-01F as applicable.
21-00-44C	Fan Bypass Check Valves	Y	2	1	D	(O) May be inoperative open/missing provided pack associated with remaining fan bypass check valve operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-44A	Associated Pack Switch	Fan Bypass Check Valves INOP
21-00-44B	Associated Pack Switch	Fan Bypass Check Valves INOP
21-00-44C	Associated Pack Switch	Fan Bypass Check Valves INOP

(O) PROCEDURES

21-00-44C

For Ground Operations:

- Pack with inoperative fan bypass check valve.....OFF
In-Flight:
- Pack with inoperative fan bypass check valve.....As Required

Note: On ground at high ambient temperature (above 80 Deg. F(27 degrees C)) and high takeoff thrust setting, using affected AC PACK with fan bypass valve inoperative (Fail Open / Missing) may result in Pack Light ON.

21-00-49 Return Air Grille

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	-	-	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
21-00-49	Return Air Grille		N	-	-	C	(M) One may be broken or missing provided: 1. Broken or missing grille is located within a designated area, and 2. Grille is removed and replaced with a blanking plate.


MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-49	Logbook	_____ Return Air Grille Broken / Missing

(M) PROCEDURES

1. For -800 aircraft, the designated location within which a return air grille may be broken or missing is station 887-907.
2. For -900ER aircraft, the designated location within which a return air grille may be broken or missing is station 727G-727K and station 887-907.

Note: For a damaged return air grille not located in the designated location, it is acceptable to replace the damaged return air grille with one in the allowed location if the two return air grill assemblies are the same part number.

Note: Grille must be replaced by a panel that completely blocks the area.

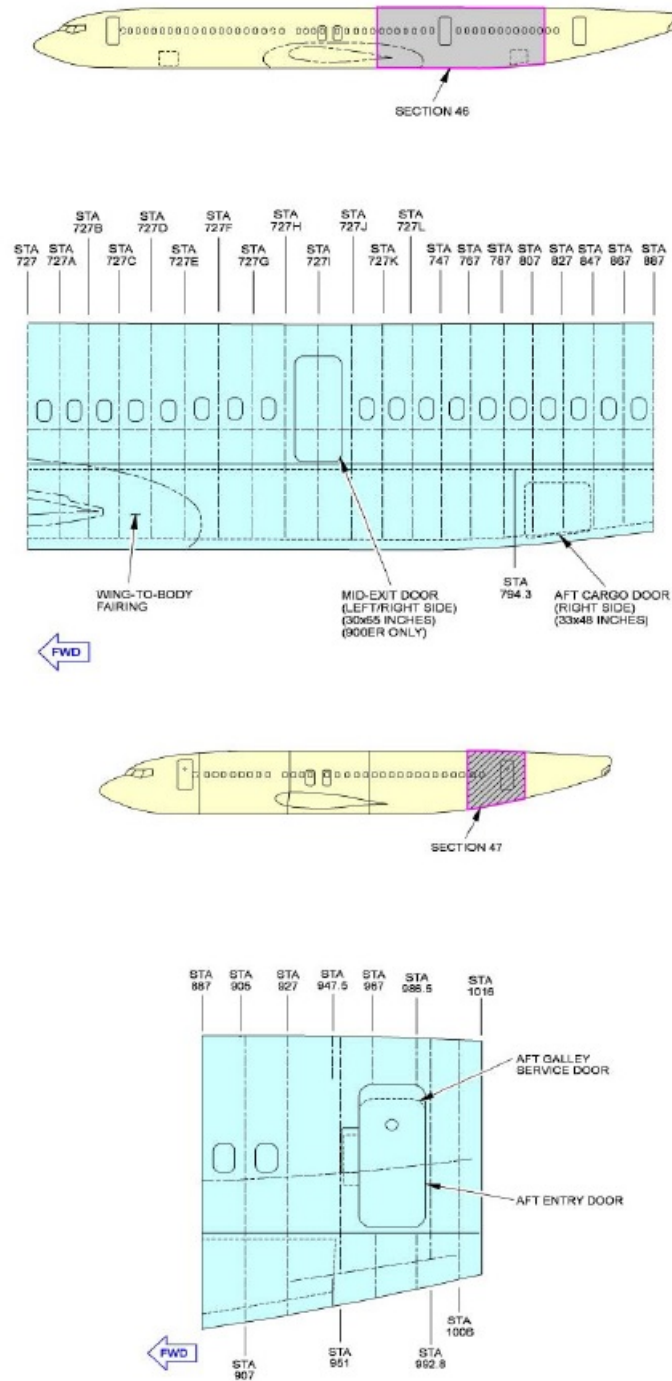Figure 21-13: Station Numbers


21-00-50 Flight Deck Foot Air Diffusers

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
21-00-50	Flight Deck Foot Air Diffusers	Y	2	0	C	May be inoperative provided flight deck temperature is acceptable to flight crew.

MEL ITEM	TAB LOCATION	PLACARD TEXT
21-00-50	Logbook	Flight Deck Foot Air Diffuser(s) INOP

22 Autoflight

Table of Contents

22-00-00	LLM Category II/III Status (Lower Landing Minimums)
22-00-00L	LLM Category II/III Status (Lower Landing Minimums)
22-00-01	Auto Flight Systems
	AUTO FLIGHT SYSTEMS
22-00-01A	Autopilot Systems
22-00-01B	Autopilot Systems
22-00-01C	Autoland
22-00-01D	Control Wheel Autopilot Disconnect Switches
22-00-01E	Control Wheel Autopilot Disconnect Switches
22-00-01F	Autopilot DISENGAGE Bar
22-00-02	Autopilot Disengaged Warning System
	Autopilot Disengaged Warning System
22-00-02A	Lights
22-00-02B	Lights
22-00-02C	Aural Warning (Wailer)
22-00-03	Yaw Damper
22-00-03A	Yaw Damper
22-00-03B	Yaw Damper Indicator
22-00-04	Autothrottle System
22-00-04	Autothrottle System
22-00-05	Mach Trim System
22-00-05A	Mach Trim System
22-00-05B	Mach Trim System
22-00-06	Flight and Approach Mode Annunciations
22-00-06	Flight and Approach Mode Annunciations
22-00-08	Autothrottle Disengage Lights
22-00-08A	Autothrottle Disengage Lights
22-00-08B	Autothrottle Disengage Lights
22-00-11	Stab Out Of Trim Light
22-00-11	STAB OUT OF TRIM Light
22-00-14	Mode Control Panel Selectors
	MODE CONTROL PANEL SELECTORS
22-00-14A	V/S Selector (DOWN, UP)
22-00-14B	Bank Angle Selector (10, 15, 20, 25, 30)
22-00-15	Mode Control Panel Switches / Paddles
	MODE CONTROL PANEL SWITCHES / PADDLE
22-00-15A	A/P CWS Engage Switches
22-00-15B	A/P CMD Engage Switches
22-00-15C	A/P CMD Engage Switches
22-00-15D	Autothrottle Arm Switch
22-00-15E	A/T SPEED Switch
22-00-15F	F/D Switches
22-00-15G	IAS/MACH Change Over Switch
22-00-15H	APP Switch
22-00-15I	N1, LNAV, VNAV, LVL CHG, V/S, HDG SEL, ALT HOLD, and VOR/LOC Switches

	737 Minimum Equipment List 22 Autoflight	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

22-00-15J SPD INTV, and ALT INTV Switches

22-00-16 Mode Control Panel Windows

MODE CONTROL PANEL WINDOWS

22-00-16A Airspeed
22-00-16B Heading
22-00-16C Vertical Speed
22-00-16D Vertical Speed
22-00-16E Altitude
22-00-16F Course
22-00-16G Window Lighting

22-00-17 Takeoff / Go-Around (TO/GA) Switches

22-00-17A Takeoff / Go-Around (TO/GA) Switches
22-00-17B Takeoff / Go-Around (TO/GA) Switches

22-00-18 Mode Control Panel Switch Lights

MODE CONTROL PANEL SWITCH LIGHTS

22-00-18A Autopilot CWS Engage Switch Lights
22-00-18B Autopilot CMD Engage Switch Lights
22-00-18C Autopilot CMD Engage Switch Lights
22-00-18D A/T ARM Switch Light
22-00-18E Mode Selector Switch Lights

22-00-19 Thrust Mode Display

22-00-19 Thrust Mode Display

22-00-00 LLM Category II/III Status (Lower Landing Minimums)

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-00L	LLM Category II/III Status (Lower Landing Minimums) "DISP.APPR.REQ'D" Administrative Control Item	N	-	-	(M) Aircraft restricted from autopilot coupled Autoland due to chronic problem or no Autoland in 30 days. 1. This Item number is only used for deferring the Autoland status of the aircraft and MCC authorization is required prior to its usage or removal. 2. Practice Autolands are permitted if authorized by MCC. 3. This item does not prohibit CAT II/III approaches using HUD.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-00L	Adjacent to each PFD	Autoland Not Authorized

(M) PROCEDURES

1. Create a new log page in the aircraft logbook using the appropriate MEL Item Number (contact MCC for instructions).
2. The deferral code LLM must also be entered on the log page and the placard when deferring this item.
3. MCC authorization is required prior to its usage or removal.

22-00-01 Auto Flight Systems

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
AUTO FLIGHT SYSTEMS					
22-00-01A	Autopilot Systems "DISP.APPR.REQ'D"	Y	2	1	C
May be inoperative provided: - Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Note: Any mode which functions normally may be used. Note: If operable, both the autopilot and Flight Director will be utilized for all ILS approaches when reported weather is below 4000 RVR or ¾ mile.					
22-00-01B	Autopilot Systems "DISP.APPR.REQ'D"	Y	2	0	B
Except for Extended Operations (ETOPS), may be inoperative provided: - Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, - Enroute operations do not require autopilot use, - Number of flight segments and segment duration is acceptable to flight crew, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Note: Any mode which functions normally may be used. If CWS is inoperative, do not use other modes (pitch or roll) Note: Autopilot required for Non-ILS approaches. <u>RVSM Operations</u> Not Authorized Theater Restrictions May Apply					
22-00-01C	Autoland "DISP.APPR.REQ'D"	Y	1	0	C
May be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements .					
22-00-01D	Control Wheel Autopilot Disconnect Switches "DISP.APPR.REQ'D"	Y	2	1	C
One may be inoperative provided: - Mode Control Panel autopilot DISENGAGE bar operates normally, - Autopilot is not used below 1500 feet AGL, and - Approach minimums do not require use of autopilot; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.					

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
AUTO FLIGHT SYSTEMS						
22-00-01E	Control Wheel Autopilot Disconnect Switches "DISP.APPR.REQ'D"	Y	2	0	B	May be inoperative provided: 1. Autopilot is not used, and 2. Approach minimums do not require use of autopilot; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements .
22-00-01F	Autopilot DISENGAGE Bar	Y	1	0	C	May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-01A	AFCS Mode Control Panel	____ Autopilot System INOP
22-00-01B	AFCS Mode Control Panel	____ Autopilot System(s) INOP
22-00-01C	AFCS Mode Control Panel	Autoland INOP
22-00-01D	AFCS Mode Control Panel	____ Control Wheel A/P Disengage Switch INOP
22-00-01E	AFCS Mode Control Panel	1. Both Control Wheel A/P Disengage Switches INOP 2. Do NOT use the Autopilot
22-00-01F	Autopilot Disengage Bar	Autopilot Disengage Bar INOP

Note: Failures in one or both FCC's could affect these systems: Mach Trim (MEL Item 22-00-05), Speed Trim (No MEL Relief), Flight Director (MEL Item 34-00-12) and Altitude Alerting (MEL item 34-00-25).

Note: One FCC must operate normally for the Speed Trim System to function (No MEL Relief).

22-00-02 Autopilot Disengaged Warning System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	Autopilot Disengaged Warning System				
22-00-02A	Lights "DISP.APPR.REQ'D"	Y	2	1	C May be inoperative provided: 1. Autopilot disengage aural warning system operates normally, and 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.
22-00-02B	Lights "DISP.APPR.REQ'D"	Y	2	0	B Except for Extended Operations (ETOPS), one or both may be inoperative provided: 1. Autopilots are not used, and 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements..
22-00-02C	Aural Warning (Wailer) "DISP.APPR.REQ'D"	Y	1	0	B Except for Extended Operations (ETOPS), may be inoperative provided: 1. Autopilots are not used, and 2. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-02A	Autopilot Disengaged Warning Light	____ A/P Disengaged Warning Light INOP
22-00-02B	Autopilot Disengaged Warning Lights	1. ____ A/P Disengaged Warning Light(s) INOP 2. Do NOT Use Autopilots
22-00-02C	Autopilot Disengaged Warning Lights	Autopilot Disengaged Aural Warning INOP

22-00-03 Yaw Damper

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-03A	Yaw Damper "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided yaw damper switch remains OFF.
22-00-03B	Yaw Damper Indicator	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-03A	Yaw Damper Switch	Yaw Damper INOP
22-00-03B	Yaw Damper Indicator	Yaw Damper Indicator INOP

(O) PROCEDURES

22-00-03A

1. Avoid areas of predicted moderate or severe turbulence.
2. If turbulence is encountered and passenger comfort becomes affected, reduce airspeed and/or descend to a lower altitude.
3. Do not exceed flaps 30.

22-00-04 Autothrottle System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-04	Autothrottle System "DISP.APPR.REQ'D"	Y	1	0	C
				May be inoperative provided: 1. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements,, and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Note: <i>To activate flight guidance, TOGA can be selected before throttles are manually advanced for takeoff.</i>	

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-04	Autothrottle Arm Switch	Autothrottle System INOP

22-00-05 Mach Trim System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-05A	Mach Trim System "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative provided: 1. Speed is limited to 280 KIAS/.82M, 2. Mach trim actuator is verified to be in null / uncommanded elevator position, 3. Aircraft is not operated within the boundaries of a Critical Terrain Box, and 4. Autoland is considered inoperative and deferred per MEL 22-00-01C. Theater Restrictions May Apply
22-00-05B	Mach Trim System "DISP.APPR.REQ'D"	N	2	1	C (M) One may be inoperative deactivated provided: 1. Remaining Mach trim system is verified to operate normally, 2. Mach trim fail light operates normally, and 3. Autoland is considered inoperative and deferred per MEL 22-00-01C.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-05A	Mach Trim Fail Light	Both Mach Trim Systems INOP
22-00-05B	Mach Trim Fail Light	____ Mach Trim System INOP

(O) PROCEDURES

22-00-05A

Program KIAS/Mach speed restriction in FMS.

(M) PROCEDURES

22-00-05A

Verify that the elevator trailing edge is in the correct position:

Note: A mach trim actuator and mach trim system are required to position the elevator trailing edge if it is out of alignment. An actuator or accessory box that does not operate must be replaced.

Note: Dispatch with both Mach Trim Systems inoperative is not allowed if the elevator trailing edge is not aligned with the index mark on the fuselage.

1. Apply electrical power to the aircraft.
2. Apply hydraulic power to the flight controls.
3. Position flaps to UP.
4. Position stabilizer to 4 units of trim.
5. Jiggle the control column in order to place the elevators in the detent position.
6. Visually check that the elevator trailing edge is aligned within 0.06 inches of the index mark on the fuselage.
7. Pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
AFCS SYS A MACH TRIM AC	P18-1	C4
AFCS SYS A MACH TRIM DC	P18-1	D4
AFCS SYS B MACH TRIM AC	P6-2	C1
AFCS SYS B MACH TRIM DC	P6-2	B2

- A. MACH TRIM AC
- B. MACH TRIM DC

8. Restore electrical and hydraulic power as required.

22-00-05B

1. Deactivate the inoperative mach trim system and verify the remaining mach trim system is operating normally.

- A. Pull and Secure the associated MACH TRIM AC and MACH TRIM DC circuit breakers as appropriate:

CIRCUIT BREAKER	PANEL	LOCATION
AFCS SYS A MACH TRIM AC	P18-1	C4
AFCS SYS A MACH TRIM DC	P18-1	D4
AFCS SYS B MACH TRIM AC	P6-2	C1
AFCS SYS B MACH TRIM DC	P6-2	B2

- B. Perform the DFCS BITE library test No. 33, Mach Trim, for the remaining system (channel A or channel B), and verify that the test passes.

22-00-06 Flight and Approach Mode Annunciations

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			Y	-	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
22-00-06	Flight and Approach Mode Annunciations "DISP.APPR.REQ'D"					C	Individual mode annunciation may be inoperative provided: 1. Associated system modes are not used, 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements,, and 3. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-06	Affected Flight Mode Annunciation Panel(s)	____ Flight Mode Annunciator(s) INOP

OPERATIONS NOTE

Note: Individual modes may not be used when associated annunciator is inoperative.

22-00-08 Autothrottle Disengage Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-08A	Autothrottle Disengage Lights "DISP.APPR.REQ'D"	Y	2	1	C May be inoperative when autothrottle is used provided: 1. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements,, and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.
22-00-08B	Autothrottle Disengage Lights "DISP.APPR.REQ'D"	Y	2	0	C May be inoperative provided: 1. Autothrottle is not used, 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements,, and 3. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-08A	Affected Autothrottle Disengage Light	____ Autothrottle Disengage Light INOP
22-00-08B	Both Autothrottle Disengage Lights	1. ____ Autothrottle Disengage Light(s) INOP 2. Do NOT Use Autothrottle

22-00-11 Stab Out Of Trim Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS	
22-00-11	STAB OUT OF TRIM Light "DISP.APPR.REQ'D"	Y	1	0	B Except for Extended Operations (ETOPS), may be inoperative provided: 1. Autopilots are not used, and 2. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements,. <u>RVSM Operations</u> Not Authorized

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-11	Stab Out of Trim Light	1. Stab Out of Trim Light INOP 2. Do NOT Use Autopilot

22-00-14 Mode Control Panel Selectors

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
MODE CONTROL PANEL SELECTORS					
22-00-14A	V/S Selector (DOWN, UP)	Y	1	0	C
					May be inoperative provided procedures do not require its use.
					<u>Non-Precision Approaches (V/S method)</u>
					NOT Authorized
22-00-14B	Bank Angle Selector (10, 15, 20, 25, 30)	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-14A	AFCS MCP Vertical Speed Selector	Vertical Speed Selector INOP
22-00-14B	AFCS MCP Bank Angle Selector	Bank Angle Selector INOP

22-00-15 Mode Control Panel Switches / Paddles

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	MODE CONTROL PANEL SWITCHES / PADDLE				
22-00-15A	A/P CWS Engage Switches "DISP.APPR.REQ'D"	Y	2	0	C <i>Note:</i> If the light only is inoperative use MEL 22-00-18E .
22-00-15B	A/P CMD Engage Switches "DISP.APPR.REQ'D"	Y	2	1	C May be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . <i>Note:</i> If the light only is inoperative use MEL 22-00-18E .
22-00-15C	A/P CMD Engage Switches "DISP.APPR.REQ'D"	Y	2	0	B Except for Extended Operations (ETOPS), may be inoperative provided: 1. Autopilots are not used, and 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . <u>RVSM Operations</u> Not Authorized <i>Note:</i> Autopilot required for Non-ILS approaches <i>Note:</i> If the light only is inoperative use MEL 22-00-18E .
22-00-15D	Autothrottle Arm Switch "DISP.APPR.REQ'D"	Y	1	0	C May be inoperative provided approach minimums do not require autothrottle use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . <i>Note:</i> If the light only is inoperative use MEL 22-00-18D .
22-00-15E	A/T SPEED Switch "DISP.APPR.REQ'D"	Y	1	0	C May be inoperative provided approach minimums do not require autothrottle use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . <i>Note:</i> If the light only is inoperative use MEL 22-00-18E .

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
22-00-15F	MODE CONTROL PANEL SWITCHES / PADDLE F/D Switches "DISP.APPR.REQ'D"	Y	2	0	C	May be inoperative provided: 1. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements , and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements . Note: Refer to Vol 2 section 4.2.2.7.2 – Pitch Modes for F/D switch requirements for pitch modes during takeoff and go-around. Note: If the light only is inoperative use MEL 22-00-18E .	
22-00-15G	IAS/MACH Change Over Switch	Y	1	0	C	Note: If the light only is inoperative use MEL 22-00-18E .	
22-00-15H	APP Switch "DISP.APPR.REQ'D"	Y	1	0	C	May be inoperative provided approach minimums do not require use of autopilot or flight director; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . Note: Autopilot required for Non-ILS approaches. Note: If the light only is inoperative use MEL 22-00-18E .	
22-00-15I	N1, LNAV, VNAV, LVL CHG, V/S, HDG SEL, ALT HOLD, and VOR/LOC Switches "DISP.APPR.REQ'D"	Y	8	0	C	(O) May be inoperative provided: 1. Enroute operations do not require their use, 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements , and 3. For the VOR/LOC switch, approach minimums do not require VOR/LOC use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . Note: If the light only is inoperative use MEL 22-00-18E . <u>Non-Precision Approaches (VNAV method)</u> NOT Authorized with VNAV Mode or Switch Inoperative <u>RVSM Operations</u> See (O) PROCEDURE for this item.	
22-00-15J	SPD INTV, and ALT INTV Switches	Y	2	0	C	Note: If the light only is inoperative use MEL 22-00-18E .	

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-15A	A/P Engage Switch	____ A/P CWS Engage Switch(es) INOP
22-00-15B	A/P Engage Switch	____ A/P CMD Engage Switches INOP
22-00-15C	A/P Engage Switch	1. ____ A/P CMD Engage Switch(es) INOP 2. Do NOT Use Autopilot
22-00-15D	Autothrottle Arm Switch	Autothrottle Arm Switch INOP
22-00-15E	A/T SPEED Switch	A/T SPEED Switch INOP
22-00-15F	Affected F/D Switch	____ F/D Switch(es) INOP
22-00-15G	IAS/MACH Change Over Switch	IAS/MACH Change Over Switch INOP
22-00-15H	APP Switch	APP Switch INOP
22-00-15I	Affected AFCS MCP Switch	____ Mode Switch INOP
22-00-15J	Affected AFCS MCP Switch	____ Mode Switch INOP

(O) PROCEDURES

22-00-15I

For RVSM operations requiring altitude hold capability, either ALT HOLD, V/S, or VNAV may be used.

22-00-16 Mode Control Panel Windows

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
MODE CONTROL PANEL WINDOWS						
22-00-16A	Airspeed (IAS / MACH)	Y	1	0	C	May be inoperative provided selected airspeed indications on both PFD's operate normally.
22-00-16B	Heading (HEADING)	Y	1	0	C	May be inoperative provided selected heading indications on both PFD's operate normally.
22-00-16C	Vertical Speed (VERT SPEED)	Y	1	0	C	May be inoperative provided procedures do not require its use.
22-00-16D	Vertical Speed (VERT SPEED)	Y	1	0	C	May be inoperative and associated selector used provided selected vertical speed indications on both PFD's operate normally.
22-00-16E	Altitude (ALTITUDE)	Y	1	0	C	May be inoperative provided selected altitude indications on both PFD's operate normally.
22-00-16F	Course (COURSE)	Y	2	0	C	May be inoperative and associated selector used provided selected course indications operate normally.
22-00-16G	Window Lighting	Y	1	0	B	May be inoperative provided: 1. Selected airspeed indications operate normally, 2. Selected heading indications operate normally, 3. Selected vertical speed indications operate normally, 4. Selected altitude indications operate normally, and 5. Selected course indications operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-16A	MCP Airspeed Window	MCP Airspeed Window INOP
22-00-16B	MCP Heading Window	MCP Heading Window INOP
22-00-16C	MCP Vertical Speed Window	MCP Vertical Speed Window INOP
22-00-16D	MCP Vertical Speed Window	MCP Vertical Speed Window INOP
22-00-16E	MCP Altitude Window	MCP Altitude Window INOP
22-00-16F	MCP Course Window	MCP Course Window INOP
22-00-16G	Associated MCP Window	MCP Window Lighting INOP

22-00-17 Takeoff / Go-Around (TO/GA) Switches

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
22-00-17A	Takeoff / Go-Around (TO/GA) Switches "DISP.APPR.REQ'D"	Y	2	1	C One may be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.
22-00-17B	Takeoff / Go-Around (TO/GA) Switches "DISP.APPR.REQ'D"	Y	2	0	B May be inoperative provided: - Both thrust levers are operated manually for takeoff, - Autopilot and Flight Director are not used below Minimum Descent Altitude or 500 feet, whichever is higher, - Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Note: <i>Flight Director go-around and windshear guidance are not available with both TO / GA switches inoperative.</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-17A	AFCS MCP	___ Takeoff / Go-Around (TO / GA) Switch INOP
22-00-17B	AFCS MCP	1. Takeoff / Go-Around (TO / GA) Switches INOP 2. See MEL Remarks or Exceptions for Autopilot and Flight Director restrictions.

22-00-18 Mode Control Panel Switch Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
MODE CONTROL PANEL SWITCH LIGHTS						
22-00-18A	Autopilot CWS Engage Switch Lights	Y	2	0	C	
22-00-18B	Autopilot CMD Engage Switch Lights	Y	2	1	C	One may be inoperative.
22-00-18C	Autopilot CMD Engage Switch Lights “DISP.APPR.REQ’D”	Y	2	0	B	(O) Except for Extended Operations (ETOPS), may be inoperative provided autopilots are not used.
22-00-18D	A/T ARM Switch Light	Y	1	0	C	
22-00-18E	Mode Selector Switch Lights	Y	10	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-18A	Affected AFCS CWS Engage Switch Lights	AFCS CWS Engage Switch Light(s) INOP
22-00-18B	Affected AFCS CMD Engage Switch Light	AFCS CMD Engage Switch Light INOP
22-00-18C	Affected AFCS CMD Engage Switch Lights	AFCS CMD Engage Switch Lights INOP
22-00-18D	A/T ARM Switch Light	A/T ARM Switch Light INOP
22-00-18E	Affected MCP Mode Selector Switch	____ Mode Selector Switch Light INOP

(O) PROCEDURES

22-00-18C

Refer to [MEL item 22-00-01](#) Remarks or Exceptions for inoperative autopilots.

22-00-19 Thrust Mode Display

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
22-00-19	Thrust Mode Display	Y		0	C	May be inoperative provided thrust mode limits are observed.

MEL ITEM	TAB LOCATION	PLACARD TEXT
22-00-19	Thrust Mode Display	Thrust Mode Display INOP

23 Communications

Table of Contents

23-00-01	Flight Deck Speaker System
23-00-01A	Flight Deck Speaker System
23-00-01B	Flight Deck Speaker System
23-00-02	Passenger Address System
23-00-02A	Passenger Address System
23-00-02B	Lavatory Speakers
23-00-02C	Cabin Speakers
23-00-03	VHF Communication Systems
23-00-03A	VHF Communication Systems
23-00-03B	Radio Tuning Panels (RTP)
23-00-03C	Off-Side Tuning Light
23-00-03D	VHF Data Link
23-00-04	Crewmember Interphone System
	CREWMEMBER INTERPHONE SYSTEM
23-00-04A	Flight Deck to Cabin, Cabin to Flight Deck Functions
23-00-04B	Cabin to Cabin Function
23-00-04C	Flight Deck to Ground Function (Includes CALL functions)
23-00-04D	Flight Deck to Ground Function (Includes CALL functions)
23-00-04E	Flight Deck to Ground Function (Includes CALL functions)
23-00-04F	Flight Deck to Ground Function (Includes CALL functions)
23-00-06	Selective Call System (SELCAL)
23-00-06A	Selective Call System (SELCAL)
23-00-06B	SELCAL Channels
23-00-09	ACARS System
23-00-09A	ACARS System
23-00-09B	ACARS Printer
23-00-09C	FMC Interface Function
23-00-10	Cockpit Voice Recorder System (CVR)
23-00-10A	Cockpit Voice Recorder System (CVR) without Recorder Independent Power Supply (RIPS)
23-00-10B	Cockpit Voice Recorder System (CVR) with Recorder Independent Power Supply (RIPS)
23-00-10C	Recorder Independent Power Supply (RIPS)
23-00-10D	Recorder Independent Power Supply (RIPS)
23-00-11	HF Communication Systems
23-00-11A	HF Communication Systems
23-00-11B	HF Communication Systems
23-00-11C	HF Communication Systems
23-00-12	Emergency Locator Transmitter (ELT)
	EMERGENCY LOCATOR TRANSMITTER (ELT)
23-00-12A	Survival Type ELT (Portable)
23-00-12B	Survival Type ELT (Portable)
23-00-12C	Fixed ELT
23-00-12D	Fixed ELT
23-00-12E	Fixed ELT
23-00-12F	Fixed ELT
23-00-14	Headset Boom Microphones
23-00-14A	Headset Boom Microphones

	737 Minimum Equipment List 23 Communications	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

23-00-14B Headset Earphones / Headphones (Captain and First Officer)
23-00-14C Boom Microphones / Headset Earphones / Headphones (Excess or Spare)

23-00-15 Pre-Recorded Passenger Announcement System

23-00-15 Pre-Recorded Passenger Announcement System

23-00-16 Push-To-Talk (PTT) Switches

PUSH-TO-TALK (PTT) SWITCHES

23-00-16A Control Wheel PTT Switches
23-00-16B Control Wheel PTT Switches
23-00-16C Flight Crew Audio Selector Panel PTT Switches
23-00-16D Glareshield Panel PTT Switches

23-00-17 Flight Deck Hand Microphones (Captain and First Officer)

23-00-17 Flight Deck Hand Microphones

23-00-18 Satellite Communication System (SATCOM)

23-00-18A Satellite Communication System (SATCOM)
23-00-18B Satellite Communication System (SATCOM)
23-00-18C SATCOM Data Link
23-00-18D SATCOM Data Link

23-00-19 Alerting System

ALERTING SYSTEM (AUDIO / VISUAL)

23-00-19A Flight Deck Call Visual Alerting System (Blue Light)
23-00-19B Flight Attendant Visual Alerting (Call Light) System
23-00-19C Flight Attendant Audio Alerting (Call Chime) System

23-00-20 Handset Systems

HANDSET SYSTEMS

23-00-20A Flight Deck Handset
23-00-20B Cabin Handsets

23-00-29 Passenger Cabin Medical Communications System

23-00-29 Passenger Cabin Medical Communications System

23-00-30 Low Frequency Underwater Locating Device (LF-ULD)

23-00-30 Low Frequency Underwater Locating Device (LF-ULD)

23-00-97 PBCS Monitored Performance

23-00-97 PBCS Monitored Performance

23-00-98 Long Range Communication System

23-00-98 Long Range Communication System

23-00-99 In-Flight Entertainment (IFE) System (System Deactivated)

23-00-99A In-flight Entertainment (IFE) System (system deactivated)
23-00-99B In-flight Entertainment (IFE) System (partially operative)

23-00-01 Flight Deck Speaker System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-01A	Flight Deck Speaker System "DISP.APPR.REQ'D"	Y	1	0	B May be inoperative provided: - Headset, earphones, or headphones associated with inoperative speaker(s) are installed and operate normally, - TCAS audio is considered inoperative and deferred per MEL 34-00-40F, - TAWS (GPWS) advisory callouts are considered inoperative and deferred per MEL 34-00-26E, and - Altitude Alert Tone is considered inoperative and deferred per MEL 34-00-25B. Note: Refer to MEL 34-00-26E (GPWS Advisory Callouts), MEL 34-00-40F (TCAS Audio), and MEL 34-00-25B (Altitude Alert Tone).
23-00-01B	Flight Deck Speaker System	Y	1	0	C (O) (M) May be inoperative provided: - Procedures do not require its use, - Headset earphones or headphones associated with inoperative speaker(s) are installed and operate normally, and - Aural Alert voices, TCAS, TAWS (GPWS), Altitude Alert, are verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-01A	Associated Audio Control Panel	____ Flight Deck Speaker INOP
23-00-01B	Associated Audio Control Panel	____ Flight Deck Speaker INOP

(O) PROCEDURES

23-00-01B

Verify TCAS and GPWS aural alerts operate normally.

- Perform [TCAS Supplementary Procedure \(Reference Vol 1, Supplementary Procedures, Section 15\)](#). Confirm aural annunciation at the completion of the test is heard.
- Perform [GPWS Supplementary Procedure \(Reference Vol 1, Supplementary Procedures, Section 15\)](#). Confirm GPWS Aural alerts are heard.

(M) PROCEDURES

23-00-01B

Verify Altitude Aural Alert operates normally.

- Perform Altitude Alert test under the CURRENT STATUS item on the DFCS BITE TEST FAULT REVIEW menu from the Control Display unit (CDU).

23-00-02 Passenger Address System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-02A	Passenger Address System "DISP.APPR.REQ'D"	Y	1	0	B (O) May be inoperative provided: 1. Alternate, normal and emergency procedures and/or operating restrictions are used, and 2. Flight attendant alerting system (audio or visual) operates normally. <i>Note: Any station that operates normally may be used.</i>
23-00-02B	Lavatory Speakers	Y	2	0	C (O) May be inoperative provided alternate procedures are used.
23-00-02C	Cabin Speakers	Y	-	-	C May be inoperative provided speakers are not adjacent to each other.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-02A	Captain's Audio Control Panel	Passenger Address System INOP
23-00-02B	Captain's Audio Control Panel	____ Lavatory Speaker INOP
23-00-02C	Captain's Audio Control Panel	____ Cabin Speaker INOP

(O) PROCEDURES

23-00-02A

1. Refer to [FOM, Briefings and Cabin Crew Communications \(Chapter 5\)](#).
2. Refer to [QRH, Non-Normal Checklist, Section 5 \(Communications\), PA System Inoperative](#).
3. Refer to In-flight Service Onboard Manual, Aircraft Equipment/Systems (Chapter 6), System Malfunctions, Inoperative P.A. System.

23-00-02B

1. Prior to departure, the pilot in command will notify flight attendants of inoperative lavatory speaker(s).
2. Flight attendants must give instructions to lavatory occupants verbally when lavatory speakers are inoperative.

23-00-03 VHF Communication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-03A	VHF Communication Systems “DISP.APPR.REQ’D”	Y	3	2	C One may be inoperative provided: 1. LEFT (No. 1) VHF Communication System operates normally, and 2. If CENTER (No.3) VHF Communication System is inoperative, ACARS is considered inoperative and deferred per MEL 23-00-09A. Note: Refer to <i>Airway Manual, Communications, Communication Equipment Requirements chart.</i> Note: Dual VHF Communication Required For ILS PRM Operations.
23-00-03B	Radio Tuning Panels (RTP)	Y	3	2	C One may be inoperative provided: 1. left radio tuning panel operates normally, and 2. Inoperative radio tuning panel remains OFF.
23-00-03C	Off-Side Tuning Light	Y	3	0	C May be inoperative.
23-00-03D	VHF Data Link “DISP.APPR.REQ’D”	Y	1	0	D May be inoperative provided procedures do not require its use. Note: Refer to <i>PBCS Equipment Requirements chart.</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-03A	Associated Radio Tuning Panel	____ VHF Communication Systems INOP
23-00-03B	Associated Radio Tuning Panel	____ Radio Tuning Panels INOP
23-00-03C	Associated Radio Tuning Panel	____ Radio Tuning Panel Off-Side Tuning Light INOP
23-00-03D	Adjacent to the MCDU	VHF Data Link INOP

23-00-04 Crewmember Interphone System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
CREWMEMBER INTERPHONE SYSTEM					
23-00-04A	Flight Deck to Cabin, Cabin to Flight Deck Functions	Y	-	-	B (O) May be inoperative provided: 1. Flight deck to cabin and cabin to flight deck interphone functions operate normally on at least 50% of cabin handsets, 2. Flight deck to cabin and cabin to flight deck interphone functions operate normally on forward cabin handset, and 3. Alternate communications procedures between the affected Flight Attendants stations are used. Note: Any station functions that operate normally may be used.
23-00-04B	Cabin to Cabin Function	Y	2	0	B (O) May be inoperative provided alternate communication procedures between affected flight attendant stations are used. Note: Any station functions that operate normally may be used.
23-00-04C	Flight Deck to Ground Function (Includes CALL functions)	Y	1	0	C (O) Flight interphone flight deck to ground / ground to flight deck function may be inoperative provided: 1. Alternate procedures are used, and 2. Nose gear / forward fuselage service interphone jack operates normally.
23-00-04D	Flight Deck to Ground Function (Includes CALL functions)	N	1	0	C (O) (M) Flight interphone flight deck to ground / ground to flight deck function may be inoperative provided: 1. Flight Interphone Jack on the EXT GRND PWR panel is deactivated, 2. Alternate procedures are used, and 3. Nose gear / forward fuselage service interphone jack operates normally. Note: If a faulty flight interphone jack is popping the circuit breaker or causing a constant nuisance noise, the faulty jack may be isolated and deferred using this MEL. Otherwise use MEL 23-00-04C.
23-00-04E	Flight Deck to Ground Function (Includes CALL functions)	Y	1	0	C (O) Service interphone flight deck to ground / ground to flight deck function may be inoperative provided: 1. Alternate procedures are used, and 2. Nose gear / forward fuselage flight interphone jack operates normally.
23-00-04F	Flight Deck to Ground Function (Includes CALL functions)	Y	2	0	B (O) Flight and Service interphones flight deck to ground / ground to flight deck function may be inoperative provided alternate procedures are used.

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-04A	Captain's Audio Control Panel	INTERPHONE - FIGHT DECK TO CABIN, CABIN TO FLIGHT DECK FUNCTIONS INOP
23-00-04B	Captain's Audio Control Panel	INTERPHONE - CABIN TO CABIN FUNCTION INOP
23-00-04C	Captain's Audio Control Panel	INTERPHONE - FLIGHT DECK TO GROUND FUNCTION INOP
23-00-04D	Captain's Audio Control Panel	INTERPHONE - FLIGHT DECK TO GROUND FUNCTION INOP
23-00-04E	Captain's Audio Control Panel	INTERPHONE - FLIGHT DECK TO GROUND FUNCTION INOP
23-00-04F	Captain's Audio Control Panel	INTERPHONE - FLIGHT DECK TO GROUND FUNCTION INOP

(O) PROCEDURES

23-00-04A

Refer to [QRH , Non-Normal Checklist, Section 5 \(Communications\), Cabin Interphone System Inoperative.](#)

23-00-04B

Refer to In-flight Service On Board Manual, Aircraft Equipment / Systems, Inoperative Interphone System.

23-00-04C, 23-00-04D, 23-00-04E, 23-00-04F

1. Use operative flight or service interphone flight deck-to-ground function for communication with ground personnel.
2. If flight and service interphone flight deck-to-ground functions are inoperative, refer to [FOM, Ramp Operations \(Chapter 30\).](#)

(M) PROCEDURES

23-00-04D

1. Deactivate the Flight Interphone System per [AMM Task 23-51-00-040-801.](#)
 2. Locate and cut the following wires approximately 2-3" downstream of the associated connector. Protect and stow the unterminated/cut wire ends common to the EXT GRND PWR Panel Interphone Jack per 707, 727 Through 787 SWPM (D6-54446) Ch. 20-10-11:
1. **Note:** *Gain access to the flight interphone jack, by carefully removing the upper half of the P19 External Power Panel. Reference B737-800/900ER SRM 51-40-02 as necessary for fastener removal and installation.*

CAUTION ENSURE THAT POWER IS REMOVED FROM THE SYSTEM TO PREVENT ELECTRICAL SHOCK HAZARD. ELECTRICAL VOLTAGE AND CURRENT CAN CAUSE DEATH OR INJURY.

A/C 3701-3771

<u>Wire Number</u>	<u>Color</u>	<u>Location</u>	<u>Pin Location to Cut Wire</u>
W0048-A-BK	Black	D4499J to D6009	Pin 9 on Connector D4499J
W0048-A-RD	Red	D4499J to D6009	Pin 7 on Connector D4499J
W0048-A-BL	Blue	D4499J to D6009	Pin 8 on Connector D4499J


A/C 3772-3777, 3801-3963

<u>Wire Number</u>	<u>Color</u>	<u>Location</u>	<u>Pin Location to Cut Wire</u>
W0048-A-BK	Black	D40665 to D6009	Pin 30 on Connector D40665
W0048-A-RD	Red	D40665 to D6009	Pin 28 on Connector D40665
W0048-A-BL	Blue	D40665 to D6009	Pin 29 on Connector D40665

Reference [WDM 23-41-11](#) as necessary.

- Re-activate the Flight Interphone System as per [AMM Task 23-51-00-440-801](#).

Figure 23-1: P19 External Power Panel

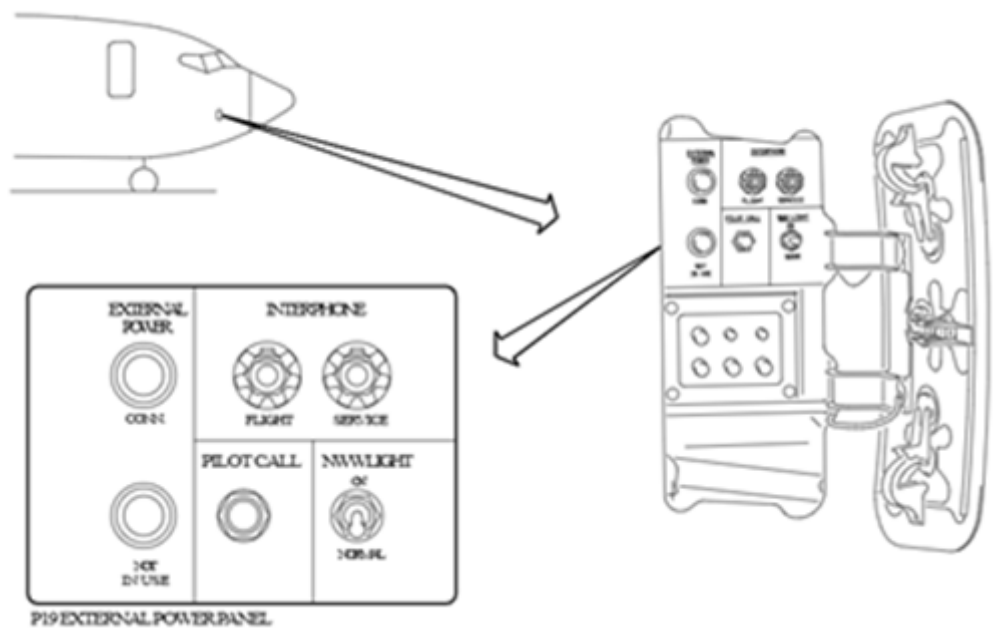

23-00-06 Selective Call System (SELCAL)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
23-00-06A	Selective Call System (SELCAL)	Y	1	0	C	(O) May be inoperative provided alternate procedures are used.
23-00-06B	SELCAL Channels “DISP.APPR.REQ’D”	Y	-	0	C	(O) May be inoperative provided alternate procedures are used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-06A	Adjacent to the ACP	SELCAL SYSTEM INOP
23-00-06B	Adjacent to the ACP	SELCAL CHANNEL(S) ____ INOP

(O) PROCEDURES

23-00-06A, 23-00-06B

May be inoperative provided appropriate Company radio frequency or ACARS is monitored in flight.

23-00-09 ACARS System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-09A	ACARS System "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided alternate procedures are used. Note: Refer to Airway Manual, Communications, Dispatch Communication, ACARS inoperative Reporting Procedures and Mandatory Company Reports . Note: To obtain performance data, refer to 14.7.4 – Alternative Methods of Obtaining a WDR . Downstream stations will be notified automatically after log sheet entry. Note: If Automatic Engine Data Reporting is inoperative, defer the Aircraft Condition Monitoring System per MEL 31-00-07A . Note: Any portion of system that operates normally may be used. Note: CPDLC and ADS-C programs are inoperative beyond VHF range. Note: With CVR Datalink enabled, an inoperative ACARS could cause a CVR fault. If Datalink is inoperative refer to MEL 23-00-03 . If CVR and/or RIPS is inoperative refer to MEL 23-00-10 . Note: Refer to PBCS Equipment Requirements chart .
23-00-09B	ACARS Printer	Y	1	0	C May be inoperative.x Note: Refer to FOM 14.7.4 – Alternative Methods of Obtaining a WDR .
23-00-09C	FMC Interface Function	Y	-	0	C (O) May be inoperative provided alternate procedures are used. Note: Any portion of system that operates normally may be used.
23-00-09D	FMC Interface Function	Y	1	0	C May be inoperative provided procedures do not require its use. Note: Any portion of system that operates normally may be used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-09A	ACARS Display Unit	ACARS INOP
23-00-09B	ACARS Printer	ACARS Printer INOP
23-00-09C	ACARS Display Unit	FMC Interface Function INOP
23-00-09D	ACARS Display Unit	FMC Interface Function INOP

CONTINUED ON NEXT PAGE

(O) PROCEDURES

23-00-09A

Refer to [QRH, Non-Normal Checklists Communications, ACARS Inop or ACARS MU Fail or DU Fail](#).

1. Flight Duty Period (FDP) Limit:

- A. Utilize LATT Worksheet or Contact Flight Control to determine LATT/FDP Limit and if FDP extension is required to complete the flight.
Pilots must monitor FDP Limit prior to OFF event.
- B. At or within 15 minutes of FDP Limit and if an FDP extension is required to complete the flight prior to IN, contact ATL radio via VHF or telephone and advise Dispatcher of pilot(s) employee number and FDP Accept/Reject.
Dispatch will send reply in Flight History for electronic documentation.

23-00-09C

Refer to [QRH, Non-Normal Checklists Communications, ACARS Inop or ACARS MU Fail or DU Fail](#).

23-00-10 Cockpit Voice Recorder System (CVR)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-10A	Cockpit Voice Recorder System (CVR) without Recorder Independent Power Supply (RIPS) -800 (3701-3771) "Contact MCC"	Y	1	0	A May be inoperative provided: 1. Flight Data Recorder (FDR) operates normally, and 2. Repairs are made within three flight days. Note: With CVR Datalink enabled, an inoperative ACARS could cause a CVR fault, refer to MEL 23-00-09 .
23-00-10B	Cockpit Voice Recorder System (CVR) with Recorder Independent Power Supply (RIPS) -900ER -800 (3772 & subs) "Contact MCC"	Y	1	0	A (M) May be inoperative provided: 1. Flight Data Recorder (FDR) operates normally, 2. RIPS circuit breaker is pulled and collared, 3. A 15 minute interval after pulling the c/b is achieved before departure, and 4. Repairs are made within three flight days. Note: CVR is inoperative with the RIPS c/b pulled and collared. Note: With CVR Datalink enabled, an inoperative ACARS could cause a CVR fault, refer to MEL 23-00-09 .
23-00-10C	Recorder Independent Power Supply (RIPS) -900ER -800 (3772 & subs)	N	1	0	C (M) May be inoperative provided: 1. CVR operates normally, and 2. RIPS battery is removed. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
23-00-10D	Recorder Independent Power Supply (RIPS) -900ER -800 (3772 & subs)	N	1	0	A (M) May be inoperative provided: 1. Flight Data Recorder operates normally, 2. RIPS battery is removed, and 3. Repairs are made within three flight days. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-10A	Cockpit Voice Recorder Panel	Cockpit Voice Recorder INOP
23-00-10B	Cockpit Voice Recorder Panel	Cockpit Voice Recorder INOP
23-00-10C	Cockpit Voice Recorder Panel	Cockpit Voice Recorder INOP
23-00-10D	Cockpit Voice Recorder Panel	Cockpit Voice Recorder INOP

CONTINUED ON NEXT PAGE

(M) PROCEDURES

23-00-10B

Deactivate RIPS ([AMM 23-00-00-040-806](#)):

1. Pull and secure VOICE RCDR/RIPS circuit breaker on the P18-2 panel located at D6.

23-00-10C, 23-00-10D

Remove RIPS battery ([AMM 23-00-00-040-806](#)).

1. Open the VOICE RCDR/RIPS circuit breaker on the P18-2 panel located at D6.
2. Remove battery from RIPS.
3. Cover battery pack connector on the RIPS charger assembly with an electrical connector cap.
4. Secure electrical connector cap to charger assembly with tape.
5. Close the VOICE RCDR/RIPS circuit breaker on the P18-2 panel.

23-00-11 HF Communication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
23-00-11A	HF Communication Systems “DISP.APPR.REQ’D”	Y	1	0	C	(O) (M) May be inoperative provided route of flight does not require the use of HF radios. Note: Refer to Airway Manual 6.1.2 Communication Equipment Requirements Chart
23-00-11B	HF Communication Systems “DISP.APPR.REQ’D”	Y	2	0	C	(O) (M) One or both may be inoperative provided route to be flown does not require its use. Note: Refer to Airway Manual 6.1.2 Communication Equipment Requirements Chart
23-00-11C	HF Communication Systems “DISP.APPR.REQ’D”	Y	2	1	C	(O) One may be inoperative while conducting operations that require two LRCS provided: 1. Aircraft SATVOICE system operates normally, 2. SATVOICE services are available as a LRCS over the intended route of flight, 3. The ICAO flight plan is updated (as required) to notify ATC of the communications equipment status of the aircraft, and 4. Alternate procedures are used. Note: Refer to Airway Manual 6.1.2 Communication Equipment Requirements Chart

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-11A	Associated Radio Tuning Panel	____ HF COMM SYSTEM INOP
23-00-11B	Associated Radio Tuning Panel	____ HF COMM SYSTEM INOP
23-00-11C	Associated Radio Tuning Panel	____ HF COMM SYSTEM INOP

(O) PROCEDURES

23-00-11A, 23-00-11B

- Confirm route to flown complies with limitations of the Remark or Exceptions column.
- Refer to [Airway Manual 6.1.2 Communication Equipment Requirements Chart](#).

23-00-11C

- When out of VHF range, use remaining operative HF radio for required ATC communications.
- Refer to [Operations Manual, Volume 1 737 Section 5.5 Communications](#) for alternate procedures to follow if remaining HF radio fails.
- Refer to [Airway Manual 6.1.2 Communication Equipment Requirements Chart](#).

(M) PROCEDURES

23-00-11A, 23-00-11B

Contact the MCC. MCC will review the procedures in [SOP MCCGP07](#), Applying WATRS Restrictions with HF Radio MEL, to determine if a 30 day history review of HF Communications deferrals or application of the Long Range Communication System MEL is required.

23-00-12 Emergency Locator Transmitter (ELT)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
EMERGENCY LOCATOR TRANSMITTER (ELT)					
23-00-12A	Survival Type ELT (Portable) (Aircraft 3701-3771)	Y	2	1	D One may be inoperative or missing. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
23-00-12B	Survival Type ELT (Portable) (B737-900 Aircraft 3801-3930) (B737-900 Aircraft 3931-3963 post AA 2560-01576) (B737-800 Aircraft 3772-3777)	Y	1	0	D May be inoperative or missing provided Fixed ELT operates normally. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
23-00-12C	Fixed ELT (B737-900 Aircraft 3931-3963 pre AA 2560-01576 (no portable ELT installed))	N	1	0	A (M) May be inoperative provided: 1. System is deactivated, and 2. Repairs are made within 90 days. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
23-00-12D	Fixed ELT (B737-900 Aircraft 3931-3963 pre AA 2560-01576 (no portable ELT installed))	Y	1	0	A (M) May be missing provided: 1. Placard stating "ELT not installed" is placed in view of the pilot, and 2. Repairs are made within 90 days.
23-00-12E	Fixed ELT (B737-900, and B737-800 Aircraft 3772-3777)	N	1	0	D (M) May be inoperative provided: 1. System is deactivated, and 2. Survival type ELT operates normally. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
23-00-12F	Fixed ELT (B737-900, and B737-800 Aircraft 3772-3777)	Y	1	0	D May be missing provided Survival type ELT is operational.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-12A	Logbook	___ ELT INOP / MISSING
23-00-12B	Logbook	SURVIVAL ELT INOP / MISSING
23-00-12C	Adjacent to ELT Switch on overhead panel	FIXED ELT INOP
23-00-12D	Adjacent to ELT Switch on overhead panel	FIXED ELT MISSING
23-00-12E	Adjacent to ELT Switch on overhead panel	FIXED ELT INOP
23-00-12F	Adjacent to ELT Switch on overhead panel	FIXED ELT MISSING

CONTINUED ON NEXT PAGE

	737 Minimum Equipment List 23 Communications	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

Note: *“Fixed” ELTs are automatic and permanently installed in the fuselage and controlled by a switch on the P5 cockpit overhead panel . “Survival” type ELTs are portable.*

(M) PROCEDURES

23-00-12C, 23-00-12E

Deactivate the inoperative “fixed” ELT by performing [AMM Task 23-00-00-040-808](#).

23-00-12D

On an Aircraft Placard, write “ELT NOT INSTALLED” and attach it to the forward instrument panel in view of the pilot.

23-00-14 Headset Boom Microphones

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-14A	Headset Boom Microphones “Contact MCC”	Y	2	0	A May be inoperative provided: 1. Associated hand microphone is installed and operates normally, and 2. Repairs are made within three flight days.
23-00-14B	Headset Earphones / Headphones (Captain and First Officer)	Y	2	1	C Either captains or first officer’s headset may be inoperative provided associated flight deck speaker operates normally.
23-00-14C	Boom Microphones / Headset Earphones / Headphones (Excess or Spare)	Y	-	0	D May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-14A	Associated Audio Control Panel	____ Headset Boom Microphone(s) INOP
23-00-14B	Associated Audio Control Panel	____ Headset Earphone / Headphone INOP
23-00-14C	Logbook	Excess/Spare Boom Microphone / Headset Earphone / Headphone INOP

23-00-15 Pre-Recorded Passenger Announcement System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
23-00-15	Pre-Recorded Passenger Announcement System	Y	1	0	D	(O) May be inoperative provided alternate procedures are used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-15	FWD Flight Attendant Panel	Pre-Recorded Passenger Announcement System INOP

(O) PROCEDURES

Flight Attendants will make all preflight announcements through the Passenger Address System or by direct communication with all passengers in each cabin.

23-00-16 Push-To-Talk (PTT) Switches

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PUSH-TO-TALK (PTT) SWITCHES					
23-00-16A	Control Wheel PTT Switches	N	2	1	C (M) May be inoperative provided: 1. Associated audio selector panel PTT switch operates normally, and 2. Affected switch is deactivated.
23-00-16B	Control Wheel PTT Switches	Y	2	1	C May be inoperative provided: 1. Associated audio selector panel PTT switch operates normally, and 2. Affected switch is verified to be failed open. Note: If there is sidetone, the PTT switch has failed in the closed position.
23-00-16C	Flight Crew Audio Selector Panel PTT Switches	Y	2	1	C (M) May be inoperative provided: 1. Associated Control Wheel PTT switch operates normally, and 2. Affected switch is verified failed open.
23-00-16D	Glareshield Panel PTT Switches (B737-900ER) (Aircraft 3772-3777)	Y	2	0	C (M) May be inoperative provided affected switch is either verified failed open or deactivated. Note: If there is sidetone, the PTT switch has failed in the closed position.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-16A	Associated Audio Control Panel	____ Control Wheel PTT Switch INOP
23-00-16B	Associated Audio Control Panel	____ Control Wheel PTT Switch INOP
23-00-16C	Affected Audio Control Panel	____ Flight Crew Audio Selector Panel PTT Switch INOP
23-00-16D	Adjacent to glareshield switch	____ Glareshield PTT Switch INOP

(M) PROCEDURES

23-00-16A

- To verify the switch has electrically failed open listen for sidetone during a trial transmission, but do not use the associated PTT switch. If switch is failed open defer per [MEL 23-00-16B](#).

Note: *If there is sidetone, the PTT switch has failed in the closed position.*

- If the Control Wheel PTT switch is failed closed deactivate the switch per [AMM Task 23-00-00-040-801](#).

23-00-16C

- To verify the switch has electrically failed open listen for sidetone during a trial transmission, but do not use the associated PTT switch.


Note: *If there is sidetone, the PTT switch has failed in the closed position.*

23-00-16D

1. To verify the switch has electrically failed open listen for sidetone during a trial transmission, but do not use the associated PTT switch.
2. If there is sidetone, the PTT switch has failed in the closed position.
3. If glareshield PTT switch is failed closed deactivate per [AMM Task 23-00-00-040-803](#).

Note: *If the PTT switch needs to be deactivated, maintenance is required and “Flight Crew May NOT Placard”.*

Figure 23-2: CONTROL WHEEL PTT SWITCH – REMOVAL / INSTALLATION

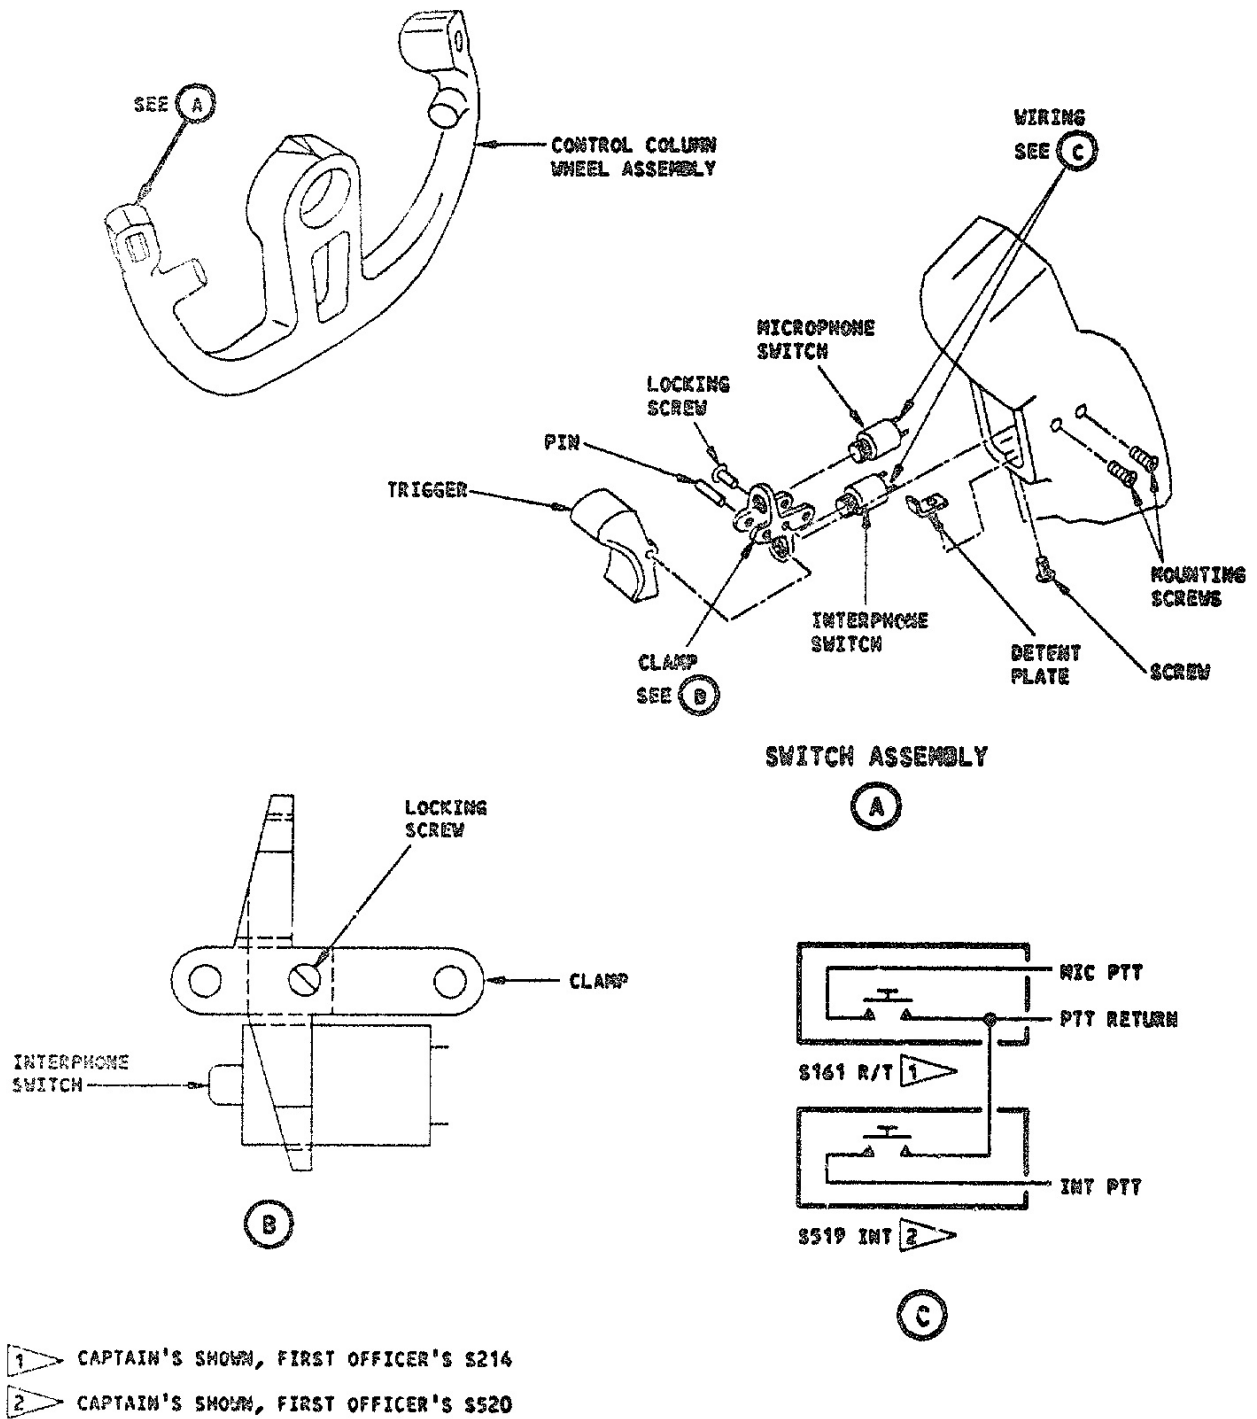

23-00-17 Flight Deck Hand Microphones (Captain and First Officer)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
23-00-17	Flight Deck Hand Microphones (Captain and First Officer)	Y	2	0	C	May be inoperative or missing provided associated boom microphone operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-17	Associated Audio Control Panel	____ Flight Deck Hand Microphone(s) INOP

23-00-18 Satellite Communication System (SATCOM)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-18A	Satellite Communication System (SATCOM) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided alternate procedures are used. Note: Refer to Airway Manual 6.1.2 Communication Equipment Requirements Chart . Note: CPDLC and ADS-C programs are inoperative beyond VHF range. Note: Refer to PBCS Equipment Requirements chart .
23-00-18B	Satellite Communication System (SATCOM) "DISP.APPR.REQ'D"	Y	1	0	D May be inoperative provided procedures do not require its use. Note: Airway Manual Section 6.1 Communication Equipment Requirements . Note: Refer to PBCS Equipment Requirements chart .
23-00-18C	SATCOM Data Link "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided alternate procedures are used. Note: Refer to Airway Manual 6.1.2 Communication Equipment Requirements Chart . Note: CPDLC and ADS-C programs are inoperative beyond VHF range. Note: Refer to PBCS Equipment Requirements chart .
23-00-18D	SATCOM Data Link "DISP.APPR.REQ'D"	Y	1	0	D May be inoperative provided procedures do not require its use. Note: Refer to Airway Manual Section 6.1 Communication Equipment Requirements . Note: CPDLC and ADS-C programs are inoperative beyond VHF range. Note: Refer to PBCS Equipment Requirements chart .

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-18A	Associated Audio Control Panel	SATCOM INOP
23-00-18B	Associated Audio Control Panel	SATCOM INOP
23-00-18C	Associated Audio Control Panel	SATCOM DATA INOP
23-00-18D	Associated Audio Control Panel	SATCOM DATA INOP

(O) PROCEDURES

21-00-18A, 21-00-18C

1. Refer to [Airway Manual Section 6.1 Communication Equipment Requirements](#).

23-00-19 Alerting System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
ALERTING SYSTEM (AUDIO / VISUAL)					
23-00-19A	Flight Deck Call Visual Alerting System (Blue Light) “DISP.APPR.REQ’D”	Y	1	0	B May be inoperative provided: 1. Flight deck audio alerting system operates normally, and 2. Audio alerting system differentiates between normal and emergency calls. Note: Flight deck audio alerting system must always be operative. Note: A single chime is a normal call where multiple chimes indicate an emergency call.
23-00-19B	Flight Attendant Visual Alerting (Call Light) System “DISP.APPR.REQ’D”	Y	1	0	B (O) May be inoperative provided: 1. PA system operates normally, and 2. Alternate procedures for contacting flight attendants are used. Note: Passenger to Attendant Call System is considered a Nonessential Equipment Furnishings (NEF) item. Note: Any visual alerting system function(s) that operates normally may be used.
23-00-19C	Flight Attendant Audio Alerting (Call Chime) System “DISP.APPR.REQ’D”	Y	1	0	B (O) May be inoperative provided: 1. PA system operates normally, and 2. Alternate procedures for contacting flight attendants are used. Note: Passenger to Attendant Call System is considered a Nonessential Equipment Furnishings (NEF) item. Note: Any audio alerting system function(s) that operates normally may be used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-19A	Flight Deck Call Light	Flight Deck Call Light INOP
23-00-19B	Captain's Audio Panel	___ Flight Attendant Call Light INOP
23-00-19C	Captain's Audio Panel	___ Flight Attendant Call Chime INOP

(O) PROCEDURES

23-00-19B, 23-00-19C

Flight Attendants will use PA or establish verbal communication with inoperative call light or chime positions.

23-00-20 Handset Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
HANDSET SYSTEMS					
23-00-20A	Flight Deck Handset	Y	1	0	C
(O) May be inoperative provided:					
1. Flight Deck to cabin communication operates normally, and					
2. Alternate procedures are used.					
23-00-20B	Cabin Handsets	Y	-	-	B
(O) May be inoperative provided:					
1. Fifty percent of cabin handsets operate normally,					
2. Forward position must be operative, and					
3. Alternate communications procedures between affected flight attendants station are used.					
Note: Any handset function(s) that operate normally may be used.					

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-20A	Flight Deck Handset	Flight Deck Handset INOP
23-00-20B	Affected Cabin Handset	____ Cabin Handset INOP

(O) PROCEDURES

23-00-20A

Use the Cabin Interphone / PA function of the Captain's or First Officer's Audio Selector Panel.

23-00-20B

Flight Attendant occupying seat with inoperative handset will establish communication with Flight Attendant occupying the position with an operative handset.

23-00-29 Passenger Cabin Medical Communications System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	C	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
23-00-29	Passenger Cabin Medical Communications System (B737-800) (B737-900 Aircraft 3801-3930)	Y				(O) May be inoperative and components may be missing provided alternate procedures are used. Note: Any portion of the system that operates normally may be used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-29	Logbook	PASS CABIN MEDICAL COMM SYS INOP

(O) PROCEDURES

23-00-29

1. Refer to [FOM - Flight Ops Manual Section 17.4 Customer Medical Events/Emergencies](#), and [On-Board Manual](#) for procedures in rendering medical assistance, filling out Medical Assistance Form (MAF), and communicating with STAT-MD Consultants.

23-00-30 Low Frequency Underwater Locating Device (LF-ULD)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y		D	REMARKS OR EXCEPTIONS
23-00-30	Low Frequency Underwater Locating Device (LF-ULD)	Y	1	0	D May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-30	Logbook	LOW FREQUENCY UNDERWATER LOCATING DEVICE INOP

23-00-97 PBCS Monitored Performance

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			Y	-	-	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
23-00-97	PBCS Monitored Performance "Contact MCC" "DISP.APPR.REQ'D" Administrative Control Item					Aircraft is not PBCS approved due to poor monitored performance. Do not file flight plan using P2 or SUR/RSP180 ICAO codes. FANS (CPDLC/ADS-C) functionality is normal and can be used.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-97	Adjacent To Captains Navigational Display Unit	AIRCRAFT NOT PBCS APPROVED

23-00-98 Long Range Communication System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS
23-00-98	Long Range Communication System "DISP.APPR.REQ'D" Administrative Control Item	N		(M) Aircraft restricted due to HF history. WATRS routes not authorized. MCC authorization is required prior to its usage or removal.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-98	Log Book	HF Restricted

(M) PROCEDURES

Use this item to restrict aircraft due to HF equipment that has been placed on MEL three (3) or more times in the last thirty (30) days.

23-00-99 In-Flight Entertainment (IFE) System (System Deactivated)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
23-00-99A	In-flight Entertainment (IFE) System (system deactivated) "DISP.APPR.REQ'D"	Y	1	0	D (O) (M) May be inoperative provided: - System is deactivated, and - For aircraft with the AVOD MOD the pre-recorded announcements are considered inoperative and deferred per MEL 23-00-15. Note: Approval for flight must be obtained from the MCC Shift Manager.
23-00-99B	In-flight Entertainment (IFE) System (partially operative)	Y	1	0	D (O) May be inoperative provided alternate procedures are used. Note: This item is for use when the IFE system has a zone inoperative, wrong media software or corrupt file server leaving it partially inoperative. For all other individual IFE components see the Nonessential Equipment and Furnishings List (NEF) for deferral. Note: Any part of the system that is operational may be used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
23-00-99A	1. Video On Light 2. IFE Control Panel	IFE Inoperative – "Do not use"
23-00-99B	1. Video On Light 2. IFE Control Panel	IFE_____functions(s) Inop

(O) PROCEDURES

23-00-99A, 23-00-99B

Captain to brief Lead Flight Attendant that it may be necessary to do passenger briefings and emergency equipment demonstrations verbally.

(M) PROCEDURES

23-00-99A

Note: This relief should only be applied if it is necessary to deactivate the IFE system for situations such as overheating or safety of flight. If the system is partially operative then use the partially operative MEL relief; for example, if the wrong media software was loaded or the file server was corrupted the system would not operate normally but would not require deactivation. For individual IFE components see the Nonessential Equipment and Furnishings List (NEF) for deferral.

1. To deactivate the IFE System:
 - A. For aircraft 3772-3773, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
Seat PWR FWD	P6-12	A8
Seat PWR AFT	P6-12	A5
IVS Head End	P6-1	B9
PWR CTRL	P6-1	B10

CONTINUED ON NEXT PAGE

B. For aircraft 3701-3743, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
AMCU 1	P6-1	C9
AMCU 2	P6-1	C12
AI, FS	P6-1	B13
IFE DC	P6-1	C5
CELL MODEM	P6-1	B10
CREW PANEL	P6-1	B8
HDD OML	P6-1	B9

C. For aircraft 3744-3771, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
PWR IFE DC	P6-1	C8
IFE CONTROL	P6-1	C10
AMCU 1	P6-1	B12
AMCU 2	P6-1	B9
ADB 1	P6-1	A8
ADB 2	P6-1	A9
ADRS	P6-1	A11

D. For aircraft 3774-3777, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
AMCU 1	P6-1	C9
AMCU 2	P6-1	C12
AI, FS1, FS2	P6-1	B13
IFE DC	P6-1	C5
CELL MODEM	P6-1	B10
CREW PANEL	P6-1	B8
HDD OML	P6-1	B9

E. For aircraft 3801-3930, and for 3931-3963 post AA 2500-01847, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
IFE DC	P6-1	B10
IFE AC	P6-1	B9
SAT TV SYS	P6-1	B12
SAT TV CONTROL	P6-1	B13
SEAT POWER FWD	P6-12	A8
SEAT POWER AFT	P6-12	A5
VIDEO-1	P6-1	D5

F. For pre AA 2500-01847 aircraft 3943-3952 and 3955-3963, pull and secure the following circuit breakers:

CIRCUIT BREAKER	PANEL	LOCATION
IFE DC	P6-1	B10
IFE AC	P6-1	B9
SEAT POWER FWD	P6-12	A8
SEAT POWER AFT	P6-12	A5
VIDEO-1	P6-1	D5
VIDEO-2	P6-1	D6

2. Install a placard on the IFE control panel stating "IFE Inoperative – Do not use".
3. On ships 3701 thru 3777, 3801 thru 3930, and 3931-3963 post AA 2500-01847 with the AVOD, the pre-recorded announcement system is considered inoperative and deferred per [MEL 23-00-15](#).

Note: For Business Elite Seats, deactivation of the IFE system will also remove recline and footrest power.

24 Electrical Power

Table of Contents

24-00-01	Engine Driven Generator System
24-00-01	Engine Driven Generator System
24-00-02	APU Generator System
24-00-02	APU Generator System
24-00-03	Engine Driven Generator DRIVE Lights
24-00-03	Engine Driven Generator DRIVE Lights
24-00-07	Frequency Meter
24-00-07	Frequency Meter
24-00-08	AC Volts Indication
24-00-08	AC Volts Indication
24-00-11	External Power System
24-00-11	External Power System
24-00-12	GEN OFF BUS Lights
24-00-12	GEN OFF BUS Lights
24-00-14	BAT DISCHARGE Light
24-00-14	BAT DISCHARGE Light
24-00-15	TR UNIT Light
24-00-15	TR UNIT Light
24-00-16	ELEC Light
24-00-16	ELEC Light
24-00-17	DC Ammeter Indication
24-00-17	DC Ammeter Indication
24-00-18	DC Volts Indication
24-00-18	DC Volts Indication
24-00-19	APU GEN OFF BUS Light
24-00-19	APU GEN OFF BUS Light

24-00-01 Engine Driven Generator System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-01	Engine Driven Generator System "DISP.APPR.REQ'D"	N	2	1 B	(O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. APU generator operates normally and is used throughout flight, 2. APU oil quantity is serviced to full prior to deferral and ONCE EACH FLIGHT DAY (Log Book Entry Required), 3. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements, and 4. Performance Corrections are applied. Note: Use of coastal routing is recommended for operations from Alaska "to" the 48 contiguous states. Note: This item is AD related. Theater Restrictions May Apply Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-01	Associated Engine Driven Generator Switch	___ Engine Driven Generator System INOP

(O) PROCEDURES

Refer to the Remarks or Exceptions column.

Note: Bulbs have been removed from DRIVE and GEN OFF BUS lights.

24-00-01	ENGINE DRIVEN GENERATOR SYSTEM
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 180 lbs. per hour for APU usage.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

(M) PROCEDURES

CAUTION

DO NOT ACTUATE THE DISCONNECT SWITCH FOR MORE THAN 3 SECONDS. ALLOW A MINIMUM OF 60 SECONDS BETWEEN ACTUATION PERIODS. FAILURE TO FOLLOW THIS PROCEDURE CAN CAUSE DAMAGE TO IDG.

1. Check oil level in the inoperative IDG.
 - A. If oil level is at the proper level, affected engine driven generator system can be deferred according to “B Repair Category” limitations.
 - B. If oil level is not at the proper level or IDG has no oil, affected engine driven generator system can be deferred for up to 50 hours or “B Repair Category” limitations, whichever occurs first. In this case, apply MEL 24-00-01 and create a separate MON log referencing MEL log number stating IDG oil not at proper level using [AMM 24-00-00-040-801](#) D(1)(a) as the deferral authority and 50 flight hours as the terminating time standard.
2. Disconnect Generator (IDG) as follows (if not previously disconnected):
 - A. Supply external power.
 - B. Start the associated engine.
 - C. Position the AC meter selector switch to the applicable generator position.
 - D. Lift the DISCONNECT switch guard.
 - E. Push the DISCONNECT switch to the DISCONNECT position when the engine is at or above idle speed.
 - F. Verify the DRIVE light illuminates.
 - G. Verify the following AC Meter indications on the P-5 panel:
 - i. Verify the AC VOLTS indication shows 0 volts.
 - ii. Verify the CPS freq indication is blank.
3. Shut down engine.
4. Remove the lamp (bulb) from from the associated lights:
 - o Generator DRIVE light on Generator Drive and Standby Power Panel.
 - o GEN OFF BUS light on Ground Power Panel and Bus Switching Panel.

ONCE EACH FLIGHT DAY

1. Service APU oil level to full.

24-00-02 APU Generator System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-02	APU Generator System "DISP.APPR.REQ'D"	Y	1	0	C (O) Except for Extended Operations (ETOPS), may be inoperative provided RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements . Note: Use of coastal routing is recommended for operations from Alaska "to" the 48 contiguous states. Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-02	APU Generator Switch	APU Generator INOP

(O) PROCEDURES

24-00-02

Refer to the B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU inop, or APU Generator System Inop](#).

24-00-03 Engine Driven Generator DRIVE Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
24-00-03	Engine Driven Generator DRIVE Lights	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-03	Affected Engine Driven Generator DRIVE Light(s)	____ Engine Driven Generator DRIVE Lights INOP

24-00-07 Frequency Meter

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
24-00-07	Frequency Meter	Y	1	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-07	Frequency Meter	Frequency Meter INOP

24-00-08 AC Volts Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-08	AC Volts Indication	Y	1	0	B (O) May be inoperative except in STBY PWR position provided Standby Power Test is accomplished.

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-08	AC Voltmeter	AC Volts Indication INOP

(O) PROCEDURES

Accomplish a Standby Power System test. Refer to the [Operations Manual, Volume 1, Supplementary Procedures, Electrical Section, STANDBY POWER TEST](#).

24-00-11 External Power System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y			C	REMARKS OR EXCEPTIONS
24-00-11	External Power System "DISP.APPR.REQ'D"	Y			C	<i>Note: Any portion of system which operates normally may be used.</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-11	Ground Power Switch	External Power System INOP

24-00-12 GEN OFF BUS Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
24-00-12	GEN OFF BUS Lights	Y	2	1	C	May be inoperative provided associated generator AC ammeter operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-12	Affected GEN OFF BUS Light	____ GEN OFF BUS Light INOP

OPERATIONS NOTE

The associated AC ammeter can be used to determine when the generator is not supplying the generator bus.

24-00-14 BAT DISCHARGE Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-14	BAT DISCHARGE Light	Y	1	0 C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-14	BAT DISCHARGE Light	BAT DISCHARGE Light INOP

OPERATIONS NOTE

The BAT DISCHARGE light illuminates whenever the main battery or the Auxiliary battery (if installed, -800) is discharging. The following tests may be performed to verify that the batteries are not discharging:

1. Position the DC Meters Selector to the BAT position and verify that the DC AMPS indication is not negative.
2. If an AUX battery is installed(-800), position the DC Meters Selector to the AUX BAT position and verify that the DC AMPS indication is not negative.

24-00-15 TR UNIT Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-15	TR UNIT Light	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-15	TR UNIT Light	TR UNIT Light INOP

OPERATIONS NOTE

The TR UNIT light illuminates whenever a TR fault exists. The following test may be performed to verify that the TR's are operating normally:

1. Position the DC Meters selector to the TR 1 position and verify that the DC AMPS indication is greater than 5 amps.
2. Position the DC Meters selector to the TR 2 position and verify that the DC AMPS indication is greater than 5 amps.
3. Position the DC Meters selector to the TR 3 position and verify that the DC VOLTS indication is 28 ± 6 volts.

24-00-16 ELEC Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
24-00-16	ELEC Light	Y	1	0	C
					(O) May be inoperative OFF provided PRIOR TO EACH DEPARTURE: 1. Standby Power Test is accomplished, and 2. Battery Charger is verified to operate normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-16	Overhead Electircal Panel	DC ELEC Light INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE

Verify that the standby power system and the battery charger are operating normally.

Ships 3701-3771, 3774-3777

1. Accomplish Standby Power System Test. Refer to [Volume 1 737 5.6.3 Standby Power Test](#).
2. Position the DC Meters selector to the AUX BAT position.
3. Position the STANDBY POWER switch to the BAT position.
4. Wait for 5 seconds.
5. Position the STANDBY POWER switch to the AUTO position and verify that the DC AMPS indication is greater than or equal to 10 Amps.
6. Position the DC Meters selector to the BAT position and verify that the DC AMPS indication is greater than or equal to 10 Amps.
7. If the DC AMPS indication is less than 10 Amps, position the STANDBY POWER switch to the BAT position.
8. Wait for 5 seconds.
9. Position the STANDBY POWER switch to the AUTO position and verify that the DC AMPS indication is greater than or equal to 10 Amps.
10. Return the DC Meters selector to pretest position.

Ships 3772, 3773, 3801-3930, 3931-3963

1. Perform a test of the Standby Power System. Refer to [Volume 1 737 5.6.3 Standby Power Test](#).
2. Position the STANDBY POWER switch to the BAT position.
3. Wait for 5 seconds.
4. Position the STANDBY POWER switch to the AUTO position and verify that the DC AMPS indication is greater than or equal to 10 Amps.
5. Return the DC Meters selector to pretest position.

24-00-17 DC Ammeter Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y	1	0	B
24-00-17	DC Ammeter Indication	Y	1	0	B
					REMARKS OR EXCEPTIONS (O) May be inoperative provided: 1. BAT position operates normally, 2. Standby Power Test is accomplished, and 3. Procedures do not require its use.

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-17	DC Ammeter	DC Ammeter Indication INOP

(O) PROCEDURES

1. Accomplish Standby Power System Test. Refer to the [Volume 1 737 5.6.3 Standby Power Test](#).
2. Verify normal operation of the DC ammeter indication in the BAT position.

24-00-18 DC Volts Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y	1	0	B
24-00-18	DC Volts Indication	Y	1	0	B
					REMARKS OR EXCEPTIONS (O) May be inoperative except in STBY PWR position provided Standby Power Test is accomplished.

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-18	DC Voltmeter	DC Volts Indication INOP

(O) PROCEDURES

Accomplish Standby Power System Test. Refer to the [Volume 1 737 5.6.3 Standby Power Test](#).

24-00-19 APU GEN OFF BUS Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
24-00-19	APU GEN OFF BUS Light	Y	1	0	C	May be inoperative provided: 1. APU frequency meter operates normally, and 2. APU ammeter operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
24-00-19	APU GEN OFF BUS Light	APU GEN OFF BUS Light INOP

25 Equipment / Furnishings

Table of Contents

25-00-01	Megaphones
25-00-01	Megaphones - Tamper Seals or Tags
25-00-03	Required Flight Attendant Seats
	FLIGHT ATTENDANT SEAT ASSEMBLY (SINGLE OR DUAL POSITION)
25-00-03A	Required Flight Attendant Seats
25-00-03B	Excess Flight Attendant Seat(s)
25-00-03C	Flight Attendant Seats - Restraints
25-00-05	Cargo Compartment Restraint Components
25-00-05A	Cargo Compartment Restraint Components (FWD Cargo Bin 1 Transverse Net)
25-00-05B	Cargo Compartment Restraint Components (FWD Cargo Bin 1 Door Net)
25-00-05C	Cargo Compartment Restraint Components (FWD Cargo Bin 2 Transverse Net)
25-00-05D	Cargo Compartment Restraint Components (FWD Cargo Bin 2 Attach/Tie Down Point)
25-00-05E	Cargo Compartment Restraint Components (AFT Cargo Bin 3 Transverse Net)
25-00-05F	Cargo Compartment Restraint Components (AFT Cargo Bin 3 Attach/Tie Down Point)
25-00-05G	Cargo Compartment Restraint Components (AFT Cargo Bin 4 Door Net)
25-00-05H	Cargo Compartment Restraint Components (AFT Cargo Bin 4 AFT Transverse Net)
25-00-05I	Cargo Compartment Restraint Components (FWD Cargo Nets)
25-00-05J	Cargo Compartment Restraint Components (AFT Cargo Nets)
25-00-06	Passenger Seats
	PASSENGER SEATS
25-00-06A	Passenger Seat(s)
25-00-06B	Recline Mechanism
25-00-06C	Recline Mechanism
25-00-06D	Arm Rests with Seat Positioning Controls for Taxi, Takeoff, and Landing (TTL) and/or Other Controls
25-00-06E	Arm Rests without Seat Positioning Controls for Taxi, Takeoff, and Landing (TTL) and/or Other Controls
25-00-06F	Underseat Baggage Restraining System
25-00-06G	Seat Belt/Air Bag Restraint Systems
25-00-06H	Delethalization Pads
25-00-09	"Fasten Seat Belts While Seated" Signs or Placards
25-00-09	"Fasten Seat Belts While Seated" Signs or Placards
25-00-10	Non-Essential Equipment and Furnishings (NEF)
25-00-10	Non-essential Equipment and Furnishings (NEF)
25-00-11	Observer's Seat (Including Associated Equipment)
25-00-11A	Primary Observer's Seat (Including Associated Equipment)
25-00-11B	Primary Observer's Seat (Including Associated Equipment)
25-00-11C	Second Observers Seat (Including Associated Equipment)
25-00-11D	Crotch Straps
25-00-12	Portable Flashlight Holders / Flashlights
25-00-12A	Portable Flashlight Holders / Flashlights - Cabin
25-00-12B	Portable Flashlight Holders / Flashlights - Flight Deck
25-00-12C	Portable Flashlight Holders / Flashlights - Tamper Seals or Tags
25-00-16	Cargo Compartment Lining Panels and Floor Panels
25-00-16A	Cargo Compartment Lining Panels and Floor Panels - FWD Cargo Compartment
25-00-16B	Cargo Compartment Lining Panels and Floor Panels - AFT Cargo Compartment
25-00-16C	Cargo Compartment Lining Panels and Floor Panels - FWD and AFT Cargo Compartments

	737 Minimum Equipment List 25 Equipment / Furnishings	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

25-00-17 Emergency Medical Equipment

EMERGENCY MEDICAL EQUIPMENT

25-00-17A	First Aid Kits and/or Associated Equipment
25-00-17B	First Aid Kit Tamper Seals or Tags
25-00-17C	AED (Automatic External Defibrillator)
25-00-17D	AED Tamper Seals or Tags
25-00-17E	AED Bracket / Lock
25-00-17F	EEMK (Enhanced Emergency Medical Kit)
25-00-17G	EEMK (Enhanced Emergency Medical Kit)
25-00-17H	EEMK Tamper Seals or Tags
25-00-17I	EEMK Bracket / Lock
25-00-17J	Red Pouch (Medical Accessory Pouch)

25-00-18 Passenger Flotation Equipment

PASSENGER FLOTATION EQUIPMENT

25-00-18A	Passenger Life Vests
25-00-18B	Passenger Life Vests
25-00-18C	Spare Life Vests
25-00-18D	Infant Life Vests
25-00-18E	Life Rafts

25-00-20 Exterior Lavatory Door Ashtrays

25-00-20A	Exterior Lavatory Door Ashtrays
25-00-20B	Exterior Lavatory Door Ashtrays

25-00-21 Flight Crew Seats

FLIGHT CREW SEATS

25-00-21A	Recline
25-00-21B	Vertical Adjustment
25-00-21C	Armrests
25-00-21D	Lumbar / Thigh Supports
25-00-21E	Headrests

25-00-22 Galley / Lavatory Waste Receptacle Access Doors / Covers

GALLEY / LAVATORY WASTE RECEPTACLE ACCESS DOORS / COVERS

25-00-22A	Galley Waste Receptacles Access Doors / Covers
25-00-22B	Lavatory Waste Receptacles Access Doors / Covers

25-00-24 Overhead Storage Bin(s) / Cabin, Galley And Lavatory Storage Compartment / Closets

25-00-24A	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets
25-00-24B	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets
25-00-24C	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets
25-00-24D	Multi Latch/Quarter Turn Lug Installations
25-00-24E	Storage Compartment Key Locks

25-99-01 PED Mount

25-99-01A	PED Mount
25-99-01B	PED Mount
25-99-01C	PED Mount

25-00-01 Megaphones

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
25-00-01	Megaphones - Tamper Seals or Tags "Contact MCC"	Y	-	0	C	(O) May be inoperative, damaged, or missing provided proper installation and operation is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-01	Logbook	MEGAPHONE SEALS INOP/DAMAGED/MISSING

(O) PROCEDURES

PRIOR TO EACH DEPARTURE

Captain to brief Lead Flight Attendant/Purser that one or more megaphone(s) have inoperative, damaged, or missing seals and proper installation and operation has to be verified.

25-00-03 Required Flight Attendant Seats

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH		REPAIR CATEGORY	
FLIGHT CREW MAY PLACARD				REMARKS OR EXCEPTIONS	
ITEM NO.	NAME/DESCRIPTION				
FLIGHT ATTENDANT SEAT ASSEMBLY (SINGLE OR DUAL POSITION)					
25-00-03A	Required Flight Attendant Seats (Refer to In-flight Service Onboard Manual for required seat locations) "DISP.APPR.REQ'D"	Y	-	-	B (O) (M) One seat or assembly (dual position) may be inoperative provided: - Affected seat or seat assembly is not occupied, - Flight attendant(s) displaced by inoperative seat(s) occupies either an adjacent flight attendant seat or passenger seat which is most accessible to inoperative seat(s), so as to most effectively perform assigned duties, - Alternate procedures are used for displaced Flight Attendant(s) (Ref. In-flight Service Onboard Manual), - Folding type seat stows automatically or is secured in retracted position and is checked ONCE EACH FLIGHT DAY (LOG BOOK ENTRY REQUIRED), and - Passenger seat assigned to flight attendant is placarded "FOR FLIGHT ATTENDANT ONLY". Note: An automatic folding seat that will not stow automatically is considered inoperative. Note: A seat position with an inoperative or missing restraint system renders that seat position inoperative. Note: If one side of a dual seat assembly is inoperative and a flight attendant is displaced to the adjacent seat, adjacent seat must operate normally. Repetitive Check Required (Yellow Placard)
25-00-03B	Excess Flight Attendant Seat(s)	Y	-	0	C (M) May be inoperative provided: - Affected seat position or seat assembly is not occupied, and - Folding type seat stows automatically or is secured in retracted position and is checked ONCE EACH FLIGHT DAY (LOG BOOK ENTRY REQUIRED). Note: An automatic folding seat that will not stow automatically is considered inoperative. Note: A seat position with an inoperative or missing restraint system is considered inoperative. Repetitive Check Required (Yellow Placard)

CONTINUED ON NEXT PAGE

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	FLIGHT ATTENDANT SEAT ASSEMBLY (SINGLE OR DUAL POSITION)				
25-00-03C	Flight Attendant Seats - Restraints "DISP.APPR.REQ'D"	Y	-	-	B (O) Flight attendant seat(s) restraint system(s) may be inoperative provided: 1. Affected seat(s) is not occupied, 2. Flight attendant(s) displaced by inoperative restraint(s) occupies either an adjacent flight attendant seat or passenger seat which is most accessible to inoperative seat(s), so as to most effectively perform assigned duties, 3. Alternate procedures are used for displaced Flight Attendant(s) (Ref. In-flight Service Onboard Manual), 4. Folding type seat stows automatically. If it does not stow automatically then defer seat per MEL 25-00-03A or MEL 25-00-03B as applicable, 5. Passenger seat assigned to flight attendant is placarded "FOR FLIGHT ATTENDANT ONLY". Note: Excess Flight Attendant Seats do not require a passenger seat to be blocked Note: If one side of a dual seat assembly is inoperative and a flight attendant is displaced to the adjacent seat, adjacent seat must operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-03A	Logbook	____ Flight Attendant Seat INOP
25-00-03B	Logbook	____ Flight Attendant Seat INOP
25-00-03C	Logbook	____ Flight Attendant Seat INOP

(O) PROCEDURES

25-00-03A, 25-00-03C

1. The flight attendant assigned to the affected seat position must occupy either a passenger seat or an excess flight attendant seat, whichever is most accessible to the inoperative seat. The flight attendant must be able to reach the assigned emergency exit in essentially the same time as from the normally assigned seat, i.e., a 2 or 3 second time difference is considered "essentially the same time".
2. Refer to [In-Flight Service Onboard Manual, Section 7, Flight Dispatch With Inoperative Flight Attendant Seat](#).

(M) PROCEDURES

25-00-03A, 25-00-03B

1. Ensure the Flight Attendant Seat automatically retracts without assistance to the fully stowed position.
2. If the seat will not automatically retract without assistance to the fully stowed position, secure the inoperative seat in the fully stowed position using the following procedure (*Maintenance is Required and Flight Crew May NOT Placard*):
 - A. Secure seat in the retracted (fully stowed) position using high visibility tape.
 - B. Placard the seat using high visibility tape or a section of 2 inch wide masking tape with the words "UNSERVICEABLE - DO NOT USE" printed legibly in 1 inch black letters.

ONCE EACH FLIGHT DAY:

1. Ensure seat has remained in fully stowed position. If seat has been secured in the fully stowed position with tape, ensure tape is in good condition.

25-00-05 Cargo Compartment Restraint Components

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-05A	Cargo Compartment Restraint Components (FWD Cargo Bin 1 Transverse Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05B	Cargo Compartment Restraint Components (FWD Cargo Bin 1 Door Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05C	Cargo Compartment Restraint Components (FWD Cargo Bin 2 Transverse Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05D	Cargo Compartment Restraint Components (FWD Cargo Bin 2 Attach/Tie Down Point) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05E	Cargo Compartment Restraint Components (AFT Cargo Bin 3 Transverse Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05F	Cargo Compartment Restraint Components (AFT Cargo Bin 3 Attach/Tie Down Point) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05G	Cargo Compartment Restraint Components (AFT Cargo Bin 4 Door Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.
25-00-05H	Cargo Compartment Restraint Components (AFT Cargo Bin 4 AFT Transverse Net) "DISP.APPR.REQ'D"	Y	-	-	A (M) May be inoperative or missing provided: 1. Cargo-loading limits from the Weight and Balance Manual are observed, and 2. Repairs are made within 120 consecutive calendar-days.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED					NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
25-00-05I	Cargo Compartment Restraint Components (FWD Cargo Nets) "DISP.APPR.REQ'D"	Y	-	-	A	May be inoperative or missing provided: 1. Associated cargo compartment remains empty, and Repairs are made within 30 consecutive calendar-days.
25-00-05J	Cargo Compartment Restraint Components (AFT Cargo Nets) "DISP.APPR.REQ'D"	Y	-	-	A	May be inoperative or missing provided: 1. Associated cargo compartment remains empty, and 2. Repairs are made within 30 consecutive calendar-days.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-05A	Logbook	FWD CARGO COMPARTMENT BIN 1 TRANSVERSE NET INOP
25-00-05B	Logbook	FWD CARGO COMPARTMENT BIN 1 DOOR NET INOP
25-00-05C	Logbook	FWD CARGO COMPARTMENT BIN 2 TRANSVERSE NET INOP
25-00-05D	Logbook	FWD CARGO COMPARTMENT BIN 2 ____ ATTACH/TIE DOWN POINT INOP
25-00-05E	Logbook	AFT CARGO COMPARTMENT BIN 3 TRANSVERSE NET INOP
25-00-05F	Logbook	AFT CARGO COMPARTMENT BIN 3 ____ ATTACH/TIE DOWN POINT INOP
25-00-05G	Logbook	AFT CARGO COMPARTMENT BIN 4 DOOR NET INOP
25-00-05H	Logbook	AFT CARGO COMPARTMENT BIN 4 AFT NET INOP
25-00-05I	Logbook	FWD CARGO COMPARTMENT RESTRAINTS INOP
25-00-05J	Logbook	AFT CARGO COMPARTMENT RESTRAINTS INOP

(M) PROCEDURES

25-00-05A, 25-00-05B, 25-00-05C, 25-00-05D, 25-00-05E, 25-00-05F, 25-00-05G, 25-00-05H


Refer to Aircraft Loading Manual (ALM):

[B737-900ER Weight and Balance Chapter 3943, Cargo Loading Section.](#)

[B737-800 Weight and Balance Chapter 3991, Cargo Loading Section.](#)

B737 Cargo Compartment Item (refer to Figure 25-1)	MEL Item Number
Door Netting	
D1	25-00-05B
D2	25-00-05G
Transverse Nets	
T1	25-00-05A
T2	25-00-05C
T3	25-00-05E
T4	25-00-05H
Attach/Tie Down Points	
A1	25-00-05D
A2	25-00-05F

Figure 25-1: B737 Cargo Compartments

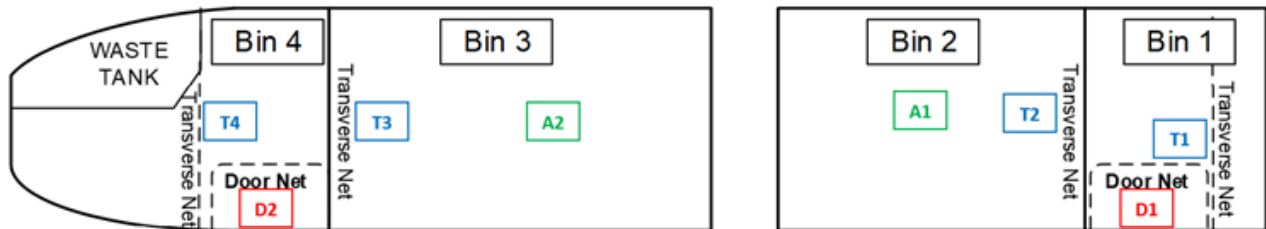

25-00-06 Passenger Seats

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	PASSENGER SEATS				
25-00-06A	Passenger Seat(s) "DISP.APPR.REQ'D"	Y	-	-	D (M) May be inoperative provided: 1. Seat does not restrict access to any Emergency Exit, Egress Route, or Main Aisle, and 2. Affected seat(s) is blocked and placarded "DO NOT OCCUPY." Note: A seat with an inoperative seat belt or shoulder harness is considered inoperative. Note: Inoperative seats do not affect required number of Flight Attendants. Note: Affected seat(s) may include seat(s) behind and / or adjacent outboard seats. Note: Seats with an inoperative or broken seat track attach fitting or seat frame damage affecting the integrity of the seat track attach fittings, may not be deferred using this MEL. Contact Liaison Engineering for seat row removal. Note: MCC must contact Flight Control for coordinating with ACS and ROC to remove seat from inventory until repaired.
25-00-06B	Recline Mechanism	N	-	-	D (M) May be inoperative and seat occupied provided seat is secured in up-right position.
25-00-06C	Recline Mechanism	Y	-	-	C May be inoperative and seat occupied provided seat back is immovable in full upright position.
25-00-06D	Arm Rests with Seat Positioning Controls for Taxi, Takeoff, and Landing (TTL) and/or Other Controls	N	-	-	D (M) May be inoperative or missing and seat occupied provided: 1. Seat does not restrict access to any Emergency Exit, Egress Route, or Main Aisle, and 2. If armrest with seat control is missing or removed, seat is secured in taxi, takeoff, and landing (TTL) position.
25-00-06E	Arm Rests without Seat Positioning Controls for Taxi, Takeoff, and Landing (TTL) and/or Other Controls	Y	-	-	D May be inoperative or missing and seat occupied provided it does not restrict access to any emergency exit, egress route, or main aisle.
25-00-06F	Underseat Baggage Restraining System	Y	-	-	C (O) May be inoperative provided: 1. Baggage is not stowed under seat with inoperative restraining system, 2. Associated seat is placarded "DO NOT STOW BAGGAGE UNDER THIS SEAT", and 3. Procedures are used to alert Cabin Crew of inoperative restraining system.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
	PASSENGER SEATS					
25-00-06G	Seat Belt/Air Bag Restraint Systems "DISP.APPR.REQ'D"	Y	-	0	D	May be inoperative provided affected seat is blocked and placarded "DO NOT OCCUPY".
25-00-06H	Delethalization Pads	Y	-	-	D	May be inoperative or missing provided affected seat(s) is deferred per MEL 25-00-06A.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-06A	Logbook	PASSENGER SEAT(S) ____ INOP
25-00-06B	Logbook	RECLINE MECHANISM SEAT(S) ____ INOP
25-00-06C	Logbook	RECLINE MECHANISM SEAT(S) ____ INOP
25-00-06D	Logbook	ARM REST SEAT(S) ____ INOP
25-00-06E	Logbook	ARM REST(S) ____ INOP
25-00-06F	Logbook	UNDERSEAT BAGGAGE RESTRAINING SYS SEAT(S) ____ INOP
25-00-06G	Logbook	PASSENGER SEAT(S) ____ SEAT BELT AIR BAG RESTRAINT SYS INOP
25-00-06H	Logbook	DELETHALIZATION PAD(S) INOP AT ____

(O) PROCEDURES

25-00-06F

1. If the baggage restraining bar needs to be removed, *Maintenance is required and the Flight crew may not placard.*
2. Advise cabin crew to ensure baggage is not stowed under seats with inoperative or missing restraining bars.
3. Advise cabin crew to inform passengers occupying seat with affected bar and passenger behind the seat with the affected bar not to stow baggage under the seat.

(M) PROCEDURES

25-00-06A

Install Seat INOP Block-Out Cover part number 25-5136-001 per ERA 10-485792-14MA.

1. If the seat is stuck in the recline position block off affected seat(s) and the seat directly behind the inoperative seat by installing a Seat INOP Block-Out Cover part number 25-5136-001 per ERA 10-485792-14MA. Affected seats would be any seat with blocked access to an aisle by the inoperative seat.

Note: *The inoperative seat or affected seat(s) must not block access to an Emergency Exit or aisle.*

2. If the seatback is loose or blocks access to an Emergency Exit secure upright with a Seat INOP Block-Out Cover part number 25-5136-001 per ERA 10-485792-14MA or alternatively for seat backs without AVOD installed remove the seat back and placard the seatback "MUST REMAIN WITH AIRPLANE" and stow in available closet. Block off affected seat directly behind the inoperative seat(s) by installing a Seat INOP Block-Out Cover part number 25-5136-001 per ERA 10-485792-14MA. Install a Seat INOP Block-Out Placard part number 11-0972-001 per ERA 10-485792-14MA or equivalent* on seat with removed seat back.

In the event that the Seat INOP Block-Out Cover is not available the seat may be made inoperative per one of the following provisions provided the MCC is contacted to schedule the installation of a Seat INOP Block-Out Cover at the next maintenance station the cover is available:

1. Secure the inoperative seat in the upright position and block seat per MEL applicable Remarks or Exceptions and placard "DO NOT OCCUPY" by installing a Seat INOP Block-Out Placard part number 11-0972-001 per ERA 10-485792-14MA or equivalent*.

- If the recline mechanism is inoperative, ensure the seat remains in the upright position otherwise secure the seat in the upright or break over position as required maintaining a pleasant and professional appearance and block off affected seat(s) and the seat directly behind the inoperative seat per MEL applicable Remarks or Exceptions and placard "DO NOT OCCUPY" by installing a Seat INOP Block-Out Placard part number 11-0972-001 per ERA 10-485792-14MA or equivalent*. Affected seats would be any seat with blocked access to an aisle by the inoperative seat.

Note: *The inoperative seat or affected seat(s) must not block access to an Emergency Exit or aisle.*

- If the seatback is loose or blocks access to an Emergency Exit and the seat back does not have AVOD installed remove seatback and block off affected seat directly behind the inoperative seat per MEL applicable Remarks or Exceptions and placard "DO NOT OCCUPY" by installing a Seat INOP Block-Out Placard part number 11-0972-001 per ERA 10-485792-14MA or equivalent*. Placard seatback, "MUST REMAIN WITH AIRPLANE" and stow in available closet. Seat back is to remain in closet until removed by maintenance for repair or re-installation. For seats with AVOD installed see prior step.

*An acceptable alternative to the "DO NOT OCCUPY" placard is to apply a one or two sections of 2 inch wide masking tape as required over the head rest area (seat bottom if seat back is removed) with the words "UNSERVICEABLE – DO NOT USE" printed neatly and legibly in 1.5 inch black or red letters and contacting MCC to schedule the installation of the approved Seat INOP Block-Out Cover part number 25-5136-001 and/or Seat INOP Block-Out Placard part number 11-0972-001.25-00-06B

25-00-06B

-800 Ships 3701 thru 3742 and 3744 thru 3773 without Recaro Seats:

Secure seat by disconnecting the control cable at the seat cylinder or by locking the seat cylinder in the full upright position.


-800 Ships 3774 thru 3777, -900 Ships 3801-3930, and -900 Ships 3931-3963 Post AA 2500-01847:

For coach seats, secure seat by disconnecting the control cable at the seat cylinder or by locking the seat cylinder in the full upright position by one of the following methods:

- Install nylon tie-wraps(s) around threaded area to restrict travel of hydrolok.
- Turn stroke limiting adjustment nut to obtain 0.00 stroke. Tighten jam nut against limiting adjustment nut.

 [Link to Learning Video](#)

Figure 25-2: -800 Ships 3774 - 3777 and 3801 - 3930 and -900 Ships 3931-3963 Post AA 2500-01847 Coach Seat Hydrolok

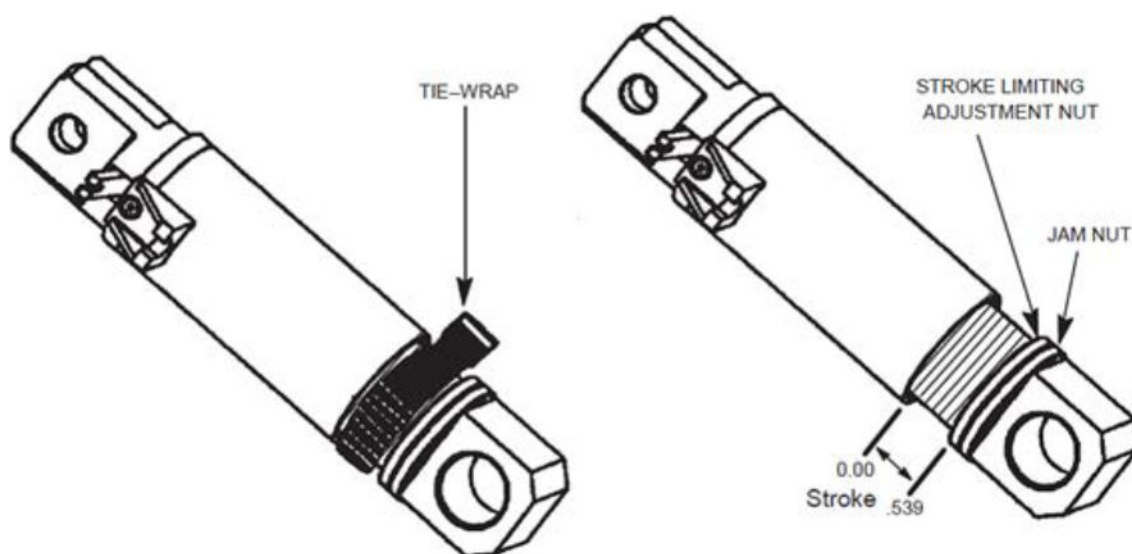


-900 Ships 3931-3963 pre-AA 2500-01847:

For Coach Seats, secure seat back in the full upright position by locking out the recline as follows:

1. Lock out the recline by moving the seat back to the full upright position.
2. Turn the jam nut to UltraLOC and tighten.

Note: Do not over tighten jam nut. Damage to UltraLOC may occur.

Figure 25-3: Ships 3931 - 3963 Pre-AA 2500-01847 Coach Seat UltraLOC

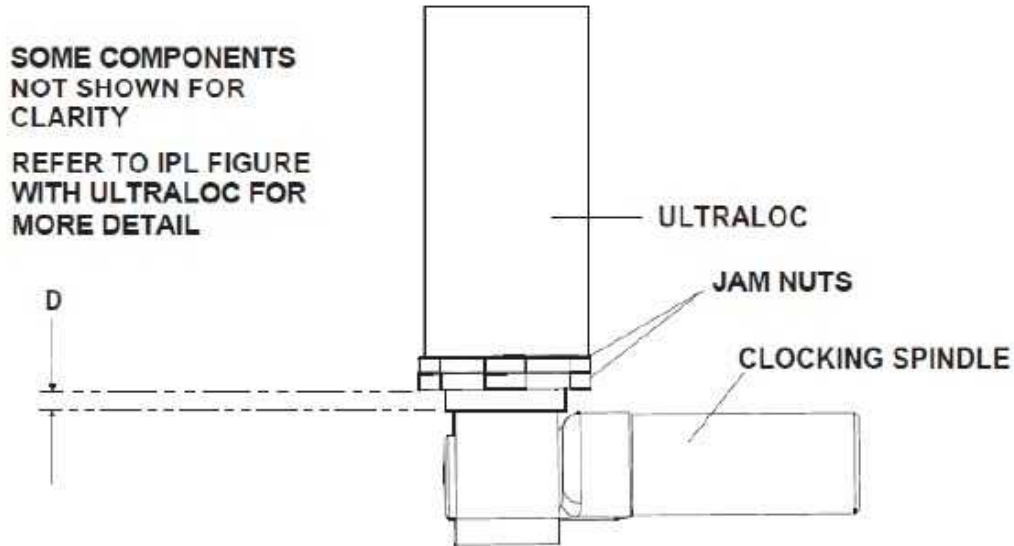


-800 Ships 3774 thru 3777, -900 Ships 3801-3930, 3931-3942, 3953, 3954, 3957-3963, and -900 Ships 3943-3952, 3955, and 3956 Post AA 2500-01847:

To secure the recline on Zodiac seat assemblies:

1. To lock the seat in the TTL position, add spacers on recline lock shaft to prevent movement per [CMM 25-20-148 Page 8001](#).

Figure 25-4: Ships 3774-3777 and 3801-3930, 3931-3942, 3953,3954, 3957-3963, and Post AA 2500-01847 Ships 3943-3952, 3955, and 3956 First Class Recline Mechanism

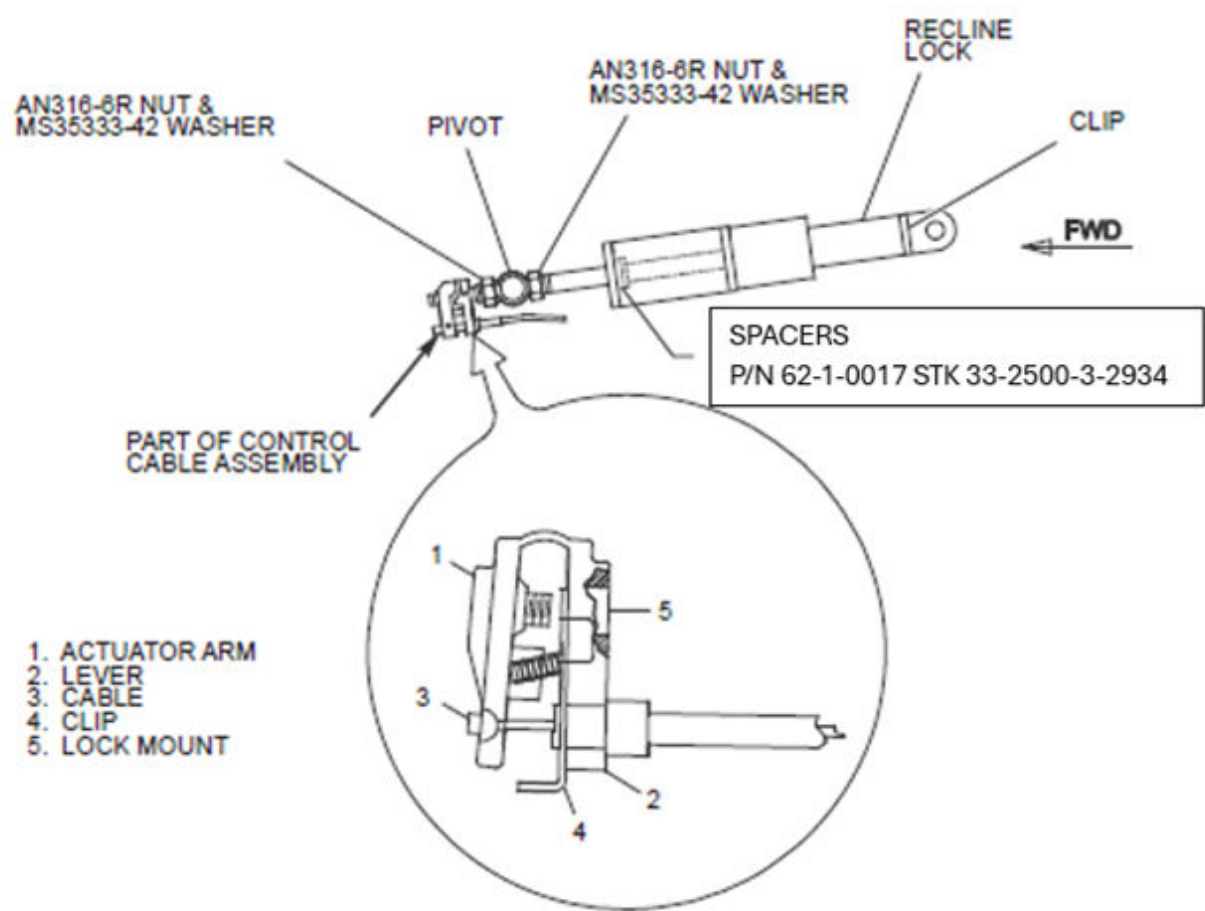


-900 Ships 3943-3952, 3955, 3956 Pre-AA 2500-01847

For First Class Seats, secure seat back in the full upright position by locking out the recline as follows:

1. Place the seat in the fully upright position and disconnect the control cable assembly from the hydraulic lock.
2. Remove the retaining ring from the adjuster sleeve on the hydraulic lock. (Refer to [Figure 25-5 Hydraulic Lock Assembly](#))


Figure 25-5: Hydraulic Lock Assembly

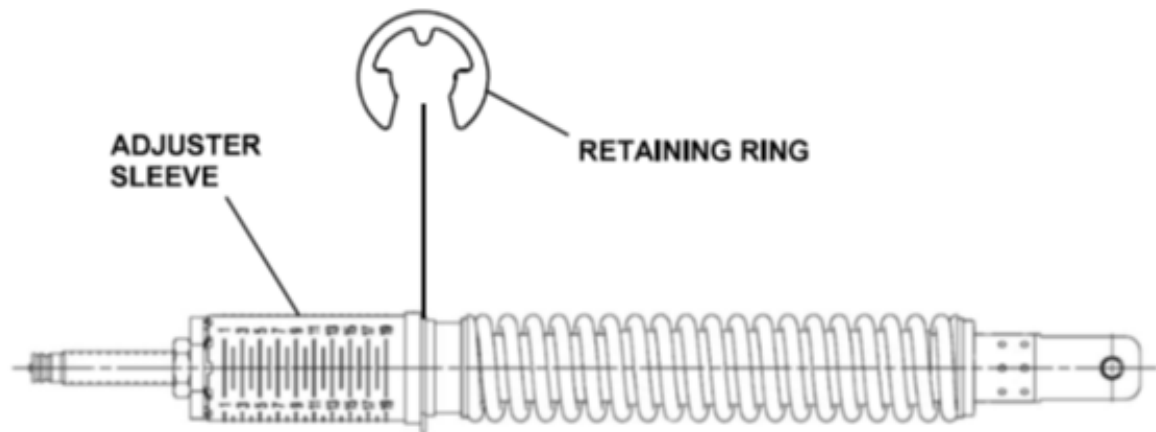

3. Rotate the collar on adjuster sleeve clockwise until the adjusting nuts touch the stop. (Refer to [Figure 25-6 Hydraulic Lock Stop](#))


Note: Once the adjusting nuts hit the stop, the collar will stop turning.

Figure 25-6: Hydraulic Lock Stop

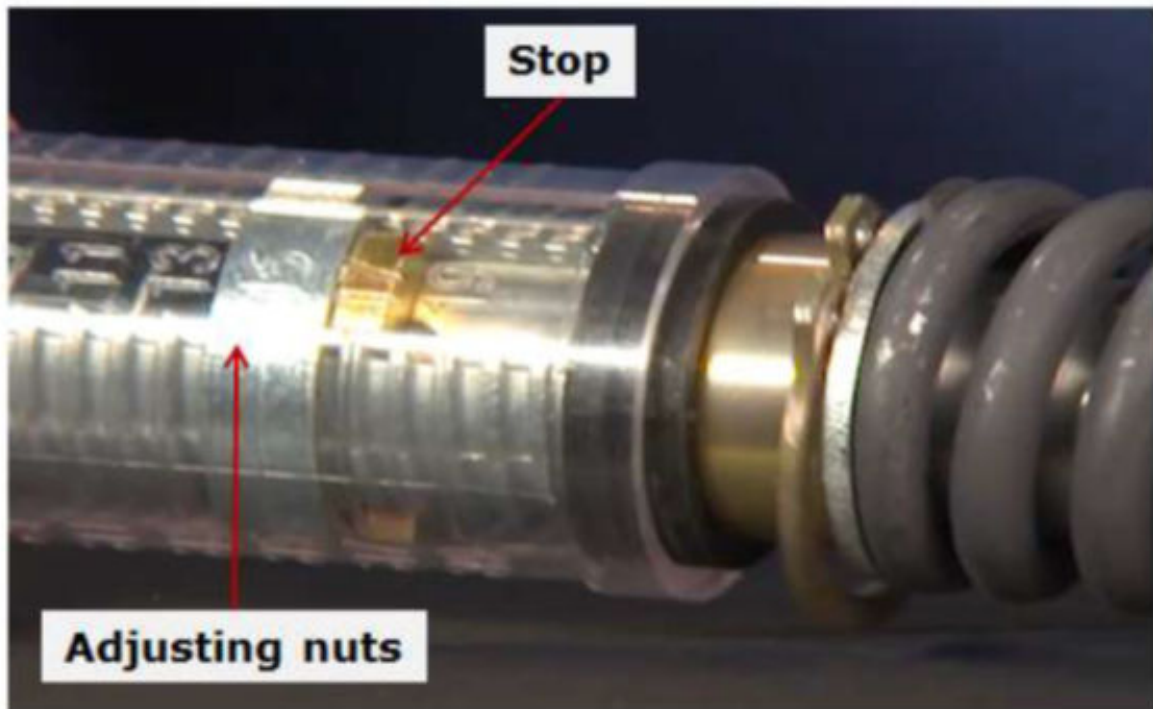

4. Align the notches on the bottom of the adjuster sleeve into the tabs to lock the adjustment into place. (Refer to [Figure 25-7 Hydraulic Lock Notches and Tabs](#))

Figure 25-7: Hydraulic Lock Notches and Tabs

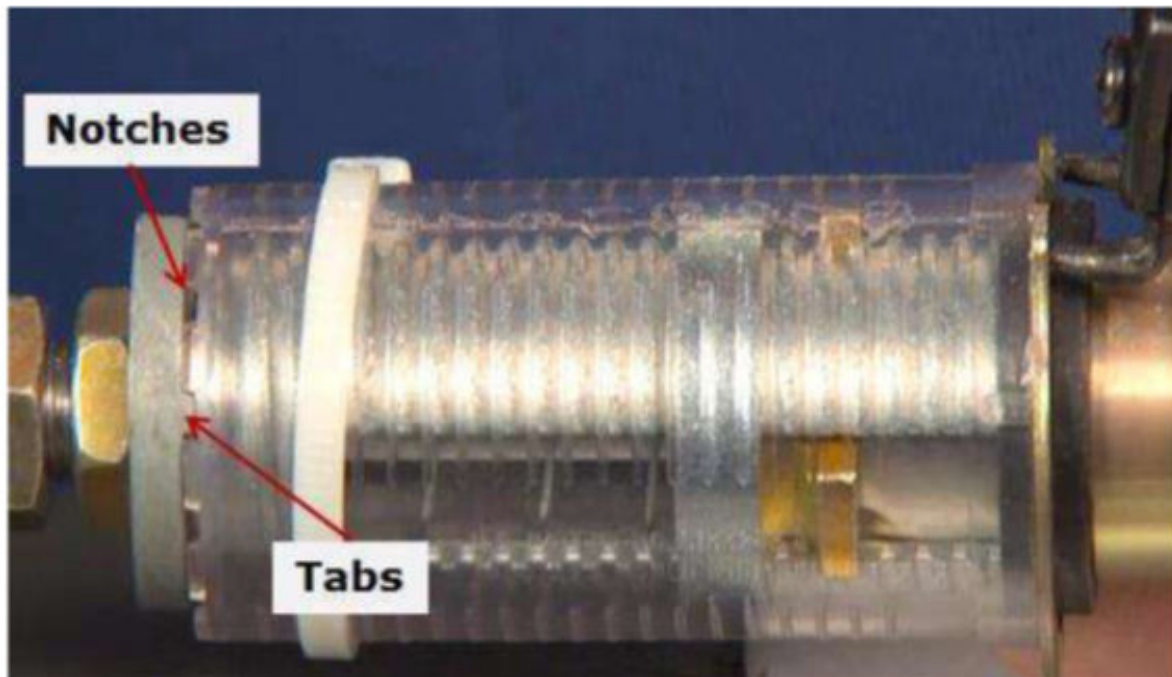


5. Re-install the retaining ring.

-800 ships 3744-3773 with Recaro seats

1. Remove the seat cushion from the affected seat.
2. Remove seat bottom from the affected seat.
3. Lock seat in the Taxi, Takeoff, and Landing position:
 - A. Move the backrest to the upright position.
 - B. If the control cable or the release mechanism is damaged, the backrest needs to be moved manually to the upright position.
 - C. Press the release mechanism together and move the backrest simultaneously to upright position.
 - D. Remove cap (2), use Screwdriver (6) as shown.
 - E. Basic adjustment by spacer washers (3).
 - F. For actuator blocking:
 - i. Installed as many spacer washers onto the position rod of the actuator as required for blocking the recline actuator.
 - ii. Checking the backrest blocking.
 - G. Fine adjustment if necessary:
 - i. Loosen setscrew (4) and turn alloy washer (5) until required adjustment is reached.
 - H. Tighten setscrew (4) and move cap (2) into locked position, alloy washer (5).
4. Reinstall the seat bottom.
5. Reinstall the seat cushion.

Figure 25-8: Recaro Passenger Seat Recline

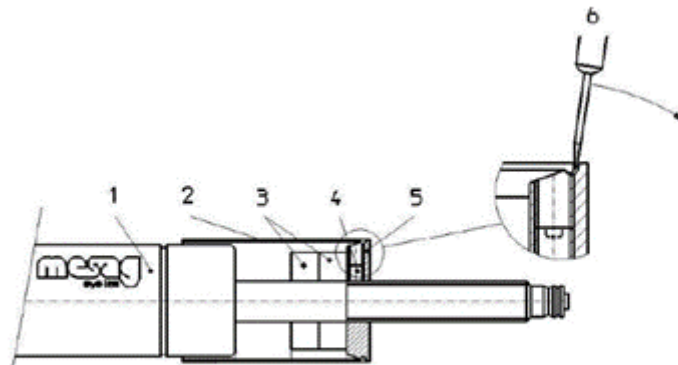

25-00-06D

1. Ensure the affected arm rest does not block access to an emergency exit or the aisle. If the arm rest needs to be removed, Maintenance is required and the Flight crew may not placard.
2. Secure seat by disconnecting the control cable at the seat cylinder or by locking the seat cylinder in the full upright position.

25-00-09 "Fasten Seat Belts While Seated" Signs or Placards

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-09	"Fasten Seat Belts While Seated" Signs or Placards	Y	-	-	C May be illegible or missing provided a legible sign or placard is visible from each occupied passenger seat.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-09	Logbook	____ Fasten Seat Belts While Seated Signs or Placards Missing / Illegible / INOP

25-00-11 Observer's Seat (Including Associated Equipment)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-11A	Primary Observer's Seat (Including Associated Equipment) "Contact MCC"	Y	1	0	A May be inoperative provided: 1. A passenger seat in passenger cabin is made available to an FAA inspector for performance of official duties, 2. If the observers audio select panel is inoperative, defer the Passenger Cabin Medical Communication System per MEL 23-00-29 if applicable, and 3. Repairs are made within two flight days.
25-00-11B	Primary Observer's Seat (Including Associated Equipment) "Contact MCC"	Y	1	0	A May be inoperative provided: 1. Required minimum safety equipment (safety belt and oxygen) is available, 2. Seat is acceptable to an FAA inspector for performance of official duties, 3. If the observers audio select panel is inoperative, defer the Passenger Cabin Medical Communication System per MEL 23-00-29 if applicable, and 4. Repairs are made within two flight days. Note: These provisos are intended to provide for occupancy of above seats by an FAA inspector when minimum safety equipment (oxygen and safety belt) is functional and inspector determines conditions to be acceptable. Note: The Pilot-in-Command will determine if minimum safety equipment is functional for other persons authorized to occupy any observer seat(s).
25-00-11C	Second Observers Seat (Including Associated Equipment) (Ships 3775 thru 3777)	Y	1	0	D Equipment associated with the Second Observers Seat may be inoperative. Note: The second observers seat was removed from ships 3775 thru 3777.
25-00-11D	Crotch Straps	Y	-	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-11A	Logbook	PRIMARY OBSERVERS SEAT INOP
25-00-11B	Logbook	PRIMARY OBSERVERS SEAT INOP
25-00-11C	Logbook	SECOND OBSERVERS SEAT ASSOC EQUIP INOP
25-00-11D	Logbook	PRIMARY OBSERVERS SEAT CROTCH STRAPS INOP

25-00-12 Portable Flashlight Holders / Flashlights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-12A	Portable Flashlight Holders / Flashlights - Cabin	Y	-	0	C (O) (M) May be inoperative or removed provided: 1. Crewmember assigned to affected position has an equivalent operative flashlight readily available, 2. Inoperative flashlight remains in a certified location or is removed from the aircraft, and 3. Location placarding is removed or obscured. Note: <i>If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.</i>
25-00-12B	Portable Flashlight Holders / Flashlights - Flight Deck	Y	-	0	C (M) May be inoperative or removed provided: 1. Crewmember assigned to affected position has an equivalent operative flashlight readily available, 2. Inoperative flashlight remains in a certified location or is removed from the aircraft, and 3. Location placarding is removed or obscured. Note: <i>If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.</i>
25-00-12C	Portable Flashlight Holders / Flashlights - Tamper Seals or Tags	Y	-	0	C (O) May be inoperative, damaged, or missing provided proper installation and operation is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-12A	Logbook	___ CABIN PORTABLE FLASHLIGHT / HOLDER INOP
25-00-12B	Logbook	___ FLIGHT DECK PORTABLE FLASHLIGHT / HOLDER INOP
25-00-12C	Logbook	FLASHLIGHT ___ SEALS INOP/MISSING

(O) PROCEDURES

25-00-12A

Captain to brief Lead Flight Attendant/Purser that the crewmember assign to the affected position has an equivalent operative flashlight readily available.

25-00-12C

PRIOR TO EACH DEPARTURE

Captain to brief Lead Flight Attendant/Purser that one or more flashlight(s) must be verified to be operational PRIOR TO EACH DEPARTURE.

(M) PROCEDURES

25-00-12A, 25-00-12B

Location placarding must be removed or obscured.

25-00-16 Cargo Compartment Lining Panels and Floor Panels

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-16A	Cargo Compartment Lining Panels and Floor Panels - FWD Cargo Compartment "DISP.APPR.REQ'D"	Y	1	0	C May be damaged or missing provided the FWD Cargo Compartment remains empty.
25-00-16B	Cargo Compartment Lining Panels and Floor Panels - AFT Cargo Compartment "DISP.APPR.REQ'D"	Y	1	0	C May be damaged or missing provided the AFT Cargo Compartment remains empty.
25-00-16C	Cargo Compartment Lining Panels and Floor Panels - FWD and AFT Cargo Compartments "DISP.APPR.REQ'D"	Y	2	0	C May be damaged or missing provided BOTH Cargo Compartments remains empty.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-16A	Logbook	CARGO COMPARTMENT LINING PANELS AND/OR FLOOR PANEL - FWD CARGO COMPARTMENT INOP
25-00-16B	Logbook	CARGO COMPARTMENT LINING PANELS AND/OR FLOOR PANEL - AFT CARGO COMPARTMENT INOP
25-00-16C	Logbook	CARGO COMPARTMENT LINING PANELS AND/OR FLOOR PANEL - FWD AND AFT CARGO COMPARTMENT INOP

25-00-17 Emergency Medical Equipment

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
EMERGENCY MEDICAL EQUIPMENT					
25-00-17A	First Aid Kits and/or Associated Equipment "Contact MCC"	Y	-	-	A
(O) (M) One kit may be incomplete or removed provided: 1. The FAK is labeled or placarded in a manner that will identify it as a unit that can not be mistaken for a fully serviceable unit, 2. Location placarding is removed or obscured, and 3. Repairs or replacements are made within 1 flight. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft. Note: Medical equipment installed in the aircraft as part of an Emergency Medical Service (EMS) operation is not considered part of the normal complement of equipment. No MEL relief applies to that equipment and 14 CFR maintenance and inspection requirements do not apply.					
25-00-17B	First Aid Kit Tamper Seals or Tags	Y	-	0	C
(O) May be inoperative, damaged, or missing provided proper FAK servicing is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)					
25-00-17C	AED (Automatic External Defibrillator) "Contact MCC"	Y	1	0	A
(O) (M) May be incomplete, inoperative or removed provided: 1. AED is labeled or placarded in a manner that will identify it as a unit that can not be mistaken for a fully serviceable unit, 2. Location placarding is removed or obscured, and 3. Repairs or replacements are made within 1 flight. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft. Note: Medical equipment installed in the aircraft as part of an Emergency Medical Service (EMS) operation is not considered part of the normal complement of equipment. No MEL relief applies to that equipment and 14 CFR maintenance and inspection requirements do not apply.					
25-00-17D	AED Tamper Seals or Tags	Y	-	-	C
(O) May be inoperative, damaged, or missing provided proper installation and operation is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)					

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
EMERGENCY MEDICAL EQUIPMENT						
25-00-17E	AED Bracket / Lock	Y	1	0	C	
25-00-17F	EEMK (Enhanced Emergency Medical Kit) "Contact MCC"	Y	2	0	A	(O) (M) May be incomplete or removed provided: - EEMK is labeled or placarded in a manner that will identify it as a unit that can not be mistaken for a fully serviceable unit, - Location placarding is removed or obscured, and - Repairs or replacements are made within 1 flight. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft. Note: Medical equipment installed in the aircraft as part of an Emergency Medical Service (EMS) operation is not considered part of the normal complement of equipment. No MEL relief applies to that equipment and 14 CFR maintenance and inspection requirements do not apply.
25-00-17G	EEMK (Enhanced Emergency Medical Kit) "Contact MCC"	Y	2	1	D	Any in excess of those required by 14 CFR may be incomplete or removed. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
25-00-17H	EEMK Tamper Seals or Tags	Y	-	0	C	(O) May be inoperative, damaged, or missing provided proper EMK servicing is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
25-00-17I	EEMK Bracket / Lock	Y	1	0	C	
25-00-17J	Red Pouch (Medical Accessory Pouch)	Y	1	0	C	May be inoperative, missing, or contain less than minimum required contents.

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-17A	Logbook	____ FAK INCOMPLETE / MISSING / INOP
25-00-17B	Logbook	____ FAK SEALS BROKEN
25-00-17C	Logbook	AED INCOMPLETE / MISSING / INOP
25-00-17D	Logbook	AED TAMPER SEALS INOP/DAMAGED/MISSING AT _____
25-00-17E	Logbook	AED BRACKET / LOCK INOP
25-00-17F	Logbook	____ EEMK(s) INCOMPLETE / MISSING / INOP
25-00-17G	Logbook	EEMK INCOMPLETE / MISSING / INOP
25-00-17H	Logbook	EEMK TAMPER SEALS INOP/DAMAGED/MISSING AT _____
25-00-17I	Logbook	EEMK BRACKET / LOCK INOP
25-00-17J	Logbook	RED POUCH (MEDICAL ACCESSORY POUCH) INOP / MISSING

(O) PROCEDURES

25-00-17A, 25-00-17C, 25-00-17F

1. Re-seal the unit in a manner that will identify it as a unit that cannot be mistaken for a fully serviceable unit.
2. Captain to inform Lead Flight Attendant/Purser of inoperative or missing emergency equipment.

25-00-17B

PRIOR TO EACH DEPARTURE

If seals are broken, PRIOR TO EACH DEPARTURE, verify the First Aid Kit contains the following:

1 pair	Protective Gloves or equivalent	1 pair	Bandage Scissors
1 pkg	Ammonia Inhalants (10/pkg)	1 pkg	1 Inch Adhesive Bandages (16/pkg)
2 rolls	Adhesive Tape	4 pkg	4 Inch Gauze Bandages (1/pkg)
2 pkg	Wire Splints (1/pkg)	5 pkg	40 Inch Triangular Bandages (1/pkg)
2 pkg	Antibiotic Ointment Packets or Antiseptic Wipes (10/pkg)	8 pkg	4 Inch Compress Bandages (1/pkg)

25-00-17D

PRIOR TO EACH DEPARTURE

Captain to brief Lead Flight Attendant/Purser that AED must be verified to be operational PRIOR TO EACH DEPARTURE.

25-00-17H

PRIOR TO EACH DEPARTURE

Captain to brief Lead Flight Attendant/Purser that one or more EEMKs have inoperative, damaged, or missing seals and must be inventoried PRIOR TO EACH DEPARTURE.

(M) PROCEDURES

25-00-17A, 25-00-17C, 25-00-17F

Location placarding is removed or obscured.

25-00-18 Passenger Flotation Equipment

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PASSENGER FLOTATION EQUIPMENT					
25-00-18A	Passenger Life Vests "DISP.APPR.REQ'D"	Y	-	-	D May be inoperative or missing provided extended overwater operations are not conducted. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
25-00-18B	Passenger Life Vests "DISP.APPR.REQ'D"	Y	-	-	D May be inoperative or missing provided associated seat is blocked off, placarded DO NOT OCCUPY, and deferred per MEL Item 25-00-06A . Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
25-00-18C	Spare Life Vests	Y	-	-	D May be inoperative or missing. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
25-00-18D	Infant Life Vests (If Installed)	Y	-	-	D (O) May be inoperative or missing. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.
25-00-18E	Life Rafts (If Installed) "DISP.APPR.REQ'D"	Y	-	-	D (O) May be inoperative, missing, or not easily accessible. Refer to Airway Manual 4.2.13.1 Limited Overwater Operations for requirements and limitations. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-18A	Logbook	___ Life Vest(s) INOP / Missing
25-00-18B	Logbook	___ Life Vest(s) INOP / Missing
25-00-18C	Logbook	___ Spare Life Vest(s) INOP / Missing
25-00-18D	Logbook	___ Infant Life Vest(s) INOP / Missing
25-00-18E	Logbook	___ Life Raft(s) INOP / Missing

(O) PROCEDURES

25-00-18D

On aircraft equipped with single cell adult life vests, an infant life vest is normally available for each occupant under 35 pounds for extended overwater operations. In the event that there are not enough infant life vests onboard for the extended overwater operation and all attempts have been made to locate and board additional infant life vests, notify an Airport Customer Service (ACS) Agent so that they can initialize their passenger handling procedures.

25-00-18E

If life raft is missing (removed), refer to the following Performance Adjustment:

25-00-18E	LIFE RAFTS REMOVED
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS (Manual Weight & Balance Worksheet only) Use applicable OEW correction for “Life Raft” in ALM – Weight and Balance Section.

25-00-20 Exterior Lavatory Door Ashtrays

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
25-00-20A	Exterior Lavatory Door Ashtrays "Contact MCC"	Y			-	-	A
25-00-20B	Exterior Lavatory Door Ashtrays "Contact MCC"	Y	-	-	A	More than 50% may be missing or inoperative for 3 days. Note: This item is AD related.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-20A	Logbook	____ Exterior Lavatory Door Ashtray Missing
25-00-20B	Logbook	____ Exterior Lavatory Door Ashtray Missing

Note: Interior lavatory ashtrays are considered Non-essential Equipment Furnishings items. See [TOPP 40-40-08](#) for the NEF deferral process.

25-00-21 Flight Crew Seats

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
FLIGHT CREW SEATS					
25-00-21A	Recline "Contact MCC"	N	2	0	A (M) May be inoperative provided: 1. Seat is secured in a position acceptable to affected crewmember, and 2. Repairs are made within two flight days.
25-00-21B	Vertical Adjustment "Contact MCC"	N	2	0	A (M) May be inoperative provided: 1. Seat is secured in a position acceptable to affected crewmember, and 2. Repairs are made within two flight days.
25-00-21C	Armrests	Y	4	0	B (M) May be inoperative in the up position or removed provided seat is acceptable to affected crewmember.
25-00-21D	Lumbar / Thigh Supports	Y	4	0	C May be inoperative provided seat is acceptable to affected crewmember.
25-00-21E	Headrests	Y	2	0	C May be inoperative or missing provided seat is acceptable to affected crewmember.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-21A	Logbook	____ Seat Recline INOP
25-00-21B	Logbook	____ Seat Vertical Adjustment INOP
25-00-21C	Logbook	____ Seat Armrest INOP
25-00-21D	Logbook	____ Seat Lumbar / Thigh Support INOP
25-00-21E	Logbook	____ Seat Headrest INOP

(M) PROCEDURES

25-00-21A

For an inoperative recline mechanism, ensure the seat is secured in a position acceptable to the affected crewmember by performing a functional test to verify the seat back cannot be moved. Also verify that full travel of the seat on its track is not impaired.

25-00-21B

For an inoperative vertical adjustment mechanism, perform a functional test to verify the seat cannot be moved in a vertical direction. If necessary, secure the seat in a fixed vertical position by disconnecting the vertical adjustment operating cable or removing the vertical adjustment pushrod mechanism, as appropriate.

25-00-21C

Secure an inoperative armrest in the up position or remove from seat.

Note: If necessary to remove armrest, Maintenance is Required and the Flight Crew May NOT Placard.

25-00-22 Galley / Lavatory Waste Receptacle Access Doors / Covers

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
GALLEY / LAVATORY WASTE RECEPTACLE ACCESS DOORS / COVERS							
25-00-22A	Galley Waste Receptacles Access Doors / Covers	Y	-	-	C	(O) (M) May be inoperative provided: 1. Associated container is empty, 2. Container access is secured to prevent waste introduction into compartment, and 3. Procedures are used to ensure that sufficient galley waste receptacles are available to accommodate all waste that may be generated on a flight. Note: This MEL item cannot be used to defer galley waste carts.	
25-00-22B	Lavatory Waste Receptacles Access Doors / Covers "DISP.APPR.REQ'D"	Y	-	-	C	(O) (M) May be inoperative provided: 1. Associated container is empty, 2. Container access is secured to prevent waste introduction into compartment, 3. Lavatory is used only by crewmembers, and 4. Associated lavatory entrance door is locked closed and placarded: UNSERVICEABLE - DO NOT USE. Note: These provisions are not intended to prohibit lavatory use or inspection by crewmembers. Note: For aircraft with damaged or missing Lower Vanity Access Door / Shroud see NEF 25-40-03.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-22A	Logbook	___ Galley Waste Receptacles Access Doors/Covers INOP
25-00-22B	Logbook	___ Lav Waste Receptacles Access Doors / Covers INOP

(O) PROCEDURES

25-00-22A

Captain to verify with Lead Flight Attendant/Purser that sufficient galley/cabin waste receptacles are available to accommodate all waste that may be generated on the flight.

25-00-22B

Refer to the Remarks or Exceptions column.

(M) PROCEDURES

25-00-22A

1. Refer to the Remarks or Exceptions column.
2. Using suitable pressure sensitive tape, secure waste receptacle access door(s) or cover(s) closed.

25-00-22B

1. Place a strip of Red Colored OM2 UNSERVICEABLE – DO NOT USE tape (or equivalent*) diagonally across the lavatory door, and across the waste receptacle access to prevent use.
* An acceptable alternate to the OM2 tape is a section of 2 inch wide tape with the words “UNSERVICEABLE – DO NOT USE” printed legibly in 1 inch black letters.
2. Lock the lavatory closed.

25-00-24 Overhead Storage Bin(s) / Cabin, Galley And Lavatory Storage Compartment / Closets

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-24A	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets	N	-	-	C (M) May be inoperative provided: 1. Procedures are used to secure the affected bin, compartment or closet in the CLOSED position, 2. Affected bin, compartment or closet is prominently placarded DO NOT USE, 3. Any emergency equipment located in affected bin, compartment, or closet is considered inoperative and is deferred per applicable MEL, and 4. Affected bin, compartment or closet is not used for storage of any item(s) except for those permanently affixed. Note: For overhead bins, if no partitions are installed, entire overhead bin is considered inoperative. Note: Proviso is not intended to preclude crewmember inspections.
25-00-24B	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets	N	-	-	C (O) (M) May be inoperative provided: 1. For non-retractable doors, affected door is removed, 2. For retractable doors, affected door is removed or secured in the retracted (fully open) position, 3. This MEL does not apply to drop down overhead bins (Bucket Bins), 4. Affected bin, compartment or closet is not used for storage of any item(s) except for those permanently affixed, 5. Affected bin, compartment or closet is prominently placarded DO NOT USE, 6. Crew members and passengers are alerted of inoperative bins, compartments or closets, and 7. Passengers are briefed that associated bin, compartment or closet is not used. Note: For overhead bins, if no partitions are installed, entire overhead bin is considered inoperative. Note: Any emergency equipment located in the affected bin, compartment or closet (permanently affixed) is available for use.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
25-00-24C	Overhead Storage Bin(s) / Cabin, Galley and Lavatory Storage Compartment / Closets	Y	-	-	C (M) May be inoperative in the CLOSED position provided: 1. Affected bin, compartment, or closet is prominently placarded DO NOT USE, 2. Any emergency equipment located in affected bin, compartment, or closet is considered inoperative and is deferred per applicable MEL, and 3. Location placarding for any emergency equipment stored in affected bin, compartment, or closet is removed or obscured.
25-00-24D	Multi Latch/Quarter Turn Lug Installations	Y	-	-	C One latch/lug per compartment may be inoperative provided: 1. Remaining latch(es)/lug(s) on affected compartments operate normally, and 2. If affected compartment is used for a galley cart, cart remains empty.
25-00-24E	Storage Compartment Key Locks	Y	-	0	D (M) May be inoperative in the unlocked position provided doors can be secured by other means.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-00-24A	Logbook	____ Overhead Storage Bin(s) / Cabin and Galley Storage Compartment / Closets INOP
25-00-24B	Logbook	____ Overhead Storage Bin(s) / Cabin and Galley Storage Compartment / Closets INOP
25-00-24C	Logbook	____ Overhead Storage Bin(s) / Cabin and Galley Storage Compartment / Closets INOP
25-00-24D	Logbook	____ Multi Latch/Quarter Turn Lug INOP
25-00-24E	Logbook	____ Storage Compartment Key Lock(s) INOP

(O) PROCEDURES

25-00-24B

Crewmembers are advised of inoperative bins. Passengers are briefed that associated bin or compartment is not used.

(M) PROCEDURES

25-00-24A

1. Empty compartment (except for permanently affixed items).
2. Using suitable pressure sensitive tape (i.e., bag bin tape, nylon or fiberglass reinforced tape, **not** masking tape, etc.), secure compartment CLOSED.
3. Placard compartment using "Inoperative Cabin Appearance" placard or equivalent.
4. The following items are considered "emergency equipment" and may not be relocated:
 - Fire Extinguishers
 - Megaphones
 - Flashlights
 - EEMK
 - AED
 - PBE
 - Passenger Oxygen Bottles
 - First Aid Kits

	737 Minimum Equipment List 25 Equipment / Furnishings	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

5. Except for the items listed above, cabin equipment may be relocated provided:
 - A. Location placarding (if installed) of the affected item is removed or obscured.
 - B. Install temporary location placard on the outside of compartment / bin specifying the new location.
 - C. Install temporary placard on the outside of compartment / bin where the item has been relocated.
 - D. Note location of relocated equipment on aircraft logbook placard.

25-00-24B

1. Removed affected door. Securely store the removed door if it remains on the aircraft.
2. Placard the affected bin, compartment, or closet using high visibility tape or a section of 2 inch wide masking tape with the words "DO NOT USE" printed legibly in 1 inch black letters.

25-00-24C

1. Placard the affected bin, compartment, or closet using high visibility tape or a section of 2 inch wide masking tape with the words "DO NOT USE" printed legibly in 1 inch black letters.

25-00-24E

1. Ensure the Key Lock is inoperative in the unlocked position.
2. Ensure the associated door will stay latched closed. If door will not latch closed, the entire compartment must be considered inoperative and deferred per MEL 25-00-24A.

25-99-01 PED Mount

NUMBER INSTALLED					NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
25-99-01A	PED Mount Administrative Control Item	Y	-	-		Reconfigure cockpit for two (2) operative PED mounts. See TOPP 40-40-05 for instructions.
25-99-01B	PED Mount “DISP.APPR.REQ’D” Administrative Control Item	Y	-	-		Reconfigure cockpit for one (1) operative PED mount. See TOPP 40-40-05 for instructions.
25-99-01C	PED Mount “DISP.APPR.REQ’D” Administrative Control Item	Y	-	-		Reconfigure cockpit for zero (0) operative PED mounts. See TOPP 40-40-05 for instructions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
25-99-01A	Log book	Reconfigured PED mounts per TOPP 40-40-05
25-99-01B	Log book	Reconfigured PED mounts per TOPP 40-40-05
25-99-01C	Log book	Reconfigured PED mounts per TOPP 40-40-05

26 Fire Protection

Table of Contents

26-00-01	Fire Extinguisher Bottle Discharge Lights
26-00-01A	Engine Fire Extinguisher Bottle Discharge Lights
26-00-01B	APU Fire Extinguisher Bottle Discharge Lights
26-00-02	Engine Overheat and Fire Detection Systems
	ENGINE OVERHEAT AND FIRE DETECTION SYSTEMS
26-00-02	Dual Loop
26-00-03	Portable Fire Extinguishers (Passenger Cabin Only)
26-00-03A	Portable Fire Extinguishers (Passenger Cabin Only)
26-00-03B	Portable Fire Extinguishers - Tamper Seals or Tags
26-00-04	Wheel Well Fire Detection System
26-00-04	Wheel Well Fire Detection System
26-00-06	APU Fire Shutoff System
26-00-06	APU Fire Shutoff System
26-00-07	APU Fire Extinguisher System
26-00-07	APU Fire Extinguisher System
26-00-08	APU Fire Detection System
	APU FIRE DETECTION SYSTEM
26-00-08A	Single Loop
26-00-08B	APU DET INOP Light
26-00-08C	External Warning Horn / Warning Light
26-00-09	Engine / APU Fire Extinguisher Test System (EXT TEST) (Squib Test)
26-00-09A	Engine / APU Fire Extinguisher Test System (EXT TEST) (Squib Test)
26-00-09B	APU Fire Extinguisher Squib Test Circuits (EXT TEST)
26-00-09C	APU Squib Light
26-00-10	Fire Warning Bell
	FIRE WARNING BELL
26-00-10A	Bell Cutout Switch (Overheat / Fire Protection Panel)
26-00-10B	Bell Cutout Function of Master Fire Warning Light
26-00-12	Wing-Body Overheat Detector System (Left)
	WING-BODY OVERHEAT DETECTOR SYSTEM (LEFT)
26-00-12A	Wing-Body Overheat Detector System (Left)
26-00-12B	Wing-Body Overheat Detector System (Left)
26-00-13	Wing-Body Overheat Detector System (Right)
	WING-BODY OVERHEAT DETECTOR SYSTEM (RIGHT)
26-00-13A	Wing-Body Overheat Detector System (Right)
26-00-13B	Wing-Body Overheat Detector System (Right)
26-00-15	Lavatory Fire Extinguisher Systems
26-00-15A	Lavatory Fire Extinguisher Systems
26-00-15B	Lavatory Fire Extinguisher Systems
26-00-16	Lavatory Smoke Detection Systems
26-00-16A	Lavatory Smoke Detection Systems
26-00-16B	Lavatory Smoke Detector TEST Switch on Cabin Attendants Panel

	737 Minimum Equipment List 26 Fire Protection	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

26-00-16C Lavatory Smoke Detector SELF TEST Switch

26-00-18 Wing-Body Overheat Test System (Flight Deck Test Feature)

26-00-18 Wing-Body Overheat Test System (Flight Deck Test Feature)

26-00-19 Lower Cargo Compartment Fire Detection Systems / Suppression Systems

26-00-19A Lower Cargo Compartment Fire Detection Systems / Suppression Systems

26-00-19B Fwd/ Aft Detection Loops

26-00-19C Extinguisher Bottle No. 2

26-00-19D DISCH Light

26-00-19E EXT Lights (FWD and AFT)

26-00-19F DETECTOR FAULT Light

26-00-25 Engine Start Lever Fire Indication Lights

26-00-25 Engine Start Lever Fire Indication Lights

26-00-01 Fire Extinguisher Bottle Discharge Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
26-00-01A	Engine Fire Extinguisher Bottle Discharge Lights	Y			2	0	C
26-00-01B	APU Fire Extinguisher Bottle Discharge Lights	Y	1	0	C		

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-01A	Engine Fire Extinguisher Bottle Discharge Light(s)	____ Engine Fire Extinguisher Bottle Discharge Light(s) INOP
26-00-01B	APU Fire Extinguisher Bottle Discharge Light(s)	____ APU Fire Extinguisher Bottle Discharge Light(s) INOP

26-00-02 Engine Overheat and Fire Detection Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
ENGINE OVERHEAT AND FIRE DETECTION SYSTEMS					
26-00-02	Dual Loop "DISP.APPR.REQ'D"	Y	4	2	C
(O) Except for Extended Operations (ETOPS) beyond 120 minutes, One loop (A or B) per engine may be inoperative provided remaining operative loops are verified to operate normally PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)					

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-02	Engine Overheat And Fire Detection System Test Switch	____ Engine Fire Loop ____ INOP

(O) PROCEDURES

To determine the specific inoperative loop:

1. For ships 3701-3777, 3801-3847, 3931-3963:
 - A. Refer to [Volume 1 737 5.8.2 Fire and Overheat System Test - With an Inoperative Loop](#).
2. For ships 3848-3930:
 - A. Refer to [Volume 1 737 5.8.2 Fire and Overheat System Test - With an Inoperative Loop](#).

PRIOR TO EACH DEPARTURE:

1. Deselect the inoperative loop using the OVHT DET switch(es) on the affected engine(s).
2. Hold the TEST switch to OVHT/FIRE.
3. Verify a positive Fire/Overheat warning test.
4. If positive test cannot be achieved with A or B loop deselected, the system is inoperative and dispatch is not allowed.

26-00-03 Portable Fire Extinguishers (Passenger Cabin Only)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
26-00-03A	Portable Fire Extinguishers (Passenger Cabin Only)	Y	4	3	D (M) One H ₂ O type extinguisher in any location may be inoperative provided: - Inoperative fire extinguisher remains in a certified location until removed from the aircraft at the next suitable maintenance facility, - Location placarding is removed or obscured, and - Required distribution is maintained. Note: <i>Inoperative fire extinguishers removed from a certified location or removed from the aircraft, are subject to 49 CFR dangerous goods regulations.</i>
26-00-03B	Portable Fire Extinguishers - Tamper Seals or Tags	Y	-	0	C (O) May be inoperative, damaged, or missing provided proper installation and servicing is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-03A	Logbook	____ Portable Fire Extinguisher INOP
26-00-03B	Logbook	____ Portable Fire Extinguisher Seal INOP

(O) PROCEDURES

26-00-03B

1. PRIOR TO EACH DEPARTURE:
 - A. Captain to brief Lead Flight Attendant/Purser that affect fire extinguisher must be verified for proper installation and servicing PRIOR TO EACH DEPARTURE.

(M) PROCEDURES

26-00-03A

1. Cockpit HALON or HALON-FREE extinguisher must be operative.
2. FWD and AFT Cabin HALON or HALON-FREE extinguishers must be operative.
3. Use tape or other suitable means, cover affected fire extinguisher bottle location placarding.

Note: *For locations with two fire extinguisher bottles installed, do NOT cover placard if remaining bottle is operative.*

26-00-04 Wheel Well Fire Detection System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	N	1	0	C	REMARKS OR EXCEPTIONS
26-00-04	Wheel Well Fire Detection System "DISP.APPR.REQ'D"					(O) (M) May be inoperative provided: 1. Wheel Well Fire Detection System is deactivated, 2. Landing gear remain extended for ten minutes after takeoff, and 3. Appropriate performance corrections are applied. Note: In case of engine failure after V1, landing gear should be retracted until takeoff obstacles are cleared.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-04	Wheel Well Fire Warning Light	WHEEL WELL FIRE DETECTION SYS INOP

(O) PROCEDURES

26-00-04

- After takeoff, avoid the possibility of retracting a wheel overheated from dragging brakes by leaving landing gear extended for 10 minutes. Performance for the two-engine/gear down configuration is better than for the engine-out/gear up configuration.
- In case of engine failure after V1, performance is the prime consideration. Landing gear should be retracted until obstruction clearance requirement has been met, then extended for a 10 minute cooling period.
- Pilots must consider the possibility of ice accumulation due to delayed landing gear retraction during winter operations from contaminated runways.
- Observe max gear down speed until landing gear is retracted.

26-00-04	WHEEL WELL FIRE DETECTION SYSTEM
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	1. Increase BLOCK FUEL by 800 lbs. 2. Increase trip time by 2 minutes.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

(M) PROCEDURES

26-00-04

Deactivate the wheel well fire detection system.

- Perform a Compartment Overheat Detection Control (CODC) Module Unit "LOCAL TEST" (reference [AMM 26-18-01-740-801 C. \(2\)](#)).
- If the fault code from the CODC "LOCAL TEST" is other than "84" or "MWW LOOP A FIRE" or "MWW LOOP B FIRE", perform the following:
 - Remove the two light bulbs from the WHEEL WELL light on the P8 panel.
 - Disconnect the fire bell:
 - Remove Flight Control Computer B (reference [AMM 22-11-33](#)) to get access to the wiring for the fire bell.
 - Disconnect the wires from D742, pin 16 and pin 25 on the E1-4 shelf.

CONTINUED ON NEXT PAGE

- iii. Cap and stow the wires.
- iv. Install Flight Control Computer B (reference [AMM 22-11-33](#)).
- 3. If the fault code from the CODC "LOCAL TEST" is "84" or "MWW LOOP A FIRE" or "MWW LOOP B FIRE", the wheel well fire alarm function is the source of the fault. Perform the following:
 - A. Disconnect the terminal lugs or connectors D840 and D842 (if installed) on both sides of the detection element.

Note: Ships 3772-3777 and 3801-3963 do not have connectors D40 and D842.

- B. Perform a second CODC "LOCAL TEST" (reference [AMM 26-18-01-740-801 C. \(2\)](#)).
- C. If the second CODC "LOCAL TEST" presents any fault codes, perform the following:
 - i. Reconnect connectors D840 and D842.
 - ii. Remove the two light bulbs from the WHEEL WELL light on the P8 panel.
 - iii. Disconnect the fire bell:
 - a. Remove Flight Control Computer B to get access to the wiring for the fire bell.
 - b. Disconnect the wires from D742, pin 16 and pin 25 on the E1-4 shelf.
 - c. Cap and stow the wires.
 - d. Install Flight Control Computer B.
- D. If the second CODC "LOCAL TEST" shows no faults, perform the following:
 - i. Stow the wiring going into connector D840 and D842 near the detector element.
 - ii. Perform the Overheat/Fire Warning System Test per [AMM 26-18-00](#). All tests should pass except for the wheel well fire function with the disabled element.

26-00-06 APU Fire Shutoff System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			Y	1	0	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
26-00-06	APU Fire Shutoff System "DISP.APPR.REQ'D"				C	(O) Except for Extended Operations (ETOPS), may be inoperative provided APU is not used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-06	1. APU Fire Handle 2. APU Start Switch	1. APU Fire Shutoff System INOP 2. Do NOT Use APU

(O) PROCEDURES

1. Dispatch is not allowed if the APU is required by other procedures.
2. APU is not used.

26-00-07 APU Fire Extinguisher System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
26-00-07	APU Fire Extinguisher System "DISP.APPR.REQ'D"	Y	1	0	C
					(O) Except for Extended Operations (ETOPS), may be inoperative provided APU is not used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-07	1. APU Fire Handle 2. APU Start Switch	1. APU Fire Extinguisher System INOP 2. Do NOT Use APU

(O) PROCEDURES

1. Dispatch is not allowed if the APU is required by other procedures.
2. APU is not used.

26-00-08 APU Fire Detection System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
APU FIRE DETECTION SYSTEM					
26-00-08A	Single Loop "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) Except for Extended Operations (ETOPS), May be inoperative provided APU is considered inoperative and deferred per MEL 49-00-01A. Theater Restrictions May Apply
26-00-08B	APU DET INOP Light	Y	1	0	C (O) May be inoperative extinguished provided: - APU fire detection system operates normally, and - A fire warning test is performed PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
26-00-08C	External Warning Horn / Warning Light	Y	1	0	C May be inoperative for ground operation provided system is continuously monitored at flight deck control panel.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-08A	1. Fire Warning Test Switch 2. APU Start Switch	1. APU Fire Loop __ INOP 2. Do NOT Use APU
26-00-08B	Fire Warning Test Switch	APU DET INOP Light INOP
26-00-08C	Fire Warning Test Switch	External APU Fire Warning Horn / Warning Light INOP

(O) PROCEDURES

26-00-08A

- Dispatch is not allowed if the APU is required by other procedures.
- Use (O) procedure for inoperative APU per MEL 49-00-01A.

Note: The MASTER CAUTION lights and the OVHT/DET system annunciator light do not illuminate during the Fault/Inop test. The MASTER CAUTION lights and the OVHT/DET system annunciator light will illuminate during a system annunciator panel recall.

Note: When performing the [Operations Manual, Volume 1, Supplementary Procedures, Engines APU, Battery Start](#), the fire warning bell may not sound and the master FIRE WARN lights may not illuminate.

26-00-08B

PRIOR TO EACH DEPARTURE:

Perform OVERHEAT/FIRE test per [Operations Manual, Volume 1, Supplementary Procedures, Engines APU, Battery Start](#).

Note: If the APU DET INOP light does not illuminate but the APU Fire Warning switch illuminates during OVERHEAT/FIRE test, the APU fire detection system is operating normally. The APU can be used if the OVERHEAT/FIRE test is performed before each APU start.

(M) PROCEDURES

26-00-08A

1. Pull and secure the FIRE PROTECTION DETECTION APU circuit breaker on the P6-2 panel located at A23.
2. Defer APU per [MEL 49-00-01A](#).

Note: *To prevent nuisance/false warnings, the FIRE PROTECTION DETECTION APU circuit breaker can be pulled and secured. With this circuit breaker open, the MASTER CAUTION lights and the OVHT/DET system annunciator light do not illuminate during the Fault/Inop test. The APU DET INOP light will remain illuminated and the MASTER CAUTION lights and the OVHT/DET system annunciator light will illuminate during a system annunciator panel recall.*

26-00-09 Engine / APU Fire Extinguisher Test System (EXT TEST) (Squib Test)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
26-00-09A	Engine / APU Fire Extinguisher Test System (EXT TEST) (Squib Test)	N	3	0	C
					(M) May be inoperative provided: 1. Failure is verified to be in squib test circuit, and 2. Squib circuit is checked ONCE EACH FLIGHT DAY. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)
26-00-09B	APU Fire Extinguisher Squib Test Circuits (EXT TEST)	Y	2	1	C
					(O) May be inoperative provided remaining APU Squib test circuit is verified to operate normally PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
26-00-09C	APU Squib Light "DISP.APPR.REQ'D"	Y	1	0	C
					(O) Except for Extended Operations (ETOPS), may be inoperative provided APU is not used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-09A	Fire Warning Test Switch	Engine / APU Fire Extinguisher Squib Test INOP
26-00-09B	APU Squib Light	APU Fire Extinguisher Squib Test Circuits
26-00-09C	1. APU Squib Light 2. APU Start Switch	1. APU Squib Light INOP 2. Do NOT Use APU

(O) PROCEDURES

26-00-09B

PRIOR TO EACH DEPARTURE

1. Reference the following Operations Manual, Volume 1, Procedures:
 - A. [Normal Procedures - Amplified Procedures - Preflight Procedure - First Officer.](#)
 - B. [Supplementary Procedures – Electrical - Electrical Power Up.](#)
2. Verify remaining APU squib test circuit operates normally in the "EXTINGUISHER TEST Switch - Check":
 - A. EXT TEST switch in position 1 or 2, APU green extinguisher test light illuminates.
 - B. Release EXT TEST switch, APU green extinguisher test light extinguishes.

26-00-09C

1. Dispatch is not allowed if the APU is required by other procedures.
2. APU is not used.

(M) PROCEDURES

26-00-09A

1. Fabricate a squib test lamp with pigtail leads terminating in size #8 lugs or alligator clips, using lamp P/N 387 (28 Volt, 40 Milliamp) in suitable holder.

CAUTION	RESTRICT PERSONNEL FROM FIRE BOTTLE AREA WHILE TESTING. LIMIT SQUIB CURRENT TO 50 MILLIAMPERES MAXIMUM.
----------------	--

ONCE EACH FLIGHT DAY

1. Verify that the squib circuit is operative as follows:
 - A. For Engines:

- i. Open the two / four engine fire extinguisher circuit breakers on the P6-2 Panel as identified in the ENGINE SQUIB TEST TABLE on the following page.
 - ii. Gain access to the P6-2 circuit breaker panel.
 - iii. Connect the test lamp across the terminals of the appropriate circuit breaker for the inoperative test light circuit to be tested.
 - iv. Pull out the Engine Fire Handle Switch for the suspect system by depressing the override button. Rotate the Engine Fire Handle to one side to confirm squib circuit continuity.
 - v. Test lamp illuminated indicates intact squib.
 - vi. Remove test lamp from the circuit breaker and close all of the circuit breakers opened in Step 1.
- B. For APU:
- i. Open the APU fire extinguisher circuit breaker on the P6-2 panel.
 - ii. Gain access to the P6-2 circuit breaker panel.
 - iii. Connect the test lamp across the terminals of the APU fire extinguisher circuit breaker for the inoperative test light circuit to be tested.
 - iv. Pull out the APU Fire Handle Switch for the suspect system by depressing the override button. Rotate the APU Fire Handle to one side to confirm squib circuit continuity.
 - v. Test lamp illuminated indicates intact squib.
 - vi. Remove test lamp from the circuit breaker and close the circuit breaker opened in Step 1.

BOTTLE	SQUIB NO.	SQUIB PLUG NO.	C / B OPEN and TEST LAMP CONNECTION
Left	1	D582, Pin 4	Across C296 Left Ext Bottle
Left	1	D582, Pin 6	Across C1021 Left Ext Bottle
Left	2	D1322, Pin 4	Across C296 Left Ext Bottle
Left	2	D1322, Pin 6	Across C1021 Left Ext Bottle
Right	1	D584, Pin 4	Across C297 Right Ext Bottle
Right	1	D584, Pin 6	Across C1022 Right Ext Bottle
Right	2	D1324, Pin 4	Across C297 Right Ext Bottle
Right	2	D1324, Pin 6	Across C1022 Right Ext Bottle

26-00-10 Fire Warning Bell

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	FIRE WARNING BELL				
26-00-10A	Bell Cutout Switch (Overheat / Fire Protection Panel)	Y	1	0	C May be inoperative provided: 1. Bell Cutout Function of both Master Fire Warning lights operates normally, and 2. Fire Warning Bell operates normally.
26-00-10B	Bell Cutout Function of Master Fire Warning Light	Y	2	1	C May be inoperative provided: 1. Bell Cutout Switch operates normally, and 2. Fire Warning Bell operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-10A	Fire Warning Bell Cutout Switch	Fire Warning Bell Cutout Switch INOP
26-00-10B	Master Fire Warning Light	Fire Warning Bell Cutout Function of Master Fire Warning Light INOP

26-00-12 Wing-Body Overheat Detector System (Left)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
WING-BODY OVERHEAT DETECTOR SYSTEM (LEFT)					
26-00-12A	Wing-Body Overheat Detector System (Left) (B737-800) "DISP.APPR.REQ'D"	Y	1	0	C
					(O) (M) May be inoperative provided: - Right pack and right engine bleed is used for pressurization only, - Use of APU is prohibited except for engine start, - Isolation valve and left engine bleed valve remain closed for all operations except engine start, - Defer the left pack as inoperative per MEL 21-00-01A, - Aircraft is not operated in known or forecast icing conditions, and - Limit altitude to FL250.
26-00-12B	Wing-Body Overheat Detector System (Left) (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C
					(O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: - Right pack and right engine bleed is used for pressurization only, - Use of APU is prohibited except for engine start, - Isolation valve and left engine bleed valve remain closed for all operations except engine start, - Defer the left pack as inoperative per MEL 21-00-01D, - Aircraft is not operated in known or forecast icing conditions, - Limit altitude to FL250, - Forward cargo heat is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-12A	Left Wing-Body Overheat Light	Left Wing-Body Overheat Detector System INOP
26-00-12B	Left Wing-Body Overheat Light	Left Wing-Body Overheat Detector System INOP

(O) PROCEDURES

26-00-12A

- Limit altitude to FL 250.
- Refer to MEL 21-00-01A, for (O) procedures.
- Except for engine start, do not use the APU for pneumatic air supply and/or electrical power.
- After engine start, make sure that:
 - ISOLATION VALVE switch is set to CLOSE
 - APU switch is set to OFF
 - Engine No. 1 BLEED air switch is set to OFF.
 - L PACK switch is set to OFF
 - R PACK set as desired.
- Do not dispatch into known or forecast icing conditions.

	737 Minimum Equipment List 26 Fire Protection	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

26-00-12B

1. Limit altitude to FL 250.
2. Refer to [MEL 21-00-01D](#) for (O) procedures.
3. Except for engine start, do not use the APU for pneumatic air supply and/or electrical power.
4. After engine start, make sure that:
 - A. ISOLATION VALVE switch is set to CLOSE
 - B. APU switch is set to OFF
 - C. Engine No. 1 BLEED air switch is set to OFF.
 - D. L PACK switch is set to HIGH
 - E. R PACK set as desired.
 - F. R RECIRC FAN switch is set to OFF.
5. Do not dispatch into known or forecast icing conditions.

(M) PROCEDURES

26-00-12A, 26-00-12B

1. Defer the left air conditioning pack per [MEL 21-00-01A](#), or [MEL 21-00-01D](#) as applicable.

26-00-13 Wing-Body Overheat Detector System (Right)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	WING-BODY OVERHEAT DETECTOR SYSTEM (RIGHT)				
26-00-13A	Wing-Body Overheat Detector System (Right) (B737-800) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: - Left pack and left engine or APU bleed air is used for pressurization only, - Isolation valve and right engine bleed valve remain closed for all operations except engine start, - Defer the right pack as inoperative per MEL 21-00-01B, - Aircraft is not operated in known or forecast icing conditions, and - Limit altitude to FL250.
26-00-13B	Wing-Body Overheat Detector System (Right) (B737-900ER) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: - Left pack and left engine or APU bleed air is used for pressurization only, - Isolation valve and right engine bleed valve remain closed for all operations except engine start, - Defer the right pack as inoperative per MEL 21-00-01E, - Aircraft is not operated in known or forecast icing conditions, - Limit altitude to FL250, - Forward cargo heat duct is secured closed, and - Airport ambient temperature does not exceed 103 degrees F (39 degrees C).

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-13A	Right Wing-Body Overheat Light	Right Wing-Body Overheat Detector System INOP
26-00-13B	Right Wing-Body Overheat Light	Right Wing-Body Overheat Detector System INOP

(O) PROCEDURES

26-00-13A

- Limit altitude to FL 250.
- Refer to MEL 21-00-01B for (O) procedures.
- After engine start, make sure that:
 - ISOLATION VALVE switch is set to CLOSE.
 - Engine No. 2 BLEED air switch is set to OFF.
 - R PACK switch is set to OFF
 - L PACK as desired.
- Do not dispatch into known icing or forecast icing conditions.
- Increased air flow will occur when flaps are extended (takeoff and landing) if the APU is used instead of engine bleed to supply bleed air to the left pack.
- With the L PACK switch in AUTO, the pack operates in the high flow mode.
- Do not set the L PACK to HIGH for takeoff and landing with the engine bleed on.
- Do not use APU bleed air at altitudes above 17,000 feet.

CONTINUED ON NEXT PAGE

26-00-13B

1. Limit altitude to FL 250.
2. Refer to [MEL 21-00-01E](#) for (O) procedures.
3. After engine start, make sure that:
 - A. ISOLATION VALVE switch is set to CLOSE.
 - B. Engine No. 2 BLEED air switch is set to OFF.
 - C. R PACK switch is set to HIGH
 - D. L PACK as desired.
 - E. R RECIRC FAN switch is set to OFF.
4. Do not dispatch into known icing or forecast icing conditions.
5. Increased air flow will occur when flaps are extended (takeoff and landing) if the APU is used instead of engine bleed to supply bleed air to the left pack.
6. With the L PACK switch in AUTO, the pack operates in the high flow mode.
7. Do not set the L PACK to HIGH for takeoff and landing with the engine bleed on.
8. Do not use APU bleed air at altitudes above 17,000 feet.

(M) PROCEDURES

26-00-13A, 26-00-13B

1. Defer the right air conditioning pack per [MEL 21-00-01B](#) or [21-00-01E](#) as applicable.

26-00-15 Lavatory Fire Extinguisher Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
26-00-15A	Lavatory Fire Extinguisher Systems	Y	-	0	C	For each lavatory, lavatory fire extinguisher system may be inoperative provided lavatory smoke detector system operates normally.
26-00-15B	Lavatory Fire Extinguisher Systems "DISP.APPR.REQ'D"	Y	-	0	C	(O) (M) For each lavatory, lavatory fire extinguisher system may be inoperative provided: 1. Lavatory waste receptacle is empty, 2. Associated lavatory door is locked closed and placarded, "UNSERVICEABLE - DO NOT USE", and 3. Lavatory is used only by crewmembers. Note: These provisos are not intended to prohibit lavatory use or inspections by crewmembers.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-15A	Logbook	___ Lavatory Fire Extinguisher System(s) INOP
26-00-15B	Logbook	___ Lavatory Fire Extinguisher System(s) INOP

(O) PROCEDURES

26-00-15B

Make sure that the associated lavatory is kept locked and is not entered except for use or inspection by crew members.

(M) PROCEDURES

26-00-15B

For an inoperative lavatory smoke detection system:

1. Empty the waste receptacles.
2. Lift the flap above the OCCUPIED/VACANT indicator and slide the lock to OCCUPIED.
3. Placard door "INOPERATIVE - DO NOT ENTER". Place a strip of Red Colored OM2 UNSERVICEABLE – DO NOT USE tape (or equivalent*) diagonally across the lavatory door.

Note: An acceptable alternate to the OM2 tape is a section of 2 inch wide tape with the words "UNSERVICEABLE – DO NOT USE" printed legibly in 1 inch black letters.

26-00-16 Lavatory Smoke Detection Systems

NUMBER INSTALLED					NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
26-00-16A	Lavatory Smoke Detection Systems "DISP.APPR.REQ'D"	Y	-	0	C	(O) (M) For each lavatory, lavatory smoke detection system may be inoperative provided: 1. Lavatory waste receptacle is empty, 2. Associated lavatory door is locked closed and placarded, " UNSERVICEABLE – DO NOT USE", and 3. Lavatory is used only by crewmembers. Note: These provisos are not intended to prohibit lavatory use or inspections by crewmembers.
26-00-16B	Lavatory Smoke Detector TEST Switch on Cabin Attendants Panel	N	1	0	C	(M) May be inoperative provided each lavatory smoke detector is verified to operate normally.
26-00-16C	Lavatory Smoke Detector SELF TEST Switch	N	-	0	C	(M) May be inoperative provided associated lavatory smoke detector is verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-16A	Logbook	____ Lavatory Smoke Detection System(s) INOP
26-00-16B	Logbook	Lavatory Smoke Detector TEST Switch on Cabin Attendants Panel INOP
26-00-16C	Logbook	____ Lavatory Smoke Detector Self Test Switch INOP

(O) PROCEDURES

26-00-16A

Make sure that the associated lavatory is kept locked and is not entered except for use or inspection by crew members.

(M) PROCEDURES

26-00-16A

For an inoperative lavatory smoke detection system:

1. Empty the waste receptacles.
2. Lift the flap above the OCCUPIED/VACANT indicator and slide the lock to OCCUPIED.
3. Place a strip of Red Colored OM2 UNSERVICEABLE – DO NOT USE tape (or equivalent*) diagonally across the lavatory door.

Note: An acceptable alternate to the OM2 tape is a section of 2 inch wide tape with the words "UNSERVICEABLE – DO NOT USE" printed legibly in 1 inch black letters.

26-00-16B

For each smoke detector, do the lavatory smoke detection system test ([AMM 26-14-00/501](#)).

26-00-16C

For the associated smoke detector, do the lavatory smoke detection system test ([AMM 26-14-00/501](#)).

26-00-18 Wing-Body Overheat Test System (Flight Deck Test Feature)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	N		0	C	REMARKS OR EXCEPTIONS
26-00-18	Wing-Body Overheat Test System (Flight Deck Test Feature)	N				(M) May be inoperative provided system integrity is verified by an acceptable procedure ONCE EACH FLIGHT DAY. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-18	Wing-Body Overheat Test Switch	Wing-Body Overheat Test System INOP

(M) PROCEDURES

ONCE EACH FLIGHT DAY

Verify the Wing-Body Overheat test system integrity as follows:

1. Apply heat from an appropriate heat source to an operable detector element in the left wing-body overheat detection system and in the right wing-body overheat detection system. The substitute test heat device must not produce heat greater than 450°F (232°C). This temperature limit should be observed in event fuel vapors exist in the area.
2. When a detector element in the right system is heated, observe that these lights come on:
 - A. Left WING-BODY OVERHEAT light on the Air Conditioning Panel (P5)
 - B. The AIR COND light on the glareshield P7.
 - C. The MASTER CAUTION lights.
3. When a detector element in the right system is heated, observe that these lights come on:
 - A. Right WING-BODY OVERHEAT light on the Air Conditioning Panel (P5)
 - B. The AIR COND light on the glareshield P7.
 - C. The MASTER CAUTION lights.

26-00-19 Lower Cargo Compartment Fire Detection Systems / Suppression Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
26-00-19A	Lower Cargo Compartment Fire Detection Systems / Suppression Systems “DISP.APPR.REQ’D”	Y	2	0	C	(O) May be inoperative provided associated cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast, and/or flyaway kits (see MEL Instructions).	
26-00-19B	Fwd/ Aft Detection Loops	Y	4	2	C	(O) One loop (A or B) in each compartment may be inoperative provided opposite loop is checked to operate normally.	
26-00-19C	Extinguisher Bottle No. 2 “DISP.APPR.REQ’D”	N	1	0	C	(O) (M) Except for Extended Operations (ETOPS), may be inoperative with cargo carried in compartment provided flight remains within 60 minutes of landing at a suitable airport.	
26-00-19D	DISCH Light	N	1	0	C	(M) May be inoperative provided associated extinguisher bottle(s) is verified to have an adequate charge ONCE EACH FLIGHT DAY. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)	
26-00-19E	EXT Lights (FWD and AFT)	N	2	0	C	(M) May be inoperative provided: 1. Failure is verified to be in squib light circuit, and 2. Squib circuit is verified to operate normally ONCE EACH FLIGHT DAY. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)	
26-00-19F	DETECTOR FAULT Light	Y	1	0	C	(O) May be inoperative provided the cargo fire TEST switch is used to check for faults in the cargo fire detection and suppression system before each flight.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-19A	Cargo Fire Detection Panel	Cargo Compartment Fire Detection / Suppression Systems INOP
26-00-19B	Affected Cargo Fire Detector Loop Select Switch	____ Cargo Fire Detection Loops INOP
26-00-19C	Cargo Fire Detection Panel	Extinguisher Bottle No. 2 INOP
26-00-19D	Cargo Fire DISCH Light	Cargo Fire Suppression DISCH Light INOP
26-00-19E	Affected Cargo Fire EXT Light(s)	____ Cargo Fire Suppression EXT Light(s) INOP
26-00-19F	Near DETECTOR FAULT Light	Cargo Smoke DETECTOR FAULT Light INOP

Note: One detector in either detector loop (A or B) in each cargo compartment may be inoperative with no loading restrictions. MDM loading restrictions apply if the Cargo Electronics Unit (CEU) is inoperative or both loops (A and B) in a cargo compartment have one or more detectors inoperative.

(O) PROCEDURES

26-00-19A

Refer to Remarks or Exceptions Column

	737 Minimum Equipment List 26 Fire Protection	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

26-00-19B

Note: *If a Cargo Fire Panel FWD or AFT warning light fails to illuminate during system test, one or more detection loops for the associated compartment is inoperative.*

To determine specific inoperative loop(s):

1. Position the Cargo Fire Panel FWD and AFT DET SELECT Switch to A.
2. Press and hold Cargo Fire Panel TEST switch.
3. Verify that the following indications occur within 4 seconds:
 - A. Fire Bell sounds.
 - B. Both Master FIRE WARN lights illuminate.
 - C. Cargo Fire Panel FWD and AFT warning lights illuminate.
 - D. Cargo Fire Panel DISCH light illuminates.
 - E. Cargo Fire Panel EXT FWD and EXT AFT lights illuminate.
4. If one or more smoke detectors in LOOP A is inoperative, the Cargo Fire Panel DETECTOR FAULT Light will illuminate and the associated FWD or AFT warning light will remain extinguished for the cargo compartment with the inoperative detector.
5. Release the Cargo Fire Panel TEST switch. The DETECTOR FAULT light remains illuminated if a loop failure is detected in either the forward or aft cargo compartment. Otherwise all indications will clear within half a second.
6. Position Cargo Fire Panel FWD and AFT DET SELECT switch to B and repeat the above test (Steps 2 through 5).
7. Select the operable loop(s) with the Cargo Fire Panel DET SELECT switches. Conduct a cargo fire test with the switches in the positions selected for flight, and ensure a good test result. One detection loop (A or B) must operate normally in each cargo compartment or cargo loading restrictions must be observed.

26-00-19C

Refer to Remarks or Exceptions Column

Note: *With Extinguisher Bottle No.2 inoperative, fire suppression capability is reduced to 60 minutes, airplane must remain within 60 minutes of a suitable airport.*

26-00-19F

Before each flight, do a test of the cargo fire detection and suppression system using the TEST switch on the cargo fire panel. Refer to [Operations Manual Volume 1, Supplementary Procedures](#) for test.

(M) PROCEDURES

26-00-19C

Do these steps to prevent anomalies in the indication of the DISCH light during operation and the EXT FWD test light during system test.

1. Disconnect, cap and stow electrical connector D12816 on the Extinguisher Bottle No. 2 pressure switch.
2. Disconnect electrical connectors D12820 and D12818 from the Extinguisher Bottle No. 2 squibs.
3. Install a jumper across pins 1 and 2 on both connectors. Cap and stow connectors.

26-00-19D

ONCE EACH FLIGHT DAY:

Do these steps for an inoperative DISCH light circuit to make sure that the fire extinguisher bottle has an adequate charge:

1. Build a test lamp (28 Volts DC/40 milliamps) with pigtail leads terminating in pin contacts in a suitable holder.

Note: *Any suitable lamp (P/N 387) or digital multimeter can be used.*

2. Remove the Cargo Fire Panel.
3. Disconnect the electrical connector D12760 from the panel.

CONTINUED ON NEXT PAGE

4. Connect the test lamp or digital multimeter between the airplane side of connector D12760, Pin 48 (+28 volt source for Bottle No. 1) and Pin 28 (pressure switch ground).
5. For ships 3774-3777, 3853-3898, and 3931-3963 with Extinguisher Bottle No. 2:
 - A. Connect test lamp or digital multimeter between the airplane side of connector D12760, Pin 45 (+28 volt source for Bottle No. 2) and Pin 28 (pressure switch ground).
6. If the test lamp remains extinguished or the digital multimeter indicates an open circuit the associated bottle has an adequate charge.
7. Remove the test lamp.
8. Reconnect the electrical connector D12760 to the panel.
9. Install the Cargo Fire Panel.

26-00-19E

ONCE EACH FLIGHT DAY:

Do these steps for an inoperative EXT light circuit to verify normal operation of associated squib circuit:

1. Build a test lamp (28 Volts DC/40 milliamps) with pigtail leads terminating in pin contacts in a suitable holder.
 - A. Any suitable lamp (P/N 387) can be used.
2. Remove the Cargo Fire Panel.
Disconnect the electrical connector D12760 from the panel.

CAUTION TO PREVENT INJURY, RESTRICT PERSONNEL FROM EXTINGUISHER BOTTLE AREA DURING SQUIB CIRCUIT TEST. LIMIT CURRENT TO 40 MILLIAMPS MAXIMUM DURING TEST. USE TEST LAMP (28 VOLT, 40 MILLIAMPS ONLY). DO NOT USE A MULTIMETER.

3. Use the table below to determine which pin numbers to connect between the test lamp and the airplane side of connector D12760.
 - A. If the test lamp illuminates, the squib circuit is intact.

			TEST LAMP CONNECTION	
Bottle	Squib	Squib Plug No.	Pin No. (+28 Vdc Source)	Pin No. (Ground Path)
1	FWD	D12794	D12760, Pin 48	D12760, Pin 26
1	AFT	D12796	D12760, Pin 48	D12760, Pin 24
2	FWD	D12818	D12760, Pin 45	D12760, Pin 12
2	AFT	D12820	D12760, Pin 45	D12760, Pin 23

4. Remove the test lamp.
5. Reconnect electrical connector D12760 to the panel.
6. Install the Cargo Fire Panel.

26-00-25 Engine Start Lever Fire Indication Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
26-00-25	Engine Start Lever Fire Indication Lights	N	2	0	A (O) May be inoperative provided: 1. Engine No. 1 and Engine No. 2 fire handle switch lights function normally PRIOR TO ENGINE START, and 2. Repairs are made within 3 flight days. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
26-00-25	Near Engine Start Lever Fire Indication Light	Engine Start Lever Fire Indication Light INOP

(O) PROCEDURES

PRIOR TO ENGINE START:

Fault/Inoperative (FAULT/INOP) and Overheat/Fire (OVHT/FIRE) Test Switch - Hold to OVHT/FIRE, verify that the Engine No. 1 and Engine No. 2 fire switches stay illuminated.

27 Flight Controls

Table of Contents

27-00-04	Leading Edge Flap/Slat Position Light Systems
27-00-04A	Leading Edge Flap/Slat Position Light Systems - Aft Overhead LE DEVICES Annunciator Panel
27-00-04B	Leading Edge Flap/Slat Position Light Systems - Forward Panel Lights
27-00-04C	Leading Edge Slat Indications
27-00-04D	Leading Edge Slat Indications
27-00-07	Auto Speed Brake System
27-00-07	Auto Speed Brake System
27-00-08	Flap Load Limiter System
27-00-08A	Flap Load Limiter System
27-00-08B	Flap Load Limiter System
27-00-08C	Flap Load Limiter System
27-00-10	FEEL DIFF PRESS Light System
27-00-10	FEEL DIFF PRESS Light System
27-00-11	Auto Slat Fail Light System
27-00-11	Auto Slat Fail Light System
27-00-12	Auto Slat Systems
27-00-12	Auto Slat Systems
27-00-14	Rudder Trim Indicator
27-00-14	Rudder Trim Indicator
27-00-16	SPEED BRAKES EXTENDED Light
27-00-16	SPEED BRAKES EXTENDED Light
27-00-17	Wheel To Rudder Interconnect System (WTRIS)
27-00-17	Wheel to Rudder Interconnect System (WTRIS)
27-00-20	Speed Brake Load Alleviation System
27-00-20A	Speed Brake Load Alleviation System
27-00-20B	Speed Brake Load Alleviation System
27-00-21	STBY RUD ON Light
27-00-21	STBY RUD ON Light
27-00-23	Elevator Tab Control Springs
27-00-23	Elevator Tab Control Springs

27-00-04 Leading Edge Flap/Slat Position Light Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
27-00-04A	Leading Edge Flap/Slat Position Light Systems - Aft Overhead LE DEVICES Annunciator Panel	Y	1	0	C	Aft overhead LE DEVICES Annunciator panel may be inoperative provided forward panel lights operate normally.
27-00-04B	Leading Edge Flap/Slat Position Light Systems - Forward Panel Lights	Y	1	0	C	(M) Forward panel lights may be inoperative provided: 1. Aft overhead LE DEVICES Annunciator panel operates normally and is used to verify proper LE DEVICE position, and 2. A placard is installed to indicate proper position for flap configuration in use.
27-00-04C	Leading Edge Slat Indications (B737-800) "DISP.APPR.REQ'D"	Y	8	7	C	(O) (M) Indication lights on forward panel, and in addition, indication lights for one leading edge slat, except for slats 3, 4, 5 and 6 on overhead annunciator panel may be inoperative provided: 1. Normal operation is verified by flight crew PRIOR TO each takeoff and landing, 2. Maximum speed is limited to 300 KIAS at/below FL 200 or .65 Mach above FL 200, 3. Aircraft is not operated within the boundaries of a Critical Terrain Box, 4. All remaining indications on overhead annunciator panel operate normally, and 5. Stall warning operation of both systems is verified to operate normally. Theater Restrictions May Apply Repetitive Check Required (Yellow Placard)
27-00-04D	Leading Edge Slat Indications (B737-900) "DISP.APPR.REQ'D"	Y	8	7	C	(O) (M) Indication lights on forward panel, and in addition, indication lights for one leading edge slat, except for slats 2, 3, 4, 5, 6, and 7 on overhead annunciator panel may be inoperative provided: 1. Normal operation is verified by flight crew PRIOR TO EACH TAKEOFF AND LANDING, 2. Maximum speed is limited to 300 KIAS at/below FL 200 or .65 Mach above FL 200, 3. Aircraft is not operated within the boundaries of a Critical Terrain Box, 4. All remaining indications on overhead annunciator panel operate normally, and 5. Stall warning operation of both systems is verified to operate normally. Theater Restrictions May Apply Repetitive Check Required (Yellow Placard)

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-04A	Affected Panel Light System	_____ Panel Light System INOP
27-00-04B	Affected LED Annunciator Panels	_____ Leading Edge Slat Indications INOP
27-00-04C	Affected LED Annunciator Panels	_____ Leading Edge Slat Indications INOP
27-00-04D	Affected LED Annunciator Panels	_____ Leading Edge Slat Indications INOP

(O) PROCEDURES

27-00-04C, 27-00-04D

Program KIAS/Mach speed restriction in FMS.

With forward position indicator lights inoperative and one SLATS annunciator panel light inoperative:

1. PRIOR TO EACH TAKEOFF AND LANDING, verify leading edge slat position for the inoperative indication.
2. Limit airspeed:
 - A. At or below FL 200, limit airspeed to 300 KIAS.
 - B. Above FL 200, limit airspeed to 0.65 Mach.

Note: Refer to ODM, Flight Planning Section, Buffet Onset Boundary Speeds chart for maintaining minimum maneuvering speeds.

Note: VNAV will limit the speed target to 230 KIAS unless speed intervention is used.

(M) PROCEDURES

Note: For the -800, slat indications for slats 3, 4, 5 and 6 are not allowed to be inoperative due to the inability to visually verify their position from the flight deck.

Note: For the -900ER, slat indications for slats 2, 3, 4, 5, 6 and 7 are not allowed to be inoperative due to the inability to visually verify their position from the flight deck.

27-00-04B

With forward position indicator lights inoperative:

1. Cycle the flaps.
2. Verify that the LE DEVICES annunciator panel (P5) operates normally during flap extension and retraction.

Note: Dispatch is not allowed if the LE DEVICES annunciator panel FLAP TRANSIT lights do not illuminate properly and the forward panel light(s) are inoperative.

3. Remove the bulbs from the associated forward position indicator light(s) on the center instrument panel, P2.
4. Use this data to make a placard and put it adjacent to the LE DEVICES annunciator panel:

737-800 except aircraft 3774 thru 3777		737-900ER and aircraft 3774 thru 3777
Flap positions 1 thru 5: • All slats in EXT position • LE flaps extended Flap positions 10 thru 40: • All slats in FULL EXT position • LE flaps extended		Flap positions 1 thru 25: • All slats in EXT position • LE flaps extended Flap positions 30 and 40: • All slats in FULL EXT Position • LE flaps extended

27-00-04C, 27-00-04D

With forward position indicator lights inoperative and one SLATS annunciator panel light inoperative:

1. Perform Flaps cycle by extending and retracting the TE and LE flaps.
2. Verify that the remaining LE DEVICES annunciator panel (P5) lights operate normally during flap extension and retraction.

Note: *If an annunciator panel TRANSIT light fails to illuminate while the corresponding device is in motion, then this light must be considered inoperative.*

Note: *This MEL item is applicable to inoperative leading edge SLAT indications and not the leading edge FLAP indications on the LE DEVICES annunciator panel. Dispatch is not allowed if the LE DEVICES annunciator panel FLAP lights do not illuminate properly and the forward panel light(s) are inoperative.*

3. After verification of a single inoperative LE Slat Position light, determine and record which TE Flap position settings cause this failure.
 - A. If faulty indication on overhead annunciator panel can be replicated on the ground, record which TE Flap position settings causes this failure.
 - B. If faulty indication on overhead annunciator panel cannot be replicated on the ground, use FSEU BITE to determine if an FSEU input has been recently faulty.
 - i. If FSEU BITE (Flight Leg 0) indicates fault message codes 27-81200 through 27-81223 or 27-81225 through 27-81236, pull and secure the Stall Warning Asymmetry Mode circuit breaker on the P18-2 Panel.
 - ii. If FSEU BITE does not yield one of these fault codes because the faulty overhead indication light(s) flashes ON/OFF for an instant such that the fault does not latch, first confirm that the applicable slat is stationary in the position where the intermittent indication was observed, then pull and secure the Stall Warning Asymmetry Mode circuit breaker.
4. Remove the bulbs from the associated forward position indicator light(s) on the center instrument panel, P2.
5. Use this data to make a placard and put it adjacent to the annunciator panel:

737-800 except aircraft 3774 thru 3777	737-900ER and aircraft 3774 thru 3777
Flap positions 1 thru 5: ○ All slats in EXT position ○ LE flaps extended Flap positions 10 thru 40: ○ All slats in FULL EXT position ○ LE flaps extended	Flap positions 1 thru 25: ○ All slats in EXT position ○ LE flaps extended Flap positions 30 and 40: ○ All slats in FULL EXT Position ○ LE flaps extended

6. Using the information recorded in step 3, set flaps to the position which produces the faulty indication.
7. Verify that the leading edge and trailing edge devices are in the correct position.
8. Verify normal operation of both Stall Warning Systems:

Note: *For -800, except 3774 thru 3777 aircraft, if the inoperative slat indication occurs at more than one flap position, repeat the procedure to verify normal operation of both Stall Warning Systems at Flaps 0, Flaps 1 and Flaps 10.*

Note: *For -900ER aircraft and -800 aircraft 3774 thru 3777, if the inoperative slat indication occurs at more than one flap position, repeat the procedure to verify normal operation of both Stall Warning Systems at Flaps 0, Flaps 1 and Flaps 30.*

- A. Verify that hydraulic system B pressure is between 2900 and 3100 psi.
 - B. While monitoring the control column for stick shaker operation, push and hold STALL WARNING TEST NO. 1 and NO. 2 switch on the stall warning test module (P5 Overhead Panel).
 - C. Check that the control column stick shakers operate normally.
 - D. If both stick shakers fail to operate normally, pull and secure the Stall Warning Asymmetry Mode circuit breaker on the P18-2 Panel if not already accomplished in step 5 above, and then repeat test in steps B and C.
9. If the stick shaker tests are normal the airplane can be dispatched.

27-00-07 Auto Speed Brake System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
27-00-07	Auto Speed Brake System "DISP.APPR.REQ'D"	Y	1	0	C
(O) (M) May be inoperative provided: - System is deactivated, - Performance corrections are applied, and - Speed Brake Load Alleviation System (if installed) is considered inop and deferred per MEL 27-00-20A, or 27-00-20B as applicable. Note: Refer to MEL 27-00-20A, or 27-00-20B (Speedbrake Load Alleviation System) as applicable.					

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-07	SPEED BRAKE ARMED Light	Auto Speed Brake System INOP

(O) PROCEDURES

Speedbrakes must be manually deployed for a rejected takeoff (RTO).

- Prior to takeoff, ensure that the speed brake lever is in the full down detent.

Note: When the Takeoff Configuration Warning is checked, takeoff warning should NOT occur.

- Extend speedbrakes manually for landing or rejected takeoff.
 - For rejected takeoff:
 - Simultaneously close the thrust levers, disengage the autothrottles and apply maximum manual wheel brakes or verify operation of RTO autobrakes.
 - Manually raise speed brake lever.
 - Apply the maximum amount of reverse thrust consistent with conditions.
 - For landing:
 - Do not arm the speedbrakes for landing.
 - Ensure during the Landing Checklist that the Speedbrake is in the DOWN detent.
 - Manually deploy the speedbrakes immediately upon landing. Increased force may be needed to move the SPEED BRAKE lever to the UP position.
- The autobrakes may not disarm when the speed brake lever is stowed. Auto brakes can be disarmed by positioning the AUTO BRAKE select switch to OFF, applying brakes manually or advancing the thrust levers.

27-00-07	AUTO SPEED BRAKE SYSTEM
EFFECTIVITY	-800 except aircraft 3774, 3775, 3776 and 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING Use RWY ALLOWABLE LANDING WT for "MANUAL SPEED BRAKES" in ALM – Airport Section.

27-00-07 AUTO SPEED BRAKE SYSTEM	
EFFECTIVITY	Aircraft 3774, 3775, 3776 and 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 2,300 lbs. LANDING Reduce RWY ALLOWABLE LANDING WT by 13,000 lbs.

27-00-07 AUTO SPEED BRAKE SYSTEM	
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 1,600 lbs. LANDING Reduce RWY ALLOWABLE LANDING WT by 15,000 lbs.

(M) PROCEDURES

1. Verify manual speed brake operation.

Note: For -900ER and aircraft 3774 -3777, lower flaps prior to moving speed brake lever beyond the FLIGHT DETENT position.

2. Pull and secure 'FLIGHT CONTROL AUTO SPEED BRAKE' circuit breaker B9 located on P6-2 Panel.
3. For ships 3701-3743, and all -900 aircraft, the Speed Brake Load Alleviation System is considered inoperative and must be deferred per [MEL 27-00-20A](#) (3701-3743), or [MEL 27-00-20B](#) (-900 aircraft) as applicable.

27-00-08 Flap Load Limiter System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
27-00-08A	Flap Load Limiter System (B737-800 aircraft except 3774 thru 3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided: 1. TAKEOFF – Flaps 25: Structural Takeoff Weight is restricted to 104,875 lbs (47,570 kg), 2. LANDING – Flaps 40: Structural Landing Weight is restricted to 93,995 lbs (42,635 kg), and 3. LANDING – Flaps 30: Structural Landing Weight is restricted to 104,875 lbs (47,570 kg).
27-00-08B	Flap Load Limiter System (B737-900ER) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided: 1. TAKEOFF – Flaps 25: Structural Takeoff Weight is restricted to 155,600 lbs (70,578 kg), 2. TAKEOFF – Flaps 10 and Flaps 15: Structural Takeoff Weight is restricted to 176,000 lbs (79,832 kg), 3. LANDING – Flaps 40: Structural Landing Weight is restricted to 105,800 lbs (47,990 kg), 4. LANDING – Flaps 30: Structural Landing Weight is restricted to 113,400 lbs (51,437 kg), and 5. LANDING – Flaps 15: Structural Landing Weight is restricted to 135,600 lbs (61,507 kg).
27-00-08C	Flap Load Limiter System (Aircraft 3774 thru 3777) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided: 1. TAKEOFF – Flaps 25: Structural Takeoff Weight is restricted to 105,000 lbs (47,627 kg), 2. TAKEOFF – Flaps 15: Structural Takeoff Weight is restricted to 135,800 lbs (61,597 kg), 3. LANDING – Flaps 40: Structural Landing Weight is restricted to 95,800 lbs (43,454 kg), and 4. LANDING – Flaps 30: Structural Landing Weight is restricted to 105,000 lbs (47,627 kg).

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-08A	Near Flap Position Indicator	Flap Load Limiter System INOP
27-00-08B	Near Flap Position Indicator	Flap Load Limiter System INOP
27-00-08C	Near Flap Position Indicator	Flap Load Limiter System INOP

CONTINUED ON NEXT PAGE

(O) PROCEDURES

27-00-08A

27-00-08A	FLAP LOAD LIMITER SYSTEM
EFFECTIVITY	-800 aircraft except 3774 thru 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF – Flaps 25 Structural Takeoff Weight is restricted to 104,875 lbs. LANDING – Flaps 40 Structural Landing Weight is restricted to 93,995 lbs. LANDING – Flaps 30 Structural Landing Weight is restricted to 104,875 lbs.

27-00-08B

27-00-08B	FLAP LOAD LIMITER SYSTEM
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF – Flaps 25 Structural Takeoff Weight is restricted to 155,600 lbs. TAKEOFF – Flaps 10 and Flaps 15 Structural Takeoff Weight is restricted to 176,000 lbs. LANDING – Flaps 40 Structural Landing Weight is restricted to 105,800 lbs. LANDING – Flaps 30 Structural Landing Weight is restricted to 113,400 lbs. LANDING – Flaps 15 Structural Landing Weight is restricted to 135,600 lbs.

27-00-08C

27-00-08C	FLAP LOAD LIMITER SYSTEM
EFFECTIVITY	Aircraft 3774 thru 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF – Flaps 25 Structural Takeoff Weight is restricted to 105,000 lbs. TAKEOFF – Flaps 15 Structural Takeoff Weight is restricted to 135,800 lbs. LANDING – Flaps 40 Structural Landing Weight is restricted to 95,800 lbs. LANDING – Flaps 30 Structural Landing Weight is restricted to 105,000 lbs.

27-00-10 FEEL DIFF PRESS Light System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS
27-00-10	FEEL DIFF PRESS Light System	N 1	0 B	(M) May be inoperative provided elevator feel system is verified to operate normally ONCE EACH FLIGHT DAY (Log Book Entry Required). Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-10	Elevator FEEL DIFF PRESS Light	Elevator FEEL DIFF PRESS Light INOP

(M) PROCEDURES

ONCE EACH FLIGHT DAY:


Verify that the feel system is operative:

1. On -900ER aircraft only, pull ELEVATOR FEEL LIMIT circuit breaker on the P6-2 panel.
2. Pressurize the elevator hydraulic systems A and B.

CAUTION MAKE SURE PERSONNEL ARE CLEAR OF THE HORIZONTAL TAIL AND ARE AWARE THAT HYDRAULIC SYSTEMS ARE PRESSURIZED.

3. Use the stabilizer trim switches to set the stabilizer to 4 units of trim.
4. Set the FLT CONTROL A and B switches to OFF.

Figure 27-1: Stabilizer Trim Jack Screw

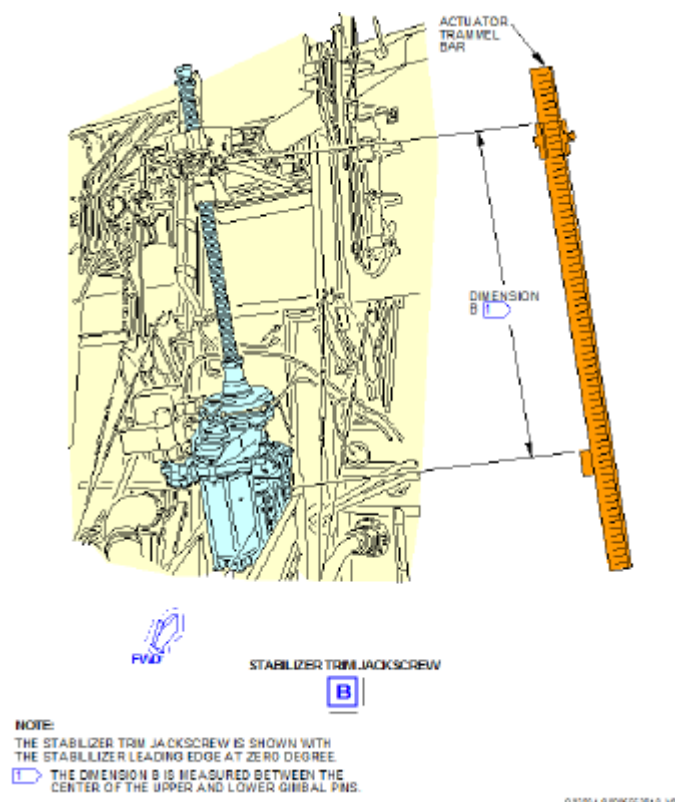

5. Verify that the horizontal stabilizer "B" dimension is 39.89 ± 0.01 inches. Ref [AMM Task 22-11-00-820-805](#).
6. Set Mach trim actuator at null position. Ref [AMM Task 27-31-00-700-814](#).
7. Check for pressure leakage in feel pitot system as follows using either an Air Data Test Set or Regulator. Ref [AMM Task 27-31-17-790-801](#):
 - A. With Air Data Test Set: (requires 2 Pitot Test adapters)
 - i. Remove the restrictor valves from the bottom of the system A and B pitot lines.

Note: The pitot lines are located below the elevator feel computer.

- ii. Install plugs over the ends of the pitot lines. (MS21913W6 PLUG or equivalent)
- iii. Connect the pressure lines from the Air Data Test Set to both pitot probes on the vertical fin.
- iv. Pressurize the pitot system to 4.8 ± 0.1 psi (429 ± 4 knots).

CAUTION DO NOT RAISE TEST PRESSURE ABOVE 5.0 PSI (437 KNOTS) AT ANY TIME DURING TEST.

- v. Turn the shutoff valve in the Air Data Test Set to off.
 - vi. Make sure the pressure does not decrease more than 0.3 psi (12 knots) during a 2-minute period.
 - vii. Reduce the pitot pressure to zero.
- B. With Regulator: (requires 2 Pitot Test adapters)
- i. Remove the restrictor valves from the bottom of the system A and B pitot lines.

Note: The pitot lines are located below the elevator feel computer.

- ii. Connect the pressure gage lines from the air pressure regulator to the drain holes of the pitot lines.
- iii. Connect the pressure lines from the air pressure regulator to both pitot probes on the vertical fin.
- iv. Pressurize the pitot system to 4.8 ± 0.1 psi (429 ± 4 knots).

CAUTION DO NOT RAISE TEST PRESSURE ABOVE 5.0 PSI (437 KNOTS) AT ANY TIME DURING TEST.

- v. Turn the shutoff valve in the air pressure Regulator to off.
 - vi. Make sure the pressure does not decrease more than 0.3 psi (12 knots) during a 2-minute period.
 - vii. Reduce the pitot pressure to zero.
8. Set the FLT CONTROL A and B switches to ON.
 9. Pressurize the pitot system to 2.47 ± 0.05 psi (315 ± 3 knots).

CAUTION DO NOT RAISE TEST PRESSURE ABOVE 5.0 PSI (437 KNOTS) AT ANY TIME DURING TEST.

10. Apply masking tape on the tail cone along the direction of the right elevator trailing edge travel.

Note: Elevator travel measuring tool may be used in lieu of tape method. Ref [AMM Task 27-31-81-400-801](#)

11. Move the captain's control column lightly to put the elevator system in the neutral position.

Note: Make sure that the control columns are not disturbed from this position during the next step.

12. Mark the actual elevator trailing edge neutral position on the masking tape.
13. Set FLT CONTROL B switch to OFF and leave FLT CONTROL A switch in the ON position.
14. Move the captain's control column slowly with a push/pull type spring scale applied to the center of the control wheel to the elevator positions as shown in the table below.

Note: Make sure the force to hold the control column is as shown in the table below.

ELEVATOR POSITION	COLUMN FORCE
1.20 $\pm$ 0.05 inches up	38.0 $\pm$ 4.0 lbs
1.20 $\pm$ 0.05 inches down	38.0 $\pm$ 4.0 lbs

15. Position FLT CONTROL A switch to OFF and FLT CONTROL B switch to ON.
16. Do step 14 again.
17. Restore the airplane to its usual condition:
 - A. Ensure that all tools used during testing are removed.
 - B. Remove all masking tape.
 - C. Remove the pressure gage lines from systems A and B drain lines if Regulator was used.
 - D. Remove drain plugs from systems A and B drain lines if Air Data Test Set was used.
 - E. Install the restrictor valves to the systems A and B drain lines.
 - F. Remove pressure lines from both vertical fin pitot probes.
 - G. Remove Pitot Test Adapters from both vertical fin pitot probes.

	737 Minimum Equipment List 27 Flight Controls	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

- H. Close all circuit breakers opened during testing. On -900ER aircraft only, close ELEVATOR FEEL LIMIT circuit breaker on the P6-2 panel.
- I. Restore aircraft to normal hydraulic configuration.
- J. Remove electrical power if no longer required.

 [Link to Learning Video](#)

27-00-11 Auto Slat Fail Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	N		C	REMARKS OR EXCEPTIONS
27-00-11	Auto Slat Fail Light System	N	1	C	(M) May be inoperative provided: 1. Auto slat systems are verified to operate normally, and 2. Verification is repeated EVERY TWO FLIGHT DAYS. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-11	AUTO SLAT FAIL Light	Auto Slat Fail Light INOP

(M) PROCEDURES

EVERY TWO FLIGHT DAYS:

Verify that the Stall Management Yaw Damper Computers (SMYD) located on the E3 Electronic Shelf do not have any faults stored.

1. Open the electronic equipment access door.
2. Do the EXISTING FAULTS test on the SMYD BITE:
 - A. Push the ON/OFF switch.
 - B. Push the YES switch when the display shows EXISTING FAULTS? Make sure the display shows NO FAULTS.
 - C. Push the MENU switch.
 - D. Push the ON/OFF switch.
3. Close the electronic equipment access door.

27-00-12 Auto Slat Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
27-00-12	Auto Slat Systems	Y	2	1	C	(O) May be inoperative provided: 1. Remaining auto slat system is checked to operate normally, and 2. Auto slat fail light operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-12	AUTO SLAT FAIL Light	____ Auto Slat Fail System INOP

(O) PROCEDURES

Isolate Inoperative Auto Slat System:

1. Pull the AUTO SLAT NO. 1 DC circuit breaker for the Number 1 system, located on the P6-2 Panel.
2. Verify that the remaining auto slat system and AUTO SLAT FAIL light operate normally as follows:
 - A. Press and release a system annunciator panel on the lightshield. AUTO SLAT FAIL light, FLT CONT annunciator and MASTER CAUTION light will illuminate.
 - B. Press and release a MASTER CAUTION light on the lightshield. AUTO SLAT FAIL light, FLT CONT annunciator and MASTER CAUTION light will extinguish.
 - C. Illumination of the affected lights when recalled and extinguishing when reset verifies that remaining auto slat system and the AUTO SLAT FAIL light operate normally.
 - i. If Number 2 system operates normally, proceed to step 3 to determine whether system Number 1 is inoperative.
 - ii. If Number 2 is verified to be inoperative, reset AUTO SLAT NO. 1 DC circuit breaker, pull and secure the AUTO SLAT NO. 2 DC circuit breaker, and placard accordingly. Do not proceed to step 3.
3. Pull the AUTO SLAT NO. 2 DC circuit breaker for the Number 2 system, located on the P6-2 Panel.
4. Verify that the remaining auto slat system and AUTO SLAT FAIL light operate normally as follows:
 - A. Press and release a system annunciator panel on the lightshield. AUTO SLAT FAIL light, FLT CONT annunciator and MASTER CAUTION light will illuminate.
 - B. Press and release a MASTER CAUTION light on the lightshield. AUTO SLAT FAIL light, FLT CONT annunciator and MASTER CAUTION light will extinguish.
 - C. Illumination of the affected lights when recalled and extinguishing when reset verifies that remaining auto slat system and the AUTO SLAT FAIL light operate normally.
 - i. If Number 1 is verified to be inoperative, reset the AUTO SLAT NO. 2 DC circuit breaker, pull and secure the AUTO SLAT NO. 1 DC circuit breaker, and placard accordingly.

27-00-14 Rudder Trim Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
27-00-14	Rudder Trim Indicator	Y	1	C	(O) May be inoperative provided: 1. Rudder trim actuator is checked to operate normally, and 2. Rudder trim is checked to be centered PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-14	Rudder Trim Indicator	Rudder Trim Indicator INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE:

1. Pressurize rudder hydraulic systems A and B.
2. Do a test of the rudder trim actuator:
 - A. Turn the rudder trim knob to the NOSE LEFT position.
 - B. Observe that the captain's left rudder pedal moves forward and right rudder pedal moves aft.
 - C. Turn the rudder trim knob to the NOSE RIGHT position.
 - D. Observe that captain's left rudder pedal moves aft and right rudder pedal moves forward.
3. Do a test of the rudder trim centering:
 - A. Turn the rudder trim knob in appropriate direction until the captain's rudder pedals are aligned with each other.
 - B. Make sure that the rudder is centered (in the neutral position). If not, use rudder trim until rudder is centered.

27-00-16 SPEED BRAKES EXTENDED Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
27-00-16	SPEED BRAKES EXTENDED Light	Y		1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-16	SPEED BRAKES EXTENDED Light	SPEED BRAKES EXTENDED Light INOP

(M) PROCEDURES

1. Hydraulic Power on.
2. Verify that wheel chocks are in place.
3. Place the SPEED BRAKE lever in the DOWN position.
4. Visually verify that flight and ground spoilers are all down.
5. Place SPEED BRAKE lever in the FLIGHT DETENT.
6. Visually verify that ground spoilers and flight spoilers deploy.
7. Place SPEED BRAKE lever in the DOWN position.
8. Visually verify that flight and ground spoilers are all down.
9. Verify that stabilizer trim is in the green band.
10. Position flaps to a takeoff position.
11. Release the parking brake.
12. Advance both thrust levers beyond 60 degrees.
13. Verify that Takeoff Configuration Warning Horn does not sound.
14. Retard thrust levers to idle.
15. Return airplane to its normal configuration, i.e., set parking brake and retract flaps.
16. If the SPEEDBRAKES EXTENDED light remains illuminated while on the ground, extinguish it by removing the light bulb OR cover the light.

27-00-17 Wheel To Rudder Interconnect System (WTRIS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
27-00-17	Wheel to Rudder Interconnect System (WTRIS)	Y	1	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-17	Flight Control A/B Hydraulic Switches	Wheel to Rudder Interconnect System INOP

27-00-20 Speed Brake Load Alleviation System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
27-00-20A	Speed Brake Load Alleviation System (B737-800 Ships 3701-3743) "DISP.APPR.REQ'D"	Y	1	0	C
					(O) (M) May be inoperative provided : - Speedbrake handle forces are normal from the full down to the full up position, - Airspeed does not exceed 265 KIAS when the inflight gross weight is in excess of 155,000 lbs. (70,306 kg.), - Severe turbulent air penetration speed is 265 KIAS or 0.76 Mach, whichever is lower, when the inflight gross weight is in excess of 155,000 lbs. (70,306 kg.), - Aircraft is not operated within the boundaries of a Critical Terrain Box, and - Automatic Speed Brake System is considered inoperative and deferred per MEL 27-00-07. Note: Refer to MEL Item 27-00-07 (Auto Speed Brake System) Theater Restrictions May Apply OR
		Y	1	0	C
					(O) (M) May be inoperative provided: - Speedbrake handle forces are normal from the full down to the full up position, and - Takeoff weight does not exceed 155,500 lbs. (70,533 kg.).
27-00-20B	Speed Brake Load Alleviation System (B737-900ER) "DISP.APPR.REQ'D"	Y	1	0	C
					(O) (M) May be inoperative provided : - Speedbrake handle forces are normal from the full down to the full up position, - Airspeed does not exceed 265 KIAS when the inflight gross weight is in excess of 170,000 lbs. (77,110 kg.), - Severe turbulent air penetration speed is 265 KIAS or 0.76 Mach, whichever is lower, when the inflight gross weight is in excess of 170,000 lbs. (77,110 kg.), - Aircraft is not operated within the boundaries of a Critical Terrain Box, and - Automatic Speed Brake System is considered inoperative and deferred per MEL 27-00-07. Note: Refer to MEL Item 27-00-07 (Auto Speed Brake System) Theater Restrictions May Apply OR
		Y	1	0	C
					(O) (M) May be inoperative provided: - Speedbrake handle forces are normal from the full down to the full up position, and - Takeoff weight does not exceed 170,500 lbs. (77,337 kg.).

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-20A	Spoiler Handle	Speed Brake Load Alleviation System INOP
27-00-20B	Spoiler Handle	Speed Brake Load Alleviation System INOP

(O) PROCEDURES

27-00-20A, 27-00-20B

For Airspeed limitation items;

Program KIAS/Mach speed restriction in FMS.

Refer to [MEL 27-00-07](#) for procedures applicable to the automatic speed brake system if necessary.

27-00-20A	SPEED BRAKE LOAD ALLEVIATION SYSTEM *USE WITH AIRSPEED LIMITATION*
EFFECTIVITY	-800 Except Aircraft 3744-3777
FLIGHT PLANNING REQUIREMENTS	Airspeed does not exceed 265 KIAS when inflight gross weight is in excess of 155,000 lbs.
NOTES	None
AWABS	Airspeed does not exceed 265 KIAS when inflight gross weight is in excess of 155,000 lbs.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

27-00-20A	SPEED BRAKE LOAD ALLEVIATION SYSTEM *USE WITH TAKEOFF WEIGHT LIMITATION*
EFFECTIVITY	-800 Except Aircraft 3744-3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS (Manual Weight & Balance Worksheet only) Enter Structural Takeoff Weight of 155,500 lbs. under Aircraft Weight Limitations.

27-00-20B	SPEED BRAKE LOAD ALLEVIATION SYSTEM *USE WITH AIRSPEED LIMITATION*
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Airspeed does not exceed 265 KIAS when inflight gross weight is in excess of 170,000 lbs.
NOTES	None
AWABS	Airspeed does not exceed 265 KIAS when inflight gross weight is in excess of 170,000 lbs.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

27-00-20B		SPEED BRAKE LOAD ALLEVIATION SYSTEM *USE WITH TAKEOFF WEIGHT LIMITATION*
EFFECTIVITY	-900ER	
FLIGHT PLANNING REQUIREMENTS	None	
NOTES	None	
AWABS	Performance corrections have been applied.	
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS (Manual Weight & Balance Worksheet only) Enter Structural Takeoff Weight of 170,500 lbs. under Aircraft Weight Limitations.	

(M) PROCEDURES

27-00-20A, 27-00-20B

1. Pull and secure 'SPDBRK AUTOSTOW' circuit breaker A10 located on P6-2 Panel.

27-00-21 STBY RUD ON Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
27-00-21	STBY RUD ON Light	Y	1	0	C
(O) (M) May be inoperative provided: 1. Rudder is verified to operate normally on hydraulic system A and B independently, 2. Standby hydraulic pump is verified to operate normally, and 3. Rudder force fight monitor is deactivated.					

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-21	Near STBY RUD ON Light	STBY RUD ON Light INOP

(O) PROCEDURES

1. Verify that the rudder operates normal on hydraulic system A and B:
 - A. Pressurize hydraulic systems A and B.
 - B. Set FLT CONTROL A switch ON and FLT CONTROL B switch OFF.
 - C. Verify normal rudder pedal forces by pushing captain's left rudder pedal forward (while holding tiller to prevent tire scrub) until it touches the stop and hold.
 - D. Have ground observer confirm that rudder travels left.
 - E. Release left rudder pedal and verify normal rudder pedal forces by pushing the captain's right rudder pedal forward (while holding tiller to prevent tire scrub) until it touches the stop and hold.
 - F. Have ground observer confirm the rudder travels right.
 - G. Release captain's right rudder pedal.
 - H. Have ground observer confirm that rudder returns to neutral.
 - I. Set FLT CONTROL B switch ON and FLT CONTROL A switch OFF.
 - J. Repeat steps C through H above.
2. Verify that the standby hydraulic pump is operating normally by either:
 - A. Verifying that the standby hydraulic pump can be heard turning on then either FLT CONTROL A or B switches are placed in the STBY RUD position. OR
 - B. With one FLT CONTROL switch placed in the STBY RUD position (other FLT CONTROL switch OFF), repeat steps 1 C through 1 H above.
3. Return FLT CONTROL switches to normal position for flight.

(M) PROCEDURES

Open and collar the FORCE FIGHT MON circuit breaker on the P6-2 panel.

Note: If the STBY RUD ON light is inoperative ON, verify light extinguishes after pulling circuit breaker.

27-00-23 Elevator Tab Control Springs

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS	
27-00-23	Elevator Tab Control Springs	N	4	3	A (M) One may be broken or missing per elevator provided: 1. Broken spring is removed, and 2. Repairs are made within 10 flight days.

MEL ITEM	TAB LOCATION	PLACARD TEXT
27-00-23	Logbook	ELEVATOR TAB CONTROL SPRING MISSING / REMOVED

(M) PROCEDURES

Remove the broken spring and verify the remaining springs are in place and not broken, and perform the tab mechanism inspections per [AMM Task 27-31-00-220-802](#).

Perform elevator tab operational test per [AMM Task 27-31-00-700-815](#).

28 Fuel

Table of Contents

28-00-01	Fuel Boost Pumps (Main Tanks)
28-00-01A	Fuel Boost Pumps (Main Tanks) Aft Pumps
28-00-01B	Fuel Boost Pumps (Main Tanks) Forward Pumps
28-00-02	Fuel Boost Pumps (Center Tank)
28-00-02A	Fuel Boost Pumps (Center Tank)
28-00-02B	Fuel Boost Pumps (Center Tank)
28-00-02C	Fuel Boost Pumps (Center Tank)
28-00-02D	Universal Fault Interrupter (UFI)
28-00-03	Fuel Boost Pump Low Pressure Warning Light System
	FUEL BOOST PUMP LOW PRESSURE WARNING LIGHT SYSTEMS
28-00-03A	Main Tank Pump Low Pressure Warning Light Systems
28-00-03B	Main Tank Pump Lights
28-00-03C	Main Tank Pump Lights
28-00-03D	Center Tank Pump Low Pressure Warning Light Systems
28-00-03E	Center Tank Pump Low Pressure Warning Light Systems
28-00-03F	Center Tank Pump Lights
28-00-04	APU Fuel Valve
28-00-04	APU Fuel Valve
28-00-05	Crossfeed VALVE OPEN Light
28-00-05	Crossfeed VALVE OPEN Light
28-00-06	Flight Deck Fuel Quantity Indicators (Main Tanks)
28-00-06	Flight Deck Fuel Quantity Indicators (Main Tanks)
28-00-07	Flight Deck Fuel Quantity Indicator (Center Tank)
28-00-07A	Flight Deck Fuel Quantity Indicator (Center Tank)
28-00-07B	Flight Deck Fuel Quantity Indicator (Center Tank)
28-00-08	Fuel Temperature Indicator
28-00-08	Fuel Temperature Indicator
28-00-09	Fuel Quantity Totalizer
28-00-09	Fuel Quantity Totalizer
28-00-10	Pressure Fueling System
28-00-10A	Pressure Fueling System
28-00-10B	Fueling Manifold Check Valves
28-00-10C	Fueling Shutoff Valves
28-00-10D	Refuel Panel Fueling Power Control Switch
28-00-12	Refueling Control Panel Quantity Indicators
28-00-12	Refueling Control Panel Quantity Indicators
28-00-16	Fuel Measuring Sticks / Dripsticks
28-00-16	Fuel Measuring Sticks / Dripsticks
28-00-21	Fuel Quantity Test Switch
28-00-21	Fuel Quantity Test Switch

28-00-22 SPAR VALVE CLOSED Lights

28-00-22 SPAR VALVE CLOSED Lights

28-00-25 Center Tank Fuel Boost Pump Automatic Shutoff System

28-00-25A Center Tank Fuel Boost Pump Automatic Shutoff System

28-00-25B Center Tank Fuel Boost Pump Automatic Shutoff System

28-00-25C Center Tank Fuel Boost Pump Automatic Shutoff System

28-00-26 Fuel Shutoff Valve Battery and Charger (Engine Spar Valve)

28-00-26 Fuel Shutoff Valve Battery and Charger (Engine Spar Valve)

28-00-01 Fuel Boost Pumps (Main Tanks)

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-01A	Fuel Boost Pumps (Main Tanks) Aft Pumps "DISP.APPR.REQ'D"	N	2	1	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Both main tank forward pumps operates normally, 2. At start of takeoff, fuel quantity in associated tank is not less 7,500 lb., 3. A minimum fuel quantity of 2,500 lb. is maintained in associated tank and fuel is considered unusable, and 4. Boost pump is deactivated. Note: Observe the Flight Manual limitations concerning lateral fuel imbalance. Plan fuel load to allow for the appropriate minimum fuel. Range and/or payload restrictions may result.
28-00-01B	Fuel Boost Pumps (Main Tanks) Forward Pumps "DISP.APPR.REQ'D"	N	2	1	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Both main tank aft pumps operates normally, 2. At start of takeoff, fuel quantity in associated tank is not less 4,800 lb., 3. A minimum fuel quantity of 1,800 lb. is maintained in associated tank and fuel is considered unusable, and 4. Boost pump is deactivated. Note: Observe the Flight Manual limitations concerning lateral fuel imbalance. Plan fuel load to allow for the appropriate minimum fuel. Range and/or payload restrictions may result.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-01A	Associated Fuel Boost Pump Switch	____ Main Tank AFT Fuel Boost Pump INOP
28-00-01B	Associated Fuel Boost Pump Switch	____ Main Tank FWD Fuel Boost Pump INOP

(O) PROCEDURES

28-00-01A, 28-00-01B

1. Turn the affected boost pump switch (overhead panel) OFF.

Note: Flight Manual Limitations concerning lateral fuel imbalance must be observed.

2. The minimum fuel requirements for affected boost pump will assure that the operative boost pump and suction feed inlet remain submerged during rotation to high nose up attitudes during takeoff or go around. In the event the second boost pump in a tank fails, the engine will operate satisfactorily on suction feed. With both tank 1 boost pumps inoperative, APU operation may become unreliable at altitudes above 25,000 feet.

Note: At high altitude, thrust deterioration or engine flameout may occur without fuel pump boost pressure.

(M) PROCEDURES

28-00-01A, 28-00-01B

Pull and secure the affected boost pump circuit breaker on the P91/P92 Distribution Panel located in the E & E Compartment.

28-00-02 Fuel Boost Pumps (Center Tank)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-02A	Fuel Boost Pumps (Center Tank) "DISP.APPR.REQ'D"	N	2	1	C (M) May be inoperative provided: 1. Tank remains empty, and 2. Boost pump is deactivated.
28-00-02B	Fuel Boost Pumps (Center Tank) "DISP.APPR.REQ'D"	N	2	1	C (O) (M) May be inoperative with center tank fueled provided: 1. Fuel quantity remaining in main wing tanks is adequate to reach a suitable airport if remaining center pump fails at any time, 2. Maximum zero fuel weight limit is reduced by center tank fuel weight, 3. Effect on aircraft balance, in event fuel cannot be used is accounted for, 4. Low PRESS light of operating center fuel tank pump operates normally, 5. Center tank quantity indication operates normally, and 6. Boost pump is deactivated.
28-00-02C	Fuel Boost Pumps (Center Tank) "DISP.APPR.REQ'D"	N	2	0	C (M) May be inoperative provided: 1. Center tank quantity indication operates normally, 2. Center tank remains empty or fuel is included as part of zero fuel weight and fuel must be considered unusable, and 3. Boost pump is deactivated. <i>Note: AFM fuel loading and usage limitations are for usable fuel.</i> <i>Note: Fuel loading limitations must be observed.</i>
28-00-02D	Universal Fault Interrupter (UFI) (For Ships 3701-3771) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) May be inoperative provided associated center tank boost pump is considered inoperative and deferred per MEL 28-00-02. <i>Note: Refer to MEL 28-00-02 Fuel Boost Pumps (Center Tank)</i> <i>Note: This item is AD related.</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-02A	Associated Fuel Boost Pump Switch	____ Center Tank Fuel Boost Pump INOP
28-00-02B	Associated Fuel Boost Pump Switch	____ Center Tank Fuel Boost Pump INOP
28-00-02C	Associated Fuel Boost Pump Switch	____ Center Tank Fuel Boost Pump(s) INOP
28-00-02D	Associated Fuel Boost Pump Switch	____ Universal Fault Interrupter INOP

(O) PROCEDURES

28-00-02B

1. Verify that the zero fuel weight and balance limitations have been accounted for.
2. Adjust the zero fuel weight of the airplane by including the weight of center fuel tank, or adjust the maximum zero fuel weight by subtracting the weight of center tank fuel.
3. Fuel usage takeoff condition:
 - A. Position the CROSSFEED selector to the closed position.

CONTINUED ON NEXT PAGE

	737 Minimum Equipment List 28 Fuel	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

- B. Position the AFT and FWD main tank FUEL PUMP switches to ON for all operating main pumps.
- 4. Verify that the operating center tank FUEL PUMP switch is in the OFF position.

Note: *Fuel CONFIG alert may be displayed with fuel in the center tank.*

- 5. After takeoff:
 - A. If the center tank contains usable fuel, position the operating center tank FUEL PUMP switch to ON.
 - B. Position the CROSSFEED selector to the open position.
- 6. When the center tank LOW PRESSURE light illuminates:
 - A. Position the operating center tank FUEL PUMP switch to OFF.
 - B. Position the CROSSFEED selector to the closed position.

Note: *Prior to the center tank LOW PRESSURE light illuminating, a fuel imbalance between the main tanks may be indicated as a result of differences in fuel pump output pressures when operating with the crossfeed valve open.*

- 7. For landing:
 - A. Position the operating center tank FUEL PUMP switch to OFF whether or not the center tank contains usable fuel.
 - B. Position the CROSSFEED selector to the closed position whether or not the center tank contains usable fuel.

28-00-02D

If one center tank fuel boost pump is considered inoperative, use MEL 28-00-02B (O) procedures.

(M) PROCEDURES

28-00-02A, 28-00-02B, 28-00-02C

- 1. Position the associated CTR FUEL switch OFF.
- 2. Pull and secure the associated center tank fuel pump circuit breaker on the Power Distribution Panel P91 or P92.

28-00-02D

Defer the center tank fuel boost pump(s) per MEL 28-00-02A, 28-00-02B or 28-00-02C as needed.

28-00-03 Fuel Boost Pump Low Pressure Warning Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
FUEL BOOST PUMP LOW PRESSURE WARNING LIGHT SYSTEMS					
28-00-03A	Main Tank Pump Low Pressure Warning Light Systems "DISP.APPR.REQ'D"	N	4	3	C
(O) (M) May be inoperative provided: 1. Associated fuel pump is considered inoperative and deferred per MEL 28-00-01, and 2. MASTER CAUTION lights and FUEL system annunciator light are verified to operate normally.					
28-00-03B	Main Tank Pump Lights	Y	4	3	C
May be inoperative provided: 1. Both pumps in associated tank operate normally, and 2. Associated tank quantity indicator operates normally.					
28-00-03C	Main Tank Pump Lights "DISP.APPR.REQ'D"	Y	4	3	C
May be inoperative for an associated inoperative pump.					
28-00-03D	Center Tank Pump Low Pressure Warning Light Systems "DISP.APPR.REQ'D"	N	2	1	C
(O) (M) May be inoperative provided: 1. Associated fuel pump is considered inoperative and deferred per MEL 28-00-02, and 2. MASTER CAUTION lights and FUEL system annunciator light are verified to operate normally.					
28-00-03E	Center Tank Pump Low Pressure Warning Light Systems "DISP.APPR.REQ'D"	Y	2	0	C
May be inoperative provided: 1. Center tank fuel is not required for flight, 2. Center tank fuel boost pumps are turned off, 3. Center tank remains empty or maximum zero fuel weight calculations are adjusted by weight of center tank fuel, and 4. Effect on aircraft balance is accounted for.					
28-00-03F	Center Tank Pump Lights	N	2	0	C
(O) (M) May be inoperative provided: 1. Center tank fuel quantity indicator operates normally, and 2. MASTER CAUTION lights and FUEL system annunciator light are verified to operate normally.					

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-03A	Associated Boost Pump Low Pressure Warning Light	____ Main Tank Fuel Boost Pump Low Pressure Warning Lights System INOP
28-00-03B	Affected Boost Pump Low Pressure Warning Light	____ Main Tank Fuel Boost Pump Low Pressure Warning Light(s) INOP
28-00-03C	Affected Boost Pump Low Pressure Warning Light	____ Main Tank Fuel Boost Pump Low Pressure Warning Lights System INOP
28-00-03D	Associated Boost Pump Low Pressure Warning Light	____ Center Tank Fuel Boost Pump Low Pressure Warning Lights System INOP
28-00-03E	Affected Boost Pump Low Pressure Warning Light(s)	____ Center Tank Fuel Boost Pump Low pressure Warning Light(s) INOP
28-00-03F	Affected Boost Pump Low Pressure Warning Light(s)	____ Center Tank Fuel Boost Pump Low pressure Warning Light(s) INOP

(O) PROCEDURES

28-00-03A

Observe [MEL Item 28-00-01](#) REMARKS OR EXCEPTIONS requirements and the Operational requirements when dispatching with a fuel boost pump low pressure warning system inoperative and the associated fuel pump is not used.

28-00-03D

Observe [MEL Item 28-00-02](#) REMARKS OR EXCEPTIONS requirements and the Operational requirements when dispatching with a fuel boost pump low pressure warning system inoperative and the associated fuel pump is not used.

28-00-03F

When dispatching with one or both center tank fuel pump LOW PRESSURE lights inoperative and center tank fuel is to be used, position the two CTR FUEL PUMPS switches to OFF when both the MASTER CAUTION lights and the FUEL system annunciator panel light illuminate as a result of center tank fuel depletion.

(M) PROCEDURES

28-00-03A

Verify the MASTER CAUTION lights and FUEL system annunciator light operate normally in affected main tank.

1. Reset the MASTER CAUTION lights by pressing either Master Caution light module.
2. Set fuel boost pump switches in affected fuel tank to OFF.
3. Confirm MASTER CAUTION lights and FUEL system annunciator panel light illuminate.

28-00-03D

Verify the MASTER CAUTION lights and FUEL system annunciator light operate normally.

1. (Ships 3701-3771, 3774-3777)
 - A. Set the two CTR FUEL PUMPS switches to OFF.
 - B. Pull and secure the associated circuit breakers for both center pumps on Power Distribution Panel P91 and P92.
 - C. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
 - D. Set the two CTR FUEL PUMPS switches to ON.
 - E. Confirm MASTER CAUTION lights and FUEL system annunciator panel light illuminate.
 - F. Set the two CTR FUEL PUMPS switches to OFF.
 - G. Close the associated circuit breakers for both center pumps on Power Distribution Panel P91 and P92.
 - H. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
2. (Ships 3772, 3773, 3801-3963)
 - A. Set the two CTR FUEL PUMPS switches to OFF.
 - B. Pull and secure the operational center tank fuel boost pump circuit breaker for the center tank pump on Power Distribution Panel P91 or P92.

	737 Minimum Equipment List 28 Fuel	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

- C. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
- D. Set the operational center tank fuel boost pump switch to ON.
- E. Confirm MASTER CAUTION lights and FUEL system annunciator panel light illuminate after approximately 10 seconds.
- F. Set the operational center tank fuel boost pump switch to OFF.
- G. Close the operational center tank fuel boost pump circuit breaker on Power Distribution Panel P91 or P92.
- H. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.

28-00-03F

When dispatching with one or both center tank fuel pump LOW PRESSURE lights inoperative and center tank fuel is to be used, the MASTER CAUTION lights and FUEL system annunciator panel light must illuminate when center tank fuel is depleted.

Verify the MASTER CAUTION lights and FUEL system annunciator light operate normally ([AMM 28-00-00/901](#)).

1. (Ships 3701-3771, 3774-3777)
 - A. Set the two CTR FUEL PUMPS switches to OFF.
 - B. Pull and secure the associated circuit breakers for both center pumps on Power Distribution Panel P91 and P92.
 - C. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
 - D. Set the two CTR FUEL PUMPS switches to ON.
 - E. Confirm that MASTER CAUTION lights and FUEL system annunciator panel light illuminate.
 - F. Set the two CTR FUEL PUMPS switches to OFF.
 - G. Close the associated circuit breakers for both center pumps on Power Distribution Panel P91 and P92.
 - H. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
2. (Ships 3772, 3773, 3801-3963)
 - A. Set the two CTR FUEL PUMPS switches to OFF.
 - B. Pull and secure the associated center tank fuel boost pump circuit breaker for the center tank pump on Power Distribution Panel P91 or P92.
 - C. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.
 - D. Set the associated center tank fuel boost pump switch to ON.
 - E. Confirm MASTER CAUTION lights and FUEL system annunciator panel light illuminate after approximately 10 seconds.
 - F. Set the associated center tank fuel boost pump switch to OFF.
 - G. Close the associated circuit breaker on Power Distribution Panel P91 or P92.
 - H. Reset MASTER CAUTION lights by pressing either MASTER CAUTION light module.

28-00-04 APU Fuel Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-04	APU Fuel Valve "DISP.APPR.REQ'D"	N	1	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. APU is not used, and 2. Valve is deactivated closed.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-04	APU Start Switch	1. APU Fuel Valve INOP 2. Do NOT Use APU

(O) PROCEDURES

1. Dispatch is not allowed if the APU is required by other procedures.
2. APU must not be started.

(M) PROCEDURES

Deactivate the APU fuel shutoff valve:

1. Pull and secure the following circuit breakers on the P6 Panel:
 - A. AUX POWER UNIT CONT
 - B. APU FIRE SW POWER
2. Locate valve on the left wing rear spar in the wheel well.
3. Remove, cap and stow the electrical connector.
4. If necessary, use manual override handle to close valve.
5. Lockwire manual override handle in closed position.

28-00-05 Crossfeed VALVE OPEN Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-05	Crossfeed VALVE OPEN Light “DISP.APPR.REQ'D”	N	1	0	C (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Crossfeed valve is verified to operate normally, and 2. Fuel quantity indication for both main tanks operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-05	Fuel Crossfeed VALVE OPEN Light	Fuel Crossfeed VALVE OPEN Light INOP

(M) PROCEDURES

1. Gain access to the crossfeed valve located on the right wing rear spar. Access is through the right wheel well.
2. Observe that the position indicator (manual override) handle indicates proper position as the valve switch is activated.
3. Both Main Tank fuel quantity indicators must operate normally for dispatch with the Crossfeed valve open light inoperative.

28-00-06 Flight Deck Fuel Quantity Indicators (Main Tanks)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-06	Flight Deck Fuel Quantity Indicators (Main Tanks) "DISP.APPR.REQ'D"	Y	2	1 C	(O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. All boost pumps in associated tank operate normally, 2. Fuel flow meters operate normally, 3. Center tank indicator operates normally, 4. Flight crew periodically computes fuel remaining, and 5. Fuel quantity in associated tank is verified by an alternate means PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-06	Main Tank Fuel Quantity Indicator	Cockpit Main Tank Fuel Quantity Indicator INOP

Note: Inoperative flight deck fuel quantity indications may also affect refueling control panel quantity indications. Refer to [MEL Item 28-00-12](#) for inoperative refueling control panel quantity indications.

Note: Fuel LOW alert and fuel IMBAL alert may not be displayed when appropriate.

Note: The Fuel Quantity Indication Sysytem (FQIS) sends a "no valid data" signal to the FMC when a fuel quantity system error is sensed (dashes on indicator). When dashes are present, deactivation of the FQIS input to the FMC is not required. Flight crews can manually enter current fuel on board via the FMC PERF INIT page to calculate reference speeds and fuel remaining at destination. Periodic manual updating is required for information to remain valid.

Note: Flight crews may placard fuel quantities that display dashes on the PERF INIT page. Fuel quantities that are intermittent or reading erroneously (high or low), will require maintenance and the flight crew may not placard (see (M) procedures).

(O) PROCEDURES

1. Gross weight calculations will be erroneous until the current fuel on board (FOB) and Zero Fuel Weight (ZFW) are entered via the FMC Performance Page. Once FOB and ZFW are entered, the Flap Maneuvering Speeds on the speed tape, fuel remaining at destination, and additional FMC data will be valid. Periodic updating of the current FOB is required for FMC information to remain valid.

Note: Fuel On Board is automatically displayed and cannot be over written by pilot unless fuel quantity indication displays dashes.

Note: For optimum use of VNAV during climb out and descent, the fuel on board should be updated just prior to takeoff and at the top of descent.

2. Fuel flow meters will keep track of the fuel burn and is intended to ensure that the pilot will notice an abnormal fuel feed situation and correct the resulting lateral unbalance. The following charts are examples of methods that accomplish this requirement and are valid with the crossfeed valve remaining closed or open. Operate with the crossfeed valve closed unless otherwise required.
3. The objective of the following chart is to assure that the fuel being consumed is coming from the intended tank. A verification of the fuel source can be made by comparing the fuel quantity change in 6 minutes to 1/10 of the fuel flow on the engine, or engines, feeding from that tank. For example, when using center tank fuel, if the rate of quantity decrease in the center tank is one half of the sum of the fuel flow for the engines, one engine is feeding from a wing tank.

METHOD I - AIRPLANES WITH FUEL USED INDICATORS:

	Example	Actual
1. Initial Fuel Load	28,000	
2. Fuel Remaining in tanks (Total)	7,000	
Tank 1	7,000	
Center	0	
Tank 2	INOP	
3. Fuel Used by Engines: (total)	13,300	
Engine #1	6,600	
Engine #2	6,700	
4. Fuel used by APU		
2hrs @ 150 lbs/hr	300	
5. Total Fuel used (3 plus 4)	13,600	
6. Total Fuel Accounted for (2 plus 5)	20,600	
7. Fuel Remaining (1 minus 6)	7,400	

METHOD II - AIRPLANES WITHOUT FUEL USED INDICATORS:

Compare the precomputed fuel remaining against the actual fuel remaining. If the differences are unaccounted for and exceed 1000 pounds, perform the appropriate procedures to re-establish the proper fuel distribution.

Initial Fuel Load 22,000

Fuel Quantity				
Checkpoints	Center (planed)	Wings (Planed)	Center (Actual)	Wings (Actual)
TAKEOFF	3200	9400		
TOP OF CLIMB	0	9000		
POINT A	0	7900		
POINT B	0	6800		
POINT C	0	5700		
POINT D	0	4600		
BEGIN DESCENT	0	3500		
BEGIN APPROACH	0	3100		

Computation of fuel remaining can stop at top of descent if it is obvious that one has adequate fuel remaining. If weather, ATC or other problems cause concern, continue taking fuel flow and time reading at appropriate intervals.

(M) PROCEDURES

1. Main Tank Fuel Quantity Intermittent, Erroneous Reading or Indication Showing Dashes:
 - If fuel quantity indication shows dashes, the fuel quantity indication system **will not** need to be deactivated. (Flight crew may placard)
 - If fuel quantity is intermittent, FMS inputs incorrect fuel into flight plan erasing crew entered fuel – fuel quantity **will** need to be deactivated. (maintenance will be required – flight crew may not placard)
 - If fuel quantity is reading erroneously high or low – fuel quantity **will** need to be deactivated. (maintenance will be required – flight crew may not placard)
2. Main Tank Deactivation / Reactivation:
 - Deactivate main tank fuel quantity [AMM Task 28-00-00-040-807](#) using harness, fuel quantity indication system deactivation tool (jumper harness MPN TER 92898).

Note: AMM calls for jumper harness COM-17017 MPN CN1159-003. TER92898 is a Delta equivalent and located in the tool room.

- Reactivation of main tank fuel quantity is per [AMM Task 28-00-00-440-803](#) when MEL is being cleared. Jumper harness will need to be returned to the tool room per the instructions on the tools ID tag.
3. PRIOR TO EACH DEPARTURE, verify alternate fueling procedures have been accomplished.
 4. For alternate fueling procedures, refer to the following sections of the [Fueling Procedures Manual](#):

- [B737.40](#) [B737 Inoperative Gauge](#)
- [B737.94.0](#) [B737-800 Stick Chart Procedures](#)
- [B737.94.X](#) [B737-800 Fuel Stick Charts \(charts for sticks 1-8\)](#)
- [B737.95.0](#) [B737-900ER Fuel Stick Chart Procedures](#)
- [B737.95.X](#) [B737-900ER Fuel Stick Charts \(charts for sticks 1-8\)](#)

 [Link to Learning Video](#)

28-00-07 Flight Deck Fuel Quantity Indicator (Center Tank)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-07A	Flight Deck Fuel Quantity Indicator (Center Tank) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) May be inoperative provided: 1. One center tank boost pump operates normally, 2. Center tank remains empty.
28-00-07B	Flight Deck Fuel Quantity Indicator (Center Tank) "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Both center tank boost pumps operate normally, 2. Fuel quantity in center tank is verified by an alternate means PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-07A	Center Tank Fuel Quantity Indicator	Cockpit Center Tank Fuel Quantity Indicator INOP
28-00-07B	Center Tank Fuel Quantity Indicator	Cockpit Center Tank Fuel Quantity Indicator INOP

Note: Inoperative flight deck fuel quantity indications may also affect refueling control panel quantity indications. Refer to [MEL Item 28-00-12](#) for inoperative refueling control panel quantity indications.

Note: The Fuel Quantity Indication System (FQIS) sends a "no valid data" signal to the FMC when a fuel quantity system error is sensed (dashes on indicator). When dashes are present, deactivation of the FQIS input to the FMC is not required. Flight crews can manually enter current fuel on board via the FMC PERF INIT page to calculate reference speeds and fuel remaining at destination. Periodic manual updating is required for information to remain valid.

Note: Flight crews may placard fuel quantities that display dashes on the PERF INIT page. Fuel quantities that are intermittent or reading erroneously (high or low), will require maintenance and the flight crew may not placard (see M procedures).

(O) PROCEDURES

28-00-07A

Note: Fuel On Board is automatically displayed and cannot be overwritten by the pilot unless fuel quantity indication displays dashes.

Note: The automatic flight VNAV mode will not be available.

Note: If VNAV capability is desired during approach, enter current fuel on-board into the FMC at top of descent.

28-00-07B

1. Verify fuel remaining in the center tank using the fuel used indicators or the operative tank indicators.
2. Gross weight calculations will be erroneous until the current fuel on board (FOB) and Zero Fuel Weight (ZFW) are entered via the FMC Performance Page. Once FOB and ZFW are entered, the Flap Maneuvering Speeds on the speed tape, fuel remaining at destination, and additional FMC data will be valid. Periodic updating of the current FOB is required for FMC information to remain valid.

Note: For optimum use of VNAV during climb out and descent, the fuel on board should be updated just prior to takeoff and at the top of descent.

	737 Minimum Equipment List 28 Fuel	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

(M) PROCEDURES

28-00-07A, 28-00-07B

1. Center Fuel Quantity: Intermittent, Erroneous Reading or Indication Showing Dashes
 - If fuel quantity indication shows dashes, the fuel quantity **will not** need to be deactivated. (Flight crew may placard)
 - If fuel quantity is intermittent, FMS inputs incorrect fuel into flight plan erasing crew entered fuel – Fuel quantity **will** need to be deactivated. (Maintenance will be required – flight crew may not placard)
 - If fuel quantity is reading erroneously high or low – Fuel quantity **will** need to be deactivated. (Maintenance will be required – flight crew may not placard)
2. Center Tank Deactivation / Reactivation
 - Deactivate center tank fuel quantity per [AMM Task 28-00-00-040-808](#) using harness, fuel quantity indication system deactivation tool (Jumper Harness MPN TER 92898). AMM Task calls for jumper harness COM-17017 MPN CN1159-003. (TER92898 is a Delta equivalent and located in the tool room)
 - Reactivation of center tank fuel quantity is per [AMM Task 28-00-00-440-804](#) when MEL is being cleared. Jumper harness will need to be returned to the tool room per the instructions on the tools ID tag.
3. For MEL 28-00-07B:
 - A. PRIOR TO EACH DEPARTURE, verify alternate fueling procedures have been accomplished.
 - B. For alternate fueling procedures, refer to the following sections of the [Fueling Procedures Manual](#):
4. For alternate fueling procedures, refer to the following sections of the [Fueling Procedures Manual](#):
 - [B737.40](#) [B737 Inoperative Gauge](#)
 - [B737.94.0](#) [B737-800 Stick Chart Procedures](#)
 - [B737.94.X](#) [B737-800 Fuel Stick Charts \(charts for sticks 1-8\)](#)
 - [B737.95.0](#) [B737-900ER Fuel Stick Chart Procedures](#)
 - [B737.95.X](#) [B737-900ER Fuel Stick Charts \(charts for sticks 1-8\)](#)

28-00-08 Fuel Temperature Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
28-00-08	Fuel Temperature Indicator	Y		0	C	May be inoperative provided Total Air Temperature or Ram Air Temperature is substituted as an indication of fuel temperature.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-08	Fuel Temperature Indicator	Fuel Temperature Indicator INOP

28-00-09 Fuel Quantity Totalizer

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-09	Fuel Quantity Totalizer	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-09	1. Fuel Totalizer Indicator 2. FMS CDU 3. AFCS MCP VNAV Mode Switch	1. Fuel Quantity Totalizer INOP 2. FMS Gross Weight Calculation INOP 3. AFCS VNAV Mode INOP

Note: The FMC CDU will display a VERIFY GW AND FUEL message if the FMC receives no data or receives a "no valid data" signal from the Fuel Quantity Processor Unit (FQPU). There is no need to deactivate the FQIS input to the FMC. Flight crews may manually enter current fuel on board via the FMC Performance Page to calculate reference speeds or fuel remaining at destination. Periodic manual updating is required for information to be valid.

Note: If VNAV capability is desired during approach, enter current fuel on board into FMC at top of decent.

28-00-10 Pressure Fueling System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-10A	Pressure Fueling System	Y	1	0	C (M) May be inoperative provided alternate procedures are used. Note: Flight Crew members may request ramp agents or fueling personnel to install the placard on Pressure Fueling Panel.
28-00-10B	Fueling Manifold Check Valves	N	-	0	C (M) May be inoperative provided associated fueling shutoff valve is verified to operate normally.
28-00-10C	Fueling Shutoff Valves	Y	3	0	C (M) May be inoperative closed provided: 1. The refuel valve is verified closed by pressurizing the fueling manifold to verify that fuel does not flow to the tank with the failed refuel valve, and 2. After removal of the fueling nozzle, check the fueling receptacle for leakage. Leakage is not allowed. Note: Flight Crew members may request ramp agents or fueling personnel to install the placard on Pressure Fueling Panel.
28-00-10D	Refuel Panel Fueling Power Control Switch	Y	1	0	C May be inoperative off provided refuel panel indicator test switch operates normally in AUX FUELING POWER CONTROL position or FUEL DOOR SWITCH BYPASS position, as applicable. Note: Flight Crew members may request ramp agents or fueling personnel to install the placard on Pressure Fueling Panel.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-10A	1. Cockpit Fuel System Panel 2. Pressure Fueling Panel	Pressure Fueling System INOP
28-00-10B	1. Cockpit Fuel System Panel 2. Pressure Fueling Panel	____ Fueling Manifold Check Valves INOP
28-00-10C	1. Cockpit Fuel System Panel 2. Pressure Fueling Panel	____ Fueling Shutoff Valve(s) INOP
28-00-10D	1. Cockpit Fuel System Panel 2. Pressure Fueling Panel	Refuel Panel Fueling Power Control Switch INOP

(M) PROCEDURES

28-00-10A, 28-00-10C

Fueling shutoff valve(s) and float switch(es) inoperative.

1. Verify that the fuel load for the associated tank does not exceed tank capacity.
2. Manually open fuel shutoff valve(s).

CAUTION

OVERFILL PROTECTION IS INOPERATIVE. THE PRESSURE FUELING SYSTEM WILL NOT STOP THE REFUEL OPERATION AT A SET FUEL QUANTITY. STOP THE FUELING SOURCE AT THE DESIRED QUANTITY FOR THE ASSOCIATED TANK.

3. Push manual override button

 DELTA	737 Minimum Equipment List 28 Fuel	Revision: 50.0.1 Date: 24-Apr-2026
--	---	---

4. Refuel the associated tank, release the manual override button at the desired fuel quantity. Refer to the [Fueling Procedures Manual](#), B737.20, B737 Pressure Refueling and B737.40, B737 Inoperative gauge.
5. Verify that the valve is closed.
6. Stop the fuel source pump and disconnect the refueling nozzle.
7. Verify that the fueling receptacle does not leak.

28-00-10B

1. Ensure that the associated fueling shutoff valve operates normally.
2. Observe that the associated valve's position light illuminates and extinguishes normally during refueling.
3. After refueling nozzle is disconnected, visually check for fuel leakage.

28-00-12 Refueling Control Panel Quantity Indicators

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-12	Refueling Control Panel Quantity Indicators "DISP.APPR.REQ'D"	Y	3	0	C (O) (M) May be inoperative provided fuel quantity in associated tank is verified by an alternate means PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-12	1. Cockpit Fuel System Panel 2. Affected Refuel Panel Indicator(s)	Refueling Control Panel ____ Tank Quantity Indicator(s) INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE, ensure receipt of a completed paper FSR.

(M) PROCEDURES

Note: Use of this MEL item is limited to deferral of malfunctioning fueling panel quantity indicators. If flight deck fuel quantity indications are also inoperative, use MEL item [28-00-06](#) for main tanks, [28-00-07A](#), or [28-00-07B](#) for center tank as applicable. Flight deck fuel quantity indications may be used as the alternate means to verify actual tank fuel quantity when dispatched under this MEL item.

1. PRIOR TO EACH DEPARTURE, verify alternate fueling procedures have been accomplished.
2. Install second MCO placard in a conspicuous location at the fueling station and place MCO tab on, or adjacent to, the inoperative indicator.
3. For alternate fueling procedures, refer to the following sections of the [Fueling Procedures Manual](#):

- [B737.40](#) [B737 Inoperative Gauge](#)
- [B737.94.0](#) [B737-800 Stick Chart Procedures](#)
- [B737.94.X](#) [B737-800 Fuel Stick Charts \(charts for sticks 1-8\)](#)
- [B737.95.0](#) [B737-900ER Fuel Stick Chart Procedures](#)
- [B737.95.X](#) [B737-900ER Fuel Stick Charts \(charts for sticks 1-8\)](#)

28-00-16 Fuel Measuring Sticks / Dripsticks

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-16	Fuel Measuring Sticks / Dripsticks	Y	-	C	(M) May be inoperative provided: 1. Fuel quantity is verified by an acceptable procedure, and 2. No evidence of fuel leakage exists.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-16	1. Cockpit Fuel System Panel 2. Associated Fuel Quantity Indicator on Refueling Panel	____ Fuel Measuring Sticks / Dripstick(s) INOP

(M) PROCEDURES

Note: Use the fuel quantity indicating system to fuel airplane. If fuel quantity indications are inoperative, refer to MEL item [28-00-06](#), [28-00-07A](#), or [28-00-12](#) as applicable.

28-00-21 Fuel Quantity Test Switch

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
28-00-21	Fuel Quantity Test Switch	Y		0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-21	Fuel Quantity Test Switch	Fuel Quantity Test System INOP

28-00-22 SPAR VALVE CLOSED Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-22	SPAR VALVE CLOSED Lights	N	2	0	C
					(M) May be inoperative provided: 1. Associated valve is verified to operate normally, 2. Crossfeed VALVE OPEN light operates normally, and 3. PRIOR TO FIRST FLIGHT OF THE DAY (logbook entry required), visually check the associated valve is in the CLOSED position. Note: This item is AD related. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-22	Affected SPAR VALVE CLOSED Light(s)	____ SPAR VALVE CLOSED Light(s) INOP

(M) PROCEDURES

1. Verify that the affected valve operates normally per Spar Valve Closed Light Deactivation Procedure ([AMM 28-00-00-040-814](#))
2. PRIOR TO THE FIRST FLIGHT perform an inspection of the engine fuel spar valve actuator position:


Note: This inspection may be used whenever the SPAR VALVE light does not function properly.

- A. Make sure the associated ENG 1(2) START LEVER on the CONTROL STAND is in the CUTOFF position.

Note: It is not necessary to cycle the START LEVER to do this inspection.

- B. Inspect the associated engine spar valve actuator to verify the manual override handle is in the CLOSED position.
 - i. To access the left engine actuator open access panel 521BB.
 - ii. To access the right engine actuator open access panel 621BB.
- C. Record inspection in logbook.

Figure 28-1: Left Wing Access Panel 521BB (Right Wing Access Panel 621BB)

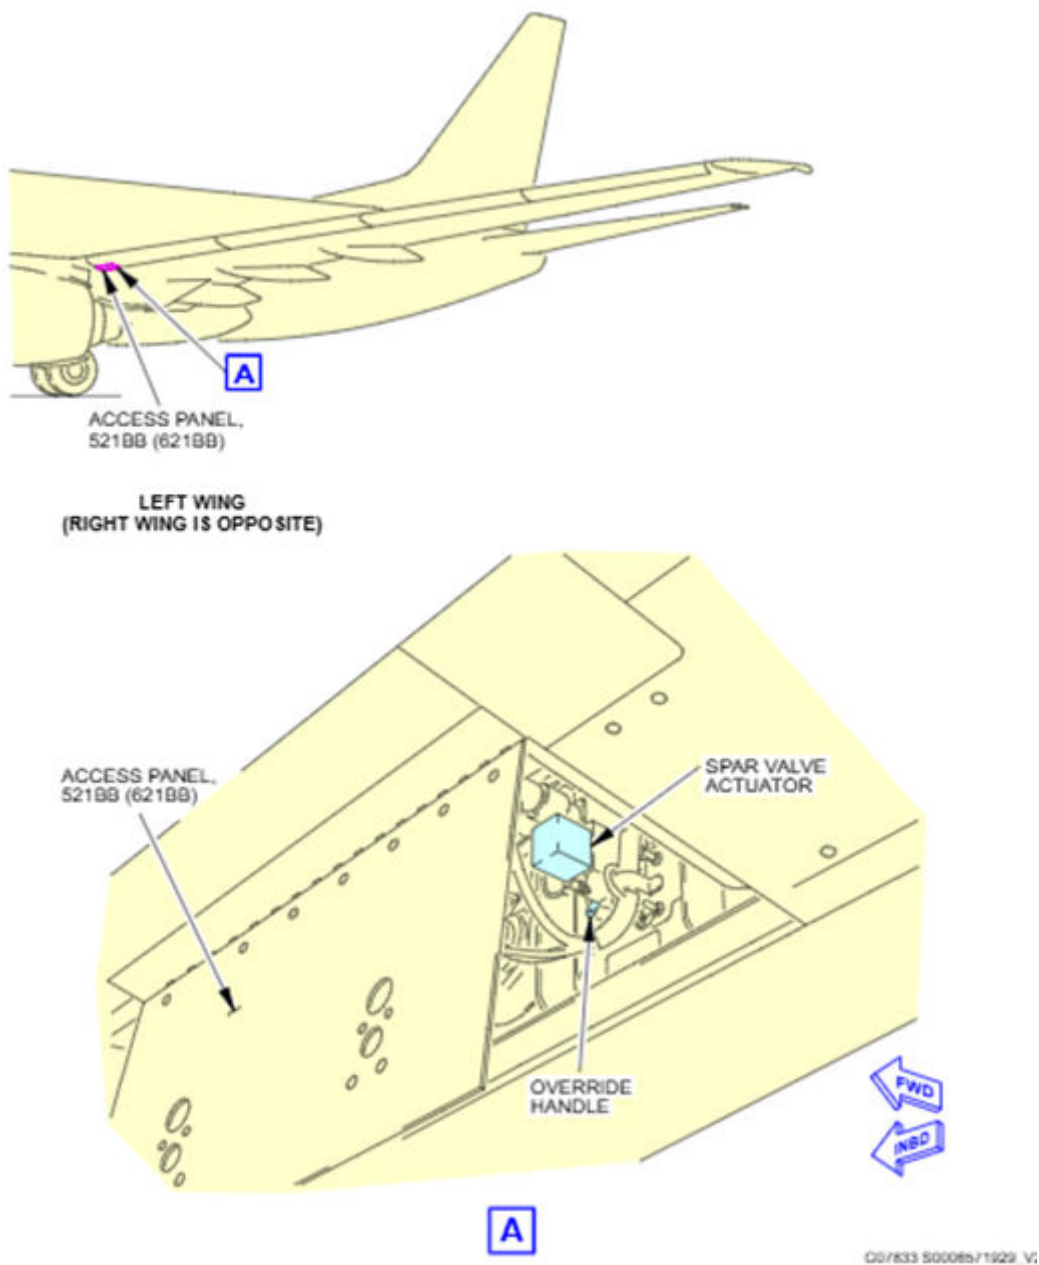

28-00-25 Center Tank Fuel Boost Pump Automatic Shutoff System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-25A	Center Tank Fuel Boost Pump Automatic Shutoff System (A/C 3772, 3773, 3774-3777, 3801-3930, 3931-3963) "DISP.APPR.REQ'D"	N	2	0	C May be inoperative provided associated center tank fuel boost pump is considered inoperative and deferred per MEL 28-00-02A Note: Refer to MEL 28-00-02A Fuel Boost Pumps (Center Tank).
28-00-25B	Center Tank Fuel Boost Pump Automatic Shutoff System (A/C 3772, 3773, 3774-3777, 3801-3930, 3931-3963) "DISP.APPR.REQ'D"	Y	2	0	C (O) May be inoperative provided: 1. Center tank remains empty, and 2. Associated Center Tank Fuel Boost Pump is not used.

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-25C	Center Tank Fuel Boost Pump Automatic Shutoff System (A/C 3772,3773, 3774-3777, 3801-3930, 3931-3963) "DISP.APPR.REQ'D"	Y	2	0	C May be inoperative with center tank fueled provided: 1. Both center tank fuel boost pump Low Pressure Warning Light Systems operate normally, 2. Center tank fuel quantity indication operates normally, 3. Center tank fuel boost pumps must not be ON unless personnel are available in the flight deck to monitor low pressure lights, 4. For ground operations, center tank fuel boost pump switches must not be positioned to ON unless the center tank fuel quantity exceeds 1,000 lbs. (453 kg), except when defueling or transferring fuel, 5. Center tank fuel boost pumps are OFF for takeoff if center tank fuel is less than 5,000 lbs. (2,300 kg) with airplane readied for initial taxi, 6. Both center tank fuel boost pumps are selected OFF when center tank fuel quantity reaches 1,000 lbs. (453 kg) of fuel during climb and cruise, 7. Both center tank fuel boost pumps are selected OFF when center tank fuel quantity reaches 3,000 lbs. (1,400 kg) of fuel during descent and landing, 8. Both center tank fuel boost pumps are positioned OFF at first indication of fuel pump low pressure, 9. Center tank fuel boost pumps may be positioned ON when established in cruise flight if the center tank contains more than 1000 lbs. (453 Kg) of fuel, 10. If the main tanks are not full, the zero fuel gross weight of the airplane plus the weight of center tank fuel may exceed the maximum zero fuel weight by up to 5,000 lbs. (2,300 kg) for takeoff, climb and cruise and up to 3,000 lbs. (1,400 kg) for descent and landing, provided that the effects of balance (CG) have been considered, and 11. Defueling with passengers on board is prohibited. Note: With the center tank fuel boost pumps selected OFF and the main tank fuel pump No.1 FWD selected ON, the center tank fuel scavenge jet pump operates automatically to transfer any remaining center tank fuel to main tank No.1. Fuel transfer begins when main tank No.1 quantity is about one-half.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-25A	Adjacent to associated Center Tank Fuel Boost Pump Switch(es)	___ Center Tank Fuel Boost Pump(s) Automatic Shutoff System(s) INOP
28-00-25B	Adjacent to associated Center Tank Fuel Boost Pump Switch(es)	___ Center Tank Fuel Boost Pump(s) Automatic Shutoff System(s) INOP DO NOT USE ___ Center Tank Fuel Boost Pump(s)
28-00-25C	Adjacent to associated Center Tank Fuel Boost Pump Switch(es)	___ Center Tank Fuel Boost Pump(s) Automatic Shutoff System(s) INOP

(O) PROCEDURES

28-00-25B

Set the associated CTR FUEL PUMP switch to OFF.

28-00-26 Fuel Shutoff Valve Battery and Charger (Engine Spar Valve)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
28-00-26	Fuel Shutoff Valve Battery and Charger (Engine Spar Valve)	Y	1	0	D (M) May be inoperative provided Fuel Shutoff Valve Battery and Charger is deactivated.

MEL ITEM	TAB LOCATION	PLACARD TEXT
28-00-26	Adjacent to associated Center Tank Fuel Boost Pump Switch(es)	Fuel Shutoff Valve Battery and Charger INOP.

(M) PROCEDURES

Pull and secure the FUEL SHUTOFF VALVES PWR PACK circuit breaker on the P6-3 Panel.

29 Hydraulic Power

Table of Contents

29-00-02	System B Engine Driven Hydraulic Pump Depressurization Function
29-00-02	System B Engine Driven Hydraulic Pump Depressurization Function
29-00-03	System Pressure Indications (A and B)
29-00-03	System Pressure Indications (A and B)
29-00-04	System A Pump Low Pressure Indication Systems
29-00-04	System A Pump Low Pressure Indication Systems
29-00-05	System B Pump Low Pressure Indication Systems
29-00-05	System B Pump Low Pressure Indication Systems
29-00-07	System A and B Overheat Light System
29-00-07	System A and B Overheat Light System
29-00-09	Hydraulic Quantity Low Level Light System (Standby System)
29-00-09	Hydraulic Quantity Low Level Light System (Standby System)
29-00-10	System A Engine Driven Hydraulic Pump Depressurization Function
29-00-10	System A Engine Driven Hydraulic Pump Depressurization Function
29-00-11	System A Quantity Indication System (Flight Deck)
29-00-11	System A Quantity Indication System (Flight Deck)
29-00-12	Standby System Low Pressure Light
29-00-12	Standby System Low Pressure Light
29-00-13	Hydraulic Reservoir Pressurization System Sources
29-00-13	Hydraulic Reservoir Pressurization System Sources
29-00-15	System B Quantity Indication System (Flight Deck)
29-00-15	System B Quantity Indication System (Flight Deck)
29-00-16	Hydraulic Reservoir Air Pressure Indicator (Wheel Well)
29-00-16	Hydraulic Reservoir Air Pressure Indicator (Wheel Well)
29-00-17	Hydraulic Reservoir Quantity Indicator (Wheel Well)
29-00-17	Hydraulic Reservoir Quantity Indicator (Wheel Well)
29-00-18	Hydraulic Reservoir Fill System (Wheel Well)
29-00-18	Hydraulic Reservoir Fill System (Wheel Well)

29-00-02 System B Engine Driven Hydraulic Pump Depressurization Function

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-02	System B Engine Driven Hydraulic Pump Depressurization Function	Y	1	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-02	Hyd System B ENG 2 Pump Switch	System B Engine Driven Hydraulic Pump Depressurization Function INOP

Note: To avoid damage to steering components or towing equipment with System B hydraulics is used for steering, install nose gear steering lockout pin in steering depressurization valve when airplane is to be pushed back or towed with engines operating.

29-00-03 System Pressure Indications (A and B)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			C	REMARKS OR EXCEPTIONS
29-00-03	System Pressure Indications (A and B)	Y	2		(O) May be inoperative provided: 1. Associated system pressure is checked PRIOR TO EACH DEPARTURE, and 2. All hydraulic low pressure lights operate normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-03	Near Primary Engine Display	___ Hyd System Pressure Indication INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE:

System A Pressure Verification:

Verify that Flight Control LOW PRESSURE light for system A extinguishes when hydraulic system is pressurized.

System B Pressure Verification:

- With systems A and B depressurized, verify that the brake pressure indicator shows less than 2800 psi. If not, apply brakes and pressure should drop.
- Select flight control and spoiler switches OFF.
- Pressurize System B hydraulics with ELEC 1.
- Verify that the brake pressure increases to between 2800 psi and 3200 psi.
- Select spoiler switch ON.
- Verify the Flight Control LOW PRESSURE light for system B is illuminated.
- Select flight control switch ON.
- Verify the Flight Control LOW PRESSURE light for system B extinguishes
- Restore airplane to its required configuration.

29-00-04 System A Pump Low Pressure Indication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y	2	1	C
29-00-04	System A Pump Low Pressure Indication Systems "Contact MCC"	Y	2	1	C
					REMARKS OR EXCEPTIONS (O) (M) May be inoperative provided output of associated pump is checked PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-04	Associated LOW PRESSURE Light	System A Pump LOW PRESSURE Indication System INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE:

ENG 1 LOW PRESSURE light inoperative:

1. Dry motor or start No. 1 engine.
2. Position ENG 1 hydraulic pump switch ON, ELEC 2 hydraulic pump switch OFF, and flight control and spoiler switches OFF.
3. Verify system A pressure is between 2800 psi and 3200 psi.
4. Restore airplane to its required configuration.

ELEC 2 LOW PRESSURE light inoperative:

1. Power Transfer Bus No. 2.
2. Place GEN 2 switch to ON and verify the associated TRANSFER BUS OFF light is extinguished.
3. Position ELEC 2 hydraulic pump switch ON, ENG 1 hydraulic pump switch OFF, and flight control and spoiler switches OFF.
4. Verify system A pressure is between 2800 psi and 3200 psi.
5. Restore airplane to its required configuration.

(M) PROCEDURES

No maintenance action is required to defer the System A Pump Low Pressure Indication System (Flight Crew May Placard).

1. At the discretion of the MCC, if the Flight Crew experiences nuisance warning lights, the associated electrical connector may be disconnected from the pressure switch and secured (Maintenance will be required – Flight Crew May Not Placard):
 - A. SYS 'A' ELEC 2 HYD PUMP, Switch S794, Plug D2680.
 - i. Refer to [AMM 29-34-21 Pageblock 401 Removal/Installation](#) for information on System A EMDP Low Pressure Switch.
 - B. SYS 'A' ENG 1 HYD PUMP, Switch S796, Plug D2684
 - i. Refer to [AMM 29-34-11 Pageblock 401 Removal/Installation](#) for information on System A Engine Driven Pump (EDP) Low Pressure Switch.
2. Record which connector was disconnected in logbook.

29-00-05 System B Pump Low Pressure Indication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
29-00-05	System B Pump Low Pressure Indication Systems "Contact MCC"	Y	2	1	C (O) (M) May be inoperative provided output of associated pump is checked PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-05	Associated LOW PRESSURE Light	System B Pump LOW PRESSURE Indication System INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE:

ELEC 1 LOW PRESSURE light inoperative:

1. Power Transfer Bus No. 1.
2. Place GEN 1 switch to ON and verify the associated TRANSFER BUS OFF light is extinguished.
3. Position ELEC 1 hydraulic pump switch ON, ENG 2 hydraulic pump switch OFF, and flight control and spoiler switches OFF.
4. Verify system B pressure is between 2800 psi and 3200 psi.
5. Restore airplane to its required configuration.

ENG 2 LOW PRESSURE light inoperative:

1. Dry motor or start No. 2 engine.
2. Position ENG 2 hydraulic pump switch ON, ELEC 1 hydraulic pump switch OFF, and flight control and spoiler switches OFF.
3. Verify system B pressure is between 2800 psi and 3200 psi.
4. Restore airplane to its required configuration.

(M) PROCEDURES

No maintenance action is required to defer the System B Pump Low Pressure Indication System (Flight Crew May Placard).

1. At the discretion of the MCC, if the Flight Crew experiences nuisance warning lights, the associated electrical connector may be disconnected from the pressure switch and secured (Maintenance will be required – Flight Crew May Not Placard):
 - A. SYS 'B' ELEC 1 HYD PUMP, Switch S795, Plug D2682.
 - i. Refer to [AMM 29-34-21 Pageblock 401](#) for information on System B EMDP Low Pressure Switch.
 - B. SYS 'B' ENG 2 HYD PUMP, Switch S797, Plug D2686.
 - i. Refer to [AMM 29-34-11 Pageblock 401](#) for information on System B Engine Driven Pump (EDP) Low Pressure Switch.
2. Record which connector was disconnected in logbook.

29-00-07 System A and B Overheat Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-07	System A and B Overheat Light System	Y	2	0	C	May be inoperative provided associated Low Pressure light operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-07	Affected System A / B Overheat Light(s)	Hyd System A / B Overheat Light(s) INOP

29-00-09 Hydraulic Quantity Low Level Light System (Standby System)


NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
29-00-09	Hydraulic Quantity Low Level Light System (Standby System)	Y	1	0	C
					(M) May be inoperative provided quantity is verified adequate PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-09	Standby Hyd LOW QUANTITY Light	Standby System LOW QUANTITY Light INOP

(M) PROCEDURES

1. If the Master Caution light is illuminated due to an inoperative low level quantity switch in the standby system, disconnect and stow the cannon plug to the quantity switch. Maintenance is Required and the Flight Crew May NOT Placard.
2. PRIOR TO EACH DEPARTURE: With flaps/leading edge devices retracted, spoilers down, all control surfaces in neutral position, brake accumulator has a minimum of 2800 psig of pressure in it (with hydraulic pumps off), and thrust reversers are in the closed position, in the right wheel well verify that Hydraulic System B gauge or indication indicates more than "RFL" or "RF", as applicable (6.9 U.S. gallons).

Figure 29-1: Hydraulic Reservoir Quantity Indicator (with RFL display)

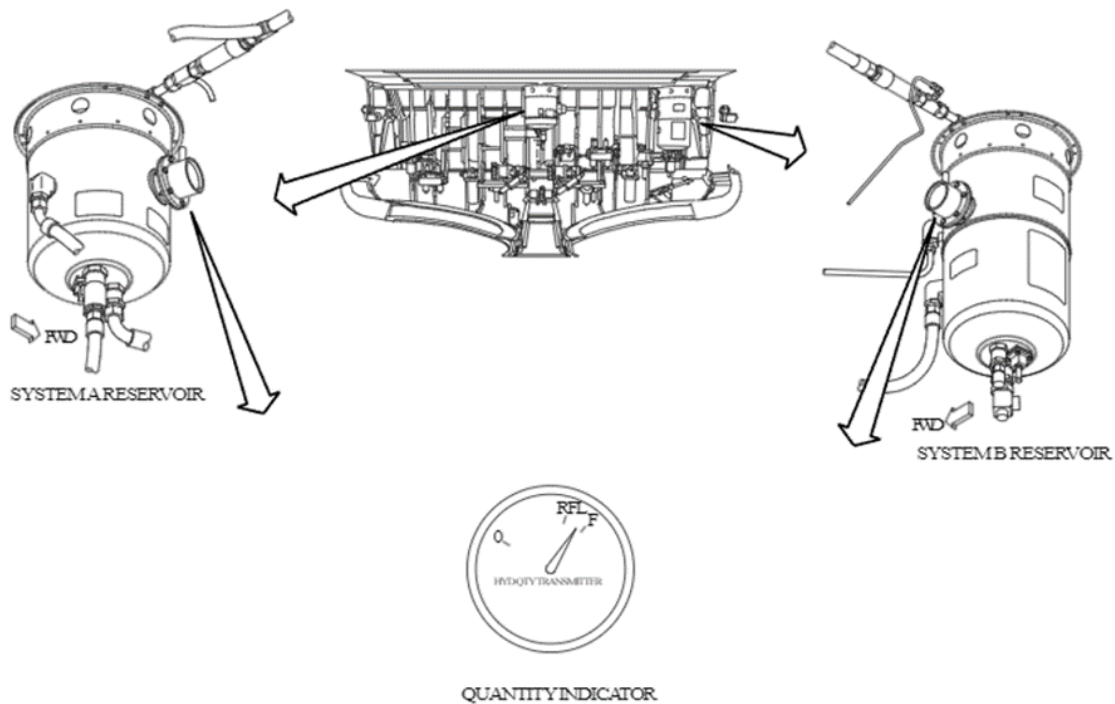

29-00-10 System A Engine Driven Hydraulic Pump Depressurization Function

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-10	System A Engine Driven Hydraulic Pump Depressurization Function	Y		1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-10	Associated System A Pump Switch	System A Engine Driven Hydraulic Pump Depressurization Function INOP

Note: To avoid damage to steering components or towing equipment, install nose gear steering lockout pin in steering depressurization valve when airplane is to be pushed back or towed with engines operating.

29-00-11 System A Quantity Indication System (Flight Deck)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
29-00-11	System A Quantity Indication System (Flight Deck)	Y	1	0	C (M) May be inoperative provided: - Associated quantity is verified adequate PRIOR TO EACH DEPARTURE, - Associated system pressure indication operates normally, and - Associated pump low pressure lights operate normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-11	Near Primary Engine Display	Cockpit System A Hyd Quantity Indication INOP


(M) PROCEDURES

PRIOR TO EACH DEPARTURE:

Make sure Hydraulic System A Reservoir quantity is adequate:

- Verify that:
 - Flaps/leading edge devices are retracted.
 - Spoilers are down.
 - All flight controls are in neutral position
 - Thrust reversers are stowed.
- Verify fluid quantity by checking the hydraulic quantity indicator mounted on the System A reservoir, visible from the fluid filling station located in the right main gear well indicates more than "RFL" or "RF" as applicable.
- If quantity is low, Maintenance is Required and the Flight Crew May NOT Placard.

Figure 29-2: Hydraulic Reservoir Quantity Indicator (with RFL display)

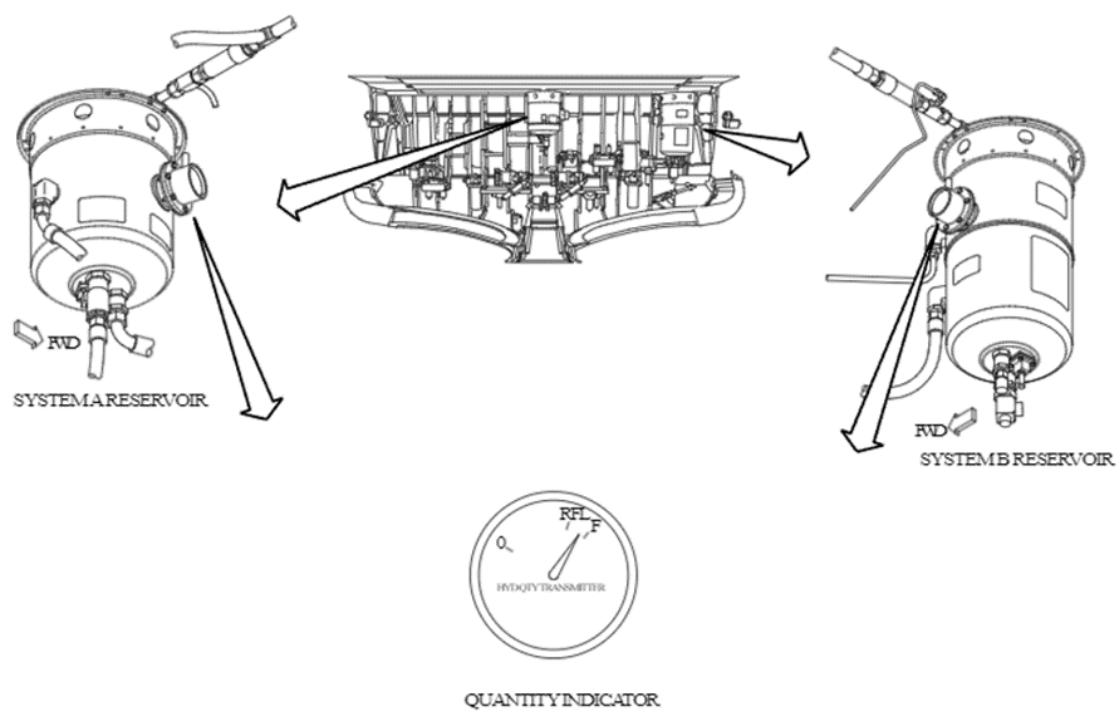

29-00-12 Standby System Low Pressure Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
29-00-12	Standby System Low Pressure Light	Y	1	0	C (M) May be inoperative provided: 1. Standby System low quantity light operates normally, 2. Output of Standby Pump is verified adequate PRIOR TO EACH DEPARTURE, and 3. Both system B pumps operate normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-12	Standby Hyd System Low Pressure Light	Standby Hyd System Low Pressure Light INOP

(M) PROCEDURES

PRIOR TO EACH DEPARTURE and before engine start:

1. Position the Master LIGHTS test and dim switch to TEST and verify LOW QUANTITY light illuminates.
2. Get ground clearance to extend leading edge flaps.
3. Position ALTERNATE FLAPS Master Switch to ARM.
4. Momentarily position ALTERNATE FLAPS Position Switch to DOWN.
5. On the LE DEVICES annunciator panel, verify that lights indicate all leading edge devices are fully extended within approximately one minute.
6. Return both ALTERNATE FLAPS Master and Position switches to OFF.
7. Turn Hydraulic System B ELEC 1 pump ON.
8. Verify that System B ELEC 1 LOW PRESSURE light extinguishes.
9. Leave pump on until L.E. flaps are up.

29-00-13 Hydraulic Reservoir Pressurization System Sources

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-13	Hydraulic Reservoir Pressurization System Sources	N	2	1	C	(M) One pressure source may be inoperative provided reservoir can be pressurized by remaining source.

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-13	Logbook	____ Hydraulic Reservoir Pressurization System Sources INOP

(M) PROCEDURES

1. Disconnect the pressurization supply line of the inoperative pneumatic source at the reservoir pressurization module or the restrictor cross fitting, as installed, located in the wheel well. Install a cap on the reservoir pressurization module or the restrictor cross fitting, as installed. Also install a cap on the disconnected pressurization supply line.
2. Pressurize pneumatic manifold.
3. Verify that the hydraulic reservoir air pressure gauges, located on the forward wheel well bulkhead, indicates the same pressure as the pneumatic duct pressure indicator, on the forward overhead panel.

29-00-15 System B Quantity Indication System (Flight Deck)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			Y	1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
29-00-15	System B Quantity Indication System (Flight Deck)					C	(M) May be inoperative provided: 1. Associated quantity is verified adequate PRIOR TO EACH DEPARTURE, 2. System B pressure indication operates normally, and 3. System B pump low pressure lights operate normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-15	System B Hyd Quantity Indicator	Cockpit System B Hyd Quantity Indicator INOP


(M) PROCEDURES

PRIOR TO EACH DEPARTURE:

Make sure Hydraulic System B Reservoir quantity is adequate:

1. Verify that:
 - A. Flaps/leading edge devices are retracted.
 - B. Spoilers are down.
 - C. All flight controls are in neutral position.
 - D. Brake accumulator has a minimum of 2800 psig of pressure in it (with hydraulic pumps off).
 - i. If the accumulator has less than 2800 psig (19,305 kPa) of pressure, then pressurize hydraulic system B.
 - E. Thrust reversers are stowed.
2. Verify fluid quantity by checking the hydraulic quantity indicator mounted on the System B reservoir, visible from the fluid filling station located in the right main gear well indicates more than "RFL" or "RF" as applicable.
3. If quantity is low, Maintenance is Required and the Flight Crew May NOT Placard.

Figure 29-3: Hydraulic Reservoir Quantity Indicator (with RFL display)

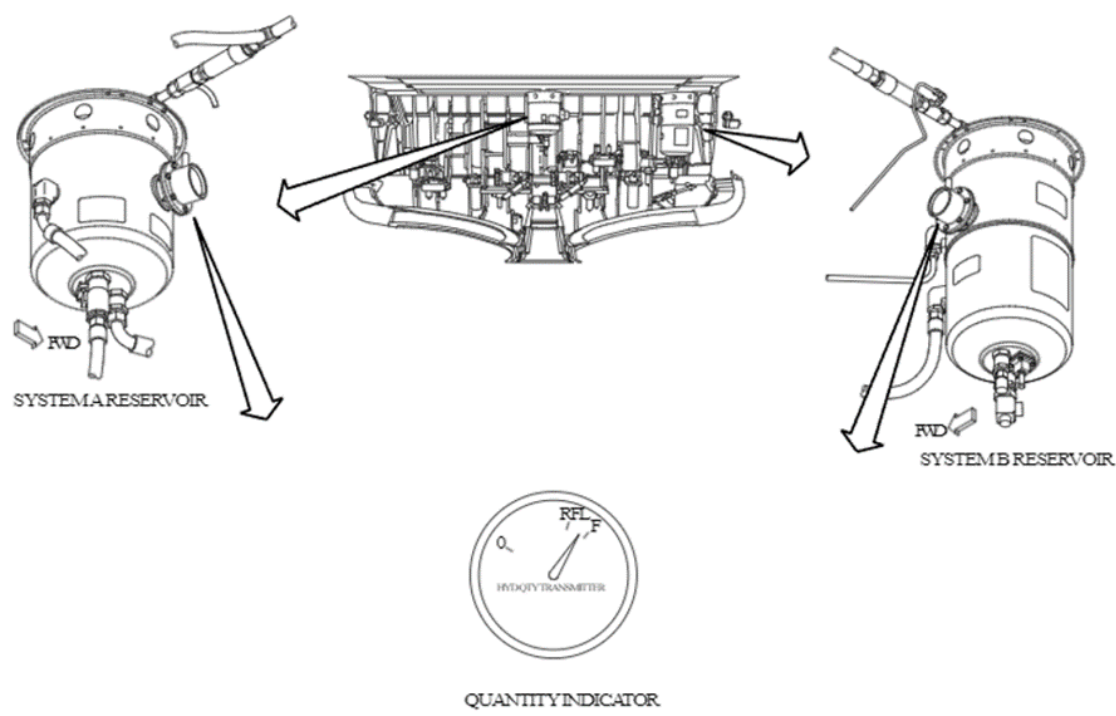

29-00-16 Hydraulic Reservoir Air Pressure Indicator (Wheel Well)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-16	Hydraulic Reservoir Air Pressure Indicator (Wheel Well)	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-16	Logbook	Wheel Well Hydraulic Reservoir Air Pressure Indicator INOP

29-00-17 Hydraulic Reservoir Quantity Indicator (Wheel Well)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
29-00-17	Hydraulic Reservoir Quantity Indicator (Wheel Well)	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-17	Logbook	Wheel Well Hydraulic ____ System Reservoir, Quantity Indicator INOP

29-00-18 Hydraulic Reservoir Fill System (Wheel Well)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
29-00-18	Hydraulic Reservoir Fill System (Wheel Well)	Y		0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
29-00-18	Logbook	Wheel Well Hydraulic Reservoir Fill System INOP

30 Ice and Rain Protection

Table of Contents

30-00-01	Wing Anti-Ice Valves
30-00-01A	Wing Anti-Ice Valves
30-00-01B	Wing Anti-Ice Valves
30-00-02	Wing Anti-Ice Valve Position Lights
30-00-02	Wing Anti-Ice Valve Position Lights
30-00-03	Engine and Nose Cowl Anti-Ice Valves
	ENGINE AND NOSE COWL ANTI-ICE VALVES
30-00-03A	Engine and Nose Cowl Anti-Ice Valves
30-00-03B	Engine and Nose Cowl Anti-Ice Valves
30-00-04	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications
30-00-04A	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications
30-00-04B	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications
30-00-05	Pitot / Static Probes Heaters
	PITOT / STATIC PROBE HEATERS
30-00-05A	Left / Right Pitot Heaters
30-00-05B	Aux Pitot Heater (Right Lower Probe)
30-00-06	Vertical Stabilizer Pitot Heater (Elevator and Rudder Feel Systems)
30-00-06	Vertical Stabilizer Pitot Heater (Elevator and Rudder Feel Systems)
30-00-07	Total Air Temperature Probe Heater
30-00-07	Total Air Temperature Probe Heater
30-00-08	Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s)
30-00-08	Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s)
30-00-09	PITOT, PITOT / STATIC AND TEMPERATURE PROBE HEATER Lights
	PITOT, PITOT / STATIC AND TEMPERATURE PROBE HEATER LIGHTS
30-00-09A	Amber (Heater Off) Lights Pitot and Pitot / Static
30-00-09B	Temp Probe
30-00-11	Electrically Heated Windshields
	ELECTRICALLY HEATED WINDSHIELDS
30-00-11A	No. 1 Window
30-00-11B	No. 2 Window
30-00-12	Windshield De-Fog System
30-00-12	Windshield De-Fog System
30-00-13	Windshield Wiper System
30-00-13A	Windshield Wiper System
30-00-13B	Park Function
30-00-13C	Intermittent Speed Function
30-00-13D	Low Speed Function
30-00-13E	High Speed Function
30-00-17	Cowl Anti-Ice Lights
30-00-17A	Cowl Anti-Ice Lights
30-00-17B	Cowl Anti-Ice Lights

	737 Minimum Equipment List 30 Ice and Rain Protection	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

30-00-18 Alpha Vane Heater Light Systems

30-00-18A Alpha Vane Heater Light Systems
30-00-18B Alpha Vane Heater Light Systems

30-00-19 Drain Mast Heaters

30-00-19 Drain Mast Heaters

30-00-21 Control Stand Wing Anti-Ice Switches

30-00-21A Control Stand Wing Anti-Ice Switches
30-00-21B Control Stand Wing Anti-Ice Switches

30-00-22 Air Data Probe Heat Systems

30-00-22 AIR DATA PROBE HEAT SYSTEMS
30-00-22 AUTO Activation

30-00-01 Wing Anti-Ice Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-01A	Wing Anti-Ice Valves “DISP.APPR.REQ’D”	N	2	0	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative closed provided aircraft is not operated in known or forecast icing conditions. Theater Restrictions May Apply
30-00-01B	Wing Anti-Ice Valves “DISP.APPR.REQ’D”	N	2	1	C (O) (M) May be inoperative open provided: 1. Except for engine start, associated manifold is depressurized when outside temperature is above 50 degrees F (10 degrees C) on the ground or above 10 degrees C TAT in flight, 2. Associated engine bleed thrust limits are followed when manifold is pressurized, 3. Air conditioning and pressurization requirements are followed when one manifold is depressurized, 4. Use the appropriate (M) procedure section to provide bleed air for engine start PRIOR TO EACH DEPARTURE, and 5. Performance corrections are applied. Theater Restrictions May Apply Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-01A	Wing Anti-Ice Switch	___ Wing Anti-Ice Valve(s) INOP
30-00-01B	Wing Anti-Ice Switch	___ Wing Anti-Ice Valve INOP

(O) PROCEDURES

30-00-01A

Refer to the Remarks or Exceptions column.

Note: Disconnecting the valve's electrical connector per the (M) PROCEDURE will cause the associated wing anti-ice VALVE OPEN light to illuminate (BRIGHT).

30-00-01B

Note: Disconnecting the valve's electrical connector per the (M) PROCEDURE will cause the associated wing anti-ice VALVE OPEN light to illuminate (BRIGHT).

Note: With the affected wing anti-ice valve open, bleed trip off and possible loss of cabin pressure above FL350 may occur. Refer to [Volume 1 737 5.16.2.11.3 Wing Anti-Ice Operation – In Flight](#).

1. When the left Wing Anti-ice Valve is failed open, do not use APU bleed air for air conditioning purposes on the ground. APU may only be used for engine start.
2. When the right Wing Anti-ice Valve is failed open, APU bleed air may be used for air conditioning purposes on the ground using only the left AC pack and with the isolation valve closed.
3. The appropriate engine bleed thrust limits to be used with the valve failed open are the normal limits for wing anti-ice ON.
4. No wing anti-ice on decrements are published for takeoff, consequently the engine bleed to the affected manifold must be OFF for takeoff.
5. To isolate the wing anti-ice system if needed:

CONTINUED ON NEXT PAGE

- A. Place the Isolation Valve Switch to the closed position
- B. Place the Pack Switch on the affected side to the off position
- C. Place the Engine Bleed Air Switch on the affected side to the off position
6. The location of the wing anti-ice valve relative to the engine exhaust area prohibits personnel from accessing the valve when the associated engine is running.
7. To ensure sufficient air for engine start, only one valve may be inoperative open.
8. The APU or ground air can be used to start one engine and the second engine (associated with open valve) then can be started by cross bleed from the first.
9. Establish communication with ground maintenance to coordinate engine start in accordance with (M) procedures.
10. Once airborne when TAT is ≤ 10 degrees C:
 - A. Place the Isolation Valve Switch to AUTO.
 - B. Place the engine bleed on the affected side to ON
 - C. Place the PACK switch on the affected side to AUTO
 - D. Select the Wing Anti-Ice to ON.
11. On descent when the TAT is > 10 degrees C:
 - A. Place the Isolation Valve Switch to CLOSE.
 - B. Place the PACK switch on the affected side to OFF.
 - C. Place the Engine Bleed Air Switch on the affected side to OFF.

Note: Engine Bleed to the affected manifold must be in the OFF position for takeoff and landing.

30-00-01B	WING ANTI-ICE VALVES
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 2.8%.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING Reduce LANDING CLIMB LIMIT WT by 3,100 lbs. OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

30-00-01B	WING ANTI-ICE VALVES
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 2.8%.
NOTES	None
AWABS	Performance weight corrections have been applied. Verify AWABS V_1 is not less than minimum V_{mcg} . Takeoff is permitted with V_1 set equal to or greater than V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING Reduce LANDING CLIMB LIMIT WT by 3,600 lbs. OTHER CORRECTIONS Obtain V speeds from the ODM – Takeoff section. If the resulting V_1 is less than minimum V_{mcg} , takeoff is permitted with V_1 set equal to V_{mcg} . See ODM – Abnormal Section for Minimum Control Speed – Ground (V_{mcg}).

(M) PROCEDURES

30-00-01A, 30-00-01B

Reference [AMM 30-00-00-040-801](#)

30-00-02 Wing Anti-Ice Valve Position Lights


NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-02	Wing Anti-Ice Valve Position Lights "DISP.APPR.REQ'D"	N	2	0	C (M) May be inoperative provided valve is verified to operate normally before operating in known or forecast icing conditions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-02	Affected Wing Anti-Ice Valve Open Light	____ Wing Anti-Ice Valve Position Light(s) INOP

(M) PROCEDURES

1. Gain access to the valve located in the wing leading edge just outboard of the engine.
2. Hold the wing anti-ice switch in the test or on position.
3. Observe that the position indicator on the valve indicates open.
4. Return the switch to the off position.
5. Observe that the position indicator on the valve indicates closed.

Figure 30-1: Wing Anti-Ice Valve Access

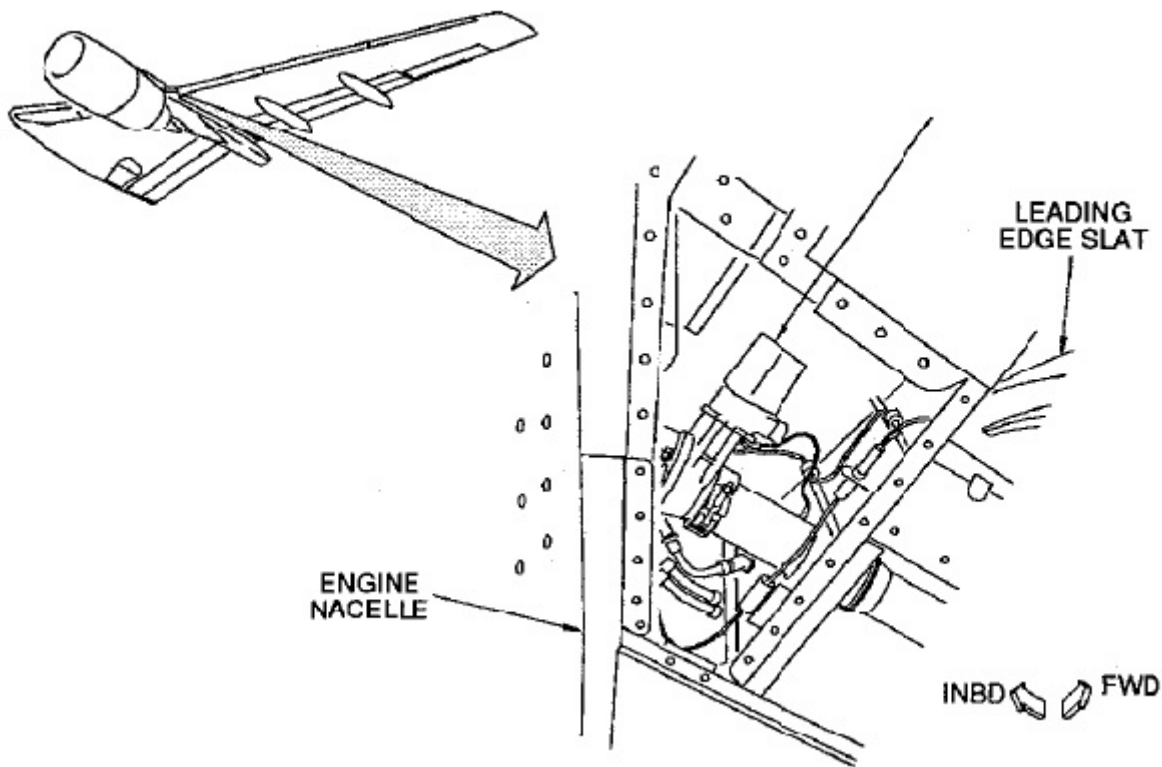

30-00-03 Engine and Nose Cowl Anti-Ice Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
ENGINE AND NOSE COWL ANTI-ICE VALVES					
30-00-03A	Engine and Nose Cowl Anti-Ice Valves "DISP.APPR.REQ'D"	N	2	1	C (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative closed provided aircraft is not operated in known or forecast icing conditions. Theater Restrictions May Apply
30-00-03B	Engine and Nose Cowl Anti-Ice Valves "DISP.APPR.REQ'D"	N	2	1	C (O) (M) May be inoperative locked open provided: 1. Associated High Stage Valve is considered inoperative and deferred per MEL 36-00-09, 2. Opposite side engine bleed air system and air conditioning system is operational, 3. Ambient temperature is below 100 degrees F (38 degrees C), 4. A minimum of 60% N1 is maintained on associated engine during flight above FL300 or in icing conditions, and 5. Performance corrections are applied. Note: Refer to MMEL item 36-00-09 (High Stage Valves). Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-03A	Associated Engine Anti-Ice Switch	___ Engine / Nose Cowl Anti-Ice Valve INOP Closed
30-00-03B	Associated Engine Anti-Ice Switch	___ Engine / Nose Cowl Anti-Ice Valve INOP Open

(O) PROCEDURES


30-00-03B

Note: Dispatching with an engine and nose cowl anti-ice valve inoperative OPEN will cause the associated COWL VALVE OPEN light to illuminate bright and, the associated thermal anti-ice (TAI) indication to also illuminate amber.

Takeoff above 37.7°C (100°F) is prohibited.

1. Operate with the associated ENG ANTI-ICE switch in the OFF position.
2. Apply performance limited weights as laid out in the performance box.
3. Autothrottle use encouraged to ensure commanded thrust (green carat on N1 display) is set during normal operations:
 - A. Maintain a minimum of 60% N1 in flight on the associated engine in icing conditions,
 - B. At temperatures ≤ 10C (50F), ensure actual N1 does not exceed 102.9% (1.1% below redline). Takeoff and Go-Around thrust are not limited,
 - C. At temperatures > 10C (50F), ensure actual Takeoff and Go-Around N1 does not exceed 102.6% (1.4% below redline),
 - D. The EECs should limit actual N1 below these values in all phases of flight, but diligence is advised to ensure EGT redline and N1 values described in notes (B) and (C) above are not exceeded.
4. Observe maximum operating temperature restrictions.
5. During ground operations with the APU running, turn the engine bleed OFF whenever the associated engine is not running.

Figure 30-2: N1 Indication on Upper Display

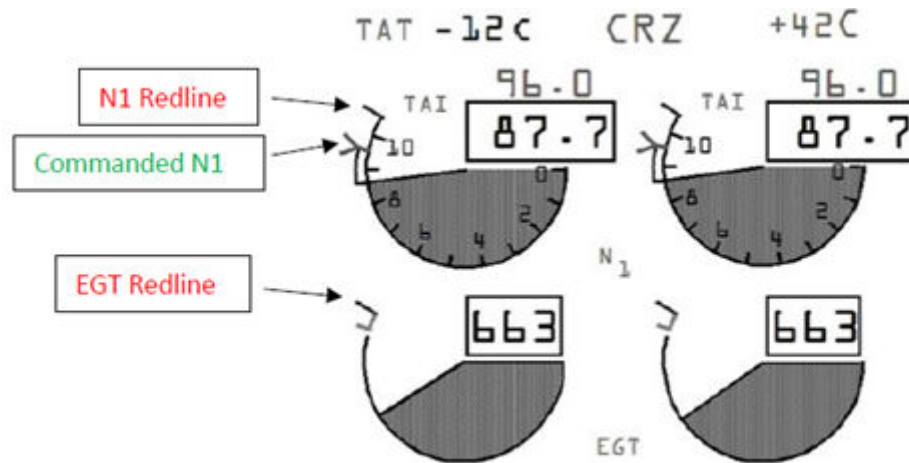

30-00-03B	ENGINE AND NOSE COWL ANTI-ICE VALVES
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 4,000 lbs. Increase BLOCK FUEL by 1.3%.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance weight corrections have been applied. Obtain applicable N1 corrections from MEL.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF – TAT/OAT above 10°C (50°F) Reduce RATOW by 9,500 lbs. Reduce T/O CLIMB LIMIT by 9,500 lbs. TAKEOFF – TAT/OAT at or below 10°C (50°F) Reduce RATOW by 700 lbs. Reduce T/O CLIMB LIMIT by 700 lbs. LANDING – TAT/OAT above 10°C (50°F) Reduce RWY ALLOWABLE LANDING WT by 9,500 lbs. Reduce LANDING CLIMB LIMIT WT by 9,500 lbs. LANDING – TAT/OAT at or below 10°C (50°F) Reduce LANDING CLIMB LIMIT WT by 700 lbs. OTHER CORRECTIONS Obtain applicable N1 corrections from MEL.

(M) PROCEDURES

30-00-03A

1. Comply with Preparation steps in [AMM Task 30-00-00-040-803](#).
2. Open the fan cowl panels.
3. To position the shutoff valve in the CLOSED position:
 - A. Loosen the retaining screw on the manual locking assembly.
 - B. Move the hex shaft to the CLOSED position.
 - C. Slide the locking assembly up the shaft into the recess in the cover plate.
 - D. Tighten the retaining screw.
4. Close the fan cowl panels.


30-00-03B

Note: Dispatching with an engine and nose cowl anti-ice valve inoperative OPEN will cause the associated COWL VALVE OPEN light to illuminate bright and, the associated thermal anti-ice (TAI) indication to also illuminate amber.

1. Comply with Preparation steps in [AMM Task 30-00-00-040-803](#).
2. Open the fan cowl panels and thrust reverser.
3. Locate the duct Overpressure Switch, which is forward of the Nose Cowl TAI valve. Disconnect, cap and stow the electrical connector DP1302 from the duct Overpressure Switch S806. Refer to [Figure 30-3](#) below.
4. Lock the Nose Cowl TAI Valve in the OPEN position as follows:
 - A. Loosen the retaining screw on the manual locking assembly.
 - B. Move the hex shaft to the OPEN position.
 - C. Slide the locking assembly up the shaft into the recess in the cover plate.
 - D. Tighten the retaining screw.
5. Deactivate and defer the associated High Stage Valve per [MEL 36-00-09](#).
6. Close the fan cowl panels and thrust reverser.

 [Link to TAI Deactivation Video](#)

Figure 30-3: Nose Cowl Thermal Anti-Ice Valve and Duct Overpressure Switch

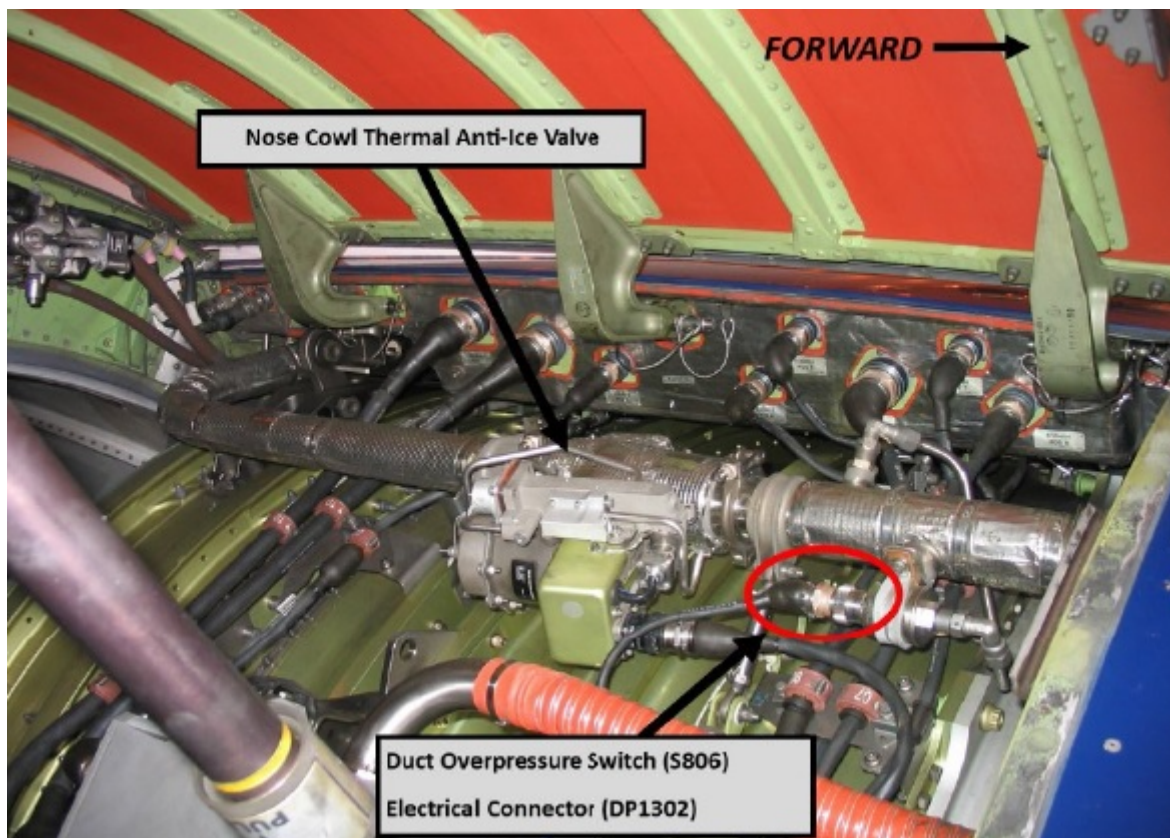

30-00-04 Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
30-00-04A	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications	Y	2	0	C	(O) May be inoperative provided proper valve operation is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
30-00-04B	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications	Y	4	2	C	One valve position indication (either COWL VALVE OPEN light or TAI indication) for each engine may be inoperative provided other valve position indication for that engine operates normally.
30-00-04C	Engine and Nose Cowl Anti-Ice Valve Position Lights or TAI Indications “DISP.APPR.REQ’D”	N	2	1	C	May be inoperative provided associated valve is considered inoperative and deferred per MEL 30-00-03A or 30-00-03B. Note: Refer to MEL 30-00-03 Engine and Nose Cowl Anti-Ice Valves.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-04A	Affected Valve Open Light(s)	____ Engine / Nose Cowl Anti-Ice Valve Position Light(s) INOP
30-00-04B	Affected Valve Open Light(s)	____ Engine / Nose Cowl Anti-Ice Valve Position Light(s) INOP
30-00-04C	Affected Valve Open Light	____ Engine / Nose Cowl Anti-Ice Valve Position Light INOP

(O) PROCEDURES

30-00-04A


PRIOR TO EACH DEPARTURE:

1. Start the associated engine.
2. Wait for the engine to stabilize at idle.
3. Verify that the engine and apu bleed air switches are in the OFF position.
4. Verify that the ENG ANTI-ICE switch is in the OFF position.
5. Monitor the EGT:
 - A. Wait for the EGT to stabilize and record the temperature.

CAUTION LIMIT COWL TAI OPERATION TO 30 SECONDS MAXIMUM.

- B. Place the ENG ANTI-ICE switch to the ON position.
 - C. Wait for the EGT to stabilize and record the temperature.
 - D. Position ENG ANTI-ICE switch to OFF.
 - E. Wait for the EGT to stabilize and record the temperature.
6. Verify that the following changes occurred:
 - A. The EGT increased by a minimum of 15 degrees C when the ENG ANTI-ICE switch was put in the ON position.
 - B. The EGT returned to the original idle temperature when the ENG ANTI-ICE switch was put in the OFF position.
7. Configure the airplane as needed for flight or shut down the engine if required.

Note: This MEL refers to the blue "COWL VALVE OPEN" lights and the "TAI" indication on the Engine Display.

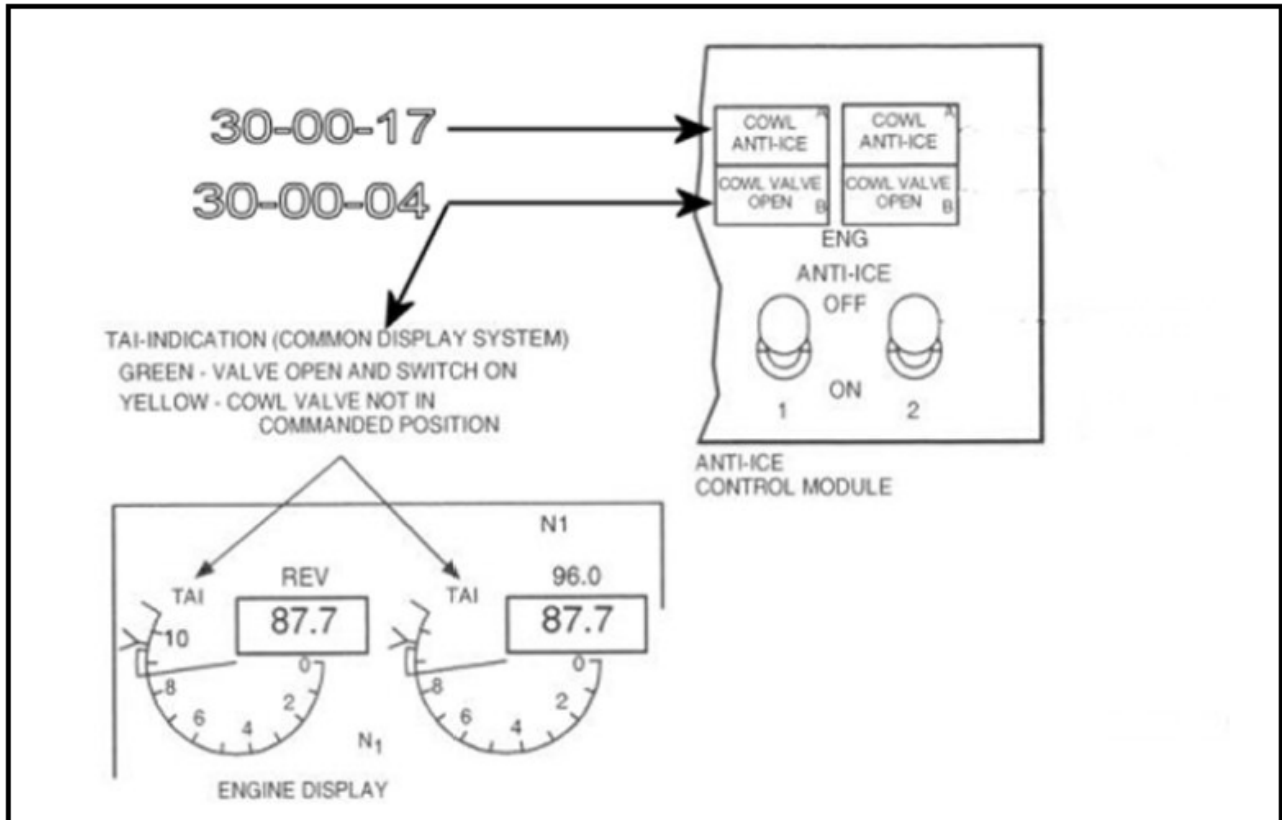Figure 30-4: Engine Anti-Ice Position Indications


30-00-05 Pitot / Static Probes Heaters

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PITOT / STATIC PROBE HEATERS					
30-00-05A	Left / Right Pitot Heaters "DISP.APPR.REQ'D"	Y	2	1	B Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative for day VMC provided: 1. Aux Pitot heater operates normally, 2. Airplane is not operated in visible moisture, and 3. Airplane is not operated in known or forecast icing conditions.
30-00-05B	Aux Pitot Heater (Right Lower Probe) "DISP.APPR.REQ'D"	Y	1	0	B Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Both Left and Right Pitot heaters operate normally, and 2. Airplane is not operated in known or forecast icing conditions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-05A	Associated Pitot Probe Heater Light	____ Pitot Heater INOP
30-00-05B	1. Associated Pitot Probe Heater Light 2. Static Source Selector	Aux Pitot Heater (Right Lower Probe) INOP Aux Pitot Heater (Right Lower Probe) INOP

OPERATIONS NOTES

- With a Captain's or First Officer's Pitot Static (Upper) probe heater inoperative, operations are limited to day VMC, do not operate in visible moisture or in known or forecast icing conditions.
- On airplanes equipped with static source selector and No. 1 or 2 Aux P/S (Lower) probe heater is inoperative, place the affected static source selector to the ALTERNATE position and placard OPERATE IN ALTERNATE.

30-00-06 Vertical Stabilizer Pitot Heater (Elevator and Rudder Feel Systems)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-06	Vertical Stabilizer Pitot Heater (Elevator and Rudder Feel Systems) "DISP.APPR.REQ'D"	Y	2	1	B Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided aircraft is not operated in known or forecast icing conditions. <i>Note: This item is AD related.</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-06	Associated ELEV PITOT Light	____ ELEV PITOT Heat INOP

30-00-07 Total Air Temperature Probe Heater

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y			C	REMARKS OR EXCEPTIONS
30-00-07	Total Air Temperature Probe Heater "DISP.APPR.REQ'D"	Y	1	0	C	Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided aircraft is not operated in known or forecast icing conditions. Note: This item is AD related.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-07	Associated TEMP Probe Heater Light	Total Air Temperature Probe Heater INOP

30-00-08 Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-08	Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s) “DISP.APPR.REQ'D”	Y	2	0	C Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided aircraft is not operated in known or forecast icing conditions. Note: This item is AD related.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-08	Associated ALPHA VANE Light	____ AOA Vane / Sensor Heater INOP

30-00-09 PITOT, PITOT / STATIC AND TEMPERATURE PROBE HEATER Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PITOT, PITOT / STATIC AND TEMPERATURE PROBE HEATER LIGHTS					
30-00-09A	Amber (Heater Off) Lights Pitot and Pitot / Static "DISP.APPR.REQ'D"	Y	-	0	B (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: - Associated heater function is verified to operate normally, and - Airplane is not operated in known or forecast icing conditions.
30-00-09B	Temp Probe	Y	-	0	C (M) May be inoperative provided associated heater function is verified to operate normally PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
30-00-09C	Temp Probe "DISP.APPR.REQ'D"	Y	-	0	C May be inoperative provided: - associated heater is inoperative, and - airplane is not operated in known or forecast icing conditions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-09A	Affected Probe Heater Light(s)	___ Pitot or Pitot/Static Amber (Heater Off) Light(s) INOP
30-00-09B	Affected Probe Heater Light(s)	TEMP PROBE Amber (Heater Off) Light INOP
30-00-09C	Affected Probe Heater Light(s)	TEMP PROBE Amber (Heater Off) Light(s) INOP

(M) PROCEDURES

30-00-09A, 30-00-09B

For 30-00-09B the following must be accomplished PRIOR TO EACH DEPARTURE:

Check affected probe heater as follows:

- Station a ground observer at the associated probe heater and establish communications.
- Apply electrical power to the aircraft.
- Place the associated PROBE HEAT switch to the ON position.
- To test the TAT probe heat, press and hold the TAT TEST switch.
- Check that heat radiation can be detected from the associated probe, indicating that the heater is functioning. DO NOT TOUCH PROBE.

CAUTION DO NOT PLACE HAND ON PROBE. TEMPERATURES ARE HIGH ENOUGH TO CAUSE BURNS.

CAUTION DO NOT LEAVE HEATER ON LONGER THAN REQUIRED. HEATER LIFE MAY BE UNNECESSARILY SHORTENED.

- If TAT probe heat was tested, release the TAT TEST switch.
- Place the associated Probe Heat switch to the OFF/AUTO position.
- Restore aircraft electrical system to normal.

30-00-11 Electrically Heated Windshields

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
ELECTRICALLY HEATED WINDSHIELDS							
30-00-11A	No. 1 Window "DISP.APPR.REQ'D"	Y	2	1	C	(O) Except for Extended Operations (ETOPS) beyond 120 minutes, one may be inoperative provided: 1. Aircraft is not operated in known or forecast icing conditions, 2. Both No. 2 window heaters operate normally, 3. Windshield de-fog system operates normally, 4. Airspeed is limited to 250 KIAS below 10,000 feet MSL, and 5. Associated switch remains OFF. Theater Restrictions May Apply	
30-00-11B	No. 2 Window "DISP.APPR.REQ'D"	Y	2	1	C	(O) May be inoperative provided: 1. Both No.1 window heaters operate normally, 2. Windshield de-fog system operates normally, 3. Airspeed is limited to 250 KIAS below 10,000 feet MSL, and 4. Associated switch remains OFF. Theater Restrictions May Apply	

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-11A	Associated Window Heat Switch	___ Windshield Heat INOP
30-00-11B	Associated Window Heat Switch	___ Windshield Heat INOP

OPERATIONS NOTE

Note: With No. 1 window heat inoperative, operate with the Windshield Air (pneumatic anti-fogging system) on when window heat is required.

(O) PROCEDURES

30-00-11A, 30-00-11B

1. Program KIAS/Mach speed restriction in FMS.
2. Position affected Window Heat switch to OFF.

30-00-12 Windshield De-Fog System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
30-00-12	Windshield De-Fog System	Y	1	0	C	May be inoperative provided electrically heated windshields for No.1 and No.2 windows operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-12	Captain’s Windshield Air Control Knob	WINDSHIELD DEFOG SYS INOP

30-00-13 Windshield Wiper System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-13A	Windshield Wiper System "DISP.APPR.REQ'D"	Y	2	0	C (M) May be inoperative provided: 1. Aircraft is not operated in precipitation within 5 statute miles of airport of takeoff or intended landing, and 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.
30-00-13B	Park Function	Y	2	0	C May be inoperative for all flight conditions provided blade(s) can be positioned in a location that will not obstruct forward vision.
30-00-13C	Intermittent Speed Function	Y	2	0	C
30-00-13D	Low Speed Function	Y	2	0	C May be inoperative provided associated high speed function operate normally.
30-00-13E	High Speed Function	Y	2	1	C May be inoperative provided associated low speed function operates normally.
30-00-13F	High Speed Function "DISP.APPR.REQ'D"	Y	2	0	C May be inoperative provided both low speed functions operate normally and rain intensity is less than moderate.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-13A	Windshield Wiper Selector	___ Windshield Wiper System(s) INOP
30-00-13B	Windshield Wiper Selector	___ W/S Wiper(s) Park Function INOP
30-00-13C	Windshield Wiper Selector	___ W/S Wiper(s) Intermittent Speed Function INOP
30-00-13D	Windshield Wiper Selector	___ W/S Wiper(s) Low Speed Function INOP
30-00-13E	Windshield Wiper Selector	___ W/S Wiper High Speed Function INOP
30-00-13F	Windshield Wiper Selector	___ W/S Wiper(s) High Speed Function INOP

(M) PROCEDURES

30-00-13A

Conditional maintenance procedure. If wiper blade obstructs forward vision, the wiper blade may be relocated to the parked position. If this procedure is necessary, maintenance is required and flight crew may not placard.

1. Do this task: Windshield Wiper Arm Removal ([AMM 30-42-31](#)).
2. Do this task: Windshield Wiper Arm Installation ([AMM 30-42-31](#)).

Note: It is only necessary to put the wiper arm in the parked position and to apply the appropriate downward force on the wiper blade. The steps related to the sweep of the wiper arm are not necessary.

30-00-17 Cowl Anti-Ice Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
30-00-17A	Cowl Anti-Ice Lights "DISP.APPR.REQ'D"	Y	2	1	C	Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided aircraft is not operated in known or forecast icing conditions.
30-00-17B	Cowl Anti-Ice Lights "DISP.APPR.REQ'D"	N	2	1	C	(O) (M) May be inoperative provided: 1. Associated Cowl Anti-Ice Valve is locked OPEN and deferred per MEL 30-00-03B 2. Associated High Stage Valve is considered inoperative and deferred per MEL 36-00-09

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-17A	Affected COWL ANTI-ICE Light	____ COWL ANTI-ICE Light INOP
30-00-17B	Affected COWL ANTI-ICE Light	____ COWL ANTI-ICE Light INOP

(O) PROCEDURES

30-00-17B

See (O) procedures for [30-00-03B](#).

(M) PROCEDURES

30-00-17B

See (M) procedures for [30-00-03B](#), and [36-00-09](#).

30-00-18 Alpha Vane Heater Light Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-18A	Alpha Vane Heater Light Systems	Y	2	0	C
					(M) May be inoperative provided associated heater function operates normally and is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)
30-00-18B	Alpha Vane Heater Light Systems "DISP.APPR.REQ'D"	Y	2	0	C
					May be inoperative provided associated heater is considered inoperative and is deferred per MEL 30-00-08 . Note: Refer to MEL 30-00-08 Angle of Attack Sensor Heater(s) / Stall Warning System Sensor Heater(s) / Alpha Vane Heater(s)

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-18A	Associated ALPHA VANE Heater Light	____ ALPHA VANE Heater Light INOP
30-00-18B	Associated ALPHA VANE Heater Light	____ ALPHA VANE Heater Light INOP

(M) PROCEDURES

30-00-18A

PRIOR TO EACH DEPARTURE:

1. Station a ground observer at the associated vane heater and establish communications.
2. Apply electrical power to the aircraft.
3. Place the associated Pitot Static Heat switch to the ON position.
4. Check that heat radiation can be detected from the associated vane, indicating that heater is functioning. DO NOT TOUCH VANE.

CAUTION

DO NOT PLACE HAND ON PROBE. TEMPERATURES ARE HIGH ENOUGH TO CAUSE BURNS. DO NOT LEAVE HEATER ON LONGER THAN REQUIRED. HEATER LIFE MAY BE UNNECESSARILY SHORTENED.

5. Place the associated Pitot Static Heat switch to the OFF position.
6. Restore aircraft electrical system to normal.

30-00-19 Drain Mast Heaters

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
30-00-19	Drain Mast Heaters "DISP.APPR.REQ'D"	Y	2	0	C (M) May be inoperative provided water supply to associated components is secured off.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-19	Logbook	Both Drain Mast Heaters INOP


(M) PROCEDURES

1. Position the associated water supply valves accordingly (lavatory – 3 each to *TOILET ONLY*, galley or fountain valves OFF – 2 each) 5 total valves.
2. Turn off the water heater in any lavatory that has the water supply shutoff.
3. Ensure lavatory drain valve (in forward lav ONLY) is in the CLOSED (normal) position.
4. Deactivate both drain mast heaters by opening and collaring the following circuit breakers on the P- 18 panel: HEATERS DRAIN MAST AIR and HEATERS DRAIN MAST GND

Note: Pulling the above circuit breakers deactivates BOTH heaters, therefore, ALL sinks and all galley drains should not be used.

5. Placard all affected drains or sinks INOP.

Figure 30-5: Water Supply and Shutoff Valve

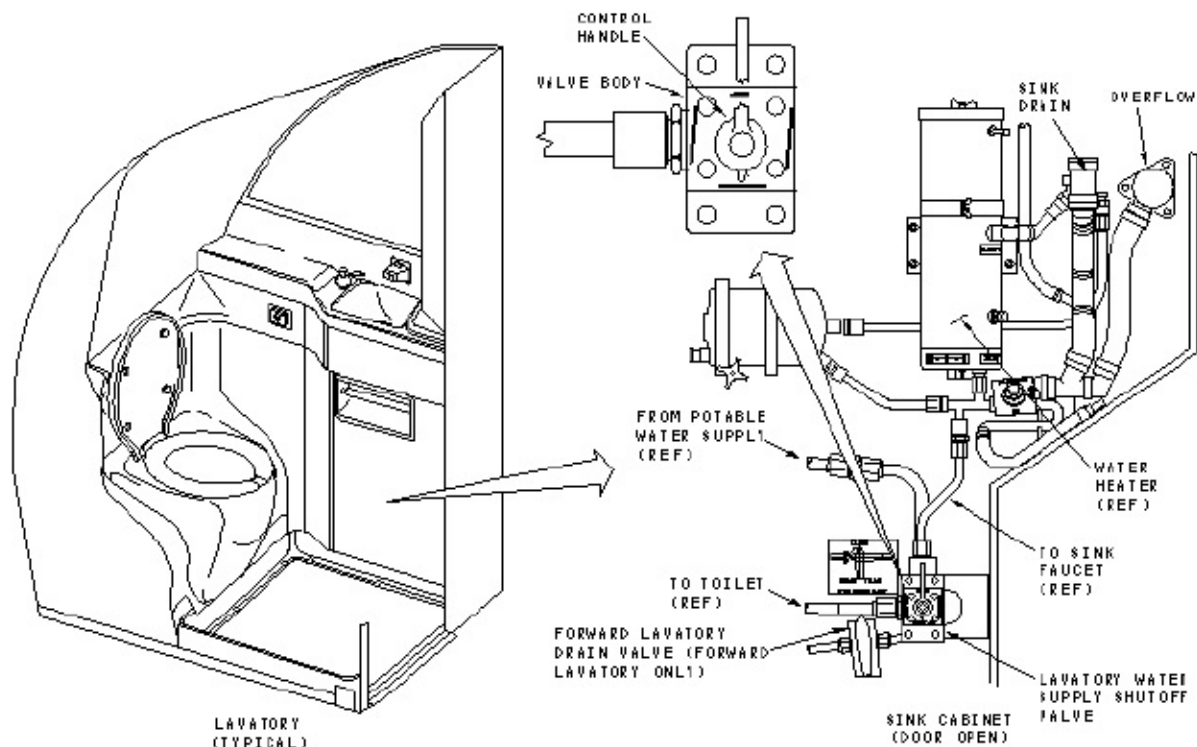

30-00-21 Control Stand Wing Anti-Ice Switches

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
30-00-21A	Control Stand Wing Anti-Ice Switches "DISP.APPR.REQ'D"	N	2	0	C	(O) One or both may be inoperative closed.
30-00-21B	Control Stand Wing Anti-Ice Switches	N	2	0	C	(O) One or both may be inoperative open.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-21A	Logbook	____ CONTROL STAND WING ANTI-ICE SWITCH(S) INOP
30-00-21B	Logbook	____ CONTROL STAND WING ANTI-ICE SWITCH(S) INOP

(O) PROCEDURES

30-00-21A

- Set WING ANTI-ICE switch to OFF on the ground and for takeoff.

Note: Wing anti-ice will not be available on the ground. Wing anti-ice will operate normally in-flight.

Note: Refer to [Vol 1, Supplementary Procedures, Adverse Weather, Wing Anti-Ice Operation – On the Ground, and De/Anti-Icing Guide and Holdover Tables](#) for ground operations.

30-00-21B

- Set WING ANTI-ICE switch to OFF for takeoff.

Note: Wing anti-ice is available on the ground. Wing anti-ice will operate normally in-flight.

30-00-22 Air Data Probe Heat Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	AIR DATA PROBE HEAT SYSTEMS				
30-00-22	AUTO Activation	Y	2	0	C
					(O) May be inoperative provided probe heat lights are not illuminated when PITOT STATIC PROBE HEAT A and B switches are in the ON position.

MEL ITEM	TAB LOCATION	PLACARD TEXT
30-00-22	Adjacent to the PITOT STATIC PROBE HEAT switches	____ AIR DATA PROBE HEAT SYS AUTO ACTIVATION INOP

(O) PROCEDURES

1. Manually position PITOT STATIC PROBE HEAT A and B switches to ON position.

31 Indicating / Recording System

Table of Contents

31-00-01	Clocks
31-00-01A	Clocks
31-00-01B	Automatic UTC Update Function
31-00-02	Flight Data Recorder (FDR) System with Teledyne Digital Flight Data Acquisition Unit (DFDAU)
31-00-02A	Flight Data Recorder (FDR) System with Teledyne Digital Flight Data Acquisition Unit (DFDAU)
31-00-02B	DFDR Recording Parameters Required by 14 CFR
31-00-02C	DFDR Recording Parameters Not Required by 14 CFR
31-00-07	Aircraft Condition Monitoring System (ACMS)
31-00-07A	Aircraft Condition Monitoring System (ACMS)
31-00-07B	Quick Access Recorder (QAR)
31-00-08	Common Display System (CDS)
	COMMON DISPLAY SYSTEM (CDS)
31-00-08A	Display Units (Lower DU)
31-00-08B	CDS MAINT Annunciation PFD/ND
31-00-09	Remote Light Sensor System
31-00-09	Remote Light Sensor System
31-00-10	Speed Reference Selector
31-00-10	Speed Reference Selector
31-00-14	TAKEOFF CONFIG Light
31-00-14	TAKEOFF CONFIG Light

31-00-01 Clocks

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
31-00-01A	Clocks	Y	2	1	C	One may be inoperative at either pilot or copilot station.	
31-00-01B	Automatic UTC Update Function	Y	2	0	C	(O) May be inoperative provided manual mode is set and operates normally.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-01A	Affected Clock	____ Clock INOP
31-00-01B	Affected Clock(s)	____ Clock Automatic UTC Update Function INOP

(O) PROCEDURES

31-00-01B

Note: When UTC time/date information is not being received from GPS, dashes will be displayed in clock's UTC time/date display.

To set manual mode on clock:

1. Select Manual Mode (MAN) with the "TIME/DATE" push button on the clock.
2. Manually set the correct time/date as required.

31-00-02 Flight Data Recorder (FDR) System with Teledyne Digital Flight Data Acquisition Unit (DFDAU)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
31-00-02A	Flight Data Recorder (FDR) System with Teledyne Digital Flight Data Acquisition Unit (DFDAU) "DISP.APPR.REQ'D"	Y	1	0	A May be inoperative provided: 1. Cockpit Voice Recorder (CVR) operates normally, 2. Airplane may not depart from ATL, BOS, LAX, or SLC unless: A. FDR failure occurs after pushback but prior to takeoff, or B. FDR repair was attempted but was not successful. 3. In those cases where repair is attempted but not successful, aircraft may be dispatched on a flight or series of flights but shall not continue beyond ATL, BOS, LAX, or SLC where repair must be accomplished prior to dispatch, 4. It is required that the MCC initiate a Corrective Action Required (CAR) for the next designated airport (ATL,BOS, LAX, or SLC), and 5. Repairs are made within three flight days.
31-00-02B	DFDR Recording Parameters Required by 14 CFR "Contact MCC"	N	-	0	A Up to three (3) recording parameters may be inoperative provided: 1. Cockpit Voice Recorder (CVR) operates normally, and 2. Repairs are made within 20 calendar days. Note: Refer to TOPP 40-20-40 for a listing of DFDR parameters required by 14 CFR.
31-00-02C	DFDR Recording Parameters Not Required by 14 CFR "Contact MCC"	N	-	0	A May be inoperative provided repairs are made prior to the completion of the next heavy maintenance visit (PSV or higher). Note: Refer to TOPP 40-20-40 for a listing of DFDR parameters required by 14 CFR.

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-02A	Flight Data Recorder Switch	Flight Data Recorder INOP
31-00-02B	Flight Data Recorder Switch	Flight Data Recorder ____ Parameter INOP
31-00-02C	Flight Data Recorder Switch	Flight Data Recorder ____ Parameter INOP

31-00-07 Aircraft Condition Monitoring System (ACMS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
31-00-07A	Aircraft Condition Monitoring System (ACMS)	Y	1	0	D	(O) May be inoperative provided engine trend data is entered using ACARS or manually entered onto Engine Performance Report Forms. Note: If ACMS is deferred due to inoperative pitch awareness, Engine Performance Report Forms are not required.
31-00-07B	Quick Access Recorder (QAR)	Y	1	0	D	

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-07A	Logbook	Auto Engine Trend Data Report not transmitting Record Data in Engine Performance Report Forms Aircraft Condition Monitoring System INOP
31-00-07B	Logbook	Quick Access Recorder INOP

(O) PROCEDURES

31-00-07A

1. Refer to [Volume 1 737 5.5.3 ACARS Engine Condition Monitoring \(ECM\) Report](#).
2. Ensure that a minimum of two (2) Engine Performance Logs are installed in the aircraft logbook. If not, contact MCC.

Note: If an Engine Performance Report Form is not available and MCC determines that there is no requirement for ENCON readings during that flight segment, the Engine Performance Report Form may be boarded at the destination. It is desired to have the ENCON data available once per flight day.

31-00-08 Common Display System (CDS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
COMMON DISPLAY SYSTEM (CDS)						
31-00-08A	Display Units (Lower DU)	Y	1	0	C	(O) (M) May be inoperative provided: 1. All remaining DU's operate normally, and 2. It is checked that engine display can be switch to an alternate DU.
31-00-08B	CDS MAINT Annunciation PFD/ND	Y	-	0	B	May be dispatched with faults indicated by CDS MAINT annunciation.

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-08A	Display Units (Lower DU)	Display Units (Lower DU) INOP
31-00-08B	Near Associated PFD/ND	____ PFD/ND CDS MAINT Annunciation Displayed

(O) PROCEDURES

31-00-08A

- Verify that engine indications can be manually selected to either Captain's or First Officer's inboard DU. Select Multi Function Display (MFD) on the Main Panel DU's.

(M) PROCEDURES

31-00-08A

- Deactivate the lower display unit to reduce display unit interference by pulling and securing the DISPLAY CTR LWR circuit breaker on the P6-1 panel located at E12.

31-00-09 Remote Light Sensor System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
31-00-09	Remote Light Sensor System	Y	1	0	C	May be inoperative provided all manual display brightness controls operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-09	Near Captain’s Remote Light Sensor (Glareshield)	Remote Light Sensor System INOP

31-00-10 Speed Reference Selector

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y		0	C	REMARKS OR EXCEPTIONS
31-00-10	Speed Reference Selector					May be inoperative provided speeds can be set using CDU.

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-10	Speed Reference Selector	Speed Reference Selector INOP

31-00-14 TAKEOFF CONFIG Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS	
31-00-14	TAKEOFF CONFIG Light	Y	2	C	(O) May be inoperative provided the associated CABIN ALTITUDE warning light operates normally and flight crew performs a briefing on cabin altitude warning indications and procedures before engine start PRIOR TO THE FIRST FLIGHT OF THE DAY or following any change of either flight crew member. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
31-00-14	Above Nav Display- adjacent to associated light	TAKEOFF CONFIG Light INOP

(O) PROCEDURES

31-00-14

Before engine start, PRIOR TO THE FIRST FLIGHT OF THE DAY or following any change of either flight crew member:

1. Perform Cabin Altitude Warning Indication Briefing using [MEL 21-00-11](#) (O) procedures.

32 Landing Gear

Table of Contents

32-00-02	Anti-Skid System
32-00-02	Anti-Skid System
32-00-03	Parking Brake Valve
32-00-03	Parking Brake Valve
32-00-04	Parking Brake Light
32-00-04	Parking Brake Light
32-00-07	Automatic Brake System
32-00-07A	Automatic Brake System
32-00-07B	Automatic Brake System
32-00-08	Rudder Pedal Nose Wheel Steering System (Rotary Actuator)
32-00-08	Rudder Pedal Nose Wheel Steering System (Rotary Actuator)
32-00-09	Direct Reading Tire Pressure Gauge
32-00-09	Direct Reading Tire Pressure Gauge
32-00-10	Alternate Anti-Skid Valves
32-00-10	Alternate Anti-Skid Valves
32-00-12	Nose Wheel Steering Switch
32-00-12	Nose Wheel Steering Switch
32-00-13	Hydraulic Brake Pressure Indicator
	HYDRAULIC BRAKE PRESSURE INDICATOR
32-00-13A	Wheel Well Brake Accumulator Indicator
32-00-13B	Flight Deck HYD BRAKE PRESS Indication System
32-00-14	Gear Retraction Braking System
32-00-14	Gear Retraction Braking System
32-00-16	Landing Gear Actuation System
32-00-16	Landing Gear Actuation System
32-00-17	Proximity Switch Electronics Unit (PSEU) System
	PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) SYSTEM
32-00-17A	PSEU Fault
32-00-17B	PSEU Fault
32-00-17C	PSEU Light
32-00-17D	SPSEU Light
32-00-19	Main Landing Gear Uplock Springs
32-00-19	Main Landing Gear Uplock Springs
32-00-20	Landing Gear Frangible Fitting
32-00-20	Landing Gear Frangible Fitting
32-00-21	Flap Landing Warning Switch, S138
32-00-21	Flap Landing Warning Switch, S138

32-00-22 Two Position Tail Skid

- TWO POSITION TAIL SKID
- 32-00-22A Retraction Mechanism
- 32-00-22B Retraction Mechanism
- 32-00-22C Cartridge Core Assembly

32-00-02 Anti-Skid System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
32-00-02	Anti-Skid System "Contact MCC" "DISP.APPR.REQ'D" "Revenue Passengers Not Authorized"	Y	1	0	B (O) (M) May be inoperative provided: 1. MCC must provide authorization prior to use, 2. No revenue passengers or cargo are carried, 3. A maximum of 19 persons are carried as authorized by 14 CFR for non-passenger carrying operations, 4. Associated Anti-Skid channel(s) is deactivated, 5. Both Thrust Reversers must be operative, 6. Flight crew is briefed by Flight Ops, 7. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and 8. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-02	Auto Brake Switch	1. Anti-Skid System INOP 2. Do Not Use Auto Brakes

(O) PROCEDURES

1. Refer to QRH Antiskid Inoperative Checklist.
2. Tailwind takeoffs are NOT authorized.
3. Reduced thrust takeoffs using the assumed temperature method are NOT authorized. TO1 and TO2 are permitted.
4. Turn the Autobrake System to the OFF position and do not use.
5. Extend speed brakes manually since automatic extension system may not be operative with Anti-Skid inoperative.
6. Plan to land on the longest runway at destination.

32-00-02	ANTI-SKID SYSTEM
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	-800 AWABS Takeoff data is provided for DRY runway conditions only. Takeoffs using SLP-WET, ICY, 25CTR, or 50CTR data are not authorized. -900ER AWABS Takeoff data is provided for DRY runway conditions only. Takeoffs using SLP-WET, ICY, 25CTR, or 50CTR data are not authorized.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 32-00-02.

(M) PROCEDURES

Note: *The antiskid system has two circuit breakers (C/B's); one for Inboard (INBD) and one for Outboard (OUTBD) wheel brakes. If only one of the two antiskid channels is inoperative, the other channel may be left on to provide antiskid protection for the INBD or OUTBD wheels. Any channel that is inoperative must be turned off to ensure full manual braking capability.*

OPTION 1 - Deactivate Antiskid System **Without** System Bite Check:

1. Pull and secure the circuit breakers on the P6-3 panel:
 - A. LANDING GEAR ANTISKID INBD at location E16, and
 - B. LANDING GEAR ANTISKID OUTBD at location E18.
2. Placard the Autobrake switch- AUTOBRAKE INOP- LEAVE OFF.

OPTION 2 - Deactivate Antiskid System **With** System Bite Check:

Maintenance is Required and Flight Crew May Not Placard

Note: *If only one of the two antiskid channels is inoperative, the other channel may be left on to provide antiskid protection for the INBD or OUTBD wheels.*

Identify faulty channel by performing maintenance BITE check as follows (Refer to [AMM task 32-00-00-040-801](#)):

1. Gain access to the antiskid/autobrake control unit in the electronics bay E1-3.
2. Note all faults by pressing the PRESS/TEST - BIT switch to the BIT position until "TEST END".
3. Clear all faults by pushing RESET.
4. Note existing faults by pressing the PRESS/TEST - BIT switch to the BIT position until "TEST END".
5. Pull and secure P6-3 panel ANTISKID circuit breaker associated with existing faults:
 - A. LANDING GEAR ANITSKID INBD located at E16.
 - B. LANDING GEAR ANTISKID OUTBD located at E18.
6. Placard the Autobrake switch- AUTOBRAKE INOP- LEAVE OFF.

32-00-03 Parking Brake Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
32-00-03	Parking Brake Valve “DISP.APPR.REQ’D”		N	1	0	B	(O) (M) May be inoperative provided: 1. Antiskid is deactivated and deferred per MEL 32-00-02, 2. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and 3. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-03	1. Parking Brake Lever 2. Auto Brake Switch 3. AUTO SPOILERS Light	1. Parking Brake Valve INOP Closed 2. Do Not Use Auto Brakes 3. Do Not Use Auto Spoiler System

(O) PROCEDURES

Note: The parking brake operates normally with the parking brake valve inoperative closed.

- Tailwind takeoffs are NOT authorized.
- Reduced thrust takeoffs using the assumed temperature method are NOT authorized. TO1 and TO2 are permitted.
- Verify that the anti-skid system is deactivated:
 - ANTISKID INBD and ANTISKID OUTBD circuit breakers are pulled and secured.
- The auto brakes and auto spoilers are considered inoperative.
- Use anti-skid inoperative braking procedure.
- Extend speed brakes manually since automatic extension system is inoperative.

32-00-03	PARKING BRAKE VALVE
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	-800 AWABS Takeoff data is provided for DRY runway conditions only. Takeoffs using SLP-WET, ICY, 25CTR, or 50CTR data are not authorized. -900ER AWABS Takeoff data is provided for DRY runway conditions only. Takeoffs using SLP-WET, ICY, 25CTR, or 50CTR data are not authorized.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 32-00-03.

(M) PROCEDURES

Place the parking brake valve in the fully CLOSED position as follows:

- Check that the landing gear ground lock pins are properly installed.
- With electrical power on the aircraft and wheels chocked, release the parking brake.
- Open the ANTI-SKID FAIL & PARKING BRAKE or LANDING GEAR PARKING BRAKE circuit breaker on the P6-3 Panel.
- Deactivate the antiskid system:
 - Pull and secure the ANTISKID INBD and ANTISKID OUTBD circuit breakers.

	737 Minimum Equipment List 32 Landing Gear	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

5. Gain access to the parking brake valve and disconnect, cap, and stow the electrical connector at the valve.
6. Manually position the override lever on the valve to the fully closed (POS 2) position.
7. Close the ANTI-SKID FAIL & PARKING BRAKE or LANDING GEAR PARKING BRAKE circuit breaker on the P6-3 Panel.
8. With the parking brake released and the anti-skid deactivated, verify that the ANTI-SKID INOP light is on.
9. Place the autobrake switch to the OFF position.
10. Restore the aircraft to its required configuration.

32-00-04 Parking Brake Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
32-00-04	Parking Brake Light	N	1	0	C	(M) May be inoperative provided parking brake shutoff valve is verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-04	Parking Brake Warning Light	Parking Brake Warning Light INOP

(M) PROCEDURES

1. Check that landing gear ground lock pins are properly installed.
2. With electrical power on the aircraft and wheels chocked, set and release the parking brake.
3. Verify that the parking brake shutoff valve (located on the wheel well aft bulkhead) moves to the closed position (POS 2) when the parking brake is set and moves to the open position (POS 1) when the parking brake is released. These results indicate that the parking brake valve is operating normally.
4. The ANTISKID INOP light may illuminate when the parking brake is set. Check that ANTISKID INOP light extinguishes when parking brake is released. If ANTISKID INOP light does not extinguish when parking brake is released, refer to [MEL Item 32-00-02](#), Antiskid System.
5. Remove landing gear ground lock pins prior to dispatch.

32-00-07 Automatic Brake System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
32-00-07A	Automatic Brake System "DISP.APPR.REQ'D"	N	1	0	C (M) May be inoperative provided system is deactivated and secured. Note: If AUTOBRAKE DISARM or INOP light <u>EXTINGUISHES</u> with autobrake select switch in OFF, dispatch is allowed without deactivating the autobrake system (autobrake select switch in the OFF position). Use MEL 32-00-07B
32-00-07B	Automatic Brake System "DISP.APPR.REQ'D"	Y	1	0	C May be inoperative provided: 1. AUTOBRAKE DISARM or INOP light does not illuminate with auto-brake select switch in OFF position. 2. Select switch is left in OFF position.


MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-07A	AUTO BRAKE Select Switch	Automatic Brake System INOP
32-00-07B	AUTO BRAKE Select Switch	Automatic Brake System INOP

(M) PROCEDURES

32-00-07A

Reference [AMM 32-00-00-040-805](#).

Figure 32-1: AUTOBRAKE CONTROL MODULE

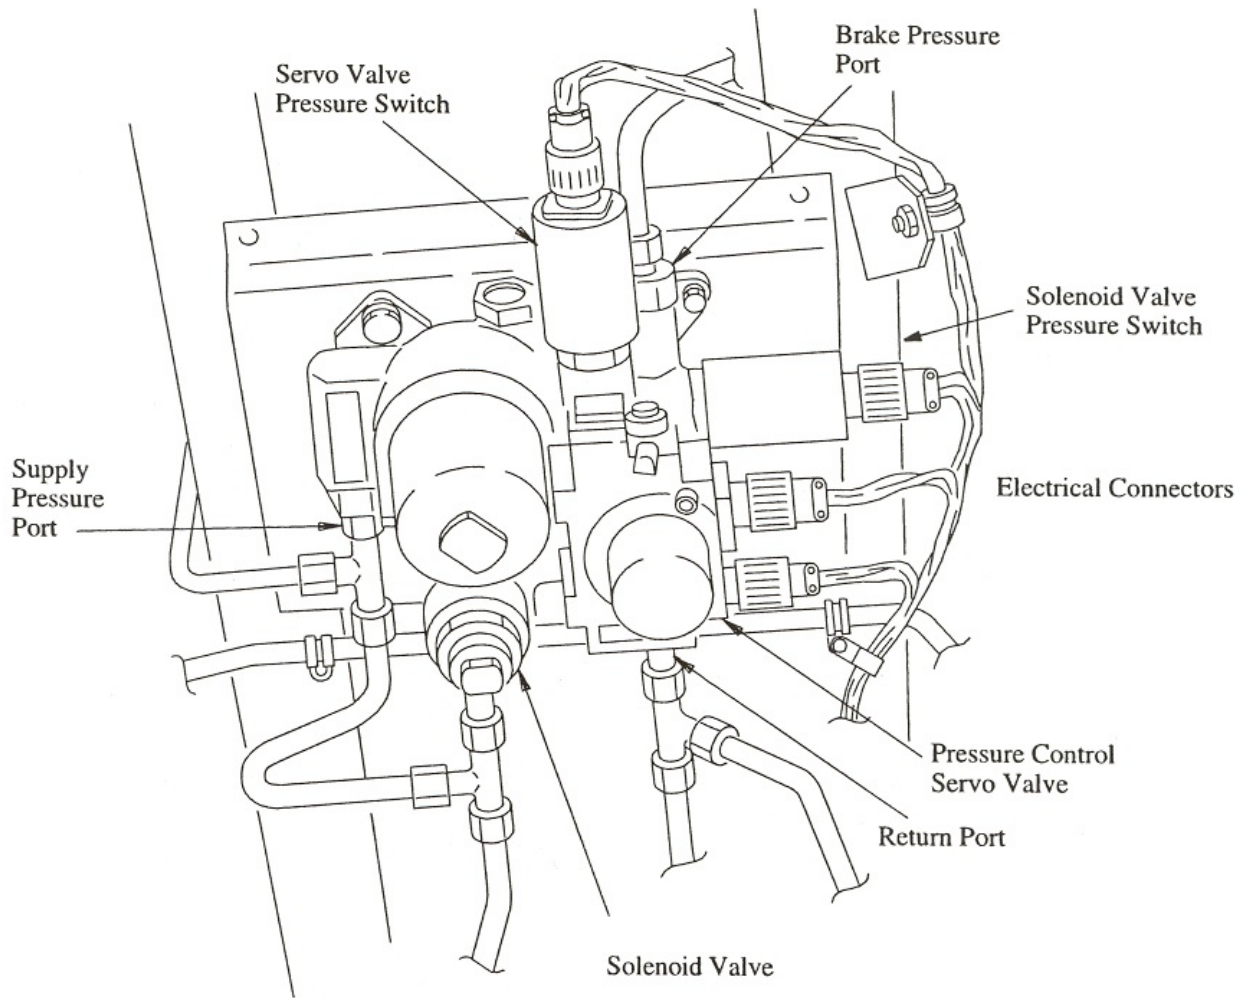

32-00-08 Rudder Pedal Nose Wheel Steering System (Rotary Actuator)

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD		REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION		REMARKS OR EXCEPTIONS
32-00-08	Rudder Pedal Nose Wheel Steering System (Rotary Actuator)	1	Per Flight Operations and TechOps Management, this item has been deleted. Delta Flight Crews, including Management Crews, are not authorized to operate any B737 aircraft with the rudder pedal nose wheel steering system inoperative.

32-00-09 Direct Reading Tire Pressure Gauge

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
32-00-09	Direct Reading Tire Pressure Gauge	Y	6	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-09	Logbook	Direct Reading Tire Pressure Gauge(s) INOP

32-00-10 Alternate Anti-Skid Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	2	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
32-00-10	Alternate Anti-Skid Valves “DISP.APPR.REQ'D”				B	(M) May be inoperative provided: 1. Manual braking capability of alternate brake system is verified on associated wheels, and 2. Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-10	ANTISKID INOP Light	ALT Antiskid Valve INOP

(M) PROCEDURES

1. If the alternate anti-skid valve is inoperative, verify manual braking is available on the affected wheels with the alternate brake system as follows:
 - A. Provide electrical power to the aircraft.
 - B. Check wheel chocks are in place.
 - i. P6-3 panel circuit breakers ANTISKID INBD and ANTISKID OUTBD are closed.
 - C. Depressurize hydraulic system B and provide hydraulic system A pressure.
 - D. Depress and release brake pedals several times.
 - E. Observe brake wear indicator pins for movement to insure that all brakes are operating normally.

If brakes do not operate normally AFTER PERFORMING ABOVE STEPS:

1. Open the following LANDING GEAR ANTISKID circuit breakers on the P6-3 panel:
 - o ANTI-SKID INBD
 - o ANTI-SKID OUTBD
2. Depress and release brake pedals several times.
3. Observe brake wear indicator pins for movement to insure that all brakes are operating normally.
4. If all brakes operate normally, the Anti-Skid system is considered inoperative and deferred per [MEL 32-00-02](#).
5. If any brake remains inoperative, the aircraft can not be dispatched.

32-00-12 Nose Wheel Steering Switch

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
32-00-12	Nose Wheel Steering Switch	N	1	0	C (M) may be inoperative provided; 1. Nose wheel steering is powered by Hydraulic System A, and 2. Landing gear transfer valve is verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-12	Nose Wheel Steering Switch	Nose Wheel Steering Switch INOP

(M) PROCEDURES

Verify the landing gear transfer valve operates normally as follows:

TEST OF TRANSFER VALVE SOLENOIDS.

1. Supply electrical power to the aircraft.
2. Install landing gear pins.
3. Pressurize Hydraulic system A.
4. Following circuit breakers are to be closed on the P6-2 panel:
 - A. 6C16 HYD SYS LDG GR SYS XFR VALVE PRI.
 - B. 6C15 HYD SYS LDG GR SYS XFR VALVE SEC.
5. Move the Landing gear lever to the DN position.
6. Push the ON/OFF switch on the PSEU panel on the E-11 shelf.
7. Push the down arrow until GROUND TESTS? is displayed, then press YES.
8. Push the down arrow until LGTV TEST? is displayed, then press YES.
9. Make sure the transfer valve passes the test.
10. Return aircraft to normal condition.

TEST OF TRANSFER VALVE OPERATION WHICH USES ALTERNATE STEERING.

1. Lift the nose of the airplane on jacks.
2. Make sure these circuit breakers on the P6-3 panel are closed:
 - A. 6D17 Landing Gear Nose Gear Steer
 - B. 6C15 LANDING GEAR AIR/GND SYS 2
3. Make sure the ALT NOSE WHEEL STEERING switch on the P-1 Captain's panel is in the NORM position.
4. Remove the lock pin from the towing lever and allow the lever to move to the NORMAL position.
5. Use hydraulic jack to compress the shock strut at least 3.5 inches.
6. Hydraulic System A:
 - A. Remove System A or System B power.
7. Hydraulic System B:
 - A. Pressurize System A or B power.

CAUTION

THE SHOCK STRUT MUST BE COMPRESSED AT LEAST 3.5 INCHES BEFORE YOU OPERATE THE NOSE WHEEL STEERING. IF YOU OPERATE THE STEERING WITH THE SHOCK STRUT COMPRESSED LESS THAN 3.5 INCHES YOU WILL DAMAGE THE CENTERING CAMS IN THE NOSE GEAR.

	737 Minimum Equipment List 32 Landing Gear	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

8. Move the ALT NOSE WHEEL STEERING switch on the P-1 Captain's panel to the ALT position.
9. Make sure the nose wheel steering operates:
 - A. Turn the nose gear steering wheel full travel in one direction, then the other direction, and then return it to center.
10. Move the ALT NOSE WHEEL STEERING switch on the P-1 Captain's panel to the NORM position.
11. Make sure the nose wheel steering does not operate.
12. Hydraulic System B
 - A. Remove Hydraulic system A or B power.
13. Move the towing lever to the TOW position and install lock pin.

32-00-13 Hydraulic Brake Pressure Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
HYDRAULIC BRAKE PRESSURE INDICATOR					
32-00-13A	Wheel Well Brake Accumulator Indicator	Y	1	0	C May be inoperative provided Flight Deck brake pressure indicator operates normally.
32-00-13B	Flight Deck HYD BRAKE PRESS Indication System	N	1	0	C (M) May be inoperative provided brake accumulator charge is verified normal ONCE EACH FLIGHT DAY. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-13A	Flight Deck HYD BRAKE PRESS Indicator	Wheel Well Brake Accumulator Indicator(s) INOP
32-00-13B	Flight Deck HYD BRAKE PRESS Indicator	Flight Deck HYD BRAKE PRESS Indicator INOP


(M) PROCEDURES

32-00-13B


ONCE EACH FLIGHT DAY:

1. Chock wheels and release parking brakes.
2. Depressurize Hydraulic System A and B.
3. Apply and release brakes 10 times with approximately 3 seconds between each application.
4. Verify that the associated wheel well brake accumulator gauge pressure indication is within limits after 10 applications (refer to the wheel well placard).
5. Pressurize Hydraulic System A and B and verify that operative brake indicator is approximately 3000 psi.
6. Set the parking brakes.
7. Depressurize Hydraulic Systems A and B.

Figure 32-2: BRAKE HYDRAULIC ACCUMULATOR SERVICING

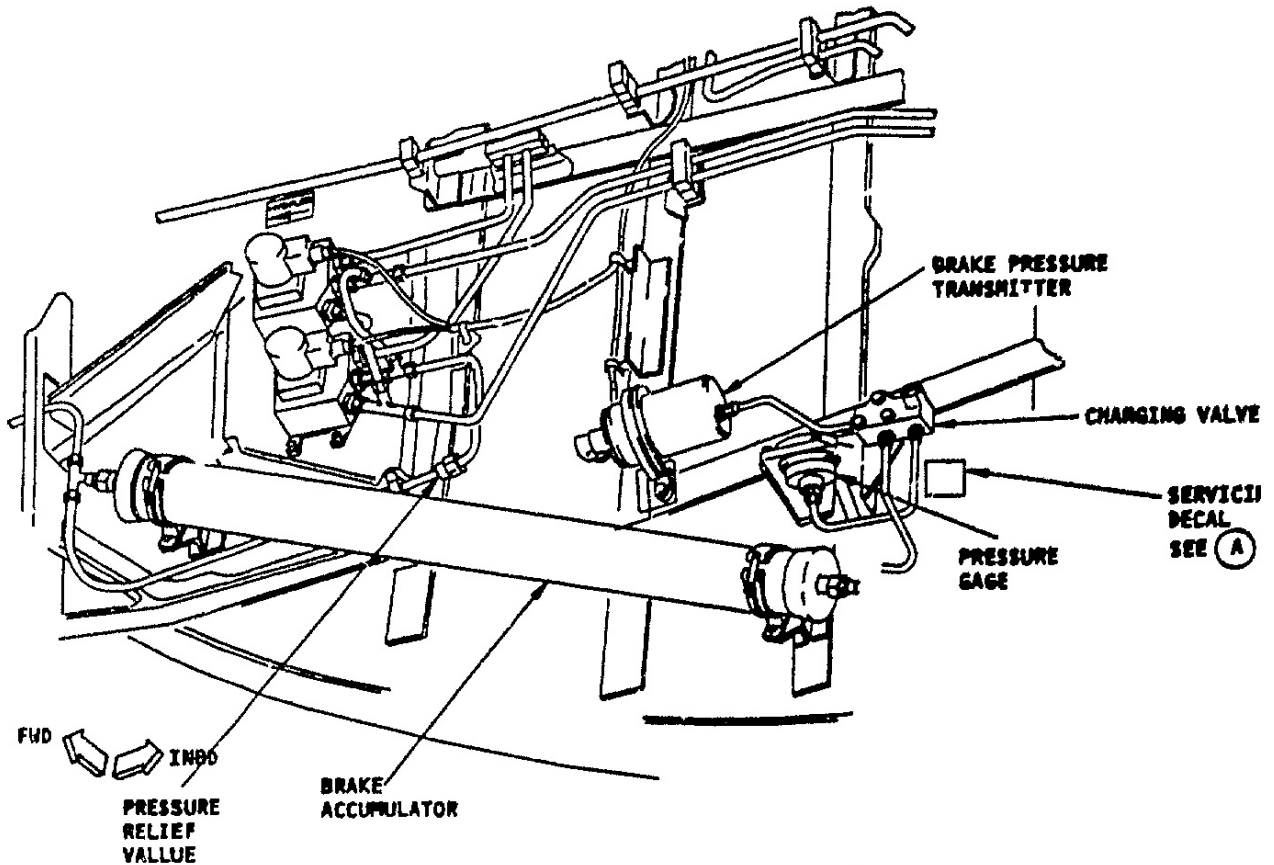

CHARGING INSTRUCTIONS-
HYDRAULIC ACCUMULATOR
WITH SYSTEM DEPRESSURIZED
CHARGE WITH DRY NITROGEN
TO APPLICABLE PRESSURE PER
CHART BELOW - ± 50 PSI

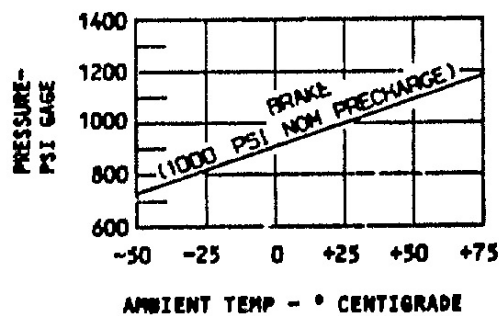

BACH12R11UP

(A)

32-00-14 Gear Retraction Braking System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
32-00-14	Gear Retraction Braking System "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided; 1. After takeoff, landing gear remains extended for two minutes before retraction, 2. Takeoff performance is based on Landing Gear Extended, and 3. Performance corrections are applied. Note: This relief should only be applied for an inoperative Main Landing Gear Retraction Braking System. Do not use this item for Nose Landing Gear de-spin brakes/snubbers.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-14	Near Landing Gear Lever	Gear Retraction Braking System INOP

(O) PROCEDURES

1. Reduced thrust takeoffs using the assumed temperature method are NOT authorized. TO1 and TO2 are permitted.
2. Improved performance takeoffs are NOT authorized.
3. VMO and MMO are restricted to 270 KIAS and .73 Mach while gear is extended.

32-00-14	GEAR RETRACTION BRAKING SYSTEM
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 200 lbs.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 32-00-14.

32-00-16 Landing Gear Actuation System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
32-00-16	Landing Gear Actuation System "Revenue Passengers Not Authorized" "Contact MCC" "DISP.APPR.REQ'D"	N	1	0	B (O) (M) May be inoperative provided; 1. MCC must provide authorization prior to use, 2. Inoperative components are secured by an accepted procedure, 3. No revenue passengers are carried, 4. A maximum of 19 persons are carried as authorized by 14 CFR for non-passenger carrying operations, 5. Landing gear are secured in down position, 6. Airplane is dispatched in accordance with ODM, Ferry section, Landing Gear Extended, and 7. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-16	Near Landing Gear Lever	LANDING GEAR ACTUATION SYS INOP

(O) PROCEDURES

32-00-16

- The captain will conduct a safety briefing on smoking, seat belts, emergency exits, oxygen, and if applicable, flotation equipment for EOW operations.
- Refer to ODM, Ferry section, Landing Gear Extended.
- Ensure maintenance has placed the Alternate Gear Down Dispatch switch to the ALTN position.

32-00-16	LANDING GEAR ACTUATION SYSTEM
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	1. When Automated Flight Plan System is used, use Performance Code LGD (if available), or 2. When Automated Flight Plan System is NOT available, use conservative factors in ODM to compute the flight planning data.
NOTES	1. None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 32-00-16.

(M) PROCEDURES

32-00-16

- Secure the landing gear in the down position ([AMM Task 32-00-00-040-812](#)).
 - Install landing gear downlock pins ([AMM Task 32-00-01-480-801](#)).
- Place the **ALTERNATE VMO/MMO** switch (S01127), located in the main equipment center (E/E compartment), to the **ALTN** position as follows (Reference [Figure 32-3 Alternate VMO/MMO switch in ALTN position for GEAR DOWN operations](#) and [Figure 32-4 Alternate VMO/MMO switch in NORM position for NORMAL operations](#)):
 - Remove safety wire and open switch guard.
 - Push switch up into the **ALTN** position.
 - Close switch guard ensuring the switch guard captures the switch in the **ALTN** position.
 - Re-install safety wire.
- Inoperative components are properly secured by an acceptable procedure.

CONTINUED ON NEXT PAGE

Figure 32-3: Alternate VMO/MMO switch in ALTN position for GEAR DOWN operations



Figure 32-4: Alternate VMO/MMO switch in NORM position for NORMAL operations



32-00-17 Proximity Switch Electronics Unit (PSEU) System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PROXIMITY SWITCH ELECTRONICS UNIT (PSEU) SYSTEM					
32-00-17A	PSEU Fault	N	-	0	C (M) May be dispatched with faults indicated by PSEU light provided PSEU is checked for faults PRIOR TO EACH DEPARTURE. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)
32-00-17B	PSEU Fault	Y	-	0	C (M) May be dispatched with faults indicated by PSEU light provided PSEU light can be extinguished.
32-00-17C	PSEU Light	N	1	0	C (M) May be inoperative provided PSEU is checked for faults PRIOR TO EACH DEPARTURE. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)
32-00-17D	SPSEU Light	N	1	0	C (M) May be inoperative provided SPSEU is checked for faults PRIOR TO EACH DEPARTURE. (Log Book Entry Required) Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-17A	PSEU Light	PSEU Fault INOP
32-00-17B	PSEU Light	PSEU Fault INOP
32-00-17C	PSEU Light	PSEU Light INOP
32-00-17D	SPSEU Light	SPSEU Light INOP

(M) PROCEDURES

32-00-17A, 32-00-17C

PRIOR TO EACH DEPARTURE:

1. Gain access to the PSEU through the forward access door.
2. Power the PSEU BITE Control Panel by pressing the ON/OFF switch.
3. EXISTING FAULTS? Will be displayed. Press the YES switch.
4. One of the following messages will be displayed:
 - A. NO FAULTS – airplane may be dispatched without further action.
 - B. DISPATCH FAULT or DISPATCH PER MEL – msg # 32-64003
 - Dispatch allowed for 10 days unless msg #32-62009, 32-62109, 32-62010, 32-62110, or 32-62014 are also displayed.
 - If msg #32-62009, 32-62109, 32-62010, 32-62110, or 32-62014 are displayed, refer to [MEL Item 32-00-21](#).
 - C. NO DISP FAULT or DO NOT DISPATCH – msg # 32- 64004 – **Dispatch is not allowed.**
 - If msg #32-62009, 32-62109, 32-62010, 32-62110, or 32-62014 are displayed, refer to [MEL Item 32-00-21](#).

32-00-17B

For dispatchable faults, extinguish the PSEU light by one of these three steps:

1. Pushing the MASTER CAUTION light, or
2. Setting the parking brake, or
3. Shutting down both engines.

	737 Minimum Equipment List 32 Landing Gear	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

32-00-17D

PRIOR TO EACH DEPARTURE check SPSEU BITE for faults:

1. Supply power to the airplane.
2. Gain access to the SPSEU through the electronic equipment access door.
3. Press the DISPLAY FAULT button to cycle through all faults that may be present.

Note: *Fault codes 1-8 and B-E are NOT allowed for dispatch. Fault code A indicates a Tail Skid Overcurrent, refer to MEL 32-00-22. A blinking F is an indication that one or more faults are latched, but is not a fault code itself. Fault code 0 indicates that there are no faults.*

32-00-19 Main Landing Gear Uplock Springs

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
32-00-19	Main Landing Gear Uplock Springs	N	4	3	B	(O) (M) One spring on one main gear uplock mechanism may be missing provided landing gear lever remains in UP position for duration of flight until gear extension is required.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-19	Near Landing Gear Lever	Main Landing Gear Uplock Springs INOP

(O) PROCEDURES

after takeoff, leave landing gear lever in the UP position for the duration of the flight until gear extension is required.

(M) PROCEDURES

Remove the affected main landing gear uplock spring.

32-00-20 Landing Gear Frangible Fitting

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
32-00-20	Landing Gear Frangible Fitting	N	2	0	C	(M) May be broken or missing provided fitting is replaced with a hydraulic cap assembly.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-20	Near Landing Gear Lever	Landing Gear Frangible Fitting INOP

(M) PROCEDURES

Remove the frangible fitting and nut and replace with a standard BACC14AD06JL or equivalent hydraulic cap assembly.

32-00-21 Flap Landing Warning Switch, S138

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
32-00-21	Flap Landing Warning Switch, S138					C	(M) Switch contacts normally in use may be inoperative provided: 1. S138 switch is rewired using an alternate set of contacts, and 2. PSEU BITE is used to verify normal operation of S138 switch.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-21	On Control Stand Near Flap Lever	Flap Landing Warning Switch INOP

(M) PROCEDURES

S138 switch is rewired and PSEU BITE is used to verify normal operation of the S138 switch ([AMM 32-00-00/901](#)).

- Failure of the S138 switch is indicated by illumination of the PSEU fault light accompanied by fault message numbers 32-62009, 32-62109, 32-62010, 32-62110, or 32-62014 shown in the PSEU BITE.
- Each fault message indicates a high resistance short to ground or disagreement between contacts as shown below:

Message	Associated Connector	Wire
32-62009	D10984 pin 48 S138 contact "3"	wire W8124-A-CC
32-62109	D10984 pin 48 S138 contact "3"	wire W8124-A-CC
32-62010	D10984 pin 49 S138 contact "18"	wire W8124-A-UU
32-62110	D10984 pin 49 S138 contact "18"	wire W8124-A-UU
32-62014	Disagreement between contacts "3" and "18"	

For a S138 switch with connector attached to D14730

Message	Associated Connector	Wire
32-62009	D10984 pin 48 S138 contact "C"	wire W8124-0506-20
32-62109	D10984 pin 48 S138 contact "C"	wire W8124-0506-20
32-62010	D10984 pin 49 S138 contact "U"	wire W8124-0511-20
32-62110	D10984 pin 49 S138 contact "U"	wire W8124-0511-20
32-62014	Disagreement between contacts "C" and "U"	

- Refer to Wiring Diagram Manual 32-64-21 and wire list for available contacts. The wires for the contact set (center tap contact and normally open contact) may be cut from the S138 switch set and temporarily connected to an available set of contacts in the same switch as follows, until the switch can be replaced:
 - Select flaps full up.
 - Select an available set of contacts, after verifying that the normally open contact exhibits better than 10.0 mega-ohms isolation resistance to ground and to center tap.
 - Connect wire to selected set of contacts using approved waterproof splices per Standard Wiring Practices Manual.
 - Cap and stow deactivated wires from S138 switch.
 - Test the S138 switch as follows:
 - Use the PSEU BITE panel to select the S138 switch through D10984 pin 48 and 49 and verify each position displays NO GND.
 - Select flaps 15.
 - Use the PSEU BITE panel to select the S138 switch through D10984 pin 48 and 49 and verify each position displays GND.
- Alternate to step 3. For a S138 switch with connector attached to D14730. Refer to Wiring Diagram Manual 32-64-21 and wire list for available contacts. Refer to Standard Wiring Practices Manual for any established wiring

 DELTA	737 Minimum Equipment List 32 Landing Gear	Revision: 50.0.1 Date: 24-Apr-2026
--	---	---

procedures required. Remove the connector pins A and C, or U and S, from whichever is discrepant on the switch side.

- A. Select flaps full up.
- B. Select an available set of contacts, after verifying that the normally open contact exhibits better than 10.0 mega-ohms isolation resistance to ground and to center tap. Available set may be any of the switch NO and CT contacts on any available switch (i.e.: D and F, K and M, N and R).
- C. Insert the connector pins removed from A and C, or U and S, into whichever set of connector pin locations previously selected above.
- D. Plug connector holes with removed plugs from pins at newly used set of contacts.
- E. Test the S138 switch as follows:
 - i. Use the PSEU BITE panel to select the S138 switch through D10984 pin 48 and 49 and verify each position displays NO GND.
 - ii. Select flaps 15.
 - iii. Use the PSEU BITE panel to select the S138 switch through D10984 pin 48 and 49 and verify each position displays GND.

32-00-22 Two Position Tail Skid

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
TWO POSITION TAIL SKID					
32-00-22A	Retraction Mechanism (B737-900ER and aircraft 3774 thru 3777) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: 1. Tail skid is secured in retracted position, and 2. Performance corrections are applied.
32-00-22B	Retraction Mechanism (B737-900ER and aircraft 3774 thru 3777) "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: 1. Tail skid is secured in extended position, and 2. Performance corrections are applied.
32-00-22C	Cartridge Core Assembly (B737-900ER and aircraft 3774 thru 3777) "DISP.APPR.REQ'D"	N	1	0	B (O) (M) May be inoperative provided: 1. Detailed AMM inspection reveals no internal and external structural damage, 2. Tail skid is secured in retracted position, and 3. Appropriate performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
32-00-22A	Near Landing Gear Actuator	Tail Skid Retraction Mechanism INOP Secured In Retracted Position
32-00-22B	Near Landing Gear Actuator	Tail Skid Retraction Mechanism INOP Secured In Extended Position
32-00-22C	Near Landing Gear Actuator	Tail Skid Retraction Mechanism INOP Secured in Retracted Position

(O) PROCEDURES

32-00-22A

Aircraft 3774 – 3777 only: Refer to [ODM, Abnormal section, Abnormal Configuration Actual Landing Distances and Approach Speeds tables](#), for Operational Landing Distances and VREF speeds."

Note: Landing Flap Setting 15 not authorized.

32-00-22A	TWO-POSITION TAIL SKID RETRACTION MECHANISM
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING Reduce RWY ALLOWABLE LANDING WT by 17,000 lbs. Reduce LANDING CLIMB LIMIT WT by 17,000 lbs.

32-00-22A	TWO-POSITION TAIL SKID RETRACTION MECHANISM
EFFECTIVITY	Aircraft 3774 thru 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING Use RWY ALLOWABLE LANDING WT for “TAIL SKID RETRACTED” in ALM – Airport Section.

32-00-22B

32-00-22B	TWO-POSITION TAIL SKID RETRACTION MECHANISM
EFFECTIVITY	-900ER and aircraft 3774 thru 3777
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 0.3%
NOTES	None
AWABS	Performance weight corrections have been applied. Increase V_1 , V_R , and V_2 by 2 KIAS.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 10,000 lbs. Reduce T/O CLIMB LIMIT WT by 10,000 lbs. LANDING None OTHER CORRECTIONS Increase V_1 , V_R , and V_2 by 2 KIAS.

32-00-22C

Aircraft 3774 – 3777: Refer to [ODM, Abnormal section, Abnormal Configuration Actual Landing Distances and Approach Speeds tables](#), for Operational Landing Distances and VREF speeds.”

Note: Landing Flap Setting 15 not authorized.

32-00-22C	TWO-POSITION TAIL SKID CARTRIDGE CORE ASSEMBLY
EFFECTIVITY	-900ER and aircraft 3774 thru 3777
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied. AWABS Takeoff data is provided for DRY and WET skid resistant *grooved or PFC* runways only. Takeoffs using ICY, 25CTR, or 50 CTR data are not authorized.
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 32-00-22C.

(M) PROCEDURES

32-00-22A

Secure the tail skid in the fully retracted position ([AMM 32-00-00/901](#)):

1. Open the stabilizer trim access door to get access to the tail skid assembly.
2. Do a general visual inspection of the tail skid hydraulic actuator for evidence of leaks or damage.
3. Do a general visual inspection of the tail skid linkage for evidence of corrosion or damage.
4. Remove the split rings and the REMOVE BEFORE FLIGHT streamer from the retractable tail skid lockout pin.
5. Install the retractable tail skid lockout pin in the lock links for the tail skid.

Note: *When the tail skid is in the retracted position, the lockout pin is installed from the right to the left from inside the aft unpressurized compartment.*

6. Install the lockpin, part of the retractable tail skid lockout pin, through the end of the retractable tail skid lockout pin.
7. Make sure the lockpin is closed.
8. Close the access panel.

32-00-22B

Secure the tail skid in the fully extended position ([AMM 32-00-00/901](#)):

1. Open the stabilizer trim access door to get access to the tail skid assembly.
2. Do a general visual inspection of the tail skid hydraulic actuator for evidence of leaks or damage.
3. Do a general visual inspection of the tail skid linkage for evidence of corrosion or damage.
4. Remove the split rings and the REMOVE BEFORE FLIGHT streamer from the retractable tail skid lockout pin.
5. Install the retractable tail skid lockout pin in the lock links for the tail skid.

Note: *When the tail skid is in the extended position, the lockout pin is installed from the left to the right by reaching between the drag lever skirt and the fairing.*

6. Install the lockpin, part of the retractable tail skid lockout pin, through the end of the retractable tail skid lockout pin.
7. Make sure the lockpin is closed.
8. Close the access panel.

32-00-22C

Secure the tail skid in the fully retracted position ([AMM 32-00-00/201](#)):

1. Remove the split rings and the REMOVE BEFORE FLIGHT streamer from the retractable tail skid lockout pin.
2. Open the stabilizer trim access door to get access to the tail skid assembly.
3. Do a general visual inspection of the tail skid hydraulic actuator for evidence of leaks or damage.
4. Do a general visual inspection of the tail skid linkage for evidence of leaks or damage.
5. Install the retractable tail skid lockout pin, in the lock links for the tail skid.

Note: *When the tail skid is in the retracted position the lockout pin is installed from the right to the left from inside the aft unpressurized compartment.*

6. Install the lockpin, part of the retractable tail skid lockout pin, through the end of the retractable tail skid lockout pin.
7. Make sure the lockpin is closed.
8. Close the access panel.

33 Lights

Table of Contents

33-00-01	Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System
33-00-01A	Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System
33-00-01B	Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System
33-00-02	Cabin Interior Illumination
33-00-02A	Cabin Interior Illumination (For aircraft without Photoluminescent Escape Path Lighting System installed)
33-00-02B	Ceiling Lights (For aircraft with Photoluminescent Escape Path Lighting System installed)
33-00-02C	Sidewall Lights – Single Window Light Module (For aircraft with Photoluminescent Escape Path Lighting System installed)
33-00-02D	Sidewall Lights (For aircraft with Photoluminescent Escape Path Lighting System installed)
33-00-03	Passenger Lighted Information Signs and Notice System
	PASSENGER LIGHTED INFORMATION SIGNS AND NOTICE SYSTEM
33-00-03A	Passenger Notice System ("NO SMOKING / FASTEN SEAT BELT / Return to Seat") Signs
33-00-03B	Passenger Notice System ("NO SMOKING / FASTEN SEAT BELT / Return to Seat") Signs
33-00-03C	Aural Tone System
33-00-03D	Flight Deck Automatic Function
33-00-04	Lower Cargo Compartment Light Systems (Fwd / Aft)
33-00-04A	Lower Cargo Compartment Light Systems (Fwd / Aft)
33-00-04B	Light Lens
33-00-04C	Light Lens
33-00-05	High Intensity or Strobe Lights System
33-00-05	High Intensity or Strobe Lights System
33-00-06	Anti-Collision Beacons
33-00-06A	Anti-Collision Beacons
33-00-06B	Anti-Collision Beacons
33-00-07	Wing Illumination Lights
33-00-07	Wing Illumination Lights
33-00-08	Landing Lights
33-00-08A	Landing Lights
33-00-08B	Landing Lights
33-00-08C	Retractable Light Extend / Retract Motors
33-00-08D	Retractable Light Extend / Retract Motors
33-00-08E	Landing Lights – LED Array
33-00-08F	Landing Lights – LED Array
33-00-08G	Landing Lights – LED Array
33-00-09	Taxi Light
33-00-09A	Taxi Light
33-00-09B	Taxi Light - LED Array
33-00-10	Runway Turn Off Lights
33-00-10	Runway Turn Off Lights
33-00-11	Wing Tip Position Lights
33-00-11A	Wing Tip Position Lights
33-00-11B	Wing Tip Position Light Bulbs / Lamps / LED Modules

	737 Minimum Equipment List 33 Lights	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

33-00-14 Exterior Emergency Lighting System

33-00-14 Exterior Emergency Lighting System

33-00-15 Interior Emergency Exit Lighting System

INTERIOR EMERGENCY EXIT LIGHTING SYSTEM

33-00-15A Emergency Aisle Lights

33-00-15B Flight Deck Exit Light

33-00-16 System Annunciator Lights, Left and Right (Pilot's Light Shield)

33-00-16A System Annunciator Lights, Left and Right (Pilot's Light Shield)

33-00-16B System Annunciator Lights, Left and Right (Pilot's Light Shield)

33-00-17 Flight Deck Master Lights Test and Individual Light's Press-to-Test Features

33-00-17 Flight Deck Master Lights Test and Individual Light's Press-To-Test Features

33-00-18 Wheel Well Lights

WHEEL WELL LIGHTS

33-00-18A Dome Service Lights

33-00-18B Inspection Flood Lights

33-00-19 Floor Proximity Emergency Escape Path Marking System

33-00-19A Floor Proximity Emergency Escape Path Marking System – Seat Mounted LED and Incandescent Lighting Systems

33-00-19B Floor Proximity Emergency Escape Path Marking System – Photoluminescent Lighting System

33-00-20 LOGO Light System

33-00-20 LOGO Light System

33-00-23 Master Dim System

33-00-23 Master Dim System

33-00-25 Service Area Light Systems

33-00-25 Service Area Light Systems (Nose, Electrical Equipment, Air Conditioning, Aft Accessory, APU, Tailcone Compartments and Fueling Panel)

33-00-01 Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH		REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS	
33-00-01A	Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System	Y	-	-	C Individual lights may be inoperative provided: 1. Remaining Lighting System lights are sufficient to clearly illuminate all required instruments, controls, and other devices for which it is provided, 2. Remaining Lighting System lights are positioned so that direct rays are shielded from flight crewmember's eyes, 3. Lighting configuration and intensity is acceptable to flight crew, and 4. Affected light(s) is not listed in MEL 33-00-01B. Note: Individual button/switch lights and/or annunciation/indications are excluded from this relief. Note: This relief applies only to flight compartment and instrument lighting; it does not apply to warning, caution, or advisory lights. Note: Cockpit emergency lights (background flood lights, white dome light(s) ([some aircraft only have a F/O dome light installed], and standby compass light) may be inoperative for DAY OPERATIONS ONLY and deferred using MEL 33-00-01B.


NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS
33-00-01B	Cockpit / Flight Deck / Flight Compartment and Instrument Lighting System "DISP.APPR.REQ'D"	Y	-	- C
				(O) Individual lights may be inoperative for DAY OPERATIONS ONLY provided: 1. Remaining Lighting System lights are sufficient to clearly illuminate all required instruments, controls, and other devices for which it is provided, 2. Remaining Lighting System lights are positioned so that direct rays are shielded from flight crewmember's eyes, 3. Lighting configuration and intensity is acceptable to flight crew, and 4. Affected light(s) restricted to DAY OPERATIONS ONLY are: - o Captain, Center, F/O Main Panel Flood Lights located underneath the glareshield and controlled by the "background" knob located on the P1-5 panel. - o Standby Compass Light - o Captains Overhead Dome Light Secondary Bulb (Controlled by the emergency light switch) - o O2 Mask Box Flood Lights (LED lights that shine on the Captains and F/O's O2 mask boxes) Note: Individual button/switch lights and/or annunciation/indications are excluded from this relief. Note: This relief applies only to flight compartment and instrument lighting; it does not apply to warning, caution, or advisory lights.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-01A	Associated Indicator, Panel or Lighting Switch	____ Cockpit Instrument Lighting INOP
33-00-01B	Associated Indicator, Panel or Lighting Switch	____ Cockpit Instrument Lighting INOP

(O) PROCEDURES

33-00-01B

Figure 33-1: Background and AFDS Flood Light Control

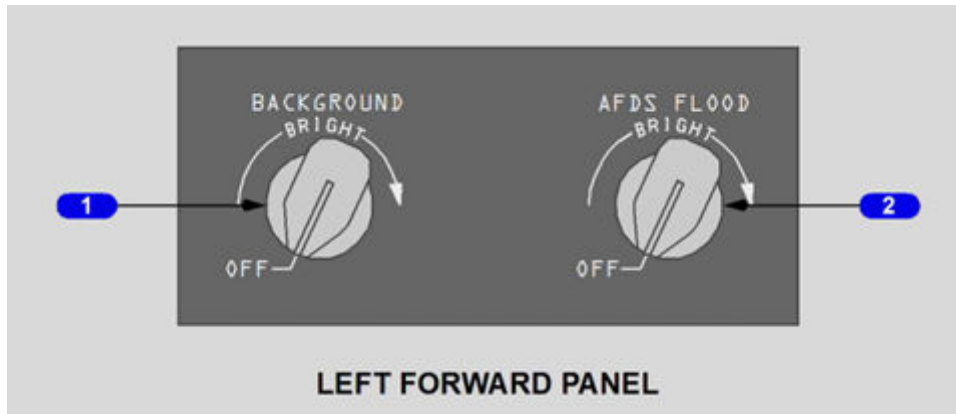

(1) BACKGROUND Light Control

- Rotate – controls incandescent lighting brightness for Captain’s panel, First Officer’s panel, and center panel.

(2) AFDS FLOOD Light Control

- Rotate – controls brightness of lighting directed at AFDS panel.

Note: AFDS Flood Lights are not restricted to DAY OPERATIONS ONLY and should be deferred per [MEL 33-00-01A](#).

33-00-02 Cabin Interior Illumination

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-02A	Cabin Interior Illumination (For aircraft without Photoluminescent Escape Path Lighting System installed) (All Ships except 3931-3963 without AA 3352-01043) "Contact MCC"	Y	-	-	C Individual lights may be inoperative provided sufficient lighting remains for cabin attendants to perform their duties. Note: <i>Emergency lights in the overwing exit sidewall assemblies must remain operational when deferring this item.</i>
33-00-02B	Ceiling Lights (For aircraft with Photoluminescent Escape Path Lighting System installed) (Ships 3931-3963 without AA 3352-01043) "Contact MCC"	Y	-	-	C Every two adjacent ceiling light modules may be inoperative provided: 1. Adjacent two ceiling light modules FWD and AFT (if installed) are operative, 2. All remaining light modules at the same body station are operative, and 3. Adjacent diagonal light modules are operative.
33-00-02C	Sidewall Lights – Single Window Light Module (For aircraft with Photoluminescent Escape Path Lighting System installed) (Ships 3931-3963 without AA 3352-01043) "Contact MCC"	Y	-	-	C Single window (sidewall) light modules may be inoperative provided: 1. Adjacent window (sidewall) light modules FWD and AFT (if installed) are operative, 2. All remaining light modules at the same bodystation are operative, 3. Adjacent diagonal light modules are operative, and 4. Emergency light function at the affected location(s) operates normally.
33-00-02D	Sidewall Lights (For aircraft with Photoluminescent Escape Path Lighting System installed) (Ships 3931-3963 without AA 3352-01043) "Contact MCC"	Y	-	-	C Every two adjacent window (sidewall) light modules may be inoperative provided: 1. Adjacent two window (sidewall) light modules FWD and AFT (if installed) are operative, 2. All remaining light modules at the same bodystation are operative, 3. Adjacent diagonal light modules, including the ceiling light modules on opposite side of the aisle at the same bodystations, are operative, and 4. Emergency light function at the affected location(s) operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-02A	Flight Attendant Cabin Lighting Control Panel	___ CABIN LIGHTS INOP
33-00-02B	Flight Attendant Cabin Lighting Control Panel	___ CABIN CEILING LIGHTS INOP
33-00-02C	Flight Attendant Cabin Lighting Control Panel	___ SIDEWALL LIGHTS INOP
33-00-02D	Flight Attendant Cabin Lighting Control Panel	___ SIDEWALL LIGHTS INOP

33-00-03 Passenger Lighted Information Signs and Notice System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
PASSENGER LIGHTED INFORMATION SIGNS AND NOTICE SYSTEM					
33-00-03A	Passenger Notice System ("NO SMOKING / FASTEN SEAT BELT / Return to Seat") Signs "DISP.APPR.REQ'D"	Y	-	-	C (M) May be inoperative provided: 1. Associated passenger seat or lavatory is not occupied from which a passenger lighted information sign is not readily legible, and 2. Associated seat or lavatory is blocked and placarded-DO NOT OCCUPY. <i>Note: These conditions are not intended to prohibit lavatory use or inspections by crewmembers.</i>
33-00-03B	Passenger Notice System ("NO SMOKING / FASTEN SEAT BELT / Return to Seat") Signs	Y	-	-	C (O) May be inoperative and associated passenger seat or lavatory may be occupied provided: 1. PA system operates normally, and 2. PA system is used to notify passengers and cabin crew when associated sign(s) are placed on or off.
33-00-03C	Aural Tone System	Y	1	0	C
33-00-03D	Flight Deck Automatic Function	Y	1	0	C (O) May be inoperative provided: 1. Manual control function operates normally, and 2. Alternate procedures are used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-03A	Fasten Seat Belt Switch	___ Fasten Seat Belt / No Smoking Sign(s) INOP
33-00-03B	Fasten Seat Belt Switch	___ Fasten Seat Belt / No Smoking Sign(s) INOP
33-00-03C	Fasten Seat Belt Switch	___ Fasten Seat Belt / No Smoking Aural Tone INOP
33-00-03D	Fasten Seat Belt Switch	___ Fasten Seat Belt / No Smoking Auto Function INOP

(O) PROCEDURES

33-00-03B, 33-00-03D

Refer to the [FOM, Briefings and Cabin Crew Communications \(Chapter 5\)](#), for when the pilot in command shall notify passengers when seat belts should be fastened and smoking prohibited.

(M) PROCEDURES

33-00-03A

1. If required, install tapes or ropes of conspicuous contrasting colors to block access to unusable seats prior to boarding passengers.
2. Conspicuous signs or placards shall be placed in appropriate locations to indicate seats which are not to be occupied.
3. For an individual sign inoperative, an observer with normal vision should sit in the passenger seat(s) which is normally serviced by the sign and determine if both a "NO SMOKING" and "FASTEN SEAT BELT" sign can be read from the seat(s). In tests conducted at Boeing for the FAA, a sign was considered "readily legible" if enough of the sign could be seen to identify it. Example: "NO SMOK" and "FASTEN SEAT B" would be considered readily legible.

33-00-04 Lower Cargo Compartment Light Systems (Fwd / Aft)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-04A	Lower Cargo Compartment Light Systems (Fwd / Aft)	Y	-	0	C (M) Light Lens excluded.
33-00-04B	Light Lens (A/C 3701-3771, 3774-3777, 3801-3963)	N	-	0	C May be broken / missing provided associated light bulb is removed. For LED lights, no associated LED Module removal is required.
33-00-04C	Light Lens (A/C 3772, 3773)	N	-	-	C Any number from aft lower cargo compartment and one from forward lower cargo compartment may be broken/missing provided associated light bulb is removed. For LED lights, no associated LED Module removal is required.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-04A	Logbook	____ Cargo Compartment Light Systems INOP
33-00-04B	Logbook	____ Cargo Compartment Light Lens Missing / INOP
33-00-04C	Logbook	____ Cargo Compartment Light Lens Missing / INOP

(M) PROCEDURES

33-00-04A

1. With associated cargo compartment door open, verify the door warning light in cockpit is illuminated on the overhead panel:
 - A. If door warning light is illuminated defer cargo compartment light system per MEL 33-00-04A.
 - B. If door warning is not illuminated and the cargo compartment light system is inoperative, defer the door warning system per [MEL 52-00-03A](#) and cargo compartment light system per MEL 33-00-04A.

33-00-05 High Intensity or Strobe Lights System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-05	High Intensity or Strobe Lights System	Y	1	0	C (M) May be inoperative provided anti-collision beacons operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-05	Adjacent to Strobe Light Switch	____ Strobe Light System INOP

(M) PROCEDURES

33-00-05

If the EXTERIOR LIGHTING – ANTI-COLLISION – WHITE circuit breaker on the P18-3 panel located at B13 is open and will not reset, secure the breaker in the open position.

Note: All white strobe lights will be inoperative with circuit breaker secured open.

33-00-06 Anti-Collision Beacons

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
33-00-06A	Anti-Collision Beacons	Y	2	0	C	(M) May be inoperative provided wing tip/winglet and tail strobe lights are installed and operate normally.
33-00-06B	Anti-Collision Beacons “DISP.APPR.REQ'D”	Y	2	0	C	(M) May be inoperative provided: 1. At least one tail or wing tip/winglet strobe light operates normally, and 2. Operations are not conducted between sunset to sunrise.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-06A	Anti-Collision Light Switch	____ ANTI-COLLISION LIGHT(S) INOP
33-00-06B	Anti-Collision Light Switch	____ ANTI-COLLISION LIGHT(S) INOP

(M) PROCEDURES

33-00-06A, 33-00-06B

If the EXTERIOR LIGHTING – ANTI-COLLISION – RED circuit breaker on the P18-3 panel located at B12 is open and will not reset, secure the breaker in the open position.

Note: Upper and Lower Anti-Collision lights will be inoperative with circuit breaker secured open.

33-00-07 Wing Illumination Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-07	Wing Illumination Lights "DISP.APPR.REQ'D"	Y	2	0 C	(O) (M) May be inoperative provided ground de-icing procedures do not require their use.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-07	Wing Light Switch	____ Wing Illumination Light(s) INOP

(O) PROCEDURES

33-00-07

Adequate lighting must be available for ground deice operations at night.

(M) PROCEDURES

33-00-07

If the EXTERIOR LIGHTING – WING SCAN circuit breaker on the P18-3 panel located at A14 is open and will not reset, secure the breaker in the open position.

Note: Both left and right wing illumination lights will be inoperative with circuit breaker secured open.

33-00-08 Landing Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-08A	Landing Lights	Y	4	2	C One may be inoperative on each side provided one of two operating lights is in fixed position.
33-00-08B	Landing Lights "DISP.APPR.REQ'D"	Y	4	0	C May be inoperative provided operations are not conducted between sunset to sunrise.
33-00-08C	Retractable Light Extend / Retract Motors "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) May be inoperative provided: 1. Light is in extended position, 2. Light illuminates normally, and 3. Performance corrections are applied.
33-00-08D	Retractable Light Extend / Retract Motors "DISP.APPR.REQ'D"	Y	2	0	C (O) May be inoperative provided: 1. Associated light is considered inop and deferred per MEL 33-00-08(A or B), and 2. Appropriate performance adjustments are applied when associated light is not in the fully retracted position.
33-00-08E	Landing Lights – LED Array	Y	4	2	C One may be inoperative on each side provided Taxi Light is deferred per MEL 33-00-09B. Note: There is an inboard LED array (light assembly) and an outboard LED array (light assembly) inside the strakelet on each wing. These same lights are also used for the taxi lights. Taxi lights may also be affected (see Figure 33-2).
33-00-08F	Landing Lights – LED Array	Y	4	2	C Both may be inoperative on one side provided: 1. The Runway Turn Off light on the same side operates normally, and 2. Taxi Light is deferred per MEL 33-00-09B. Note: There is an inboard LED array (light assembly) and an outboard LED array (light assembly) inside the strakelet on each wing. These same lights are also used for the taxi lights. Taxi lights may also be affected (see Figure 33-2).
33-00-08G	Landing Lights – LED Array "DISP.APPR.REQ'D"	Y	4	0	C May be inoperative provided: 1. Operations are not conducted between sunset to sunrise, and 2. Taxi Light is deferred per MEL 33-00-09B. Note: There is an inboard LED array (light assembly) and an outboard LED array (light assembly) inside the strakelet on each wing. These same lights are also used for the taxi lights. Taxi lights may also be affected (see Figure 33-2).

CONTINUED ON NEXT PAGE

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-08A	Associated Landing Light Switch(es)	____ Landing Light(s) INOP
33-00-08B	Associated Landing Light Switch(es)	____ Landing Light(s) INOP
33-00-08C	Associated Landing Light Switch(es)	____ Retractable Light Extend / Retract Motor(s) INOP
33-00-08D	Associated Landing Light Switch(es)	____ Retractable Light Extend / Retract Motor(s) INOP
33-00-08E	Associated Landing Light Switch(es)	____ Landing Light LED Array INOP
33-00-08F	Associated Landing Light Switch(es)	____ Landing Light INOP
33-00-08G	Associated Landing Light Switch(es)	____ Landing Light(s) INOP

(O) PROCEDURES

33-00-08C

The retractable landing lights may be inoperative in the extended position with no effect on flight characteristics.

33-00-08C	RETRACTABLE LIGHT EXTEND/RETRACT MOTORS
	ALL
EFFECTIVITY	
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 1500 lbs for each inoperative light. Increase BLOCK FUEL by 1.0% for each inoperative light.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

33-00-08D

1. The retractable landing lights may be inoperative in any position with no effect on flight characteristics.
2. Apply performance adjustments only when associated light(s) is not in the fully retracted position.


33-00-08D	RETRACTABLE LIGHT EXTEND/RETRACT MOTORS
	All
EFFECTIVITY	
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 1500 lbs for each inoperative light that is not fully retracted. Increase BLOCK FUEL by 1.0% for each inoperative light that is not fully retracted.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

(M) PROCEDURES

33-00-08C

With the landing light(s) extend/retract motor inoperative, compare the light position with the operative light's position. If the light is not in the extended position, the light (lamp) is considered to be inoperative.

Figure 33-2: Landing Light Array

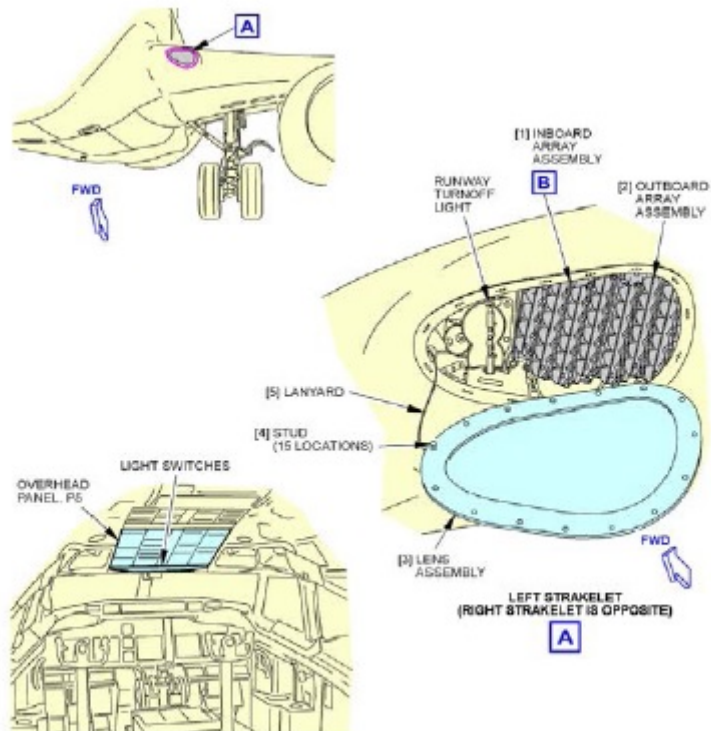


33-00-09 Taxi Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-09A	Taxi Light	Y	1	0	C
33-00-09B	Taxi Light - LED Array	Y	4	0	C

Note: There is an inboard LED array (light assembly) and an outboard LED array (light assembly) inside the strakelet on each wing. These same lights are also used for the landing lights. Landing lights may also be affected (see [Figure 33-3](#)).

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-09A	Taxi Light Switch	Taxi Light INOP
33-00-09B	Taxi Light Switch	Taxi Light INOP

Figure 33-3: LED Light Assembly

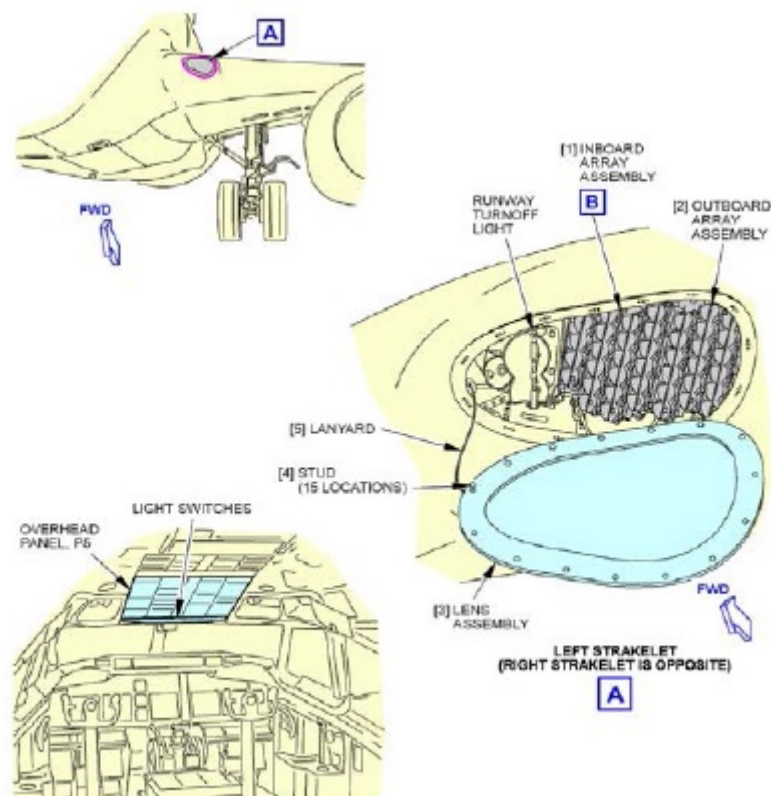

33-00-10 Runway Turn Off Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			2	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y			C	REMARKS OR EXCEPTIONS
33-00-10	Runway Turn Off Lights	Y				One or both may be inoperative. Note: If both LED Landing Light Arrays on one side are inoperative (see MEL 33-00-08F), the Runway Turn Off Light on the affected side must be operative for night operations. Note: LED Array (Light Assembly), a Runway Turnoff Light (RTO) may be considered to operate normally when the RTO assembly contains one inoperative LED.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-10	Associated Runway Turn Off Light Switch	Runway Turn Off Lights INOP

33-00-11 Wing Tip Position Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-11A	Wing Tip Position Lights “DISP.APPR.REQ’D”	Y	4	0	C (M) May be inoperative provided operations are not conducted from sunset to sunrise.
33-00-11B	Wing Tip Position Light Bulbs / Lamps / LED Modules	Y	8	4	C Any except following minimum may be inoperative for operations from sunset to sunrise: 1. One stationary red wing tip bulb, 2. One stationary green wing tip bulb, and 3. One stationary white tail light at each wing tip position.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-11A	Position Light Switch	_____ Wing Tip Position Light(s) INOP
33-00-11B	Position Light Switch	_____ Wing Tip Position Light Bulb(s) / Lamp(s) / LED Module(s) INOP

(M) PROCEDURES

33-00-11A

If circuit breakers "EXTERIOR LIGHTING – POSITION - RIGHT" (A12) on the P18-3 Panel and/or "EXTERIOR LIGHTING – POSITION – LEFT" A13 on the P18-3 Panel are open and will not reset, secure the breaker(s) in the open position.

33-00-14 Exterior Emergency Lighting System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y			B	REMARKS OR EXCEPTIONS
33-00-14	Exterior Emergency Lighting System “DISP.APPR.REQ’D”	Y			B	May be inoperative provided operations are not conducted at night.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-14	Emergency Exit Light Switch	Exterior Emergency Lighting System INOP

33-00-15 Interior Emergency Exit Lighting System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
	INTERIOR EMERGENCY EXIT LIGHTING SYSTEM					
33-00-15A	Emergency Aisle Lights "Contact MCC"	Y	-	-	C	Light assemblies installed above aisle may be inoperative provided no two adjacent (opposite side) light assemblies are inoperative.
33-00-15B	Flight Deck Exit Light "DISP.APPR.REQ'D"	Y	1	0	C	May be inoperative provided operations are not conducted at night.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-15A	Emergency Exit Light Switch	____ Interior Emergency Exit Aisle Light Assembly(s) INOP
33-00-15B	Emergency Exit Light Switch	Flight Deck Exit Light INOP

33-00-16 System Annunciator Lights, Left and Right (Pilot's Light Shield)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-16A	System Annunciator Lights, Left and Right (Pilot's Light Shield)	Y	12	11	C (O) One light may be inoperative for an operating system.
33-00-16B	System Annunciator Lights, Left and Right (Pilot's Light Shield)	Y	12	-	C May be inoperative for an associated inoperative system.


MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-16A	Affected System Annunciator Light	___ System Annunciator Light INOP
33-00-16B	Affected System Annunciator Light	___ System Annunciator Light INOP

(O) PROCEDURES

33-00-16A

1. Check that associated system indicator light(s) on associated panel operates normally.
2. Placard the inoperative System Annunciator Light "LIGHT INOP".
3. Ensure Master Caution Lights illuminate properly prior to pushback.
4. If the MASTER CAUTION light illuminates with no annunciator light illuminated (for dispatch with a light extinguished) OR with no additional annunciator light illuminated (for dispatch with a light illuminated), it can be assumed that the system with the placard light inop is affected and has triggered the Master Caution light to illuminate.
5. Just prior to descent, check the associated panel for any light indications associated with the system annunciator which is inoperative.

Figure 33-4: PILOT'S LIGHTSHIELD

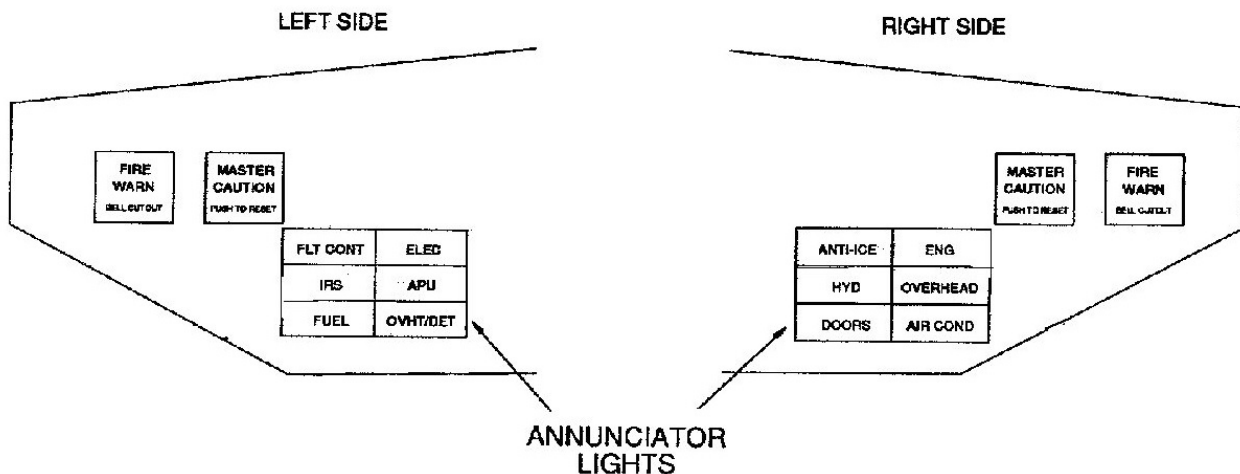

33-00-17 Flight Deck Master Lights Test and Individual Light's Press-to-Test Features

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				
33-00-17	Flight Deck Master Lights Test and Individual Light's Press-To-Test Features	Y	-	-	C (O) May be inoperative provided intended function of associated light(s) is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-17	Associated Annunciator Light	___ Master Lights Test or ___ Light PTT Feature INOP

(O) PROCEDURES

PRIOR TO EACH DEPARTURE

1. If the master test feature fails to illuminate a light(s), press the affected light(s) and confirm the push-to-test feature causes the bulb(s) to illuminate.
2. If the individual push-to-test feature also fails to illuminate a light(s), perform an appropriate operational or system test and verify that the affected light illuminates as intended.

33-00-18 Wheel Well Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	WHEEL WELL LIGHTS				
33-00-18A	Dome Service Lights	Y	3	0	C
33-00-18B	Inspection Flood Lights	Y	2	0	D

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-18A	Logbook	____ Wheel Well Dome Service Light(s) INOP
33-00-18B	Logbook	____ Wheel Well Inspection Flood Light(s) INOP

MAINTENANCE AND OPERATIONS NOTE

33-00-18A

One light in nose wheel well and one each in main wheel well.

33-00-18B

One in each main wheel well.

33-00-19 Floor Proximity Emergency Escape Path Marking System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-19A	Floor Proximity Emergency Escape Path Marking System – Seat Mounted LED and Incandescent Lighting Systems “Contact MCC”	Y	-	-	C Individual lights may be inoperative provided: 1. All monument mounted lights are operative, 2. All lights within two seat rows of a monument (including a class divider) must be operative, 3. All lights within two seat rows of the Type III Exit (overwing exit doors) must be operative, 4. No two adjacent seat mounted lights may be inoperative, and 5. All flood lights and exit identifiers must have two of the five lamps operating.
33-00-19B	Floor Proximity Emergency Escape Path Marking System – Photoluminescent Lighting System “Contact MCC”	Y	-	-	C Each of the photoluminescent strips of an aisle may be inoperative or missing up to a length of 10 Inches (.25m) provided: 1. The inoperative or missing parts are not directly opposite each other, 2. Are not closer together than 79 inches (2m), and 3. No more than 4 such inoperative parts are allowed.

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-19A	Emergency Exit Light Switch	____ Emergency Escape Path Marking Light(s) INOP
33-00-19B	Logbook	____ Emergency Escape Path Marking Light(s) INOP

33-00-20 LOGO Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y		0	D	REMARKS OR EXCEPTIONS
33-00-20	LOGO Light System					

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-20	Adjacent to LOGO Light Switch	LOGO Light System INOP

33-00-23 Master Dim System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
33-00-23	Master Dim System	Y		0	B

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-23	Master Dim Switch	Master Dim System INOP

33-00-25 Service Area Light Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
33-00-25	Service Area Light Systems (Nose, Electrical Equipment, Air Conditioning, Aft Accessory, APU, Tailcone Compartments and Fueling Panel)	Y	-	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
33-00-25	Associated Service Area Light Switch	____ Service Area Light(s) INOP

34 Navigation

Table of Contents

34-00-00	LLM Category II/III Status (Lower Landing Minimums)
34-00-00L	LLM Category II/III Status (Lower Landing Minimums)
34-00-10	RNP-10 Status
34-00-10R	RNP-10 Status
34-00-01	Mach / Airspeed Indications
34-00-01A	Mach / Airspeed Indications
34-00-01B	Mach / Airspeed Indications
34-00-02	Mach / Airspeed Warning Systems
	MACH / AIRSPEED WARNING SYSTEMS
34-00-02A	Maximum Operating Speed Indication
34-00-02B	Clacker
34-00-02C	Clacker
34-00-02D	Clacker
34-00-03	Standby Altimeter Vibrator
34-00-03	Standby Altimeter Vibrator
34-00-04	Static Air Temperature Indication
34-00-04	Static Air Temperature Indication
34-00-05	Total Air Temperature Indication
34-00-05	Total Air Temperature Indication
34-00-07	Standby Horizon Indicator (Standby Attitude)
34-00-07A	Standby Horizon Indicator (Standby Attitude)
34-00-07B	ILS Indication
34-00-08	Angle of Attack Indications
34-00-08	Angle of Attack Indications
34-00-11	Standby Magnetic Compass
34-00-11	Standby Magnetic Compass
34-00-12	Flight Director Systems
34-00-12A	Flight Director Systems
34-00-12B	Flight Director Systems
34-00-13	Distance Measuring Equipment Systems
34-00-13	Distance Measuring Equipment Systems
34-00-14	Marker Beacon Receiver System
34-00-14	Marker Beacon Receiver System
34-00-15	Weather Radar
34-00-15A	Weather Radar
34-00-15B	Windshear Detection and Avoidance System (Predictive)
34-00-15C	Windshear Detection and Avoidance System (Predictive)
34-00-15D	Autotilt/Multiscan Function

34-00-17 VOR Systems

VHF NAVIGATION SYSTEMS

- 34-00-17A VOR Systems
- 34-00-17B ILS Systems

34-00-18 ATC Transponder and Automatic Altitude Reporting Systems

- 34-00-18A ATC Transponder and Automatic Altitude Reporting Systems
- 34-00-18B ATC Transponder and Automatic Altitude Reporting Systems
- 34-00-18C ADS-B Out Extended Squitter Transmissions
- 34-00-18D ADS-B Out Extended Squitter Transmissions

34-00-20 Radio Altimeter Systems

- 34-00-20 Radio Altimeter Systems

34-00-23 True Airspeed Indication

- 34-00-23 True Airspeed Indication

34-00-25 Altitude Alerting System

ALTITUDE ALERTING SYSTEM

- 34-00-25A Altitude Alerting System
- 34-00-25B Aural Alert
- 34-00-25C Visual Alert

34-00-26 Ground Proximity Warning System (GPWS)

GROUND PROXIMITY WARNING SYSTEM (GPWS)

- 34-00-26A GPWS System
- 34-00-26B Terrain Avoidance Warning (Modes 1 thru 4)
- 34-00-26C Test Mode
- 34-00-26D Glideslope Deviation (Mode 5)
- 34-00-26E Advisory Callouts Minimums, Minimums
- 34-00-26F Windshear Warning and Flight Guidance System (Reactive)
- 34-00-26G Windshear Warning and Flight Guidance System (Reactive)
- 34-00-26H Terrain Mode (EGPWS / Enhanced Mode)
- 34-00-26I Terrain Displays
- 34-00-26J Terrain Displays
- 34-00-26K Runway Awareness and Advisory System (RAAS)

34-00-32 Instrument Transfer Switching System

- 34-00-32 Instrument Transfer Switching System

34-00-35 Inertial Reference Systems (IRS)

INERTIAL REFERENCE SYSTEMS

- 34-00-35A Inertial Reference Systems (IRS)
- 34-00-35B IRS Data Display (Aft Overhead Panel)
- 34-00-35C IRS Ground Crew Call Horn

34-00-36 Flight Management Computer System (FMCS)

FLIGHT MANAGEMENT COMPUTER SYSTEM (FMCS)

- 34-00-36A FMC Alert Lights
- 34-00-36B FMC Alert Lights
- 34-00-36C Computer
- 34-00-36D Computer
- 34-00-36E MCDU
- 34-00-36F MCDU
- 34-00-36G Navigation Databases Out of Currency

34-00-38 Pitch Limit Indication (PLI)

- 34-00-38 Pitch Limit Indication (PLI)

34-00-40 Traffic Collision and Avoidance System (TCAS)

TRAFFIC COLLISION AND AVOIDANCE SYSTEM (TCAS)

34-00-40A	Traffic Collision and Avoidance System (TCAS)
34-00-40B	Combined Traffic Alert (TA) and Resolution Advisory(RA) Dual Display
34-00-40C	Resolution Advisory (RA) Display System(s)
34-00-40D	Resolution Advisory (RA) Display System(s)
34-00-40E	Traffic Alert (TA) Display System(s)
34-00-40F	Audio Functions
34-00-40G	Airspace Selection Function

34-00-43 Radio Height Alert

34-00-43	Radio Height Alert
----------	--------------------

34-00-44 Head-Up Display System (HUD/HGS)

34-00-44	Head-Up Display System (HUD/HGS)
----------	----------------------------------

34-00-45 Global Positioning System (GPS)

34-00-45A	Global Positioning System (GPS)
34-00-45B	Global Positioning System (GPS)

34-00-48 EFIS Control Panel Map Switches

EFIS CONTROL PANEL MAP SWITCHES

34-00-48A	POS
34-00-48B	STA
34-00-48C	ARPT
34-00-48D	DATA
34-00-48E	WPT
34-00-48F	Decision Height/Mins Selector

34-00-49 Right IRS DC Power Supply System

34-00-49	Right IRS DC Power Supply System
----------	----------------------------------

34-00-54 Integrated Standby Flight Display (ISFD) System

INTEGRATED STANDBY FLIGHT DISPLAY (ISFD) SYSTEM

34-00-54A	(ISFD) Attitude Display
34-00-54B	(ISFD) ILS Indication
34-00-54C	(ISFD) Heading Display
34-00-54D	(ISFD) Dedicated Battery

34-00-55 Vertical Situation Display (VSD) System

34-00-55	Vertical Situation Display (VSD) System
----------	---

34-00-56 Global Navigation Satellite Landing System (GLS)

34-00-56	Global Navigation Satellite Landing System (GLS)
----------	--

34-00-00 LLM Category II/III Status (Lower Landing Minimums)

NUMBER INSTALLED		NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD		REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION		REMARKS OR EXCEPTIONS
34-00-00L	LLM Category II/III Status (Lower Landing Minimums) "DISP.APPR.REQ'D" Administrative Control Item	N - -	(M) May be inoperative provided Aircraft restricted to CAT I due to AMT is non-AFQ authorized. Note: <i>This Item Number is only used for deferring the CAT II/III status of the aircraft and MCC authorization is required prior to its usage or removal.</i> <u>CAT II/III</u> Not Authorized

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-00L	Adjacent to each PFD	CAT II/III Not Authorized

(M) PROCEDURES

1. Create a new log page in the aircraft logbook using the appropriate MEL Item Number (contact MCC for instructions).
2. The deferral code LLM must also be entered on the log page and the placard when deferring this item.
3. MCC authorization is required prior to its usage or removal.

34-00-10 RNP-10 Status

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION		REMARKS OR EXCEPTIONS	
34-00-10R	RNP-10 Status "DISP.APPR.REQ'D" Administrative Control Item	N	-	-
(M) Authorized by MCC when: - RNP-10 airspace operations cannot be used, and - No specific MEL item applies. Note: Dispatch to remove equipment code "R" and NAV code "RNP10 from the flight plan. Note: This Item Number is only used for deferring the RNP-10 status of the aircraft and MCC authorization is required prior to its usage or removal. <u>RNP-10 Operations</u> Not Authorized				

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-10R	Adjacent To Each EADI	RNP-10 AIRSPACE OPERATIONS NOT AUTHORIZED.

(M) PROCEDURES

- Create a new log page in the aircraft logbook using the appropriate MEL Item Number (contact MCC for instructions).
- The deferral code RNP must also be entered on the log page and the placard when deferring this item.
- MCC authorization is required prior to its usage or removal.

34-00-01 Mach / Airspeed Indications

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-01A	Mach / Airspeed Indications	Y	2	1	C	May be inoperative provided one Mach / Airspeed warning and Mach trim system operates normally.
34-00-01B	Mach / Airspeed Indications “DISP.APPR.REQ’D”	Y	2	0	C	(O) May be inoperative provided: 1. Aircraft remains at or below FL 280, and 2. Airspeed remains at or below 320 KIAS. Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-01A	Near Associated PFD	____ Mach Indications INOP
34-00-01B	Near Captains PFD	____ Mach Indications INOP

(O) PROCEDURES

34-00-01B

Program KIAS/Mach speed restriction in FMS.

34-00-02 Mach / Airspeed Warning Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS	
MACH / AIRSPEED WARNING SYSTEMS						
34-00-02A	Maximum Operating Speed Indication	Y	2	1	C	May be inoperative provided clacker warning system operates normally and is independent from Mach Indicator.
34-00-02B	Clacker	Y	2	1	C	
34-00-02C	Clacker "DISP.APPR.REQ'D"	Y	2	0	B	(O) Systems may be inoperative provided: 1. Both Mach indicators operate normally, 2. 330 KIAS /.76 Mach airspeed limitations are observed, 3. Aircraft is not operated within the boundaries of a Critical Terrain Box, and 4. If overspeed warning occurs earlier than scheduled during flight, speed must remain below point at which warning occurs. Theater Restrictions May Apply
34-00-02D	Clacker "DISP.APPR.REQ'D"	Y	2	0	B	(O) (M) Systems may be inoperative provided; 1. Both Mach indicators operate normally, 2. 330 KIAS /.76 Mach airspeed limitations are observed, 3. Aircraft is not operated within the boundaries of a Critical Terrain Box, and 4. If overspeed warning occurs below .76 Mach, system must be deactivated by pulling associated circuit breaker (# 1 system P18-2, # 2 system P6-1) and observe speed limits. Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-02A	Near Associated PFD	____ Mach Indications INOP
34-00-02B	Near Associated PFD	____ Mach Indications INOP
34-00-02C	Near Captain's PFD	____ Mach Indications INOP
34-00-02D	Near Captain's PFD	____ Mach Indications INOP

(O) PROCEDURES

34-00-02C, 34-00-02D

Program KIAS/Mach speed restriction in FMS.

(M) PROCEDURES

34-00-02D

If overspeed warning occurs below .76 Mach, system must be deactivated by pulling and securing the associated circuit breaker:

- System MACH WARN SYS – 1 on the P18-2 panel located at E3.
- System MACH WARN SYS -2 on the P6-1 panel located at B7.

34-00-03 Standby Altimeter Vibrator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-03	Standby Altimeter Vibrator (Ships 3701-3771) "DISP.APPR.REQ'D"	Y	1	0	C May be inoperative provided VMC exists at departure and arrival airports. Note: <i>Weather conditions at departure and arrival airports (including alternates) must beat least 1,000' ceiling and 3SM visibility, or enough to allow a visual approach or whichever is greater."</i>

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-03	Standby Altimeter Indicator	Standby Altimeter Vibrator INOP

34-00-04 Static Air Temperature Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y				REMARKS OR EXCEPTIONS
34-00-04	Static Air Temperature Indication	Y		0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-04	Near Primary Engine Display Unit	Static Air Temperature Indication INOP

34-00-05 Total Air Temperature Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-05	Total Air Temperature Indication	Y	1	0	C	May be inoperative provided an alternate air temperature indication (i.e. PDC, FMS, SAT) operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-05	Near Associated Display Unit	Total Air Temperature Indication INOP

OPERATIONS NOTE:

With static air temperature available, the following table may be used to determine TAT:

TEMPERATURE CONVERSION												
STATIC AIR - TOTAL AIR												
INDICATED MACH NUMBER												
	.50	.60	.68	.70	.72	.74	.76	.78	.80	.82	.84	.86
SAT °C	TOTAL AIR TEMPERATURE °C											
40	56	62	69	70								
35	51	57	64	65	66	68	70					
30	45	52	58	59	61	63	65	67	68	70		
25	40	47	52	54	56	57	59	61	63	64	66	68
20	35	41	47	48	50	51	53	55	57	58	60	63
15	30	36	42	43	44	46	48	49	51	53	55	57
10	24	31	36	37	38	40	43	44	46	47	49	51
5	19	25	31	32	33	35	37	38	40	41	43	45
0	13	20	25	26	28	29	31	33	34	36	38	40
-5	8	14	20	21	22	24	26	27	29	30	32	34
-10	3	9	14	15	17	19	20	22	23	25	26	28
-15	-2	3	9	10	11	13	14	16	17	19	21	23
-20	-7	-2	3	4	6	7	9	10	12	13	15	17
-25	-12	-7	-3	-1	0	2	3	5	6	8	9	11
-30	-18	-12	-8	-7	-5	-4	-2	1	1	2	4	6
-35	-23	-17	-13	-12	-10	-9	-8	-7	-5	-4	-2	0
-40	-28	-23	-18	-17	-16	-15	-13	-12	-11	-9	-7	-6
-45	-34	-29	-24	-23	-21	-20	-19	-17	-16	-14	-13	-11
-50	-39	-34	-29	-28	-27	-26	-24	-23	-21	-20	-19	-17
-55	-44	-39	-35	-34	-32	-31	-30	-28	-27	-26	-24	-23
-60	-49	-45	-40	-39	-38	-37	-35	-34	-33	-31	-30	-28
-65	-55	-50	-46	-45	-43	-42	-41	-40	-38	-37	-36	-34
-70	-60	-55	-51	-50	-49	-48	-47	-45	-44	-43	-41	-40

34-00-07 Standby Horizon Indicator (Standby Attitude)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-07A	Standby Horizon Indicator (Standby Attitude) "DISP.APPR.REQ'D"	Y	1	0	B May be inoperative provided 1. Operations are conducted in Day VMC only, and 2. Operations are not conducted into known or forecast over-the-top conditions.
34-00-07B	ILS Indication	Y	1	0	D

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-07A	Standby Horizon Indicator	Standby Horizon Indicator INOP
34-00-07B	Standby Horizon Indicator	Standby Horizon Indicator ILS Indication INOP

34-00-08 Angle of Attack Indications

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-08	Angle of Attack Indications	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-08	Near Associated PFD	____ Angle of Attack Indication INOP

34-00-11 Standby Magnetic Compass

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-11	Standby Magnetic Compass "DISP.APPR.REQ'D"	Y	1	0 B	May be inoperative provided: 1. Any combination of two gyro or INS (IRU) stabilized compass systems are operative, and 2. Aircraft is operated with dual independent navigation capability, and under positive radar control by ATC on enroute portion of flight. Note: Two ADIRU's being operational meets the requirement of "Any combination of two gyro or INS (IRU)" being operational.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-11	Standby Magnetic Compass	Standby Magnetic Compass INOP

34-00-12 Flight Director Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-12A	Flight Director Systems "DISP.APPR.REQ'D"	Y	2	1	C
					May be inoperative provided: - For takeoff, Captain's Flight Director must be operative with visibility less than 1600 RVR (1/4 mile), - Takeoff and approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Note: Both F/D switches must be in the ON position for LNAV to arm on the ground.
34-00-12B	Flight Director Systems "DISP.APPR.REQ'D"	Y	2	0	C
					May be inoperative provided: - For takeoff, visibility at departure runway is not less than 1600 RVR (1/4 mile), - Approach minimums do not require their use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-12A	Associated MCP Flight Director Switch	____ Flight Director System INOP
34-00-12B	Associated MCP Flight Director Switch(es)	____ Flight Director System(s) INOP

34-00-13 Distance Measuring Equipment Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					
34-00-13	Distance Measuring Equipment Systems "DISP.APPR.REQ'D"	Y	2	1	D	May be inoperative provided: 1. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements , and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements .

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-13	Associated Navigational Display	___ DME System INOP

MAINTENANCE NOTE

1. If desired, the inoperative DME may be deactivated by pulling and securing the associated DME circuit breaker on the P6 or P18 panel.
2. The FMC will perform DME/DME position updates using a single operative DME.

34-00-14 Marker Beacon Receiver System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-14	Marker Beacon Receiver System “DISP.APPR.REQ’D”	Y	1	0	C	May be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-14	Captain’s Marker Beacon Lights	Marker Beacon System INOP

34-00-15 Weather Radar

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-15A	Weather Radar “DISP.APPR.REQ’D”	Y	1	0	B (O) Except for Outbound North America Extended Operations (ETOPS), may be inoperative provided: 1. Weather radar is not required by 14 CFR, and 2. Alternate procedures are used. Note: No person may dispatch an aircraft in IFR or night VFR conditions when current weather reports indicate that thunderstorms, or other potentially hazardous weather conditions that can be detected with airborne weather radar, may reasonably be expected along route to be flown. Theater Restrictions May Apply
34-00-15B	Windshear Detection and Avoidance System (Predictive) “DISP.APPR.REQ’D”	Y	-	0	B (O) May be inoperative provided alternate procedures are used.
34-00-15C	Windshear Detection and Avoidance System (Predictive) “DISP.APPR.REQ’D”	Y	-	0	C (O) May be inoperative provided: 1. Alternate procedures are used, and 2. Windshear Warning and Guidance System (Reactive) operates normally (see MEL 34-00-26G).
34-00-15D	Autotilt/Multiscan Function	Y	1	0	C May be inoperative provided manual tilt function operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-15A	Captain's Navigational Display Unit	Weather Radar INOP
34-00-15B	Captain's Navigational Display Unit	Predictive Windshear Detection and Avoidance System INOP
34-00-15C	Captain's Navigational Display Unit	Predictive Windshear Detection and Avoidance System INOP
34-00-15D	Captain's Navigational Display Unit	WX Radar Autotilt/Multiscan Function INOP

(O) PROCEDURES

34-00-15A, 34-00-15B, 34-00-15C

- Refer to the Remarks or Exceptions Column.
- Refer to the [FCTM, Maneuvers, Windshear, Windshear Escape Maneuver](#).

34-00-17 VOR Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
VHF NAVIGATION SYSTEMS					
34-00-17A	VOR Systems "DISP.APPR.REQ'D"	Y	2	1 C	(O) Right (No.2) may be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements .
34-00-17B	ILS Systems "DISP.APPR.REQ'D"	Y	2	1 C	(O) Right (No.2) may be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements .

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-17A	Associated Nav Control Panel	NO.2 VOR SYS INOP
34-00-17B	Associated Nav Control Panel	NO.2 ILS SYS INOP

(O) PROCEDURES

34-00-17A, 34-00-17B

1. When dispatching with the NO.2 ILS System inoperative, manually tune the required ILS frequency on the left navigation control panel prior to takeoff to prevent display of the GPWS INOP light in flight.
2. When both NO.2 VOR and ILS are deferred, place the VHF NAV Transfer Switch on the forward overhead panel to BOTH ON 1 position.

34-00-18 ATC Transponder and Automatic Altitude Reporting Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-18A	ATC Transponder and Automatic Altitude Reporting Systems "DISP.APPR.REQ'D"	Y	2	1	C One may be inoperative provided associated ADS-B Out Extended Squitter Transmissions are considered inoperative and deferred per MEL 34-00-18D .
34-00-18B	ATC Transponder and Automatic Altitude Reporting Systems "DISP.APPR.REQ'D"	Y	2	0	A (O) (M) Both may be inoperative provided: - Operations do not require its use, - Both ADS-B Extended Squitter Transmissions are considered inop and deferred per MEL 34-00-18C, - TCAS is considered inoperative and deferred per MEL 34-00-40A, - Prior to flight, approval is obtained from ATC facilities having jurisdiction over planned route of flight, and - Repairs are made within 3 flight cycles. <u>RVSM Operations</u> Not Authorized
34-00-18C	ADS-B Out Extended Squitter Transmissions "DISP.APPR.REQ'D"	Y	2	0	B (O) Both may be inoperative provided prior to flight, authorization is obtained from ATC facilities having jurisdiction over planned route of flight using an approved process. Note: Any ADS-B Out function that operates normally may be used.
34-00-18D	ADS-B Out Extended Squitter Transmissions "DISP.APPR.REQ'D"	Y	2	1	C (O) One may be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-18A	Transponder Control Panel	___ ATC Transponder / Mode C INOP
34-00-18B	Transponder Control Panel	1. ___ ATC Transponder / Mode C INOP 2. TCAS INOP
34-00-18C	Near ATC Transponder Panel	ADS-B Out Extended Squitter Transmission INOP
34-00-18D	Near ATC Transponder Panel	___ADS-B Out Extended Squitter Transmission INOP

(O) PROCEDURES

34-00-18B

Refer to the [Airway Manual 3.1.6 Reduced Vertical Separation Minimum \(RVSM\)](#), for RVSM procedures and contingencies.

34-00-18C

Ensure the Flight Dispatch Release indicates that ATC approval has been obtained along the planned route.

If ATC approval cannot be confirmed, contact Flight Control for confirmation and an amended Flight Dispatch Release if required.

34-00-18D

For one inoperative ADS-B Out, select transponder to operative side.

(M) PROCEDURES

34-00-18B

Defer TCAS per [MEL 34-00-40A](#)

34-00-20 Radio Altimeter Systems

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-20	Radio Altimeter Systems "DISP.APPR.REQ'D"	Y	2	1 C	(O) (M) May be inoperative deactivated provided: 1. Approach minimums or operating procedures do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements, 3. Associated autopilot is not used for approach and landing, 4. Autothrottle is not used for approach and landing, and 5. Associated Flight director is not used for approach and landing. Note: An invalid radio altimeter signal will generate a dispatchable PSEU fault. Defer per MEL 32-00-17. Note: If arming LNAV on ground with one radio altimeter inoperative, the flight directors and autopilot should be controlled by the FCC on the same side as the valid radio altimeter (i.e., the first flight director and/or autopilot to be engaged must be receiving valid radio altitude data).

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-20	Associated PFD	____ Radio Altimeter System INOP

(O) PROCEDURES

1. For RNAV off the runway operations, ensure the Flight Director selected as Master corresponds to the operative Radio Altimeter, or LNAV will not engage properly on takeoff below 400'. During climb, cruise and approach, LNAV should operate normally, regardless of which Flight Director is Master.
2. For any approach where the APP push button is used (i.e., ILS, LOC, IAN, or GLS), ensure the Flight Director selected as Master for the approach corresponds to the operative Radio Altimeter.

Note: Due to the loss of flight director steering at LOC/FAC capture, to retain flight director steering consider conducting an RNAV (GPS) or VOR approach using LNAV/VNAV.

3. Do not use the Autopilot associated with the inoperative Radio Altimeter for approach and landing.
4. Do not use the Autothrottle for approach and landing with either Radio Altimeter inoperative.

Note: On the side of the deactivated radio altimeter and when LNAV is armed, FMA will flash white.

5. With a Radio Altimeter inoperative, the respective Flight Director steering commands will be lost at LOC/FAC and glideslope/glidepath capture. If the #1 Radio Altimeter is inoperative, the HUD Guidance Cue will disappear at LOC/FAC and glideslope/glidepath capture. These steering command losses are normal and do not require maintenance action.
6. If the remaining Radio Altimeter fails during flight, the Flight Director system (AFDS) limits bank angle to a maximum of eight degrees in all roll modes. Use of the Autopilot or Flight Director system is at the discretion of the flight crew, since the AFDS may not command sufficient bank angle to execute proper departure and/or approach maneuvers, or make enroute course changes within airspace limitations.
7. With a Radio Altimeter inoperative, the PSEU light may illuminate for several minutes during taxi and then extinguish.

 DELTA	737 Minimum Equipment List 34 Navigation	Revision: 50.0.1 Date: 24-Apr-2026
--	---	---

8. On some aircraft an invalid signal from radio altimeter No. 1 will result in failure of both stick shakers to self test.
9. [QRH Flight Instruments, Displays / Radio Altimeter Failure \(page 10.10\)](#) procedure repeats these operational considerations and is recommended for enroute reference.

(M) PROCEDURES

1. Pull and secure the associated P6-1 / P18-1 Panel Radio Altimeter circuit breaker to deactivate the inoperative radio altimeter.

Note: *With one radio altimeter deactivated, the SPEED BRAKE DO NOT ARM light will illuminate on the ground when speed brake handle is moved from the DOWN detent.*

2. An invalid radio altimeter signal will generate a dispatchable PSEU fault. Defer per [MEL 32-00-17](#).

34-00-23 True Airspeed Indication

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-23	True Airspeed Indication	Y	2	0	C	May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-23	Associated ND	____ True Airspeed Indication INOP

34-00-25 Altitude Alerting System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
ALTITUDE ALERTING SYSTEM					
34-00-25A	Altitude Alerting System "DISP.APPR.REQ'D"	Y	1	0	A (O) May be inoperative provided: 1. Autopilot with altitude hold and altitude capture is operative, 2. Enroute operations do not require its use, 3. Repairs are made within three flight days, and 4. Airplane does not depart from a Delta maintenance station. <u>RVSM Operations</u> Not Authorized
34-00-25B	Aural Alert "DISP.APPR.REQ'D"	Y	-	0	C May be inoperative provided: 1. Visual alert operates normally, and 2. Auto-pilot with altitude hold and altitude capture operates normally.
34-00-25C	Visual Alert "DISP.APPR.REQ'D"	Y	-	0	C May be inoperative provided: 1. Aural alert operates normally, and 2. Auto-pilot with altitude hold and altitude capture operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-25A	AFCS MCP Altitude Selector	Altitude Alerting System INOP
34-00-25B	AFCS MCP Altitude Selector	Altitude Alerting Aural Alert System INOP
34-00-25C	AFCS MCP Altitude Selector	Altitude Alerting Visual Alert System INOP

(O) PROCEDURES

34-00-25A

1. Use the autopilot and altitude hold for all operations for which it is appropriate.
2. Cross-check Captain's and First Officer's altitude displays upon reaching and departing assigned altitude. Periodically cross-check altitude indications when maintaining an assigned altitude.
3. Flight crew must be aware that the usual alerts for altitude deviations will not occur.

34-00-26 Ground Proximity Warning System (GPWS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
GROUND PROXIMITY WARNING SYSTEM (GPWS)					
34-00-26A	GPWS System "DISP.APPR.REQ'D"	Y	1	0	A (O) (M) May be inoperative provided: 1. GPWS is deactivated, 2. Alternate procedures are used, 3. Repairs are made within two flight days, and 4. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Theater Restrictions May Apply
34-00-26B	Terrain Avoidance Warning (Modes 1 thru 4) "Contact MCC"	Y	4	0	A (O) May be inoperative provided: 1. Alternate procedures are used, and 2. Repairs are made within two flight days.
34-00-26C	Test Mode "DISP.APPR.REQ'D"	Y	1	0	A (O) (M) May be inoperative provided: 1. GPWS is deactivated, 2. Alternate procedures are used, 3. Repairs are made within two flight days, and 4. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.
34-00-26D	Glideslope Deviation (Mode 5)	Y	2	0	B
34-00-26E	Advisory Callouts Minimums, Minimums	Y	1	0	B (O) May be inoperative provided standard callouts are used.
34-00-26F	Windshear Warning and Flight Guidance System (Reactive) "DISP.APPR.REQ'D"	Y	1	0	B (O) May be inoperative provided alternate procedures are used.
34-00-26G	Windshear Warning and Flight Guidance System (Reactive) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided: 1. Alternate procedures are used, and 2. Windshear Detection and Avoidance System (Predictive) operates normally (see MEL 34-00-15C).
34-00-26H	Terrain Mode (EGPWS / Enhanced Mode) "DISP.APPR.REQ'D"	Y	1	0	B (O) May be inoperative provided: 1. Alternate procedures are used, and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Theater Restrictions May Apply
34-00-26I	Terrain Displays	Y	2	1	C May Be Inoperative.
34-00-26J	Terrain Displays	Y	2	0	B May Be Inoperative.

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	GROUND PROXIMITY WARNING SYSTEM (GPWS)				
34-00-26K	Runway Awareness and Advisory System (RAAS)	Y	1	0	C
					May Be Inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-26A	GPWS Test Switch	GPWS INOP
34-00-26B	GPWS Test Switch	GPWS MODES 1 THRU 4 INOP
34-00-26C	GPWS Test Switch	GPWS TEST MODE INOP
34-00-26D	GPWS Test Switch	GPWS MODE 5 INOP
34-00-26E	GPWS Test Switch	GPWS MINIMUMS, MINIMUMS ADVISORY CALLOUTS INOP
34-00-26F	Captains Navigational Display	GPWS REACTIVE WINDSHEAR WARNING MODE INOP
34-00-26G	Captains Navigational Display	GPWS REACTIVE WINDSHEAR WARNING MODE INOP
34-00-26H	GPWS Test Switch	TERRAIN MODE (EGPWS / ENHANCED MODE) INOP
34-00-26I	GPWS Test Switch	TERRAIN DISPLAY FUNCTIONS INOP
34-00-26J	GPWS Test Switch	TERRAIN DISPLAY FUNCTIONS INOP
34-00-26K	GPWS Test Switch	RAAS INOP

(O) PROCEDURES

34-00-26A

1. The following aural alerts are inoperative:
 - A. V1 callout,
 - B. Look Ahead Terrain Alerts,
 - C. Radio Altitude Based Alerts,
 - D. Obstacle Alerts, Windshear Alerts,
 - E. Bank Angle Alerts,
 - F. Radio Altitude Callouts (i.e., TWENTY FIVE HUNDRED, ONE THOUSAND, ... , TWENTY, and TEN),
 - G. DH / MDA Callouts (i.e., APPROACHING MINIMUMS and MINIMUMS).

Note: Predictive Windshear Alerts will function normally.

2. Review Standard Callout procedures. Refer to [Operations Manual, Volume 1, Normal Procedures, Introduction, Standard Callouts](#).
3. Preflight briefing to include review of terrain and/or obstructions in the proximity of the departure and arrival airports.
4. Pilot monitoring should monitor flight path during takeoff, approach and landing, and alert the pilot flying if any of the following conditions exist:
 - A. Excessive descent rate.
 - B. Excessive terrain closure rate.
 - C. Altitude loss after takeoff or go-around.
 - D. Unsafe terrain clearance while not in the landing mode.
 - E. Deviation from glideslope.

34-00-26B, 34-00-26C, 34-00-26E, 34-00-26H

1. Review Standard Callout procedures. Refer to [Operations Manual, Volume 1, Normal Procedures, Introduction, Standard Callouts](#).
2. Preflight briefing should include review of terrain and/or obstructions in the proximity of the departure and arrival airports.

	737 Minimum Equipment List 34 Navigation	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

3. Pilot monitoring should monitor flight path during takeoff, approach and landing, and alert the pilot flying if any of the following conditions exist:
 - A. Excessive descent rate.
 - B. Excessive terrain closure rate.
 - C. Altitude loss after takeoff or go-around.
 - D. Unsafe terrain clearance while not in the landing mode.
 - E. Deviation from glideslope.

34-00-26F, 34-00-26G

1. Refer to [FCTM, Windshear](#).
2. Review Standard Callout procedures. Refer to [Operations Manual, Volume 1, Normal Procedures, Introduction, Standard Callouts](#).

(M) PROCEDURES

34-00-26A, 34-00-26C

Pull and secure GPWS circuit breaker located on the P18-1 Panel

34-00-32 Instrument Transfer Switching System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-32	Instrument Transfer Switching System	Y	1	0	C (O) May be inoperative provided: 1. Associated instruments operate normally from isolated sources, and 2. Inoperative switches are not moved during flight.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-32	Instrument Transfer Control Panel	Instrument Transfer Switching System INOP

(O) PROCEDURES

Refer to the Remarks or Exceptions column.

34-00-35 Inertial Reference Systems (IRS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
INERTIAL REFERENCE SYSTEMS					
34-00-35A	Inertial Reference Systems (IRS) "DISP.APPR.REQ'D"	Y	2	1	B (O) Except for Extended Operations (ETOPS), one may be inoperative provided: 1. Remaining IRS operates normally and is used for both Attitude Indications, VSI's and heading information on both PFD and NDs, 2. Flight is restricted to day VMC, 3. Standby Magnetic Compass operates normally, 4. Standby Horizon Indicator or ISFD attitude display operates normally, 5. Autopilots (any mode) are not used, 6. The Automatic Brake System is considered inoperative and deferred per MEL 32-00-07A or 32-00-07B as appropriate, and 7. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. <u>RVSM Operations</u> Not Authorized
34-00-35B	IRS Data Display (Aft Overhead Panel)	Y	1	0	C May be inoperative provided one FMS CDU operates normally.
34-00-35C	IRS Ground Crew Call Horn	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-35A	IRS Mode Selector Unit	____ IRS INOP
34-00-35B	IRS Data Display	IRS Data Display INOP
34-00-35C	IRS Data Display	IRS Ground Crew Call Horn INOP

(O) PROCEDURES

34-00-35A

1. Place the IRS mode selector switch for the inoperative IRS to OFF.
2. Use the remaining IRS for both attitude, heading and vertical speed indications.
3. Verify remaining IRS is operating normally by observing attitude and heading flags on pilot's and copilot's ADI, ND, HSI and RDMI are out of view.
4. Flight is restricted to day VMC.
5. Verify that Standby Magnetic Compass operates normally.
6. Verify Standby Horizon Indicator operates normally.
7. When dispatching with one IRU inoperative, do not use the autopilots in any mode.
8. Do not use TO/GA mode of Flight Director.

34-00-36 Flight Management Computer System (FMCS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	FLIGHT MANAGEMENT COMPUTER SYSTEM (FMCS)				
34-00-36A	FMC Alert Lights "DISP.APPR.REQ'D"	Y	2	1	C May be inoperative provided FMC is not used for autopilot guidance during the approach. Note: RNAV approaches must be treated like single FMC approach.
34-00-36B	FMC Alert Lights "DISP.APPR.REQ'D"	Y	2	0	C May be inoperative provided: 1. FMC is not used for autopilot guidance, and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements .
34-00-36C	Computer "DISP.APPR.REQ'D"	Y	2	1	C (O) (M) May be inoperative provided RNAV operations do not require its use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements . Note: Refer to PBCS Equipment Requirements chart . Theater Restrictions May Apply
34-00-36D	Computer "DISP.APPR.REQ'D"	Y	2	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. IRS display unit (on aft overhead panel) operates normally, 2. Speed Reference Selector operates normally, 3. Autothrottle System is deactivated, considered inoperative, and deferred per MEL 22-00-04 , and 4. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements . Note: Refer to MEL Item 22-00-04 Autothrottle System . Theater Restrictions May Apply
34-00-36E	MCDU "DISP.APPR.REQ'D"	Y	2	1	C May be inoperative provided: 1. Enroute procedures do not require its use, and 2. RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements . Note: Refer to PBCS Equipment Requirements chart . Theater Restrictions May Apply

CONTINUED ON NEXT PAGE

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-36F	FLIGHT MANAGEMENT COMPUTER SYSTEM (FMCS) MCDU "DISP.APPR.REQ'D"	Y	2	0	C
					(O) Except for Extended Operations (ETOPS), may be inoperative provided: - IRS display unit (on aft overhead panel) operates normally, - Speed Reference Selector operates normally, and - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Theater Restrictions May Apply
34-00-36G	Navigation Databases Out of Currency "DISP.APPR.REQ'D" Administrative Control Item	Y	-	-	
					(O) (M) May be out of currency provided: - Current Aeronautical Charts or current Nav Database is used to verify Navigation Fixes PRIOR TO EACH DEPARTURE, - Pilot or Flight Control use charts or RVAL tool to verify status and suitability of Navigation Facilities used to define route of flight, - Approach Navigation Radios are manually tuned and identified, and - Dispatch will not file a flight plan requiring RNAV data that is identified as changed within the current database. Refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. Theater Restrictions May Apply Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-36A	Affected FMC Alert Light	___ FMC ALERT LIGHTS INOP
34-00-36B	Affected FMC Alert Light(s)	___ FMC ALERT LIGHT(S) INOP
34-00-36C	Associated FMCS	FMCS COMPUTER INOP
34-00-36D	Captain's FMCS	FMCS COMPUTER INOP
34-00-36E	Affected FMCS MCDU	___ MCDU INOP
34-00-36F	Affected FMCS MCDU(s)	___ MCDU(s) INOP
34-00-36G	Captain's FMCS	___ NAV DATABASE OUT OF CURRENCY

(O) PROCEDURES

34-00-36C

With one FMC inoperative, operating with the FMC Source Select Switch selected to the operational FMC (BOTH ON L or BOTH ON R) is required to accomplish all Flight Management Computing tasks.

34-00-36D, 34-00-36F

- Refer to the Remarks or Exceptions Column.
- If both MCDUs are inoperative, refer to the [Operations Manual, Volume 1, Supplementary Procedures section, Flight Management, Navigation, FMC INOPERATIVE](#).

	737 Minimum Equipment List 34 Navigation	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

34-00-36G

PRIOR TO EACH DEPARTURE:

1. Select the route to be flown from the (non-current) data base.
2. Check the intended route against current Jeppesen pages for agreement of all navigation data, using applicable departure, enroute and arrival charts, or request Flight Control to validate the database using the RVAL tool.
3. If all information agrees, the FMS may be used normally on the route which was checked. Each new route must be checked in the same manner.
4. Any time the FMS dat does not agree with current Jeppesen information, manual tuning and course selection must be accomplished.

(M) PROCEDURES

34-00-36C

1. An inoperative FMC may be deactivated by pulling and securing FMCS CMPTR 1 (P18-2 at A6) or FMCS CMPTR 2 (P6-1 at D16) circuit breaker as appropriate.
2. Place the FMC Source Select switch to the operational FMC (BOTH ON L or BOTH ON R) position.

34-00-36D

1. Defer Autothrottle System per [MEL 22-00-04](#).

34-00-36G

1. Verify database to be within twenty eight (28) days of the effective and active date range.
2. Enter a statement in the log book such as, "NAV Database out of currency."
3. MCC will CAR the log for update at next available RON
4. MCC will close the applicable FMS Database Load forecast to prevent over-run.
5. MCC or Maintenance will create a MON log.

34-00-38 Pitch Limit Indication (PLI)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-38	Pitch Limit Indication (PLI)	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-38	Associated PFD	____ Pitch Limit Indication INOP

34-00-40 Traffic Collision and Avoidance System (TCAS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
TRAFFIC COLLISION AND AVOIDANCE SYSTEM (TCAS)					
34-00-40A	Traffic Collision and Avoidance System (TCAS) "DISP.APPR.REQ'D"	Y	1	0	A (O) (M) May be inoperative provided: 1. Routing restrictions for TCAS are observed, 2. System is deactivated and secured, and 3. Repairs are made within 3 flight cycles. Theater Restrictions May Apply
34-00-40B	Combined Traffic Alert (TA) and Resolution Advisory(RA) Dual Display	Y	2	1	C (O) May be inoperative on non- flying pilot side provided: 1. TA and RA visual display is operative on flying pilot side, and 2. TA and RA audio function is operative on flying pilot side.
34-00-40C	Resolution Advisory (RA) Display System(s)	Y	2	1	C (O) May be inoperative on non-flying pilot side.
34-00-40D	Resolution Advisory (RA) Display System(s) "DISP.APPR.REQ'D"	Y	2	0	C (O) May be inoperative provided: 1. Traffic Alert (TA) visual display and audio functions are operative, 2. TA only mode is selected by crew, and 3. Enroute or approach procedures do not require its use.
34-00-40E	Traffic Alert (TA) Display System(s) "DISP.APPR.REQ'D"	Y	1	0	C (O) May be inoperative provided: 1. RA visual display and audio functions are operative, and 2. Enroute or approach procedures do not require its use.
34-00-40F	Audio Functions "DISP.APPR.REQ'D"	Y	1	0	B May be inoperative provided enroute or approach procedures do not require use of TCAS.
34-00-40G	Airspace Selection Function	Y	-	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-40A	TCAS Control Panel	TCAS INOP
34-00-40B	Associated Navigational Display	____ TCAS TA / VSI TA / RA Dual Display INOP
34-00-40C	Associated Navigational Display	____ TCAS RA Display System(s) INOP
34-00-40D	Associated Navigational Display	____ TCAS RA Display System(s) INOP
34-00-40E	Associated Navigational Display	____ TCAS TA Display System INOP
34-00-40F	Associated Navigational Display	TCAS Audio Functions INOP
34-00-40G	Associated Navigational Display	TCAS Airspace Selection Function INOP

CONTINUED ON NEXT PAGE

(O) PROCEDURES

34-00-40A

TCAS must be operative on routes outbound from the Continental United States to destinations outside the Continental United States, except Canada.

34-00-40B, 34-00-40C, 34-00-40D, 34-00-40E

Monitor the operative indications and advisories and respond as appropriate.

(M) PROCEDURES

34-00-40A

Pull and secure the TCAS circuit breaker on the P18-1 Panel.

Note: Do **not** pull the W/S, TCAS, GPWS Audio circuit breaker, as this will inhibit the Windshear and GPWS audio.

34-00-43 Radio Height Alert

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-43	Radio Height Alert	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-43	Associated PFD(s)	____ Radio Height Alert INOP

34-00-44 Head-Up Display System (HUD/HGS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y	1	0	C	REMARKS OR EXCEPTIONS
34-00-44	Head-Up Display System (HUD/HGS) “DISP.APPR.REQ'D”	Y	1	0	C	May be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements . Note: Any mode which operates normally may be used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-44	HGS Control Panel	HGS INOP

34-00-45 Global Positioning System (GPS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-45A	Global Positioning System (GPS) "DISP.APPR.REQ'D"	Y	2	1	C
					One may be inoperative provided: - Associated ADS-B Out Extended Squitter Transmissions are considered inoperative and deferred per MEL 34-00-18D. - Approach minimums or operating procedures do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements.
34-00-45B	Global Positioning System (GPS) "DISP.APPR.REQ'D"	Y	2	0	B
					Both may be inoperative provided: - Approach minimums or operating procedures do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements, - RNAV operations do not require their use; refer to Navigation Equipment Tab (this manual) for RNAV Minimum Requirements. - Both ADS-B Out Extended Squitter Transmissions are considered inoperative and deferred per MEL 34-00-18C. Note: If installed, the associated Automatic UTC Update Function(s) will be inoperative and must be deferred per MEL Item 31-00-01B. Note: ADS-C is inoperative beyond VHF range. Note: Refer to PBCS Equipment Requirements chart. Theater Restrictions May Apply

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-45A	Captains' Flight Management Computer Control Display Unit	_____GPS INOP
34-00-45B	Captains' Flight Management Computer Control Display Unit	GPS INOP

34-00-48 EFIS Control Panel Map Switches

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
EFIS CONTROL PANEL MAP SWITCHES							
34-00-48A	POS	Y	2	1	C		
34-00-48B	STA	Y	2	1	C		
34-00-48C	ARPT	Y	2	1	C		
34-00-48D	DATA	Y	2	1	C		
34-00-48E	WPT	Y	2	1	C		
34-00-48F	Decision Height/Mins Selector “DISP.APPR.REQ'D”	Y	2	0	C	May be inoperative provided approach procedures do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-48A	Associated EFIS Control Panel	EFIS Control Panel POS Switch INOP
34-00-48B	Associated EFIS Control Panel	EFIS Control Panel STA Switch INOP
34-00-48C	Associated EFIS Control Panel	EFIS Control Panel ARPT Switch INOP
34-00-48D	Associated EFIS Control Panel	EFIS Control Panel DATA Switch INOP
34-00-48E	Associated EFIS Control Panel	EFIS Control Panel WPT Switch INOP
34-00-48F	Associated EFIS Control Panel	EFIS Control Panel Decision Height/Mins Selector INOP

34-00-49 Right IRS DC Power Supply System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	0	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-49	Right IRS DC Power Supply System "DISP.APPR.REQ'D"	Y		B	(O) May be inoperative provided: 1. Remaining IRS Mode Selector Unit lights are not illuminated, 2. Autopilot dual channel mode is not used during approach, and 3. Approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements..

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-49	Right IRS DC Fail Light	Right IRS DC Power Supply system INOP

(O) PROCEDURES

1. If Left IRS DC FAIL light illuminates during flight, assume that both IRS DC FAIL lights are illuminated.
2. Refer to the [QRH Non-Normal Checklist 11.9, IRS DC FAIL](#).

34-00-54 Integrated Standby Flight Display (ISFD) System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
INTEGRATED STANDBY FLIGHT DISPLAY (ISFD) SYSTEM					
34-00-54A	(ISFD) Attitude Display "DISP.APPR.REQ'D"	Y	1	0	B May be inoperative provided: 1. Operations are conducted in Day VMC only, and 2. Operations are not conducted into known or forecast Over-The-Top conditions.
34-00-54B	(ISFD) ILS Indication	Y	1	0	D
34-00-54C	(ISFD) Heading Display	Y	1	0	C
34-00-54D	(ISFD) Dedicated Battery	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-54A	Integrated Standby Flight Display	Integrated Standby Flight Display (ISFD) Attitude Indication INOP
34-00-54B	Integrated Standby Flight Display	Integrated Standby Flight Display (ISFD) ILS Indication INOP
34-00-54C	Integrated Standby Flight Display	Integrated Standby Flight Display (ISFD) Heading Indication INOP
34-00-54D	Integrated Standby Flight Display	Integrated Standby Flight Display (ISFD) Dedicated Battery INOP(ISFD)

34-00-55 Vertical Situation Display (VSD) System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
34-00-55	Vertical Situation Display (VSD) System	Y	1	0	D	May be inoperative provided procedures do not require its use.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-55	On Affected ND(s)	Vertical Situation Display System INOP

34-00-56 Global Navigation Satellite Landing System (GLS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
34-00-56	Global Navigation Satellite Landing System (GLS) "DISP.APPR.REQ'D"	Y	2	0 D	May be inoperative provided approach minimums do not require its use; refer to Navigation Equipment Tab (this manual) for Lower Landing Minimum Requirements. Note: When dispatched with an inoperative right GLS, manually tune an GLS frequency on the left Navigation Control Panel (P8) prior to takeoff to prevent display of the GPWS INOP light in flight. NO AUTOLAND will be displayed in the flight mode annunciation autopilot status on fail operational equipped airplanes. For one GLS inoperative, SINGLE CH will be displayed in the flight mode annunciation autopilot status.

MEL ITEM	TAB LOCATION	PLACARD TEXT
34-00-56	Overhead IRS Panel	GLS system INOP

35 Oxygen

Table of Contents

35-00-02	Passenger Service Units (PSU's)
35-00-02A	Passenger Service Units (PSU's)
35-00-02B	Automatic Presentation
35-00-02C	Door Latches
35-00-03	Oxygen Pressure Indicators
	OXYGEN PRESSURE INDICATORS
35-00-03A	Crew Indicator
35-00-03B	Overpressure Discharge Indication Disk
35-00-04	Portable Oxygen Dispensing Units
35-00-04A	Portable Oxygen Bottles or Units (Including Masks and Hoses)
35-00-04B	Portable Oxygen Bottles or Units - Tamper Seals or Tags
35-00-05	Passenger Oxygen System
35-00-05A	Passenger Oxygen System
35-00-05B	Passenger Oxygen System
35-00-06	PBE Smoke Hood Seals (Cockpit And Passenger Cabin)
35-00-06A	PBE Smoke Hood - Tamper Seals or Tags (Cockpit and Passenger Cabin)
35-00-06B	PBE Smoke Hood - Tamper Seals or Tags (Cockpit and Passenger Cabin)

35-00-02 Passenger Service Units (PSU's)

NUMBER INSTALLED					NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
35-00-02A	Passenger Service Units (PSU's) "DISP.APPR.REQ'D"	Y	-	-	B	(M) May be inoperative provided: 1. Associated seats are blocked and placarded to prevent occupancy, and 2. Units operate normally for all usable lavatory and flight attendant locations. Note: MCC must contact Flight Control for coordinating with ACS and ROC to remove seat from inventory until repaired.
35-00-02B	Automatic Presentation "DISP.APPR.REQ'D"	N	1	0	C	(O) (M) May be inoperative provided: 1. Alternate deployment system is verified to operate normally, and 2. Aircraft remains at or below FL 300.
35-00-02C	Door Latches "DISP.APPR.REQ'D"	N	-	-	B	(M) Automatic opening feature of door latch(es) may be inoperative unlatched, and taped closed provided: 1. PSU oxygen system operates normally, 2. Flight remains at or below FL 250, and 3. Passenger(s) occupying the seat(s) with inoperative door latch(es) are briefed on oxygen mask procedure.

MEL ITEM	TAB LOCATION	PLACARD TEXT
35-00-02A	PASS OXYGEN Switch	____ Passenger Service Unit(s) (PSU) INOP
35-00-02B	PASS OXYGEN Switch	Passenger Oxygen Automatic Presentation INOP
35-00-02C	PASS OXYGEN Switch	____ PSU Door Latch(es) INOP

(O) PROCEDURES

35-00-02B

1. Deploy passenger masks manually using the PASS OXYGEN Switch or Actuation / Reset Handle (if installed). Flight altitude is limited to FL 300.

(M) PROCEDURES

35-00-02A

1. Close the inoperative door and secure it using adhesive tape.
2. Rope, tie, tape or otherwise block the seats with the inoperative units against passenger use. Do likewise if inoperative unit is in a lavatory.
3. Placard the blocked off seats or lavatory - "NOT TO BE OCCUPIED".

	737 Minimum Equipment List 35 Oxygen	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

35-00-02B

1. Apply electrical power to the aircraft.
2. Pull down the test stop buttons on all service units and turn approximately 90 degrees. If service units do not have test buttons, install adhesive tape approximately 4 inches long to prevent the door from fully opening.
3. On the P5 aft overhead panel, push the PASS OXYGEN switch to on, verify the PASS OXY ON Light illuminates and both MASTER CAUTION light and the OVERHEAD annunciator lights illuminate.
4. Verify that the mask box doors in the passenger cabin, including lavatories are against the stop buttons or against the adhesive tape.
5. Open the OXYGEN SYSTEM IND circuit breaker on the P18 panel.
6. Wait 10 seconds and close the OXYGEN SYSTEM IND circuit breaker.
 - A. Verify that the OVERHEAD annunciator light on the P7 lightshield is off, both MASTER CAUTION lights are off and no other annunciator light is on, the PASS OXY ON light is off.
7. Hold the mask door in its position, turn the test stop button 90 degrees and release the button.
8. Push the test stop button up until you hear the sound of a click and then release the test stop button.
 - A. Service units without the test button, push the door up till you hear the click and reset indicator pin.
9. Return aircraft to normal condition.

35-00-02C

DOOR LATCH(ES) INOPERATIVE UNLATCHED:

1. Verify that the related generator has not been expended. Color band will be black if generator has been expended and generator must be replaced.
2. Tape door closed. Fashion the tape such that a non adhesive "handle", approximately 4 inches long, is left pendant. This "handle" will be used in case of need by the passenger to strip the securing tape down, thus allowing the door to fall open.

35-00-03 Oxygen Pressure Indicators

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
OXYGEN PRESSURE INDICATORS					
35-00-03A	Crew Indicator “Contact MCC”	N	1	0	C (O) (M) May be inoperative provided all cylinder indicators are checked to verify that oxygen supply is above minimum required for flight PRIOR TO EACH DEPARTURE. (Logbook Entry Required) Note: If CREW OXYGEN pressure indicator is less than 1,000 PSI, contact MTC for guidance. Aircraft may be able to continue in service in accordance with TOPP 40-40-05. Repetitive Check Required (Yellow Placard)
35-00-03B	Overpressure Discharge Indication Disk	Y	1	0	C (O) May be damaged or missing.

MEL ITEM	TAB LOCATION	PLACARD TEXT
35-00-03A	Crew Oxygen Pressure Indicator	Crew Oxygen Pressure Indicator INOP
35-00-03B	Crew Oxygen Pressure Indicator	Crew Oxygen Overpressure Discharge Indication Disk INOP / MISSING

(O) PROCEDURES

35-00-03A

- Refer to [Volume 1 737 3.4.4 Preflight Procedure - Pilot Monitoring](#) for dispatch requirements.

Note: If CREW OXYGEN pressure is less than 1,000 PSI, contact MCC for guidance. Aircraft may be able to continue in service in accordance with TOPP 40-40-05.

35-00-03B

- When dispatching with the overpressure discharge indication disk damaged or missing, verify that oxygen pressure is adequate for dispatch.
 - Observe system pressure using the flight deck crew and passenger (if installed) oxygen pressure indicator on the aft overhead panel, or using the pressure indicator on the external service panel (if installed), or oxygen cylinder.

(M) PROCEDURES

35-00-03A

PRIOR TO EACH DEPARTURE:

- Pressure must be verified at the oxygen bottle per [AMM Task 12-15-21-210-801](#).

35-00-04 Portable Oxygen Dispensing Units

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
35-00-04A	Portable Oxygen Bottles or Units (Including Masks and Hoses) "DISP.APPR.REQ'D"	Y	-	-	D (O) (M) Any in excess of those required by 14 CFR may be inoperative or removed provided: 1. An inoperative or not properly serviced portable oxygen bottle/unit remains in a certified location until removed or serviced at the next suitable maintenance facility, 2. Location placarding is removed or obscured, 3. Required distribution is maintained, and 4. Maintenance Control Center is notified regarding affected bottle. Note: If this MEL item is being used to defer expired equipment, the affected equipment must be removed from the aircraft. Note: See (M) procedure for location placard disposition. Note: Inoperative portable oxygen bottles or units, removed from a certified location or removed from the aircraft are subject to 49 CFR dangerous goods regulations. Note: Medical equipment installed in the aircraft as part of an EMS operation is not considered part of the normal complement of equipment. No MEL relief applies to that equipment and 14 CFR maintenance and inspection requirements do not apply. Note: Reference charts in the (M) procedure for minimum number of full oxygen bottles required for dispatch.
35-00-04B	Portable Oxygen Bottles or Units - Tamper Seals or Tags	Y	-	-	C (O) May be inoperative, damaged, or missing provided proper installation and servicing is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
35-00-04A	Logbook	____ PORTABLE OXY BOTTLE/UNIT INOP
35-00-04B	Logbook	____ PORTABLE OXY BOTTLE/UNIT TAMPER SEALS OR TAG INOP/DAMAGED/MISSING

(O) PROCEDURES

35-00-04A

1. Ensure cabin crew (Flight Leader) is notified of the unserviceable bottle and its location.

35-00-04B

1. Ensure cabin crew (Flight Leader) is notified of the inoperative, damaged, or missing tag and its location.
2. PRIOR TO EACH DEPARTURE:

A. Proper installation and servicing is verified.

(M) PROCEDURES

35-00-04A

1. Ensure serviceable bottles are evenly distributed throughout the cabin.
2. Remove mask/hose assembly from the unserviceable unit. Secure the mask in a location where it can be retrieved at the next available maintenance facility.
 - A. Disconnect mask assembly from oxygen cylinder outlet by rotating hose fitting $\frac{1}{2}$ turn and pulling out.
3. Place a piece of tape (or other suitable means) over the pressure gauge of oxygen bottle and label INOP. Position the unserviceable cylinder in holder and fasten quick release clamp.
4. Using tape or other suitable means, cover affected oxygen bottle location placarding.

Note: For locations with two oxygen bottles installed, do NOT cover placard if remaining bottle is operative.

737-800 Non-ETOPS: 738 FLEET (A/C 3701-3777)	
Number of passengers and flight attendants	Minimum Number of full oxygen bottles required based on duration of flight for which an enroute alternate is not available.
	For Non-Extended Operations (ETOPS)
0-165	4

737-900ER Extended Operations (ETOPS): 73E FLEET(A/C 3876-3895)			
Number of passengers and flight attendants	Minimum Number of full oxygen bottles required based on duration of flight for which an enroute alternate is not available.		
	For Non-Extended Operations (ETOPS)	For Extended Operations (ETOPS) up to 120 minutes.	For Extended Operations (ETOPS) up to 180 minutes.
0-50	4	4	4
51-100	4	4	5
101-150	4	5	7
151-185	4	6	9

737-900ER Non-ETOPS: 739 FLEET(A/C 3801-3875; 3896-3930)(A/C 3931-3963 - POST - AA 2500-01847)	
Number of passengers and flight attendants	Minimum Number of full oxygen bottles required based on duration of flight for which an enroute alternate is not available.
	For Non-Extended Operations (ETOPS)
0-50	4
51-100	4
101-150	4
151-185	4

CONTINUED ON NEXT PAGE

737-900ER Non-ETOPS: 73J FLEET(A/C 3943-3952, 3955, 3956 - PRE-AA 2500-01847)	
Number of passengers and flight attendants	Minimum Number of full oxygen bottles required based on duration of flight for which an enroute alternate is not available.
	For Non-Extended Operations (ETOPS)
0-50	4
51-100	4
101-150	4
151-186	4

737-900ER Non-ETOPS: 73R FLEET(A/C 3931-3942, 3953, 3954, 3957-3963 - PRE-AA 2500-01847)	
Number of passengers and flight attendants	Minimum Number of full oxygen bottles required based on duration of flight for which an enroute alternate is not available.
	For Non-Extended Operations (ETOPS)
0-50	4
51-100	4
101-150	4
151-180	4

35-00-05 Passenger Oxygen System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
35-00-05A	Passenger Oxygen System "DISP.APPR.REQ'D"	Y	1	0	B (O) (M) May be inoperative provided: 1. Flight remains at or below FL 250, 2. Flight is not conducted where minimum enroute altitude is above 14,000 feet MSL, 3. Both air conditioning packs operate normally, 4. Remaining components of pressurization system operate normally, 5. Portable oxygen units are provided for 10% of passengers, based on installed portable oxygen bottles, and 6. Passengers are appropriately briefed.
35-00-05B	Passenger Oxygen System "DISP.APPR.REQ'D"	Y	1	0	B May be inoperative provided flight is conducted at or below 10,000 ft. MSL.

MEL ITEM	TAB LOCATION	PLACARD TEXT
35-00-05A	PASS OXYGEN Switch	Passenger Oxygen System INOP
35-00-05B	PASS OXYGEN Switch	Passenger Oxygen System INOP

(O) PROCEDURES

35-00-05A

Refer to the Remarks or Exceptions Column.

(M) PROCEDURES

35-00-05A

Refer to the Remarks or Exceptions Column.

Example, Proviso e) 4 installed bottles, 40 passengers.

35-00-06 PBE Smoke Hood Seals (Cockpit And Passenger Cabin)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD						REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
35-00-06A	PBE Smoke Hood - Tamper Seals or Tags (Cockpit and Passenger Cabin)	Y	-	-	C	One Tamper Seal or Tag on each PBE may be inoperative, damaged, or missing.
35-00-06B	PBE Smoke Hood - Tamper Seals or Tags (Cockpit and Passenger Cabin)	Y	-	-	C	(O) Both Tamp Seals or Tags may be inoperative, damaged, or missing provided proper installation and operation is verified PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
35-00-06A	Logbook	___ PBE TAMPER SEALS/TAGS INOP/DAMAGED/MISSING
35-00-06B	Logbook	___ PBE TAMPER SEALS/TAGS INOP/DAMAGED/MISSING

(O) PROCEDURES


35-00-06B

PRIOR TO EACH DEPARTURE:

1. Ensure cabin crew (Flight Leader) is notified of the inoperative, damaged, or missing tag and its location.
2. PRIOR TO EACH DEPARTURE:
 - A. Remove PBE and inspect for obvious damage (punctures, rips in pouch, etc.).
 - B. Reinstall PBE and ensure proper installation.

Note: If PBE is damaged or installation is in question, maintenance is required.

Figure 35-1: Portable Protective Breathing Equipment (PBE)

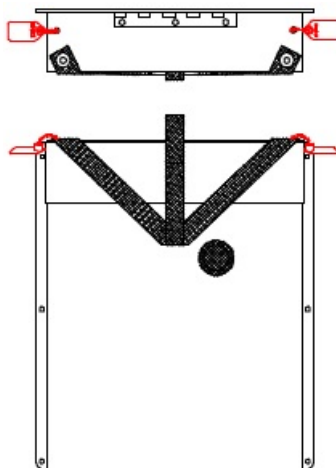

36 Pneumatic

Table of Contents

36-00-01	Manifold Isolation Shutoff Valve
36-00-01	Manifold Isolation Shutoff Valve
36-00-02	Ground Pneumatic Connector Check Valve
36-00-02A	Ground Pneumatic Connector Check Valve
36-00-02B	Ground Pneumatic Connector Check Valve
36-00-03	Precooler Control Valves
36-00-03A	Precooler Control Valves
36-00-03B	Precooler Control Valves
36-00-04	Pneumatic Pressure Indication Systems
36-00-04	Pneumatic Pressure Indication Systems
36-00-05	Engine Bleed Air Shutoff Valves (PRSOV)
36-00-05A	Engine Bleed Air Shutoff Valves (PRSOV)
36-00-05B	Engine Bleed Air Shutoff Valves (PRSOV)
36-00-06	Dual Bleed Light System
36-00-06	Dual Bleed Light System
36-00-08	Engine Bleed Trip Off Lights
36-00-08	Engine Bleed Trip Off Lights
36-00-09	High Stage Valves
36-00-09	High Stage Valves

36-00-01 Manifold Isolation Shutoff Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			N	1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
36-00-01	Manifold Isolation Shutoff Valve "DISP.APPR.REQ'D"					C	(M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Valve remains CLOSED except for engine start, and 2. Aircraft is not operated in known or forecast icing conditions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-01	ISOLATION VALVE Switch	Manifold Isolation Shutoff Valve INOP

(M) PROCEDURES

1. Deactivate the bleed air isolation valve (AMM 36-00-00/901).

- A. Set both engine BLEED switches to OFF.
- B. Set the APU Bleed Air switch to OFF.
- C. Set both PACK switches to OFF.
- D. Pull and secure the P6-4 panel circuit breaker AIR CONDITIONING BLEED AIR VALVE ISOLATION.
- E. Remove, cap and stow the connector from bleed air isolation valve.

Note: It may be necessary to temporarily remove the air conditioning duct segment located in front of keel beam access hole.

- F. Manually move the valve to the closed position using the manual override handle.
- G. Set the BLEED air and PACK switches as required.

Note: The isolation valve must be manually opened for engine start and then manually closed after the engines are started. Personnel should take special care to remain well clear of the engine inlet hazard areas when manually closing the valve after engine start.

2. If the bleed air isolation valve is stuck closed and cannot be opened, do these steps:

- A. Set both engine BLEED air switches to OFF.
- B. Set the APU BLEED air switch to OFF.
- C. Set both PACK switches to OFF.
- D. Pull and secure the P6-4 panel circuit breaker AIR CONDITIONING BLEED AIR VALVE ISOLATION.
- E. Remove, cap and stow the connector from the bleed air isolation valve.

Note: It may be necessary to temporarily remove the air conditioning duct segment located in front of keel beam access hole.


- F. When personnel have been cleared from the engine danger area, inform the flight deck that the right engine may be started using a start cart.

Note: Personnel should take special care to remain well clear of the right engine inlet hazard area when disconnecting the start cart after right engine start.

- G. After the start cart is removed and secured out of the right and left engine hazard area, inform the flight deck that the left engine may be started using APU bleed air.

Note: With the isolation valve closed, two separate air sources (i.e. the APU and a ground source) must be used to start the engines. To avoid having to use two sources, the isolation valve may be manually opened for a cross-bleed start and then manually closed after the engines are started.

Figure 36-1: Manifold Isolation Valve

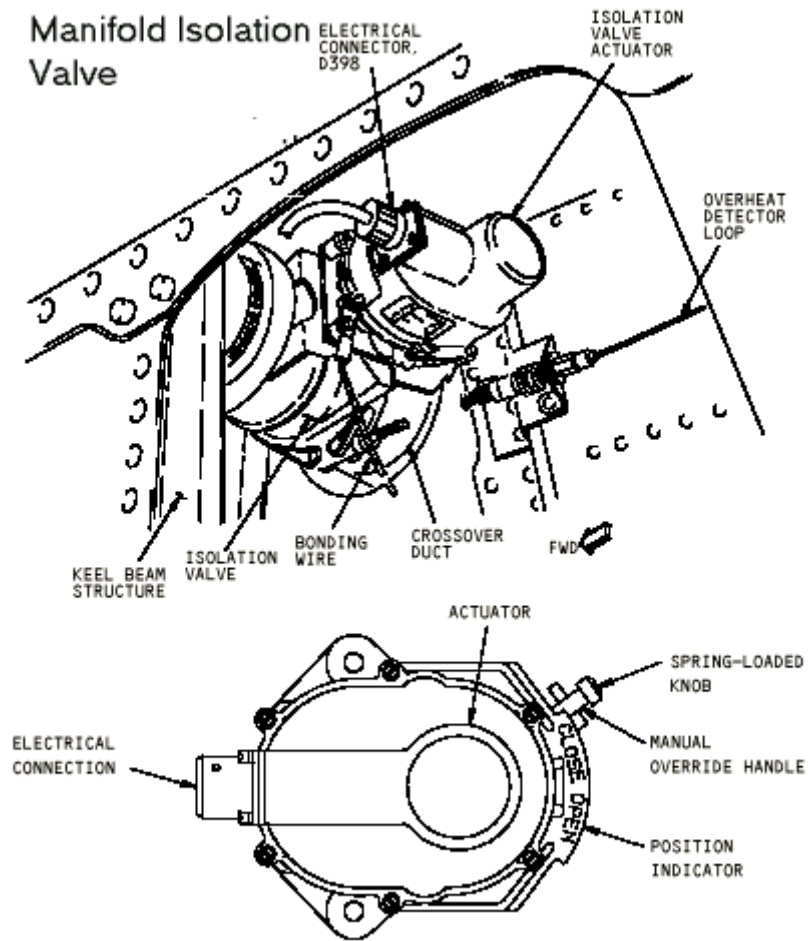

36-00-02 Ground Pneumatic Connector Check Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
36-00-02A	Ground Pneumatic Connector Check Valve "DISP.APPR.REQ'D"	N	1	0	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative OPEN provided: 1. Right pneumatic manifold remains depressurized after starting right engine, 2. Aircraft is not operated in known or forecast icing conditions, and 3. Altitude remains at or below FL 250.
36-00-02B	Ground Pneumatic Connector Check Valve "DISP.APPR.REQ'D"	N	1	0	C May be inoperative in CLOSED position. Note: With the ground pneumatic connector check valve inoperative closed, engines cannot be started from ground source. Use APU as air source for starting engines.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-02A	Pneumatic System Control Panel	Ground Pneumatic Connector Check Valve INOP Open
36-00-02B	Pneumatic System Control Panel	Ground Pneumatic Connector Check Valve INOP Closed

(O) PROCEDURES

Note: With the ground pneumatic check valve inoperative CLOSED, use APU air for starting engines.

Note: With the ground pneumatic check valve inoperative OPEN, the right engine can only be started using a ground pneumatic source.

36-00-02A

Note: When dispatching with a single engine bleed on for takeoff (airplane pressurized), V1(MCG) should be determined based on AC packs OFF. Takeoff performance should be based on packs AUTO. Refer to ODM, Abnormal Section, MEL Support, Minimum Control Speed, VMCA Chart.

- Following engine start, depressurize the right pneumatic duct prior to removing the ground pneumatic source. Operate airplane with:

- Right bleed OFF
- Right pack OFF
- Isolation valve CLOSE

- Operate the left pack using the left engine bleed or APU bleed with isolation valve CLOSE.

Note: At altitudes 17,000 feet and below, increased airflow will occur when flaps are extended (takeoff and landing) and the APU is used instead of engine bleed to supply bleed air to the operating pack. Refer to Volume 1, Supplementary Procedures for NO ENGINE BLEED TAKEOFF AND LANDING.

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

Note: With the PACK switch in AUTO, the pack will operate in the high flow mode when the APU is used as the bleed source.

- Maximum altitude is FL 250.

(M) PROCEDURES

36-00-02A

1. Use a ground pneumatic source for starting the right engine.
2. Prior to removing the ground pneumatic source, verify with the flight crew that the right pneumatic duct is depressurized (right engine bleed OFF and isolation valve CLOSE).
3. Ground pneumatic source will be required at down line stations if the right engine is shutdown.

36-00-03 Precooler Control Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD		Y	2	0	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
36-00-03A	Precooler Control Valves “DISP.APPR.REQ’D”				C (O) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative in any position provided: 1. Associated engine bleed shutoff valve remains closed, 2. Aircraft is not operated in known or forecast icing conditions, and 3. Flight level restrictions are applied.
36-00-03B	Precooler Control Valves “DISP.APPR.REQ’D”	N	2	0	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative full open provided: 1. Airplane is not operated in known or forecast icing conditions, and 2. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-03A	Pneumatic System Control Panel	Precooler Control Valve(s) INOP
36-00-03B	Pneumatic System Control Panel	Precooler Control Valve(s) INOP

(O) PROCEDURES

36-00-03A

LEFT ENGINE BLEED UNUSABLE:

1. Limit altitude to FL 250.
2. For increased airflow at altitudes below 17,000 feet, operate the left pack using the APU bleed air, the right pack using the right engine bleed and the isolation valve CLOSE.
3. At altitudes above 17,000 feet operate with the APU bleed air OFF.
4. Operate the left pack using the right engine bleed, the right pack OFF and isolation valve OPEN.

RIGHT ENGINE BLEED UNUSABLE:

1. Limit altitude to FL 250.
2. Operate the left pack using the left engine bleed, right pack OFF, and isolation valve CLOSE.

Note: At altitudes of 17,000 feet and below, increased airflow will occur when the flaps are extended (takeoff and landing) and the APU is used instead of engine bleed to supply bleed air to the operating pack. Refer to [Operations Manual, Volume I, Supplementary Procedures, No Engine Bleed Takeoff and Landing Procedure](#).

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

TWO ENGINE BLEEDS UNUSABLE:

1. Limit altitude to 17,000 feet MSL.
2. Operate the left pack using APU bleed and isolation valve CLOSE.
3. Refer to [Operations Manual, Volume I, Supplementary Procedures, No Engine Bleed Takeoff and Landing Procedure](#).

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

36-00-03B

36-00-03B PRECOOLER CONTROL VALVES	
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 1,530 lbs. per inoperative valve. Increase BLOCK FUEL by 0.4% per inoperative valve.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 1,120 lbs. per inoperative valve. Reduce T/O CLIMB LIMIT by 1,120 lbs. per inoperative valve. LANDING Reduce RWY ALLOWABLE LANDING WT by 1,120 lbs. per inoperative valve. Reduce LANDING CLIMB LIMIT WT by 1,120 lbs. per inoperative valve.

36-00-03B PRECOOLER CONTROL VALVES	
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 1,615 lbs. per inoperative valve. Increase BLOCK FUEL by 0.4% per inoperative valve.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 1,180 lbs. per inoperative valve. Reduce T/O CLIMB LIMIT by 1,180 lbs. per inoperative valve. LANDING Reduce RWY ALLOWABLE LANDING WT by 1,180 lbs. per inoperative valve. Reduce LANDING CLIMB LIMIT WT by 1,180 lbs. per inoperative valve.

(M) PROCEDURES

36-00-03B

Deactivate precooler control valve in full open position by completing the following procedure.

For Precooler Control Valve P/N 3289562-5/-6/-7:

1. Set each engine lever in the CUTOFF position.
2. Remove pressure from the pneumatic system ([AMM 36-00-00/201](#)).
3. Deactivate the leading edge slats in the retracted position ([AMM 27-81-00/201](#)).
4. Deactivate the associated thrust reverser ([AMM 78-31-00/201](#)).
5. Gain access to the precooler control valve by opening the appropriate thrust reverser ([AMM 78-31-00/201](#)).
6. Remove the supply pressure sense line between the precooler control valve, bleed air regulator, and intersection manifold duct ([AMM 36-12-02/401](#)).
7. On the precooler control valve supply port, remove tubing fitting union J522P53 and replace with undrilled tubing fitting union C36002-1.
8. Reinstall the supply pressure sense line between the precooler control valve, bleed air regulator, and intersection manifold duct ([AMM 36-12-02/401](#)).
9. Supply pressure to pneumatic system using supply pressure upstream of PRSOV and perform a leak check of all distributed tubing fittings using snoop leak detector or equivalent soap solution ([AMM 36-00-00/201](#)).
10. Verify that the visual position indicator on the precooler control valve indicates that the valve is in the full open position.
11. Remove pressure from the pneumatic system ([AMM 36-00-00/201](#)).
12. Close thrust reverser ([AMM 78-31-00/201](#)).
13. Activate thrust reverser ([AMM 78-31-00/201](#)).

CONTINUED ON NEXT PAGE

 DELTA	737 Minimum Equipment List 36 Pneumatic	Revision: 50.0.1 Date: 24-Apr-2026
--	--	---

14. Activate leading edge slats ([AMM 27-81-00/201](#)).

For Precooler Control Valve P/N 63292146-1:

1. Set each engine start lever in the CUTOFF position.
2. Remove pressure from the pneumatic system ([AMM 36-00-00/201](#)).
3. Deactivate the leading edge slats in the retracted position ([AMM 27-81-00/201](#)).
4. Deactivate the associated thrust reverser ([AMM 78-31-00/201](#)).
5. Gain access to the precooler control valve by opening the appropriate thrust reverser ([AMM 78-31-00/201](#)).
6. Remove and reinstall pneumatic lock plug into engaged/locked position. Ensure plug bottoms in bore. Apply 95-105 in-lb of torque on the pneumatic lock hex.
7. Supply Pressure Upstream of the PRSOV and verify that the valve remain in the full open position as evidenced by visual inspection.
8. Remove pressure from pneumatic system ([AMM 36-00-00/201](#)).
9. Close thrust reverser ([AMM 78-31-00/201](#)).
10. Activate thrust reverser ([AMM 78-31-00/201](#)).
11. Activate leading edge slats ([AMM 27-81-00/201](#)).

36-00-04 Pneumatic Pressure Indication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
36-00-04	Pneumatic Pressure Indication Systems	Y	1	0	C	(O) May be inoperative provided alternate procedures are used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-04	Pneumatic Pressure Indicator	Pneumatic Pressure Indicator INOP

(O) PROCEDURES

With the START VALVE OPEN lights, the crew can verify that the engine start valve has closed by noting that the START VALVE OPEN lights have extinguished.

36-00-05 Engine Bleed Air Shutoff Valves (PRSOV)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
36-00-05A	Engine Bleed Air Shutoff Valves (PRSOV) "DISP.APPR.REQ'D"	N	2	1	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Valve is secured closed before engine start, 2. Aircraft is not operated in known or forecast icing conditions, and 3. Flight altitude remains at or below FL 250.
36-00-05B	Engine Bleed Air Shutoff Valves (PRSOV) "DISP.APPR.REQ'D"	N	2	0	C (O) (M) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Valve is secured closed before engine start, 2. Aircraft is not operated in known or forecast icing conditions, 3. APU bleed air system operates normally, and 4. Flight altitude remains at or below 17,000 feet.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-05A	Associated Engine Bleed Switch(es)	___ ENG BLEED AIR SHUTOFF VALVE INOP
36-00-05B	Associated Engine Bleed Switch(es)	BOTH ENG BLEED AIR SHUTOFF VALVES INOP

(O) PROCEDURES

36-00-05A

Note: Use of APU bleed air is limited to 17,000 feet. One air conditioning pack will be unusable when dispatching with:

1. The RIGHT engine bleed inoperative.
2. The Left engine bleed inoperative and flight altitude greater than 17,000 feet.
3. Both engine bleeds inoperative.

Note: When dispatching with a single engine bleed ON for takeoff (airplane pressurized) V1 (MCG) should be determined based on AC packs OFF. Takeoff performance should be based on AC packs AUTO.

1. Do not dispatch into known or forecast icing conditions.
2. After engine start, position the associated engine BLEED switch to OFF.
3. For LEFT engine bleed inoperative:
 - A. At altitudes 17,000 feet and below, operate the LEFT pack using the APU bleed air, the RIGHT pack using the right engine bleed, and isolation valve CLOSED.
 - B. At altitudes above 17,000 feet, operate with the APU bleed air OFF.
 - i. Limit altitude to FL 250.
 - ii. Operate the LEFT pack using the right engine bleed, RIGHT pack OFF, and isolation valve OPEN.
4. For RIGHT engine bleed inoperative:
 - A. Limit altitude to FL 250.
 - B. Operate the LEFT pack using the left engine bleed, RIGHT pack OFF, and isolation valve CLOSED.

Note: At altitudes 17,000 feet and below, increased air flow will occur when flaps are extended (takeoff and landing) and the APU is used instead of engine bleed to supply bleed air to the operating pack. Refer to [Volume 1 737 5.2.12 No Engine Bleed Takeoff and Landing](#).

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

	737 Minimum Equipment List 36 Pneumatic	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

36-00-05B

1. Do not dispatch into known or forecast icing conditions.
2. Set BOTH engine bleed switches to the OFF position.
3. For BOTH engine bleeds inoperative:
 - A. Limit altitude to 17,000 feet MSL.
 - B. Operate the left pack using APU bleed and isolation valve CLOSE.
 - C. Refer to [Volume 1 737 5.2.12 No Engine Bleed Takeoff and Landing](#).

Note: *Bleeds off performance (on WDR) is not required. This procedure is used to prevent “back flow” to the APU. This is not a performance issue.*

(M) PROCEDURES

36-00-05A, 36-00-05B

1. Comply with Preparation steps in [AMM Task 36-00-00-040-804](#).
2. Open the fan duct cowl and thrust reversers. (Ensure all precautionary measures are taken with cowl, slats and thrust reversers.)
3. Lock the engine bleed air valve (PRSOV) in the CLOSED position:
 - A. Turn the override nut to align the position indicator with the CLOSED position.
 - B. Loosen the lock screw/knob bolt and push in locking knob to lock valve in closed position.
 - C. Retighten lock screw/knob bolt.
4. Close the fan duct cowl and thrust reversers.

36-00-06 Dual Bleed Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
36-00-06	Dual Bleed Light System	Y	1	0	C
					(O) May be inoperative provided: 1. APU bleed air is not used in flight, and 2. APU bleed valve is verified closed PRIOR TO EACH DEPARTURE. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-06	1. Dual Bleed Light 2. APU Bleed Switch	1. Dual Bleed Light System INOP 2. Do Not Use APU Bleed In Flight

Note: If the APU is inoperative or the APU Air has not been used on the ground, the Repetitive Check is Not Required.

(O) PROCEDURES

PRIOR TO EACH DEPARTURE verify that the APU bleed valve is closed using the following procedure:

1. Place isolation valve switch in CLOSE position.
2. With the APU running, turn off the APU bleed.
3. Turn off the left pack and left engine bleed.
4. Observe that the left pneumatic duct pressure decreases to less than or equal to 10 psi.
5. Reinstall the left engine bleed, left pack, and isolation valve as required.

36-00-08 Engine Bleed Trip Off Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD			Y	2	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION						REMARKS OR EXCEPTIONS
36-00-08	Engine Bleed Trip Off Lights “DISP.APPR.REQ’D”				C	(O) Except for Extended Operations (ETOPS) beyond 120 minutes, may be inoperative provided: 1. Associated engine bleed is not used except for engine start, 2. Aircraft is not operated in known or forecast icing conditions, and 3. Flight level restrictions are applied.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-08	Affected Engine BLEED TRIP OFF Light(s)	Engine BLEED TRIP OFF Light(s) INOP

(O) PROCEDURES

After engine start, position the associated engine BLEED switch to OFF.

LEFT ENGINE BLEED UNUSABLE:

1. Limit altitude to FL 250.
2. For increased airflow at altitudes below 17,000 feet, operate the left pack using the APU bleed air, the right pack using the right engine bleed and the isolation valve CLOSE.
3. At altitudes above 17,000 feet operate with the APU bleed air OFF.
4. Operate the left pack using the right engine bleed, the right pack OFF and isolation valve OPEN.

RIGHT ENGINE BLEED UNUSABLE:

1. Limit altitude to FL 250.
2. Operate the left pack using the left engine bleed, right pack OFF, and isolation valve CLOSE.

Note: At altitudes of 17,000 feet and below, increased airflow will occur when the flaps are extended (takeoff and landing) and the APU is used instead of engine bleed to supply bleed air to the operating pack. Refer to Operations Manual, Supplementary Procedures, No Engine Bleed Takeoff and Landing Procedure.

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

TWO ENGINE BLEEDS UNUSABLE:

1. Limit altitude to 17,000 feet MSL.
2. Operate the left pack using APU bleed and isolation valve CLOSE.
3. Refer to Volume 1, No Engine Bleed Takeoff and Landing Procedure.

Note: Bleeds off performance (on WDR) is not required. This procedure is used to prevent "back flow" to the APU. This is not a performance issue.

36-00-09 High Stage Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
36-00-09	High Stage Valves “DISP.APPR.REQ'D”	N	2	1	C	(O) (M) May be inoperative locked closed provided a minimum of 60% N1 is maintained on associated engine during flight above FL300 or in icing conditions.

MEL ITEM	TAB LOCATION	PLACARD TEXT
36-00-09	Associated Engine Bleed Switch	Engine High Stage Valve INOP

(O) PROCEDURES

Apply the following fuel mileage decrement to account for flight above FL300 or in icing conditions which require a minimum of 60% N1 on the associated engine:

36-00-09	HIGH STAGE VALVES
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	For flights above FL300 or forecasting icing conditions increase BLOCK FUEL by an additional: 1. 2.0% for flights less than or equal to 1,000 nautical miles. 2. 1.0% for flights greater than 1,000 nautical miles.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None


(M) PROCEDURES

Note: Only one high stage valve may be locked in the closed position for dispatch. Dispatch with the opposite high stage valve locked closed under MEL item 30-00-03B is not allowed.

1. Start lever in the CUTOFF position.
2. Remove pressure from the pneumatic system.
3. Open fan cowl and thrust reverser.
4. Manually lock closed the high stage valve.
 - A. Manually wrench the high stage valve to the CLOSE position.
 - B. Loosen the position indicating screw.
 - C. Slide the lock into the recess in the cover plate.
 - D. Tighten the position indicating screw.
5. Close fan cowl and thrust reverser.

 [Link to High Stage Valve Deactivation Video](#)

Figure 36-2: Pneumatic System on the Engine/Struct Component Location

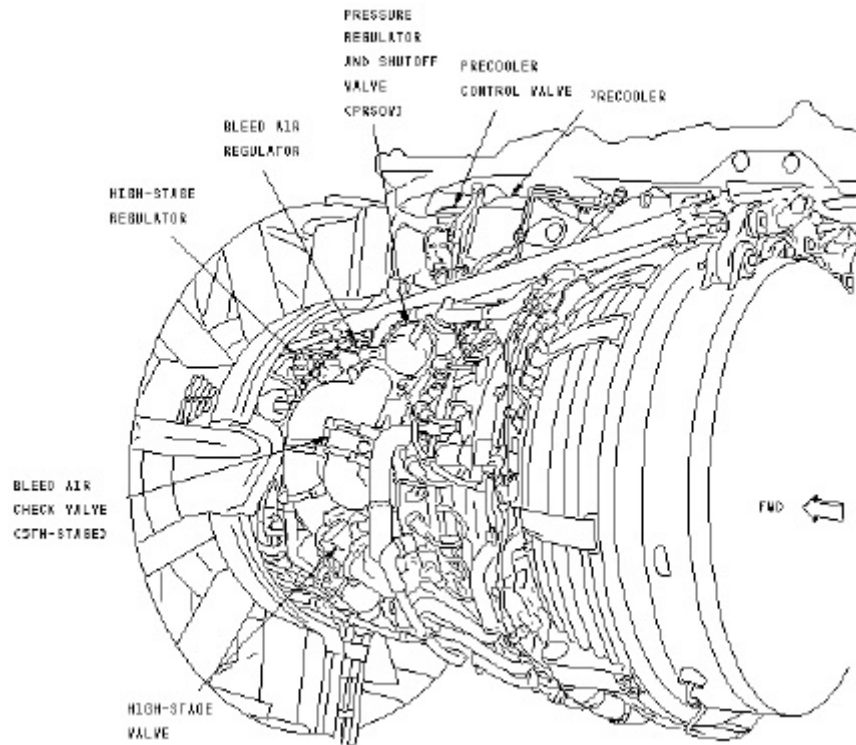

38 Water / Waste

Table of Contents

38-00-01	Potable Water Systems
38-00-01A	Potable Water Systems
38-00-01B	Potable Water Systems
38-00-02	Lavatory Waste Systems
38-00-02A	Lavatory Waste Systems
38-00-02B	Lavatory Waste Systems
38-00-03	Vacuum Blower
38-00-03	Vacuum Blower
38-00-05	International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System
38-00-05A	International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System
38-00-05B	International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System

38-00-01 Potable Water Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
38-00-01A	Potable Water Systems "DISP.APPR.REQ'D"	N	1	0	C (M) Individual components may be inoperative provided: 1. Associated components are deactivated or isolated, and 2. Associated system components are verified not to have leaks. <i>Note: Any portion of system which operates normally may be used.</i>
38-00-01B	Potable Water Systems "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative provided: 1. System is drained, 2. Procedures are used to ensure that system is not serviced, and 3. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
38-00-01A	Logbook	Potable Water System ____ INOP
38-00-01B	Logbook	Potable Water System INOP

(O) PROCEDURES

38-00-01B

38-00-01B	POTABLE WATER SYSTEMS
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None OTHER CORRECTIONS (Manual Weight & Balance Worksheet only) Use OEW correction for "Drain Potable Water System" in ALM – Weight and Balance Section.

1. Drain potable water system ([AMM 12-14-01/801](#)).
2. Install additional placard on the inside of exterior potable water service panel(s) not to service potable water system.

38-00-02 Lavatory Waste Systems

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
38-00-02A	Lavatory Waste Systems "DISP.APPR.REQ'D"	N	-	-	C
					(M) Individual components may be inoperative provided: 1. Associated components are deactivated or isolated, and 2. Associated system components are verified not to have leaks. Note: Any portion of system which operates normally may be used.
38-00-02B	Lavatory Waste Systems "DISP.APPR.REQ'D"	N	-	-	C
					(O) (M) Associated lavatory system(s) may be inoperative provided: 1. Associated components are deactivated or isolated to prevent leaks, 2. Pilot-in-Command will determine if flight duration is acceptable with a FWD lavatory unusable, and 3. Associated lavatory door is secured closed and placarded "UNSERVICEABLE - DO NOT USE". Note: These provisions are not intended to prohibit inspections by crewmembers.

MEL ITEM	TAB LOCATION	PLACARD TEXT
38-00-02A	Logbook	Lavatory Waste System ____ INOP
38-00-02B	Logbook	____ Lavatory INOP

(O) PROCEDURES

38-00-02B

OPERATIONS NOTE

Note: No changes to security procedures or passenger seating are required for an inoperative forward lavatory.

(M) PROCEDURES

38-00-02A

Inoperative individual lavatory waste system components:

1. Deactivate inoperative system component(s) and isolate as necessary per [AMM 38-32-00](#).
2. Ensure system is properly serviced.
3. Check deactivated component(s) for leakage. No leakage is allowed.
4. If a lavatory servicing panel leak is known, suspected, or reported, use MEL item 38-00-02B.

38-00-02B

Inoperative lavatory waste system:

1. Deactivate inoperative system component(s) as necessary per [AMM 38-32-00](#). No leakage is allowed.
2. For known, suspected, or reported leaks at a lavatory servicing panel:

Note: *All lavatories are considered inoperative when the servicing panel is known, suspected, or reported to be leaking.*

A. Associated waste tank must be drained per [AMM 12-17-01](#).

B. Place a strip of Red colored OM2 “UNSERVICEABLE – DO NOT USE” tape (or equivalent*) on the interior of the affected exterior service panel(s).

* An acceptable alternate to the OM2 tape is a section of two inch wide tape with the words “UNSERVICEABLE – DO NOT USE” printed legibly in one inch black letters

3. Lock affected lavatory door closed.
4. Place a strip of Red colored OM2 “UNSERVICEABLE – DO NOT USE” tape (or equivalent*) across the lavatory door, and across the toilet lid to prevent use.

Note: *An acceptable alternate to the OM2 tape is a section of two inch wide tape with the words “UNSERVICEABLE – DO NOT USE” printed legibly in one inch black letters.*

38-00-03 Vacuum Blower

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	C	REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION	N				REMARKS OR EXCEPTIONS
38-00-03	Vacuum Blower “Contact MCC”	N				(O) (M) May be inoperative provided: 1. Vacuum blower is deactivated, and 2. Lavatories are not used on the ground or at flight altitudes below 16,000 feet.

MEL ITEM	TAB LOCATION	PLACARD TEXT
38-00-03	Logbook	____ Lavatory Vacuum Blower INOP

(O) PROCEDURES

Captain to brief Flight Attendants to lock affected lavatories below 16,000 feet and unlock affected lavatories above 16,000 feet.

(M) PROCEDURES

Deactivate the inoperative vacuum blower ([AMM 38-32-00-040-803](#)).

WARNING	DO NOT TOUCH THE CONDUCTORS IN THE P91 AND P92 PANELS. BE CAREFUL WHEN YOU GET ACCESS TO THE CIRCUIT BREAKERS ON THE INNER SIDE OF THE P91 AND P92 PANELS (ROW F). IF IT IS POSSIBLE, REMOVE AIRPLANE ELECTRICAL POWER FIRST. THE P91 AND P92 PANELS HAVE HIGH VOLTAGES AND CURRENTS. ELECTRICAL VOLTAGE AND CURRENT CAN KILL YOU OR CAUSE INJURIES.
WARNING	DO NOT OPEN VACUUM WASTE CONTROL CIRCUIT BREAKER C1388 (C11) (LOCATION C11 OUTSIDE POWER DISTRIBUTION PANEL NUMBER 1, P91). THE VACUUM WASTE CONTROL BREAKER IS REQUIRED FOR TOILET OPERATION ABOVE 16,000 FEET.

1. Gain access to the inside of the P91 Distribution panel by unlocking cam lock fasteners on panel face.
2. Pull and Secure Circuit Breaker (F2) located *INSIDE* the P91 panel labeled VACUUM WASTE BLOWER. (see [Figure 38-1 Vacuum Waste Blower Circuit Breaker](#))

Note: **DO NOT PULL** Circuit Breaker (C11) labeled VACUUM WASTE CONT shown in [Figure 38-2 Vacuum Waste Control Circuit Breaker](#)

3. Close and secure all fasteners on the P91 front panel.

Operational Check Required:

Note: This check is to make sure the Vacuum Waste Blower is in a zero energy state.

1. Flush a toilet in the waste system.
 - A. Make sure that the toilet flushes without suction from the vacuum blower.

 [Link to Learning Video](#)

Figure 38-1: Vacuum Waste Blower Circuit Breaker

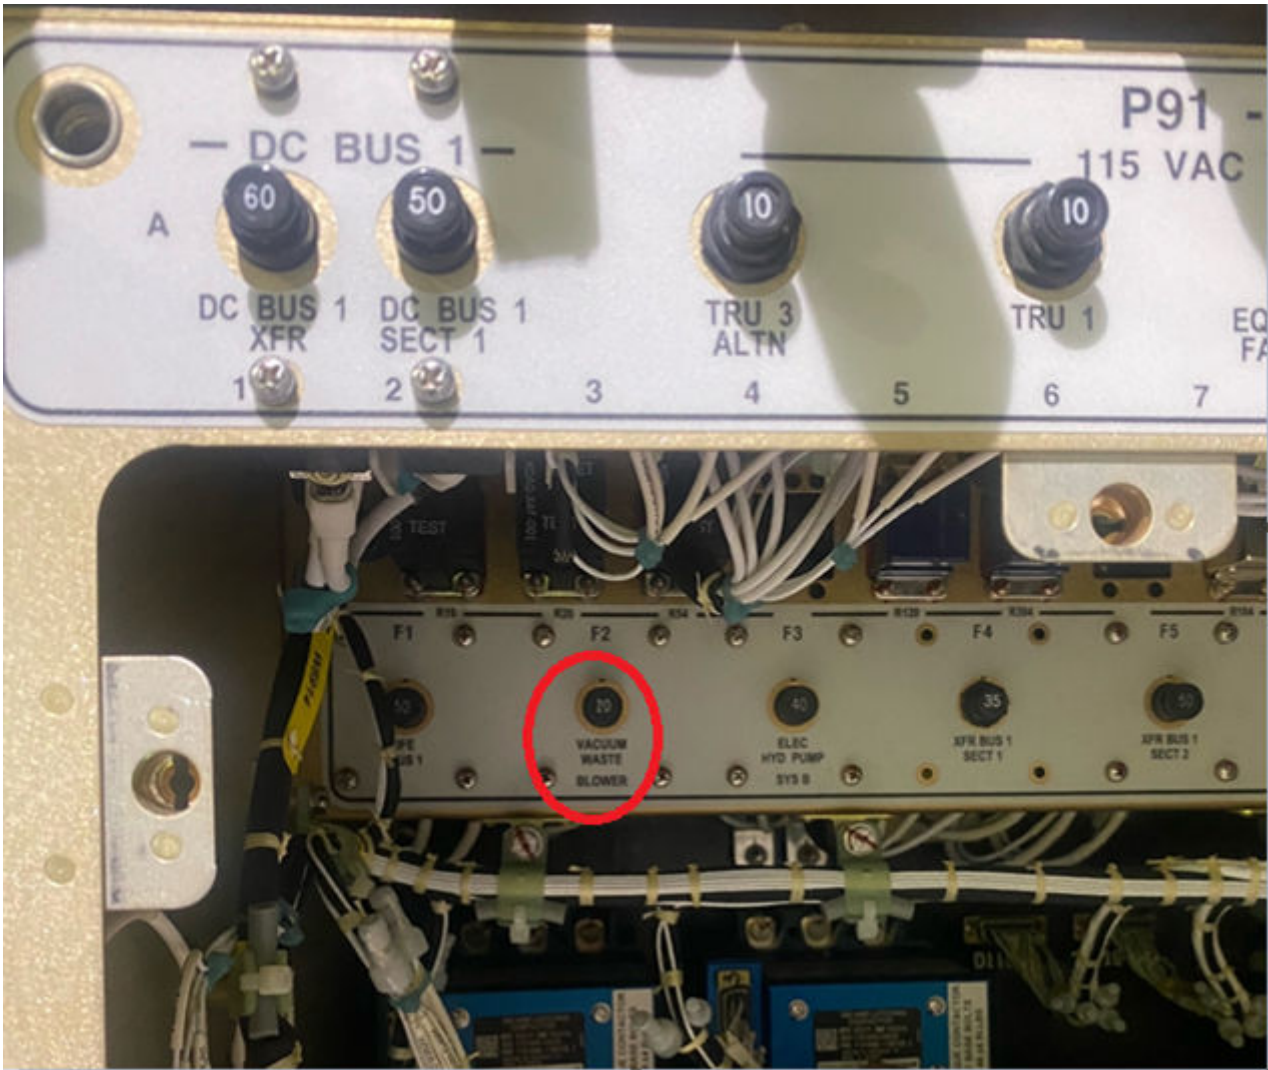


Figure 38-2: Vacuum Waste Control Circuit Breaker



38-00-05 International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
38-00-05A	International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System "Contact MCC"	Y	1	0	D (M) Individual components may be inoperative provided: 1. Associated components are deactivated, and 2. Associated components are verified not to have leaks.
38-00-05B	International Water-Guard Industries Inc. Potable Water Quantity Pre-Select System "Contact MCC"	Y	1	0	D System may be inoperative provided procedures do not require its use. Note: AMM procedures for filling potable water tank are unchanged whether system is operative or inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
38-00-05A	Adjacent to the Pre-Select Water Qty Controller	IWGI POTABLE WATER QUANTITY PRE-SELECT SYSTEM INOP
38-00-05B	Adjacent to the Pre-Select Water Qty Controller	IWGI POTABLE WATER QUANTITY PRE-SELECT SYSTEM INOP

(M) PROCEDURES

38-00-05A

1. Deactivate associated components.

Note: Contact Liaison Engineering for deactivation instructions.

2. Verify associated components are not leaking.

46 Information Systems

Table of Contents

46-00-01	Electronic Flight Bag (EFB) Systems
46-00-01A	Electronic Flight Bag (EFB) Systems – Power Supply / Power Connection
46-00-01B	Electronic Flight Bag (EFB) Systems – Power Supply / Power Connection
46-00-01C	Electronic Flight Bag (EFB) Systems - Mounting Device (Fixed Mount)
46-00-01D	Electronic Flight Bag (EFB) Systems - Mounting Device (Fixed Mount)
46-00-02	Onboard Network System (ONS)
46-00-02	Onboard Network System (ONS)

46-00-01 Electronic Flight Bag (EFB) Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
46-00-01A	Electronic Flight Bag (EFB) Systems – Power Supply / Power Connection	Y	2	0	C (O) May be inoperative provided alternate procedures are used.
46-00-01B	Electronic Flight Bag (EFB) Systems – Power Supply / Power Connection	Y	2	0	D (O) May be inoperative provided procedures do not require its use.
46-00-01C	Electronic Flight Bag (EFB) Systems - Mounting Device (Fixed Mount)	Y	2	0	C (O) (M) May be inoperative provided: 1. Associated EFB and hardware is stowed, secured by an alternate means, or removed from the aircraft, and 2. Alternate procedures are used.
46-00-01D	Electronic Flight Bag (EFB) Systems - Mounting Device (Fixed Mount)	Y	2	0	D (M) May be inoperative provided: 1. Associated EFB and hardware is stowed, secured by an alternate means, or removed from the aircraft, and 2. Procedures do not require its use.

MEL ITEM	TAB LOCATION	PLACARD TEXT
46-00-01A	Adjacent to inoperative power connector(s)	_____ EFB POWER CONNECTOR INOP
46-00-01B	Adjacent to inoperative power connector(s)	_____ EFB POWER CONNECTOR INOP
46-00-01C	Logbook	_____ EFB MOUNT INOP
46-00-01D	Logbook	_____ EFB MOUNT INOP

(O) PROCEDURES

46-00-01A, 46-00-01B

Refer to [FOM Chapter 16 Section 1](#) for EFB battery and backup battery requirements.

46-00-01C

Utilize removable PED Mount

(M) PROCEDURES

46-00-01C

1. Ensure that inoperative mount(s) is secured or removed from the aircraft.
2. Install removable PED mount on affected side.

46-00-01D

1. Ensure that inoperative mount(s) is secured or removed from the aircraft.

46-00-02 Onboard Network System (ONS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
46-00-02	Onboard Network System (ONS) (B737-900ER)	Y	1	0	D	May be inoperative provided procedures do not require its use.

MEL ITEM	TAB LOCATION	PLACARD TEXT
46-00-02	Logbook	_____ Onboard Network System INOP

47 Inert Gas System

Table of Contents

47-00-01	Nitrogen Generation System (NGS)
47-00-01A	Nitrogen Generation System (NGS)
47-00-01B	Nitrogen Generation Degraded

47-00-01 Nitrogen Generation System (NGS)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
47-00-01A	Nitrogen Generation System (NGS)	N	1	0	A (M) May be inoperative provided: - NGS shutoff valve is deactivated closed, and - Repairs are made within ten flight days.
47-00-01B	Nitrogen Generation Degraded	Y	1	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
47-00-01A	Aircraft Logbook	Nitrogen Generation System INOP
47-00-01B	Aircraft Logbook	Nitrogen Generation System Degraded

(M) PROCEDURES

47-00-01A

For either the amber operability indicator light or for no operability indicator lights illuminated, deactivate the NGS shutoff valve in the closed position ([AMM 47-00-00/901](#)).

49 Airborne Auxiliary Power (APU)

Table of Contents

49-00-01	Auxiliary Power Unit
	AUXILIARY POWER UNIT (APU)
49-00-01A	Auxiliary Power Unit
49-00-01B	APU System – Cold Soak Not Verified
49-00-01C	APU System – Cold Soak Not Verified
49-00-02	APU Annunciator LOW OIL PRESSURE and OVER SPEED Lights
49-00-02	APU Annunciator LOW OIL PRESSURE and OVER SPEED Lights
49-00-04	APU Annunciator MAINT Light
49-00-04A	APU Annunciator MAINT Light
49-00-04B	APU Annunciator MAINT Light
49-00-05	APU EGT Indicator
49-00-05	APU EGT Indicator
49-00-06	APU Inlet Door
49-00-06A	APU Inlet Door
49-00-06B	APU Inlet Door
49-00-07	APU Bleed Air Valve
49-00-07A	APU Bleed Air Valve
49-00-07B	APU Bleed Air Valve
49-00-09	APU Surge Control Valve
49-00-09A	APU Surge Control Valve
49-00-09B	APU Surge Control Valve
49-00-12	APU Annunciator FAULT Light
49-00-12	APU Annunciator FAULT Light
49-00-15	Start Power Unit (SPU)
49-00-15A	Start Power Unit (SPU)
49-00-15B	AC / DC Start Systems
49-00-16	Start Converter Unit
49-00-16A	Start Converter Unit
49-00-16B	Voltage Regulation Function

49-00-01 Auxiliary Power Unit

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
AUXILIARY POWER UNIT (APU)					
49-00-01A	Auxiliary Power Unit "DISP.APPR.REQ'D"	Y	1	0	C (O) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Procedures do not require its use, and 2. Visual confirmation is made that no damage has occurred to APU exhaust area. <i>Note: Use of coastal routing is recommended for operations from Alaska "to" 48 contiguous states.</i> Theater Restrictions May Apply
49-00-01B	APU System – Cold Soak Not Verified "DISP.APPR.REQ'D" Administrative Control Item	Y	1	1	A (O) Inflight verification of cold soak start capability has not been accomplished. Extended Operations (ETOPS) Not Authorized: 1. APU is shut down before takeoff and remains OFF until cold soak start is attempted, 2. Cold soak inflight start of APU may be accomplished after at least two flight hours at or above FL270, 3. In-flight start data will be entered into the aircraft log book, and 4. Verification is accomplished within 6 flight cycles.
49-00-01C	APU System – Cold Soak Not Verified "DISP.APPR.REQ'D" Administrative Control Item	N	1	1	A (O) (M) Inflight verification of cold soak start capability has not been accomplished. Extended Operations (ETOPS) Authorized: 1. APU oil quantity is serviced to full, 2. APU is started on the ground, 3. APU remains operating throughout the ETOPS portion of the flight, 4. Authorization limited to one flight, and 5. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-01A	APU Start Switch	APU INOP
49-00-01B	APU Start Switch	APU System - Cold Soak Not Verified
49-00-01C	APU Start Switch	APU System - Cold Soak Not Verified

(O) PROCEDURES

49-00-01A

Communication between the Captain and ground personnel is required prior to start. Refer to the [B737 Operations Manual Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop, APU Bleed Inop, or APU Generator System Inop](#).

1. External electrical and an alternate air source is required for normal starting.
2. Perform a visual inspection, from the ground, of the tailcone area and adjacent control surfaces. Inspection is to confirm that there is no evidence of heat damage or delamination evident from blistering paint and/or discoloration typically caused by a APU tailpipe fire or torching start.

49-00-01B

1. APU is shut down before takeoff.
2. The start attempt must be initiated at the top of descent or at such time that will ensure a 2-hour cold soak at FL270 or above. Refer to [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop or APU Generator System Inop](#).
3. In-flight start data will be entered into the Aircraft Log Book by the flight crew.

49-00-01C

1. Start APU prior to pushback.
2. The APU must remain operating throughout the ETOPS portion of the flight.

Note: APU fuel consumption is approximately 270 lbs per hour while airborne.

49-00-01C	APU SYSTEM – COLD SOAK NOT VERIFIED
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	Increase BLOCK FUEL by 270 lbs. per hour for APU usage.
NOTES	None
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF None LANDING None

(M) PROCEDURES

49-00-01C

Service APU oil to full.

49-00-02 APU Annunciator LOW OIL PRESSURE and OVER SPEED Lights

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
49-00-02	APU Annunciator LOW OIL PRESSURE and OVER SPEED Lights	Y	2	0	C	May be inoperative provided APU Auto Shutdown System operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-02	OVER SPEED Light(s)	OVER SPEED Light(s) INOP

Note: APU Auto Shutdown may be checked by starting and shutting down the APU normally.

49-00-04 APU Annunciator MAINT Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
49-00-04A	APU Annunciator MAINT Light	N	1	0	C	(M) May be inoperative and APU used provided APU oil quantity is checked ONCE EACH FLIGHT DAY (Log Book Entry Required) Repetitive Check Required (Yellow Placard)
49-00-04B	APU Annunciator MAINT Light “DISP.APPR.REQ'D”	Y	1	0	C	(O) May be inoperative provided APU is not used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-04A	MAINT Light	APU MAINT Light INOP
49-00-04B	MAINT Light	APU MAINT Light INOP

(O) PROCEDURES

49-00-04B

Refer to [B737 Operations Manual Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop, APU Bleed Inop, or APU Generator System Inop.](#)

(M) PROCEDURES

49-00-04A

ONCE EACH FLIGHT DAY, verify APU oil level is satisfactory for dispatch ([AMM 12-13-31/301](#)).

49-00-05 APU EGT Indicator

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION	Y		0	C	REMARKS OR EXCEPTIONS
49-00-05	APU EGT Indicator					May be inoperative.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-05	APU EGT Indicator	APU EGT Indicator INOP

49-00-06 APU Inlet Door

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
49-00-06A	APU Inlet Door "DISP.APPR.REQ'D"	N	1	0	C (O) (M) May be inoperative open provided performance corrections are applied.
49-00-06B	APU Inlet Door "DISP.APPR.REQ'D"	Y	1	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative in any other position if APU is not used and performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-06A	APU Start Switch	APU Inlet Door INOP OPEN
49-00-06B	APU Start Switch	APU Inlet Door INOP

(O) PROCEDURES

Note: *If the inlet door is inoperative in the CLOSED position then the performance penalties do not apply. If re-positioning of the inlet door is necessary to achieve the closed position, Maintenance is Required and Flight Crew May NOT Placard.*

49-00-06A

- Starting the APU requires Maintenance action.
- Do not turn the APU off unless the APU is no longer required or Maintenance is available.
- The following penalties are used to account for the increased drag resulting from the APU inlet door being inoperative in the open position (either fully or partially open) and APU not running.

49-00-06A	APU INLET DOOR
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 830 lbs. Increase BLOCK FUEL by 2.8%.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 410 lbs. Reduce T/O CLIMB LIMIT by 410 lbs. LANDING Reduce LANDING CLIMB LIMIT WT by 410 lbs.

49-00-06A	APU INLET DOOR
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 960 lbs. Increase BLOCK FUEL by 2.8%.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 500 lbs. Reduce T/O CLIMB LIMIT by 500 lbs. LANDING Reduce LANDING CLIMB LIMIT WT by 500 lbs.

49-00-06B

1. Dispatch is not allowed if the APU is required by other procedures.
2. APU must not be started.

49-00-06B	APU INLET DOOR – PARTIALLY OPEN
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 830 lbs. Increase BLOCK FUEL by 2.8%.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 410 lbs. Reduce T/O CLIMB LIMIT by 410 lbs. LANDING Reduce LANDING CLIMB LIMIT WT by 410 lbs.

49-00-06B	APU INLET DOOR – PARTIALLY OPEN
EFFECTIVITY	-900ER
FLIGHT PLANNING REQUIREMENTS	Reduce ENROUTE LIMIT WT by 960 lbs. Increase BLOCK FUEL by 2.8%.
NOTES	Make a notation on the Flight Plan when Enroute Climb is limiting.
AWABS	Performance corrections have been applied.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 500 lbs. Reduce T/O CLIMB LIMIT by 500 lbs. LANDING Reduce LANDING CLIMB LIMIT WT by 500 lbs.

(M) PROCEDURES

49-00-06A

Note: With the APU Inlet Door inoperative in the OPEN position the APU may be used.

1. APU switch is OFF.
2. Pull and secure the AUX POWER UNIT CONT and APU FIRE SW POWER circuit breakers.

CONTINUED ON NEXT PAGE

3. Open the stabilizer trim access door.
4. Position the air inlet door in the fully open position.
5. Close the stabilizer trim access door.
6. Close the AUX POWER UNIT CONT and APU FIRE SW POWER circuit breakers.

49-00-06B

INLET DOOR CLOSED

Note: If the inlet door is inoperative in the CLOSED position then the performance penalties do not apply. If re-positioning of the inlet door is necessary to achieve the closed position, Maintenance is Required and Flight Crew May NOT Placard.


1. Make sure the APU switch is off.
2. Pull and secure the AUX POWER UNIT CONT, AUX POWER UNIT SCU FAN POWER, APU FIRE SW POWER, and APU START CONV circuit breakers.
3. Open the stabilizer trim access door.
4. Put the air inlet door in the closed position.
5. Close the stabilizer trim access door.

INLET DOOR OTHER THAN CLOSED POSITION

Note: When the inlet door is inoperative in any position other than closed, performance penalties apply.

1. Make sure APU switch is off
2. Pull and secure the AUX POWER UNIT CONT, AUX POWER UNIT SCU FAN POWER, APU FIRE SW POWER, and APU START CONV circuit breakers.

Figure 49-1: APU AIR INLET DOOR ACTUATOR INSTALLATION

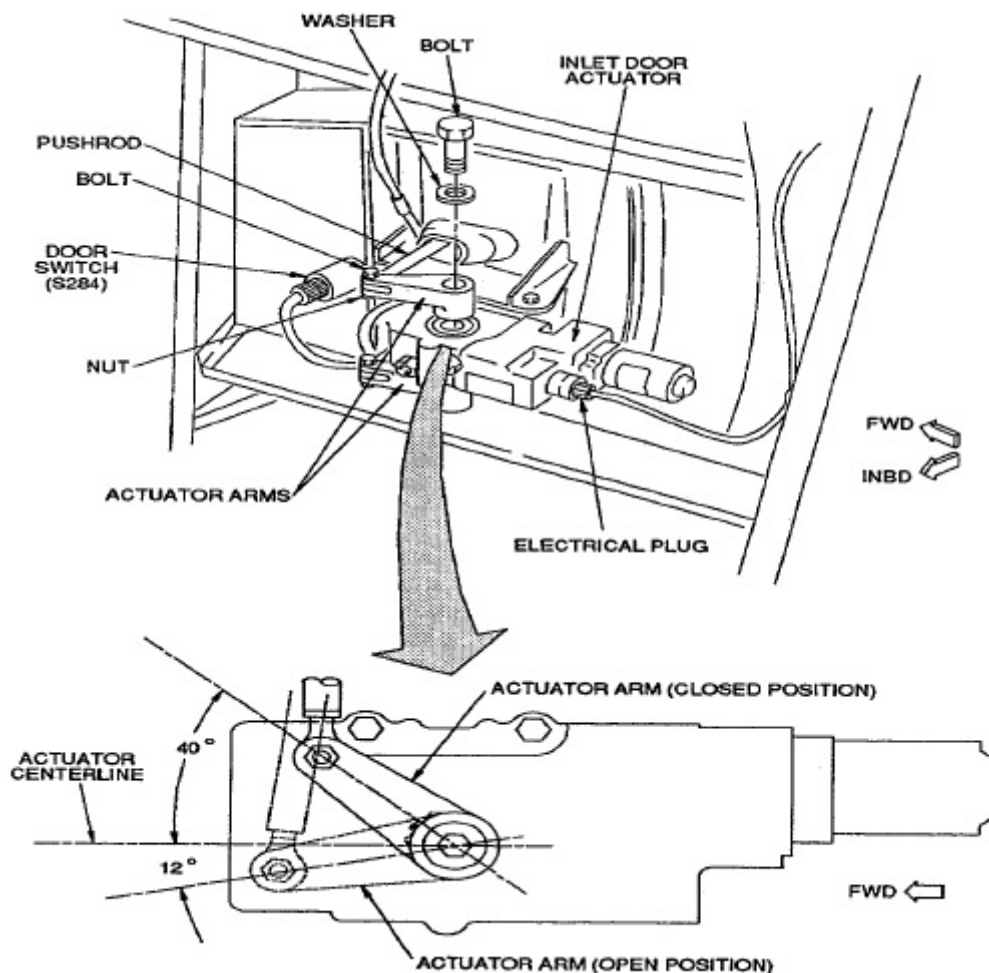

49-00-07 APU Bleed Air Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
49-00-07A	APU Bleed Air Valve “DISP.APPR.REQ'D”	N	1	0	C (M) May be inoperative closed. Note: Airstart cart will be required for engine start. Note: APU may be used to provide electrical power.
49-00-07B	APU Bleed Air Valve “DISP.APPR.REQ'D”	Y	1	0	C (O) Except for Extended Operations (ETOPS), may be inoperative provided: 1. APU bleed air check valve operates normally, and 2. APU is not operated. Note: Airstart cart will be required for engine start.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-07A	APU Bleed Switch	APU Bleed Air System INOP Closed
49-00-07B	1. APU Bleed Switch 2. APU Start Switch	1. APU Bleed Air System INOP 2. Do NOT Use APU

(O) PROCEDURES

49-00-07B

Note: With the APU Bleed Valve failed OPEN, the DUAL BLEED light will be illuminated with the Engine 1 Bleed Air Switch **ON** or the Engine 2 Bleed Air Switch **ON** with the Isolation Valve Switch in the **OPEN** position. The Master Caution light will also be illuminated. This is a normal indication.

- Dispatch is not allowed if the APU is required by other procedures.
- APU must not be started.
- Refer to B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop, APU Bleed Inop, or APU Generator System Inop](#).

(M) PROCEDURES

49-00-07A

Determine the position of APU bleed air valve by using either the Input Monitoring page of APU BITE TEST or the following procedure ([AMM 49-00-00/901](#)):

- Make sure the APU BLEED switch on the P-5 overhead panel is OFF.
- Gain access to APU bleed air valve and look at the two indications on the position switch.
 - If the indication on the bleed air valve shows OPEN, APU must be considered inoperative.
 - If the indication on the bleed air valve shows CLOSED, APU may be used for electrical power only.
- Close the APU cowl door.

49-00-09 APU Surge Control Valve

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			1	0	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	N			C	REMARKS OR EXCEPTIONS
49-00-09A	APU Surge Control Valve “DISP.APPR.REQ'D”	N			C	(O) May be inoperative in open position provided APU bleed air is not used. <i>Note: APU may be used to provide electrical power.</i>
49-00-09B	APU Surge Control Valve “DISP.APPR.REQ'D”	N	1	0	C	(O) Except for Extended Operations (ETOPS), may be inoperative in closed position provided APU is not used.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-09A	APU Bleed Switch	APU Surge Bleed Valve INOP Open
49-00-09B	APU Bleed Switch	APU Surge Bleed Valve INOP Closed

(O) PROCEDURES

49-00-09A

Refer to B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop, APU Bleed Inop, or APU Generator System Inop.](#)

49-00-09B

- Dispatch is not allowed if the APU is required by other procedures.
- APU must not be started.
- Refer to B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop, APU Bleed Inop, or APU Generator System Inop.](#)

49-00-12 APU Annunciator FAULT Light

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
49-00-12	APU Annunciator FAULT Light	Y	1	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-12	FAULT Light	APU Annunciator FAULT Light INOP

49-00-15 Start Power Unit (SPU)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
49-00-15A	Start Power Unit (SPU) “DISP.APPR.REQ’D”	N	1	0	C	(O) (M) Except for Extended Operations (ETOPS), may be inoperative provided procedures do not require use of APU.
49-00-15B	AC / DC Start Systems	Y	2	1	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-15A	APU Switch	APU INOP
49-00-15B	APU Switch	APU AC / DC Start INOP

(O) PROCEDURES

49-00-15A

Refer to B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop or APU Generator System Inop](#).

(M) PROCEDURES

49-00-15A

- Position the APU switch (P5 Panel) OFF.
- Pull and secure the following circuit breakers:
 - P6-4 panel AUX POWER UNIT CONT
 - P6-4 panel AUX POWER UNIT SCU FAN POWER
 - P6-2 panel APU FIRE SW POWER
 - P91 panel APU START CONV
- Disconnect, cap and stow the battery type connector to the SPU, located on the E2-2 shelf in the EE bay.

49-00-16 Start Converter Unit

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
49-00-16A	Start Converter Unit “DISP.APPR.REQ’D”	N	1	0	C	(O) (M) Except for Extended Operations (ETOPS), May be inoperative provided procedures do not require use of APU.
49-00-16B	Voltage Regulation Function “DISP.APPR.REQ’D”	Y	1	0	C	(O) Except for Extended Operations (ETOPS), may be inoperative provided APU generator is not used for electrical power. Note: APU may be used as a pneumatic source.

MEL ITEM	TAB LOCATION	PLACARD TEXT
49-00-16A	APU Switch	APU Start Converter Unit INOP
49-00-16B	APU Generator Switch	1. APU Voltage Regulation Function INOP 2. Do Not Use APU Generator

(O) PROCEDURES

49-00-16A, 49-00-16B

Refer to B737 Operations Manual [Volume 1, Supplementary Procedures, Engines, APU, Engine Start with APU Inop or APU Generator System Inop](#).

(M) PROCEDURES

49-00-16A

1. Position the APU switch (P5 panel) OFF.
2. Pull and secure the following circuit breakers:
 - A. P6-4 panel AUX POWER UNIT CONT
 - B. P6-4 panel AUX POWER UNIT SCU FAN POWER
 - C. P6-2 panel APU FIRE SW POWER
 - D. P91 panel APU START CONV

52 Doors

Table of Contents

52-00-03	Door Warning Light System
	DOOR WARNING LIGHT SYSTEM
52-00-03A	Entry / Service / Cargo / Equip / Mid-Exit
52-00-03B	Overwing
52-00-05	Left Main Cabin Door Pressure Stop Fittings
	LEFT MAIN CABIN DOOR PRESSURE STOP FITTINGS
52-00-05A	Forward Entry Door
52-00-05B	Aft Entry Door
52-00-06	Lower Cargo Doors Pressure Stop Fittings
52-00-06A	Lower Cargo Doors Pressure Stop Fittings
52-00-06B	Lower Cargo Doors Pressure Stop Fittings
52-00-06C	Lower Cargo Doors Pressure Stop Fittings
52-00-07	Entry / Service Door Hold-Open Latch Release Lever
52-00-07	Entry / Service Door Hold-Open Latch Release Lever
52-00-09	Lower Cargo Doors Door Balance Mechanism
52-00-09	Lower Cargo Doors Door Balance Mechanism
52-00-14	Lower Cargo Doors Hold Open Mechanism / Device
52-00-14A	Lower Cargo Doors Hold Open Mechanism/Device
52-00-14B	Lower Cargo Doors Hold Open Mechanism/Device
52-00-15	Overwing Exit Flight Lock System
52-00-15	Overwing Exit Flight Lock System
52-00-17	Enhanced Flight Deck Security Door Automatic Locking System
	ENHANCED FLIGHT DECK SECURITY DOOR AUTOMATIC LOCKING SYSTEM
52-00-17A	Flight Deck Security Door Automatic Locking System
52-00-17B	Flight Deck Access Panel System (Keypad, Door Chime)
52-00-17C	LEDs
52-00-17D	Flight Deck Door LOCK FAIL Light
52-00-17E	Flight Deck Door AUTO UNLK Light
52-00-17F	Flight Deck Door Lock Control Selector
52-00-18	Flight Deck Security Door Dead Bolt
52-00-18	Flight Deck Security Door Dead Bolt
52-00-20	Flight Deck Door Panel Pressure Relief Latches
52-00-20	Flight Deck Door Panel Pressure Relief Latches
52-00-22	Flight Deck Door Hold Open Device (e.g. Door Stop, Foot Plunger, etc.)
52-00-22	Flight Deck Door Hold Open Device (e.g. Door Stop, Foot Plunger, etc.)
52-00-25	Cargo Door Exterior Handle Recess/Hinge Spring Assemblies
52-00-25A	Cargo Door Exterior Handle Recess
52-00-25B	Cargo Door Exterior Handle Hinge Spring Assemblies

52-00-03 Door Warning Light System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
DOOR WARNING LIGHT SYSTEM					
52-00-03A	Entry / Service / Cargo / Equip / Mid-Exit	Y	-	0	C
(M) May be inoperative provided door(s) are verified closed and locked PRIOR TO EACH DEPARTURE. Note: Cargo door warning light system may disable the associated cargo compartment light system. Refer to MEL 33-00-04A . Repetitive Check Required (Yellow Placard)					
52-00-03B	Overwing	N	-	0	C
(M) May be inoperative provided PRIOR TO EACH DEPARTURE (Log Book Entry Required): 1. Associated door is verified closed and latched, and 2. Associated flight lock is verified to operate normally. Repetitive Check Required (Yellow Placard)					

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-03A	Affected Door Warning Light(s)	____ Door Warning Light INOP
52-00-03B	Overwing Door Warning Light	____ Overwing Door Warning Light INOP

MAINTENANCE AND OPERATIONS NOTES:

- Note:** The affected door warning light system remains energized and may illuminate in conjunction with an associated master caution.
- Note:** The EQUIP Light is powered by the Forward Compartment and Electrical / Electronics Door Switches. Ensure both doors are closed.
- Note:** If two or more entry / service door warning lights are inoperative due to failed door sensors, the overwing exit flight lock system will not function properly. Refer to [MEL item 52-00-15](#).
- Note:** OUT/OFF/ON/IN Times may not automatically post. Station Time Slip may have to be manually completed.

(M) PROCEDURES

52-00-03A

PRIOR TO EACH DEPARTURE

1. Do a visual inspection of the applicable door to make sure that the door is closed and locked.
 - A. Open and close the applicable door.
 - i. Make sure that the door operates correctly.
 - B. Make sure that the door is closed and latched.
 - i. Make sure that the outside skin of the door is flush with the fuselage skin.
 - ii. Make sure the that the vent panel(s) are closed and faired.
 - iii. Make sure that the liner of the door is faired with the passenger cabin wall.
 - iv. Make sure that the inside door handle is rotated to the latched position.

	737 Minimum Equipment List 52 Doors	Revision: 50.0.1 Date: 24-Apr-2026
---	--	---

52-00-03B

PRIOR TO EACH DEPARTURE

1. Check PSEU bite and verify that there are no faults associated with the overwing exit doors.
2. If Flight Lock Failed Open faults are present, dispatch using [MEL 52-00-15](#).

52-00-05 Left Main Cabin Door Pressure Stop Fittings

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
LEFT MAIN CABIN DOOR PRESSURE STOP FITTINGS					
52-00-05A	Forward Entry Door "DISP.APPR.REQ'D"	N	-	-	B (O) (M) One per door may be broken or missing provided: 1. There are no visible defects on other fittings for associated door, 2. Pressure differential does not exceed 6.0 psi, 3. Digital cabin pressure control system AUTO or ALTN control mode operates normally, 4. Alternate procedures are used, and 5. Limit altitude to FL270.
52-00-05B	Aft Entry Door "DISP.APPR.REQ'D"	N	-	-	B (O) (M) One per door may be broken or missing provided: 1. There are no visible defects on other fittings for associated door, 2. Pressure differential does not exceed 3.4 psi, 3. Digital cabin pressure control system AUTO or ALTN control mode operates normally, 4. Alternate procedures are used, and 5. Limit altitude to FL170.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-05A	Cabin Pressure Control Panel	Forward Entry Door Pressure Fitting(s) Broken / Missing
52-00-05B	Cabin Pressure Control Panel	Aft Entry Door Pressure Fitting(s) Broken / Missing

Note: A door pressure stop consists of two mating stop fittings, one being attached to the door and the other attached to the fuselage.


Note: Either or both stop fittings may be broken or missing at a single door pressure stop location.

(O) PROCEDURES

52-00-05A

- Enroute altitude should be limited to 27,000 feet so that a cabin altitude of 8,000 feet can be maintained.
- Pressure differential must not exceed 6.0 PSI. Monitor differential pressure indicator during climb.
- Digital pressurization system must be operated in the AUTO or ALT mode.
- To ensure that the correct pressure differential is not exceeded, select cabin altitude in accordance with the appropriate schedule shown below.

Figure 52-1: DIFFERENTIAL PRESSURE SCHEDULES

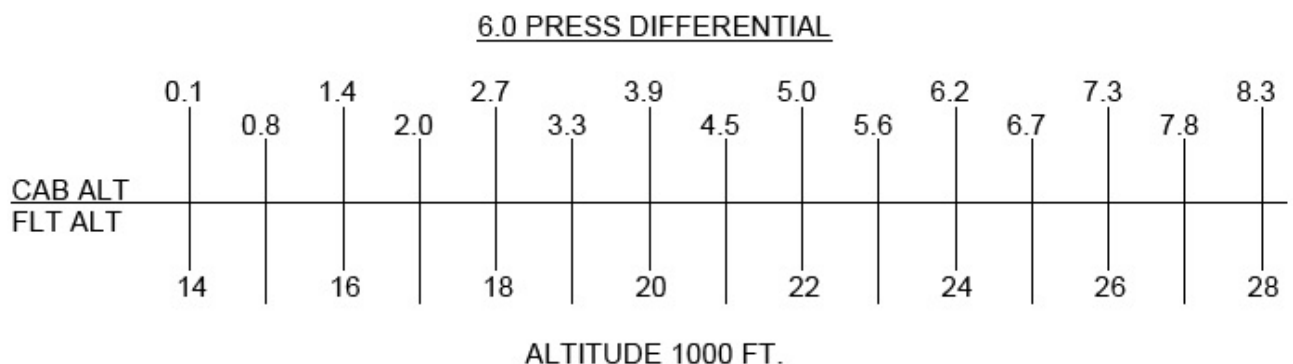


CONTINUED ON NEXT PAGE

52-00-05B

1. Enroute altitude should be limited to 17,000 feet so that a cabin altitude of 8,000 feet can be maintained.
2. Pressure differential must not exceed 3.4 PSI. Monitor differential pressure indicator during climb.
3. Digital pressurization system must be operated in the AUTO or ALT mode.
4. To ensure that the correct pressure differential is not exceeded, select cabin altitude in accordance with the appropriate schedule shown below.

Figure 52-2: DIFFERENTIAL PRESSURE SCHEDULES

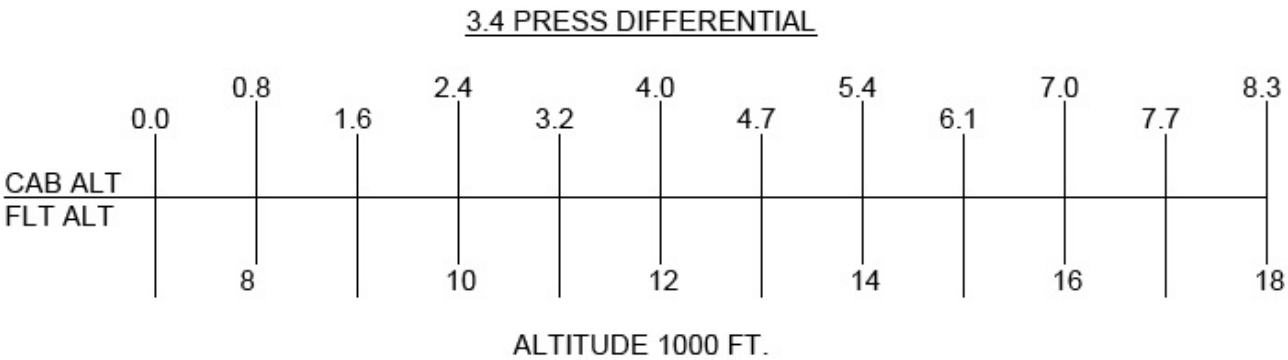

(M) PROCEDURES

52-00-05A, 52-00-05B

Visually inspect remaining fittings for possible defects on affected door(s), body frames and sills.

52-00-06 Lower Cargo Doors Pressure Stop Fittings

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
52-00-06A	Lower Cargo Doors Pressure Stop Fittings "Contact MCC"	N	24	22	A (M) Any one may be broken or missing on each door or frame provided: 1. No defects are visible on other fittings for associated door, 2. Cabin pressure AUTO mode operates normally, 3. Adjacent stop fittings are inspected on initial deferral and PRIOR TO 25 FLIGHTS (Log book entry required) (Create separate MON deferral to track 25 cycle re-inspect), and 4. Not more than 50 flights are made before completion of repairs or replacements (to be tracked on MEL log). Repetitive Check Required (Yellow Placard)
52-00-06B	Lower Cargo Doors Pressure Stop Fittings (3701-3771, 3774-3777, 3801-3930) "DISP.APPR.REQ'D"	N	24	20	C (O) (M) Two may be broken or missing on each door or frame provided: 1. Airplane is operated in an unpressurized configuration at or below 10,000 feet MSL, and 2. Extended overwater flight is prohibited.
52-00-06C	Lower Cargo Doors Pressure Stop Fittings (3772, 3773) "DISP.APPR.REQ'D"	N	24	20	C (O) (M) Two may be broken or missing on each door or frame provided: 1. Flight is conducted in an unpressurised configuration, 2. Procedures are used to ensure lower forward cargo compartment remains empty, or is verified to contain only empty cargo handling equipment, ballast (ballast may be loaded in ULDs), and/or Fly Away Kits (see MEL Instructions), and 3. Extended overwater flight is prohibited.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-06A	Cabin Pressure Control Panel	____ Cargo Door Pressure Stop Fitting(s) INOP
52-00-06B	Cabin Pressure Control Panel	____ Cargo Door Pressure Stop Fitting(s) INOP
52-00-06C	Cabin Pressure Control Panel	____ Cargo Door Pressure Stop Fitting(s) INOP

Note: A door pressure stop consists of two mating stop fittings, one being attached to the door and the other attached to the fuselage. The number installed shown above is the number of stop locations.

Note: For pressurized flight, either or both stop fittings may be broken or missing at a single door pressure stop location.

Note: For unpressurized flight, either or both stop fittings may be broken or missing at two door pressure stop locations.

(O) PROCEDURES

52-00-06B, 52-00-06C

- Limit altitude to 10,000 feet MSL for passenger flights.
- Non-passenger flights above 10,000 feet MSL require flight crew to be on oxygen.
- Extended overwater flight is prohibited.
- Maintain main outflow valve open.

5. To avoid passenger discomfort, limit climb and descent rates to 500 FPM.
6. The following steps can be taken to improve both passenger cabin and crew compartment temperatures:
 - A. If possible, pre-condition the cabin to a low temperature prior to dispatch. A low initial cabin temperature will result in a lower peak temperature.
 - B. Maintain the highest allowable flight altitude.
 - C. Minimize cabin heat load by pulling the shades down and turning off unnecessary lights.
 - D. Recirculation Fan(s) AUTO.
 - E. Because of reduced ventilation rate (with both packs inoperative), consideration should be given to flight duration and passenger load so that excessive cabin temperatures may be avoided. Estimated stabilized temperatures at the end of 30 minutes flight are as follows:
Limit number of passengers to 45

TAT	NO. OF PASS	PASS. CABIN TEMPERATURE		CREW CABIN TEMPERATURE	
°C		°F	°C	°F	°C
-1	0	50	10	70	21
-1	45	70	21	75	24
10	0	70	21	90	32
10	45	80	27	95	35
21	0	90	32	110	43
21	45	95	35	110	43
32	0				
32	45				

7. To maintain isolated bleed sources, position the isolation valve switch to CLOSE.

(M) PROCEDURES

52-00-06A

On initial deferral and PRIOR TO 25 FLIGHTS:



Note: On initial deferral, a separate MON deferral must be created to track 25 cycle re-inspect. The MON log can be closed after completion of re-inspection.

1. Comply with [AMM Task 52-00-00-210-807](#).

52-00-06B, 52-00-06C

1. Visually inspect remaining fittings for possible defects on affected door, body frames and sills.
2. Configure airplane for unpressurized flight by using the manual mode of the Cabin Pressure Control System to position the outflow valve to the full open position. Hold outflow valve toggle switch in the OPEN position for 30 seconds.

Figure 52-3: LOWER CARGO DOOR PRESSURE STOP FITTINGS

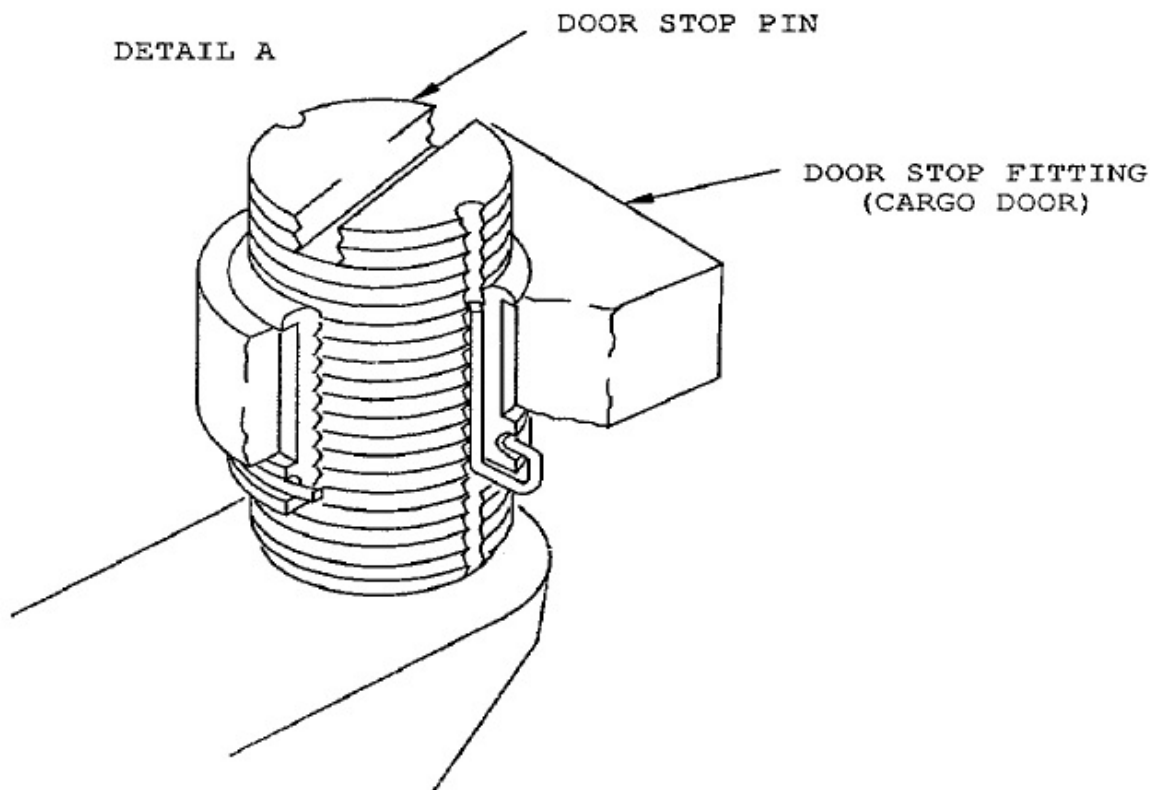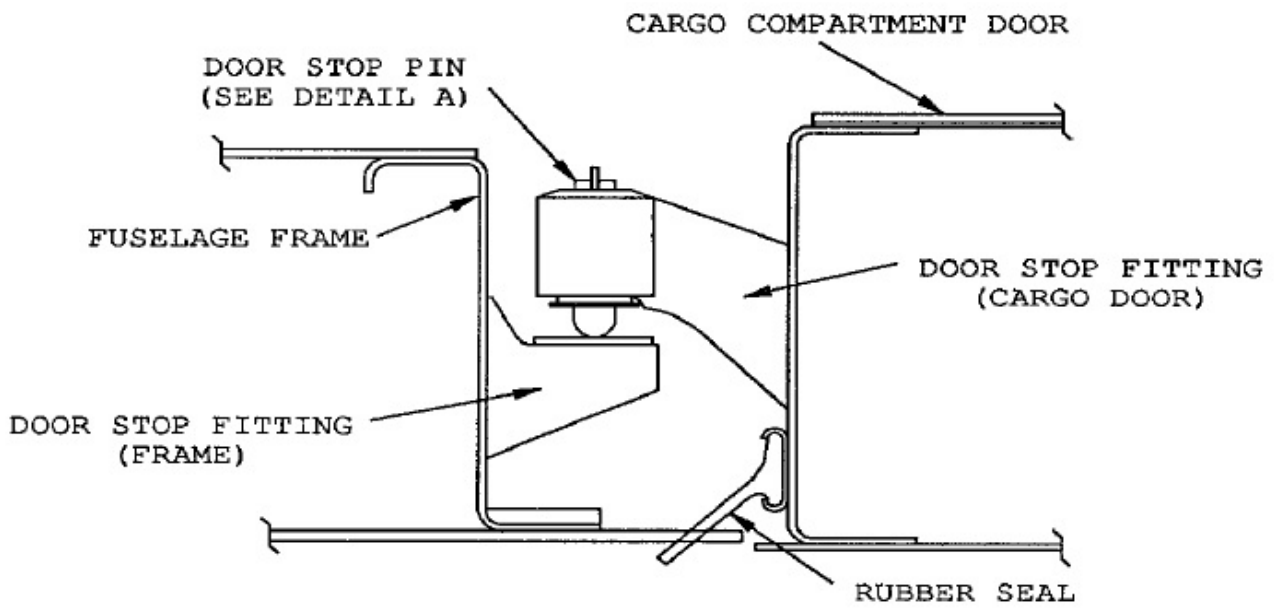

52-00-07 Entry / Service Door Hold-Open Latch Release Lever

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
52-00-07	Entry / Service Door Hold-Open Latch Release Lever	Y	4	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-07	Door Warning Light Panel	____ Door Hold-Open Latch Release Lever INOP

52-00-09 Lower Cargo Doors Door Balance Mechanism

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
52-00-09	Lower Cargo Doors Door Balance Mechanism	N	2	0	C	(M) May be inoperative provided a safety hold open device is used when door is in open position.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-09	Logbook	____ Cargo Door Balance Mechanism INOP

(M) PROCEDURES

Refer to the Remarks or Exceptions column.

52-00-14 Lower Cargo Doors Hold Open Mechanism / Device

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
52-00-14A	Lower Cargo Doors Hold Open Mechanism/Device	N	2	0	C (M) May be inoperative provided door balance mechanism operates normally.
52-00-14B	Lower Cargo Doors Hold Open Mechanism/Device “DISP.APPR.REQ'D”	N	2	0	C (M) May be inoperative provided cargo compartment remains empty.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-14A	Logbook	____ Cargo Door Hold Open Mechanism INOP
52-00-14B	Logbook	____ Cargo Door Hold Open Mechanism INOP

(M) PROCEDURES

52-00-14A

Use a safety hold open device when associated door is in the open position.

52-00-14B

Use a safety hold open device when associated door is in the open position for inspection to ensure cargo compartment is empty.

52-00-15 Overwing Exit Flight Lock System

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS
52-00-15	Overwing Exit Flight Lock System	N	- 0	C
				(O) (M) May be inoperative provided: 1. For inoperative flight lock(s) inputs to associated flight deck indications are deactivated, 2. Each affected exit is verified to be capable of being unlatched and opened PRIOR TO EACH DEPARTURE (Log Book Entry Required), and 3. A Delta employee is designated to remain seated in passenger seat nearest affected exit when cabin differential pressure is less than 4.0 psi. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-15	Door Warning Light Panel	Overwing Exit Flight Lock System INOP

(O) PROCEDURES

1. When cabin differential pressure is less than 4.0 psi, each affected door must be monitored by a Delta Employee to ensure door handle is not operated by passengers.
2. Flight crew must inform the Delta Employee, who will be seated next to the affected door, when monitoring is required and how to monitor the door.

(M) PROCEDURES

Note: After performing the following maintenance procedure, the PSEU may indicate nuisance non-dispatchable flight lock switch fault(s) after using the airplane battery to power up the airplane. Fault codes 52-72106(L Fwd), 52-72107(L), 52-72108(R), 52-72109(R Fwd) may appear depending on which door was deferred. In this instance, fault(s) can be cleared by performing [AMM subtask 32-09-00-860-018](#).

1. Perform [AMM Task 52-00-00-210-831](#) Preparation – Emergency Exit (Overwing Exit) Flight Lock System Inoperative for affected Overwing Exit.
2. PRIOR TO EACH DEPARTURE perform [AMM Task 52-22-00-710-801](#) on affected Overwing Exit.

52-00-17 Enhanced Flight Deck Security Door Automatic Locking System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH			
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY			
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS	
ENHANCED FLIGHT DECK SECURITY DOOR AUTOMATIC LOCKING SYSTEM							
52-00-17A	Flight Deck Security Door Automatic Locking System	Y	1	0	C	(O) (M) May be inoperative provided: 1. Automatic locking system is deactivated, 2. Door dead bolt operates normally and is used to lock door, and 3. Alternate procedures are used for locking and unlocking door using the dead bolt.	
52-00-17B	Flight Deck Access Panel System (Keypad, Door Chime)	N	1	0	C	(O) (M) May be inoperative provided: 1. Keypad is deactivated, and 2. Alternate procedures are used.	
52-00-17C	LEDs	Y	3	0	C	(O) May be inoperative provided alternate procedures are used.	
52-00-17D	Flight Deck Door LOCK FAIL Light	Y	1	0	C	(M) May be inoperative provided automatic lock controls are verified to operate normally.	
52-00-17E	Flight Deck Door AUTO UNLK Light	Y	1	0	C	(M) May be inoperative provided: 1. Automatic lock controls are verified to operate normally, and 2. Door chime operates normally.	
52-00-17F	Flight Deck Door Lock Control Selector	N	1	0	C	(O) (M) May be inoperative provided: 1. Keypad is deactivated, 2. Automatic lock is verified to operate normally, and 3. Alternate procedures are used.	

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-17A	Flight Deck Door Control Panel	Flight Deck Door Automatic Locking System INOP
52-00-17B	Flight Deck Door Control Panel	Flight Deck Access Panel System ____ INOP
52-00-17C	Flight Deck Door Control Panel	Flight Deck Door Keypad ____ LED(s) INOP
52-00-17D	Flight Deck Door Control Panel	Flight Deck Door LOCK FAIL Light INOP
52-00-17E	Flight Deck Door Control Panel	Flight Deck Door AUTO UNLK Light INOP
52-00-17F	Flight Deck Door Control Panel	Flight Deck Door Lock Control Selector INOP

(O) PROCEDURES

52-00-17A, 52-00-17B, 52-00-17C, 52-00-17F

Refer to [QRH \(1.7\)](#) for procedures to follow when flight deck security door automatic locking system or components are inoperative.

1. On the ground, when the cabin is ready for pushback:
 - A. Flight Attendant will close the flight deck door and lock with a key.
 - B. Deadbolt Latch will be in the "+" configuration (LOCKED KEY OPERABLE). Refer to [Volume 2 737 1.5.9.2 Enhanced Flight Deck Door](#).

Note: The FAA has authorized the use of the deadbolt for MEL dispatch. Disregard "For Ground Use Only" placard when dispatched under this MEL and procedures require use of the deadbolt.

(M) PROCEDURES

52-00-17A

For deactivating the automatic locking system:

1. Position the flight deck access system switch OFF (guard extended).

Note: *LOCK FAIL light will remain illuminated when the flight deck access system switch is in the OFF position (guard extended).*

52-00-17B

For deactivating the keypad:

1. Open the circuit breaker for the flight deck door lock.
2. Disconnect the keypad electrical connector at the chime module side.
3. Close the circuit breaker for the flight deck door lock.

Note: *When flight deck door is closed with the flight deck not occupied, make sure the Flight Deck Access System switch is in the OFF position (guard extended).*

52-00-17D, 52-00-17E

For verifying automatic lock controls are operating normally:

1. With the flight deck door open, supply electrical power on the airplane.
2. Position Flight Deck Access System switch NORM (guard closed).
3. Position the Flight Deck Door Lock selector AUTO.
4. Verify the electric strike is in the locked position (solenoid pin in the electric strike will be extended up such that you can not rotate the strike).
5. Enter keypad access code and verify the door chime sounds.
6. Position the Flight Deck Door Lock selector DENY.
7. Before the DENY time delay has expired, enter the keypad access code and verify the door chime does not sound.
8. Position and hold Flight Deck Door Lock selector UNLKD.
9. Verify the electric strike is in the unlocked position (solenoid pin in the electric strike will retract down such that you can rotate the strike).
10. Position the Flight Deck Door Lock selector AUTO.
11. Verify the electric strike is in the locked position (solenoid pin in the electric strike will be extended up such that you can not rotate the strike).

52-00-17F

1. For deactivating the keypad:
 - A. Open the circuit breaker for the flight deck door lock.
 - B. Disconnect the keypad electrical connector at the chime module side.
 - C. Close the circuit breaker for the flight deck door lock.

Note: *When flight deck door is closed with the flight deck not occupied, make sure the Flight Deck Access System switch is in the OFF position (guard extended).*

2. For verifying automatic lock is operating normally:
 - A. With the flight deck door open, supply electrical power on the airplane.
 - B. Position Flight Deck Access System switch NORM (guard closed).
 - C. Verify the electric strike is in the locked position (solenoid pin in the electric strike will be extended up such that you can not rotate the strike).
 - D. Position Flight Deck Access System switch OFF (guard extended).
 - E. Verify the electric strike is in the unlocked position (solenoid pin in the electric strike will retract down such that you can rotate the strike).
 - F. Position Flight Deck Access System switch NORM (guard closed).
 - G. Verify the electric strike is in the locked position (solenoid pin in the electric strike will be extended up such that you can not rotate the strike).

52-00-18 Flight Deck Security Door Dead Bolt

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
52-00-18	Flight Deck Security Door Dead Bolt	Y	1	0	C May be inoperative provided automatic lock controls operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-18	Flight Deck Door Control Panel	Flight Deck Door Dead Bolt INOP

52-00-20 Flight Deck Door Panel Pressure Relief Latches

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
52-00-20	Flight Deck Door Panel Pressure Relief Latches "Contact MCC"	N	2	0	A May be inoperative in latched position provided repairs are made within two flight days.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-20	Flight Deck Door Control Panel	Flight Deck Door Panel Pressure Relief Latches INOP

52-00-22 Flight Deck Door Hold Open Device (e.g. Door Stop, Foot Plunger, etc.)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
52-00-22	Flight Deck Door Hold Open Device (e.g. Door Stop, Foot Plunger, etc.)	Y	1	0	D	

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-22	Flight Deck Door Hold Open Device	Flight Deck Door Hold Open Device INOP

52-00-25 Cargo Door Exterior Handle Recess/Hinge Spring Assemblies

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
52-00-25A	Cargo Door Exterior Handle Recess	N	2	0	C (M) May be inoperative or missing provided PRIOR TO EACH DEPARTURE the affected cargo door exterior handle is secure in a recessed position flush with the fuselage. Note: This MEL may be applied to an inoperative exterior handle retract spring/spring assembly and/or to an inoperative flapper door hinge spring assembly. Repetitive Check Required (Yellow Placard)
52-00-25B	Cargo Door Exterior Handle Hinge Spring Assemblies	N	2	0	C (M) Cargo door exterior handle flapper door hinge spring assembly may be inoperative or missing.

MEL ITEM	TAB LOCATION	PLACARD TEXT
52-00-25A	Logbook	___ CARGO DOOR EXTERIOR HANDLE RECESS/HINGE SPRING INOP OR MISSING
52-00-25B	Logbook	___ CARGO DOOR EXTERIOR HANDLE RECESS/HINGE SPRING INOP OR MISSING

(M) PROCEDURES

52-00-25A

PRIOR TO EACH DEPARTURE


1. For the cargo door exterior handle:
 - A. Secure the affected cargo door exterior handle in a recessed position flush with the fuselage.

Note: Speed Tape may be used to secure affected cargo door exterior handle in a recessed position flush with the fuselage. If speed tape is used, the area where the tape is applied should be cleaned with solvent prior to application, and new speed tape should be applied each time the affected cargo door exterior handle is used to operate the door during the MEL deferral period.

52-00-25B

1. For the flapper door hinge spring assembly:
 - A. No action required.

Figure 52-4: Flapper Door Hinge Spring Assembly

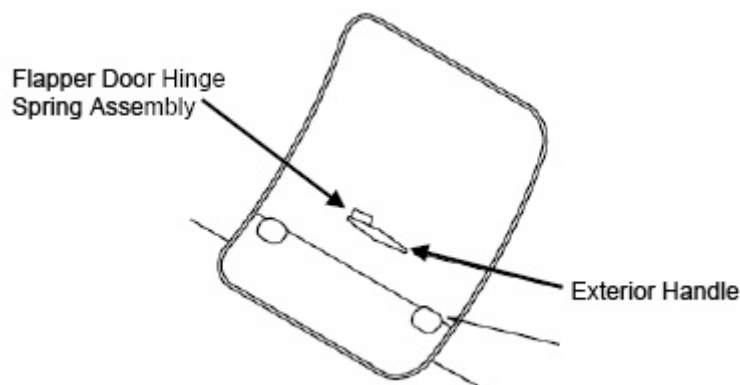

53 Fuselage

Table of Contents

53-00-00	RVSM Status
53-00-00V	RVSM Status

53-00-00 RVSM Status

NUMBER INSTALLED			NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS
53-00-00V	RVSM Status "DISP.APPR.REQ'D" Administrative Control Item	N	-	-
				(M) Authorized by MCC when: 1. RVSM operations cannot be used, 2. No specific MEL item applies, and 3. The aircraft must remain at or below FL280. Note: This SYS/SEQ number is to be used for deferring the RVSM Status of the aircraft. This number also requires Maintenance Control's authorization prior to its usage or removal. <u>RVSM Operations</u> Not Authorized

MEL ITEM	TAB LOCATION	PLACARD TEXT
53-00-00V	Adjacent To Each PFD	RVSM OPERATIONS NOT AUTHORIZED

(M) PROCEDURES

1. Create a new log page in the aircraft logbook using the appropriate MEL Item Number (contact MCC for instructions).
2. The deferral code VSM must also be entered on the log page and the placard when deferring this item.
3. MCC authorization is required prior to its usage or removal.

73 Engine Fuel and Control

Table of Contents

73-00-04	Fuel Filter Differential Pressure Warning Systems
73-00-04	Fuel Filter Differential Pressure Warning Systems
73-00-05	Fuel Flow Indication Systems
73-00-05	Fuel Flow Indication Systems
73-00-06	Fuel Used Indicators
73-00-06	Fuel Used Indicators
73-00-10	Fuel Control ENG VALVE CLOSED Indicating System
73-00-10	Fuel Control ENG VALVE CLOSED Indicating System
73-00-11	Electronic Engine Control (EEC)
	ELECTRONIC ENGINE CONTROL (EEC)
73-00-11	Normal (ON) Mode
73-00-12	Electronic Engine Control (EEC) Alternate Power Supply System
73-00-12	Electronic Engine Control (EEC) Alternate Power Supply System
73-00-90	EEC BITE - RECENT FAULTS
73-00-90A	Short Time Fault
73-00-90B	Long Time Fault

73-00-04 Fuel Filter Differential Pressure Warning Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
73-00-04	Fuel Filter Differential Pressure Warning Systems	N	2	1	C	(M) May be inoperative provided malfunction is verified to be in warning system.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-04	Associated Fuel Filter Bypass Light	____ Fuel Filter Differential Pressure Warning System INOP

OPERATIONS NOTE:

If the remaining FILTER BYPASS light illuminates, assume both engine fuel filters have an impending bypass condition. The FILTER BYPASS light associated with the deferral may illuminate during flight and can be considered unreliable.

(M) PROCEDURES

1. Verify that the malfunction is in the fuel filter bypass warning system:

- A. If the FILTER BYPASS light illuminates with the engine not operating, the fuel filter bypass warning system is faulty. Proceed to step 2 below to replace the fuel filter.

Note: To energize the system with the engine not operating, position the Engine START Switch to CONT.

B. If the FILTER BYPASS light does NOT illuminate with the engine not operating, perform the following:

- i. If Fuel FILTER BYPASS light was ON prior to engine shutdown, check EEC BITE-RECENT FAULTS for a "FUEL FILTER SIGNALS DISAGREE" fault message (AMM 73-21-00). If this fault message is present, proceed to step 2 below to replace the fuel filter. If the fault message is not present, use FIM 73-05 Task 801 – Fuel FILTER BYPASS Light is ON, to identify if there is a malfunction in the fuel filter bypass warning system.

Note: Other EEC fault messages may need to be addressed prior to dispatch.

- ii. Check DEU for fault messages. A CDS MAINT message may indicate a DEU fault that affects the fuel filter bypass indication.

Note: A CDS FAULT must be addressed prior to dispatch.

- iii. If Fuel FILTER BYPASS light is inoperative OFF, do EEC TEST, [AMM Task 73-21-00-700-804-F00](#).

Note: Remaining indication lights in the EEC test should illuminate normally.

2. Replace fuel filter with a new filter (AMM 73-11-02).

Note: One flight is permitted prior to filter replacement provided that fuel drained from filter housing drain plug is free of visible, gross contamination.

73-00-05 Fuel Flow Indication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION	Y	2	1	C
73-00-05	Fuel Flow Indication Systems	Y	2	1	C
					One may be inoperative provided: 1. N1, N2 for associated engine operate normally, and 2. Both main tank fuel quantity indicators operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-05	Near Primary Engine Display	____ Fuel Flow Indicator INOP

73-00-06 Fuel Used Indicators

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
73-00-06	Fuel Used Indicators	Y	2	0	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-06	Near Primary Engine Display	____ Fuel Used Indicator(s) INOP

73-00-10 Fuel Control ENG VALVE CLOSED Indicating System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
73-00-10	Fuel Control ENG VALVE CLOSED Indicating System	Y	2	0	C (M) May be inoperative provided associated valve is verified to operate normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-10	Affected Fuel Control ENG VALVE CLOSED Lights	Fuel Control ENG VALVE CLOSED Lights INOP

(M) PROCEDURES

Verify associated fuel shutoff valve operates normally as follows:

1. Pull and secure the P6-3 Panel ENGINE FUEL ENGINE (1/2) HPSOV IND circuit breaker.
2. Start the engine and allow it to stabilize.
3. Open the associated engine P6-3 Panel SPAR VALVE ENG circuit breaker.
4. Position engine start lever to CUTOFF.
5. Verify that the engine immediately decelerates.
6. Close the P6-3 Panel SPAR VALVE ENG circuit breaker.

73-00-11 Electronic Engine Control (EEC)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
	ELECTRONIC ENGINE CONTROL (EEC)				
73-00-11	Normal (ON) Mode "DISP.APPR.REQ'D"	Y	2	0	C
					(O) May be inoperative provided: 1. Both engines are operated in ALTERNATE mode, and 2. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-11	Associated Engine Panel EEC Mode Switches	____ EEC Normal Mode INOP

ENGINE CONTROL Lights must operate normally and be extinguished for dispatch.

(O) PROCEDURES

Note: Maximum rated thrust may be reached at a reduced thrust lever position.

1. Position both EEC Mode switches to ALTN.
 - A. EEC switch ON is not in view and ALTN will illuminate after affected engine is running. Refer to [Vol 2 Engines, APU, General Controls and Indicators, Engine Panel](#).
2. Do not use FMC-computed takeoff thrust N1 values. Refer to Operational Data Manual (ODM), ABNORMAL Section, EEC Normal Mode Inoperative to obtain V speed adjustments and EEC Alternate Mode Takeoff Thrust N1 for takeoff thrust N1 values.
3. Adjust V speeds per ODM as appropriate and enter the corrected V speeds into the FMS.
4. Set N1 values manually for both engines using the N1 Set Knob on the forward panel.
5. Set takeoff thrust manually. Use of Assumed Temperature reduced thrust takeoffs is NOT authorized.
6. Autothrottles may be used following takeoff.
7. For -800 only: TO (26K) thrust must be used for takeoff.

This item requires manual N1 settings and V-speed corrections by the flight crew.

73-00-11	ELECTRONIC ENGINE CONTROL (EEC) NORMAL(ON) MODE
EFFECTIVITY	-800
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	1. Performance weight corrections have been applied. 2. Refer to ODM – Abnormal section for Takeoff thrust N1 settings and V-speed corrections.
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF 1. Reduce RATOW by 11,000 lbs. 2. Reduce T/O CLIMB LIMIT by 11,000 lbs. LANDING None OTHER CORRECTIONS Refer to ODM – Abnormal section for Takeoff thrust N1 settings and V-speed corrections.

73-00-11	ELECTRONIC ENGINE CONTROL (EEC) NORMAL (ON) MODE	
EFFECTIVITY	-900ER	
FLIGHT PLANNING REQUIREMENTS	None	
NOTES	None	
AWABS	Performance weight corrections have been applied. Refer to ODM – Abnormal section for Takeoff thrust N1 settings and V-speed corrections.	
TAKEOFF PERFORMANCE WORKSHEET	TAKEOFF Reduce RATOW by 12,700 lbs. Reduce T/O CLIMB LIMIT by 12,700 lbs. LANDING None OTHER CORRECTIONS Refer to ODM – Abnormal section for Takeoff thrust N1 settings and V-speed corrections.	

73-00-12 Electronic Engine Control (EEC) Alternate Power Supply System

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
73-00-12	Electronic Engine Control (EEC) Alternate Power Supply System	N	4	3	A (M) May be inoperative deactivated provided repairs are made within 5 flight days.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-12	Engine Control Panel	EEC

(M) PROCEDURES

Note: Dispatch is not allowed with ENGINE CONTROL light(s) illuminated or inoperative.

Deactivate inoperative EEC Alternate Power Supply System ([AMM 73-00-00/901](#))

1. For number 1 engine:
 - A. Pull and secure the P18-2 panel circuit breaker ENG 1 ALTN PWR CHAN A or ENG 1 ALTN PWR CHAN B, as appropriate.
2. For number 2 engine:
 - A. Pull and secure the P6-2 panel circuit breaker ENG 2 ALTN PWR CHAN A or ENG 2 ALTN PWR CHAN B, as appropriate.

73-00-90 EEC BITE - RECENT FAULTS

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
73-00-90A	Short Time Fault "Contact MCC"	N	-	0	A	May be dispatched with EEC BITE-RECENT FAULTS, SHORT TIME, provided repairs are made within 5 flight days.
73-00-90B	Long Time Fault "Contact MCC"	N	-	0	A	May be dispatched with EEC BITE-RECENT FAULTS, LONG TIME, provided repairs are made within 10 flight days.

MEL ITEM	TAB LOCATION	PLACARD TEXT
73-00-90A	Engine Control Panel	EEC Short Time Fault Displayed
73-00-90B	Engine Control Panel	EEC Long Time Fault Displayed

74 Engine Ignition

Table of Contents

74-00-01	Ignition Systems
	IGNITION SYSTEMS
74-00-01A	Left Ignition Systems
74-00-01B	Left Ignition Systems
74-00-01C	Right Ignition Systems
74-00-01D	Right Ignition Systems

74-00-01 Ignition Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
IGNITION SYSTEMS					
74-00-01A	Left Ignition Systems	Y	2	1	B (O) May be inoperative provided: 1. Ignition Select Switch remains in BOTH position, and 2. Right ignition systems operate normally.
74-00-01B	Left Ignition Systems "DISP.APPR.REQ'D"	Y	2	0	C (O) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Ignition Select Switch remains in BOTH position, and 2. Associated engine right ignition system operates normally.
74-00-01C	Right Ignition Systems	N	2	1	B (O) (M) One may be inoperative provided: 1. Ignition Select Switch remains in BOTH position, 2. Left ignition system operates normally, and 3. Associated engine left igniter is connected to AC Standby Bus by an acceptable configuration.
74-00-01D	Right Ignition Systems "DISP.APPR.REQ'D"	N	2	0	C (O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Ignition Select Switch remains in BOTH position, 2. Associated engine left ignition system operates normally, and 3. Associated engine left igniter is connected to AC Standby Bus by an acceptable configuration.

MEL ITEM	TAB LOCATION	PLACARD TEXT
74-00-01A	Associated Engine Start Switch(es)	___ LEFT IGNITION SYSTEM(S) INOP
74-00-01B	Associated Engine Start Switch(es)	___ LEFT IGNITION SYSTEM(S) INOP
74-00-01C	Associated Engine Start Switch(es)	___ RIGHT IGNITION SYSTEM(S) INOP
74-00-01D	Associated Engine Start Switch(es)	___ RIGHT IGNITION SYSTEM(S) INOP

(O) PROCEDURES

74-00-01A, 74-00-01B

Normal operation of the operable ignition system may be confirmed as follows:

1. Position ignition switch to IGN R for starting the associated engine.
2. After engine start, position ignition switch to IGN BOTH.

74-00-01C, 74-00-01D

Normal operation of the operable ignition system may be confirmed as follows:

1. Position ignition switch to IGN R for starting the associated engine.

Note: IGN R is selected because the right power supply cable is swapped to the left exciter per (M) procedure (see below).

2. After engine start, position ignition switch to IGN BOTH.

(M) PROCEDURES

74-00-01C, 74-00-01D

Comply with preparation steps in [AMM Task 74-00-00-040-801-F00](#).

Note: *Dispatch is not permitted if the ignition failure is due to an EEC right igniter fault.*

If the Right Ignition System(s) is inoperative, connect the left Igniter to AC Standby Bus:

1. Pull and secure the following C/B's on the P-18-2 Panel:
 - A. For # 1 Engine, ENGINE 1 IGN RIGHT (located at A1) and ENGINE 1 IGN LEFT (located at A3).
2. Pull and secure the following C/B's on the P-6-2 Panel:
 - A. For # 2 Engine, ENGINE 2 IGN RIGHT (located at D4) and ENGINE 2 IGN LEFT (located at D6).
3. Verify that start levers are in the CUTOFF position and start switches in the OFF position.
4. Open fan cowl on affected engine.

WARNING

MAKE SURE THE IGNITION EXCITERS ARE DE-ENERGIZED BEFORE WORKING ON THE IGNITION SYSTEM. WAIT FOR A MINIMUM OF FIVE MINUTES TO RELEASE THE HIGH VOLTAGE FROM IGNITION EXCITER.

5. Disconnect the power supply cables from the ignition exciters:
 - A. Disconnect the DP0102 connector on the left power supply cable (Transfer Bus) from the left ignition exciter IGN 1.
 - B. Disconnect the DP0201 connector on the right power supply cable (Standby Bus) from the right ignition exciter IGN 2.
6. Connect the power supply cables:
 - A. Connect the DP0102 connector on the left power supply cable (Transfer Bus) to the right ignition exciter IGN 2.
 - B. Connect the DP0201 connector on the right power supply cable (Standby Bus) to the left ignition exciter IGN 1.
 - C. Tighten the connectors.
7. Close C/B's on the P18-2 and/or P6-2 Panel(s).
8. Perform Audible Test of Right Ignition System – EEC BITE.
9. Close fan cowl.

Figure 74-1: Ignition Exciters Normal Configuration


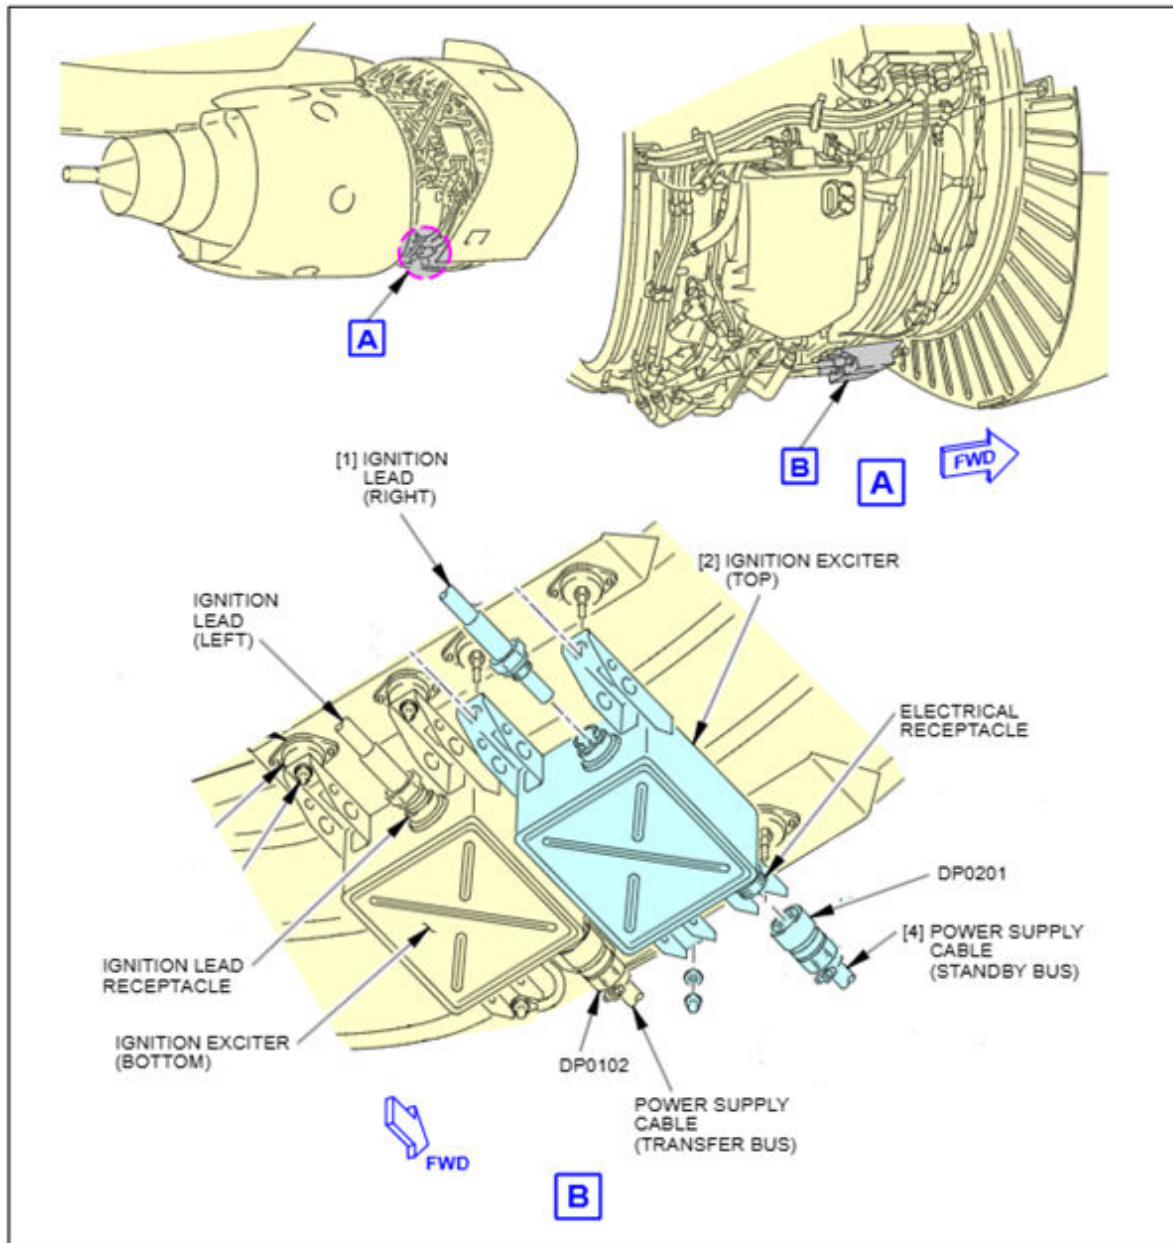


Figure 74-2: Ignition Excitors Dispatch Configuration (After Swapping Connectors)

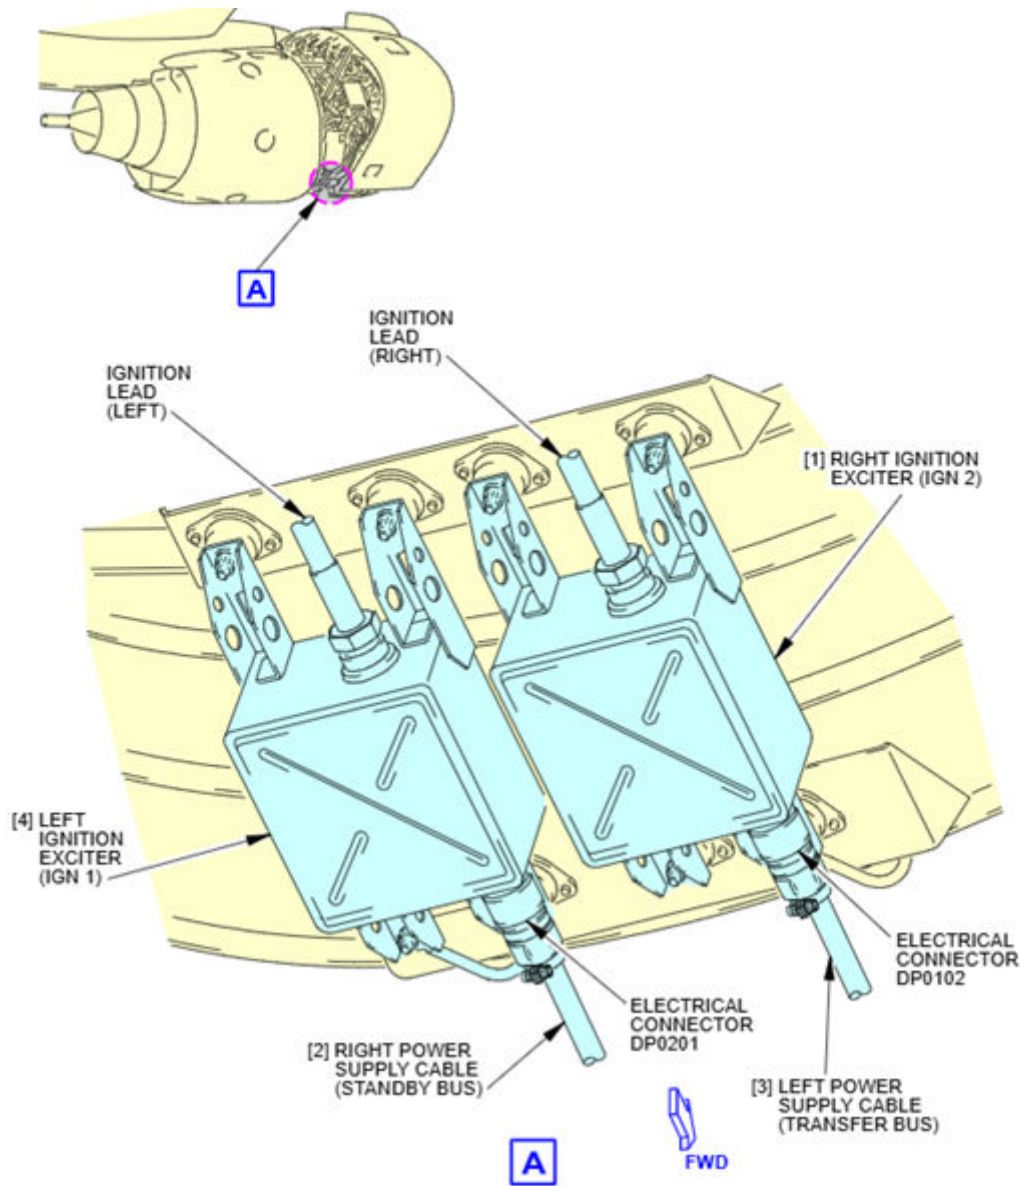

77 Engine Indicating

Table of Contents

77-00-02	N1 Tachometers
	N1 TACHOMETERS
77-00-02A	Reference N1 Bugs
77-00-02B	N1 Manual Set Indication
77-00-05	Vibration Indicating Systems
77-00-05	Vibration Indicating Systems

77-00-02 N1 Tachometers

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
N1 TACHOMETERS					
77-00-02A	Reference N1 Bugs	Y	2	1	C
77-00-02B	N1 Manual Set Indication	Y	2	0	C

MEL ITEM	TAB LOCATION	PLACARD TEXT
77-00-02A	Engine Display Control Unit	N1 Tachometers Reference N1 Bugs INOP
77-00-02B	Engine Display Control Unit	N1 Tachometers Manual Set Indication INOP

77-00-05 Vibration Indicating Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS		
77-00-05	Vibration Indicating Systems	Y	2	1	C	

MEL ITEM	TAB LOCATION	PLACARD TEXT
77-00-05	Secondary Engine Control Display Unit	____ Vibration Indicating System INOP

78 Engine Exhaust

Table of Contents

78-00-01	Thrust Reverser Systems
78-00-01	Thrust Reverser Systems
78-00-07	REVERSER Lights (Aft Overhead Panel)
78-00-07	REVERSER Lights (Aft Overhead Panel)

78-00-01 Thrust Reverser Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
78-00-01	Thrust Reverser Systems “DISP.APPR.REQ'D”	N	2	1	C (O) (M) May be inoperative provided: 1. Thrust reverser is locked in forward thrust position, and 2. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
78-00-01	Primary Engine Display Unit	____ Thrust Reverser INOP

Note: The REVERSER light on the P5 overhead panel may illuminate.

(O) PROCEDURES

78-00-01

During landing rollout, differential braking may be required to maintain directional control.

78-00-01	THRUST REVERSER SYSTEMS
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 78-00-01.

(M) PROCEDURES

Comply with preparation steps in [AMM Task 78-00-00-040-801-F00](#).

BITE the EAU and record any faults in the aircraft logbook before thrust reverser deactivation.

The deactivation pins are located in the landing gear pin pouch. Deactivate and secure the affected thrust reverser using the following procedure:

Note: There are two procedures that can be used to make sure the sync locks are in the locked position. The first one is used if the thrust reverser can be stowed and deployed with hydraulic power. The second is used if the thrust reverser will not stow or deploy with hydraulic power.

PROCEDURE 1

Thrust Reversers that will Deploy and Stow with hydraulic power, perform these steps to make sure that the sync locks will lock

1. A. Applicable engine, make sure that the start lever is in the CUTOFF position.
- B. Applicable engine thrust lever is in the idle position.
- C. Applicable engine reverse thrust lever is forward and down in the retract (stow) position.

WARNING

MAKE SURE PERSONS AND EQUIPMENT ARE CLEAR OF ALL CONTROL SURFACES BEFORE YOU SUPPLY HYDRAULIC POWER. AILERONS, RUDDERS, ELEVATORS, FLAPS, SPOILERS AND THE THRUST REVERSERS CAN MOVE QUICKLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

2. Pressurize applicable hydraulic system:

	737 Minimum Equipment List 78 Engine Exhaust	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

- A. Hydraulic System A, Nbr 1 engine.
- B. Hydraulic System B, Nbr 2 engine.

WARNING

MAKE SURE THAT ALL PERSONS AND EQUIPMENT ARE CLEAR OF THE AREA AFT OF THE APPLICABLE THRUST REVERSER. INJURY TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

- 3. Slowly move the applicable reverse thrust lever up and aft to extend (deploy) the thrust reverser.
- 4. Pull and secure the applicable sync lock circuit breaker.
 - A. ENG NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER SYNC LOCK.
 - B. ENG NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER SYNC LOCK.
- 5. Slowly move the applicable reverse thrust lever down and forward to the retract (stow) position.
- 6. Make sure that the thrust reverser sleeves do not retract (stow).

Note: *This is the indication that the sync locks are in the locked position.*

- 7. Slowly move the applicable reverse thrust lever up and aft to the extend (deploy) position.
- 8. Close the applicable ENGINE THRUST REVERSER SYNC LOCK circuit breaker.

PERFORM THE FOLLOWING STEPS TO RESET THE EAU TO CLEAR THE DEPLOY AND STOW FAULTS THAT WERE SET IN THE PREVIOUS STEPS.

- 1. Gain access to the EAU, located in the Electronic Equipment Bay, E3-2 shelf.
- 2. Push and hold the FAULT RESET button on the EAU for a minimum of two seconds.
- 3. Slowly move the applicable reverse thrust lever down and forward to retract (stow) the thrust reverser.
- 4. Pull and secure the applicable circuit breakers:
 - A. ENGINE NO. 1,
 - i. P18-2 Panel, ENGINE 1 THRUST REVERSER CONT
 - ii. P18-2 Panel, ENGINE 1 THRUST REVERSER SYNC LOCK
 - B. ENGINE NO. 2,
 - i. P6-2 Panel, ENGINE 2 THRUST REVERSER CONT
 - ii. P6-2 Panel, ENGINE 2 THRUST REVERSER SYNC LOCK
- 5. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
- 6. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

Note: *You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.*

- 7. Close the Electronic Equipment Bay Access Door.
- 8. Lockwire the reverse thrust lever to the applicable forward thrust lever.

PROCEDURE 2

Thrust Reversers that will not deploy and stow with hydraulic power

- 1. Perform the following steps to verify that there is no power to the sync locks:
- 2. Pull and secure the applicable circuit breakers:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER SYNC LOCK.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER SYNC LOCK.
- 3. Check the EAU to verify there is no power to the sync lock:
 - A. Gain access to the EAU, located in the Electronic Equipment Bay, E3-2 shelf.
 - B. Push and hold the T/R STOW FAULTS switch for the applicable engine.
 - C. Make sure that all of the lights come on for approximately one second.
 - D. Take note of these SYNC LOCK PWR LIGHTS for the applicable engine:
 - i. V148 L SLEEVE SYNC LOCK PWR.
 - ii. V150 R SLEEVE SYNC LOCK PWR.
- 4. Release the T/R STOW FAULT switch.
- 5. Close the Electronic Equipment Bay Access Door.

CONTINUED ON NEXT PAGE

	737 Minimum Equipment List 78 Engine Exhaust	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

IF SYNC LOCK PWR LIGHTS GO OFF:

1. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER CONT.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER CONT.
2. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
3. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

Note: *You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.*

4. Lockwire the reverse thrust lever to the applicable forward thrust lever.


IF SYNC LOCK PWR lights stay on:

1. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER CONT.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER CONT.
2. Open applicable engine fan cowl.
3. Disconnect the electrical connectors from the sync locks on the left and right thrust reversers on the applicable engine. Protect the electrical connectors.
 - A. Left thrust reverser, electrical connector D1008.
 - B. Right thrust reverser, electrical connector D1016.
4. Secure the electrical connectors to the thrust reverser with tywrap or tape.
5. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
6. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

Note: *You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.*

7. Close applicable engine fan cowl.
8. Lockwire the reverse thrust lever to the applicable forward thrust lever.

 [Link to Learning Video](#)

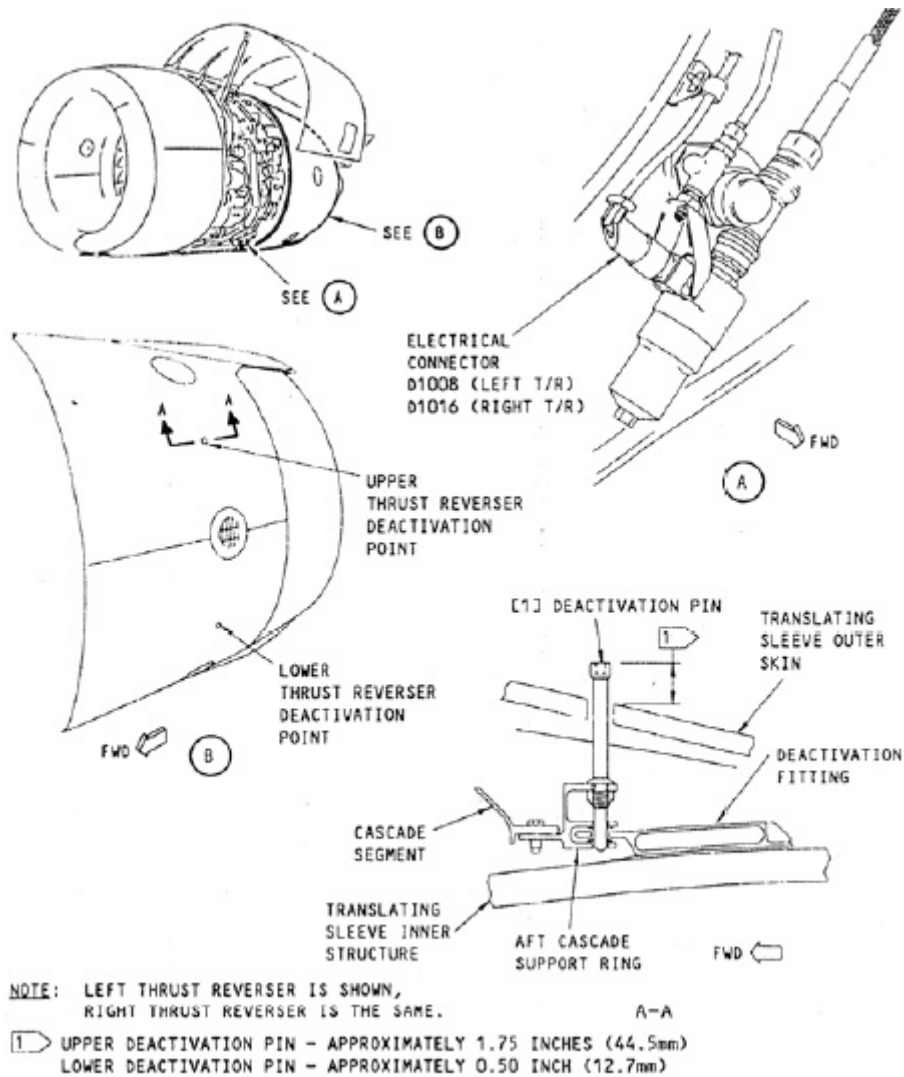Figure 78-1: -800 Thrust Reverser

Thrust Reverser Sleeve Deactivation

78-00-07 REVERSER Lights (Aft Overhead Panel)

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
78-00-07	REVERSER Lights (Aft Overhead Panel) "DISP.APPR.REQ'D"	N	2	1	C (O) (M) May be inoperative provided: 1. Associated reverser is locked in closed (forward thrust) position, and 2. Performance corrections are applied.

MEL ITEM	TAB LOCATION	PLACARD TEXT
78-00-07	Primary Engine Display Unit	____ REVERSER Light INOP

(O) PROCEDURES

During landing rollout, differential braking may be required to maintain directional control.

78-00-07	REVERSER LIGHTS (AFT OVERHEAD PANEL)
EFFECTIVITY	All
FLIGHT PLANNING REQUIREMENTS	None
NOTES	None
AWABS	Performance corrections have been applied
TAKEOFF PERFORMANCE WORKSHEET	Manual WDR not permitted with MEL 78-00-07.

(M) PROCEDURES

BITE the EAU and record any faults in the aircraft logbook before thrust reverser deactivation.

The deactivation pins are located in the landing gear pin pouch. Deactivate and secure the affected thrust reverser using the following procedure:

Note: There are two procedures that can be used to make sure the sync locks are in the locked position. The first one is used if the thrust reverser can be stowed and deployed with hydraulic power. The second is used if the thrust reverser will not stow or deploy with hydraulic power.

1. Thrust Reversers that will Deploy and Stow with hydraulic power, perform these steps to make sure that the sync locks will lock:
 - A. Applicable engine, make sure that the start lever is in the CUTOFF position.
 - B. Applicable engine thrust lever is in the idle position.
 - C. Applicable engine reverse thrust lever is forward and down in the retract (stow) position.

WARNING

MAKE SURE PERSONS AND EQUIPMENT ARE CLEAR OF ALL CONTROL SURFACES BEFORE YOU SUPPLY HYDRAULIC POWER. AILERONS, RUDDERS, ELEVATORS, FLAPS, SPOILERS AND THE THRUST REVERSERS CAN MOVE QUICKLY WHEN YOU SUPPLY HYDRAULIC POWER. THIS CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

2. Pressurize applicable hydraulic system:
 - A. Hydraulic System A, Nbr 1 engine.
 - B. Hydraulic System B, Nbr 2 engine.

WARNING

MAKE SURE THAT ALL PERSONS AND EQUIPMENT ARE CLEAR OF THE AREA AFT OF THE APPLICABLE THRUST REVERSER. INJURY TO PERSONS AND DAMAGE TO EQUIPMENT CAN OCCUR.

3. Slowly move the applicable reverse thrust lever up and aft to extend (deploy) the thrust reverser.

CONTINUED ON NEXT PAGE

4. Pull and secure the applicable sync lock circuit breaker.
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER SYNC LOCK.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER SYNC LOCK.
5. Slowly move the applicable reverse thrust lever down and forward to the retract (stow) position.
6. Make sure that the thrust reverser sleeves do not retract (stow).

Note: *This is the indication that the sync locks are in the locked position.*

7. Slowly move the applicable reverse thrust lever up and aft to the extend (deploy) position.
8. Close the applicable ENGINE THRUST REVERSER SYNC LOCK circuit breaker.

PERFORM THE FOLLOWING STEPS TO RESET THE EAU TO CLEAR THE DEPLOY AND STOW FAULTS THAT WERE SET IN THE PREVIOUS STEPS.

1. Gain access to the EAU, located in the Electronic Equipment Bay, E3-2 shelf.
2. Push and hold the FAULT RESET button on the EAU for a minimum of two seconds.
3. Slowly move the applicable reverse thrust lever down and forward to retract (stow) the thrust reverser.
4. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER CONT and ENGINE 1 THRUST REVERSER SYNC LOCK.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER CONT and ENGINE 2 THRUST REVERSER SYNC LOCK.
5. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
6. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

Note: *You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.*

7. Close the Electronic Equipment Bay Access Door.
8. Lockwire the reverse thrust lever to the applicable forward thrust lever.

Thrust Reversers that will not deploy and stow with hydraulic power.

1. Perform the following steps to verify that there is no power to the sync locks:
2. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO.1, P18-2 Panel, ENGINE 1 THRUST REVERSER SYNC LOCK.
 - B. ENGINE NO.2, P6-2 Panel, ENGINE 2 THRUST REVERSER SYNC LOCK.
3. Check the EAU to verify there is no power to the sync lock:
 - A. Gain access to the EAU, located in the Electronic Equipment Bay, E3-2 shelf.
 - B. Push and hold the T/R STOW FAULTS switch for the applicable engine.
 - C. Make sure that all of the lights come on for approximately one second.
 - D. Make sure that these lights go off for the applicable engine.
 - i. V148 L SLEEVE SYNC LOCK PWR.
 - ii. V150 R SLEEVE SYNC LOCK PWR.
4. Release the T/R STOW FAULT switch.
5. Close the Electronic Equipment Bay Access Door.

SYNC LOCK PWR lights go off:

1. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER CONT.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER CONT.
2. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
3. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

	737 Minimum Equipment List 78 Engine Exhaust	Revision: 50.0.1 Date: 24-Apr-2026
---	---	---

Note: You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.


4. Lockwire the reverse thrust lever to the applicable forward thrust lever.

SYNC LOCK PWR lights stay on:

1. Pull and secure the applicable circuit breaker:
 - A. ENGINE NO. 1, P18-2 Panel, ENGINE 1 THRUST REVERSER CONT.
 - B. ENGINE NO. 2, P6-2 Panel, ENGINE 2 THRUST REVERSER CONT.
2. Open applicable engine fan cowl.
3. Disconnect the electrical connectors from the sync locks on the left and right thrust reversers on the applicable engine. Protect the electrical connectors.
 - A. Left thrust reverser, electrical connector D1008.
 - B. Right thrust reverser, electrical connector D1016.
4. Secure the electrical connectors to the thrust reverser with tywrap or tape.
5. Apply Anti-seize compound (P/N NSBT-8N/-16N or equivalent) on the threads of the four deactivation pins prior to installation.
6. Install two deactivation pins in the left and two deactivation pins in the right thrust reverser sleeves on the applicable engine. Make sure that the deactivation pins go through deactivation pin holes and into the aft cascade support ring. Tighten the deactivation pins to approximately 110-125 pound-inches.

Note: You must install two deactivation pins in each of the thrust reverser sleeves. The upper deactivation pin protrudes approximately 1.75 inches. The lower deactivation pin protrudes approximately 0.50 inches from the outer cowl.

7. Close applicable engine fan cowl.
8. Lockwire the reverse thrust lever to the applicable forward thrust lever.

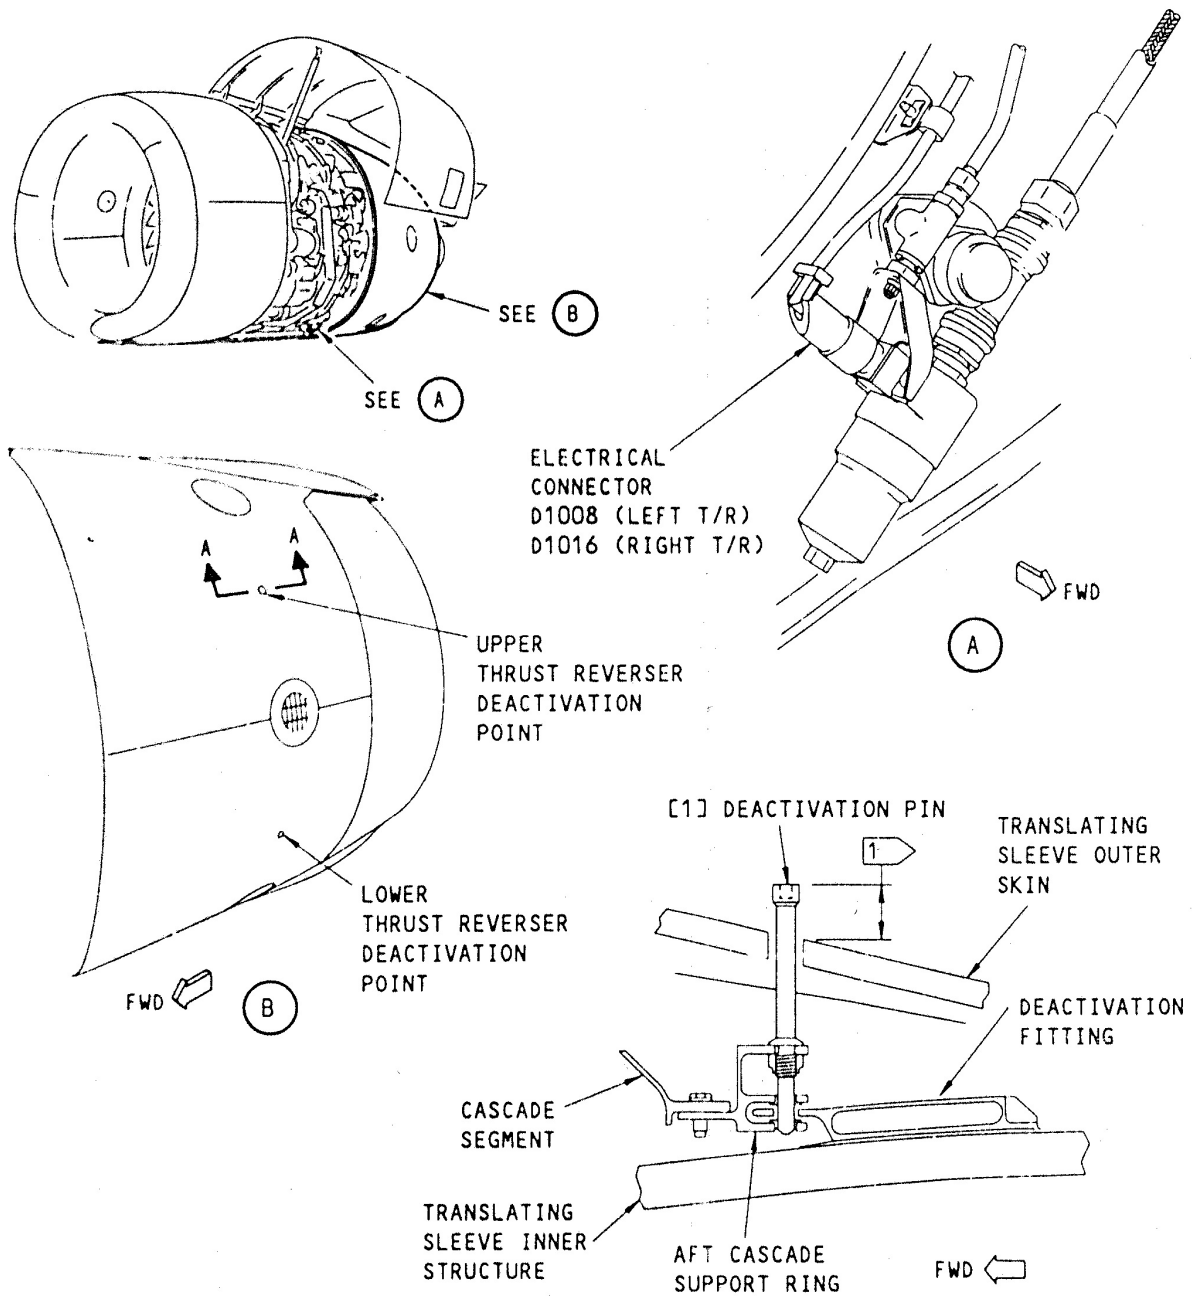Figure 78-2: -800 Thrust Reverser


NOTE: LEFT THRUST REVERSER IS SHOWN,
RIGHT THRUST REVERSER IS THE SAME.

A-A

- [1] UPPER DEACTIVATION PIN - APPROXIMATELY 1.75 INCHES (44.5mm)
LOWER DEACTIVATION PIN - APPROXIMATELY 0.50 INCH (12.7mm)

Thrust Reverser Sleeve Deactivation

79 Engine Oil

Table of Contents

79-00-01	Oil Quantity Indication Systems
79-00-01	Oil Quantity Indication Systems
79-00-02	Oil Filter Bypass Warning Systems
79-00-02	Oil Filter Bypass Warning Systems
79-00-04	Oil Low Pressure Warning Systems
79-00-04	Oil Low Pressure Warning Systems

79-00-01 Oil Quantity Indication Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
79-00-01	Oil Quantity Indication Systems "DISP.APPR.REQ'D"	N	2	1	B (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Oil Tank is filled to maximum recommended capacity PRIOR TO EACH DEPARTURE (Logbook Entry Required), 2. There is no evidence of above normal oil consumption or leakage, and 3. Associated low oil pressure warning system operates normally. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
79-00-01	Secondary Engine Display Unit	____ Oil Quantity Indicator INOP

(M) PROCEDURES

PRIOR TO EACH DEPARTURE:

- Remove filler cap and fill tank to lip of filler port (ref. [AMM 12-13-11](#) for servicing procedures and limitations).
- The AMM specifies time limits for oil servicing after engine shutdown. If it is necessary to run or dry motor the engine prior to servicing, the flight crew may accomplish this task if qualified maintenance personnel are not available.

79-00-02 Oil Filter Bypass Warning Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD			1	REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION			REMARKS OR EXCEPTIONS	
79-00-02	Oil Filter Bypass Warning Systems "Contact MCC"	N	2	C	(M) May be inoperative provided: 1. Malfunction is in the warning system, 2. Magnetic chip Detector is inspected for presence of contaminants, 3. Oil supply filter pop-out indicator is not extended, and 4. Oil filter is inspected for presence of contaminants WITHIN ONE FLIGHT DAY and ONCE EACH FLIGHT DAY thereafter. (Logbook Entry Required) Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
79-00-02	Primary Engine Display Unit	____ Oil Filter Bypass Warning System INOP

OPERATIONS NOTE

The FILTER BYPASS light associated with the deferral may illuminate during flight and can be considered unreliable.

(M) PROCEDURES

Delayed accomplishment of the initial oil filter inspection may be permitted only with MCC approval.

1. Verify the malfunction is in the bypass warning system:
 - A. Verify presence of fault code 79-n112x on the FMC CDU ([AMM 73-21-00/501](#)).
 - B. If fault code 79-n112x is not present, access the CDU INPUT MONITORING / OIL FILTER screen on the FMC CDU and verify FILTER BYPASS state is "CLOGGED", which corresponds to the following FILTER INPUTS displayed on the FMC CDU: Switch 1 (Channels A and B) OPEN, Switch 2 (Channels A and B) CLOSED.
2. Inspect Magnetic Chip detector for contaminants ([AMM 79-00-00/601](#)).
3. Verify the oil supply filter pop-out indicator is not extended ([AMM 79-00-00/601](#)).
4. If Magnetic Chip Detector inspection reveals no contaminants and oil supply filter pop-out indicator is not extended, then scavenge oil filter inspection may be delayed to later within the flight day.
 WITHIN ONE FLIGHT DAY and ONCE EACH FLIGHT DAY thereafter:
 Inspect oil filter for contamination ([AMM 79-00-00/901](#)):
 - A. Remove the scavenge oil filter element ([AMM 79-21-06/401](#)).
 - B. Visually inspect the scavenge oil filter element. If the filter element is not contaminated, the malfunction is in the bypass warning system.
 - C. Visually inspect the scavenge oil filter element for contaminants once each flight day.

CAUTION

USE YOUR HANDS ONLY, DO NOT USE A TOOL TO TIGHTEN THE FILTER BOWL. DAMAGE TO THE FILTER ASSEMBLY CAN OCCUR.

79-00-04 Oil Low Pressure Warning Systems

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH		
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY		
ITEM NO.	NAME/DESCRIPTION					REMARKS OR EXCEPTIONS
79-00-04	Oil Low Pressure Warning Systems	Y	2	0	B	May be inoperative provided associated oil pressure, oil temperature, and oil quantity indicators operates normally.

MEL ITEM	TAB LOCATION	PLACARD TEXT
79-00-04	Secondary Engine Display Unit	____ Oil Low Pressure Warning System(s) INOP

80 Engine Starting

Table of Contents

80-00-01	Starter Valve Open Indications
80-00-01	Starter Valve Open Indications
80-00-02	Engine Starter Auto Cutout
80-00-02	Engine Starter Auto Cutout
80-00-03	Starter Valves
80-00-03	Starter Valves

80-00-01 Starter Valve Open Indications

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
80-00-01	Starter Valve Open Indications "DISP.APPR.REQ'D"	Y	2	1 C	(O) May be inoperative provided it is checked AFTER ENGINE START that associated valve is closed. Note: The associated PRSOV will be commanded closed when the START VALVE OPEN indication is inoperative ON. This will result in the loss of the associated engine bleed. Defer associated PRSOV per MEL 36-00-05. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
80-00-01	Primary Engine Display Unit	____ Starter Valve Open Indications INOP

(O) PROCEDURES

AFTER ENGINE START check that the associated start valve is closed.

1. Use normal start procedures except for the following:
 - A. Prior to selecting ENGINE START switch to GRD position note the duct pressure.
 - B. As ENGINE START switch moves to OFF, verify that duct pressure returns to the pre-start value or higher.
2. Dispatch is not allowed under the provisions of this MEL item if duct pressure returns to a lower value than the prestart value. In this case, shutdown engines.

80-00-02 Engine Starter Auto Cutout

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD				REPAIR CATEGORY	
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
80-00-02	Engine Starter Auto Cutout	Y	2	0	C May be inoperative provided crew manually selects Start Switch OFF at 55% N2.

MEL ITEM	TAB LOCATION	PLACARD TEXT
80-00-02	Associated Engine Start Switch	____ Engine Starter Auto Cutout INOP

80-00-03 Starter Valves

NUMBER INSTALLED				NUMBER REQUIRED FOR DISPATCH	
FLIGHT CREW MAY PLACARD					REPAIR CATEGORY
ITEM NO.	NAME/DESCRIPTION				REMARKS OR EXCEPTIONS
80-00-03	Starter Valves "DISP.APPR.REQ'D"	N	2	1	C
					(O) (M) Except for Extended Operations (ETOPS), may be inoperative provided: 1. Associated start valve indication operates normally, and 2. PRIOR TO EACH DEPARTURE manual override start procedures are used. Repetitive Check Required (Yellow Placard)

MEL ITEM	TAB LOCATION	PLACARD TEXT
80-00-03	Associated Engine Start Switch	____ Starter Valve(s) INOP

(O) PROCEDURES

CAUTION POSITIVE COMMUNICATION BETWEEN PERSONNEL IN FLIGHT COMPARTMENT AND GROUND MAINTENANCE PERSONNEL IS MANDATORY.

1. Establish interphone communication between personnel on ramp and in flight compartment.

CAUTION MANUAL OPERATION OF START VALVE WITHOUT AIR PRESSURE IN INLET DUCT MAY DAMAGE VALVE.

2. Perform normal start procedure with the following additions:
3. When placing the associated engine start switch to the GRD position, instruct the ground crew to open the start valve.
4. Inform the ground crew when N2 is rotating.
5. When N2 RPM indicates 56% instruct the ground crew to close the start valve.
6. Verify that the start switch moves to OFF and the duct pressure increases to the prestart value.

Note: For an inflight engine start, with an engine shut down more than one hour, a windmill start may not be possible.

Note: If an inflight engine start is necessary, a crossbleed start will not be available on the associated engine. Ensure that airspeed is sufficient for a windmill start.

(M) PROCEDURES

PRIOR TO EACH DEPARTURE:

CAUTION POSITIVE COMMUNICATION BETWEEN PERSONNEL IN FLIGHT COMPARTMENT AND GROUND MAINTENANCE PERSONNEL IS MANDATORY.

WARNING OBSERVE THE HAZARD AREAS, AND ESPECIALLY THE ENTRY / EXIT CORRIDOR. ENTRY INTO THE HAZARD AREA COULD CAUSE SERIOUS INJURY TO PERSONS OR POSSIBLE LOSS OF LIFE.

CAUTION MAKE SURE THAT THERE IS AIR PRESSURE IN THE DUCT. IF THERE IS NO AIR PRESSURE, DAMAGE TO THE START VALVE CAN OCCUR.

1. Locate starter override access hole in the engine cowl ([see Figure 80-1 below](#)).
2. Establish interphone communication with flight compartment.
3. When instructed by the flight crew, open the start valve by inserting a 3/8 inch square drive extension through the start valve manual override guide port, and rotating the butterfly valve 90 degrees clockwise to the OPEN position.
4. Maintain the valve in the OPEN position until instructed by the flight crew to close the start valve.

CONTINUED ON NEXT PAGE

5. When instructed to close the start valve, turn the start valve 90 degrees counterclockwise to the CLOSED position.

Figure 80-1: Starter Valve Override Access Hole

