

S7106 Quick Installation Guide

Document # D2388-100 / Revision 1.0



Read Me First

1. The motherboard User's Manual is available for download from our Web site at <http://www.tyan.com>. Make sure to read all precautions and instructions before you start installing the server board.
2. Refer all servicing to qualified personnel to avoid the risk of damage to the server board.
3. Exercise normal ESD (Electrostatic Discharge) procedures during system integration. TYAN/MiTAC recommends wearing gloves and an anti-static wrist strap to avoid possible damage to the equipment.
4. Current processor socket design places the pins on the motherboard instead of the processor itself. Exercise extreme caution when installing the processors as the manufacturer's warranty does not cover damage inflicted upon the motherboard, including damage to the CPU sockets.


Package Contents



Required Tools



Motherboard Placement

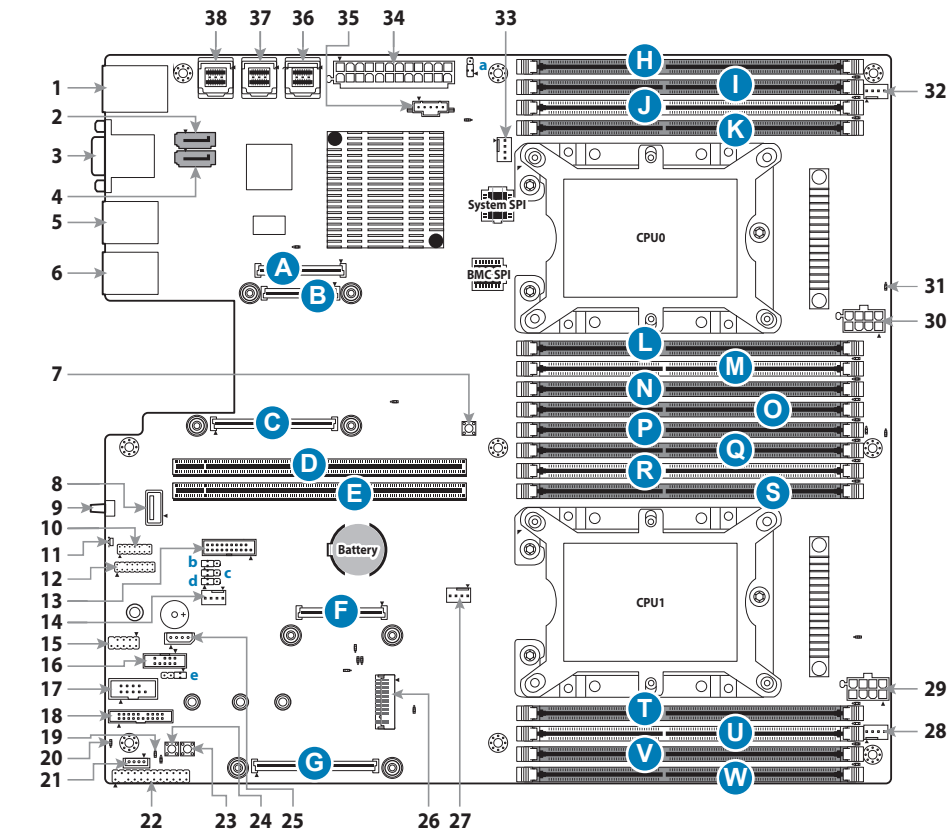

CONNECTORS

- | | | |
|--|--|---|
| 1 Dedicated IPMI port + USB3.0x2 (J112) | 14 Rear I/O_FAN 2 (SYS_FAN_3) | 27 CPU1 FAN Header (CPU1_FAN) |
| 2 SSATA Connector 4 (SSATA4) | 15 USB 2.0 Header (J26) | 28 SYS_FAN 2 Header (SYS_FAN_2) |
| 3 VGA + COM Connector (VGA_COM1) | 16 sSATA SGPIO Pin Header for SSATA4/SSATA5 (SSATA_SGPIO1) | 29 SSI 8-pin CPU1 Power Connector (PW2) |
| 4 SSATA Connector 5 (SSATA5) | 17 COM2 Header (HD_COM2) | 30 SSI 8-pin CPU0 Power Connector (PW1) |
| 5 LAN Connector (LAN2) | 18 FAN Tachometer Header (FAN_HD1) | 31 CPU0 PVCCP POWER OK LED (P0_PG_LED1) |
| 6 LAN Connector (LAN1) | 19 On board BMC IPMI ALERT LED (IPMI_LED1) | 32 SYS_FAN 1 Header (SYS_FAN_1) |
| 7 Clear CMOS Button (CLEAR_BTN1) | 20 BMC Heartbeat LED (BMC_LED4) | 33 CPU0 FAN Header (CPU0_FAN) |
| 8 Vertical Type A USB Connector (TYPEA_USB3) | 21 PCH_SATA_RAID_KEY (J51) | 34 ATX Power Connector (24 pin) (PWR1) |
| 9 Rear IO ID LED Button (IDLED_BTN1) | 22 Front Panel Header (FPIO_1) | 35 PSMI Pin Header (PSMI_HD1) |
| 10 VGA Header (FPIO_VGA3) | 23 Reset Button (RST_BTN1) | 36 36-pin Vertical Mini SAS HD Connector (SATA 3.0 signals)(PCH_SSATA_0123) |
| 11 Rear ID LED (ID_LED1) | 24 Power Button (PWR_BTN1) | 37 36-pin Vertical Mini SAS HD Connector (SATA 3.0 signals)(PCH_SATA_0123) |
| 12 TYAN Module Header (DBG_HD1) | 25 IPMB Pin Header (IPMB_HD1) | 38 36-pin Vertical Mini SAS HD Connector (SATA 3.0 signals)(PCH_SATA_4567) |
| 13 Front Panel USB3.0 Header (USB3_FPIO1) | 26 M.2 NGFF PCIe 22x42/60/80mm Socket (US8) | |

SLOTS

- A+C** OCP 2.0 PCI-E Gen3x16 MEZZ slot f/CPU0 for LAN card
- Standalone C** OCP 1.0 PCI-E Gen3x8 MEZZ slot f/CPU0 for LAN card
- B** OCP 2.0 KR interface (only available in S7106GM2NR-L2 SKU)
- D** PCI-E Gen3x24 slot(x24 link) f/ CPU1
- E** PCI-E Gen3x24 slot(x24 link) f/ CPU0
- F+G** OCP 2.0 PCI-E Gen3x16 MEZZ slot f/CPU1 for LAN card
- Standalone G** OCP 1.0 PCI-E Gen3x8 MEZZ slot f/CPU1 for LAN card


JUMPERS

- a** ME Recovery Jumper (J113)
- b** BMC COM PORT Jumper (J119)
- c** BMC COM PORT Jumper (J118)
- d** PSU Throttling Jumper (J125)
- e** PC BEEP Jumper (J120)


- H** CPU0 Memory Slot (P0_MC0_DIM_CH_C0)
- I** CPU0 Memory Slot (P0_MC0_DIM_CH_B0)
- J** CPU0 Memory Slot (P0_MC0_DIM_CH_B1)
- K** CPU0 Memory Slot (P0_MC0_DIM_CH_A0)
- L** CPU0 Memory Slot (P0_MC1_DIM_CH_D0)
- M** CPU0 Memory Slot (P0_MC1_DIM_CH_E1)
- N** CPU0 Memory Slot (P0_MC1_DIM_CH_E0)
- O** CPU0 Memory Slot (P0_MC1_DIM_CH_F0)
- P** CPU1 Memory Slot (P1_MC0_DIM_CH_C0)
- Q** CPU1 Memory Slot (P1_MC0_DIM_CH_B0)
- R** CPU1 Memory Slot (P1_MC0_DIM_CH_B1)
- S** CPU1 Memory Slot (P1_MC0_DIM_CH_A0)
- T** CPU1 Memory Slot (P1_MC1_DIM_CH_D0)
- U** CPU1 Memory Slot (P1_MC1_DIM_CH_E1)
- V** CPU1 Memory Slot (P1_MC1_DIM_CH_E0)
- W** CPU1 Memory Slot (P1_MC1_DIM_CH_F0)

1 Install the Server Board

- 1 Insert the server board into the chassis.

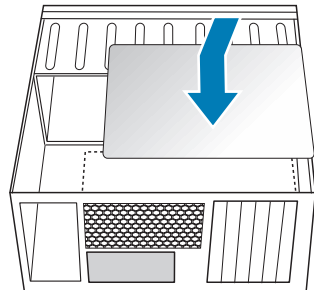


- 2 Attach the server board to the chassis by securing the screws on the designated locations.

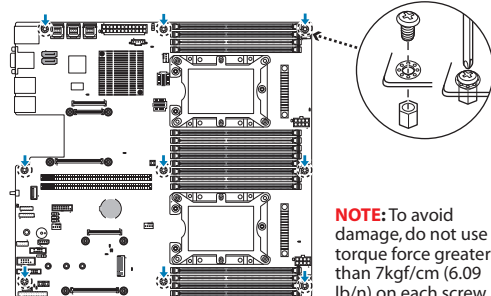


2 Install the Processor


- 1 Align and install the processor on the carrier.

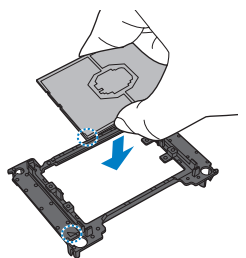


NOTE: A new heatsink comes with pre-applied thermal grease. Once the heatsink has been removed from the processor, you need to clean the processor and heatsink using an alcohol solvent. Then apply new thermal grease before reinstalling the heatsink.

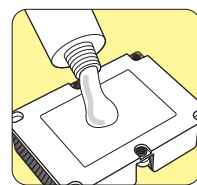


- 2 Carefully flip the heatsink. Then install the carrier assembly on the bottom of the heatsink and make sure the gold arrow is located in the correct direction.

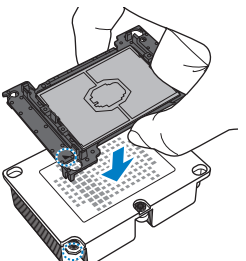


- 3 Remove the CPU cover. **NOTE: Save and replace the CPU cover if the processor is removed from its socket.**

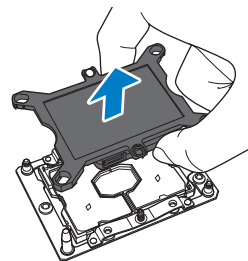

- 4 Align the heatsink with the CPU socket by the guide pins and make sure the gold arrow is located in the correct direction. Then place the heatsink onto the top of the CPU socket.

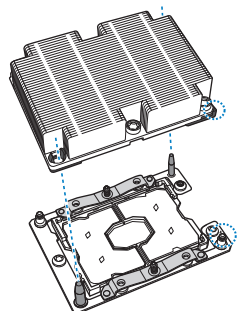


- 5 To secure the heatsink, use a T30 Security Torx to tighten the screws in a sequential order (1→2→3→4). **NOTE: When disassembling the heatsink, loosen the screws in reverse order (4→3→2→1).**

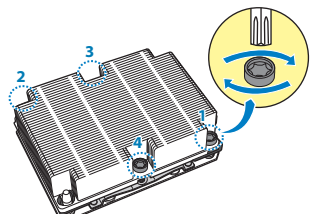


4 Install the Memory


- 1 Unlock the clips.

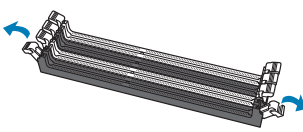


- 2 Insert the memory module.

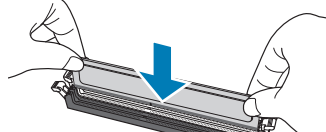


- 3 Lock the clips.

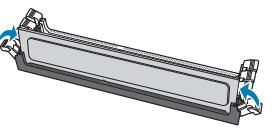

5 Install the Power Cable

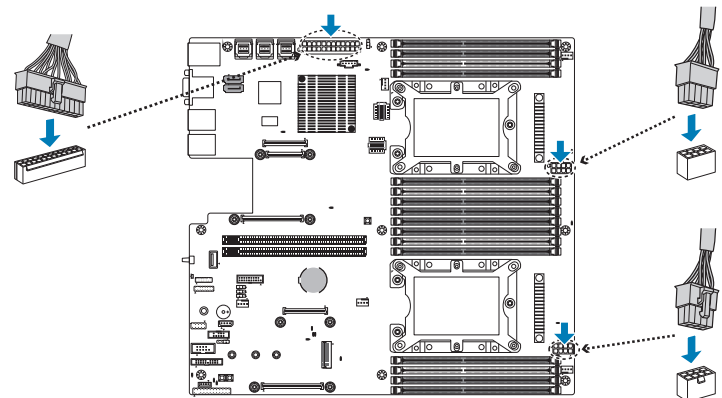


Jumper Cap On/Off

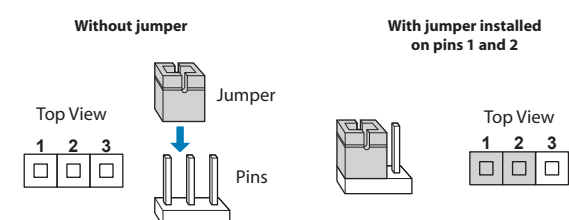

DOA/ RMA Reminder

NOTE: Please save and replace the CPU cover when returning the server board for service.

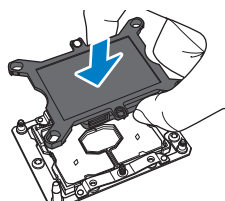

Locate the External I/O Ports

