
CALYPSO

Opce 22
PC-DMIS-Import

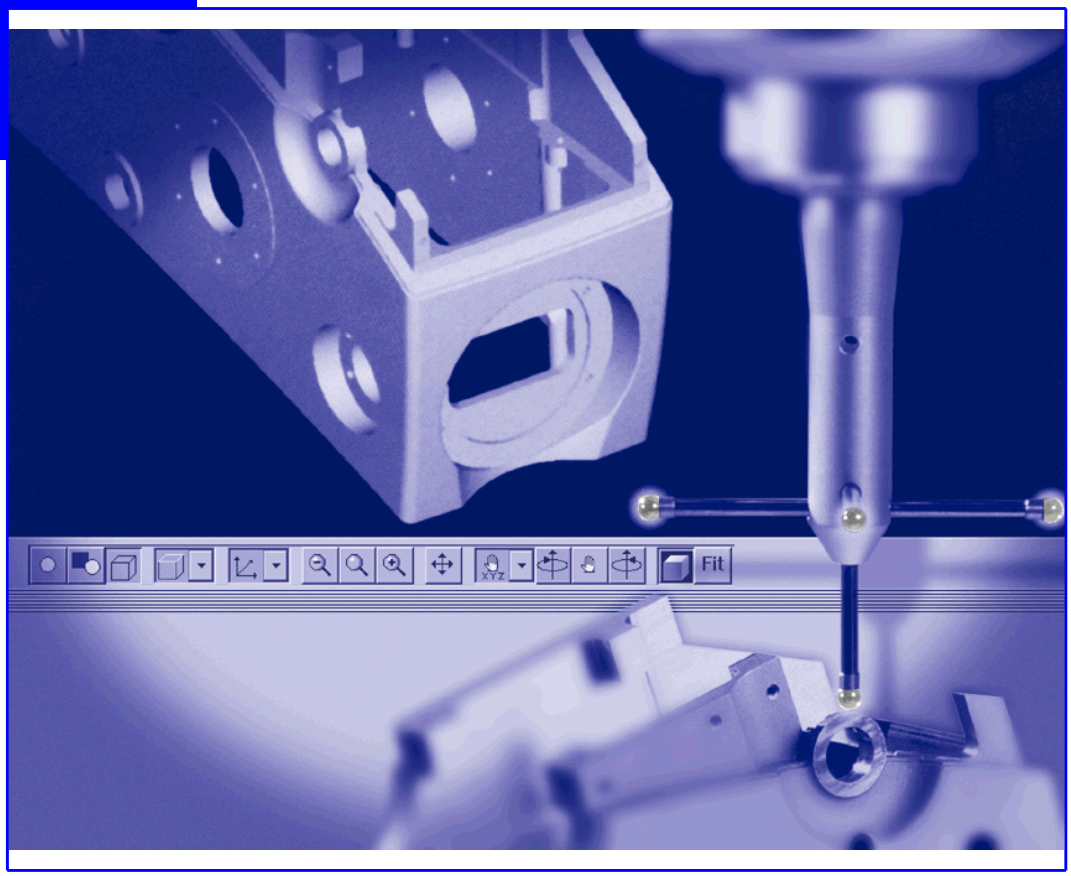

Návod k obsluze

ZEISS

Změny provedení a rozsahu dodávky souřadnicového měřicího stroje a jeho doplňkového vybavení, programových aplikací a příslušné dokumentace jsou vyhrazeny.

Šíření či rozmnožování této dokumentace ani využívání a sdělování jejího obsahu není dovoleno, pokud k tomu není dán výslovný souhlas. Porušení tohoto ustanovení zavazuje k náhradě škody.

Veškerá práva vyhrazena, zejména pro případ udělení patentu nebo registrace užitného vzoru.

Změny v této uživatelské příručce a technické změny souřadnicového měřicího stroje a jeho komponent jsou vyhrazeny.

Všechny názvy produktů jsou registrované ochranné známky nebo obchodní značky oprávněných majitelů.

I přes maximální péči není možné převzít odpovědnost za úplnost a správnost informací uvedených v tomto návodu, s výjimkou úmyslu.

CALYPSO
Verze 2018
Návod k obsluze
2018-06-05
61212-2921512

Obsah

Předmluva

O tomto návodu k obsluze ..... Předmluva 1

Grafická úprava bezpečnostních pokynů ..... Předmluva 3

Kapitola 1 PC-DMIS import (opce)

Základní údaje o importu PC-DMIS 1-2

Konfigurovat PC-DMIS import 1-3

Import PC-DMIS programu 1-4

Průběh importu z PC-DMIS 1-4

Importovat PC-DMIS program 1-4

Dodatečně upravit importovaný plán měření 1-6

Reference: PC-DMIS import 1-7

Calypso Konvertor 1-7

Hlášení 1-7

Možnosti 1-8

Podporované příkazy PC-DMIS 1-8

Rejstřík

Předmluva

O tomto návodu k obsluze

Program CALYPSO se skládá ze základního modulu a z různých doplňkových opcí pro speciální účely. Podle svých potřeb si můžete určit rozsah programového vybavení.

Tento návod k obsluze popisuje doplňkovou opci programu CALYPSO a předpokládá, že jste již seznámeni s návodem k obsluze pro základní modul programu CALYPSO.

Oznámení

Další opce programu CALYPSO jsou popsány v samostatných příručkách.

Referenční údaje o oknech a dialozích najdete v referenci dialogů v online nápovědě pro CALYPSO.

Einfach messen – und was Sie dazu wissen sollten, Eine Fibel der Messtechnik

Carl Zeiss, Unternehmensbereich Industrielle Messtechnik,

Objednací číslo: 612302-9002

Textové konvence

V této uživatelské příručce se používají následující textové konvence a symboly:

Příklad	Popis
Měřené elementy	Textový prvek grafického zobrazení na obrazovce.
Komentář	Tlačítko **Komentář** na obrazovce.
<název přístroje>	Variabilní text nebo zástupce pro název.
C:\windows\w.ini	Soubor w.ini v adresáři windows na diskové jednotce C:\.
Pro tento oddíl...	Zvýrazněný text, jehož obsah je obzvláště důležitý.

Příklad	Popis
➢ *Předmluva [⇨ Předmluva-1]*	Toto je křížový odkaz. Pokud sledujete příručku na obrazovce, kliknutím na odkaz přejdete na příslušné místo.
CNC → CNC start → CNC start	Povel **CNC start** v podmenu **CNC start** menu **CNC**.
CTRL+A	Stiskněte současně klávesu CTRLa písmeno A.

Symboly

V této příručce se používají tři speciální symboly, které vždy upozorňují na důležité informace. Tyto symboly se nacházejí v postranním sloupci vedle příslušného textu.

Podrobné vysvětlení bezpečnostních pokynů najdete v oddílu Grafická úprava bezpečnostních pokynů

Grafická úprava bezpečnostních pokynů

Bezpečnostní pokyny upozorňují na nebezpečí pro zdraví. Rozlišují se tři stupně: Nebezpečí, varování a upozornění. Všechny tři bezpečnostní pokyny jsou označeny stejným výstražným symbolem. Vedle tohoto symbolu je uvedeno pojmenování bezpečnostního pokynu - signální slovo. Dále jsou popsány použité bezpečnostní pokyny.

Struktura bezpečnostního pokynu

Bezpečnostní pokyn může obsahovat tyto prvky:

- Výstražný symbol a signální slovo: Nebezpečí, varování a upozornění
- Zdroj a příčina nebezpečí
- Následky pro uživatele při nerespektování bezpečnostního pokynu
- Potřebná opatření ze strany uživatele, aby nedošlo k potenciálním následkům
- Některé opatření může vést k průběžnému výsledku.
- Na konci všech opatření může být uveden konečný výsledek.

Riziko ohrožení zdraví



⚠ Nebezpečí

Výstražný symbol »Nebezpečí« upozorňuje na akutní ohrožení života a zdraví.

Jestliže není dodržen bezpečnostní pokyn a nastane popsané ohrožení, dojde k usmrcení nebo těžkému zranění.

Příklad: Zásah elektrickým proudem při vysokém napětí.



⚠ Varování

Výstražný symbol »Varování« upozorňuje na možné ohrožení života a zdraví.

Jestliže není dodržen bezpečnostní pokyn a nastane popsané ohrožení, může dojít k usmrcení nebo těžkému zranění.

Příklad: Zhmoždění (rozdrcení) těla způsobené velkými hmotnostmi.



⚠ Upozornění

Výstražný symbol »Upozornění« upozorňuje na ohrožení zdraví.

Jestliže není dodržen bezpečnostní pokyn a nastane popsané ohrožení, může dojít k lehkému nebo středně těžkému poranění.

Příklad: Lehká pohmoždění končetin způsobená malými hmotnostmi.

Riziko škod na majetku

Když nehrozí riziko pro zdraví, ale může být poškozen souřadnicový měřicí stroj nebo jiné komponenty, použije se následující symbol.



Tento symbol upozorňuje na možné poškození souřadnicového měřicího stroje.

Jestliže není dodržen bezpečnostní pokyn a nastane popsaná událost, může dojít k poškození souřadnicového měřicího stroje nebo některé jeho komponenty.

Příklad: Kolize pinoly se součástí.

Kapitola 1

PC-DMIS import (opce)

Tato kapitola obsahuje:

Základní údaje o importu PC-DMIS 1-2

Konfigurovat PC-DMIS import 1-3

Import PC-DMIS programu 1-4

Reference: PC-DMIS import 1-7

Základní údaje o importu PC-DMIS

Co je PC-DMIS®?

PC-DMIS® je měřicí program společnosti Hexagon Metrology a registrovaná obchodní značka společnosti Hexagon Metrology a Wilcox Associates, Inc.

Opce PC-DMIS import

CALYPSO může importovat program vytvořený softwarem PC-DMIS a převést ho na CALYPSO-plán měření. Předpokladem je licencovaná a funkční instalace softwaru PC-DMIS na vašem počítači.

Oznámení

PC-DMIS import je doplňková opce programu CALYPSO. Pokud ji chcete používat, potřebujete příslušnou licenci. Kontaktujte za tím účelem servis firmy ZEISS.

Oznámení

Opce 22 „PC-DMIS import“ se nesmí zaměňovat s doplňkovou opcí 5 „DMIS import“. Opce „DMIS import“ umožňuje měřicí plány vytvořené v DMIS (*D*imensional *M*easuring *I*nterface *S*tandard) konvertovat na plány měření programu CALYPSO.

Podmínky pro import

Při konverzi je PC-DMIS program analyzován a převeden na CALYPSO-plán měření s měřenými elementy, charakteristikami, strategiemi a souřadnými systémy.

Zda konvertor podporuje určitý příkaz PC-DMIS, se dozvíte v online nápovědě v oddílu ➢ *Podporované PC-DMIS příkazy [⇨ 1-8]*.


Chybný plán měření

Import PC-DMIS programů, ve kterých se názvy měřených elementů nebo charakteristik používají vícekrát, způsobuje závažné chyby.

Konfigurovat PC-DMIS import

Pro PC-DMIS import můžete nastavit různé předvolby.

1 Zvolte menu **Soubor → Import → PC-DMIS** a v okně **Calypso Converter** klikněte na tlačítko **Možnosti**.
Otevře se okno **Možnosti**.

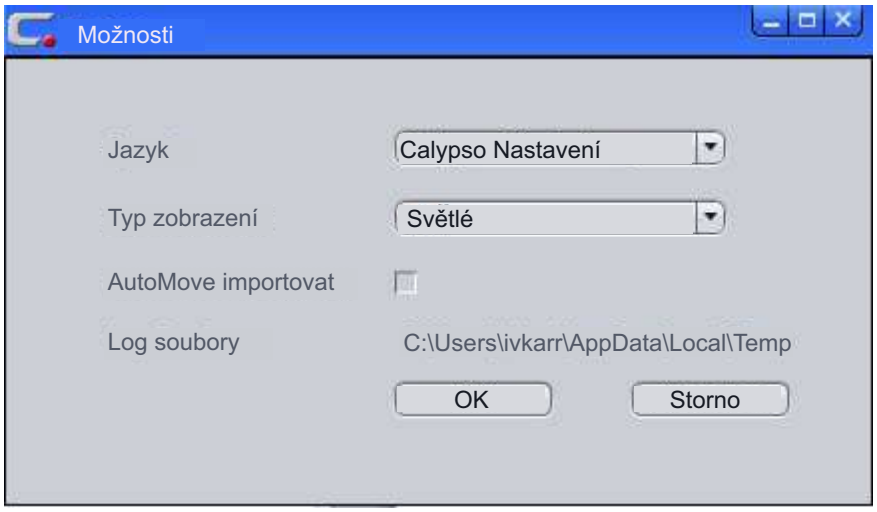

2 Nastavte požadovaný jazyk plochy programu.
Pomocí **Calypso Nastavení** převezme PC-DMIS import jazyk nastavený v softwaru CALYPSO.

3 Nastavte požadovaný vzhled programu.

4 Aktivujte **AutoMove importovat**, pokud chcete jako mezipolohy importovat do strategie automatické pojezdy k elementu a od elementu v PC-DMIS programu.

5 Potvrďte tlačítkem **OK**.

Nová nastavení se ihned projeví.

Import PC-DMIS programu

Průběh importu z PC-DMIS

Aby byl importován PC-DMIS program, stačí zvolit položku menu **Soubor → Import → PC-DMIS** a specifikovat příslušný soubor.

Oznámení

Musí být nainstalována funkční a licencovaná verze softwaru PC-DMIS.

Po importu byste měli plán měření ihned uložit, protože se nejprve nachází jen v operační paměti počítače.

Po importu můžete zobrazit a uložit hlášení týkající se konverze.

Následující prvky plánu měření nemohou být z PC-DMIS programu vytvořeny a musíte je po importu sami definovat:


- Základní systém
- Bezpečnostní kvádr
- Bezpečnostní roviny
- Přiřazení snímačů

Importovat PC-DMIS program

Podmínky

- Na vašem počítači je nainstalována funkční a licencovaná verze softwaru PC-DMIS.

1 Zvolte menu **Soubor → Import → PC-DMIS**.
Otevře se okno **Calypso Konvertor**.

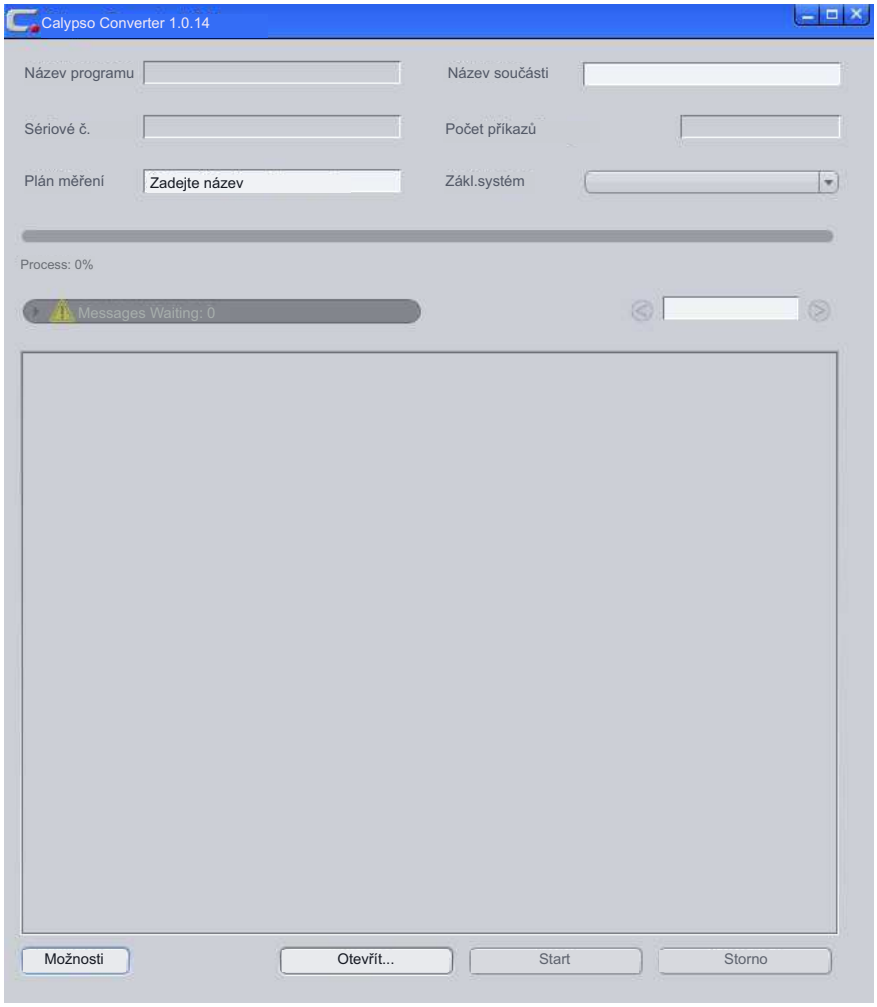

2 Klikněte na tlačítko **Otevřít** a vyberte PC-DMIS program, který má být importován.
Daný program je načten a zobrazen.
V horní části okna jsou uvedeny tyto údaje: název programu, název součásti a sériové číslo z PC-DMIS a počet příkazů v aktuálním programu.

3 Má-li se v programu vyhledat určitý text, zadejte text do pole a pomocí kurzorových tlačítek procházejte zobrazenými nalezenými výskyty.



4 V sekci **Plán měření** zadejte název CALYPSO-plánu měření.

5 V sekci **Základní systém** vyberte název souřadného systému, který má program CALYPSO použít jako základní systém.
Tento základní souřadný systém musíte při dodatečné úpravě plánu měření ještě definovat.

6 Pro zahájení konverze klikněte na tlačítko **Start**.

PC-DMIS program je konvertován.
Po ukončení se ukáže hlášení.

7 Potvrďte je.
Ukáže se výsledek konverze.
V seznamu **Programové příkazy** jsou uvedeny všechny příkazy v PC-DMIS programu. Pokud se při konverzi vyskytl problém, je to uvedeno u příslušného příkazu. V tom případě je tato větev zobrazena rozevřená.



8 Když chcete zobrazit zprávy týkající se konverze, klikněte na ikonu vedle indikace zpráv.
Otevře se okno s hlášeními.



9 Pomocí ikonek v liště zápatí můžete hlášení zobrazit a uložit.



10 Uložte nový plán měření v programu CALYPSO.



11 Aby se zavřel PC-DMIS import, klikněte na ikonu **Zavřít**.

Dodatečně upravit importovaný plán měření

Ne všechny prvky PC-DMIS programu mohou být převzaty. Plán měření musíte po importu do CALYPSO upravit, aby mohl být prováděn.

K tomu jsou potřebné alespoň tyto kroky:

1 Analyzujte hlášení, která se vyskytla při konverzi. Za určitých okolností budete muset části měřicího programu v programu CALYPSO přeprogramovat.

2 Upravte v programu CALYPSO tyto prvky plánu měření

- Definujte základní systém.
- Definujte bezpečnostní kvádr.
- Přiřaďte měřeným elementům bezpečnostní roviny.
- Přiřaďte měřeným elementům snímače, které se mají použít.

3 Nechte poté plán měření jednou proběhnout v simulaci, aby byly vyloučeny další chyby.

Reference: PC-DMIS import

Calypso Konvertor

V tomto dialogovém okně spustíte import PC-DMIS programu.

Dialogový prvek	Funkce
Název programu	Ukáže při importu název PC-DMIS programu.
Název součásti	Ukáže při importu název součásti z PC-DMIS programu.
Sériové číslo	Ukáže při importu sériové číslo z PC-DMIS programu.
Počet instrukcí	Ukáže při importu počet instrukcí v PC-DMIS programu.
Plán měření	Zde zadejte název nového CALYPSO-plánu měření.
Základní systém	Zde vyberte název základního souřadného systému pro nový CALYPSO-plán měření.
Indikace průběhu	Zobrazuje průběh konverze.
Indikace zpráv	Zobrazí počet zpráv vytvořených během konverze. Kliknutím na ikonu zobrazíte zprávy v samostatném okně.
Najít 	Zde zadejte hledaný text a pomocí kurzorových tlačítek procházejte zobrazenými nalezenými výskyty.
Programové příkazy	Zobrazuje zpracované příkazy PC-DMIS ve stromové struktuře. Problémy, které se vyskytly při konverzi, jsou poznamenány u příslušného příkazu.
Možnosti	Otevře okno **Možnosti** s obecnými předvolbami pro PC-DMIS import.
Otevřít	Otevře okno pro výběr PC-DMIS programu.
Start	Spustí konverzi vybraného PC-DMIS programu.
Storno	Zavře okno a ukončí konverzi bez uložení.

Hlášení

V tomto dialogovém okně zobrazíte zprávy, které vznikly během konverze.

Dialogový prvek	Funkce
Titulní řádek	Uvádí počet hlášení. Ikonou opět okno zavřete.

Dialogový prvek	Funkce
Seznam hlášení	Zobrazí všechny zprávy s příslušným příkazem PC-DMIS programu a s vytvořeným komentářem.
	Uloží hlášení do textového souboru.
	Vymaže všechna hlášení.

Možnosti

V tomto dialogovém okně zadáváte předvolby pro PC-DMIS import.

Dialogový prvek	Funkce
Jazyk	Definuje jazyk plochy programu. Pomocí **Calypso Nastavení** převezmete jazyk nastavený v softwaru CALYPSO.
Typ zobrazení	Určuje styl zobrazení oken programu.
AutoMove importovat	Importuje automatické pojezdy k elementu a od elementu z PC-DMIS programu jako mezipolohy do strategie.
Log soubory	Uvádí adresář s log soubory. Tyto soubory obsahují důležité informace při výskytu problémů určené pro servis Carl Zeiss.
OK	Zavře toto okno, změny se ihned projeví.
Storno	Zavře okno, změny se neprojeví.

Podporované příkazy PC-DMIS

Příkazy PC-DMIS jsou při konverzi zpracovány, jak je uvedeno v této tabulce.

Příkaz PC-DMIS	Podpora	Vyhodnocení
ADJUST_FILTER	Ignored.	
ANALYSIS_VIEW	Ignored.	
ANGLE_HIT	Partially Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
ANYORDER_EXECUTETOL	Ignored.	
ARRAY_INDEX	Ignored.	
ASSIGNMENT	Ignored.	
ATTACH_PROGRAM	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
AUTO_ANGLE_FEATURE, CONTACT_ANGLE_POINT_FEATURE	Supported.	Imported as several features and constructions.
AUTO_BLOB	Ignored.	
AUTO_CIRCLE, MEASURED_CIRCLE, CONTACT_CIRCLE_FEATURE, GENERIC_CIRCLE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM and INOUT_TYPE are imported into a circle. The feature's probing points are imported.
AUTO_CONE, MEASURED_CONE, CONTACT_CONE_FEATURE, GENERIC_CONE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, INOUT_TYPE,THEO_ANGLE and THEO_HEIGHT are imported into a cone. The feature's probing points are imported.
AUTO_CORNER_FEATURE, CONTACT_CORNER_POINT_FEATURE	Supported.	Imported as several features and constructions.
AUTO_CYLINDER, MEASURED_CYLINDER, CONTACT_CYLINDER_FEATURE, GENERIC_CYLINDER	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM, INOUT_TYPE and THEO_LENGTH are imported into a cylinder. The feature's probing points are imported.
AUTO_EDGE_FEATURE, CONTACT_EDGE_POINT_FEATURE	Supported.	Imported as several features and constructions.
AUTO_ELLIPSE, MEASURED_ELLIPSE, CONTACT_ELLIPSE_FEATURE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, SLOTVEC_I, SLOTVEC_J, SLOTVEC_K, THEO_WIDTH, THEO_LENGTH and INOUT_TYPE are imported into an ellipse. The feature's probing points are imported.
AUTO_FLUSH_GAP	Ignored.	
AUTO_HIGH_POINT_FEATURE, CONTACT_HIGH_POINT_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a theoretical point. Must be adjusted in Calypso!
AUTO_LINE, MEASURED_LINE, CONTACT_LINE_FEATURE, GENERIC_LINE	Supported.	ID, THEO_SX, THEO_SY, THEO_SZ, THEO_I, THEO_J, THEO_K, SURFVEC_I, SURFVEC_J, SURFVEC_K and THEO_LENGTH are imported into a line. The feature's probing points are imported.
AUTO_NOTCH, CONTACT_SLOT_NOTCH_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_WIDTH and THEO_LENGTH are imported into a square slot. The feature's probing points are imported.

Příkaz PC-DMIS	Podpora	Vyhodnocení
AUTO_PLANE, MEASURED_PLANE, CONTACT_PLANE_FEATURE, GENERIC_PLANE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a plane. The feature's probing points are imported.
AUTO_POLYGON	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM and INOUT_TYPE are imported into a circle. The feature's probing points are imported.
AUTO_PROFILE_2D	Ignored.	
AUTO_ROUND_SLOT, MEASURED_ROUND_SLOT, CONTACT_SLOT_ROUND_FEATURE, GENERIC_ROUND_SLOT	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, SLOTVEC_I, SLOTVEC_J, SLOTVEC_K, THEO_WIDTH, THEO_LENGTH and INOUT_TYPE are imported into a round slot. The feature's probing points are imported.
AUTO_SPHERE, MEASURED_SPHERE, CONTACT_SPHERE_FEATURE, GENERIC_SPHERE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, INOUT_TYPE and THEO_DIAM are imported into a sphere. The feature's probing points are imported.
AUTO_SQUARE_SLOT, MEASURED_SQUARE_SLOT, CONTACT_SLOT_SQUARE_FEATURE, GENERIC_SQUARE_SLOT	Supported.	ID THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM and INOUT_TYPE are imported into a rectangular slot. The feature's probing points are imported.
AUTO_SURFACE_FEATURE, CONTACT_SURFACE_POINT_FEATURE	Supported.	Imported as several features and constructions.
AUTO_VECTOR_FEATURE, MEASURED_POINT, CONTACT_VECTOR_POINT_FEATURE, GENERIC_POINT	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a point. The feature's probing points are imported.
AUTOCALIB_MASTERSLAVE_COMMAND	Ignored.	
AUTOCALIB_PROBE_COMMAND	Ignored.	
AUTOTRIGGERCOMMAND	Ignored.	
BASIC_HIT	Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
BASIC_SCAN_OBJECT	Supported.	All scanning parameters must be adjusted in Calypso.

Příkaz PC-DMIS	Podpora	Vyhodnocení
DCCSCAN_OBJECT	Supported.	All scanning parameters must be adjusted in Calypso.
CONST_SET	Ignored.	ID and REF_ID's are converted into a surface features using the hitpoint of the REF_ID features.
FILTER_SET	Ignored.	
BASIC_SCRIPT	Ignored.	
BF2D_ALIGN	Ignored.	ID and the REF_IDs are imported into a 3D Bestfit Alignment.
BF3D_ALIGN	Ignored.	ID and the REF_IDs are imported into a 3D Bestfit Alignment.
BUNDLE_ALIGN	Ignored.	
BFUSER_ALIGN	Ignored.	
CALIB_ASSEMBLY	Ignored.	
CALIB_SPHERE	Ignored.	
CALIBRATEROTAB_COMMAND	Ignored.	
CALL_SUBROUTINE	Ignored.	
CASE_COMMAND	Ignored.	
CHECK_DISTANCE	Ignored.	
CLAMP	Ignored.	
CLEARANCE_PLANE	Ignored.	
CNC_PASS_THRU_COMMAND	Ignored.	
CNC_READ_VARIABLE	Ignored.	
CNC_SELECT_TABLE_COMMAND	Ignored.	
CNC_SET_PROTECTION_COMMAND	Ignored.	
CNC_UPDATE_TOOLOFSET	Ignored.	
CNC_USE_WORKOFSET	Ignored.	
CNC_UPDATE_WORKOFSET	Ignored.	
CNC_WRITE_VARIABLE	Ignored.	
COLUMN132_DISPLAY	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
CONST_ALN_LINE	Supported.	ID, THEO_SX, THEO_SY, THEO_SZ, THEO_I, THEO_J, THEO_K, SURFVEC_I, SURFVEC_J, SURFVEC_K and THEO_LENGTH are imported into a theoretical line.
CONST_ALN_PLANE	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a theoretical plane.
CONST_BF_CIRCLE, CONST_BFRE_CIRCLE	Supported.	ID and REF_ID are imported into a circle feature. REF_ID features will be treated as points.
CONST_BF_CONE, CONST_BFRE_CONE	Supported.	ID and REF_ID are imported into a cone feature. REF_ID features will be treated as points.
CONST_BF_CYLINDER, CONST_BFRE_CYLINDER	Supported.	ID and REF_ID are imported into a cylinder feature. REF_ID features will be treated as points when enough features are supplied.
CONST_BF_LINE, CONST_BFRE_LINE	Supported.	ID and REF_ID are imported into a line feature. REF_ID features will be treated as points.
CONST_BF_PLANE, CONST_BFRE_PLANE	Supported.	ID and REF_ID are imported into a plane feature. REF_ID features will be treated as points.
CONST_BF_SPHERE, CONST_BFRE_SPHERE	Supported.	ID and REF_ID are imported into a sphere feature. REF_ID features will be treated as points.
CONST_CAST_CIRCLE	Supported.	Converted into a theoretical circle with actual values being used from the REF_ID feature.
CONST_CAST_CONE	Supported.	Converted into a theoretical cone with actual values being used from the REF_ID feature.
CONST_CAST_CYLINDER	Supported.	Converted into a theoretical cylinder with actual values being used from the REF_ID feature.
CONST_CAST_LINE	Supported.	Converted into a theoretical line with actual values being used from the REF_ID feature.
CONST_CAST_PLANE	Supported.	Converted into a theoretical plane with actual values being used from the REF_ID feature.
CONST_CAST_POINT	Supported.	Converted into a theoretical point with actual values being used from the REF_ID feature.
CONST_CAST_SPHERE	Supported.	Converted into a theoretical sphere with actual values being used from the REF_ID feature.
CONST_CONE_CIRCLE	Partially Supported.	ID, CIRC_TYPE and REF_ID Converted into coneAddition, need to be checked in Calypso.
CONTACT_POLYGON_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM and INOUT_TYPE are imported into a circle. The feature's probing points are imported.

Příkaz PC-DMIS	Podpora	Vyhodnocení
CONST_CORNER_POINT	Ignored.	ID and REF_ID's are imported into an intersection element.
CONST_DROP_POINT	Supported.	ID and REF_ID's imported into a theoretical point with PCM formula for actuals.
CONST_HIPNT_PLANE	Partially Supported.	ID and REF_ID's imported into an outer tangential plane.
CONST_INT_CIRCLE	Supported.	ID and REF_ID's imported into intersection feature.
CONST_INT_LINE	Supported.	ID and REF_ID's imported into intersection feature.
CONST_INT_POINT	Supported.	ID and REF_ID's imported into intersection feature.
CONST_MID_POINT	Supported.	ID and REF_ID's imported into symmetry feature.
CONST_MID_LINE	Supported.	ID and REF_ID's imported into symmetry feature.
CONST_MID_PLANE	Supported.	ID and REF_ID's imported into symmetry feature.
CONST_MIN_CIRCLE_SCAN	Ignored.	
CONST_OFF_LINE	Partially Supported.	ID and REF_ID are imported into a line feature.
CONST_OFF_PLANE	Partially Supported.	ID and REF_ID are imported into a plane feature.
CONST_OFF_POINT	Supported.	ID, REF_ID and F_OFFSET are imported into a theoretical point with PCM.
CONST_ORIG_POINT	Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a theoretical point.
CONST_PIERCE_POINT	Supported.	ID and REF_ID's are imported into an intersection feature.
CONST_PLTO_LINE	Supported.	ID and REF_ID features are imported into a theoretical line with PCM. One of the REF_ID features must reduce to a line.
CONST_PLTO_PLANE	Supported.	ID and REF_ID features are imported into a theoretical plane with PCM. One of the REF_ID features must be a plane.

Příkaz PC-DMIS	Podpora	Vyhodnocení
CONST_PROJ_CIRCLE	Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PROJ_CONE	Partially Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PROJ_CYLINDER	Partially Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PROJ_LINE	Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PROJ_POINT	Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PROJ_SPHERE	Partially Supported.	ID and REF_ID's are imported into a projection feature.
CONST_PRTO_LINE	Supported.	ID and REF_ID features are imported into a theoretical line with PCM. One of the REF_ID features must reduce to a line.
CONST_PRTO_PLANE	Supported.	ID and REF_ID features are imported into a theoretical plane with PCM. One of the REF_ID features must reduce to a line.
CONST_REV_CIRCLE	Supported.	ID and REF_ID are imported into a theoretical circle with PCM.
CONST_REV_CONE	Supported.	ID and REF_ID are imported into a theoretical cone with PCM.
CONST_REV_CYLINDER	Supported.	ID and REF_ID are imported into a theoretical cylinder with PCM.
CONST_REV_LINE	Supported.	ID and REF_ID are imported into a theoretical line with PCM.
CONST_REV_PLANE	Supported.	ID and REF_ID are imported into a theoretical plane with PCM.
CONST_REV_SPHERE	Supported.	ID and REF_ID are imported into a theoretical sphere with PCM.
CONST_ROUND_SLOT	Supported.	ID and REF_ID are imported into a slot feature. REF_ID features will be treated as points. With less than 3 REF_ID the feature hitpoints are used.
CONST_SCAN_SEG_ARC	Ignored.	
CONST_SCAN_SEG_LINE	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
CONST_TANCIRCLES_CIRCLE	Ignored.	
CONST_TANLINES_CIRCLE	Ignored.	
CONST_VECT_DIST_POINT	Supported.	ID and REF_ID's are imported into a theoretical point with PCM.
CORNER_HIT	Partially Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
CURVE_FEATURE	Ignored.	
DATDEF_COMMAND	Ignored.	Datums are replaced by the corresponding features when needed.
DB_QUERY	Ignored.	
DEFAULT_CASE_COMMAND	Ignored.	
DIMENSION_2D_ANGLE	Supported.	ID, F_PLUS_TOL, F_MINUS_TOL and REF_ID's are imported into an angle between characteristic. Axis references are converted into lines.
DIMENSION_2D_DISTANCE	Supported.	ID, F_PLUS_TOL, F_MINUS_TOL and REF_ID's are imported into a distance characteristic.
DIMENSION_3D_DISTANCE	Supported.	ID, F_PLUS_TOL, F_MINUS_TOL and REF_ID's are imported into a distance characteristic.
DIMENSION_A_LOCATION	Supported.	ID, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into an angle characteristic. The characteristic is usually renamed.
DIMENSION_ANGULARITY	Supported.	ID, F_PLUS_TOL, ANGULARITY_NOM_ANGLE and REF_ID's are imported into an angularity characteristic.
DIMENSION_COAXIALITY	Supported.	ID, F_PLUS_TOL and REF_ID's are imported into an coaxiality characteristic.
DIMENSION_CONCENTRICITY	Supported.	ID, F_PLUS_TOL and REF_ID's are imported into an concentricity characteristic.
DIMENSION_D_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a diameter characteristic. The characteristic is usually renamed.
DIMENSION_END_LOCATION	Ignored.	
DIMENSION_FLATNESS	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a flatness characteristic.

Příkaz PC-DMIS	Podpora	Vyhodnocení
DIMENSION_FLATNESS_LOCATION	Partially Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a flatness characteristic. The characteristic is usually renamed.
DIMENSION_FORMAT	Ignored.	
DIMENSION_H_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a second diameter characteristic for ellipses. The characteristic is usually renamed.
DIMENSION_INFORMATION	Ignored.	
DIMENSION_KEYIN	Ignored.	
DIMENSION_L_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a size characteristic for ellipses and slots. The characteristic is usually renamed.
DIMENSION_PA_LOCATION	Supported.	ID, NOMINAL, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a polar angle characteristic. The characteristic is usually renamed.
DIMENSION_PARALLELISM	Supported.	ID, F_PLUS_TOL, TP_MODIFIER and REF_ID's are imported into an parallelism characteristic.
DIMENSION_PERPENDICULARITY	Supported.	ID, F_PLUS_TOL, TP_MODIFIER and REF_ID's are imported into an perpendicularity characteristic.
DIMENSION_PR_LOCATION	Supported.	ID, NOMINAL, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a polar radius characteristic. The characteristic is usually renamed.
DIMENSION_PROFILE	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a profile of a line characteristic.
DIMENSION_PROFILE_LINE	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a profile of a line characteristic.
DIMENSION_PROFILE_SURFACE	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a profile of a surface characteristic.
DIMENSION_R_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a radius characteristic. The characteristic is usually renamed.
DIMENSION_ROUNDNESS	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a circularity characteristic.
DIMENSION_ROUNDNESS_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a circularity characteristic. The characteristic is usually renamed.

Příkaz PC-DMIS	Podpora	Vyhodnocení
DIMENSION_RS_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a form characteristic. The characteristic is usually renamed.
DIMENSION_RT_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a form characteristic. The characteristic is usually renamed.
DIMENSION_RUNOUT	Supported.	ID, F_PLUS_TOL and REF_ID are imported into a runout characteristic.
DIMENSION_TOTAL_RUNOUT	Ignored.	
DIMENSION_CIRCULAR_RUNOUT	Supported.	ID, F_PLUS_TOL and REF_ID are imported into a runout characteristic.
DIMENSION_S_LOCATION	Partially Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a form characteristic. The characteristic is usually renamed.
DIMENSION_START_LOCATION	Ignored.	
DIMENSION_STRAIGHTNESS	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a straightness characteristic.
DIMENSION_STRAIGHTNESS_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a straightness characteristic. The characteristic is usually renamed.
DIMENSION_T_LOCATION	Supported.	ID, F_MINUS_TOL, F_PLUS_TOL and REF_ID are imported into a form characteristic. The characteristic is usually renamed.
DIMENSION_TRUE_D1_LOCATION	Supported.	REF_ID and TP_MODIFIER imported for 1st Datum.
DIMENSION_TRUE_D2_LOCATION	Supported.	REF_ID and TP_MODIFIER imported for 2nd Datum.
DIMENSION_TRUE_D3_LOCATION	Supported.	REF_ID and TP_MODIFIER imported for 3rd Datum.
DIMENSION_TRUE_DD_LOCATION	Ignored.	
DIMENSION_TRUE_DF_LOCATION	Ignored.	
DIMENSION_TRUE_DIAM_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, TP_MODIFIER and REF_ID are imported into a position characteristic. The characteristic is usually renamed.

Příkaz PC-DMIS	Podpora	Vyhodnocení
DIMENSION_TRUE_END_POSITION	Ignored.	
DIMENSION_TRUE_FLATNESS_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a flatness characteristic. The characteristic is usually renamed.
DIMENSION_TRUE_LD_LOCATION	Ignored.	
DIMENSION_TRUE_LF_LOCATION	Ignored.	
DIMENSION_TRUE_PA_LOCATION	Ignored.	
DIMENSION_TRUE_PR_LOCATION	Ignored.	
DIMENSION_TRUE_ROUNDNESS_LOCATION		ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a circularity characteristic. The characteristic is usually renamed.
DIMENSION_CYLINDRICITY	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a cylindricity characteristic.
DIMENSION_TRUE_START_POSITION	Ignored.	
DIMENSION_TRUE_STRAIGHTNESS_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL and REF_ID are imported into a straightness characteristic. The characteristic is usually renamed.
DIMENSION_TRUE_WD_LOCATION	Ignored.	
DIMENSION_TRUE_WF_LOCATION	Ignored.	
DIMENSION_TRUE_X_LOCATION	Ignored.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a coordinate tolerance. The characteristic is usually renamed.
DIMENSION_TRUE_Y_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a coordinate tolerance. The characteristic is usually renamed.
DIMENSION_TRUE_Z_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a coordinate tolerance. The characteristic is usually renamed.
DIMENSION_V_LOCATION	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
DIMENSION_X_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a X coordinate characteristic. The characteristic is usually renamed.
DIMENSION_Y_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a Y coordinate characteristic. The characteristic is usually renamed.
DIMENSION_Z_LOCATION	Supported.	ID, NOMINAL, F_PLUS_TOL, F_MINUS_TOL and REF_ID are imported into a Z coordinate characteristic. The characteristic is usually renamed.
DISPLAY_METAFILE	Ignored.	
DISPLAYPRECISION	Ignored.	
DO_COMMAND	Ignored.	
EDGE_HIT	Partially Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
ELSE_COMMAND	Ignored.	
ELSE_IF_COMMAND	Ignored.	
END_ALIGN	Ignored.	
END_CASE_COMMAND	Ignored.	
END_DEFAULT_CASE_COMMAND	Ignored.	
END_ELSE_COMMAND	Ignored.	
END_ELSE_IF_COMMAND	Ignored.	
END_HYPER_FORM	Ignored.	
END_HYPER_REPORT	Ignored.	
END_IF_COMMAND	Ignored.	
END_MEASURED_FEATURE	Ignored.	
END_MOVE_SWEEP	Ignored.	
END_PROGRAM	Ignored.	
END_SCRIPT	Ignored.	
END_SELECT_COMMAND	Ignored.	
ENDWHILE_COMMAND	Ignored.	
EQUATE_ALIGN	Ignored.	
EW_GROUP_END	Ignored.	
EW_GROUP_START	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
EXTERNAL_COMMAND	Ignored.	
FEATURE_CONTROL_FRAME	Supported.	Tolerance features, Datums, Size of Tolerancezone and material modifiers are imported. The second tier datums needs to be adjusted manually in Calypso.
FILE_IO_OBJECT	Ignored.	
FLY_MODE	Ignored.	
GAP_ONLY	Ignored.	
GENERIC_CONSTRUCTION	Ignored.	
GET_PROBE_DATA	Ignored.	
GOTO_COMMAND	Ignored.	
HYPER_CUSTOM	Ignored.	
HYPER_FORM	Ignored.	
HYPER_LEGACY	Ignored.	
HYPER_REPORT	Ignored.	
HYPER_TEMPLATE	Ignored.	
IF_BLOCK_COMMAND	Ignored.	
IF_GOTO_COMMAND	Ignored.	
IGNOREMOTIONERRORS	Ignored.	
IGNOREROTAB_COMMAND	Ignored.	
INBETWEEN_TOL	Ignored.	
IOCHANNELCOMMAND	Ignored.	
ITER_ALIGN	Supported.	
LABEL_CMD	Ignored.	
LASER_CIRCLE_FEATURE	Partially Supported.	
LASER_FLUSH_AND_GAP_FEATURE	Ignored.	
LASER_PLANE_FEATURE	Partially Supported.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
LASER_SLOT_FEATURE	Partially Supported.	
LASER_SPHERE_FEATURE	Partially Supported.	
LASER_SURFACE_POINT_FEATURE	Partially Supported.	
LEAPFROG	Ignored.	
LEVEL_ALIGN	Supported.	
LOAD_COLUMN	Ignored.	
LOAD_FIXTURE	Ignored.	
LOAD_MACHINE	Ignored.	
LOOP_END	Ignored.	
LOOP_START	Ignored.	
MAN_DCC_MODE	Ignored.	
MANRETRACT	Ignored.	
MANSCAN_OBJECT	Ignored.	
MOVE_ALL	Ignored.	
MEASURED_SET	Ignored.	
MOVE_CIRCULAR	Ignored.	
MOVE_CLEARP	Ignored.	
MOVE_EXCLUSIVE	Ignored.	
MOVE_INCREMENT	Ignored.	
MOVE_PH9_OFFSET	Ignored.	
MOVE_POINT	Ignored.	
MOVE_ROTAB	Ignored.	
MOVE_SPEED	Ignored.	
MOVE_SWEEP_POINT	Ignored.	
MOVE_SYNC	Ignored.	
ONERROR	Ignored.	
OPTIONMOTION	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
OPTIONPROBE	Ignored.	
POINT_INFO	Ignored.	
POINTCLOUD	Ignored.	
POINTCLOUD_ALIGN	Ignored.	
POINTCLOUD_OPER	Ignored.	
POLARVECTORCOMP	Ignored.	
POSITIVE_REPORTING	Ignored.	
PREHIT_DISTANCE	Ignored.	
PRINT_FORM_FEED	Ignored.	
PRINT_REPORT	Ignored.	
PROBE_COMPENSATION	Ignored.	
READ_POINT	Partially Supported.	
RECALL_ALIGN	Supported.	
RECALL_VIEWSET	Ignored.	
RETRACT_DISTANCE	Ignored.	
RETROLINEAR_ONLY	Ignored.	
RMEAS_MODE	Ignored.	
ROTATE_ALIGN	Supported.	
ROTATE_CIRCLE_ALIGN	Supported.	
ROTATEOFF_ALIGN	Supported.	
SAVE_ALIGN	Ignored.	
SCAN_SPEED	Ignored.	
SELECT_COMMAND	Ignored.	
SET_ACTIVE_TIP	Ignored.	
SET_COMMENT	Partially Supported.	
SET_WORKPLANE	Ignored.	

Příkaz PC-DMIS	Podpora	Vyhodnocení
SIMULTANEOUS_EVALUATION	Ignored.	
SPC_QUERY	Ignored.	
START_ALIGN	Ignored.	ID is imported to build coordinate systems.
START_MOVE_SWEEP	Ignored.	
START_SUBROUTINE	Ignored.	
STATISTICS	Ignored.	
SURFACE_FEATURE	Ignored.	
SURFACE_HIT	Partially Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
TABLE_FORMAT	Ignored.	
TEMP_COMP	Ignored.	
TOUCH_SPEED	Ignored.	
TRACEFIELD	Ignored.	
TRACKER_LEVEL_TO_GRAVITY	Ignored.	
TRANS_ALIGN	Supported.	ID, AXIS and REF_ID are imported. The alignment is usually renamed.
TRANSOFF_ALIGN	Supported.	ID, AXIS and F_OFFSET are imported. The alignment is usually renamed.
TRIGGER_PLANE_COMMAND	Ignored.	
TRIGGER_TOLERANCE	Ignored.	
UNTIL_COMMAND	Ignored.	
VECTOR_HIT	Partially Supported.	THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a hitpoint.
VIDEOSETUP	Ignored.	
VIEWSET	Ignored.	
VISION_BLOB_FEATURE	Ignored.	
VISION_CIRCLE_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, THEO_DIAM and INOUT_TYPE are imported into a circle. No strategy is imported.

Příkaz PC-DMIS	Podpora	Vyhodnocení
VISION_EDGE_POINT_FEATURE	Partially Supported.	This is treated as AUTO_EDGE_FEATURE.
VISION_LINE_FEATURE	Partially Supported.	ID, THEO_SX, THEO_SY, THEO_SZ, THEO_I, THEO_J, THEO_K, SURFVEC_I, SURFVEC_J, SURFVEC_K and THEO_LENGTH are imported into a line. No strategy is imported.
VISION_PLANE_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a plane. No strategy is imported.
VISION_PROFILE_2D_FEATURE	Ignored.	
VISION_SLOT_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J, THEO_K, SLOTVEC_I, SLOTVEC_J, SLOTVEC_K, THEO_WIDTH, THEO_LENGTH and INOUT_TYPE are imported into a round slot. No strategy is imported.
VISION_SURFACE_POINT_FEATURE	Partially Supported.	ID, THEO_X, THEO_Y, THEO_Z, THEO_I, THEO_J and THEO_K are imported into a point. No strategy is imported.
WHILE_COMMAND	Ignored.	

Rejstřík

A

ADJUST_FILTER 1-8

ANALYSIS_VIEW 1-8

ANGLE_HIT 1-8

ANYORDER_EXECUTETOL 1-8

ARRAY_INDEX 1-8

ASSIGNMENT 1-8

ATTACH_PROGRAM 1-8

AUTO_ANGLE_FEATURE, CONTACT_ANGLE_POINT_FEATURE 1-9

AUTO_BLOB 1-9

AUTO_CIRCLE, MEASURED_CIRCLE, CONTACT_CIRCLE_FEATURE, GENERIC_CIRCLE 1-9

AUTO_CONE, MEASURED_CONE, CONTACT_CONE_FEATURE, GENERIC_CONE 1-9

AUTO_CORNER_FEATURE, CONTACT_CORNER_POINT_FEATURE 1-9

AUTO_CYLINDER, MEASURED_CYLINDER, CONTACT_CYLINDER_FEATURE, GENERIC_CYLINDER 1-9

AUTO_EDGE_FEATURE, CONTACT_EDGE_POINT_FEATURE 1-9

AUTO_ELLIPSE, MEASURED_ELLIPSE, CONTACT_ELLIPSE_FEATURE 1-9

AUTO_FLUSH_GAP 1-9

AUTO_HIGH_POINT_FEATURE, CONTACT_HIGH_POINT_FEATURE 1-9

AUTO_LINE, MEASURED_LINE, CONTACT_LINE_FEATURE, GENERIC_LINE 1-9

AUTO_NOTCH, CONTACT_SLOT_NOTCH_FEATURE 1-9

AUTO_PLANE, MEASURED_PLANE, CONTACT_PLANE_FEATURE, GENERIC_PLANE 1-10

AUTO_POLYGON 1-10

AUTO_PROFILE_2D 1-10

AUTO_ROUND_SLOT, MEASURED_ROUND_SLOT, CONTACT_SLOT_ROUND_FEATURE, GENERIC_ROUND_SLOT 1-10

AUTO_SPHERE, MEASURED_SPHERE, CONTACT_SPHERE_FEATURE, GENERIC_SPHERE 1-10

AUTO_SQUARE_SLOT, MEASURED_SQUARE_SLOT, CONTACT_SLOT_SQUARE_FEATURE, GENERIC_SQUARE_SLOT 1-10

AUTO_SURFACE_FEATURE, CONTACT_SURFACE_POINT_FEATURE 1-10

AUTO_VECTOR_FEATURE, MEASURED_POINT, CONTACT_VECTOR_POINT_FEATURE, GENERIC_POINT 1-10

AUTOCALIB_MASTERSLAVE_COMMAND 1-10

AUTOCALIB_PROBE_COMMAND 1-10

AUTOTRIGGERCOMMAND 1-10

B

BASIC_HIT 1-10

BASIC_SCAN_OBJECT 1-10

BASIC_SCRIPT 1-11

BF2D_ALIGN 1-11

BF3D_ALIGN 1-11

BFUSER_ALIGN 1-11

BUNDLE_ALIGN 1-11

C

CALIB_ASSEMBLY 1-11

CALIB_SPHERE 1-11

CALIBRATEROTAB_COMMAND 1-11

CALL_SUBROUTINE 1-11

Calypso Konvertor (dialogové okno)

PC-DMIS import 1-7

CASE_COMMAND 1-11

CLAMP 1-11

CLEARANCE_PLANE 1-11

CNC_PASS_THRU_COMMAND 1-11

CNC_READ_VARIABLE 1-11

CNC_SELECT_TABLE_COMMAND 1-11

CNC_SET_PROTECTION_COMMAND 1-11

CNC_UPDATE_TOOLOFSET 1-11

CNC_UPDATE_WORKOFSET 1-11

CNC_USE_WORKOFSET 1-11

CNC_WRITE_VARIABLE 1-11

COLUMN132_DISPLAY 1-11

CONST_ALN_LINE 1-12

CONST_ALN_PLANE 1-12
CONST_BF_CIRCLE,
CONST_BFRE_CIRCLE 1-12
CONST_BF_CONE,
CONST_BFRE_CONE 1-12
CONST_BF_CYLINDER,
CONST_BFRE_CYLINDER 1-12
CONST_BF_LINE, CONST_BFRE_LINE 1-12
CONST_BF_PLANE,
CONST_BFRE_PLANE 1-12
CONST_BF_SPHERE,
CONST_BFRE_SPHERE 1-12
CONST_CAST_CIRCLE 1-12
CONST_CAST_CONE 1-12
CONST_CAST_CYLINDER 1-12
CONST_CAST_LINE 1-12
CONST_CAST_PLANE 1-12
CONST_CAST_POINT 1-12
CONST_CAST_SPHERE 1-12
CONST_CONE_CIRCLE 1-12
CONST_CORNER_POINT 1-13
CONST_DROP_POINT 1-13
CONST_HIPNT_PLANE 1-13
CONST_INT_CIRCLE 1-13
CONST_INT_LINE 1-13
CONST_INT_POINT 1-13
CONST_MID_LINE 1-13
CONST_MID_PLANE 1-13
CONST_MID_POINT 1-13
CONST_MIN_CIRCLE_SCAN 1-13
CONST_OFF_LINE 1-13
CONST_OFF_PLANE 1-13
CONST_OFF_POINT 1-13
CONST_ORIG_POINT 1-13
CONST_PIERCE_POINT 1-13
CONST_PLTO_LINE 1-13
CONST_PLTO_PLANE 1-13
CONST_PROJ_CIRCLE 1-14
CONST_PROJ_CONE 1-14
CONST_PROJ_CYLINDER 1-14
CONST_PROJ_LINE 1-14
CONST_PROJ_POINT 1-14
CONST_PROJ_SPHERE 1-14
CONST_PRTO_LINE 1-14
CONST_PRTO_PLANE 1-14
CONST_REV_CIRCLE 1-14
CONST_REV_CONE 1-14
CONST_REV_CYLINDER 1-14
CONST_REV_LINE 1-14
CONST_REV_PLANE 1-14
CONST_REV_SPHERE 1-14
CONST_ROUND_SLOT 1-14
CONST_SCAN_SEG_ARC 1-14
CONST_SCAN_SEG_LINE 1-14
CONST_SET 1-11
CONST_TANCIRCLES_CIRCLE 1-15
CONST_TANLINES_CIRCLE 1-15
CONST_VECT_DIST_POINT 1-15
CONTACT_POLYGON_FEATURE 1-12
CORNER_HIT 1-15
CURVE_FEATUR 1-15

D

DATDEF_COMMAND 1-15
DB_QUERY 1-15
DCCSCAN_OBJECT 1-11
DEFAULT_CASE_COMMAND 1-15
DIMENSION_2D_ANGLE 1-15
DIMENSION_2D_DISTANCE 1-15
DIMENSION_3D_DISTANCE 1-15
DIMENSION_A_LOCATION 1-15
DIMENSION_ANGULARITY 1-15
DIMENSION_CIRCULAR_RUNOUT 1-17
DIMENSION_COAXIALITY 1-15
DIMENSION_CONCENTRICITY 1-15
DIMENSION_CYLINDRICITY 1-18
DIMENSION_D_LOCATION 1-15
DIMENSION_END_LOCATION 1-15
DIMENSION_FLATNESS 1-15
DIMENSION_FLATNESS_LOCATION 1-16
DIMENSION_FORMAT 1-16
DIMENSION_H_LOCATION 1-16
DIMENSION_INFORMATION 1-16
DIMENSION_KEYIN 1-16
DIMENSION_L_LOCATION 1-16
DIMENSION_PA_LOCATION 1-16
DIMENSION_PARALLELISM 1-16
DIMENSION_PERPENDICULARITY 1-16
DIMENSION_PR_LOCATION 1-16
DIMENSION_PROFILE 1-16
DIMENSION_PROFILE_LINE 1-16
DIMENSION_PROFILE_SURFACE 1-16
DIMENSION_R_LOCATION 1-16
DIMENSION_ROUNDNESS 1-16
DIMENSION_ROUNDNESS_LOCATION 1-16
DIMENSION_RS_LOCATION 1-17

DIMENSION_RT_LOCATION 1-17
DIMENSION_RUNOUT 1-17
DIMENSION_S_LOCATION 1-17
DIMENSION_START_LOCATION 1-17
DIMENSION_STRAIGHTNESS 1-17
DIMENSION_STRAIGHTNESS_LOCATION 1-17
DIMENSION_T_LOCATION 1-17
DIMENSION_TOTAL_RUNOUT 1-17
DIMENSION_TRUE_D1_LOCATION 1-17
DIMENSION_TRUE_D2_LOCATION 1-17
DIMENSION_TRUE_D3_LOCATION 1-17
DIMENSION_TRUE_DD_LOCATION 1-17
DIMENSION_TRUE_DF_LOCATION 1-17
DIMENSION_TRUE_DIAM_LOCATION 1-17
DIMENSION_TRUE_END_POSITION 1-18
DIMENSION_TRUE_FLATNESS_LOCATION 1-18
DIMENSION_TRUE_LD_LOCATION 1-18
DIMENSION_TRUE_LF_LOCATION 1-18
DIMENSION_TRUE_PA_LOCATION 1-18
DIMENSION_TRUE_PR_LOCATION 1-18
DIMENSION_TRUE_ROUNDNESS_LOCATION 1-18
DIMENSION_TRUE_START_POSITION 1-18
DIMENSION_TRUE_STRAIGHTNESS_LOCATION 1-18
DIMENSION_TRUE_WD_LOCATION 1-18
DIMENSION_TRUE_WF_LOCATION 1-18
DIMENSION_TRUE_X_LOCATION 1-18
DIMENSION_TRUE_Y_LOCATION 1-18
DIMENSION_TRUE_Z_LOCATION 1-18
DIMENSION_V_LOCATION 1-18
DIMENSION_X_LOCATION 1-19
DIMENSION_Y_LOCATION 1-19
DIMENSION_Z_LOCATION 1-19
DISPLAY_METAFILE 1-19
DISPLAYPRECISION 1-19
DO_COMMAND 1-19

E

EDGE_HIT 1-19
ELSE_COMMAND 1-19
ELSE_IF_COMMAND 1-19
END_ALIGN 1-19
END_CASE_COMMAND 1-19
END_DEFAULT_CASE_COMMAND 1-19
END_ELSE_COMMAND 1-19
END_ELSE_IF_COMMAND 1-19
END_HYPER_FORM 1-19
END_HYPER_REPORT 1-19
END_IF_COMMAND 1-19
END_MEASURED_FEATURE 1-19
END_MOVE_SWEEP 1-19
END_PROGRAM 1-19
END_SCRIPT 1-19
END_SELECT_COMMAND 1-19
ENDWHILE_COMMAND 1-19
EQUATE_ALIGN 1-19
EW_GROUP_END 1-19
EW_GROUP_START 1-19
EXTERNAL_COMMAND 1-20

F

FEATURE_CONTROL_FRAME 1-20
FILE_IO_OBJECT 1-20
FILTER_SET 1-11
FLY_MODE 1-20

G

GAP_ONLY 1-20
GENERIC_CONSTRUCTION 1-20
GET_PROBE_DATA 1-20
GOTO_COMMAND 1-20

H

Hlášení (dialogové okno)
    PC-DMIS import 1-7
HYPER_CUSTOM 1-20
HYPER_FORM 1-20
HYPER_LEGACY 1-20
HYPER_REPORT 1-20
HYPER_TEMPLATE 1-20
CHECK_DISTANCE 1-11

I

IF_BLOCK_COMMAND 1-20
IF_GOTO_COMMAND 1-20
IGNOREMOTIONERRORS 1-20
IGNOREROTAB_COMMAND 1-20
INBETWEEN_TOL 1-20
IOCHANNELCOMMAND 1-20
ITER_ALIGN 1-20

L

LABEL_CMD 1-20
LASER_CIRCLE_FEATURE 1-20
LASER_FLUSH_AND_GAP_FEATURE 1-20
LASER_PLANE_FEATURE 1-20
LASER_SLOT_FEATURE 1-21
LASER_SPHERE_FEATURE 1-21
LASER_SURFACE_POINT_FEATURE 1-21
LEAPFROG 1-21
LEVEL_ALIGN 1-21
LOAD_COLUMN 1-21
LOAD_FIXTURE 1-21
LOAD_MACHINE 1-21
LOOP_END 1-21
LOOP_START 1-21

M

MAN_DCC_MODE 1-21
MANRETRACT 1-21
MANSCAN_OBJECT 1-21
MEASURED_SET 1-21
MOVE_ALL 1-21
MOVE_CIRCULAR 1-21
MOVE_CLEARP 1-21
MOVE_EXCLUSIVE 1-21
MOVE_INCREMENT 1-21
MOVE_PH9_OFFSET 1-21
MOVE_POINT 1-21
MOVE_ROTAB 1-21
MOVE_SPEED 1-21
MOVE_SWEEP_POINT 1-21
MOVE_SYNC 1-21
Možnosti (dialogové okno)
    PC-DMIS import 1-8

O

ONERROR 1-21
OPTIONMOTION 1-21
OPTIONPROBE 1-22

P

PC-DMIS import
    konfigurovat 1-3
    Plán měření dodatečně upravit 1-6
    Podporované příkazy 1-8
    provést 1-4
    Základní údaje 1-2
POINT_INFO 1-22
POINTCLOUD 1-22
POINTCLOUD_ALIGN 1-22
POINTCLOUD_OPER 1-22
POLARVECTORCOMP 1-22
POSITIVE_REPORTING 1-22
PREHIT_DISTANCE 1-22
PRINT_FORM_FEED 1-22
PRINT_REPORT 1-22
PROBE_COMPENSATION 1-22

R

READ_POINT 1-22
RECALL_ALIGN 1-22
RECALL_VIEWSET 1-22
RETRACT_DISTANCE 1-22
RETROLINEAR_ONLY 1-22
RMEAS_MODE 1-22
ROTATE_ALIGN 1-22
ROTATE_CIRCLE_ALIGN 1-22
ROTATEOFF_ALIGN 1-22

S

SAVE_ALIGN 1-22
SCAN_SPEED 1-22
SELECT_COMMAND 1-22
SET_ACTIVE_TIP 1-22
SET_COMMENT 1-22
SET_WORKPLANE 1-22
SIMULTANEOUS_EVALUATION 1-23
SPC_QUERY 1-23
START_ALIGN 1-23
START_MOVE_SWEEP 1-23
START_SUBROUTINE 1-23
STATISTICS 1-23
SURFACE_FEATURE 1-23
SURFACE_HIT 1-23

T

TABLE_FORMAT 1-23
TEMP_COMP 1-23
TOUCH_SPEED 1-23
TRACEFIELD 1-23
TRACKER_LEVEL_TO_GRAVITY 1-23
TRANS_ALIGN 1-23
TRANSOFF_ALIGN 1-23
TRIGGER_PLANE_COMMAND 1-23
TRIGGER_TOLERANCE 1-23

U

UNTIL_COMMAND 1-23

V

VECTOR_HIT 1-23
VIDEOSETUP 1-23
VIEWSET 1-23
VISION_BLOB_FEATURE 1-23
VISION_CIRCLE_FEATURE 1-23
VISION_EDGE_POINT_FEATURE 1-24
VISION_LINE_FEATURE 1-24
VISION_PLANE_FEATURE 1-24
VISION_PROFILE_2D_FEATURE 1-24
VISION_SLOT_FEATURE 1-24
VISION_SURFACE_POINT_FEATURE 1-24

W

WHILE_COMMAND 1-24