API, HTTP – Interface Specification

DATE: 2015-11-20

Software Version: 2.1.0.1.54.18 (Hi3518A), 2.0.0.1.52.21 (Hi3521)

TABLE OF CONTENTS

TABLE OF CONTENTS2
1. RTSP4
1.2. RTSP OPTIONS4
1.3. RTSP DESCRIBE4
1.4. RTSP SETUP5
1.5. RTSP PLAY5
1.6. RTSP TEARDOWN6
2. JPEG IMAGES(SNAPSHOT) REQUEST6
3. NETWORK PARAMETER6
3.1.GET SYSTEM NETWORK PARAMETER7
3.2. SET SYSTEM NETWORK PARAMETER8
4. SYSTEM DATE AND TIME9
4.1. GET SYSTEM DATE AND TIME9
4.2. SET SYSTEM DATE AND TIME10
4.3. CHANGE THE TIME ZONE AND THE NTP HOST11
5. ADD, MODIFY AND DELETE USERS12
5.1. CREATE A NEW USER ACCOUNT.13
5.2. CHANGE THE PASSWORD OF A EXISTING ACCOUNT.14
5.3. REMOVE AN ACCOUNT.14
5.4. LIST USERS ACCOUNTS.15
6. RESTART SERVER15
7. FACTORY DEFAULT15
8. HARD FACTORY DEFAULT16
9. VIDEO CODING16
9.1. GET THE ENCODING PARAMETERS18
9.2.SET THE ENCODING PARAMETERS19
10. VIDEO MASK19
10.1. GET THE VIDEO MASK OPTIONS21
10.2. SET THE VIDEO MASK OPTIONS21
11. VIDEO PARAMETERS22
11.1. GET THE VIDEO PARAMETERS22
11.2. SET THE VIDEO PARAMETERS23
12. VIDEO FORMAT23
12.1. GET THE VIDEO FORMAT24
12.2. SET THE VIDEO FORMAT24
13. AUDIO PARAMETER24
13.1. GET THE AUDIO PARAMETER OPTIONS26
13.2. SET THE AUDIO PARAMETER OPTIONS26
13.3. SWITCH AUDIO OUT27
14. TEXT OVERLAY27
14.1. GET THE TEXT OVERLAY OPTIONS28
14.2. SET THE TEXT OVERLAY OPTIONS29
15. MOTION ALARM29
15.1. GET THE MOTION ALARM OPTIONS32
15.2. SET THE MOTION ALARM OPTIONS34
16. SHELTER ALARM34
17. SENSOR ALARM35
17.1. GET THE SENSOR ALARM OPTIONS36
17.2. SET THE SENSOR ALARM OPTIONS37
18. VIDEO LOSE ALARM37
18.1. GET THE VIDEO LOSE ALARM OPTIONS39
18.2. SET THE VIDEO LOSS ALARM OPTIONS39
19. NETWORK INTERRUPTION ALARM40
19.1. GET THE NETWORK INTERRUPTION ALARM OPTIONS40
19.2. SET THE NETWORK INTERRUPTION ALARM OPTIONS41
20. ALARM STATUS42
20.1. METHOD 1 (PREFER)42
20.1.1. Мониторинг уровней детекции движения устройства42

20.1.2. Мониторинг изменений статусов тревоги устройства44
20.2. METHOD 2 (LESS PREFERRED)46
20.2.1. Get the alarm status47
20.2.2. Clear the alarm statues48
21. ALARM OUT48
22. CONTROLLER49
22.1. GET TYPE49
22.2. SET TYPE50
23. IR LIGHT MODE50
24. PPPOE51
23.1. GET THE PPPOE OPTIONS52
23.2. SET THE PPPOE OPTIONS52
24. UPNP53
24.1. GET THE UPNP OPTIONS53
24.2. SET THE UPNP OPTIONS54
24. EMAIL54
24.1. GET THE EMAIL OPTIONS55
24.2. SET THE EMAIL OPTIONS56
25. FTP56
25.1. GET THE FTP OPTIONS57
25.2. SET THE FTP OPTIONS58
26. DDNS58
26.1. GET THE DDNS OPTIONS59
26.2. SET THE DDNS OPTIONS60
27. VPN60
27.1. GET THE VPN OPTIONS61
27.2. SET THE VPN OPTIONS61
28. RTSP PARAMETER62
28.1. GET THE RTSP OPTIONS63
28.2. SET THE RTSP OPTIONS63
29. IP EMAIL64
29.1. GET THE IP EMAIL OPTIONS64
29.2. SET THE IP EMAIL OPTIONS65
30. CENTER CONNECTION65
30.1. GET THE CENTER CONNECTION OPTIONS66
30.2. SET THE CENTER CONNECTION OPTIONS66
31. MOBILE MONITOR67
31.1. GET THE MOBILE MONITOR OPTIONS68
31.2. SET THE MOBILE MONITOR OPTIONS68
32. RECORD69
32.1. GET THE RECORD OPTIONS70
32.2. SET THE RECORD OPTIONS OF THE DIFFERENT CHANNELS70
32.3. SET THE RECORD OPTIONS (SHARED BY ALL CHANNELS)71
33. SNAP71
33.1. GET THE SNAP OPTIONS72
33.2. SET THE SNAP OPTIONS73
34. COM SETTING73
34.1. GET THE COM OPTIONS76
34.2. SET THE COM OPTIONS76
35. SYSTEM INFO77
36. UPGRADE78
37. OBTAINING DEVICE FIRMWARE VERSION79
38. DHCP79
39. SYSLOG80
40. PTZ81
41. PTZ SETTING83
41.1. GET THE PTZ OPTIONS84
41.2. SET THE PTZ OPTIONS86
42. DOME CONTROL86
42.1. SET PTZ POSITION87

42.2. GET PTZ POSITION88
43. GET SYSTEM PARAMETERS89
44. OSD POSITION90
45. DEFAULT PARAMETER SETTING90
46. SNMP91
46.1. GET THE SNMP OPTIONS92
46.2. SET THE SNMP OPTIONS93
47. CDP AUTO-DISCOVERY PROTOCOLS93
48. STORAGE DEVICES94
48.1. GET STORAGE DEVICES INFORMATION.95
48.2. FORMATTED THE STORAGE DEVICES96

1. RTSP

The RTSP URL is rtsp://<the IP address of the server>/av0_0.

first num-channel#(0~3),second num-main(0)/sub(1) stream.

The OPTIONS, DESCRIBE, SETUP, PLAY, TEARDOWN methods are supported. The RTSP protocol is described in RFC2326.

1.2. RTSP OPTIONS

The OPTIONS command returns a list of supported RTSP commands.

Example:

OPTIONS rtsp://<192.168.88.187>/av0_0 RTSP/1.0

CSeq:2

Response example:

RTSP/1.0 200 OK

CSeq:2

Date:Sun, 13 May 2012 16:39:25 GMT

Public: OPTIONS, DESCRIBE, SET_PARAMETER, GET_PARAMETER, SETUP, TEARDOWN, PLAY, PAUSE\r\n

Notice: The SET_PARAMETER function and PAUSE function, our RTSP library temporarily not support.

1.3. RTSP DESCRIBE

Example:

DESCRIBE rtsp://<192.168.88.187>/av0_0 RTSP/1.0

CSeq:3

Accept: application/sdp

Response example:

RTSP/1.0 200 OK

CSeq:3

Server: Encoder/1.0.0

Date: Sun, 13 May 2012 16:39:25 GMT

Context-type: application/sdp

Context-Base: rtsp://<192.168.88.187>/av0_0

Context-length: 291

1.4. RTSP SETUP

Example:

SETUP rtsp://<192.168.88.187>/av0_0 RTSP/1.0

CSeq:4

Transport: RTP/AVP;unicast;client_port=2568-2569

Response example:

RTSP/1.0 200 OK

CSeq:4

Server: Encoder/1.0.0

Date: Sun, 13 May 2012 16:39:25 GMT

Session: 8962035351000806693

Transport: RTP/AVP;unicast;client_port=2568-2569;source=192.168.88.187;
server_port=8018-8019;ssrc=4f08d90f

1.5. RTSP PLAY

Example:

PLAY rtsp://<192.168.88.187>/av0_0 RTSP/1.0

CSeq:5

Session: 8962035351000806693

Range: npt=0.000-\r\n

Response example:

RTSP/1.0 200 OK

CSeq:5

Server: Encoder/1.0.0

Date: Sun, 13 May 2012 16:39:25 GMT

Session: 8962035351000806693

RTP-Info: url=rtsp://192.168.88.187/av0_1/trackID=1

1.6. RTSP TEARDOWN

Example:

TEARDOWN rtsp://<192.168.88.187>/av0_0 RTSP/1.0

CSeq:8

Session: 8962035351000806693

Response example:

RTSP/1.0 200 OK

CSeq:8

Date: Sun, 13 May 2012 16:39:25 GMT

2. JPEG images(snapshot) request

Syntax:

http://<server ipaddr>/cgi-bin/images_cgi?channel=<vaule>&user=<value>

&pwd=<value>

When a JPEG image is requested, the server returns either the specified JPEG image file or "Request failed:Param error".

Note: This requires administrator access(administrator authorization). Channel valid values are 0 to 3.

Example:

http://192.168.88.187/cgi-bin/images_cgi?channel=0&user=admin&pwd=admin

Response example:

HTTP/1.0 200 OK\r\n

Context-length:23311\r\n

Context-type: image/jpeg\r\n

\r\n

<JPEG image date>\r\n

3. Network Parameter

Get or set system network parameter.

Syntax:

http://<server ipaddr>/cgi-bin/network_cgi?[&<parameter>=<value>]

Note: This requires administrator access(administrator authorization).

with the following parameters and values

<parameter>=<value >	Values	Description
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.
action=<string>	get/set	Specifies what to do.
BootProto=<string>	dhcp,none	Enable/disable dynamic IP address assignment to the device.
IPAddress=<string>	An ip address	IP Address. The physical address of the device on the network.
SubnetMask=<string>	An ip address	Subnet mask. Divides the network.
DefaultRouter=<string>	An ip address	Default router/gateway used for connecting devices attached to different networks.
MACAddress=<string>	An MAC address like : 00-fc-14-0e-ff-05	MAC address. The unique identify of the device.
HostName=<string>	An host name	The name of the device on the network.
DNSServer1=<string>	An ip address	Primary Domain Name System server.
DNSServer2=<string>	An ip address	Secondary Domain Name System server.
Port=<string>	1~65535	The port of the server (web port). Default value 80.
DataPort=<string>	18~65535, Except special port like 80, 544	The port of the data. Default value 5000.
OnvifPort=<string>	18~65535, Except special port like 80, 544	The port of the Onvif. Default value 2000.

3.1.Get system network parameter

Syntax:

http://<server ipaddr>/cgi-bin/network_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/network_cgi?action=get&user=admin&pwd=admin

Response example:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

BootProto=none

IPAddress=192.168.88.187

SubnetMask=255.255.255.0

DefaultRouter=192.168.88.2

MACAddress=00-5d-20-a0-35-12

HostName=DVS131

DNSServer1=192.168.88.2

DNSServer2=221.5.88.88

Web Port=80

Data Port=5000

ONVIF Port=2000

3.2. Set system network parameter

Syntax:

http://<server ipaddr>/cgi-bin/date_cgi?action=set[&<parameter>=<value >...]

You can set the value of a parameter or all the parameters value.

Example: set all the parameters value

http://192.168.88.187/cgi-bin/network_cgi?action=set&user=admin&pwd=admin&BootProto=none&IPAddress=192.168.88.187&SubnetMask=255.255.255.0&DefaultRouter=192.168.88.2&HostName=DVS134&MACAddress=00-fc-14-0e-ff-05&DNSServer1=192.168.88.2&DNSServer2=221.5.88.88&Port=80

Response example:

Case 1: system network parameter are changed.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK, Device is rebooting\r\n

Case 2: only HostName is changed.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

Case 3: no system network parameter are changed.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Param not change\r\n

Case 4: system network parameter are error.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Request failed:Param error\r\n

4. System date and *time*

Get or set the system date and time.

Note: This requires administrator or normal user access.

Syntax: http://<server ipaddr>/cgi-bin/date_cgi?<parameter>=<value >

<parameter>=<value>	*Values*	*Description*
action=<string>	*get or set*	*Specifies what to do.* *get = get the current date and time.* *set = set the current date and time.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

4.1. Get system date and time

Syntax:

http://<server ipaddr>/cgi-bin/date_cgi?action=get&user=<value>

&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

<*month***><***day***>, <***year***><***hour***>:<***minute***>:<***second***><***time zone***><***NTP Host***>***\r\n

Example :

http://192.168.88.187/cgi-bin/date_cgi?action=get&user=admin&pwd=admin

Response example:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

5 22, 2012 15:4:57 29 clock.isc.org \r\n

4.2. Set system date and time

Syntax:

http://<server ipaddr>/cgi-bin/date_cgi?action=set[&<parameter>=<value >...]

with the following parameters and values

<parameter>=<value >	*Values*	*Description*
year = <int>	*2012-2099*	*Current year.*
month = <int>	*1-12*	*Current month.*
day = <int>	*1-31*	*Current day.*
hour = <int>	*0-23*	*Current hour.*
minute= <int>	*0-59*	*Current minute.*
second = <int>	*0-59*	*Current second.*
timezone = <int>	*0-34* *0:(GMT-12:00) , 1:(GMT-11:00)* *2:(GMT-10:00), 3:(GMT-9:00)* *4:(GMT-8:00) , 5:(GMT-7:00)* *6:(GMT-6:00) , 7:(GMT-5:00)* *8:(GMT-5:00) , 9:(GMT-4:30)* *10:(GMT-4:00), 11:(GMT-3:00)*	*Time zone.* *18:(GMT+1:00) , 19:(GMT+2:00)* *20: (GMT+2:00) , 21: (GMT+3:00)* *22: (GMT+3:30), 23: (GMT+4:00)* *24: (GMT+4:30), 25: (GMT+5:00)* *26: (GMT+5:30), 27:*

	12:(GMT-2:00), 13:(GMT-1:00) 14:(GMT), 15:(GMT+1:00) 16:(GMT+1:00),17:(GMT+1:00)	*(GMT+6:00) 28: (GMT+7:00), 29: (GMT+8:00) 30: (GMT+9:00), 31: (GMT+9:30) 32:(GMT+10:00), 33:(GMT+11:00) 34: (GMT+12:00)*
ntpHost=<string>	*A IP address or NTP server name*	*Such as: clock%2Eisc%2Eorg(clock.isc.org) 192%2E168%2E88%2E185(Make sure that the NPT server is open).*

Example :

http://192.168.88.187/cgi-bin/date_cgi?action=set&user=admin&pwd=admin&year=2012&month=5&day=18&hour=11&minute=54&second=12

Response:

Case 1: a successful set.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

Case 2: a failed set,Setting or syntax are probably incorrect.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Request failed: Param error\r\n\r\n

4.3. Change the time zone and the NTP host

Note: When DHCP function opens, NTP server address the default for DCHP server address.

Syntax:

http://<server ipaddr>/cgi-bin/date_cgi?action=set&user=<avlue>
&pwd=<value>&timezone=<value>&ntpHost=<value>

Example :

http://192.168.88.187/cgi-bin/date_cgi?action=set&user=admin&pwd=admin&timezone=29&ntpHost=time%2Ewindows%2Ecom

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
OK\r\n

5. Add, modify and delete users

Note: This requires administrator access(administrator authorization), and System has an administrator user, four normal users.

Syntax:

http://<server ipaddr>/cgi-bin/pwdgrp_cgi?<parameter>=<value>
[&<parameter>=<value>…]
with the following parameters and values

<parameter>=<value>	*Values*	*Description*
action=<string>	*add, update, remove, get*	*add = create a new user account.* *update = change account information of* *specified parameters if the account exists.* *remove = remove an existing account.* *get = get a list of the user accounts.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A*

		thru Z and 0 thru 9.
username=<string>	*<string>*	*The user account name, a non-existing user name. Valid characters are a thru z, A thru Z and 0 thru 9.*
password=<string>	*<string>*	*The user account password. Valid characters are a thru z, A thru Z and 0 thru 9.*
level=<int>	*1,2*	*One representatives of an administrator, Two representatives of an normal user.*

5.1. Create a new user account.

Example : *http://192.168.88.187/cgi-bin/pwdgrp_cgi?action=add&user=admin&pwd=admin&username=User11234&password=123456&level=2*

Response:

Case 1: a successful add.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

Case 2: Administrator user can't increase.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Administrator user can't increase\r\n

Case 3: No user surplus or users already exist.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

No user surplus or users already exist\r\n

5.2. Change the password of a existing account.

Example:

http://192.168.88.187/cgi-bin/pwdgrp_cgi?action=update&user=admin&pwd=admin&username=user&password=134

Response:

Case 1: a successful upadte.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

Case 2: The user doesn't find.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

The user doesn't find\r\n

5.3. Remove an account.

Example:

http://192.168.88.187/cgi-bin/pwdgrp_cgi?action=remove&user=admin&pwd=admin&username=user

Response:

Case 1: a successful remove.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

Case 2: The user doesn't find.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

The user doesn't find \r\n

Case 3: Administrators can't be deleted.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Administrators can't be deleted\r\n

5.4. List users accounts.

Example:

http://192.168.88.187/cgi-bin/pwdgrp_cgi?action=get&user=admin&pwd=admin

Response: A successful Get.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Username:password:level\n

<the users information>

6. Restart server

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/restart_cgi?user=admin&pwd=admin

Example:

http://192.168.88.187/cgi-bin/restart_cgi?user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK,Device is rebooting\r\n

7. Factory default

Reload factory default. All parameters except Network parameters are set to their factory default value.

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/factorydefault_cgi? user=admin&pwd=admin

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK, Device is rebooting \r\n

8. Hard factory default

Reload factory default. All parameters are set to their factory default value.

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/hardfactorydefault_cgi?user=admin&pwd=admin

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK, Device is rebooting \r\n

9. Video coding

Set and get the encoding parameters.

Note: This requires administrator or normal user access.

Syntax:

http://<server ipaddr>/cgi-bin/videocoding_cgi?<parameter>=<value>

[&<parameter>=<value>…]

with the following parameters and values

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the encoding parameters.* *set = set the encoding parameters.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
channel=<int>	*0~3*	*The channel number of the*

		video.
EncTypes=<string>	*H.264, MJPEG*	*The list of supported encoding types. Only for getting.*
EncType1=<string>	*H.264, MJPEG*	*Encoding format of the main stream.*
Resolution1=<string>	*704*576, 704*288 352*288, 176*144*	*The resolution of the main stream.*
KeyInterval1=<int>	*1~200*	*The main stream I-frame interval.*
FrameRate1=<int>	*1~25(PAL), 1~30(NTSC)*	*The frame rate of the main stream.*
BitflowType1=<string>	*CBR, VBR*	*The type of bit rate of the main stream.*
NormalBitrate1=<int>	*30~16384*	*The bit rate of the main stream.*
ImageQuality1=<string>	*1, 2, 3, 4, 5, 6*	*The image quality of the main stream.* *1 – Best, 2 – Better, 3 – Good, 4 – Bad, 5 – Worse, 6 - Worst*
AlarmBitrate1=<int>	*30~16384*	*If streaming type of CBR, when moving alarm occurs, use this code flow size.*
ResolutionList1=<string>	*704*576,704*288,352*288, 176*144*	*The listof supported resolutions for Main stream. Only for getting.*
EncType2=<string>	*H.264, MJPEG*	*Encoding format of the Sub-stream.*
Resolution2=<string>	*704*576, 704*288 352*288, 176*144*	*The resolution of the Sub-stream.*
KeyInterval2=<int>	*1~200*	*The Sub-stream I-frame interval.*
FrameRate2=<int>	*1~25(PAL), 1~30(NTSC)*	*The frame rate of the Sub-stream.*

BitflowType2=<string>	*CBR, VBR*	*The type of bit rate of the Sub-stream.*
NormalBitrate2=<int>	*30~16384*	*The bit rate of the Sub-stream.*
ImageQuality1=<string>	*1, 2, 3, 4, 5, 6*	*The image quality of the main stream.* *1 – Best, 2 – Better, 3 – Good, 4 – Bad, 5 – Worse, 6 - Worst*
ResolutionList2=<string>	*352*288,176*144*	*The listof supported resolutions for Sub-stream. Only for getting.*
AlarmBitrate2=<int>	*30~16384*	*If streaming type of CBR, when moving alarm occurs, use this code flow size.*

9.1. Get the encoding parameters

Syntax:

http://<server ipaddr>/cgi-bin/videocoding_cgi?action=get&user=<value>

pwd=<value>&channel=<value>

Example:

http://192.168.88.187/cgi-bin/videocoding_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

EncTypes= H.264,MJPEG

Main stream options:

EncType1=H.264

*Resolution1=704*576*

KeyInterval1=200

FrameRate1=25

BitflowType1=CBR

NormalBitrate1=512

AlarmBitrate1=2800

*ResolutionList1=704*576,704*288,352*288,176*144*

Sub stream options:

EncType2=H.264

*Resolution2=352*288*

KeyInterval2=50

FrameRate2=25

BitflowType2=VBR

NormalBitrate2=512

*ResolutionList2=352*288,176*144*

9.2.Set the encoding parameters

Syntax:

http://<server ipaddr>/cgi-bin/videocoding_cgi?action=set&channel=<value>

[&<parameter>=<value>…]

Example: *Set the encoding parameters of the main stream.*

*http://192.168.88.187/cgi-bin/videocoding_cgi?action=set&channel=0&user=admin&pwd=admin&EncType1=H.264&Resolution1=704*576&BitflowType1=CBR&KeyInterval1=20&NormalBitrate1=2035&FrameRate1=25*

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

If you change the resolution of the main stream, the device will restart and it will return "OK,Device is rebooting".

10. Video Mask

Get and set the video mask options.

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/videomask_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the video mask options.* *set = set the video mask options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
MaskSwitch=<string>	*open, close*	*Whether to enable the video mask.*
MaskArea0_x=<int>	*0~704*	*The x coordinate values of the mask area 0.*
MaskArea0_y=<int>	*0~576*	*The y coordinate values of the mask area 0.*
MaskArea0_w=<int>	*0~704*	*The width of the mask area 0.*
MaskArea0_h=<int>	*0~576*	*The height of the mask area 0.*
MaskArea1_x=<int>	*0~704*	*The x coordinate values of the mask area 1.*
MaskArea1_y=<int>	*0~576*	*The y coordinate values of the mask area 1.*
MaskArea1_w=<int>	*0~704*	*The width of the mask area 1.*
MaskArea1_h=<int>	*0~576*	*The height of the mask area 1.*
MaskArea2_x=<int>	*0~704*	*The x coordinate values of the mask area 2.*
MaskArea2_y=<int>	*0~576*	*The y coordinate values of the mask area 2.*
MaskArea2_w=<int>	*0~704*	*The width of the mask area 2.*
MaskArea2_h=<int>	*0~576*	*The height of the mask area 2.*
MaskArea3_x=<int>	*0~704*	*The x coordinate values of the mask area 3.*
MaskArea3_y=<int>	*0~576*	*The y coordinate values of the mask area 3.*
MaskArea3_w=<int>	*0~704*	*The width of the mask area 3.*

MaskArea3_h=<int>	*0~576*	*The* height *of the mask area 3.*

10.1. Get the video mask options

Syntax:

http://<server ipaddr>/cgi-bin/videomask_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-

bin/videomask_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

MaskSwitch=close

MaskArea0_x=0 MaskArea0_y=0 MaskArea0_w=704 MaskArea0_h=576

MaskArea1_x=0 MaskArea1_y=0 MaskArea1_w=0 MaskArea1_h=0

MaskArea2_x=0 MaskArea2_y=0 MaskArea2_w=0 MaskArea2_h=0

MaskArea3_x=0 MaskArea3_y=0 MaskArea3_w=0 MaskArea3_h=100

10.2. Set the video mask options

Syntax:

http://<server ipaddr>/cgi-bin/videomask_cgi?action=set[&parameter =<value>…]

Example:*Set the video mask parameters of the first channel.*

http://192.168.88.187/cgi-

bin/videomask_cgi?action=set&channel=0&user=admin&pwd=admin&MaskSwitch=open&

MaskArea0_x=10&MaskArea0_y=20&MaskArea0_w=100&MaskArea0_h=200&MaskArea

1_x=210&MaskArea1_y=300&MaskArea1_w=30&MaskArea1_h=40

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

11. Video parameters

Get and set the Video parameters.

Note: This requires administrator access or normal user, and only the equipment to support this parameter, you can get or set its value.

Syntax:

http://<server ipaddr>/cgi-bin/videoparameter_cgi?<parameter>=<value>

[&<parameter>=<value>…]

with the following parameters and values.

<parameter>=<value>	Values	Description
action=<string>	get, set	get = get the video parameters. set = set the video parameters.
channel=<int>	0~3	The channel number of the video.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.
Brightness=<int>	1~255	The brightness of the video.
Contrast=<int>	1~255	The contrast of the video.
Chroma=<int>	1~255	The chroma of the video.
Saturation=<int>	1~255	The saturation of the video.
Acutance=<int>	1~255	The acutance of the video.
Red=<int>	1~255	Red of the video.
Green=<int>	1~255	Green of the video.
Blue=<int>	1~255	Blue of the video.
Gamma=<int>	1~255	The Gamma of the video.

11.1. Get the video parameters

Syntax:

http://<serveripaddr>/cgi-bin/videoparameter_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/videoparameter_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Brightness=112

Contrast=132

Chroma=114

Saturation=128

11.2. Set the videoparameters

Syntax:

http://<server ipaddr>/cgi-bin/videoparameter_cgi?action=set&channel=<value>[&<parameter>=<value>…]

Example: *Set the video parameters of the channel 0.*

http://192.168.88.187/cgi-bin/videoparameter_cgi?action=set&channel=0&user=admin&pwd=admin&Brightness=20&Contrast=100&Chroma=200&Saturation=123

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

12. Video format

Get and set the video format.

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/videoformat_cgi?<parameter>=<value>[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the video format.*

		set = set the video format.
user=<string>	*user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
Videoformat=<string>	*PAL, NTSC*	*The channel number of the video.*

12.1. Get the video format

Syntax:

http:///<server ipaddr>/cgi-bin/videoformat_cgi?action=get&user=<value>

&pwd=<value>

return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Videoformat=<value>\r\n

12.2. Set the video format

Syntax:

http:///<server ipaddr>/cgi-bin/videoformat_cgi?action=set&user=<value>

&pwd=<value>&Videoformat=<value>

Example:

http:///192.168.88.187/cgi-bin/videoformat_cgi?action=set&user=admin&pwd=admin&

Videoformat=PAL

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK,Device is rebooting\r\n

If the video format has not changed, return "Param not change".

13. Audio parameter

Get and set the audio parameter options.

Note:This requires administrator access.

Syntax:

http://<server ipaddr>/cgi-bin/audio_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	Values	Description
action=<string>	get, set	get = get the audio parameter options. set = set the audio parameter options.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.
AudioSwitch=<string>	open, close	Enable audio.When video need to voice, need to open this switch.
AudioType=<string>	G.726,G.711A, G.711U, AAC	The type of the audio encoding. DVS does not have AAC encoding.
AudioInput=<string>	Mic, Line	The type of the audio Input . DVS only have 'Line' input.
AudioBitrate=<int>	16000	The value of the bitrate.
AudioSamplingRate =<string>	8k,16k,32k	The value of the audio sampling rate. DVS only have 8K sampling rate.
AudioInVol=<int>	1~15	The size of the input volume.
AudioOutVol=<int>	1~15	The size of the output volume.
DuplexMode =<string>	full, half, post, get, disable	How the audio should be transferred. full = Full duplex - simultaneous two-way audio. Transmit and receive audio at the same time. half = Half duplex - non simultaneous two-way audio. Audio only allowed in one direction at a time. post = Simplex. Audio to the server.

		get = Simplex. Audio from the server. *disable=Disable the Audio function.*
TalkPort =<int>	*1~65535*	*The port of the server for talk mode.* *Value can't be changed.*

13.1. Get theaudio parameter options

Syntax:

http://<server ipaddr>/cgi-bin/audio_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/audio_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

AudioSwitch=close

AudioType=G.711A

AudioBitrate=16000

AudioSamplingRate=8k

AudioInput=Line

AudioInVol=2

AudioOutVol=5

DuplexMode=post

13.2. Set theaudio parameter options

Syntax:

http://<server ipaddr>/cgi-bin/audio_cgi?action=set[&<parameter>=<value>]

Example:

Set parameters

http://192.168.88.187/cgi-bin/audio_cgi?action=set&channel=0&user=admin&pwd=admin

&AudioSwitch=close&AudioType=G.711U&AudioInVol=1&AudioOutVol=15

Start talk

http://192.168.1.14/cgibin/

audio_cgi?action=set&user=admin&pwd=admin&DuplexMode=full&AudioType=G.711A&TalkPort=5000

Stop talk

http://192.168.1.14/cgibin/audio_cgi?action=set&user=admin&pwd=admin&DuplexMode=disable&AudioType=G.711A&TalkPort=5000

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

13.3. Switch Audio Out

Note: for B1018 only

Syntax:

http://<server ipaddr>/cgi-bin//cgi-bin/audiooutswitch_cgi?channel=<value>&user=<value>&pwd=<value>

Example:

Set parameters

http://192.168.88.187/cgi-bin/audiooutswitch_cgi?channel=1&user=admin&pwd=admin

<parameter>=<value>	*Values*	*Description*
channel=<string>	*1, 2, 4, 8, 16, 32, 64, 128*	*Audio Out #1 = 1, Audio Out #2 = 2, Audio Out #3= 4, Audio Out #4= 8, Audio Out #5= 16, Audio Out #6= 32, Audio Out #7= 64, Audio Out #8= 128*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

14. Text overlay

Get and set the text overlay options.

Note: This requires administrator or normal user access.

Syntax:

http://<server ipaddr>/cgi-bin/textoverlay_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the text overlay options.* *set = set the text overlay options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
Title=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
WeekValue=<int>	*0,1*	*Whether to display the week, 0 - Do not show,1 – Show.*
TimeValue=<int>	*0,1*	*Whether to display the time, 0 - Do not show,1 – Show.*
DateValue=<int>	*0,1*	*Whether to display the date,0 - Do not show,1 – Show.*
BitrateValue=<int>	*0,1*	*Whether to display the bitrate,0 - Do not show,1 – Show.*
TitleValue=<int>	*0,1*	*Whether to display the title,0 - Do not show,1 – Show.*
Color=<int>	*0~4*	*The color of the font, 0-white, 1-black, 2-yellow, 3-red, 4-blue.*

14.1. Get the text overlay options

Syntax:

http://<server ipaddr>/cgi-bin/textoverlay_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/textoverlay_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Title=345

TitleValue=1

DateValue=1

TimeValue=1

WeekValue=0

BitrateValue=1

Color=2

14.2. Set the text overlay options

Syntax:

http://<server ipaddr>/cgi-bin/textoverlay_cgi?action=set&channel=<value> [&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/textoverlay_cgi?action=set&channel=0&user=admin&pwd=admin&Title=Channel1&WeekValue=0& TimeValue=1&DateValue=0&TitleValue=0&BitrateValue=0

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

15. Motion alarm

Get and set the motion alarm options.

Note: This requires administrator access(administrator authorization).When device has storage (hard disk, SD card, USB disk), linkage Snap, linkage Record document

will be saved to storage first and do related process based on file storage. Or it will be saved to memory for the moment and do related process based on file storage.

Syntax:

http://<server ipaddr>/cgi-bin/motion_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the motion alarm options.* *set = set the motion alarm options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
Sensitivity=<int>	*5~100*	*The sensitivity of motion alarm.*
Threshold=<int>	*1~100*	*When the level ofdetection is higher than threshold,motion alarm trigger.*
MotionSwitch=<string>	*close, open*	*Whether to open the motion alarm.*
EMailSwitch=<string>	*close, open*	*Whether the alarm is sent to the email.*
Time1Switch=<string>	*close, open*	*Time 1 selector switch.*
Time1_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time1_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time1_EndHour=<int>	*0~23*	*The end of the hour value.*
Time1_EndMinute=<int>	*0~59*	*The end the minute value.*
Time2Switch=<string>	*close, open*	*Time 2 selector switch.*
Time2_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time2_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time2_EndHour=<int>	*0~23*	*The end of the hour value.*
Time2_EndMinute=<int>	*0~59*	*The end the minute value.*
Day_of_Week=<string>	*Monday, Tuesday, Wednesday, Thursday,*	*Day of week on that set Time 1 and Time 2.*

	Friday, Saturday, Sunday	
DetectArea0_x=<int>	*0~704*	*The x coordinate values of the detection area 0.*
DetectArea0_y=<int>	*0~576*	*The y coordinate values of the detection area 0.*
DetectArea0_w=<int>	*0~704*	*The width of the detection area 0.*
DetectArea0_h=<int>	*0~576*	*The height of the detection area 0.*
DetectArea1_x=<int>	*0~704*	*The x coordinate values of the detection area 1.*
DetectArea1_y=<int>	*0~576*	*The y coordinate values of the detection area 1.*
DetectArea1_w=<int>	*0~704*	*The width of the detection area 1.*
DetectArea1_h=<int>	*0~576*	*The height of the detection area 1.*
DetectArea2_x=<int>	*0~704*	*The x coordinate values of the detection area 2.*
DetectArea2_y=<int>	*0~576*	*The y coordinate values of the detection area 2.*
DetectArea2_w=<int>	*0~704*	*The width of the detection area 2.*
DetectArea2_h=<int>	*0~576*	*The height of the detection area 2.*
DetectArea3_x=<int>	*0~704*	*The x coordinate values of the detection area 3.*
DetectArea3_y=<int>	*0~576*	*The y coordinate values of the detection area 3.*
DetectArea3_w=<int>	*0~704*	*The width of the detection area 3.*
DetectArea3_h=<int>	*0~576*	*The height of the detection area 3.*
OutputSwitch=<string>	*close, open*	*Whether the alarm is sent to the warning lights.*
OutputDuration=<int>	*0~2*60*60*	*Alarm output duration.*
SnapSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to snap.*
SnapNum=<int>	*0~3600*	*The number of captured images.*

SnapInterval=<float>	*0~3600,0.5,1.5*	*The interval of captured images.*
SnapSaveMode=<string>	*Local,Ftp,Email FtpEmail*	*The way to save the pictures. FtpEmail means Ftp and Email .*
RecordSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to record.*
RecordTime=<int>	*0~2*60*60*	*Recording continuous time.*
RecordSaveMode=<string>	*Local,Ftp*	*The way to save the Video resource.*

15.1. Get the motion alarm options

Syntax:

http://<server ipaddr>/cgi-bin/motion_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/motion_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

DetectArea0_x=0 DetectArea0_y=0 DetectArea0_w=704 DetectArea0_h=576

DetectArea1_x=0 DetectArea1_y=0 DetectArea1_w=0 DetectArea1_h=0

DetectArea2_x=0 DetectArea2_y=0 DetectArea2_w=0 DetectArea2_h=0

DetectArea3_x=0 DetectArea3_y=0 DetectArea3_w=0 DetectArea3_h=0

MotionSwitch=open

Sensitivity=90

Threshold=50

Day_of_Week=Monday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Tuesday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Wednesday

Time1Switch=open

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=open

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Thursday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Friday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Saturday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

Day_of_Week=Sunday

Time1Switch=close

Time1_BgnHour=0 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=30

Time2Switch=close

Time2_BgnHour=6 Time2_BgnMinute=10 Time2_EndHour=10 Time2_EndMinute=20

EMailSwitch=open

OutputSwitch=open

OutputDuration=20

SnapSwitch=close

SnapNum=100

SnapInterval=1.5

SnapSaveMode=Ftp

RecordSwitch=open

RecordTime=10

RecordSaveMode=Ftp

15.2. Set the motion alarm options

Syntax:

http://<server ipaddr>/cgi-bin/motion_cgi?action=set[&parameter =<value>…]

You can set the value of a parameter or all the parameters value.

Example:*Set the motion alarm parameters of the first channel.*

http://192.168.88.187/cgi-bin/motion_cgi?action=set&channel=0&user=admin&pwd=admin&MotionSwitch=open&EMailSwitch=open&Time1Switch=open&Time1_BgnHour=0&Time1_BgnMinute=0&Time1_EndHour=20&Time1_EndMinute=30&Sensitivity=1&DetectArea0_x=0&DetectArea0_y=0&DetectArea0_w=704&RecordSwitch=open&RecordTime=61&RecordSaveMode=Ftp

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

16. Shelteralarm

Open or close the shelter alarm .

Note: This requires administrator access(administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/shelter_cgi?channel=<value>&

ShelterSwitch=<value>&user=<value>&pwd=<value>

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
channel=<int>	*0~3*	*The channel number of the video.*
ShelterSwitch =<string>	*close, open*	*Whether to open the shelter alarm.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

Example: *Open the channel 0 shelter alarm.*

http://192.168.88.187/cgi-bin/shelter_cgi?action=set&channel=0&user=admin&pwd=admin&ShelterSwitch=open

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

17. Sensor alarm

Get and set the sensor alarm options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/sensor_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the senor alarm options.* *set = set the senor alarm options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
DetectSwitch=<string>	*close, open*	*Whether to open the sensor alarm.*
SensorType=<string>	*NormalOpen, NormalClose*	*The type of the sensor.*
EMailSwitch=<string>	*close, open*	*Whether the alarm is sent to the email.*
Time1Switch=<string>	*close, open*	*Time 1 selector switch.*
Time1_BgnHour=<int>	*0~23*	*The beginning of the hour value.*

Time1_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time1_EndHour=<int>	*0~23*	*The end of the hour value.*
Time1_EndMinute=<int>	*0~59*	*The end the minute value.*
Time2Switch=<string>	*close, open*	*Time 2 selector switch.*
Time2_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time2_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time2_EndHour=<int>	*0~23*	*The end of the hour value.*
Time2_EndMinute=<int>	*0~59*	*The end the minute value.*
OutputSwitch=<string>	*close, open*	*Whether the alarm is sent to the warning lights.*
OutputDuration=<int>	*0~2*60*60*	*Alarm output duration.*
SnapSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to snap.*
SnapNum=<int>	*0~3600*	*The number of captured images.*
SnapInterval=<float>	*0~3600,0.5,1.5*	*The interval of captured images.*
SnapSaveMode=<string>	*Local,Ftp,Email FtpEmail*	*The way to save the pictures. FtpEmail means Ftp and Email .*
RecordSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to record.*
RecordTime=<int>	*0~2*60*60*	*Recording continuous time.*
RecordSaveMode=<string>	*Local,Ftp*	*The way to save the Video resource.*

17.1. Get the sensor alarm options

Syntax:

http://<server ipaddr>/cgi-bin/sensor_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/sensor_cgi?action=get&channel=0&user=admin&

pwd=admin

Response:

DetectSwitch=close

SensorType=NormalOpen

Time1Switch=open

Time1_BgnHour=8 Time1_BgnMinute=0 Time1_EndHour=23 Time1_EndMinute=59

Time2Switch=close

Time2_BgnHour=0 Time2_BgnMinute=0 Time2_EndHour=23 Time2_EndMinute=22

EMailSwitch=close

OutputSwitch=close

OutputDuration=10

SnapSwitch=close

SnapNum=10

SnapInterval=1.5

SnapSaveMode=Email

RecordSwitch=close

RecordTime=64

RecordSaveMode=Ftp

17.2. Set the sensor alarm options

Syntax:

http://<server ipaddr>/cgi-bin/sensor_cgi?action=set[&parameter =<value>…]

You can set the value of a parameter or all the parameters value.

Example:

Set the sensor alarm parameters of the first channel.

http://192.168.88.187/cgi-bin/sensor_cgi?action=set&channel=0&user=admin&pwd=admin&DetectSwitch=open&SensorType=NormalClose&EMailSwitch=open&Time1Switch=open&Time1_BgnHour=0&Time1_BgnMinute=0&Time1_EndHour=20&Time1_EndMinute=30&SnapSwitch=open&SnapNum=6&SnapInterval=2.5&SnapSaveMode=FtpEmail&RecordSwitch=open&RecordTime=88&RecordSaveMode=Ftp

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

18. Video lose alarm

Get and set the video lose alarm options.

Note: This requires administrator access (administrator authorization).

When device has storage (hard disk, SD card, USB disk), linkage Snap, linkage Record document will be saved to storage first and do related process based on file storage. Or it will be saved to memory for the moment and do related process based on file storage.

Syntax:

http://<server ipaddr>/cgi-bin/videolose_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	Values	Description
action=<string>	get, set	get = get the video lose alarm options. set = set the video lose alarm options.
channel=<int>	0~3	The channel number of the video.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.
LoseSwitch=<string>	close, open	Whether to open the video lose alarm.
EMailSwitch=<string>	close, open	Whether the alarm is sent to the email.
OutputSwitch=<string>	close, open	Whether the alarm is sent to the warning lights.
OutputDuration=<int>	0~2*60*60	Alarm output duration.
SnapSwitch=<string>	close, open	When the motion alarm occurs, whether to snap.
SnapNum=<int>	0~3600	The number of captured images.
SnapInterval=<float>	0~3600,0.5,1.5	The interval of captured images.
SnapSaveMode=<string>	Local,Ftp,Email FtpEmail	The way to save the pictures. FtpEmail means Ftp and Email .
RecordSwitch=<string>	close, open	When the motion alarm occurs, whether to record.
RecordTime=<int>	0~2*60*60	Recording continuous time.
RecordSaveMode=<string>	Local,Ftp	The way to save the Video resource.

18.1. Get thevideo lose alarm options

Syntax:

http://<server ipaddr>/cgi-bin/videolose_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/videolose_cgi?action=get&channel=0&user=admin

&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

LoseSwitch=open

EMailSwitch=open

OutputSwitch=open

OutputDuration=20

SnapSwitch=close

SnapNum=100

SnapInterval=1.5

SnapSaveMode=Ftp

RecordSwitch=open

RecordTime=10

RecordSaveMode=Ftp

18.2. Set thevideo loss alarm options

Syntax:

http://<server ipaddr>/cgi-bin/videolose_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/videolose_cgi?action=set&channel=0&user=admin

&pwd=admin&LoseSwitch=open&EMailSwitch=open&outputSwitch=open&OutputDuration

=21&SnapSwitch=open&SnapNum=20&SnapInterval=2&SnapSaveMode=FtpEmail&Reco

rdSwitch=open&RecordTime=61&RecordSaveMode=Ftp

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

19. Network interruption alarm

Get and set the network interruption alarm options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ networkinterruption_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the network interruption alarm options.* *set = set the network interruption alarm options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
DetectSwitch=<string>	*close, open*	*Whether to open the video lose alarm.*
OutputSwitch=<string>	*close, open*	*Whether the alarm is sent to the warning lights.*
OutputDuration=<int>	*0~2*60*60*	*Alarm output duration.*
SnapSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to snap.*
SnapNum=<int>	*0~3600*	*The number of captured images.*
SnapInterval=<float>	*0~3600,0.5,1.5*	*The interval of captured images.*
RecordSwitch=<string>	*close, open*	*When the motion alarm occurs, whether to record.*
RecordTime=<int>	*0~2*60*60*	*Recording continuous time.*

19.1. Get thenetwork interruption alarm options

Syntax:

http://<server ipaddr>/cgi-bin/networkinterruption_cgi?action=get

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/networkinterruption_cgi?action=get&user=admin

&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

DetectSwitch=close

OutputSwitch=close

OutputDuration=9

SnapSwitch=close

SnapNum=10

SnapInterval=1.5

RecordSwitch=close

RecordTime=62

19.2. Set thenetwork interruption alarm options

Syntax:

http://<server ipaddr>/cgi-bin/networkinterruption_cgi?action=set

[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/networkinterruption_cgi?action=set&user=admin&

pwd=admin&DetectSwitch=open&outputSwitch=open&OutputDuration=21&SnapSwitch=o

pen&SnapNum=20&SnapInterval=2&RecordSwitch=open&RecordTime=61

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

20. Alarm status

20.1. Method 1 (prefer)

20.1.1. Мониторинг уровней детекции движения устройства

Предлагается использовать GET-запрос для запроса текущих значений уровней детекции движения. В ответ на запрос устройство должно открыть поток, в который с максимально возможной частотой должно помещать информацию об уровнях всех заданных зон детекции движения.

Синтаксисзапроса:

http://<server ipaddr>/cgi-bin/motiondetectionstate_cgi?channel=<value>&user=<value>&pwd=<value>

Ответназапрос:

<detectAreaNumber>=<level>{,<detectAreaNumber>=<level>}\n

Параметры запроса и ответа представлены ниже:

Параметры	**Значения**	**Описание**
Параметры GET-запроса		
channel=<string>	0-...	Номер канала.
user=<string>	Имя пользователя	Допустимые символы: a-z, A-Z, 0-9.
pwd=<string>	Пароль пользователя	Допустимые символы: a-z, A-Z, 0-9.
Параметры ответа сервера на GET-запрос		
<detectAreaNumber>	0-...	Номер зоны детекции.
<level>	0-100	Уровень обнаружения движения в зоне детекции.

Пример:

Запрос:

http://192.168.88.187/cgi-bin/motiondetectionstate_cgi?channel=0&user=admin&pwd=admin

Ответ:

0=1,1=0\n

0=15,1=0\n

0=100,1=25\n

0=80,1=60\n

0=0,1=100\n

0=0,1=10\n

0=0,1=0\n

...

20.1.2. Мониторинг изменений статусов тревоги устройства

Предлагается использовать GET-запрос для запроса оповещений об изменении состояния тревоги устройства. В ответ на запрос устройство должно открыть постоянное соединение, через которое оно будет передавать информацию об изменении состояния соответствующей тревоги сразу же после указанного изменения.

Синтаксисзапроса:

http://<server ipaddr>/cgi-bin/alarmchangestate_cgi?channel=<value>
[&parameter=<value>{;<value>}]&user=<value>&pwd=<value>

Ответназапрос:

<date>;<time>;<alarmType>;<alarmStatus>[;<detectAreaNumber>{,<detectAreaNumber>}][;<SensorNumber>]\n

Если в течение 5 секунд нет события тревоги, то отправляется символ новой строки '\n' для проверки доступности клиента.

Параметры запроса и ответа представлены ниже:

Параметры	**Значения**	**Описание**
Параметры GET-запроса		
channel=<string>	0-...	Номер канала.
parameter=<string>	MotionDetection, VideoLoss, SensorInAlarm, SensorOutAlarm, ShelterAlarm.	Тип тревоги, который необходимо получать. Параметр может быть не задан или принимать сразу несколько аргументов. Если параметр не задан, то необходимо получать изменения статусов по всем типам тревоги.
user=<string>	Имя пользователя	Допустимые символы: a-z, A-Z, 0-9.
pwd=<string>	Пароль пользователя	Допустимые символы: a-z, A-Z, 0-9.
Параметры ответа сервера на GET-запрос		
<date> <time>	ГГГГ-ММ-ДД ЧЧ:ММ:СС	Дата. Время.
<alarmType>	MotionDetection, VideoLoss,	Тип тревоги.

	SensorInAlarm, SensorOutAlarm, ShelterAlarm.	
<alarmStatus>	1,0	Статус срабатывания тревоги: 1 – тревога включилась, 0 – тревога выключилась.
<detectAreaNumber>	0-...	Номер зоны детекции. Параметр актуален только для статуса тревоги «MotionDetection» и может принимать сразу несколько аргументов.
<sensorNumber>	0-...	Актуален только для статусов тревоги «SensorInAlarm» и «SensorOutAlarm». Параметр необходим в случае, если входных контактов или/и выходных контактов может быть несколько. Если входных/выходных контактов несколько, то значением параметра будет номер входного/выходного контакта (значение 0-...). Если входной/выходной контакт один — значение 0.

Пример:

Запрос:

http://192.168.88.187/cgi-bin/alarmchangestate_cgi?channel=0&parameter=MotionDetection;SensorInAlarm&user=admin&pwd=admin

Ответ:

2012-06-04;20:00:36;MotionDetection;1;0,1\n

2012-06-04;20:00:36;SensorInAlarm;1;0\n

2012-06-04;20:00:40;SensorInAlarm;0;0\n

2012-06-04;20:00:47;MotionDetection;0;0\n

2012-06-04;20:01:23;MotionDetection;0;1\n

20.2. Method 2 (less preferred)

Obtain alarm status.

Note: This requires administrator access (administrator authorization). Information about alarm status add to response body every two seconds.

Syntax:

http://<server ipaddr>/cgi-bin/alarmstate_cgi?action=<value>&parameter=<value>&user=<value>&pwd=<value>

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, clear*	*get = get the alarm statues.* *clear =Remove all the current state of alarm.*
parameter=<string>	*MotionDetection, VideoLoss, SensorAlarm, NetworkInterruption, ShelterAlarm.*	*This parameter can used to query the interest alarm type.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
AlarmType=<string>	*MotionDetection, VideoLoss , SensorAlarm, NetworkInterruption, ShelterAlarm.*	*The type of the alarm.*
Alarm Level=<int>	*0~100*	*Level of motion detection from all areas. Is actual when AlarmType is MotionDetection*
Alarm Type Switch=<string>	*open, close*	*Open when interest alarm type turned on.*
Alarm Status =	*1,0*	*When alarm triggered alarm status is*

<string>		*1, when not triggered alarm status 0.*

20.2.1. Get the alarm status

Syntax:

http://<server ipaddr>/cgi-bin/alarmstate_cgi?action=get&user=<value>

&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Channel=<value> date=year-month-day time=hour:minute:second

AlarmType=<value> Alarm Level =<value> Alarm Type Switch=<value> Alarm Status=<value>

Example:

http://192.168.88.187/cgi-bin/alarmstate_cgi?action=get&parameter=MotionDetection&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type: multipart/x-mixed-replace;boundary=detection /plain

Body:

…

--detection

Content-Type:text/plain\r\n

Channel=0 date=2012-06-04 time=20:00:36

AlarmType= Motion Alarm

*Alarm Level =**0***

Alarm Type Switch=open

*Alarm Status=**0***

\r\n

--detection

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

Channel=0 date=2012-06-04 time=20:08:25

AlarmType= Motion Alarm

*Alarm Level =**40***

Alarm Type Switch=open

*Alarm Status=**1***

\r\n

--detection

…

20.2.2. Clear the alarm statues

Syntax:

http://<server ipaddr>/cgi-bin/alarmstate_cgi?action=clear&user=<value>

&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

21. ALARM OUT

Obtain alarm output status.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ alarmout _cgi?action=set&parameter=<value>&

user=<value>&pwd=<value>

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*set*	*set = set the alarm out parameter*
Output=<int>	*0~7*	*The channel number*
Status=<string>	*0,1*	*When status=1 output close, when status=0 output open*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

Example:

http://192.168.88.187/cgi-bin/alarmout_cgi?action=set&user=admin&

pwd=admin&Output=0&Status=1

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

22. CONTROLLER

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/controller_cgi?action=<value>&parameter=<value>&user=<value>&pwd=<value>

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the controller type.* *set = set controller type.*
Type=<string>	*1, 3*	*1 – 1 channel relay switch box* *3 – 3 channel relay switch box*
Output1<int>	*Open, close*	*Output number*
Output2=<int>		
Output3=<int>		
Delay1=<int>	*1,2,3,4,5,6,7,8,9,10 s*	*Time triggered alarm out*
Delay2=<int>		
Delay3=<int>		
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

22.1. Get type

Syntax:

http://<server ipaddr>/cgi-bin/ controller_cgi?action=get&user=<value>
&pwd=<value>

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
Type=1
Output1=close
Output2=open
Output3=open
Delay1=1
Delay2=1
Delay3=1

22.2. Set type

Syntax:

http://<server ipaddr>/cgi-bin/ controller_cgi?action=set&parameter=<value>&
user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/controller_cgi?action=set&user=admin&pwd=admin&Type=3

Response:

HTTP/1.0 200 OK\r\n
Content-Type: text/plain\r\n
\r\n
OK\r\n

23. IR light mode

***Parameter**: IRLampSpecMode,*

***Value**: open, close*

***cgi-request of current setting get**:*

/cgi-bin/videoother_cgi?action=get

***cgi-request of set velue**:*

/cgi-bin/videoother_cgi?action=set&IRLampSpecMode=open

/cgi-bin/videoother_cgi?action=set&IRLampSpecMode=close

Example:

http://192.168.88.187/cgi-bin/videoother_cgi?action=get

http://192.168.88.187/cgi-bin/videoother_cgi?action=set&IRLampSpecMode=open

24. PPPOE

Get and set the PPPOE options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/pppoe_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the PPPOE options.* *set = set the PPPOE options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
PppoeSwitch=<string>	*open,* *close*	*Whether use PPPOE to dial out.*
PppoeIpaddr=<string>	*An IP address*	*The IP address returned in the dial-up after the success of. Cannot be set.*
PppoeUser=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.* *The length is more than 32.*
PppoePwd=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.* *The length is more than 32.*

OnlieTime=<int>	*<string>*	*The amount of time online. Cannot be set.*

23.1. Get thePPPOE options

Syntax:

http://<server ipaddr>/cgi-bin/pppoe_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/pppoe_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

PppoeSwitch=close

PppoeIpaddr=0.0.0.0

PppoeUser=User1

PppoePwd=456123

OnlieTime=0minutes

23.2. Set the PPPOE options

Syntax:

http://<server ipaddr>/cgi-bin/pppoe_cgi?action=set[&<parameter>=

<value>]

Example:

http://192.168.88.187/cgi-bin/pppoe_cgi?action=set&user=admin&pwd=admin&PppoeSwitch=open&PppoeUser=test&PppoePwd=123456

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

24. UPNP

Get and set the UPNP options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/upnp_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	Values	Description
action=<string>	get, set	get = get the UPNP options. set = set the UPNP options.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.
UpnpSwitch =<string>	open,close	Whether to enable the UPNP .
UpnpEthNo=<string>	Lineate, WiFi	NIC type.
UpnpMode=<string>	Designate, Auto	The mode of the UPNP server.
UpnpHost=<string>	<A server URL>	The host address of the UPNP.
UpnpWebPort=<int>	Valid port number.	The web port of the UPNP.
UpnpDataPort=<int>	Valid port number.	The data port of the UPNP.

24.1. Get theUPNP options

Syntax:

http://<server ipaddr>/cgi-bin/upnp_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/upnp_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

UpnpSwitch=close

UpnpEthNo=WiFi

UpnpMode=Designate

UpnpHost=192.168.88.18

UpnpWebPort=80

UpnpDataPort=5000

24.2. Set theUPNP options

Syntax:

http://<server ipaddr>/cgi-bin/upnp_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/upnp_cgi?action=set&user=admin&pwd=admin&

UpnpSwitch=open&UpnpEthNo=WiFi&UpnpMode=Designate&UpnpWebPort=55&

UpnpDataPort=88&UpnpHost=192%2E168%2E88%2E188

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

24. Email

Get and set the Email options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/email_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the Email options.* *set = set the Email options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

SmtpServer=<string>	*<string>*	*Such as: smtp%2Esafeautomation%2Epl (smtp.safeautomation.pl).*
MailFrom=<string>	*<string>*	*Such as: test%40safeautomation%2Epl(test@safeautomation.pl).*
MailTo=<string>	*<string>*	*Such as: test1%40safeautomation%2Epl (test1@safeautomation.pl).*
SmtpUser=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
SmtpPwd=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
MailTile=<string>	*<string>*	*Such as: Alarm%20Message(Alarm Message)*
SmtpPort=<int>	*25,1~65535*	*Smtp port.*

24.1. Get theemail options

Syntax:

http://<server ipaddr>/cgi-bin/email_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/email_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

SmtpServer=smtp.safeautomation.pl

MailFrom=test@safeautomation.pl

MailTo=test1@safeautomation.pl

SmtpUser=user

SmtpPwd=123456

MailTile=Alarm Message

SmtpPort=25

24.2. Set theemail options

Syntax:

http://<server ipaddr>/cgi-bin/email_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/email_cgi?action=set&user=admin&pwd=admin&
SmtpServer=smtp%2Esafeautomation%2Epl&MailFrom=test%40safeautomation%2Epl&M
ailTo=test1%40safeautomation%2Epl&SmtpUser=user&SmtpPwd=123456&MailTile=Alar
m%20Message&SmtpPort=25

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
OK\r\n

25. FTP

Get and set the FTP options.

Note: This requires administrator access, when the preferred server connection fails, the device enabled the alternate server connection. FtpURL2, FtpPath2, FtpUser2, FtpPwd2, FtpPort2 are the parameter of the alternate server.

Syntax:

http://<server ipaddr>/cgi-bin/ftp_cgi?<parameter>=<value>
[&<parameter>=<value>]
with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the FTP options.* *set = set the FTP options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
FtpURL=<string>	*A IP address*	*Such as: 192%2E168%2E88%2E187*

FtpPath=<string>	*<string>*	*Such as:%2Fcapture%2F(/capture/)*
FtpUser=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
FtpPwd=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
FtpPort=<int>	*21,1~65535*	*FTP server port.*
FtpURL2=<string>	*A IP address*	*Such as: 192%2E168%2E88%2E186*
FtpPath2=<string>	*<string>*	*Such as:%2Fcapture%2F(/capture/)*
FtpUser2=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
FtpPwd2=<string>	*<string>*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
FtpPort2=<int>	*21,1~65535*	*FTP server port.*

25.1. Get theFTP options

Syntax:

http:///<server ipaddr>/cgi-bin/ftp_cgi?action=get&user=<value>

&pwd=<value>

Example:

http:///192.168.88.187/cgi-bin/ftp_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Preferred Server:

FtpURL=192.168.88.185

FtpPath=/catalog/

FtpPort=21

FtpUser=ftp1

FtpPwd=123456

Alternate Server:

FtpURL2=192.168.88.186

FtpPath2=/capture/

FtpPort2=21

FtpUser2=ftp2

FtpPwd2=123456

25.2. Set theFTP options

Syntax:

http://<server ipaddr>/cgi-bin/ftp_cgi?action=set[&<parameter>=<value>]

Example: *set the alternate server parameter*

http://192.168.88.187/cgi-bin/ftp_cgi?action=set&user=admin&pwd=admin&

FtpURL2=192%2E168%2E88%2E187&FtpPath2=%2Fphotos%2F&FtpPort2=22&FtpUser2=ftptest&FtpPwd2=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

26. DDNS

Get and set the DDNS options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ddns_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the DDNS options.* *set = set the DDNS options.*
user=<string>	*A user name*	*Valid characters are a thru z, A* *thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A* *thru Z and 0 thru 9.*

Provider=<string>	*NULL,mvddns.net,3322.org, dyndns.org*	*Service providers. NULL: Do not enable DDNS service.*
DdnsName=<string>	*<string>*	*DDNS registered name.*
DdnsPass=<string>	*<string>*	*DDNS registered password.*
Domain=<string>	*<string>*	*If DDNS is set successfully, you can access the device through the domain name.*
ServerUrl=<string>	*<A server URL>*	*The address of the DDNS server. Such as: members%2Edyndns%2Eorg (members.dyndns.org)*
ServerPort=<int>	*Valid port number.*	*The port of the DDNS server.*
DdnsMapDataPort=<int>	*Valid port number.*	*Data mapping port.*
DdnsMapWebPort=<int>	*Valid port number.*	*Web service mapping port.*
UpdateInterval=<int>	*0:2 minutes, 1:5 minutes, 2:30 minutes, 3:1 hours, 4: 2 hours, 5: 1 days, 6:IP update.*	*DDNS update time interval.*

26.1. Get theDDNS options

Syntax:

http://<server ipaddr>/cgi-bin/ddns_cgi?action=get&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/ddns_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Provider=dyndns.org

DdnsName= test

DdnsPass= 123456

Domain= mk56.dyndns.org

ServerUrl=members.dyndns.org

ServerPort=30000

DdnsMapDataPort=5000

DdnsMapWebPort=80

UpdateInterval=5 minutes

26.2. Set theDDNS options

Syntax:

http://<server ipaddr>/cgi-bin/ddns_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/ddns_cgi?action=set&user=admin&pwd=admin&
Provider=dyndns%2Eorg&DdnsName=test&DdnsPass=123456&Domain=mk56%2Edyndn
s%2Eorg&ServerUrl=members%2Edyndns%2Eorg&ServerPort=20000&DdnsMapDataPor
t=500&DdnsMapWebPort=8080&UpdateInterval=1

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

27. VPN

Get and set the VPN options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/vpn_cgi?<parameter>=<value>
[&<parameter>=<value>]
with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the VPN options.*

		set = set the VPN options.
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
VpnSwitch=<string>	*open,close*	*Whether to enable the VPN.*
VpnServer=<string>	*<string>*	*The address of the VPN server.*
VpnName=<string>	*<string>*	*The user name.*
VpnPwd=<string>	*<string>*	*The user password.*
VpnIP=<string>	*Valid port number.*	*The IP address of the equipment when VPN enable successful. Can't be set.*
VpnStatus=<string>	*Valid port number.*	*The status of the VPN. Can't be set.*

27.1. Get theVPN options

Syntax:

http://<server ipaddr>/cgi-bin/vpn_cgi?action=get&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/vpn_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

VpnSwitch=open

VpnServer=192.168.88.188

VpnName=test

VpnPwd=123456

VpnIP=0.0.0.0

VpnStatus=dial-up failed 2 times, device will try again!

27.2. Set theVPN options

Syntax:

http://<server ipaddr>/cgi-bin/vpn_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/vpn_cgi?action=set&user=admin&pwd=admin&

VpnSwitch=open& VpnServer=192.168.88.188&VpnName=test&VpnPwd=123456

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

28. RTSP Parameter

Get and set the RTSP options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/rtsp_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the RTSP options.* *set = set the RTSP options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
RtspSwitch=<string>	*open, close*	*Whether to enable the RTSP.*
RtspMode=<string>	*Initiative, Passivity*	*RTSP service mode.*
RtspAuth=<string>	*open, close*	*Whether to enable the RTSP auth.*
RtspPacketSize=<int>	*1~1460*	*RTSP data package time.*
RtspServer=<string>	*<RTSP server address >*	*When the mode selection to take the initiative to connect, you need to set this parameter.* *The address of the RTSP server.*
RtspPort=<int>	*1~65535*	*The port of the RTSP server.*
MultServer=<int>	*<RTSP MultServer*	*The address of the RTSP multicast*

	address >	*server.*
MultPreVPort=<int>	*Valid port number.*	*The main-stream multicast video port.*
MultPreAPort=<int>	*Valid port number.*	*The main-stream multicast audio port.*
MultAltVPort=<int>	*Valid port number.*	*Sub-stream multicast video port.*
MultAltAPort=<int>	*Valid port number.*	*Sub-stream multicast audio port.*

28.1. Get theRTSP options

Syntax:

http://<server ipaddr>/cgi-bin/rtsp_cgi?action=get&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/rtsp_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

RtspSwitch=open

RtspMode=Passivity

RtspAuth=close

RtspPacketSize=1460

RtspPort=554

Multicast Options:

MultServer=231.0.0.222

MultPreVPort=5010

MultPreAPort=5012

MultAltVPort=5020

MultAltAPort=5022

28.2. Set theRTSP options

Syntax:

http://<server ipaddr>/cgi-bin/rtsp_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/rtsp_cgi?action=set&user=admin&pwd=admin&

RtspSwitch=close&RtspMode=Initiative&RtspAuth=open&RtspPacketSize=1400&RtspPort

=553&MultServer=231.0.0.221&MultPreVPort=5001&MultPreAPort=5002&MultAltVPort=5003&MultAltAPort=5004

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

29. IP Email

Get and set the IP Email options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ipemail_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the IP Email options.* *set = set the IP Email options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
IpEmailSwitch =<string>	*open, close*	*Whether to enable the IP Email.*
UpdateInterval =<int>	*0: Default* *1: 1 hour,* *2: 2 hour,* *3: 1 day,* *4: 2 day,* *5: 7 day.*	*IP Email update time interval.*

29.1. Get theIP Email options

Syntax:

http://<server ipaddr>/cgi-bin/ipemail_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/ipemail_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

IpEmailSwitch=close

UpdateInterval=Default

29.2. Set theIP Email options

Syntax:

http://<server ipaddr>/cgi-bin/ipemail_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/ipemail_cgi?action=set&user=admin&pwd=admin&

IpEmailSwitch=open&UpdateInterval=3

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

30. Center connection

Get and set the center connection options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/connecting_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get=get the center connection options.* *set = set thecenter connection options.*

user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
ConnectCenterSwitch =<string>	*open, close*	*Whether to enable the center connection.*
ConnectCenterPort =<int>	*Valid port number.*	*The port of the connection service.*
ConnectCenterIP=<string>	*An IP address.*	*Such as: 192%2E167%2E88%2E185(192.168.88.185).*

30.1. Get the center connection options

Syntax:

http://<server ipaddr>/cgi-bin/connecting_cgi?action=get&user=<value>
&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/connecting_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
ConnectCenterSwitch=close
ConnectCenterPort=6500
ConnectCenterIP=192.168.88.187

30.2. Set thecenter connection options

Syntax:

http://<server ipaddr>/cgi-bin/connecting_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/connecting_cgi?action=set&user=admin&pwd=admin
&ConnectCenterSwitch=open&ConnectCenterPort=5500&ConnectCenterIP=192%2E168
%2E88%2E185

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

31. Mobile monitor

Get and set the mobile monitor options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/mobile_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the mobile monitor options.* *set = set the mobile monitor options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
MobileMode=<string>	*CS, P2P*	*The mobile monitor service mode.*
ServerUrl=<string>	*<string>*	*The address of the mobile monitor server.Only the CS mode with this option.*
ServerPort=<int>	*0~65535*	*The port of the mobile monitor service.*
DeviceId=<int>	*0~2147483647*	*The ID of the device access. Only the CS mode with this option.*
RealTime=<string>	*Fine, Normal, Basic*	*Real-time selection of services.*
ChannelSwitch0=<string>	*open, close*	*Whether the access channel 0. Only the CS mode with this option.*
ChannelSwitch1=<string>	*open, close*	*Whether the access channel 1. Only the CS mode with this option.*
ChannelSwitch2=<string>	*open, close*	*Whether the access channel 2. Only*

		the CS mode with this option.
ChannelSwitch3=<string>	*open, close*	*Whether the access channel 3. Only the CS mode with this option.*

31.1. Get themobile monitor options

Syntax:

http://<server ipaddr>/cgi-bin/mobile_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/mobile_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Mode=CS

ServerUrl=116.113.109.179

ServerPort=15960

DeviceId=2020

RealTime=Basic

ChannelSwitch0=open

ChannelSwitch1=open

ChannelSwitch2=close

ChannelSwitch3=open

31.2. Set themobile monitor options

Syntax:

http://<server ipaddr>/cgi-bin/mobile_cgi?action=set[&<parameter>=<value>]

Example: *Set up mobile phone monitoring mode for P2P mode*

http://192.168.88.187/cgi-bin/mobile_cgi?action=set&user=admin&pwd=admin&

Mode=P2P&ServerPort=1606&RealTime=Fine

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK,Device is rebooting\r\n

When the parameter is not changed, return "Param not change\r\n".

32. Record

Get and set the record options.

Note: This requires administrator access, When device has storage (hard disk, SD card, USB disk), schedule Record will be saved to the storage first and do related process based on file storage. Or it will be saved to memory for the moment and do related process based on file storage.

Syntax:

http://<server ipaddr>/cgi-bin/record_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the Record options.* *set = set the Record options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
SaveMode=<string>	*Ftp, Local*	*The way to save the video resources.*
Time1Switch=<string>	*close, open*	*Time 1 selector switch.*
Time1_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time1_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time1_EndHour=<int>	*0~23*	*The end of the hour value.*
Time1_EndMinute=<int>	*0~59*	*The end the minute value.*
Time2Switch=<string>	*close, open*	*Time 2 selector switch.*
Time2_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time2_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time2_EndHour=<int>	*0~23*	*The end of the hour value.*

Time2_EndMinute=<int>	*0~59*	*The beginning of the minute value.*

32.1. Get therecord options

Syntax:

http://<server ipaddr>/cgi-bin/record_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/record_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

StreamType=AlternateStream

PackageTime=1

SaveDay=0

OverWrite=1

SaveMode=Ftp

Time1Switch=close

Time1_BngHour=0 Time1_BngMinute=0 Time1_EndHour=20 Time1_EndMinute=59

Time2Switch=close

Time2_BngHour=0 Time2_BngMinute=0 Time2_EndHour=23 Time2_EndMinute=59

32.2. Set therecord options of the different channels

Syntax:

http://<server ipaddr>/cgi-bin/record_cgi?action=set&channel=<value>

[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/record_cgi?action=set&channel=0&user=admin&pwd=admin

&SaveMode=Local&Time1Switch=open&Time1_BngHour=10&Time1_BngMinute=20&Tim

e1_EndHour=23&Time1_EndMinute=50

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

32.3. Set therecord options (shared by all channels)

Syntax:

http://<server ipaddr>/cgi-bin/record_cgi?action=set[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
StreamType=<string>	*PreferredStream, AlternateStream*	*The stream type of record.*
PackageTime=<int>	*1,5,10,15,20…60(Minute)*	*The package time of record.*
SaveDay=<int>	*0~180(day)*	*Video resource reservation time. 0:if sufficient storage space, the resources will be permanently saved.*
OverWrite=<int>	*0,1*	*When not enough storage space whether to automatically delete old resource. 0:No 1:Yes*

Example:

http://192.168.88.187/cgi-bin/record_cgi?action=set&user=admin&pwd=admin

&StreamType=AlternateStream&PackageTime=5&SaveDay=0&OverWrite=1

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

33. Snap

Get and set the snap options.

Note: This requires administrator access, if you use Ftp(Email) to save the image, you need to set the Ftp(Email) parameters first.

Syntax:

http://<server ipaddr>/cgi-bin/snap_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the Record options.* *set = set the Record options.*
channel=<int>	*0~3*	*The channel number of the video.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
SaveMode=<string>	*Ftp,Local,Email, FtpEmail*	*The way to save the video resources.* *FtpEmail means Ftp and Email .*
ShootInterval=<float>	*0.5~1000*	*The time interval of the captured images.*
Time1Switch=<string>	*close, open*	*Time 1 selector switch.*
Time1_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time1_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time1_EndHour=<int>	*0~23*	*The end of the hour value.*
Time1_EndMinute=<int>	*0~59*	*The end the minute value.*
Time2Switch=<string>	*close, open*	*Time 2 selector switch.*
Time2_BgnHour=<int>	*0~23*	*The beginning of the hour value.*
Time2_BgnMinute=<int>	*0~59*	*The beginning of the minute value.*
Time2_EndHour=<int>	*0~23*	*The end of the hour value.*
Time2_EndMinute=<int>	*0~59*	*The beginning of the minute value.*

33.1. Get thesnap options

Syntax:

http://<server ipaddr>/cgi-bin/snap_cgi?action=get&channel=<value>

&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/snap_cgi?action=get&channel=0&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

SaveMode=Local

ShootInterval=10.0

Time1Switch=close

Time1_BngHour=10 Time1_BngMinute=25 Time1_EndHour=23 Time1_EndMinute=59

Time2Switch=close

Time2_BngHour=0 Time2_BngMinute=0 Time2_EndHour=23 Time2_EndMinute=59

33.2. Set thesnap options

Syntax:

http://<server ipaddr>/cgi-bin/snap_cgi?action=set&channel=<value>

[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/snap_cgi?action=set&channel=0&user=admin&

pwd=admin&SaveMode=Email&ShootInterval=2.5&Time1Switch=close&Time1_BngHour=

10&Time1_BngMinute=20&Time1_EndHour=23&Time1_EndMinute=50

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

34. COM Setting

Get and set the COM setting options.

Note: This requires administrator access (administrator authorization).

Syntax: http://<server ipaddr>/cgi-bin/com_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string	*get, set*	*get = get*

>		*the DDNS options. set = set the DDNS options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
Baudrate1=<int>	*300,600,1200,2400,4800,9600,14400,19200,38400,56000,57600,115200,128000,256000.*	*RS485 serial communication baud rate.*
DataBits1=<int>	*5, 6, 7, 8*	*RS485 serial communication data bits.*
StopBits1=<int>	*1, 2*	*RS485 serial communication stop bits.*
CheckType1=	*0: None, 1: Odd*	*Checksu*

<string>	*2: Even, 3: Mark* *4: Space*	*m types of RS485 serial communication.*
FlowCtrl1=<string>	*None, Hardware, Software*	*Type of flow control for RS485 serial communication.*
Baudrate2=<int>	*300,600,1200,2400,4800,9600,14400,19200,38400,56000,57600,115200,128000,256000.*	*RS232 serial communication baud rate.*
DataBits2=<int>	*5, 6, 7, 8*	*RS232 serial communication data bits.*
StopBits2=<int>	*1, 2*	*RS232 serial communication stop bits.*
CheckType2=<string>	*0: None, 1: Odd 2: Even, 3: Mark 4: Space*	*Checksum types of RS232 serial communication.*

FlowCtrl2=<string>	*None, Hardware, Software*	*Type of flow control for RS232 serial communication.*

34.1. Get theCOM options

Syntax:

http://<server ipaddr>/cgi-bin/com_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/com_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

COM RS485:

Baudrate1=9600

DataBits1=8

StopBits1=2

CheckType1=Space

FlowCtrl1=Software

COM RS232:

Baudrate2=9600

DataBits2=5

StopBits2=1

CheckType2=Even

FlowCtrl2=Hardware

34.2. Set theCOM options

Syntax:

http://<server ipaddr>/cgi-bin/com_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/com_cgi?action=set&user=admin&pwd=admin
&Baudrate1=115200&DataBits1=7&StopBits1=1&CheckType1=1&FlowCtrl1=None&Baudr
ate2=115200&DataBits2=7&StopBits2=1&CheckType2=1&FlowCtrl2=None

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
OK\r\n

35. System Info

Get the system information.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/systeminfo_cgi?user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/systeminfo_cgi?user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
HostName=IPC12544
ChannelNum=1
Standard=PAL
DeviceID=12544
SoftwareVersion=2.0.0.2.52.18
HardwareVersion=Hi3518 IP Camera
DeviceModel=B1710
1、fix the rtsp sometimes disconnect ,then connect
2、fix the segment fault when you use the videocoding_cgi command sometimes
3、modify the ntp function,make it more stable

36. Upgrade

Device software upgrade. DS03M(P) bells update (for DS03M(P) only).

Note: This requires administrator access (administrator authorization).

Method: POST

Syntax:

http://<server ipaddr>/cgi-bin/upgrade_cgi?user=<value>&pwd=<value>

Example (Firmware upgrade):

http://192.168.88.187/cgi-bin/upgrade_cgi?user=admin&pwd=<admin>

Response:

Case1: *Upgrade was successful.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK,Device is rebooting\n

Filename = hh5898_v2.3.1.2.0.159.uot\n

Size = 1702576 bytes\r\n

Case2: *Upgrade failure.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Request failed: The upgrade file is not correct!\r\n

Example 2 (DS03M bells update):

http://192.168.88.187/cgi-bin/upgrade_cgi?user=admin&pwd=<admin>

Response:

Case1: *Upgrade was successful.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Upload was successful\n

Filename = bells1.wav\n

Size = 63886 bytes \r\n

Case2: *Upgrade failure. Wrong name.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Upgrade failure

Request failed: The upgrade file have wrong name! \r\n

37. Obtaining device firmware version

Note: Login using the user must be "root".

Obtaining Hi3512 device firmware version with three steps.

First:

Login equipment remotely via Telnet, Enter your user name and password.

Command: telnet <service ipaddr>, then entry "user",

then entry "password".

Example: telnet 192.168.88.187 , user, 1234

Second:

Switch to the user directory.

Command: cd /usr

Third:

Obtaining device firmware version.

Command: cat FirmwareVersion

38. DHCP

Note: If a DHCP server is unavailable, the DVS IP address will be 192.168.0.99. And Equipment will be every ten minutes request a DHCP service.

Syntax:

http://<server ipaddr>/cgi-bin/date_cgi?action=set&user=<value>

&pwd=<value>&BootProto=dhcp

Open DHCP service:"set BootProto=dhcp",

Close DHCP service:"set BootProto=none".

Example:

http://192.168.88.187/cgi-bin/network_cgi?action=set&user=admin&pwd=admin

&BootProto=dhcp

Response:

Case 1: system network parameter are changed.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK, Device is rebooting\r\n

Case 2: system network parameter are not changed.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Param not change\r\n

Case 3: system network parameter are error.

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Request failed:Param error\r\n

39. SYSLOG

Note: Log retained for up to 512 records, and Log format according to RFC3164.

Syntax:

http://<server ipaddr>/cgi-bin/sysLog_cgi?user=<value>&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

<PRI><month><day><time><IP>: <action>\n

Example:

http://192.168.88.187/cgi-bin/sysLog_cgi?user=admin&pwd=admin

Response:

Case1: *get log successful.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

<116>Jul 13 15:56:23 192.168.88.187: Power off

<116>Jul 13 16:03:37 192.168.88.187: Power On

<116>Jul 13 16:04:39 192.168.88.187: Power off

<116>Jul 13 16:09:18 192.168.88.187: Power On

<116>Jul 13 16:10:12 192.168.88.187: Power off

……

***Case2:** get logfailed.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Request failed:Allocate memory failure\r\n

Analytical log command: <116>Jul 13 15:56:23 192.168.88.187: Power off.

<PRI>=116:

*PRI = Facility * 8 + Severity.*

Facility = log alert (14), Severity = Warning: warning conditions(4).

*14 * 8 + 4 = 116.*

<month><day><time><IP>= Jul 13 15:56:23 192.168.88.187.

<action>= Power off.

The kinds of action:

"Power On", "Power off",

"No.<channel+1> Sensor Alarm" ,

"No.<channel+1> Sensor Alarm Finish",

"No.<channel+1>Motion Alarm " ,

"No.<channel+1>Motion Alarm Finish",

"No.<channel+1> Shelter Alarm " ,

"No.<channel+1>Shelter Alarm Finish",

"No.<channel+1> Video Lose Alarm " ,

"No.<channel+1> Video Lose Alarm Finish",

……

40. PTZ

Send commands to the PTZ.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ptz_cgi?action=<value>&user=<value>

&pwd=<value>

with the following values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*Up, Down, Left, Right, AutoOn, AutoOff, FocusAdd, FocusSub, ZoomAdd, ZoomSub, LampOn, LampOff, BrushOn, BrushOff.*	*Up：PTZ move up.* *AutoOn:* *Enable PTZ move automatic.* *AutoOff:* *Enable PTZ move automatic.* *ZoomAdd：Zoom Up.* *ZoomSub：Zoom Down.* *FocusAdd, FocusSub:* *The equipment to support the automatic focus on function, the interface doesn't work.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Example:

http://192.168.88.187/cgi-bin/ptz_cgi?action=Up&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

41. PTZ Setting

Get or Set the PTZ setting options.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/ptz_setting?action=<value>

[&<parameter>=<value>]

with the following values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*get, set*	*get = get the PTZ options.* *set = set the PTZ options.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
AutoFlip=<string>	*ON, OFF*	*Whether or not to open the auto flip function.*
ProportionalPan=<string>	*ON, OFF*	*Whether or not to open the proportional pan function.*
VirtualZero=<string>	*Set,OK,Cancel*	*Set of Clear the "virtual zero position".*
ManualLimit=<string>	*ON, OFF*	*Whether or not to open the manual limit function.*
ScanLimit=<string>	*ON, OFF*	*Whether or not to open the scan limit function.*
DomeCameraReset=<string>	*ON*	*Reset dome camera setting.*
HSpeed=<int>	*1-40(degrees)*	*Level scanning speed.*
VSpeed=<int>	*1-20(degrees)*	*Vertical scanning speed.*
ParkMode=<int>	*0-14*	*0:"NO" 1: "Preset 1"* *2: "Preset 2" 3:"Preset 3"* *4: "Preset 4" 5:"Preset 5"* *6: "Preset 6" 7:"Preset 7"* *8:"Preset 8" 9:"Auto Scan"*

		10:"P&T Scan" *11:" Preset Tour 1"* *12:" Preset Tour 2"* *13:"Figure Scan 1"* *14:"Figure Scan 2"*
ParkTime=<int>	*2-60(Minutes)*	*The automatic guard start time.*
Preset1Num[1-8] =<int>	*0-255*	*The number of Preset position.*
Preset1KeepTime[1-8] =<int>	*0-3600(second)*	*Preset dwell time.*
Preset2Num[1-8] =<int>	*0-255*	*The number of Preset position.*
Preset2KeepTime[1-8] =<int>	*0-3600(second)*	*Preset dwell time.*
Time[1-5]Switch=<string>	*open, close*	*Enable Timing tasks.*
Time [1-5]Task=<int>	*0-14*	*Like ParkMode.*
Time[1-5]BgnHour=<int>	*0-23*	*The time to start the task.*
Time[1-5]BgnMinute=<int>	*0-59*	*The time to start the task.*
Time[1-5]EndHour=<int>	*0-23*	*The time to start the task.*
Time[1-5]EndMinute=<int>	*0-59*	*The time to start the task.*

Note: The time can't overlap between the five tasks.

41.1. Get the PTZ options

Example:

http://192.168.88.187/cgi-bin/ptzsetting_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

PTZ Setting:

AutoFlip=ON

ProportionalPan=OFF

VirtualZero=Not Set

ManualLimit=OFF

ScanLimit=OFF

Scan Speed:

HSpeed=2 VSpeed=1

Park Set:

ParkMode=0 ParkTime=2

Preset Tour:

Preset1Num1=0 Preset1KeepTime1=1

Preset1Num2=0 Preset1KeepTime2=2

Preset1Num3=0 Preset1KeepTime3=3

Preset1Num4=0 Preset1KeepTime4=4

Preset1Num5=0 Preset1KeepTime5=5

Preset1Num6=0 Preset1KeepTime6=6

Preset1Num7=0 Preset1KeepTime7=7

Preset1Num8=0 Preset1KeepTime8=8

Preset2Num1=0 Preset2KeepTime1=10

Preset2Num2=0 Preset2KeepTime2=11

Preset2Num3=0 Preset2KeepTime3=12

Preset2Num4=0 Preset2KeepTime4=13

Preset2Num5=0 Preset2KeepTime5=14

Preset2Num6=0 Preset2KeepTime6=16

Preset2Num7=0 Preset2KeepTime7=15

Preset2Num8=0 Preset2KeepTime8=17

Time Set:

Time1Switch=close Time1Task=0

Time1BgnHour=1 Time1BgnMinute=2 Time1EndHour=3 Time1EndMinute=4

Time2Switch=close Time2Task=0

Time2BgnHour=5 Time2BgnMinute=6 Time2EndHour=7 Time2EndMinute=8

Time3Switch=close Time3Task=0

Time3BgnHour=9 Time3BgnMinute=0 Time3EndHour=0 Time3EndMinute=0

Time4Switch=close Time4Task=0

Time4BgnHour=2 Time4BgnMinute=3 Time4EndHour=2 Time4EndMinute=4

Time5Switch=close Time5Task=0

Time5BgnHour=3 Time5BgnMinute=4 Time5EndHour=3 Time5EndMinute=5

41.2. Set thePTZ options

Example:

http://192.168.88.187/cgi-bin/ptzsetting_cgi?action=set&user=admin&pwd=admin&HSpeed=1&VSpeed=2&ParkMode=3&ParkTime=4&Preset1Num1=5&Preset1KeepTime1=6&Time1Switch=open&Time1Task=7&Time1BgnHour=8&Time1BgnMinute=9&Time1EndHour=10&Time1EndMinute=11

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

42. Dome Control

Using the dome control command.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/democontrol_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*PresetSet,* *PresetCall,* *PresetClear,* *PresetGet,* *FigureScanSet,* *FigureScanSave,* *FigureScanRun,* *FigureScanStop,* *LevelFlip,* *ZeroDetection,* *UpLimit, DownLimit* *LeftLimit, RightLimit*	*The command to control the dome.*

	PresetScan1, PresetScan2, PresetScanStop. AppleScan, AppleScanStop	
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
Title=<string>	*<string>,[PresetNum]*	*The title of the Preset position. When using the command of "PresetSet", Need to set up this parameters.*
PresetNum=<int>	*1-255*	*The number of the Preset position. When using the command of "PresetSet" , "PresetCall"," PresetGet", Need to set up this parameters.*
FigureScanNum=<int>	*1-2*	*The number of the Figure Scan. When using the command of "FigureScanSet", Need to set up this parameters.*

Example: *Set the preset position.*

http://192.168.88.187/cgi-bin/domecontrol_cgi?action=PresetSet&user=admin&pwd=admin&Title=test1&PresetNum=15.

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

42.1. Set PTZ position

Set PTZ position dome camera.

Note: This requires administrator access (administrator authorization). Support Extended Pelco D/P protocol only.

Syntax:

http://<server ipaddr>/cgi-bin/ptpositionset_cgi?action=set&?<parameter>=<value>
[&<parameter>=<value>]&user=<value>&pwd=<value>
with the following parameters and values.

<parameter>=<value>	Values	Description
PanPosition=<string>	00000 - 35900	Degrees its first 3 numeral, next minutes
TiltPosition=<string>	0000 - 9000	Degrees its first 2 numeral, next minutes

Example: *Set the PTZ position.*
http://192.168.88.187/cgi-bin/ptpositionset_cgi?action=set&PanPosition=15000&TiltPosition=3000&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n
\r\n
OK\r\n

42.2. Get PTZ position

Get PTZ position dome camera.

Note: This requires administrator access (administrator authorization). Support Extended Pelco D/P protocol only.

Syntax:

http://<server ipaddr>/cgi-bin/ptpositionset_cgi?action=get&user=<value>&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n
Content-Type:text/plain\r\n

\r\n

Pan Position= <value> \r\n

Tilt Position= <value> \r\n

Example:

http://192.168.88.187/cgi-bin/ptpositionset_cgi?action=get&user=admin&pwd=admin

Response:

Case1: *get position successful.*

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

Pan Position= 15000 \r\n

Tilt Position = 4500 \r\n

Case2: *Timeout or data is corrupted.*

receive from 485 timeout (>3s) \r\n

43. Get System Parameters

Get the system parameter in XML format.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/sysparam_cgi?&user=<value>&pwd=<value>

Return:

HTTP/1.0 200 OK\r\n

Content-Type:text/xml\r\n

\r\n

< system parameter data>

Parameters as the chart:



44. OSD Position

Change the position of text overlay.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/osdposition_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	*Values*	*Description*
action=<string>	*Up, Down,* *Right, Left.*	*The command to control the position of the OSD.* *Move 8 pixels once.*
channel=<int>	*0~3*	*The channel number of the video.*
value=<int>	*1,2*	*1: mean change the date, time, bitrate, week position.* *2: mean change the title position.*
user=<string>	*A user name*	*Valid characters are a thru z, A thru Z and 0 thru 9.*
pwd=<string>	*A user password*	*Valid characters are a thru z, A thru Z and 0 thru 9.*

Example: *Move right the title position of the channel 1.*

http://192.168.88.187/cgi-bin/osdposition_cgi?channel=1&action=Right&value=2&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

OK\r\n

45. Default parameter setting

The detail of the setting:

1. date_cgi

a. timezone=23 b. ntpHost=10.200.80.9

2. videocoding_cgi

a. EncType1=H.264

*b. Resolution1=704*576*

c. BitflowType1=CBR

d. FrameRate1=15

e. NormalBitrate1=512

f. EncType2=H.264

*g. Resolution2=704*576*

h. BitflowType2=CBR

i. FrameRate2=1

j. NormalBitrate2=256

3. audio_cgi

a. AudioSwitch=close

4. textoverlay_cgi

a. TimeValue=1

b. DateValue=1

c. WeekValue=0

d. Color=0

e. BitrateValue=0

f. TitleValue=1

5. upnp_cgi

a. UpnpSwitch=close

6. ddns_cgi

a. Provider=NULL

7. network_cgi

a.BootProto=dhcp

8. pwdgrp_cgi

a. remove all the normal user account which level is two.

*When you call the command of "**factorydefault_cgi**" or "**hardfactorydefault_cgi**", the default setting enable (SW reset).*

***Press the reset button 3 times** within 15 seconds (HW reset).*

46. SNMP

Get or set SNMP setting.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/snmp_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	Values	Description
action =<string>	get, set	get=get the parameter of SNMP setting. set= set the parameter of SNMP setting.
SnmpV1V2Switch =<string>	open, close	open =enabled the SNMP v1/v2 service. close =disabled the SNMP v1/v2 service.
CommunityRO =<string>	<a string>	The value of the community read-only.
CommunityRW =<string>	<a string>	The value of the community read-write.
SnmpTrapsSwitch =<string>	open, close	open =enabled the SNMP trap service. close =disabled the SNMP trap service.
TrapIpAddr=<string>	<a IP address>	The address of the trap service.
TrapCommunity =<string>	<a string>	The value of trap community.
SnmpV3Switch =<string>	open, close	open =enabled the SNMP v3 service. close =disabled the SNMP v3 service.
Username=<string>	<a string>	The user name of the MD5.
Password=<string>	<a string>	The user password of the MD5.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.

46.1. Get theSNMP options

Syntax:

http://<server ipaddr>/cgi-bin/snmp_cgi?action=get&user=<value>

&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/snmp_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n

\r\n

SnmpV1V2Switch=open

CommunityRO=

CommunityRW= public

SnmpTrapsSwitch=close

TrapIpAddr=192.168.88.187

TrapCommunity=public

SnmpV3Switch=open

Username= testuser

Password= testpassword

46.2. Set theSNMP options

Syntax:

http://<server ipaddr>/cgi-bin/snmp_cgi?action=set[&<parameter>=<value>]

Example:

http://192.168.88.187/cgi-bin/snmp_cgi?action=set&user=admin&pwd=admin&

SnmpV3Switch=open&Username=testuser&Password=testpassword

Response:

HTTP/1.0 200 OK\r\n

Content-Type:text/plain\r\n


\r\n

OK\r\n

47. CDP Auto-discovery Protocols

Note: Our device will send a CDP packet every 60s.

The following picture is the CDP packet detail content:

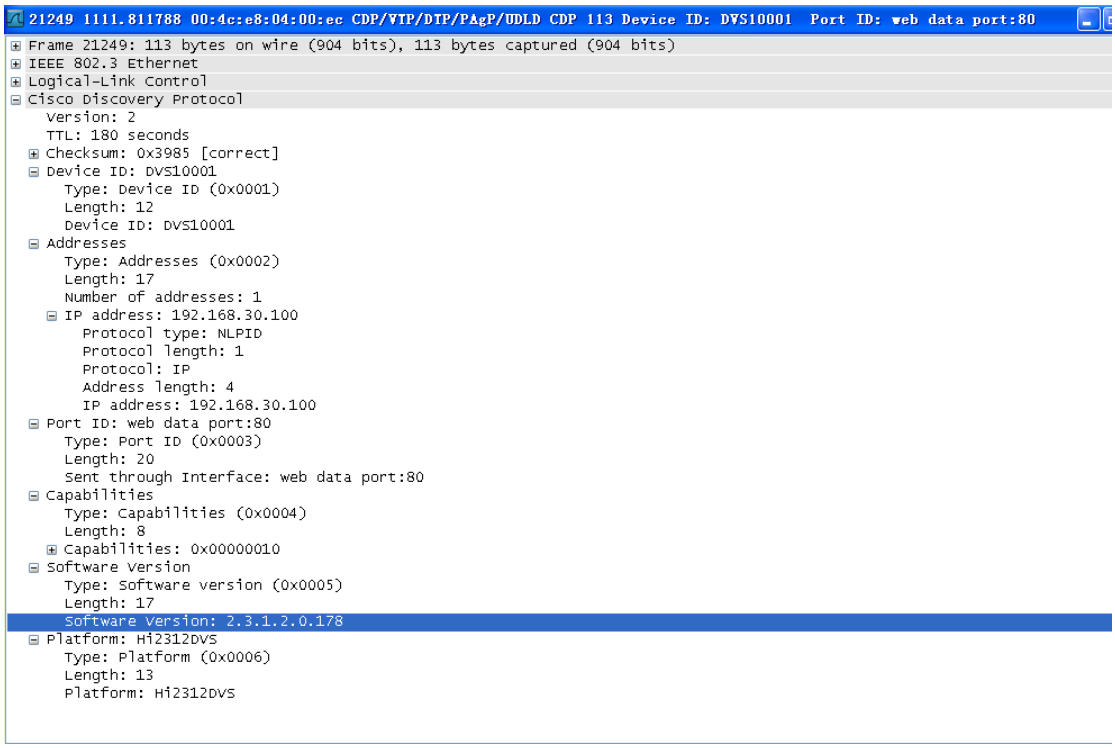

CDP header:

CDP protocol version: CDP 2.0

TTL: 180s

Checksum: true

Device ID:

Type:0x0001

Length: size of(type) + size of(length) + strlen(device name)

Device ID: (device name).

Address: device IP address.

Port ID: web data port.

Capabilities: Host.

Soft version: device firmware version.

Platform: Hardware version.

48. Storage Devices

Get Storage Devices information, or formatted the Storage Devices.

Note: This requires administrator access (administrator authorization).

Syntax:

http://<server ipaddr>/cgi-bin/storagedevices_cgi?<parameter>=<value>

[&<parameter>=<value>]

with the following parameters and values.

<parameter>=<value>	Values	Description
action =<string>	get, Format	get=get the detail of Storage Devices. Format = Formatted the Storage Devices.
StorageNum =<int>	1~4	Select which Storage Devices you want to Format.
user=<string>	A user name	Valid characters are a thru z, A thru Z and 0 thru 9.
pwd=<string>	A user password	Valid characters are a thru z, A thru Z and 0 thru 9.

48.1. Get Storage Devices information.

Syntax:

http://<server ipaddr>/cgi-bin/storagedevices_cgi?action=get&user=<value>
&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/storagedevices_cgi?action=get&user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n
Content-Type: text/plain\r\n
\r\n

Case 1: *Storage Devices are formatted*

Storage Device Info:

Title: TotalSize: FreeSize: State:
1 SD 7064 6574 formatted

Case 2: *Storage Devices are in formatting*

Storage Device Info:

Title: TotalSize: FreeSize: State:
1 SD 0 0
formatting(25%)

Case 2: *Didn't have Storage Devices*

Storage Device Info:

Title: TotalSize: FreeSize: State:

48.2. Formatted the Storage Devices

Syntax:

http://<server ipaddr>/cgi-bin/ storagedevices _cgi?action=Format&

StorageNum=<value>&user=<value>&pwd=<value>

Example:

http://192.168.88.187/cgi-bin/storagedevices_cgi?action=Format&StorageNum=1&

user=admin&pwd=admin

Response:

HTTP/1.0 200 OK\r\n

Content-Type: text/plain\r\n

\r\n

Case 1: Formatted success

OK\r\n

Case 2: Storage Number Error.

Request failed:Storage Number Error\r\n