


PECUMECU®

Wireless 2D Barcode Scanner

User Manual

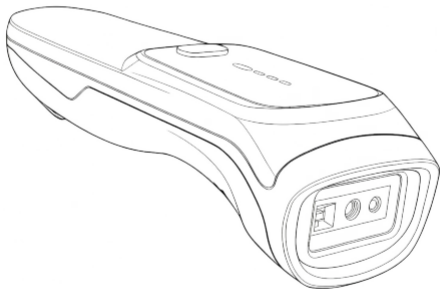

Model:TM-20B

E-mail: support@pecumecu.com

Contents

English	22
1. Quick Start Guide	01
2. Product Overview	02
3. Technical Parameter	03
4. Beep Instructions	05
5. Indicator Instructions	06
6. Troubleshooting	07
7. Base Configuration Code	09
7.1 Restore Default Settings	09
7.2 Allow Recognition Of All Types	09
7.3 Restore Default Recognition Type	10
7.4 Version Number	10
8. Wireless Connection Methods	11
8.1 Bluetooth Mode	11
8.2 Wireless 2.4G Mode	12
9. Upload Mode Settings	13
9.1 Real-Time Mode	13
9.2 Storage Mode	14
10. Scanning Mode Settings	15
10.1 Continuous Scanning	15

10.2 Inductive Scanning	-----	15
10.3 Manual Scanning	-----	15
11. Sleep Time Settings	-----	16
12. Sound Settings	-----	17
13. Keyboard Language Settings	-----	18
14. Commonly Used Function Configuration Codes	-----	19
14.1 Terminator Settings	-----	19
14.2 Disable/Enable UPC-A Check Digit Transmission	-----	20
14.3 Disable/Enable All 2D Symbologies	-----	21
14.4 Disable/Enable Inverse Barcode Reading	-----	22
Deutsch	-----	23
Français	-----	46
Español	-----	69
Italiano	-----	92

1. Quick Start Guide

This chapter explains how to use the barcode scanner after receiving it.

1.1 Turn on the barcode scanner by pressing and holding the SCAN buttons simultaneously for 2 seconds. If the barcode scanner makes a "DI, DI, DI, DI, DI" sound and the light turns off immediately, it means the battery is low. Please charge the barcode scanner immediately. Otherwise, the battery is sufficiently charged. (We recommend customers use the original charging cable to charge the barcode scanner when using it for the first time.)

1.2 After confirming that the barcode scanner is fully charged and turned on, test whether it can scan barcodes successfully. Press the scan trigger and aim the scanner at a barcode. If no device is connected, and the barcode scanner makes a "DI, DI" sound, it indicates that the barcode was read successfully.


1.3 Navigate to the Bluetooth settings on your smartphone or tablet. Ensure that Bluetooth is enabled and that the device is searching for available devices.

1.4 Check the list of available Bluetooth devices on your smartphone or tablet. Select "TM-20B Scanner" from the list to pair.

1.5 Open a note-taking app (such as Notes or Notepad) on your smartphone or tablet, and place the cursor in a blank text field. When you scan a barcode, the data will appear where the cursor is positioned. Please note: If you encounter any issues while using the product, please record a video demonstrating the steps you took and send it to support@pecumecu.com.

If you encounter any issues while using the product, please record a video demonstrating the steps you took and send it to support@pecumecu.com.

2. Product Overview

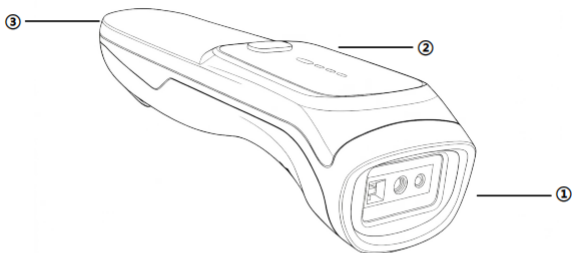

① Sensor ② On/Off/Scan Button ③ Charging Port



TM-20B Scanner x1



USB Cable x1



2.4GHz Receiver x1



Manual x1

3. Technical Parameter

Product Name	Portable Barcode Scanner
Model	TM-20B
Charging Input	5V-1A
Operating Current	≈185mA
Standby Current	66mA
Maximum Peak Current	280mA
Battery Capacity	1000mAh/3.7Wh
Light Source	White LED, Red LED
Net Weight	89.2±5g
Supported Barcode Types	1D & 2D Barcodes
Reading Accuracy	1D barcode ≥3.9mil; 2D barcode ≥7mil
Decoding Types (Full Mode)	1D Barcodes: AIM-128, Code 11, Code 39, Code 93, Code128, Codebar, Deutsche12, Deutsche14, EAN-8, EAN-13, GS1-RSS14, GS1-RSSLimited, Industrial 25, Interleaved 2 of 5, ISSN, ISBN, ITF-14, Matrix 2 of 5, MSI-Plessey, RSS-Expand, UCC/EAN-128, UPC-E, UPC-A2D Barcodes: PDF 417, Data Matrix, QR Code, Micro QR
Operating Temperature	0°C~45°C

Storage Temperature	-20°C ~ 60°C
Operating Humidity	5%RH ~ 90%RH (non-condensing)
Alert Modes	Buzzer, Indicator, Vibration
Transmission Type	Bluetooth / 2.4G Wireless / Wired Transmission
Scanning Mode	Manual, Continuous, Auto

4.Beep Instructions

One Long Beep	Power On / Off
One Short Beep	Successful normal barcode reading, pairing success, or wireless connection established
One Long Beep Plus Two Short Beeps	Enter Bluetooth pairing mode
Two Short Beeps	Bluetooth pairing failed
Five Short Beeps	Low battery, preparing for power-off

5.Indicator Instructions

Green Light Short Flashing	Successful barcode reading, short-term flashing
Green Light Continues To Flash	Last single LED flashing: Low battery;The indicator light flashes in a pulsing pattern: Charging
Green Light Steady On	Normal power-on status
Blue Light Continuous Flashing	Bluetooth connecting
Blue Light Steady On	Bluetooth connected
Red Light Steady On	Charging in progress; Red light turns off once fully charged

6. Troubleshooting

Fill-light & Red Aimpoint on, Barcode Unreadable	Barcode type not enabled or supported	Scan setup code or contact technical support: support@pecumecu.com
	Barcode damaged, creased or heavily reflective	Try scanning another intact barcode of the same type.
	Scanner-barcode angle or distance incorrect	Adjust scanner angle and distance so the white illuminator covers the full barcode, with red focus frame centered
	Screen reflection interference (phone / computer screen scanning)	Lower or raise the screen brightness.
Fill-Light On, No Red Aimpoint	Possible device malfunction	Contact technical support: support@pecumecu.com .
Device Fails To Power On And Operate	Device malfunction	Contact technical support: support@pecumecu.com .
Cannot Power On Or Shuts Down On Startup	Often caused by low battery	Charge promptly for sufficient battery power (red LED on during charging, off when fully charged)
Beep On Successful Scan, But No Data Uploaded	Scanner-receiver pairing unsuccessful	Ensure the wireless scanner is paired with the receiver (retry if pairing fails)
	Scanner too far from receiver	Check for scanner signal strength (three consecutive beeps during data upload = weak signal); move scanner closer to receiver or enable inventory mode
	Scanner may be in inventory/storage mode	Exit inventory/storage mode and resume real-time upload.

Scanned Data Displays Incorrectly On Host	Incorrect input method	Switch the scanner's input method to the corresponding language.
	Other settings applied to scanner	Restore scanner factory defaults or contact support: support@pecumecu.com .
Garbled Or Incorrect Barcode Characters	Scanner keyboard-language setting mismatches local keyboard.	Ensure scanner keyboard -country setting matches local keyboard layout.
2.4g Wireless Receiver Not Recognized By Computer	USB port insufficient power	Switch to rear USB port on host; avoid docks and extension cables. Switch to rear USB port on host; avoid docks and extension cables.
No Beep, Fill-Light Off, But Barcode Reads Normally	Buzzer muted / indicator light off	Scan setup code to enable buzzer and indicator light.
	Indicates a component failure	If no response after these settings are enabled, contact E-mail: support@pecumecu.com .
Other Decoding Failure Cases	Device connection error	Power off, properly reconnect device and scanner, power on, restore scanner factory defaults , then rescan barcode.

7.Base Configuration Code

7.1 Restore Default Settings

If the scanning function stops working properly because you accidentally scanned another function code during use, you can restore the scanner to its initial state by scanning the initialization barcode



Restore Factory Settings

7.2 Allow Recognition Of All Types

Note: The product enables the common code type scanning function by default. If you need to recognize uncommon code types, please scan the configuration code labeled "Allow recognition of all types". Please note: Enabling the configuration code for "Allow recognition of all types" may slow down the decoding speed. If you still cannot recognize your barcode or QR code after enabling the "Allow recognition of all types" configuration code, please contact support@pecumecu.com.



Allow Recognition Of All Types

7.3 Restore Default Recognition Type

If you have enabled the "Allow Recognition of All Types" feature in Section 7.2 and do not need to read barcode types other than the default ones, but the scanning speed has slowed down, selecting "Restore Default Recognition Types" will restore the scanning speed to the level it was at before the feature was enabled.



Restore Default Recognition Type

7.4 Version Number



Read Version Information

8. Wireless Connection Methods

8.1 Bluetooth Mode

Method A: Manually Enter Bluetooth HID Mode

1. Start the scanner and press and hold for 8 seconds to enter Bluetooth HID pairing mode; the blue and green lights flash alternately.
2. Turn on Bluetooth on the device and search for "Barcode Scanner HID".
3. Click on this Bluetooth device to enter pairing mode.
4. A "beep" sound indicates successful pairing; the blue light remains on (for Android devices in Bluetooth mode, you need to switch to English input method).

Method B: Enter Bluetooth HID Mode by Scanning

1. Scan the "Bluetooth HID Mode" barcode.



Bluetooth HID Mode

2. Scan the following barcode to enter waiting-for-pairing mode; the blue and green lights flash alternately.



Enter Pairing Mode

3. Turn on Bluetooth on the device and search for "Barcode Scanner HID".
4. Click on this Bluetooth device to enter pairing mode.
5. A "beep" sound indicates successful pairing; the blue light remains on.

8.2 Wireless 2.4G Mode

1.Start the scanner and scan the "2.4G Mode" barcode.



2.4G Mode

2.Scan the "Enter Pairing Mode" barcode to enter pairing mode; the green light flashes rapidly.



Enter Pairing Mode

Insert the receiver, and you will hear a "beep" sound indicating successful pairing; the blue light remains on.Note: Double-click the scanner to exit pairing mode.

9.Upload Mode Settings

9.1 Real-Time Mode

In Real-Time Mode, the scanned data is directly transmitted to the computer via wired or wireless connection. After successful transmission, the scanner emits a low-frequency short beep, and the green light flashes once. If transmission fails, the scanner emits 3 low-frequency short beeps as an alarm, and the green light flashes 3 times simultaneously. In Real-Time Mode, if transmission fails, the scanned barcode will be lost.



Enter Real-Time Mode

9.2 Storage Mode

If the scanner operates beyond the wireless transmission range, it is recommended to use Storage Mode. In Storage Mode, the scanned data is stored in the scanner's internal memory. In Storage Mode, after scanning a barcode, the scanner emits a short beep (frequency changes from low to high), and the green light flashes once; the scanned barcode is automatically stored in the scanner's memory. If the internal memory is full, the scanner emits 3 low-frequency short beeps as an alarm, and the green light flashes 3 times simultaneously.



Enter Storage Mode

To check the number of barcodes in the memory, scan the "Display Total Stored Entries" barcode:



Display Total Stored Entries

To upload the stored data, scan the "Data Upload" barcode. After data upload, the barcodes stored in the scanner will not be deleted automatically; users can scan "Data Upload" multiple times to upload the stored data.



Data Upload

Note: During data upload, please ensure a good wireless signal connection as much as possible, or perform the upload while the data cable is connected.

To clear the barcode data stored in the memory, scan the "Clear Stored Data" barcode. Once the barcodes are cleared, they can no longer be uploaded; please confirm whether the data has been uploaded before clearing.



Clear Stored Data

10. Scanning Mode Settings

10.1 Continuous Scanning

The device is set to Manual Scanning mode by default. To switch to Continuous Scanning mode, scan the “Continuous Scanning” code below.



Continuous Scanning

10.2 Inductive Scanning

The device is set to Manual Scanning mode by default. To switch to when a barcode is detected, it will automatically scan it, scan the “Inductive Scanning” code below.



Inductive Scanning

10.3 Manual Scanning

Scan the “Manual Scanning” code below to restore the device to its default manual scanning mode.



Manual Scanning

11. Sleep Time Settings

You can set the sleep time based on your preferences. The scanner will automatically power off after the specified sleeptime to help save battery. Please scan the following setupbarcode to configure it.



Sleep Time: 30 Seconds



Never Sleep



Sleep Time: 5 Minutes



Immediate hibernation



Sleep Time: 10 Minutes

12. Sound Settings

Scan one of the following barcode to select the decoding beep mode.



Sound Off



Medium Volume



Low Volume



High Volume

13. Keyboard Language Settings



English



Italian



German



Japanese



French



International Universal Keyboard



Spanish

14.Common Configuration Codes

14.1 Terminator Settings



Add CR



Add TAB



Add LF



No Terminator



Add CR+LF

14.2 Disable/Enable UPC-A Check Digit Transmission

By default, the device is configured to transmit the UPC-A check digit. To disable, omit, or remove the last digit (check digit) of the UPC-A, scan the "Disable UPC-A Check Digit Transmission" code to enable this setting.



Disable UPC-A Check Digit Transmission

If you have scanned the "Disable UPC-A Check Digit Transmission" code above and wish to restore the output of the last digit (check digit) of the UPC-A, scan the "Enable UPC-A Check Digit Transmission" code below to restore the output.



Enable UPC-A Check Digit Transmission

14.3 Disable/Enable All 2D Symbolologies

By default, the device is set to scan all barcodes (1D and 2D). If you only want to scan 1D barcodes, scan the “Disable All 2D Symbolologies” barcode below to configure the device to not scan 2D symbolologies.



Disable All 2D Symbolologies

After scanning the “Disable All 2D Symbolologies” code above, if you want to restore support for 2D/QR codes on your device, scan the “Enable All 2D Symbolologies” code below to restore it.



Enable All 2D Symbolologies

14.4 Disable/Enable Inverse Barcode Reading

By default, the device only recognizes positive-phase barcodes. Standard (positive-phase) barcodes feature black lines on a white background; this is the type typically found on standard paper labels. Inverse barcodes feature white lines on a black background, with the black-and-white contrast completely reversed (like a negative image). To scan barcodes with white lines on a black background (i.e., inverse barcodes), select “Enable Inverse Barcode Reading” below to configure this setting.

Note: Use this feature with caution.



Enable Inverse Barcode Reading

After scanning the “Enable Inverse Barcode Reading” code above, if you want to revert to the default setting of reading standard barcodes, scan the “Disable Inverse Barcode Reading” code below to restore the default setting.



Disable Inverse Barcode Reading

Customer Support

Thank you for trusting Pecumecu! Your purchased product comes with a 24-month worry-free warranty and lifetime technical support. Should you require any assistance, please reach out to us at: support@pecumecu.com

Manufacturer/Hersteller: Huizhou Oule Technology Co., Ltd.

Address/Adresse: East side, 4/F, Block A, Factory Building, No. 1 Xinxing Road (Factory Building No. 6), Daya Bay West District, Huizhou, China

E-mail: support@pecumecu.com

Made in China/Hergestellt in China/Fabriqué en Chine/Fabbricato in Cina/中国製

