
pecumecu®

Wireless 2D Barcode Scanner

User Manual

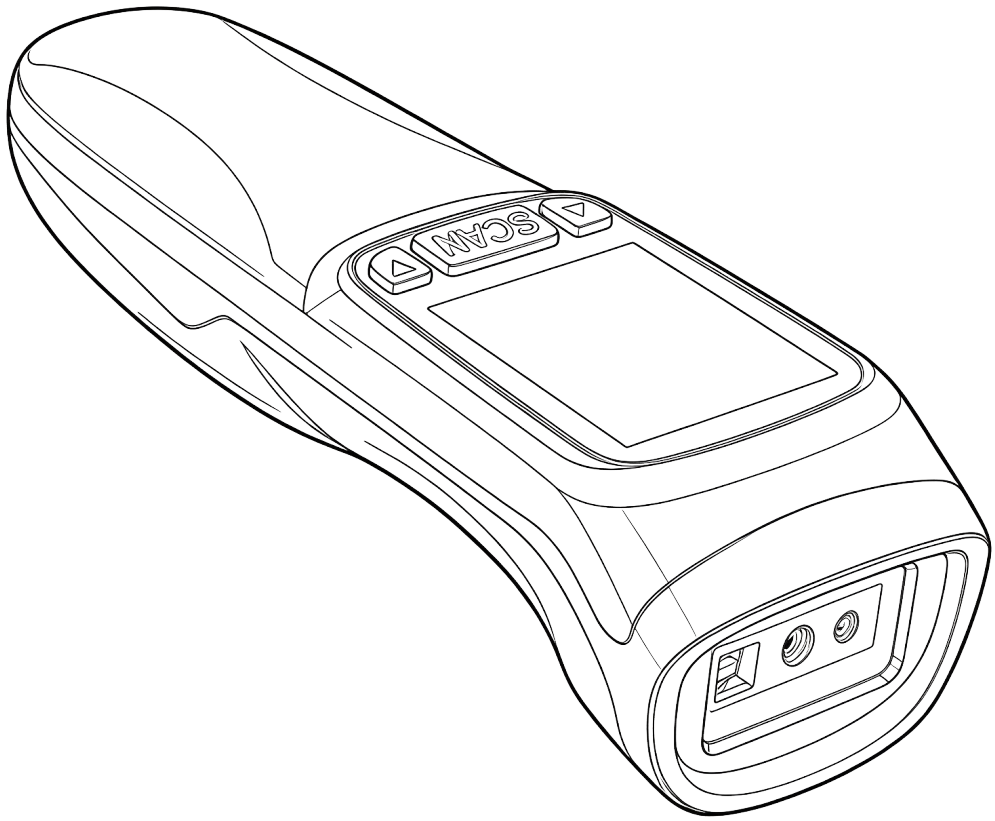

Model:TM-20BP

E-mail:support@pecumecu.com

Digital User Manual

<EN> PecuMecu provides online user manuals for viewing or downloading. Scan the QR code below with your device to get the download link.

Contents

English ---------- **42**

1. Quick Start Guide ---------- 01
2. Product Overview ---------- 02
3. Technical Parameter ---------- 03
4. Menu Introduction ---------- 05
   - 4.1 Main Interface ---------- 05
   - 4.2 Main Menu ---------- 05
   - 4.3 Menu Options ---------- 05
5. Beep Instructions ---------- 12
6. Troubleshooting ---------- 13
7. Base Configuration Code ---------- 15
   - 7.1 Restore Default Settings ---------- 15
   - 7.2 Allow Recognition Of All Types ---------- 15
   - 7.3 Restore Default Recognition Type ---------- 16
   - 7.4 Version Number ---------- 16
8. Connection Methods ---------- 17
   - 8.1 Bluetooth HID ---------- 17
   - 8.2 Bluetooth BLE ---------- 19
   - 8.3 Bluetooth SPP ---------- 20
   - 8.4 2.4G Wireless KBD ---------- 21

9. Upload Mode Settings ---------- 23
9.1 Normal mode ---------- 23
9.2 Inventory mode ---------- 23
9.3 No Loss Mode ---------- 26
10. Scanning Mode Settings ---------- 27
10.1 Continuous Scanning ---------- 27
10.2 Inductive Scanning ---------- 27
10.3 Manual Scanning ---------- 27
11. Sleep Time Settings ---------- 28
11.1 Sleep Time ---------- 28
11.2 LCD screen sleep time setting ---------- 29
12. Sound Settings ---------- 30
12.1 Mute ---------- 30
12.2 Adjust volume ---------- 30
13. Keyboard Language Settings ---------- 32
14. Clear Data ---------- 34
14.1 Clear Inventory Data ---------- 34
14.2 Clear Count Data ---------- 34
14.3 Clear Scan History on the Home Screen ---------- 35
15. Battery and Charging ---------- 36
16. Setting Date and Time ---------- 37
17. Case Conversion ---------- 38

18. Common Configuration Code ---------- 39

18.1 Terminator Settings ---------- 39

18.2 Disable/Enable UPC-A Check Digit Transmission ---------- 40

18.3 Disable/Enable All 2D Symbologies ---------- 40

18.4 Disable/Enable Inverse Barcode Reading ---------- 41

18.5 Show or Hide the iOS Device Keyboard ---------- 42

1. Quick Start Guide

This chapter explains how to use the barcode scanner after unboxing.

1.Press and hold the SCAN button for 2 seconds to turn on the scanner. If the scanner beeps "DI, DI, DI, DI, DI" the battery is low. Please charge the scanner right away. Otherwise, the battery level is sufficient. We recommend charging the scanner with the original charging cable before first use.

2.Make sure the scanner is fully charged and powered on. To test if it can read barcodes, press the scan button and point the scanner at a barcode. If the scanner beeps "DI, DI" and is not connected to any device, the barcode has been successfully scanned.

3.With the scanner turned on, press and hold both the UP and DOWN buttons simultaneously for 1-2 seconds to enter the main menu.

Navigate as follows:

• Select Settings and press the SCAN button to confirm.

• Select Connection Mode and confirm.

• Select BT HID and confirm.

• Then press the "Up" and "Down" buttons simultaneously to return to the main interface.


• Press and hold the SCAN button for 8 seconds. The screen will flash rapidly, indicating the scanner is now in Bluetooth pairing mode.

4.Go to the Bluetooth settings on your smartphone or tablet. Make sure Bluetooth is turned on and your device is searching for available devices.


5.Look for available Bluetooth devices on your smartphone or tablet. Select "BARCODE SCANNER HID" from the list to pair.

6.Open a note-taking app (such as Notes or Notepad) on your smartphone or tablet. Place the cursor in a blank text input field. When you scan a barcode, the scanned data will appear at the cursor position. Please note:If you run into any issues, record a short video demonstrating the problem and send it to support@pecumecu.com. We'll get back to you as soon as possible explains how to use the barcode scanner after receiving it.


2. Product Overview

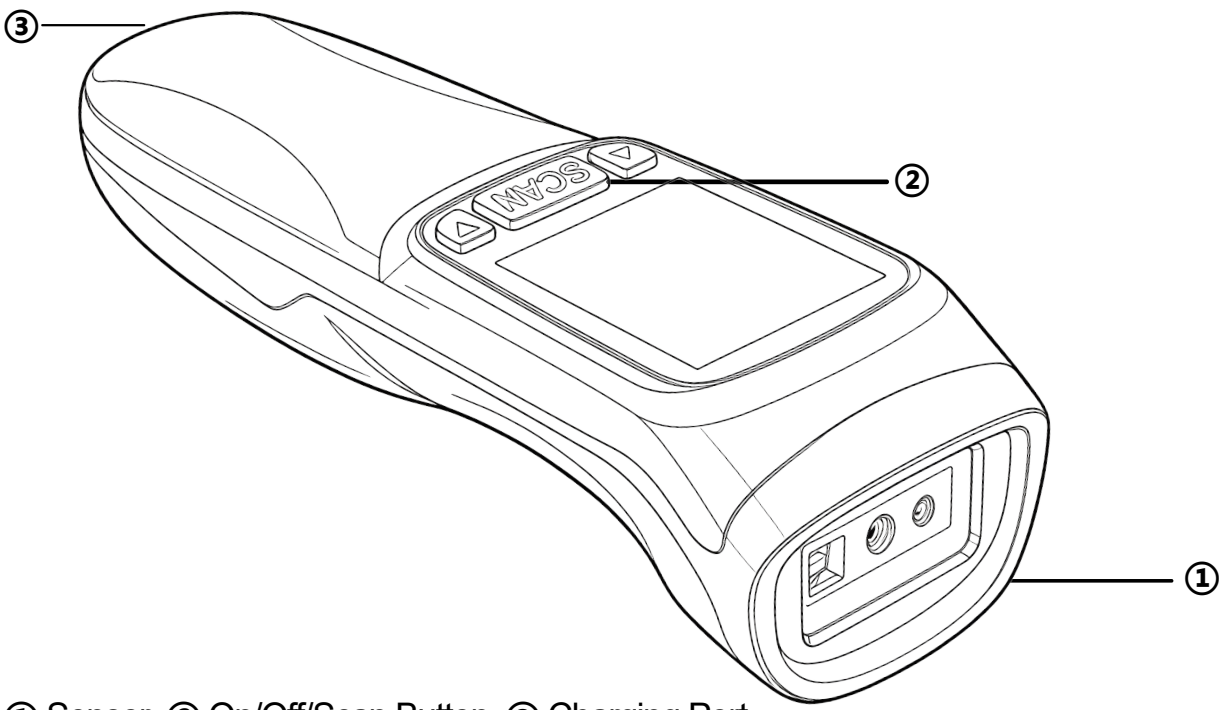


① Sensor ② On/Off/Scan Button ③ Charging Port

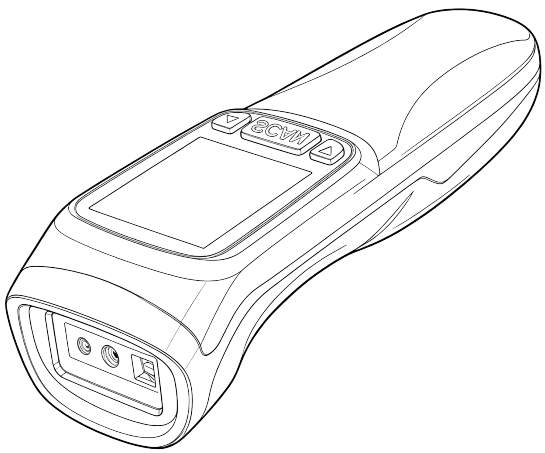


TM-20BP Scanner ×1



USB Cable ×1



2.4GHz Receiver ×1

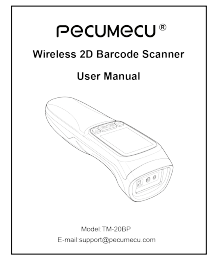

Manual ×1

3.Technical Parameter

Product Name	Portable Barcode Scanner
Model	TM-20BP
Charging Input	5V⎓1A
Operating Current	≈240mA
Standby Current	123mA
Maximum Peak Current	280mA
Battery Capacity	1000mAh/3.7Wh
Working Time	4~8h
Charging Time	1.5h
Net Weight	91.6g
Screen Size	1.0in
Light Source	White LED, Red LED
Supported Barcode Types	1D & 2D Barcodes
Reading Accuracy	1D barcode ≥3.9mil; 2D barcode ≥7mil
Decoding Types (Full Mode)	1D Barcodes: AIM-128,Codabar 11, Code 39, Code 93, Code128, Codebar, Deutsche12, Deutsche14, EAN-8, EAN-13, GS1-RSS14, GS1-RSS Limited, Industrial 25, Interleaved 2 of 5, ISSN, ISBN, ITF-14, Matrix 2 of 5, MSI-Plessey, RSS-Expand, UCC/EAN-128, UPC-E, UPC-A 2D Barcodes: PDF 417, Data Matrix, QR Code, Micro QR

Operating Temperature	0℃~45℃
Storage Temperature	-20℃~60℃
Operating Humidity	5%RH~90%RH (non-condensing)
Alert Modes	Buzzer, Screen Display, Vibration
Transmission Type	Bluetooth / 2.4G Wireless / Wired Transmission
Scanning Mode	Manual, Continuous, Auto

4.Menu Introduction


4.1 Main Interface

The main interface consists of three sections:

• Top bar: Shows the current time, connection mode (e.g. 2.4G KBD), and battery status.


• Center area: Displays scanned barcode data once a scan is performed.

• Bottom bar: Shows the store count and total count.

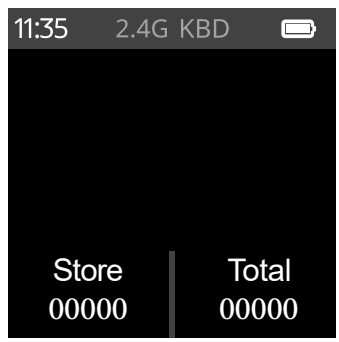

4.2 Main Menu

The main menu offers the following options: Settings, Text, Date and Time, Version, Sleep Now, and Return.

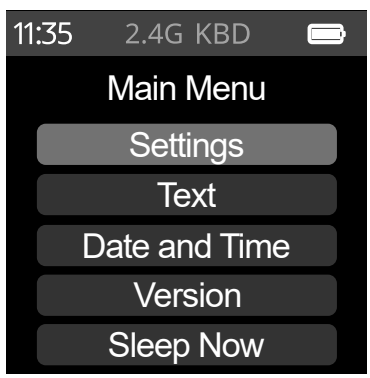



4.3 Menu Options

The table below summarizes TM-20BP menus. Please refer to the next page for the details of each option.

Level 1	Level 2	Level 3	Note
Settings	Connection Mode	2.4G KBD	
		2.4G VCP	
		BT HID	
		BT BLE	
		BT SPP	
		USB HID	
		USB VCP	
	Transmission	Normal Mode	
		Inventory Mode	
		No Loss Mode	
	Wireless	Pairing Mode	
		Show BT Name	
	Speed	Fast	
		Medium	
		Slow	
		Ultra Slow	
	Keyboard Language	US Keyboard	
		German	

Settings	Keyboard Language	French	
		Spanish	
		Italian	
		Japanese	
		International Keyboard	
		Belgian French	
		Portuguese	
		UK English	
		German IOS	
		Brazilian Portuguese	
		Russian	
		Czech	
		Italian 142	
		Turkish Q	
		Turkish F	
		Swedish/Finnish	
		Mexican Spanish	
		Danish	
		Norwegian	

Settings	Keyboard Language	Croatian	
		Swiss German	
		Swiss French	
		Dutch	
		Hungarian	
		Polish	
		Canadian	
		Argentinian	
		Slovak	
		Vietnamese Keyboard	
		Latin American	
		Thai Keyboard	
	Encoding	GBK	
		UTF-8	
		CP1251	
		KOI8-R	
	Barcode Hide	Hide Head	Set hidden digits
		Hide Tail	Set hidden digits
	Barcode End	Add Enter	

Settings	Barcode End	Add Newline	
		Add Enter+Newline	
		Add TAB	
		None	
	Case	Force Lowercase	
		Force Uppercase	
		Swap Case	
		No Conversion	
	Sound	Volume	High,Medium,Low
		Frequency	Buzzer 2K, Buzzer 2.7K
		Mute	On or Off
	Vibration	On	
		Off	
	Button	Long-press key	On or Off
		Double-click key	On or Off
	Sleep Time	30 Seconds	
		1 Minute	
		2 Minutes	
		5 Minutes	

Settings	Sleep Time	10 Minutes	
		30 Minutes	
		Never sleep	
	LCD Sleep	Never sleep	
		Sleep 15s	
		Sleep 30s	
		Sleep 1 min	
		Sleep 2 min	
	Items Displayed	Set the number of digits	
	UI Language	English	
		Deutsch	
		Español	
		Italiano	
		Français	
		中文	
		ภาษาไทย	
		русский язык	
	Reset Default	OK or Cancel	
Text	Data Upload		

Text	Clear Inventory	OK or Cancel	
	Delete Last		
	Clear Count	OK or Cancel	
Date and Time			
Version			
Sleep Now			

5.Beep Instructions

One Long Beep	Power On / Off
One Short Beep	Successful normal barcode reading, pairing success, or wireless connection established
One Long Beep Plus Two Short Beeps	Enter Bluetooth pairing mode
Two Short Beeps	Bluetooth pairing failed
Five Short Beeps	Low battery, preparing for power-off

6.Troubleshooting

Fill Light & Red Aiming Dot On, Barcode Unreadable	Barcode type not enabled or supported	Scan setup code or contact technical support: support@pecumecu.com.
	Barcode damaged, creased or heavily reflective	Try scanning another intact barcode of the same type.
	Scanner-barcode angle or distance incorrect	Adjust scanner angle and distance so the white illuminator covers the f ull barcode, with red focus frame centered.
	Screen reflection interference (phone / computer screen scanning)	Lower or raise the screen brightness.
Fill Light On, No Red Aiming Dot	Possible device malfunction	Contact technical support: support@pecumecu.com.
Device Fails To Power On And Operate	Device malfunction	Contact technical support: support@pecumecu.com.
Cannot Power On Or Shuts Down On Startup	Often caused by low battery	Charge promptly for sufficient battery power.
Beep On Successful Scan, But No Data Uploaded	Scanner-receiver pairing unsuccessful	Ensure the wireless scanner is paired with the receiver (retry if pairing fails).
	Scanner too far from receiver	Check for scanner signal strength (three consecutive beeps during data upload = weak signal); move scanner closer to receiver or enable inventory mode.
	Scanner may be in inventory/storage mode	Exit inventory/storage mode and resume real-time upload.

Scanned Data Displays Incorrectly On Host	Incorrect input method	Switch the scanner's input method to the corresponding language.
	Other settings applied to scanner	Restore scanner factory defaults or contact support: support@pecumecu.com.
Garbled Or Incorrect Barcode Characters	Scanner keyboard-language setting mismatches local keyboard.	Ensure scanner keyboard -country setting matches local keyboard layout.
2.4G Wireless Receiver Not Recognized By Computer	USB port insufficient power	Switch to rear USB port on host; avoid docks and extension cables.
Fill Light	Buzzer muted	Scan setup code or on-screen menu to enable buzzer.
	Indicates a component failure	If no response after these settings are enabled, contact E-mail: support@pecumecu.com.
Other Decoding Failure Cases	Device connection error	Power off, properly reconnect device and scanner, power on, restore scanner factory defaults, then rescan barcode.
Screen Black / No Display	Scanner entered sleep mode	Restart the scanner
	Possible device malfunction	Contact technical support: support@pecumecu.com.
No Charging Icon After Connecting Charger	Scanner failed to charge	Check power & replug cable; use original cable & compatible charger
	Charging while powered off	Power on to check if charging succeeds
	Possible device malfunction	Contact technical support: support@pecumecu.com.


7.Base Configuration Code

7.1 Restore Default Settings

If the scanning function fails to work properly due to accidentally scanning other function codes during use, you can restore the scanner to its initial state by scanning the initialization barcode; or you can go to the main menu, select "Settings" → then select "Reset Default" → and finally select "OK".

Restore Factory Settings



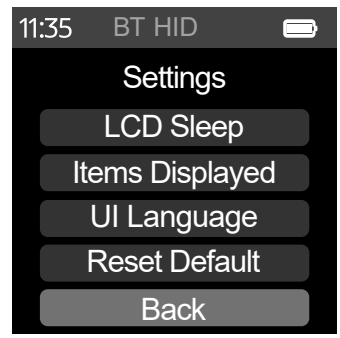

7.2 Allow Recognition Of All Types

Note: The product enables the common code type scanning function by default. If you need to recognize uncommon code types, please scan the configuration code labeled "Allow Recognition Of All Types". Please note: Enabling the configuration code for "AllowRecognitionOfAllTypes" may slow down the decoding speed. If you still cannot recognize your barcode or QR code after enabling the "Allow recognition of all types" configuration code, please contact support@pecumecu.com.

Allow Recognition Of All Types

7.3 Restore Default Recognition Type


If you have enabled the “Allow Recognition of All Types” feature in Section 7.2 and do not need to read barcode types other than the default ones, but the scanning speed has slowed down, selecting “Restore Default Recognition Types” will restore the scanning speed to the level it was at before the feature was enabled.

Restore Default Recognition Types

7.4 Version Number

After the device is successfully connected, scan the "Read Version Information" barcode, and the scanner will output the version number to the current cursor position on the host. Alternatively, you can enter the main menu and select "Version" to view the version information.

Read Version Information

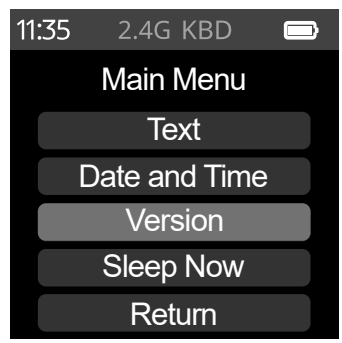

8.Connection Methods

8.1 Bluetooth HID

For most Bluetooth connections, the BT HID mode is recommended. This mode emulates a keyboard for direct text input. There are three connection methods:

Method A: Enter Bluetooth HID mode by pressing the button

1. Turn on the scanner and press and hold the "SCAN" button for 8 seconds to enter Bluetooth HID pairing mode; the screen will flash rapidly at this time.
2. Enable the Bluetooth function on the device, and then search for "Barcode Scanner HID".
3. Click on this Bluetooth device to enter pairing mode
4.The "beep" sound indicates successful pairing. At this point, the screen stops flashing, and the font color of the connection mode "BT HID" turns green (for Android devices in Bluetooth mode, switch to the English input method before scanning).

Method B: Enter Bluetooth HID Mode by Scanning

1.Scan the "Bluetooth HID Mode" barcode.



Bluetooth HID Mode

2. Scan the following barcode to enter the pairing waiting mode; the screen will flash rapidly at this time.





Enter Pairing Mode


3. Turn on the Bluetooth function on the device and search for "Barcode Scanner HID".
4. Click on this Bluetooth device to enter pairing mode.
5. Hearing a "beep" indicates successful pairing; at this point, the screen stops flashing, and the font color of the connection mode "BT HID" turns green.

Method C: Enter Bluetooth HID mode through screen operation


1. Press the "SCAN" button, and the LCD screen will light up; the user simultaneously presses the up and down buttons for 1~2 seconds, at which point the screen enters the main menu interface.
2. Select "Settings" → Click "SCAN" button to confirm entry → Select "Connection Mode" → Click "SCAN" button to confirm → Select "BT HID" → Click "SCAN" button to confirm.

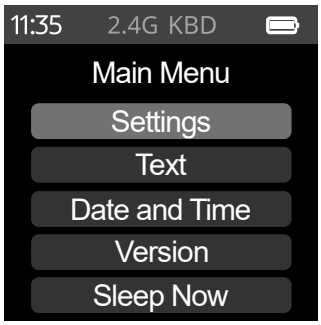


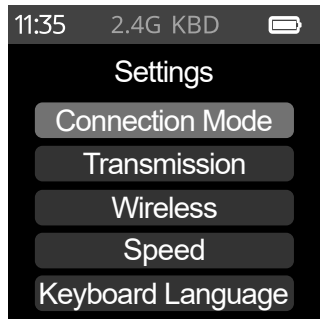

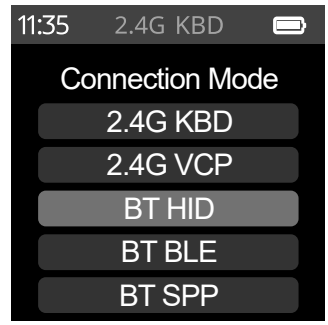


3.After completing the above settings, scroll down and select "Back" to return to the previous interface → select "Wireless" and confirm → finally, select "Pairing Mode" and confirm. At this point, the screen will automatically return to the main interface and flash rapidly, indicating that it has entered Bluetooth pairing mode.

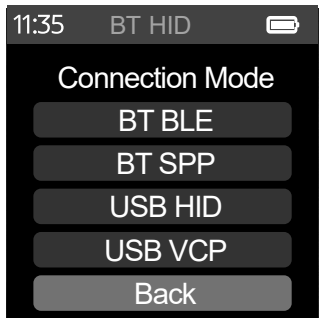

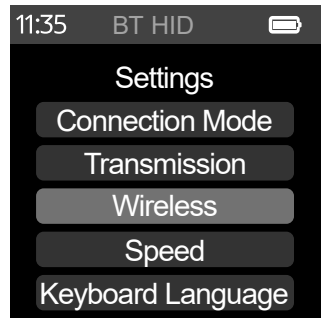



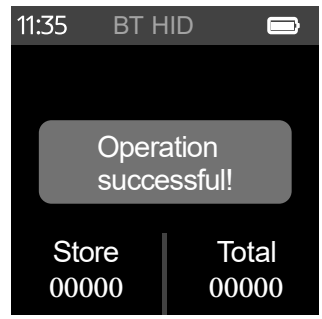


4. Next, please proceed to the Bluetooth settings interface on your smartphone or tablet, ensure that the Bluetooth function is turned on, and it is actively searching for devices.
5. Wait for a moment, find and select "BARCODE SCANNER HID" from the list of available devices for pairing. If the device is not found, please confirm that the scanner screen is still flashing and keep your phone close to the scanner.
6. Open the "Notepad" application on your smartphone or tablet and place the cursor in the input area. When you scan a barcode using a barcode scanner, you will see the content of the barcode displayed at the cursor position.

8.2 Bluetooth BLE

Method A: Enter Bluetooth BLE mode through screen operation

1. Press the "SCAN" button, and the LCD screen will light up; the user simultaneously presses the up and down buttons for 1~2 seconds, at which point the screen enters the main menu interface.
2. Select "Settings" → click "SCAN" button to confirm entry → select "Connection Mode" → click "SCAN" button to confirm → select "BT BLE" → click "SCAN" button to confirm.

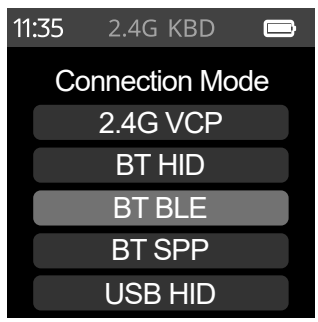




3.Launch the BLE-enabled application you wish to connect to, and proceed to the connection/device manager within the application. Pair your scanner directly to the application (by importing the Bluetooth settings of the host device).
4. Move the cursor to the position where you need to input content in the software. When you scan a barcode with a barcode scanner, you will see the content of the barcode displayed at the cursor position.

8.3 Bluetooth SPP

Method A: Enter Bluetooth SPP mode through screen operation

1. Press the "SCAN" button, and the LCD screen will light up; the user simultaneously presses the up and down buttons for 1~2 seconds, at which point the screen enters the main menu interface.
2. Select "Settings" → click "SCAN" button to confirm entry → select "Connection Mode" → click "SCAN" button to confirm → select "BT SPP" → click "SCAN" button to confirm.

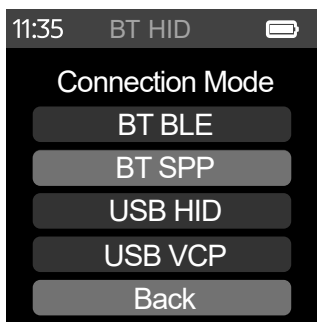



3. Unlike Bluetooth HID mode and BLE mode, Bluetooth SPP mode only supports Android devices and does not support iOS devices; iPhone and iPad use Apple's proprietary Bluetooth iAP/MFi protocol.

4. Launch the SPP-enabled application you wish to connect to, and proceed to the connection/device manager within the application. Pair your scanner directly to the application (by accessing the Bluetooth settings of the host device).
5. Move the cursor to the position where you need to enter content in the software. When you scan a barcode with a barcode scanner, you will see the content of the barcode displayed at the cursor position.

8.4 2.4G Wireless KBD

Method A: Enter 2.4G KBD mode by scanning

1. Start the scanner and scan the barcode in "2.4G KBD mode".



2.4G KBD Mode

2. Scan the "Enter Pairing Mode" barcode to enter pairing mode; the screen will flash rapidly at this time.



Enter Pairing Mode


3. After inserting the receiver, you will hear a "beep" sound, indicating successful pairing.
Note: Double-click the scanner to exit pairing mode, and the screen will stop flashing.


Method B: Enter 2.4G KBD mode through screen operation

1. Press the "SCAN" button, and the LCD screen will light up; the user simultaneously presses the up and down buttons for 1~2 seconds, at which point the screen enters the main menu interface.


2. Select "Settings" → Click "SCAN" button to confirm entry → Select "Connection Mode" → Click "SCAN" button to confirm → Select "2.4G KBD" → Click "SCAN" button to confirm.



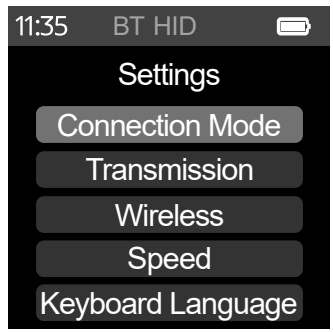


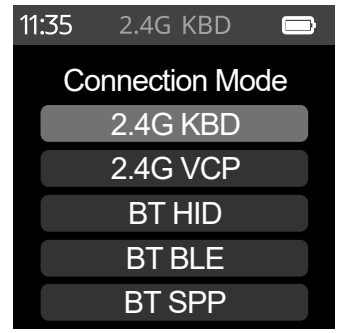


3. After completing the above settings, scroll down and select "Back" to return to the previous interface → select "Wireless" and confirm → finally, select "Pairing Mode" and confirm. At this point, the screen will automatically return to the main interface and flash rapidly, indicating that it has entered pairing mode.

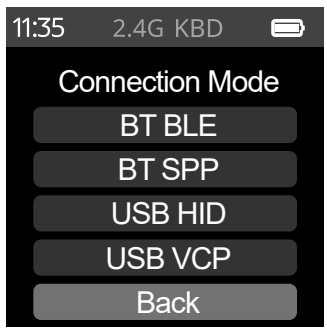



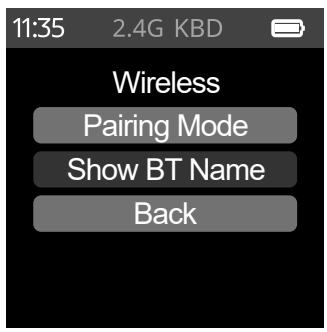

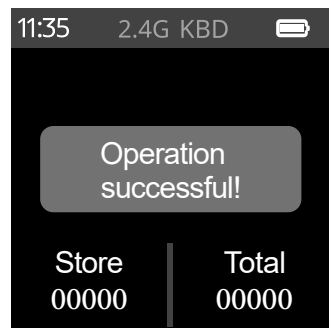

4. After inserting the receiver, you will hear a "beep" sound, indicating successful pairing.
Note: Double-click the scanner to exit pairing mode, and the screen will stop flashing.

9. Upload Mode Settings

9.1 Normal mode

Method A: Setting through scanning barcode


In normal mode, scanned data is transmitted directly to the computer via wired or wireless connection. Upon successful transmission, the scanner emits a low -frequency short beep; if transmission fails, the scanner emits three low-frequency short beeps as an alarm, and the scanned barcode data will be lost.

Enter Normal Mode

Method B: Setting through screen operation

Enter the main menu, select "Settings" → then select "Transmission" → finally select "Normal Mode".



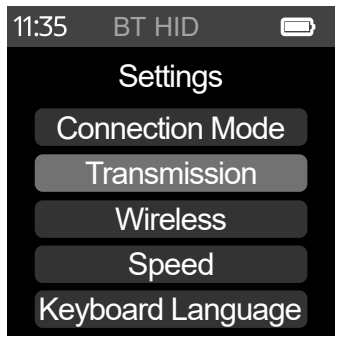



9.2 Inventory mode

1. If the scanner's working environment is beyond the wireless transmission range, it is recommended to use "Inventory Mode". In "Inventory Mode", scanned data will be stored in the scanner's internal memory first. After scanning a barcode, the


scanner will emit a short beep (with a frequency increasing from low to high); the scanned barcode data will be automatically stored in the scanner's memory. If the internal memory is full, the scanner will emit three short low-frequency beeps as an alarm.


2. When it is necessary to set the scanner transmission mode to "Inventory Mode", you can do so by scanning the "Enter Inventory Mode" barcode; or through on-screen operation, select "Settings" in the main menu → then select "Transmission" → and finally select "Inventory Mode"

Note: In inventory mode, a "small house" icon will be displayed in the upper right corner of the screen.

Enter Inventory Mode



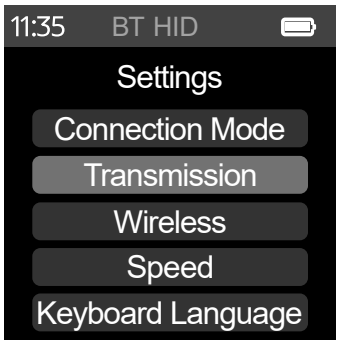


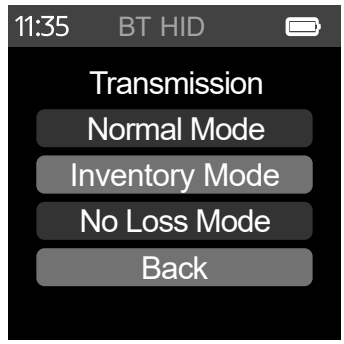



3. To check the number of barcodes in memory, please scan the "Display Total Stored Entries" barcode; or return to the main interface and check the "Store" value in the lower left corner.

Display Total Stored Entries

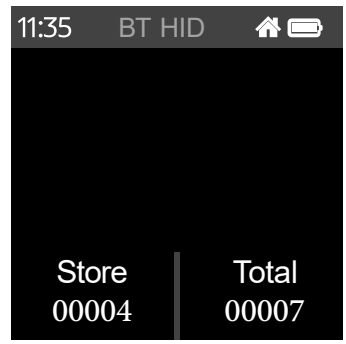

4. To upload stored data, please scan the "Data Upload" barcode; or select "Text" from the main menu, and then choose "Data Upload". After uploading the data, the barcode stored in the scanner will not be automatically deleted; users can scan the "Data Upload" barcode multiple times to repeatedly upload stored data.
Note: When uploading data, please ensure that the wireless network signal is strong or use a data cable for the upload.


Data Upload





5. To clear the barcode data stored in memory, please scan the "Clear Inventory Data" barcode; or navigate to the main menu, select "Text" → then select "Clear Inventory" → and finally choose "OK" to confirm the deletion. After clearing, the stored barcodes will no longer be available for upload; please confirm whether the data has been successfully uploaded before clearing.

Clear Inventory Data

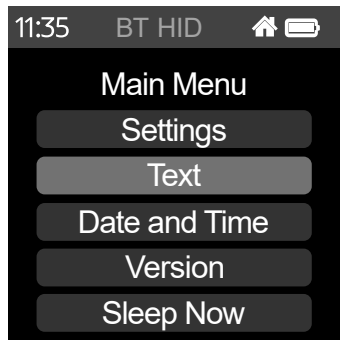




9.3 No Loss Mode

"No Loss Mode" prioritizes real-time data upload. If the connection is lost, the data will be automatically cached. After reconnecting the device, the unuploaded data will be automatically uploaded. You can select "Settings" from the main menu → then choose "Transmission" → and finally select "No Loss Mode".



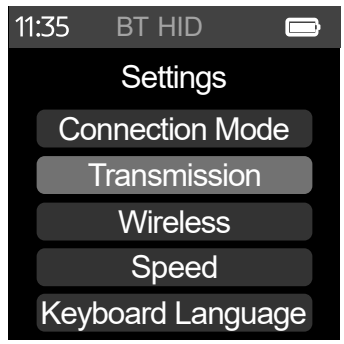



10. Scanning Mode Settings

10.1 Continuous Scanning

The device is set to Manual Scanning mode by default. To switch to Continuous Scanning mode, scan the “Continuous Scanning” code below.



Continuous Scanning

10.2 Inductive Scanning

The device is set to Manual Scanning mode by default. To switch to auto-sensing mode, where barcodes are scanned automatically upon detection, scan the " Inductive Scanning" code below.



Inductive Scanning

10.3 Manual Scanning

Scan the “Manual Scanning” code below to restore the device to its default manual scanning mode.



Manual Scanning

11. Sleep Time Settings

11.1 Sleep Time

You can set the sleep time according to your preferences. When the set time is reached, the scanner will automatically power off to save battery power. Please scan the following setup barcode for configuration; or go to the main menu, select "Settings" → then select "Sleep Time" to make the settings.

Sleep Time: 30 Seconds


Never Sleep


Sleep Time: 5 Minutes

Sleep Now

Sleep Time: 10 Minutes



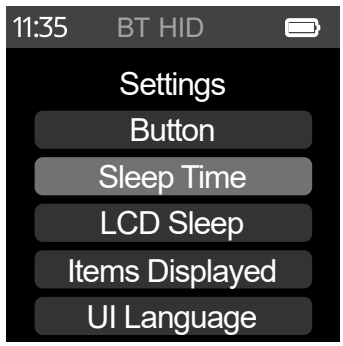


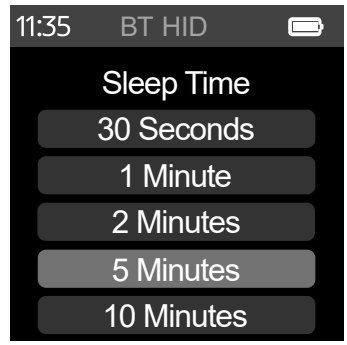

11.2 LCD screen sleep time setting

You can set the screen sleep time according to your preferences. When the set time is reached, the screen will automatically sleep. You can make the settings by selecting "Settings" in the main menu → then choosing "LCD Sleep".



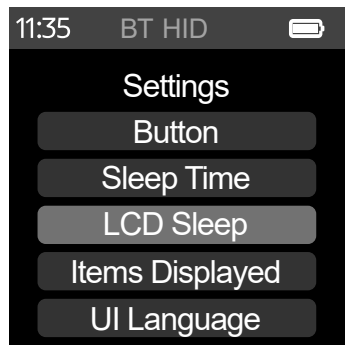



12. Sound Settings


12.1 Mute

You can mute the scanner by scanning the barcode below, or by going to"Settings" →"Sound" →"Mute" → "On" from the main menu.

Mute





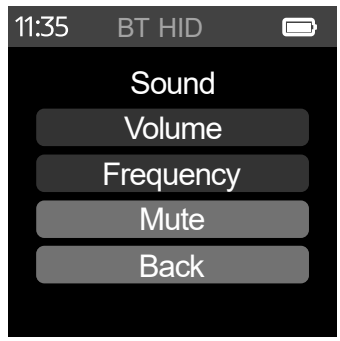



12.2 Adjust volume

You can set the scanner volume by scanning the following barcode; or through the main menu, select "Settings" → select "Sound" → select "Volume" → select " High/Medium/Low" to complete the settings.


Low Volume

Medium Volume

High Volume





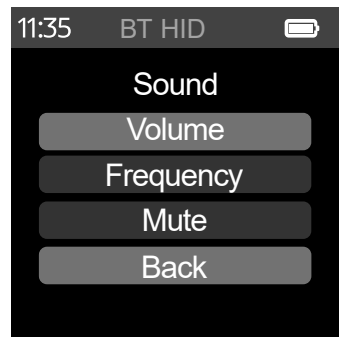



13. Keyboard Language Settings

Languages in different countries adopt different keyboard layouts and symbol arrangements. Barcode scanners can be configured to adapt to the keyboard layouts of different countries as needed.

Please scan the following setup code; or complete the setup by selecting "Settings" from the main menu → then choosing "Keyboard Language" → and finally selecting the desired keyboard language.



English



Spanish



German



Italian




French




Japanese

International Universal Keyboard



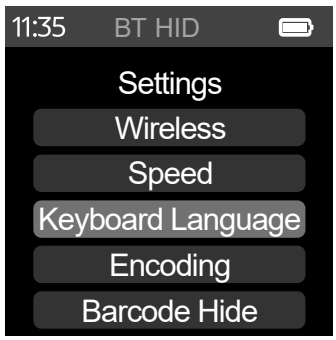




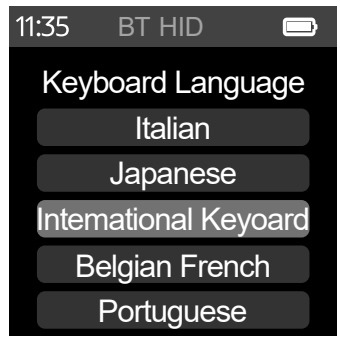







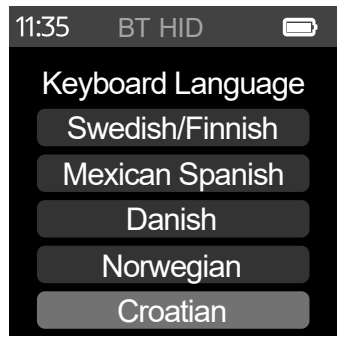



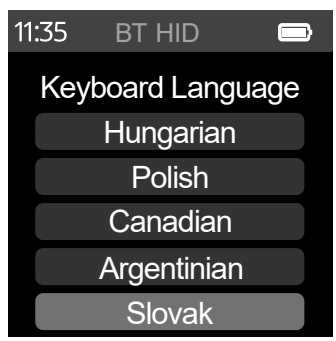


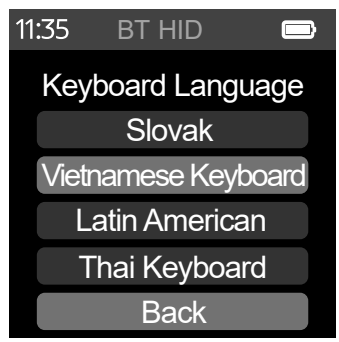


14. Clear Data

14.1 Clear Inventory Data

You can clear all inventory data by selecting "Text" from the main menu, and then choosing "Clear Inventory". If you only want to delete the last inventory data, please select "Delete Last".

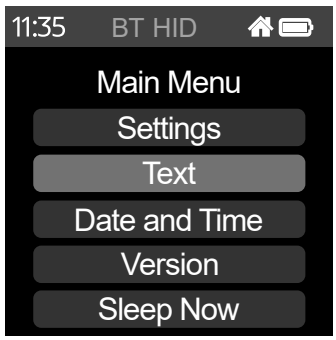


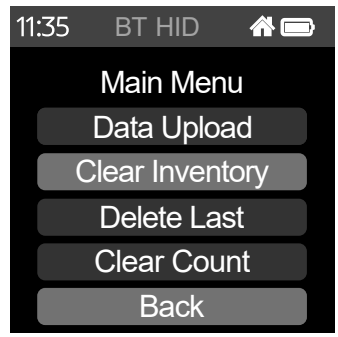


Note: After performing the operation to clear inventory data, the value of "Store" in the lower left corner of the main interface will change.

14.2 Clear Count Data

You can clear the count data by selecting "Text" from the main menu, then choosing "Clear Count"; or use the shortcut: Long press the Down button on the main screen for 2-3 seconds, then select "OK" to quickly clear the count data.

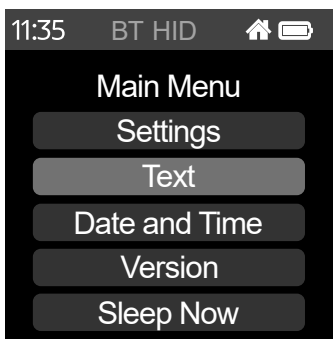




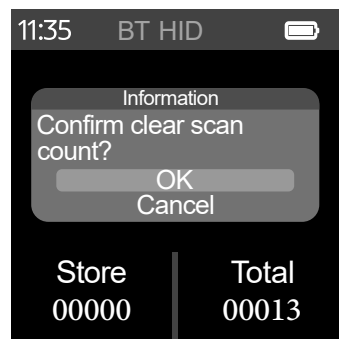

14.3 Clear Scan History on the Home Screen

To clear the scan history on the home screen, press and hold the Up button for 2–3 seconds. In Inventory Mode, this action only clears the on-screen display; it does not delete any stored data.



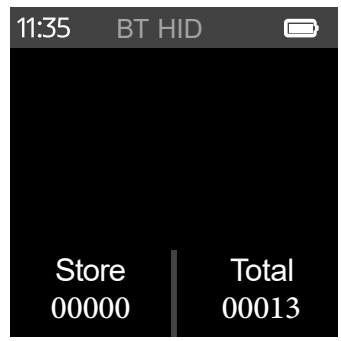

15. Battery and Charging


The scanner is powered by a 1000mAh rechargeable battery. Before use, please ensure that the scanner is fully charged.


1. Charging method:

Using a Type-C USB cable, plug the Type-C end into the bottom of the scanner, and the other end into a 5V 1A USB power adapter or a USB port on a computer.

2. Charging Display

If the scanner starts charging while it is turned on, a "lightning bolt" icon will continuously appear in the upper right corner of the screen. If the scanner is charged while it is turned off, a charging animation will initially be displayed, and then the screen will remain off; to check the charging progress, please turn it on.

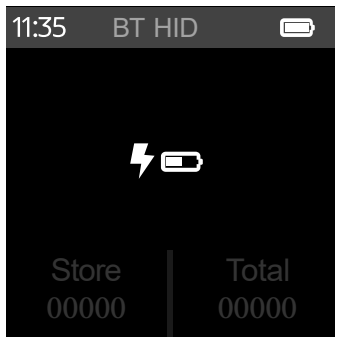

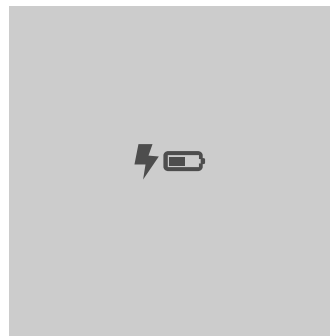

3. Low battery prompt

When the scanner is running low on battery and about to shut down, it will emit five short beeps.

Note: Please use a dedicated 5V 1A DC power adapter for charging; using an incorrect power source may cause permanent damage to the scanner and its battery.

16. Setting Date and Time

1. Enter the date setting page: Select "Date and Time" from the main menu.
2. Enter edit mode: Press the Down button once. The scanner will start from the "Year" field.
3. Adjust the year: Use the Up or Down button to adjust the value. Press the "SCAN" button once to confirm and automatically move to the "Month" field.
4. Adjust month, day, hour, minute, and second in sequence: Repeat the "adjust value → press 'SCAN' to confirm" operation.
5. Save and exit: After completing all adjustments, press the "SCAN" button. The "Save" button will light up. Press the "SCAN" button again to save and exit.





17. Case Conversion

If you need to convert the case of English characters output by the scanner, you can select "Settings" → "Case" → choose the desired conversion mode from the main menu.

There are four conversion modes:

1. Force to uppercase mode, e.g., "aBc123" is converted to "ABC123".
2. Force to lowercase mode, e.g., "aBc123" is converted to "abc123".
3. Swap case mode, e.g., "aBc123" is converted to "AbC123".
4. No conversion mode (default setting), e.g., "aBc123" remains "aBc123".





18. Common Configuration Code

18.1 Terminator Settings

The terminator marks the end of data transmission and must appear as the last element to ensure no extra characters are sent.

Scan the corresponding QR code below to set the suffix appended after barcode output:

Add CR: Add Carriage Return (Enter), typically used for auto-confirmation.

- Add LF: Add Line Feed.
- Add TAB: Add Tab character, ideal for jumping to the next input field.
- No Terminator: No suffix added, suitable for continuous scanning.
- Add CR+LF: Add both Carriage Return and Line Feed.

Note: Scan the desired QR code to apply the setting.



Add CR



Add LF



Add CR+LF



Add TAB



No Terminator

18.2 Disable/Enable UPC-A Check Digit Transmission

By default, the device is configured to transmit the UPC-A check digit. To disable, omit, or remove the last digit (check digit) of the UPC-A, scan the “Disable UPC-A Check Digit Transmission” code to enable this setting.



Disable UPC-A Check Digit Transmission

If you have scanned the “Disable UPC-A Check Digit Transmission” code above and wish to restore the output of the last digit (check digit) of the UPC-A, scan the “Enable UPC-A Check Digit Transmission” code below to restore the output.



Enable UPC-A Check Digit Transmission

18.3 Disable/Enable All 2D Symbologies

By default, the device is set to scan all barcodes (1D and 2D). If you only want to scan 1D barcodes, scan the “Disable All 2D Symbologies” barcode below to configure the device to not scan 2D symbologies.



Disable All 2D Symbologies

After scanning the “Disable All 2D Symbologies” code above, if you want to restore support for 2D/QR codes on your device, scan the “Enable All 2D Symbologies” code below to restore it.



Enable All 2D Symbologies

18.4 Disable/Enable Inverse Barcode Reading

By default, the device only recognizes positive-phase barcodes. Standard (positive -phase) barcodes feature black lines on a white background; this is the type typically found on standard paper labels. Inverse barcodes feature white lines on a black background, with the black-and-white contrast completely reversed (like a negative image). To scan barcodes with white lines on a black background (i.e., inverse barcodes), select “Enable Inverse Barcode Reading” below to configure this setting. Note: Use this feature with caution.



Enable Inverse Barcode Reading

After scanning the “Enable Inverse Barcode Reading” code above, if you want to revert to the default setting of reading standard barcodes, scan the “Disable Inverse Barcode Reading” code below to restore the default setting.



Disable Inverse Barcode Reading

18.5 Show or Hide the iOS Device Keyboard

When an iOS device is connected, you can simply double-click the "SCAN" button to show or hide the keyboard, or set it up by scanning "Show or Hide iOS Keyboard".
Note: Only iOS devices support showing and hiding the on-screen keyboard; Android devices do not support this feature.





Show or Hide iOS Keyboard

Customer Support

Thank you for trusting PecuMecu! Your purchased product comes with a 24-month worry-free warranty and lifetime technical support. Should you require any assistance, please reach out to us at:support@pecumecu.com

Manufacturer/Hersteller:Huizhou Oule Technology Co., Ltd.
Address/Adresse:East side, 4/F, Block A, Factory Building, No. 1 Xinxing Road (Factory Building No. 6), Daya Bay West District, Huizhou, China
E-mail:support@pecumecu.com
Made in China/Hergestellt in China/Fabriqué en Chine/Fabbricato in Cina/中国製

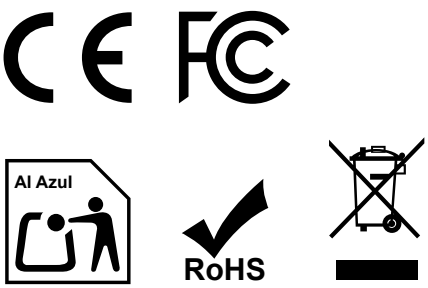

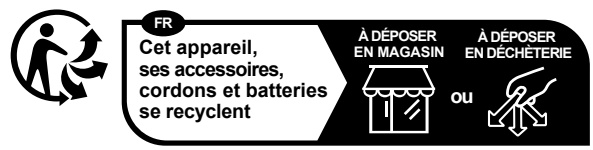

Points de collete sur www.quefairedmesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

