


TP Link Router

How to Set Up a Static IP Address

This guide shows you how to give a device (like a Pi, NVR, or camera) a fixed IP address on the Omada ER605 router. Once set up, that device will always get the same IP address instead of a different one each time.

STEP 1: Log In to the Router


- 1 Connect your computer to the store's network, using Wi-Fi or an Ethernet cable.
- 2 Open a web browser and type in the router's IP address. It will look like this: **http://X.X.X.1** (for example, **http://192.168.1.1** or **http://10.80.0.1** — the exact numbers depend on the site). You can usually find this address on a sticker on the router, or in your computer's network settings.
- 3 Log in with the store's router username and password.

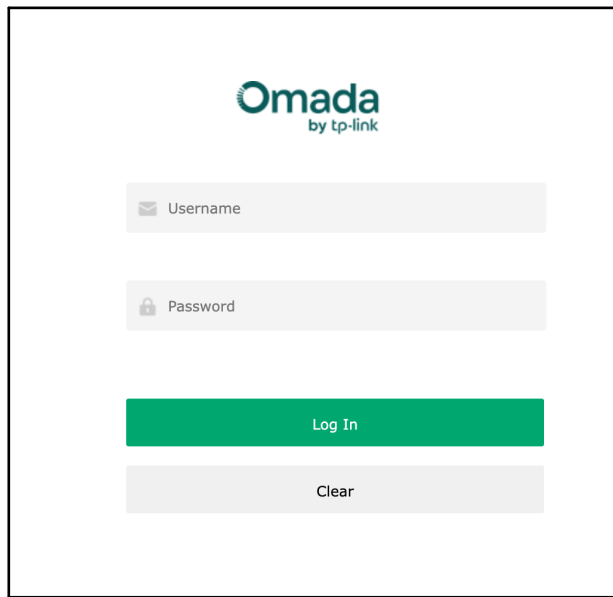The image shows the Omada login interface. At the top center is the Omada logo, which consists of the word "Omada" in a teal font with a circular icon to its left, and "by tp-link" in a smaller font below it. Below the logo are two input fields: the first is labeled "Username" with an envelope icon on the left, and the second is labeled "Password" with a lock icon on the left. Below these fields is a green button labeled "Log In" and a light gray button labeled "Clear".

The Omada login screen — enter the username and password here.

STEP 2: Go to the LAN Settings


- 1 On the left-hand menu, click **Network** to open it up.
- 2 Click **LAN**.

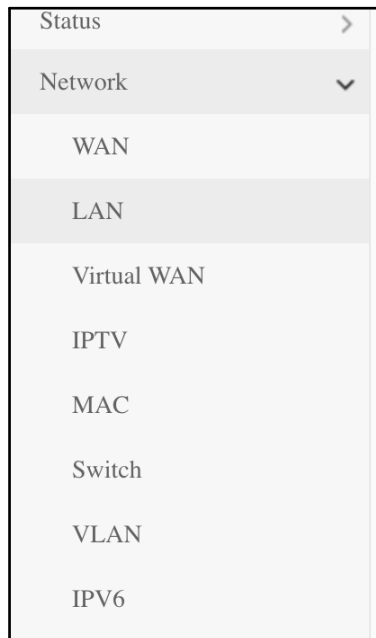

The left-hand menu, with Network opened and LAN selected.

STEP 3: Open Address Reservation

- 1 At the top of the LAN page, click the **Address Reservation** tab.
- 2 Click the **+ Add** button on the right to create a new rule.

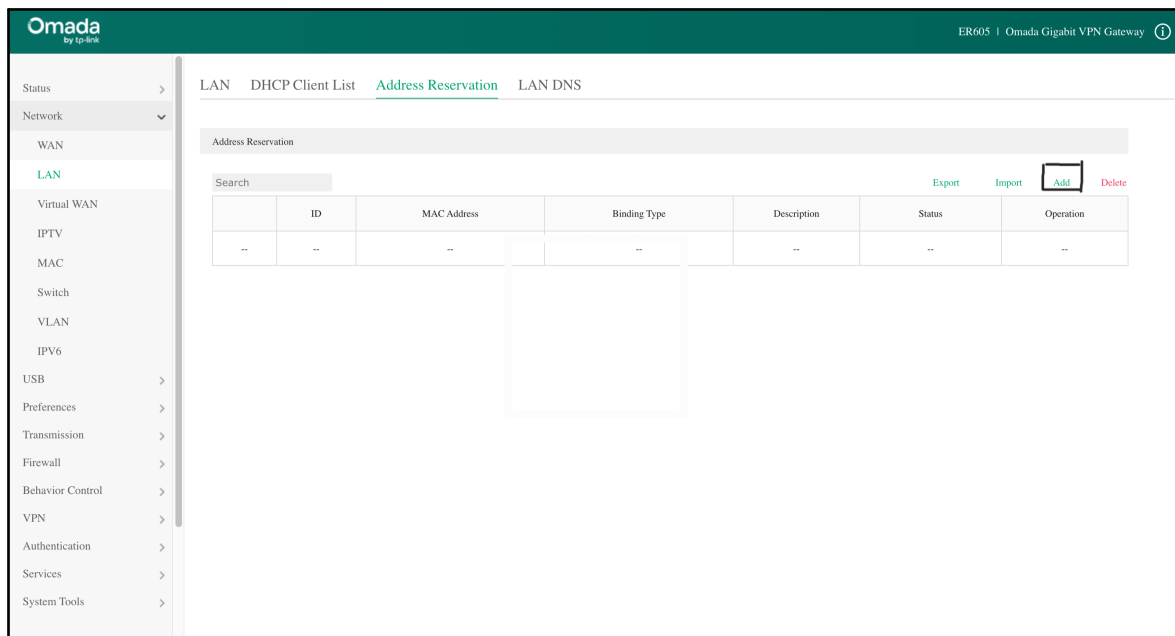

The Address Reservation page — click the highlighted Add button to create a new rule.

STEP 4: Fill In the Device Details

Fill in the form using the guide below:

MAC Address	Enter the device's MAC address (for example, the Pi, NVR, or camera).
Binding with	Leave the IP Address box checked.
IP Address	Enter the fixed IP address you want to give this device (see the format guide below).
DHCP Option	Leave this unchecked.
Description	Give the device a simple name, like "XenReality Pi" or "Store NVR".
Export to IP-MAC Binding	Check Enable.
IP-MAC Binding Interface	Choose LAN.
Status	Check Enable.

How to Pick the IP Address

The IP address you choose must follow the same pattern as the router's own address — only the last number changes.

Which Numbers Are Okay to Use

- **Router's own address:** the first number in the range (for example, **10.80.0.1**) — this one is already taken by the router itself.
- **Numbers you can use:** everything after that, for example **10.80.0.2** up to **10.80.0.254**.

Only change the very last number (the **.X** part). The first three numbers (for example, **10.80.0**) must stay exactly the same as the router's address.

Example: if a store's router address is **192.168.1.1**, you could give a device the address **192.168.1.150**.

When you're done, click **OK** to save.

MAC Address:

Binding with: ☒ IP Address

☐ DHCP Option

Description: (Optional)

Export to IP-MAC Binding: ☒ Enable

IP-MAC Binding Interface:

Status: ☒ Enable

The Address Reservation form — fill in each box as described above.

STEP 5: Reconnect and Double-Check

- 1 **Reconnect the device:** unplug and plug back in the network cable on the device (or just restart it). This makes it ask the router for a new address.
- 2 **Check the client list:** click the DHCP Client List tab at the top of the page and make sure the device shows up with its new, fixed IP address.

LAN DHCP Client List Address Reservation LAN DNS

DHCP Client List

The tabs under LAN — click DHCP Client List to check the device's new address.

- 3 **Double-check with a ping:** open Terminal (or Command Prompt) on your computer and type:

```
ping <Fixed-IP-Address>
```

If it worked, you'll see replies that look something like this:

```
64 bytes from 10.80.0.150: icmp_seq=0 ttl=64 time=41.891 ms
64 bytes from 10.80.0.150: icmp_seq=1 ttl=64 time=4.320 ms
64 bytes from 10.80.0.150: icmp_seq=2 ttl=64 time=12.428 ms
64 bytes from 10.80.0.150: icmp_seq=3 ttl=64 time=5.198 ms
64 bytes from 10.80.0.150: icmp_seq=4 ttl=64 time=4.161 ms
```

If you get replies back like this, the setup worked.

Extra Notes

- **If there's an NVR:** give a fixed IP to both the Pi and the NVR. Cameras plugged straight into the NVR's PoE ports don't need their own rule on the router.
- **If there's no NVR:** and the cameras connect straight to the main LAN switch, repeat Steps 3–5 for each camera on site.