


1. Open Zadig.exe

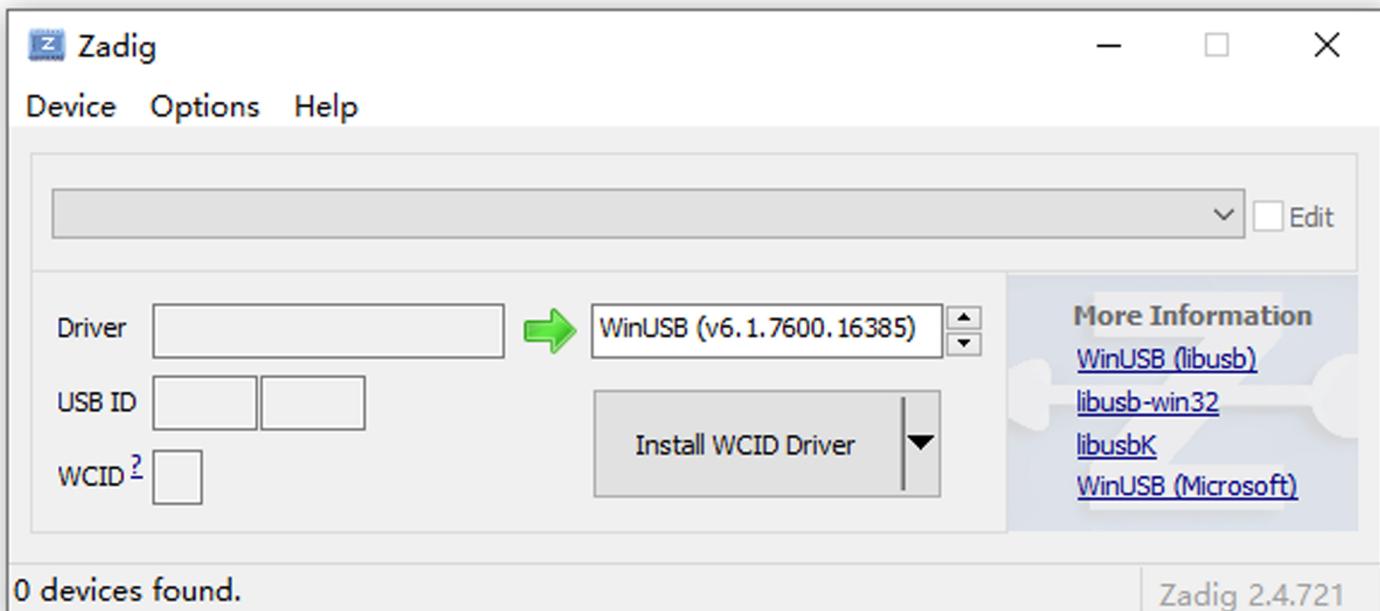


2. Board Connect PC

Hold down the **Boot button** while inserting the USB, otherwise the **STM32 Bootloader** will not be displayed


3. List All Devices

Click “**Options->List All Devices**”

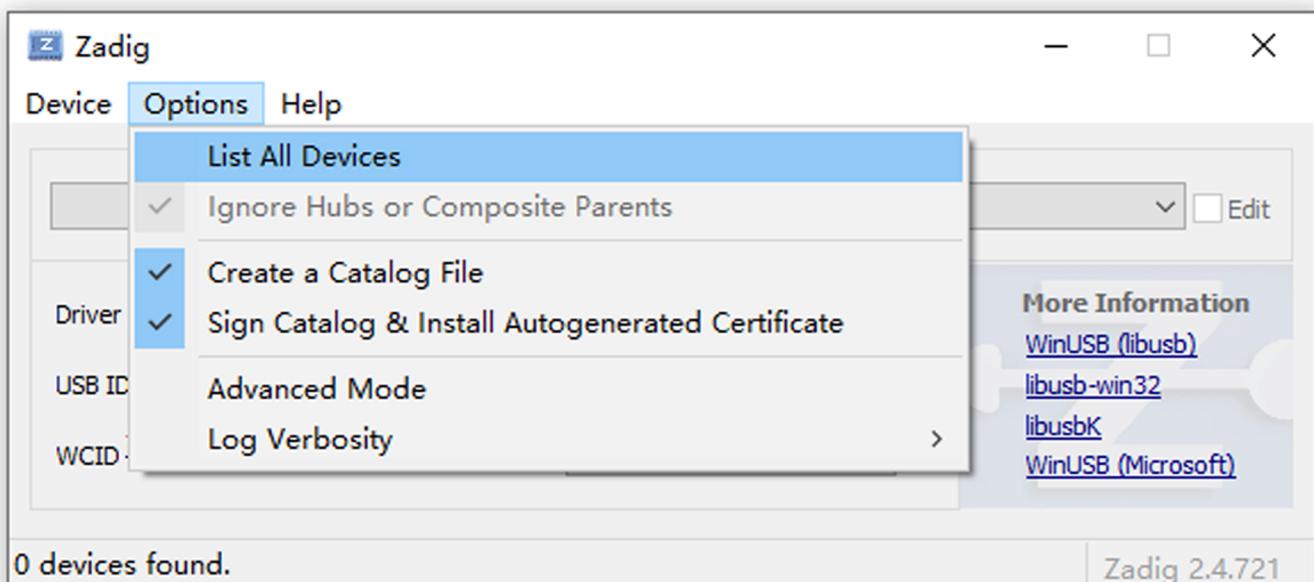


4. Choose

Please choose “STM32 BOOTLOADER”

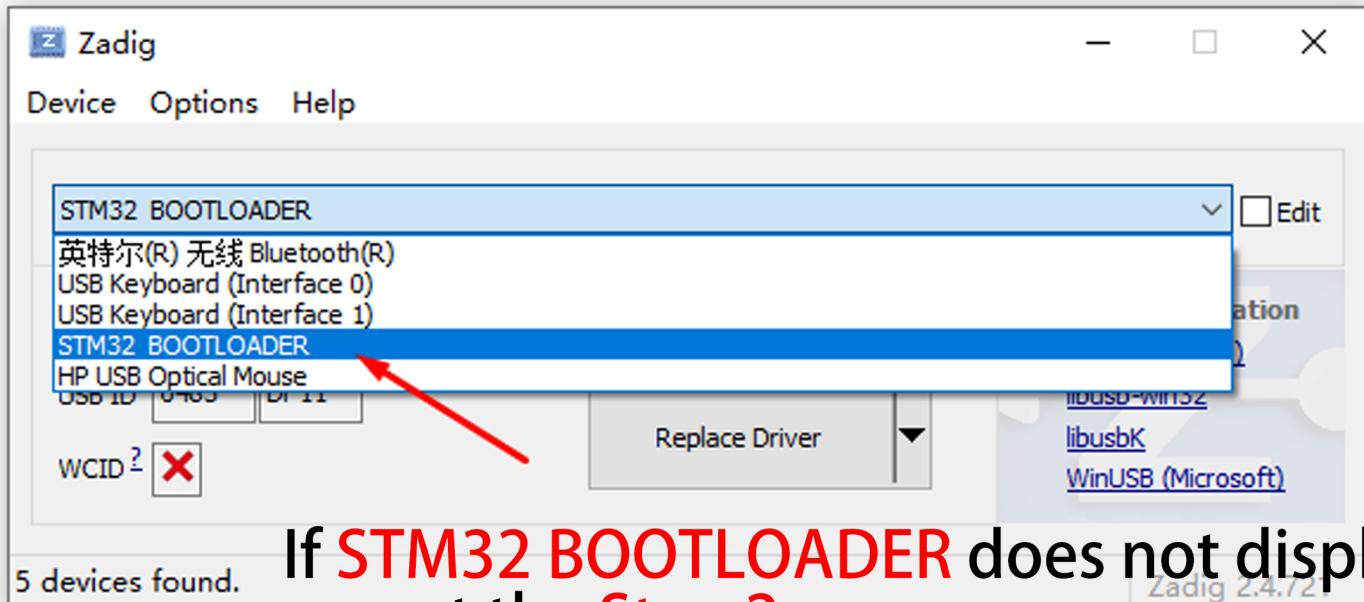


5. WinUSB

Mode selection WinUSB “STM32 BOOTLOADER”

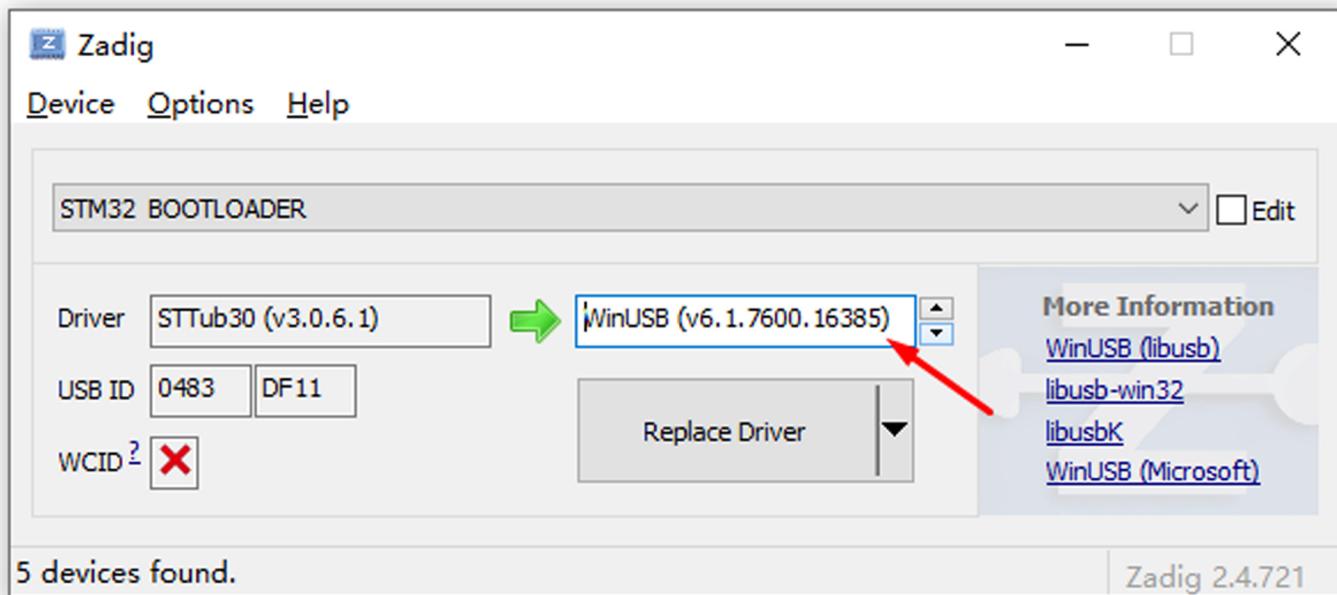

6. Click Replace Driver

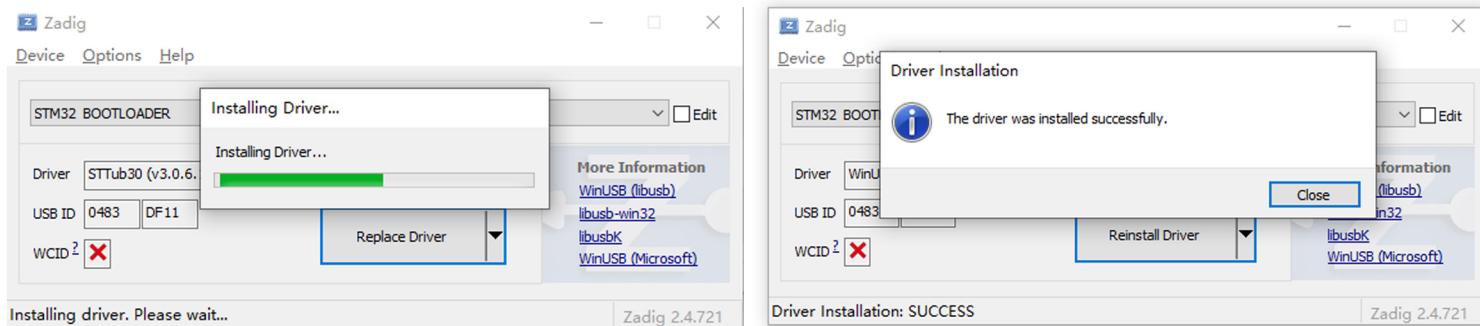

7. Open Device Manager

