Digispark PWM + IRS20752 + CSD18540Q5B

Reference wiring | 100Hz–500kHz at IN | requested duty 5%–95% | floating 12V supply

1. Controls — regulated +5V

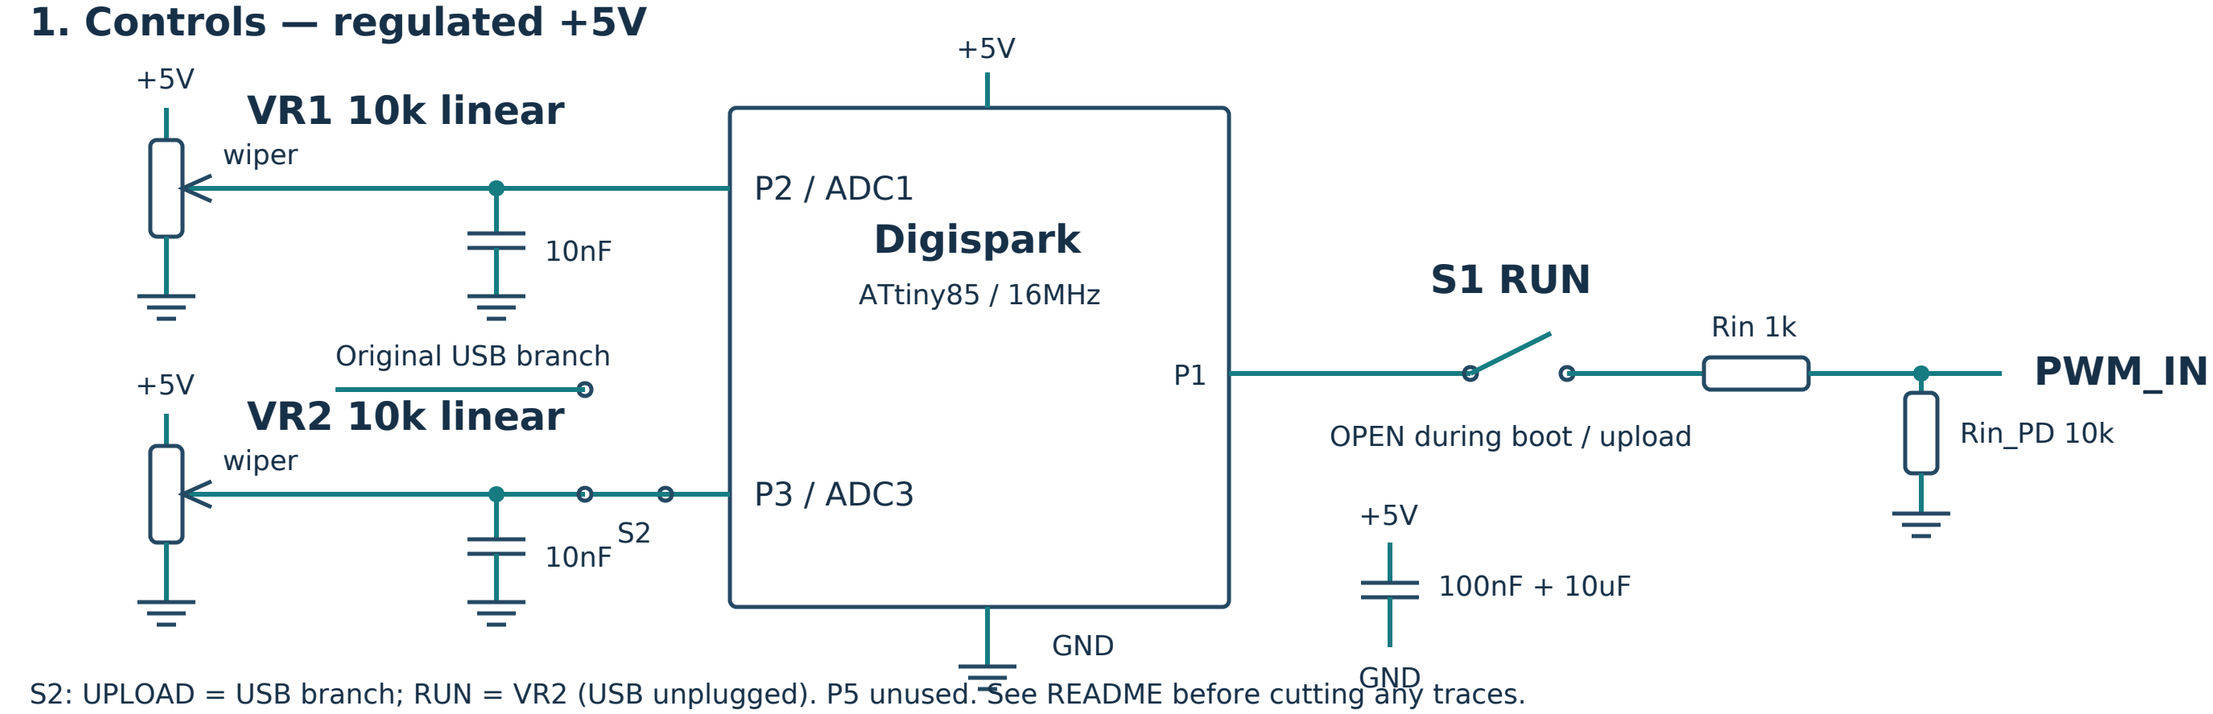

S2: UPLOAD = USB branch; RUN = VR2 (USB unplugged). P5 unused. See README before cutting any traces.

2. High-side driver — isolated supply for VB–VS; no bootstrap diode

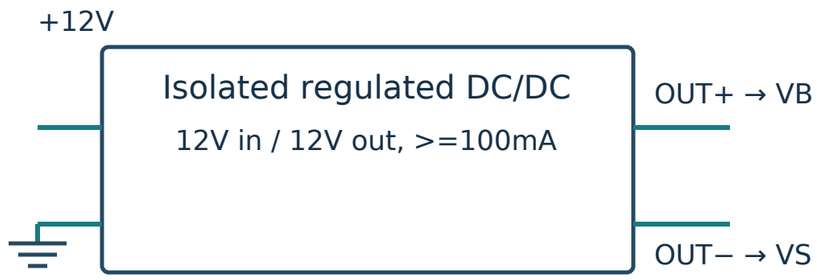

Do NOT connect OUT− to GND.

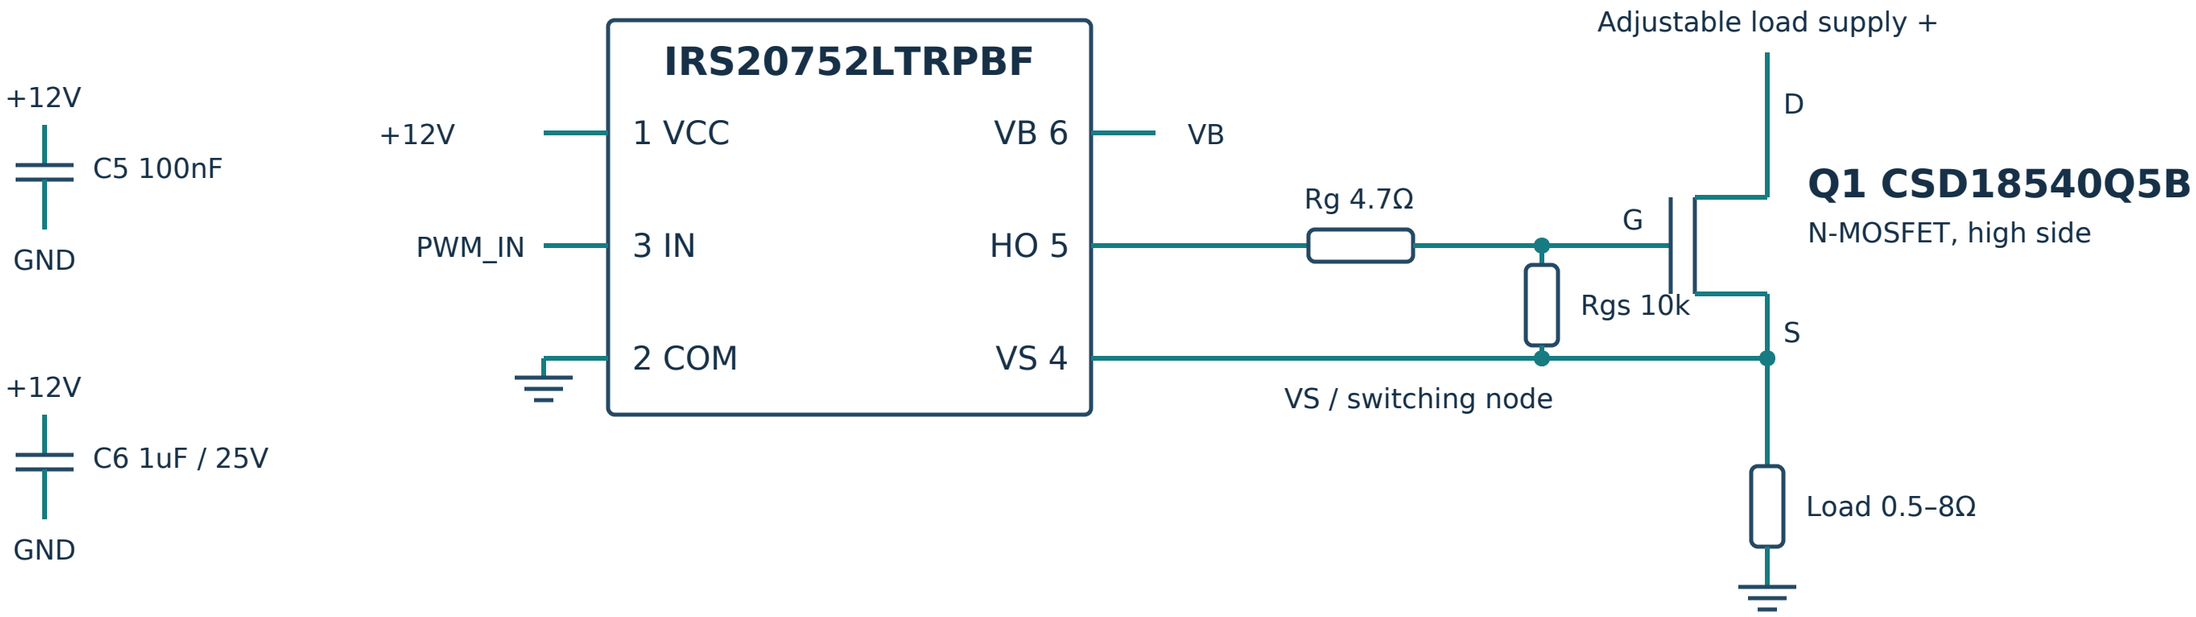

GND = Digispark GND = driver COM = load supply negative. VS is NOT ground.

500kHz + 5% / 95% means ~100ns pulses: Gate fidelity is NOT guaranteed with this driver.

Measure VGS with a suitable differential probe. Never clip an earth-ground scope lead to VS.

Same net names are connected. Functional pin placement shown; this is not a package top view. See README for setup.