


STARTING

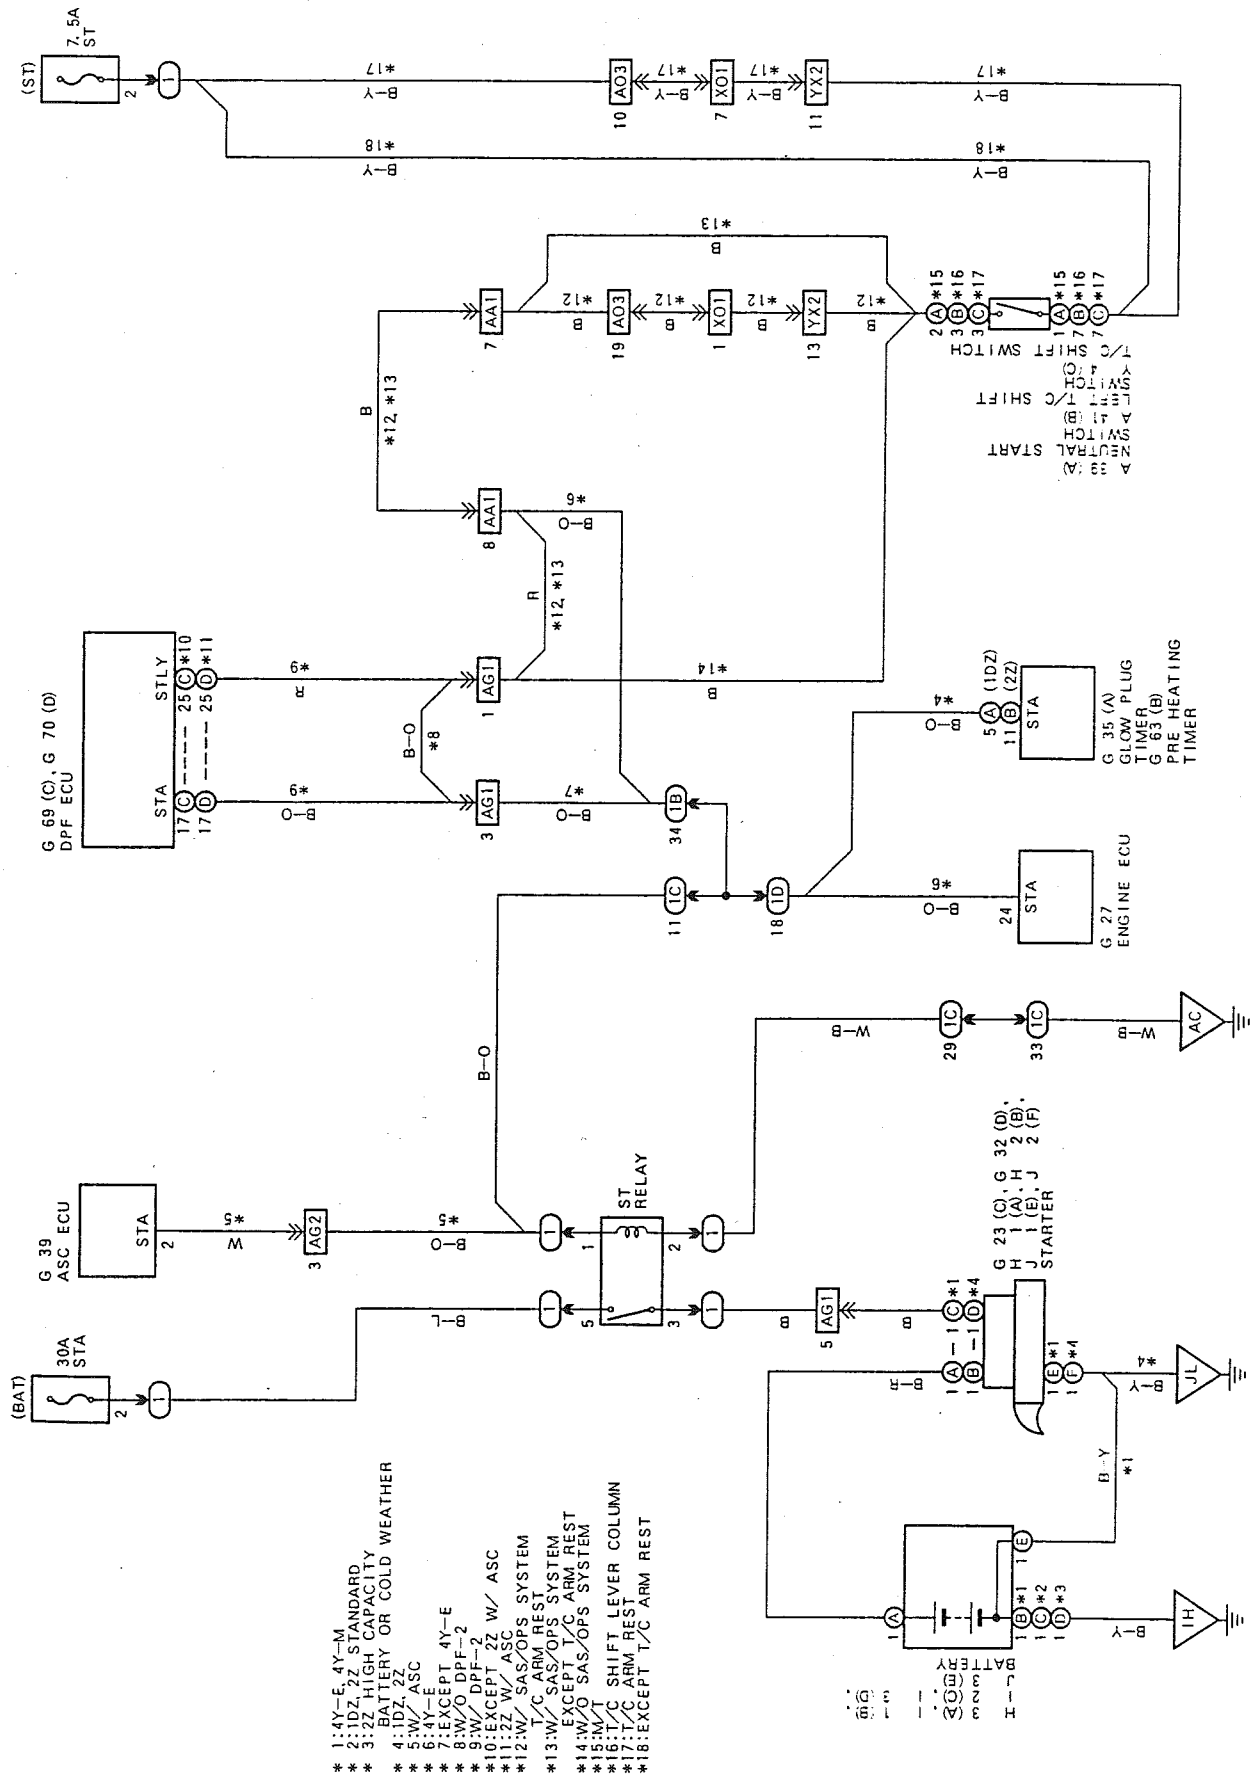

- * 1: 4Y-E, 4Y-M
- * 2: 1D, 2Z STANDARD
- * 3: 2Z HIGH CAPACITY
- * 4: BATTERY OR COLD WEATHER
- * 5: DZ, ASC
- * 6: 4Y-E, ASC
- * 7: EXCEPT 4Y-E
- * 8: W/O DPF-2
- * 9: W/O DPF-2
- * 10: EXCEPT 2Z W/ ASC
- * 11: 2Z W/ ASC
- * 12: W/ SAS/OPS SYSTEM
- * 13: W/ SAS/OPS SYSTEM
- * 14: W/ SAS/OPS SYSTEM
- * 15: W/ SAS/OPS SYSTEM
- * 16: T/C SHIFT LEVER COLUMN
- * 17: T/C ARM REST
- * 18: EXCEPT T/C ARM REST


IGNITION

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
G 20	E2-2	G 26	E2-2				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12.21	ENGINE ROOM R/B
1C	E2-12.22	BODY MAIN WIRE to J/B
1D	E2-12.22	ENGINE WIRE to J/B

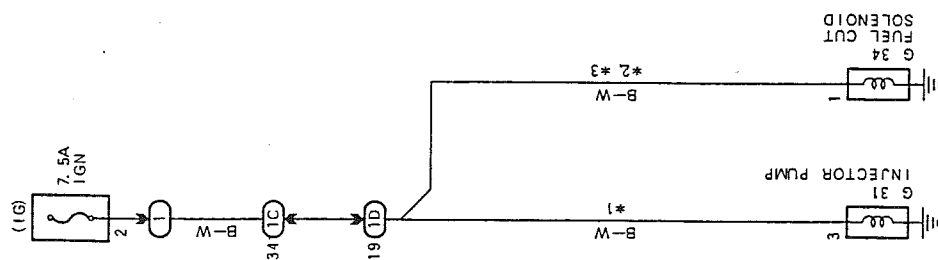

** 1: 1DZ, 2Z W/ ASC OR DPF-2
 ** 2: 4Y-M GASOLINE
 ** 3: 1DZ, 2Z EXCEPT *1


FUEL

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
G 31	E2-6,8	G 34	E2-2,6,8				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B

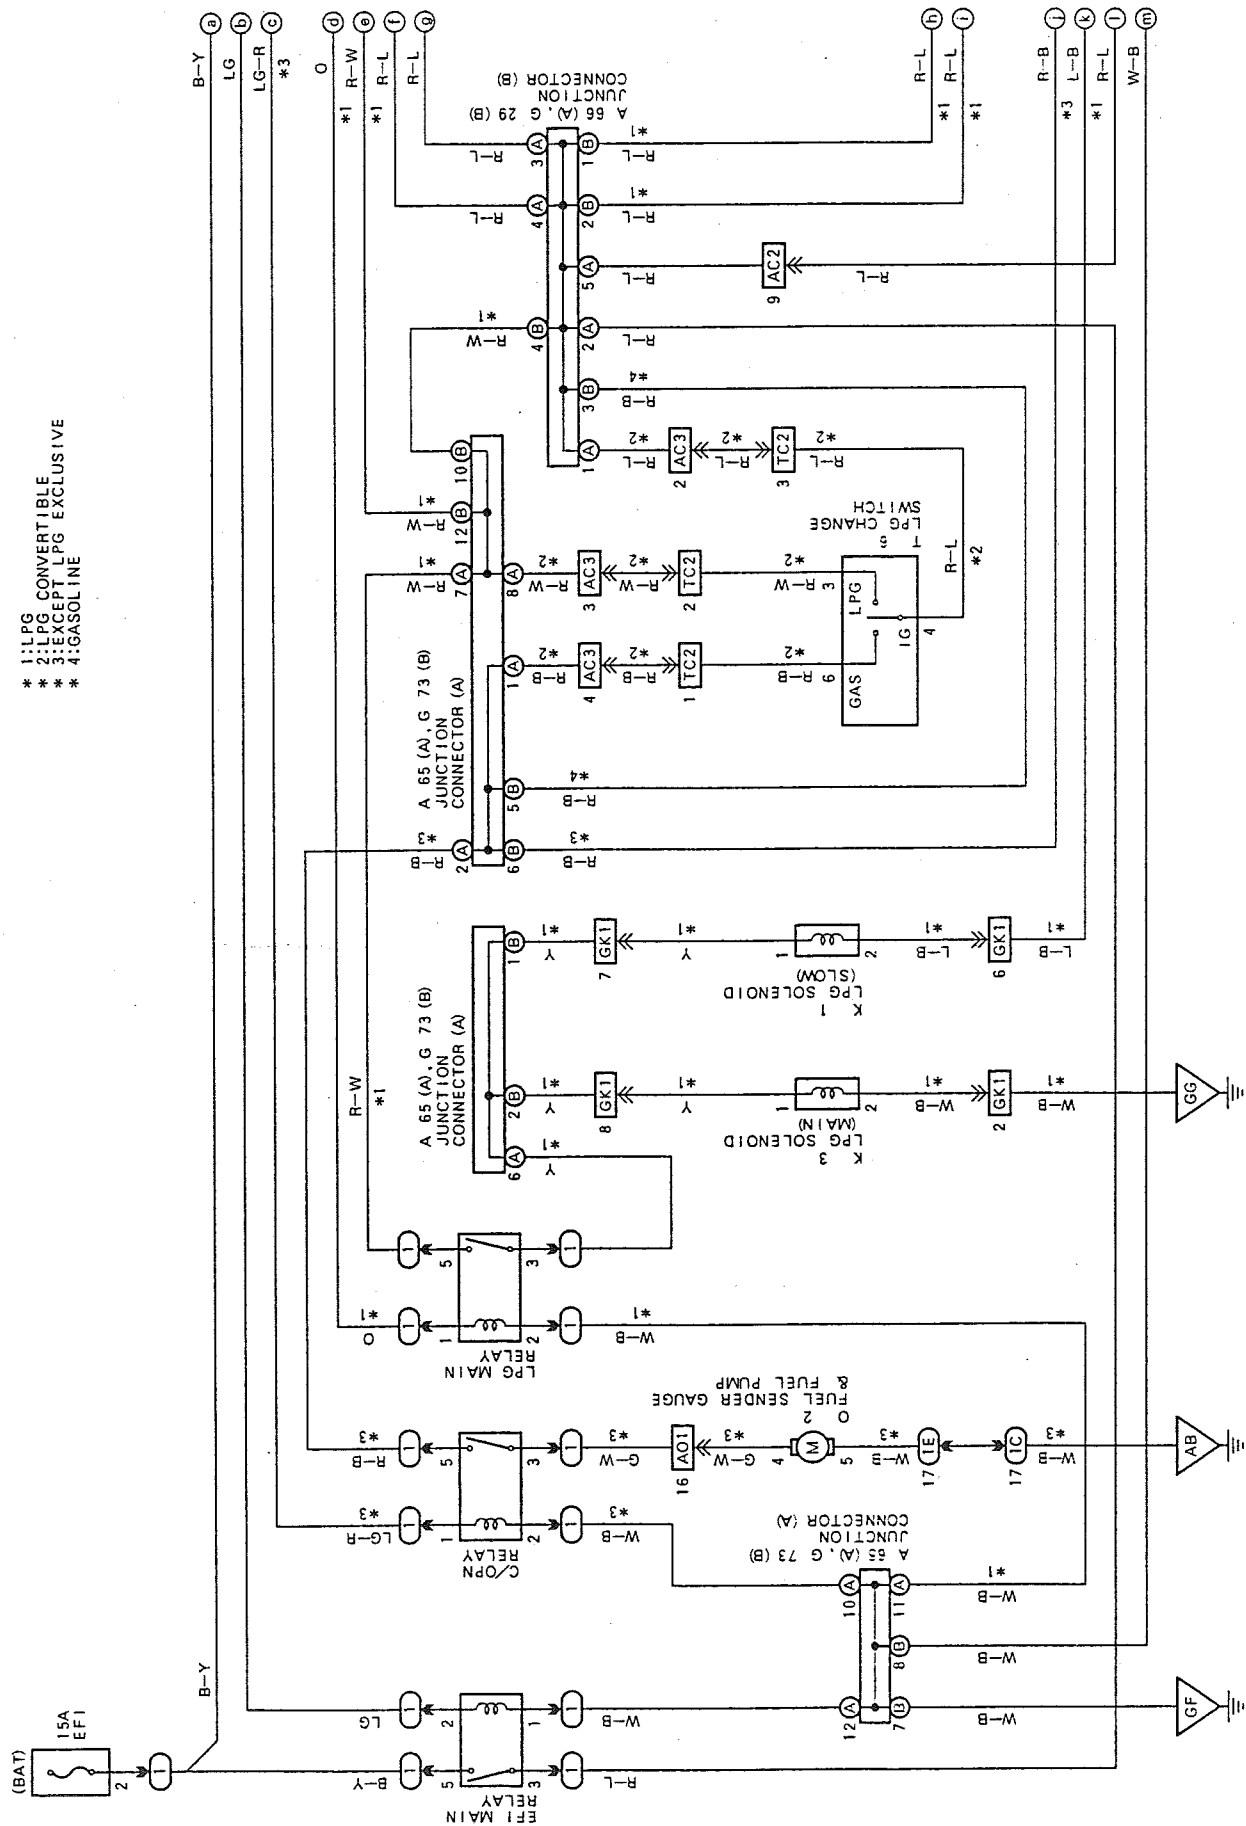


ENGINE CONTROL (4Y-E)



ENGINE CONTROL (4Y-E)

* 1: LPG
* 4: GASOLINE
* 6: TWISTED WIRE

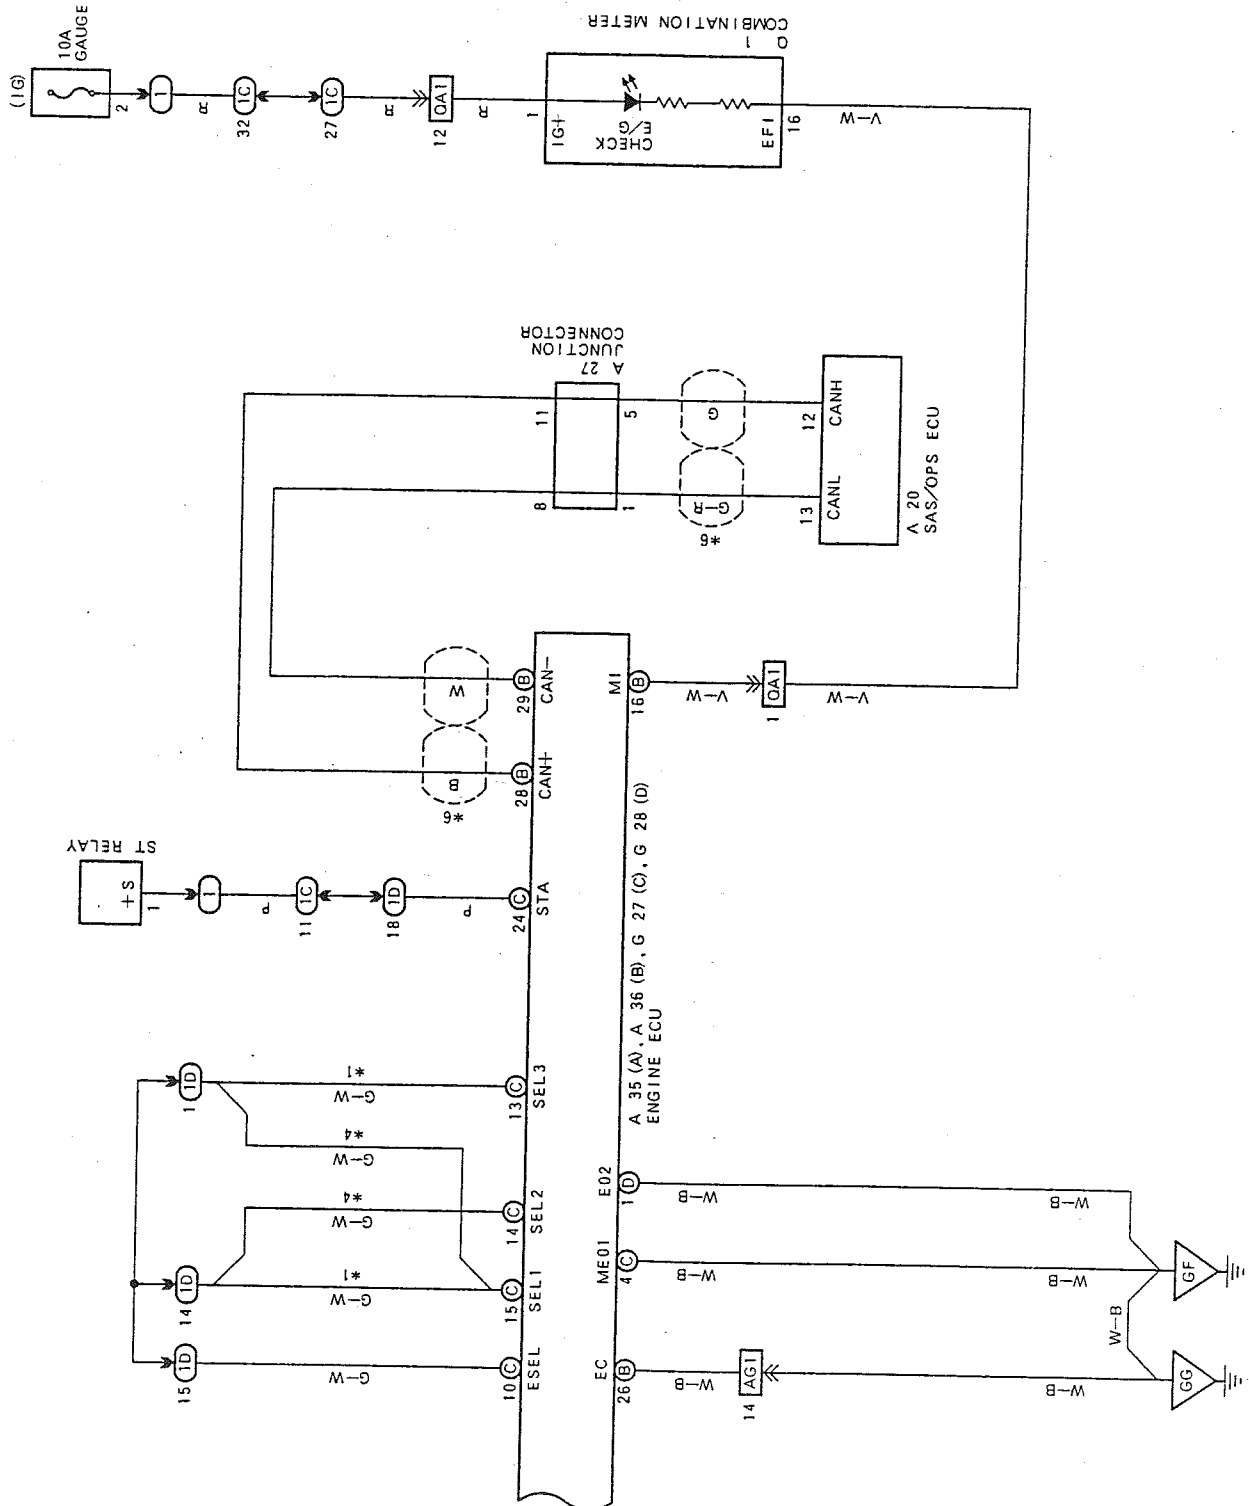

ENGINE CONTROL (4Y-E)

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 20	E2-10	G 6	E2-4	G 18	E2-4	K 1	E2-4
A 25	E2-12	G 7	E2-4	G 19	E2-4	K 2	E2-4
A 27	E2-12	G 8	E2-4	G 21	E2-4	K 3	E2-4
A 35	E2-12	G 9	E2-4	G 25	E2-4	O 2	E2-16
A 36	E2-12	G 10	E2-4	G 26	E2-4	Q 1	E2-10
A 65	E2-12	G 11	E2-4	G 27	E2-12	T 6	E2-18
A 66	E2-12	G 12	E2-4	G 28	E2-12	a 1	E2-10
C 1	E2-18	G 13	E2-4	G 29	E2-12		
C 3	E2-18	G 16	E2-4	G 73	E2-12		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
AC2	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AC3	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
AO1	E2-12	BODY MAIN WIRE to LH SIDE WIRE
Aa1	E2-10	BODY MAIN WIRE to SUB ACCEL WIRE
GK1	E2-4	ENGINE WIRE to ENGINE SUB WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
TC2	E2-18	RR UPR SUB RH WIRE to SIDE RH WIRE

EARTH


Code	See Page	Name
AB	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
GF	E2-4	ENGINE UPPER EARTH
GG	E2-4	ENGINE UPPER EARTH

MEMO

GLOW

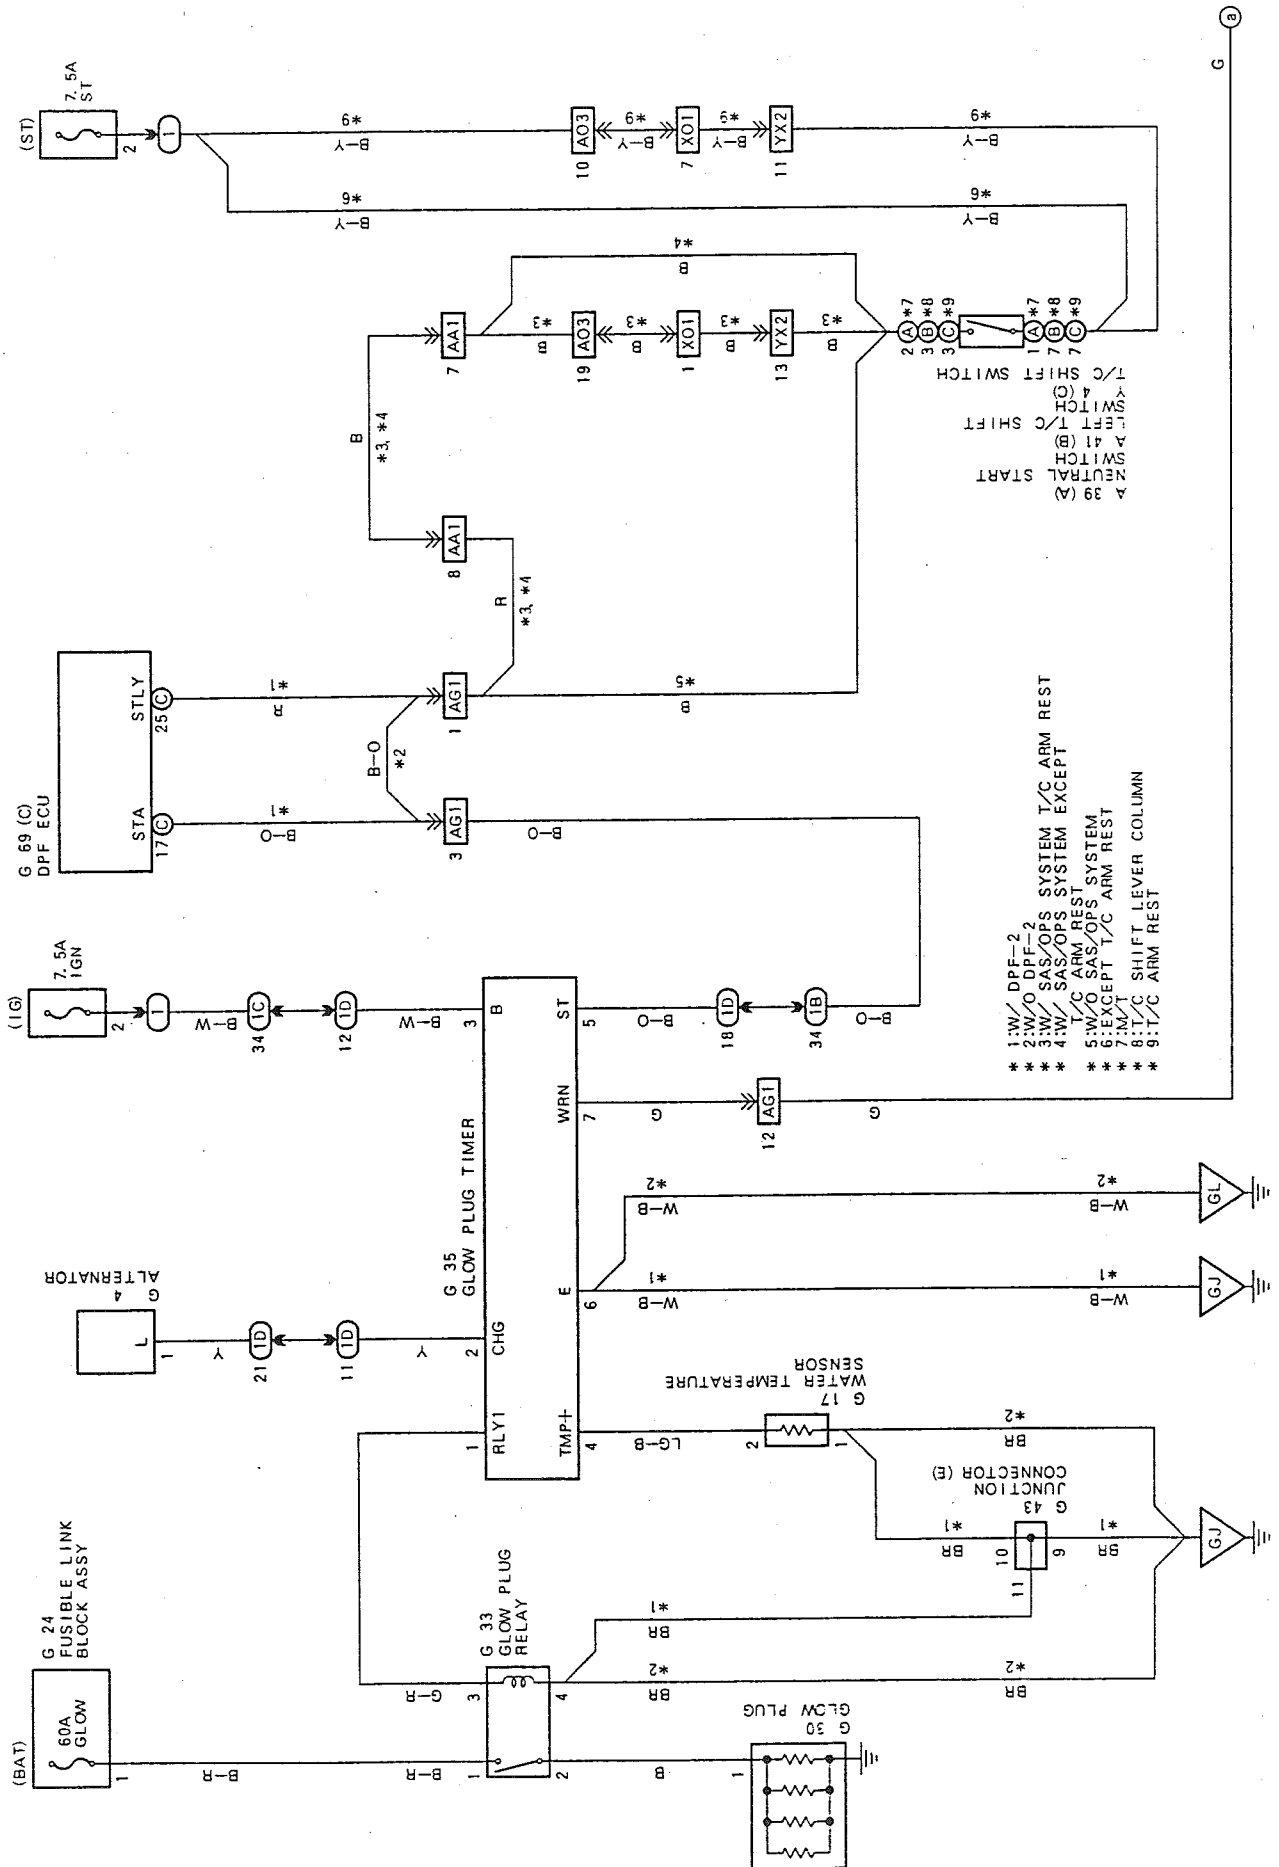

GLOW

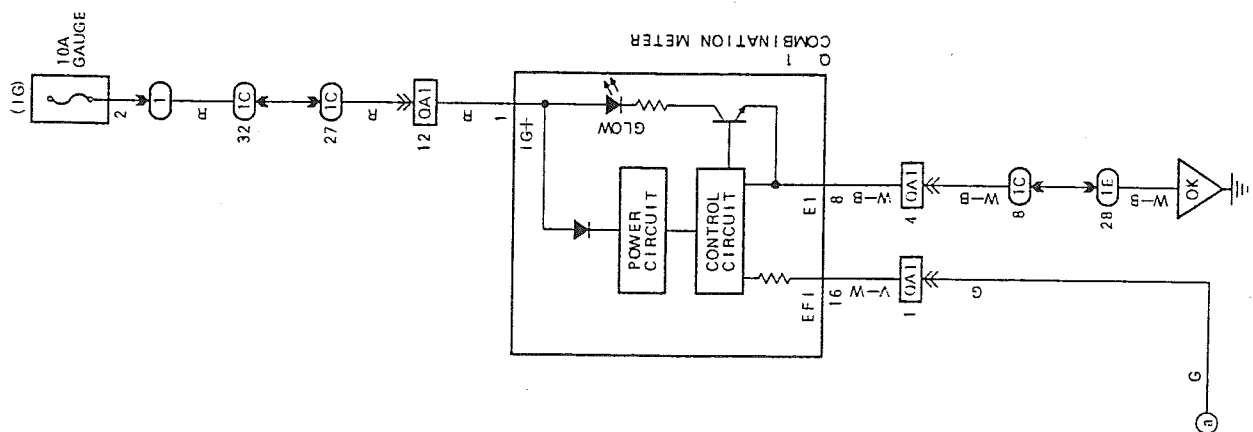

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 39	E2-12	G 17	E2-6	G 33	E2-6	G 69	E2-6
A 41	E2-10	G 24	E2-6,20	G 35	E2-12	Q 1	E2-10
G 4	E2-6	G 30	E2-6	G 43	E2-12	Y 4	E2-16

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AA1	E2-12	BODY MAIN WIRE to BODY MAIN WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX2	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE


EARTH

Code	See Page	Name
GJ	E2-6	JUNCTION BLOCK IN FRONT INSIDE EARTH
GL	E2-6	JUNCTION BLOCK IN FRONT INSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH


MEMO

23-21

INTAKE HEATER

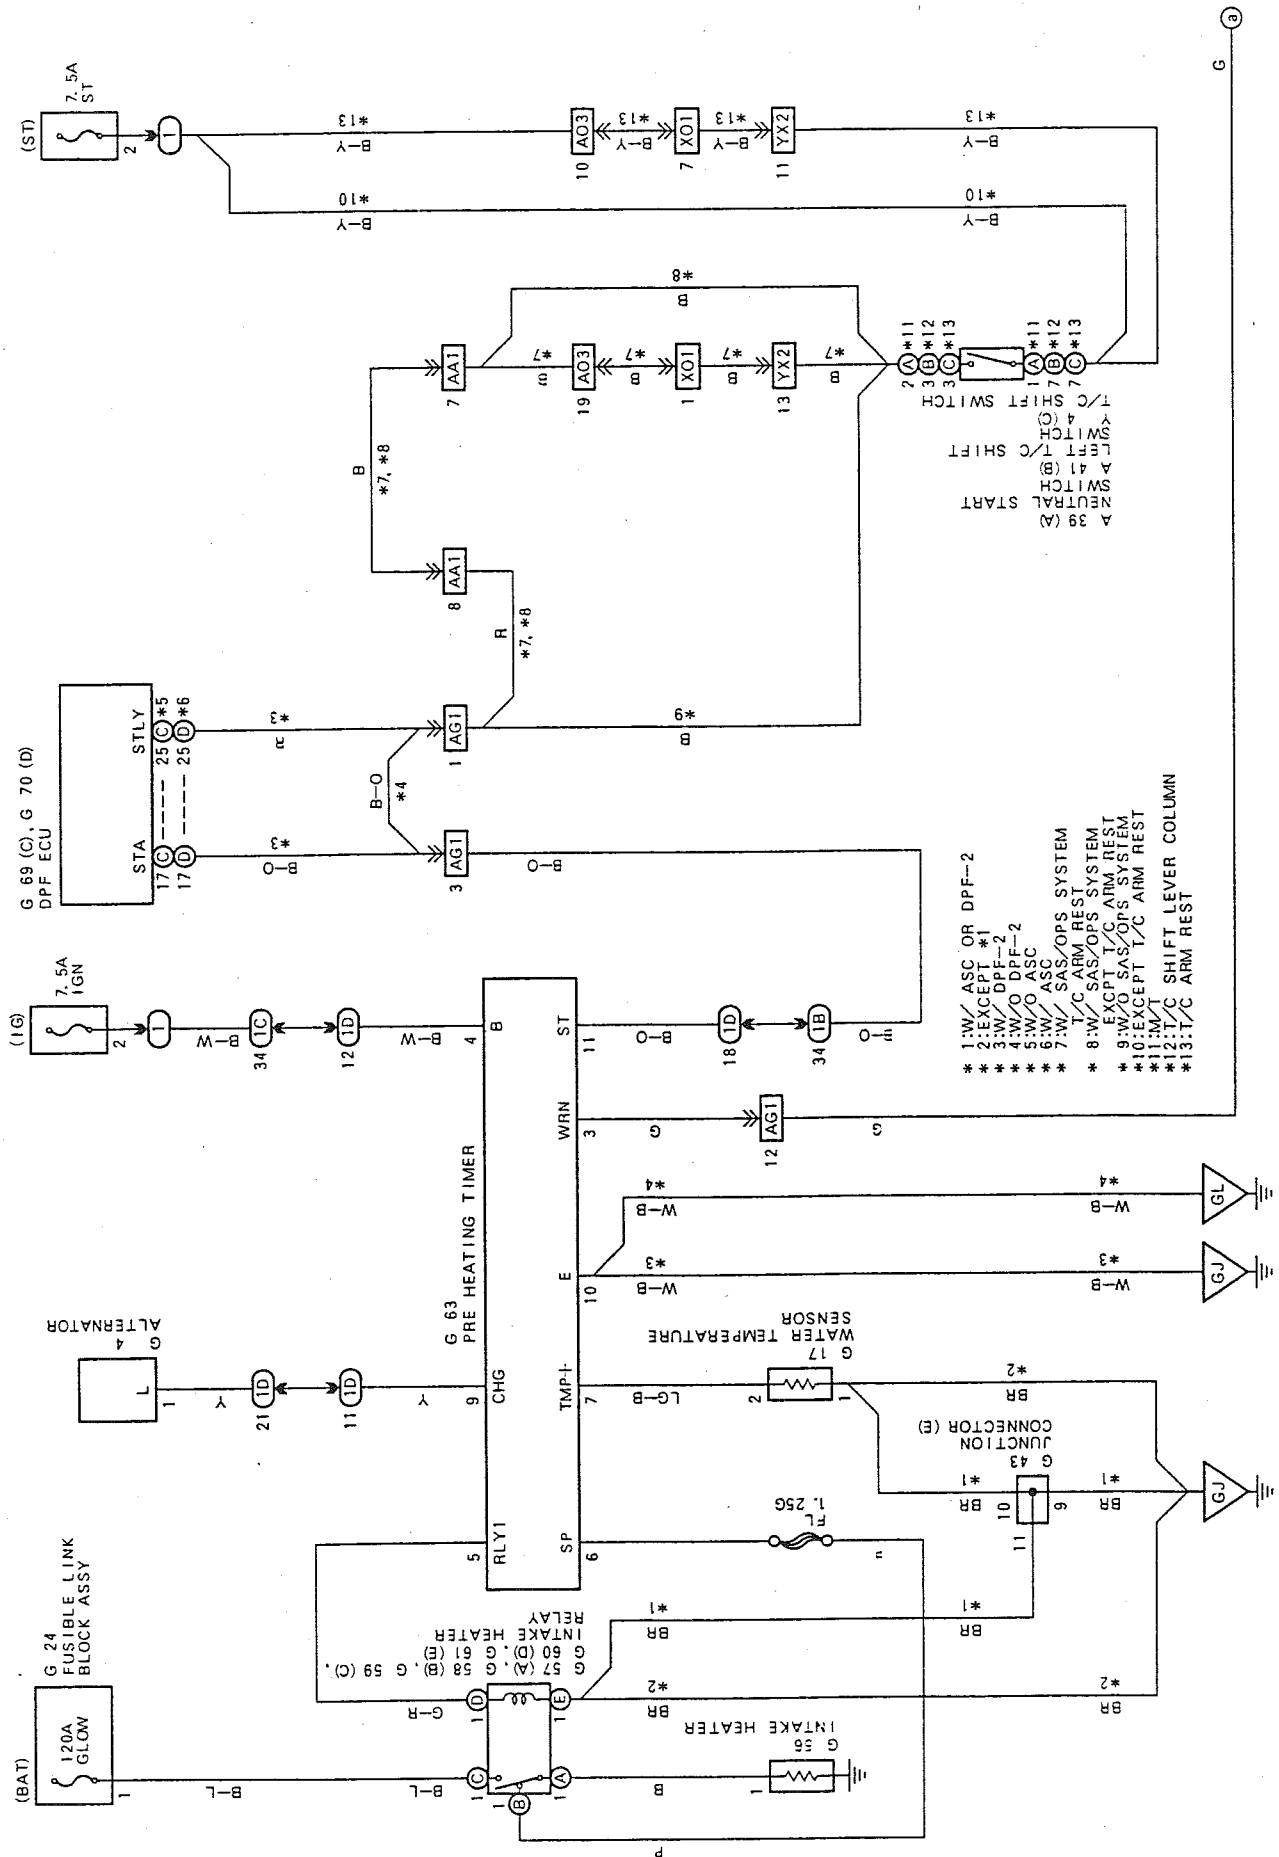

INTAKE HEATER

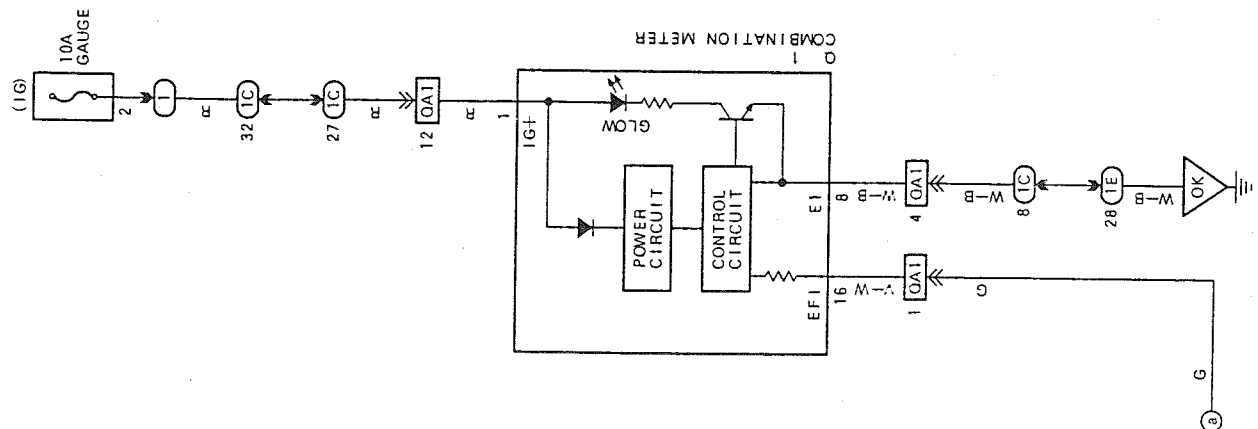

INTAKE HEATER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 39	E2-12	G 43	E2-12	G 60	E2-8	Q 1	E2-10
A 41	E2-10	G 56	E2-8	G 61	E2-8	Y 4	E2-16
G 4	E2-8	G 57	E2-8	G 63	E2-12		
G 17	E2-8	G 58	E2-8	G 69	E2-8		
G 24	E2-8,20	G 59	E2-8	G 70	E2-8		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AA1	E2-12	BODY MAIN WIRE to BODY MAIN WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX2	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE


EARTH


Code	See Page	Name
GJ	E2-8	JUNCTION BLOCK IN FRONT INSIDE EARTH
GL	E2-8	JUNCTION BLOCK IN FRONT INSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH


MEMO

2020

20

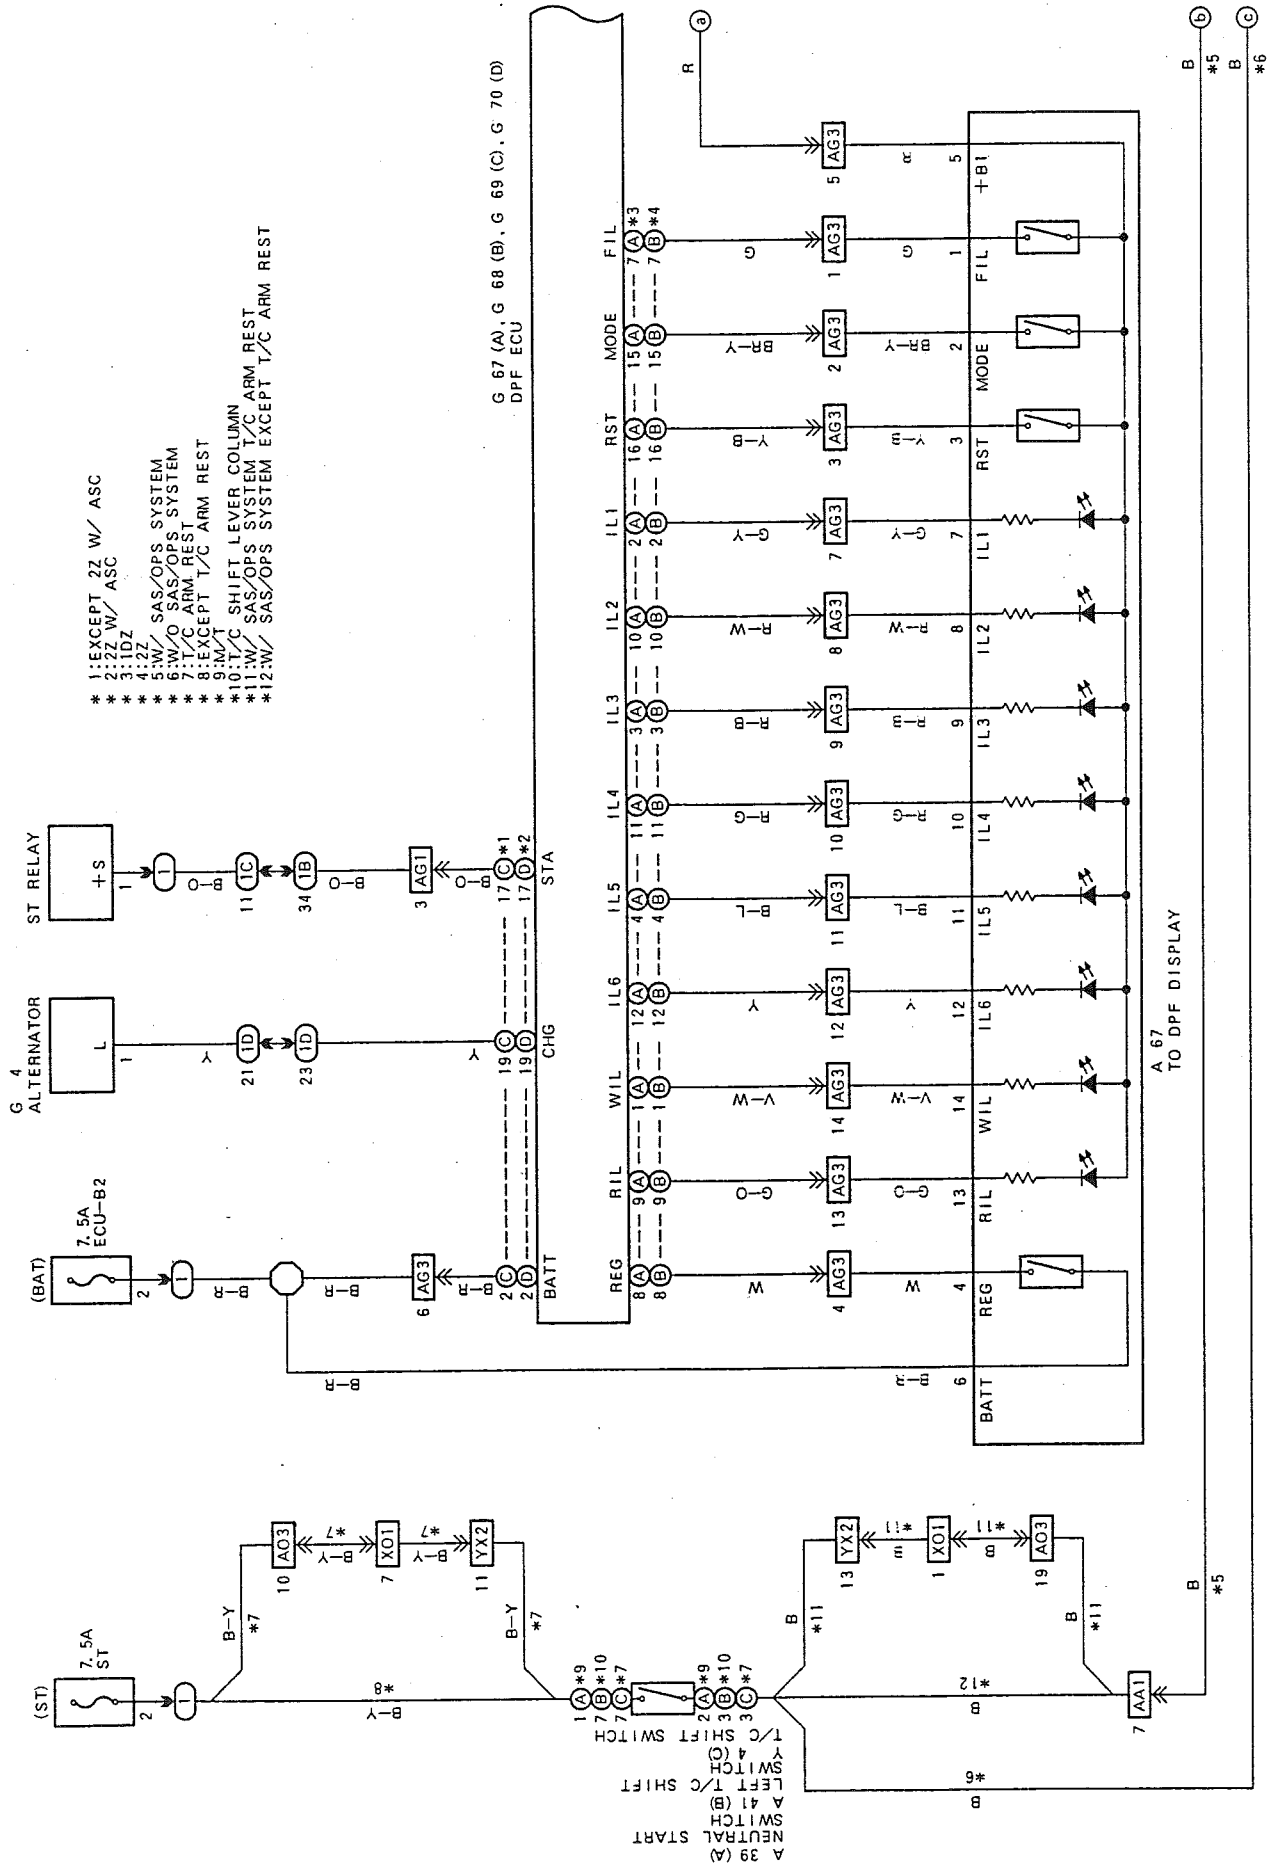

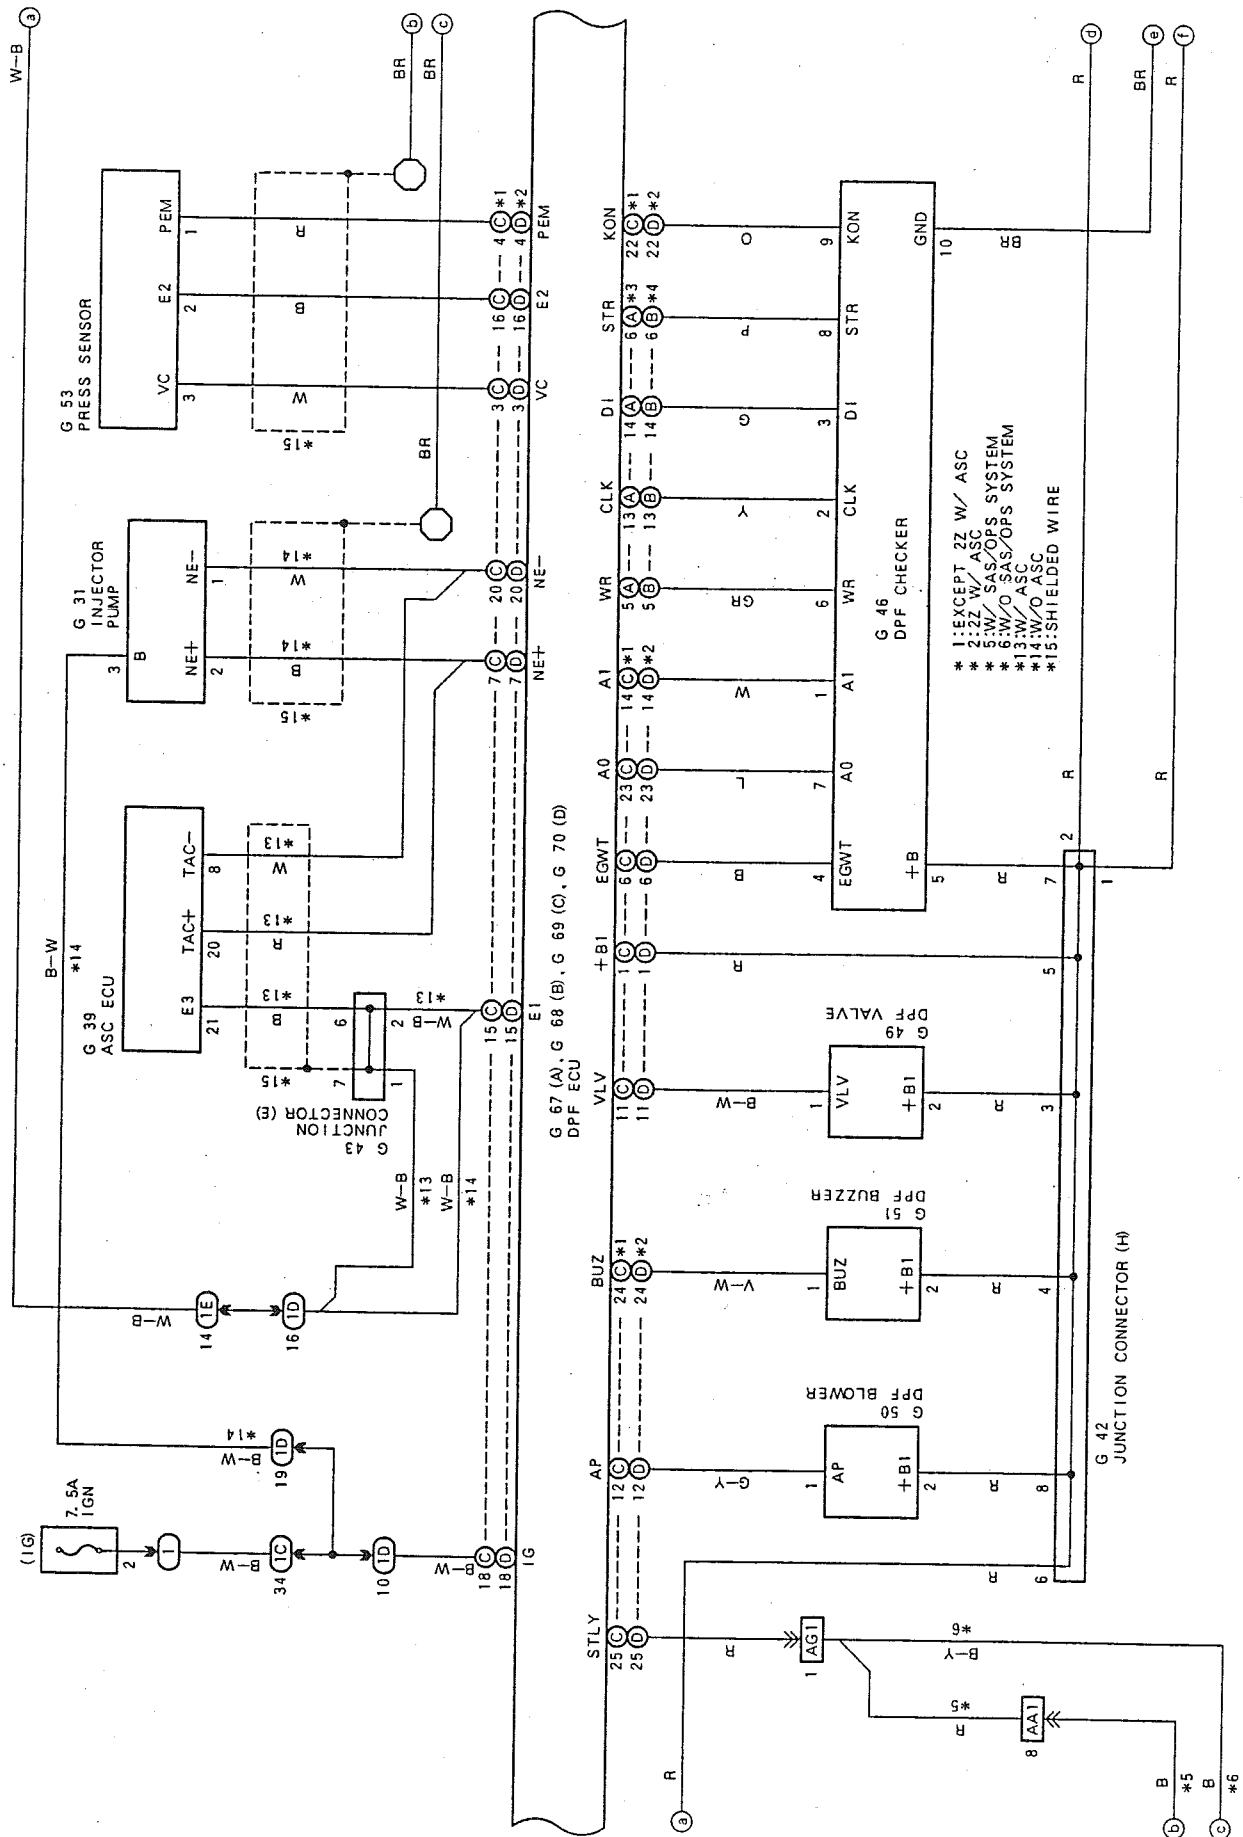

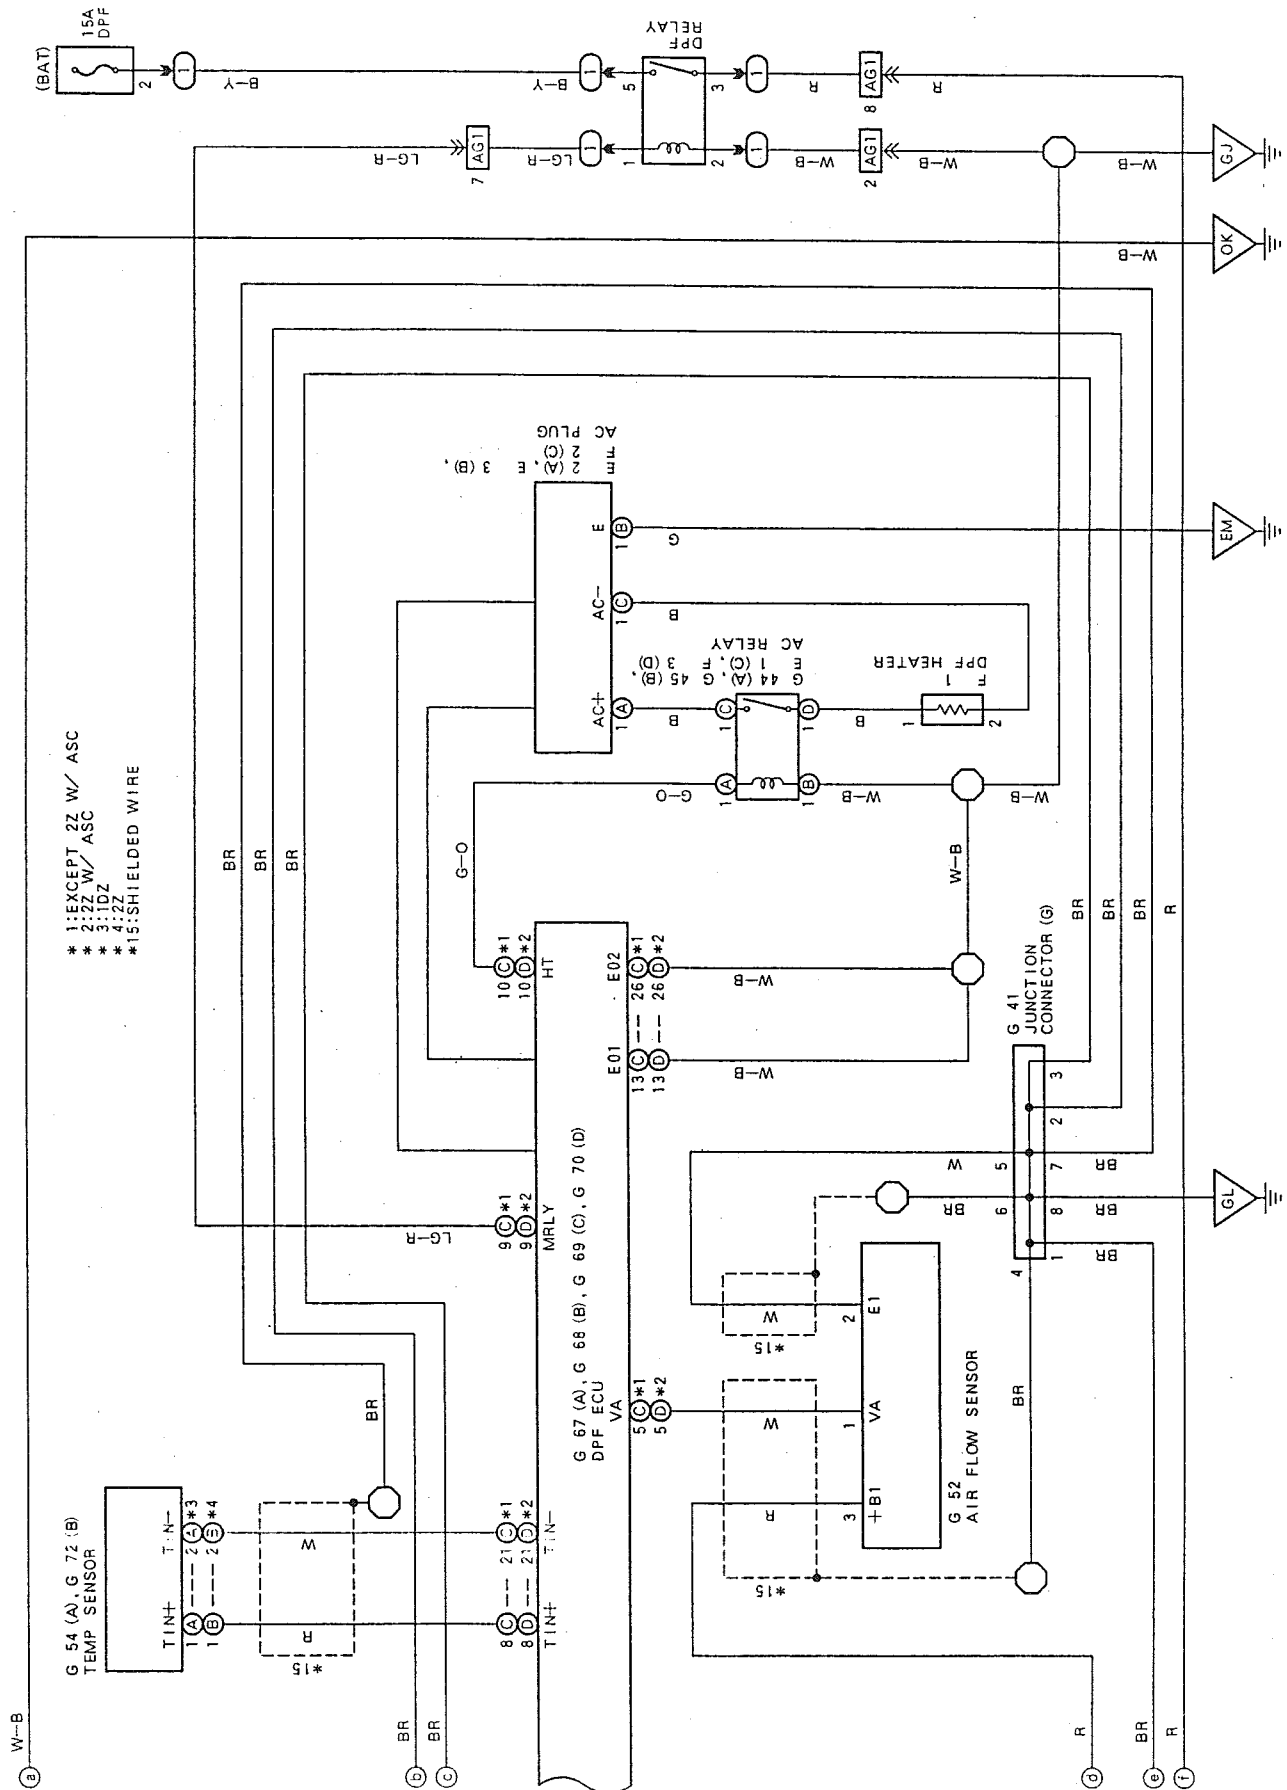

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 39	E2-12	F 3	E2-18	G 45	E2-6,8	G 67	E2-6
A 41	E2-10	G 4	E2-6,8	G 46	E2-6,8	G 68	E2-8
A 67	E2-10	G 31	E2-6,8	G 49	E2-6,8	G 69	E2-6,8
E 1	E2-18	G 39	E2-12	G 50	E2-6,8	G 70	E2-8
E 2	E2-18	G 41	E2-6,8	G 51	E2-6,8	G 72	E2-8
E 3	E2-18	G 42	E2-6,8	G 52	E2-6,8	Y 4	E2-16
F 1	E2-18	G 43	E2-12	G 53	E2-6,8		
F 2	E2-18	G 44	E2-6,8	G 54	E2-6		

RELAY BLOCK , JUNCTION BLOCK


Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AA1	E2-12	BODY MAIN WIRE to BODY MAIN WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
AG3	E2-12	BODY MAIN WIRE to ENGINE WIRE
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX2	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE

EARTH

Code	See Page	Name
EM	E2-18	FRONT PLATE RIGHT OUTSIDE EARTH
GJ	E2-6,8	JUNCTION BLOCK IN FRONT INSIDE EARTH
GL	E2-6,8	JUNCTION BLOCK IN FRONT INSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

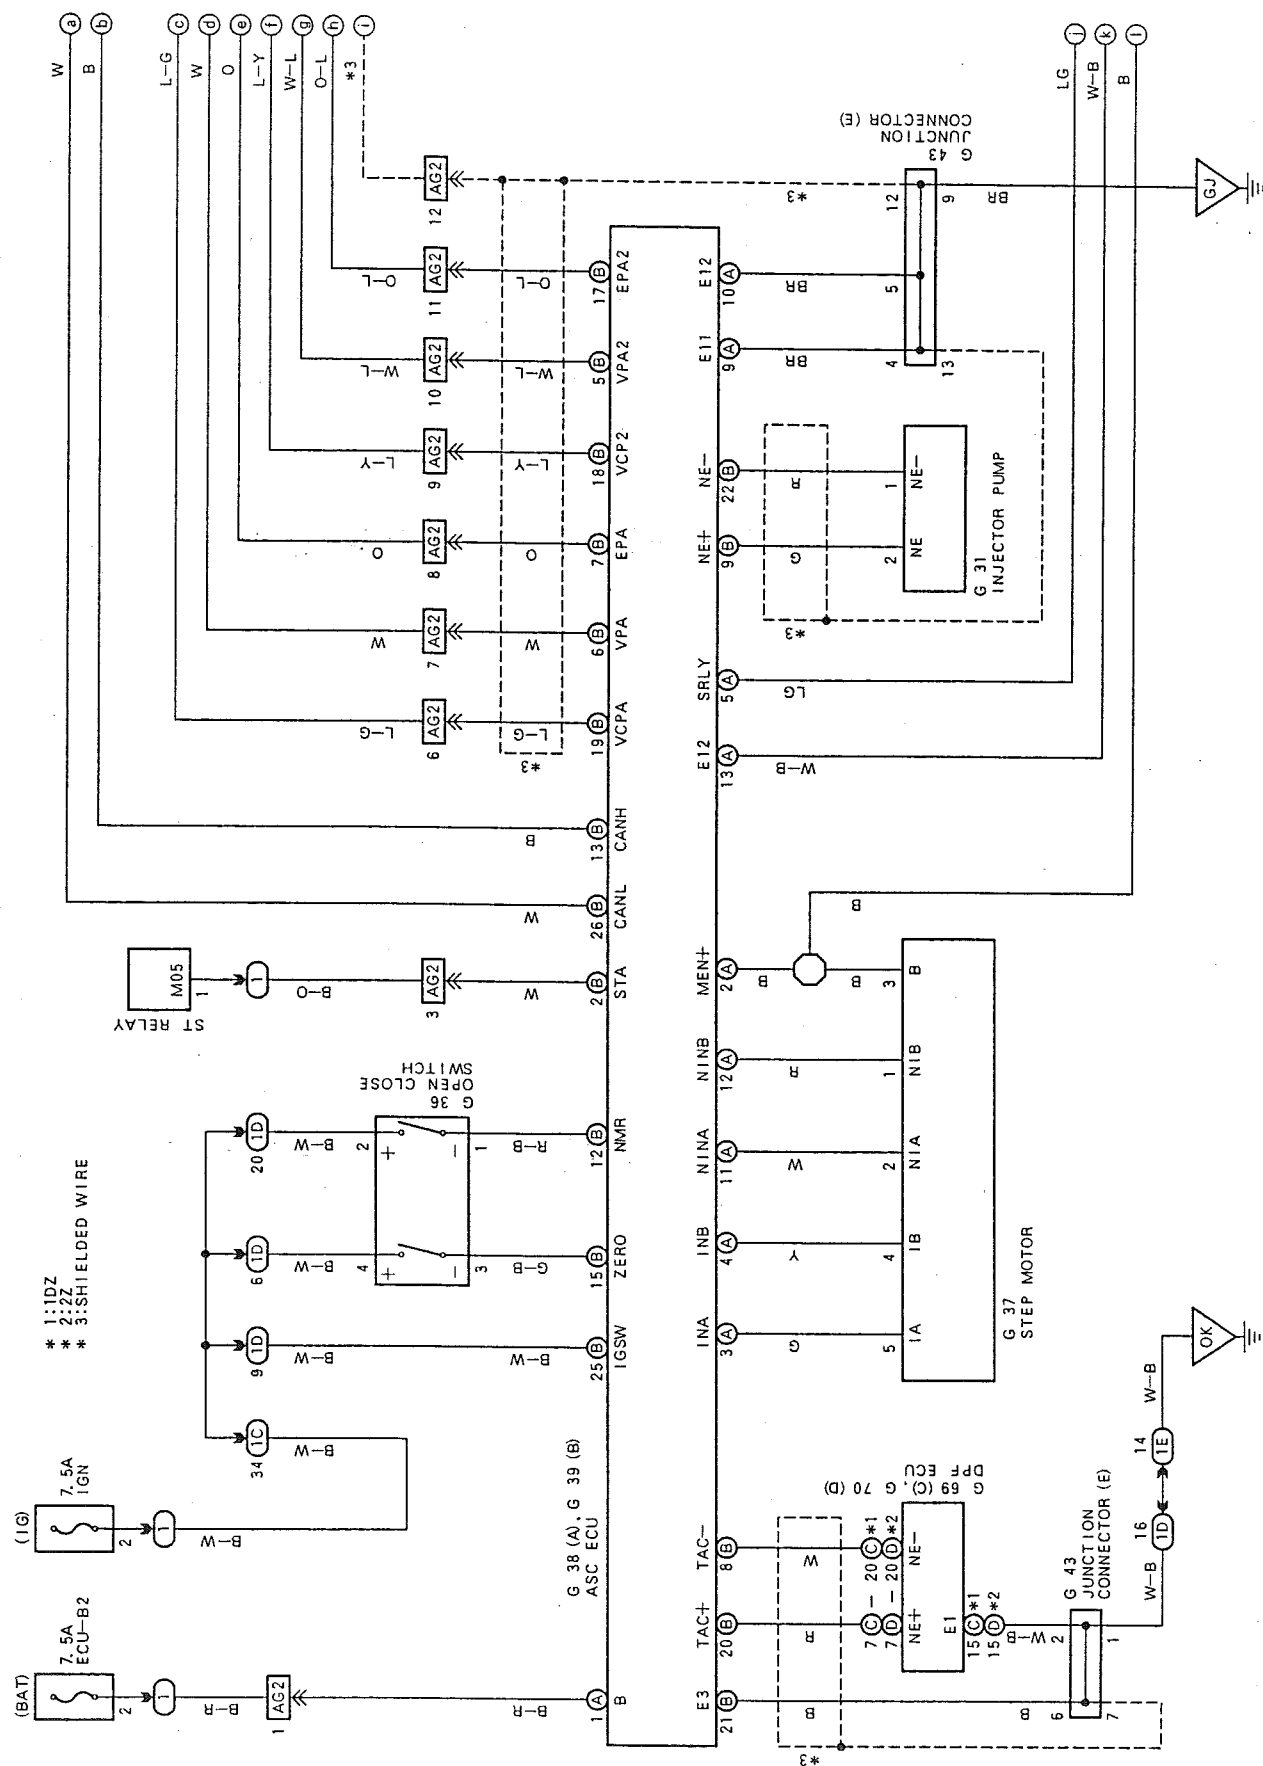

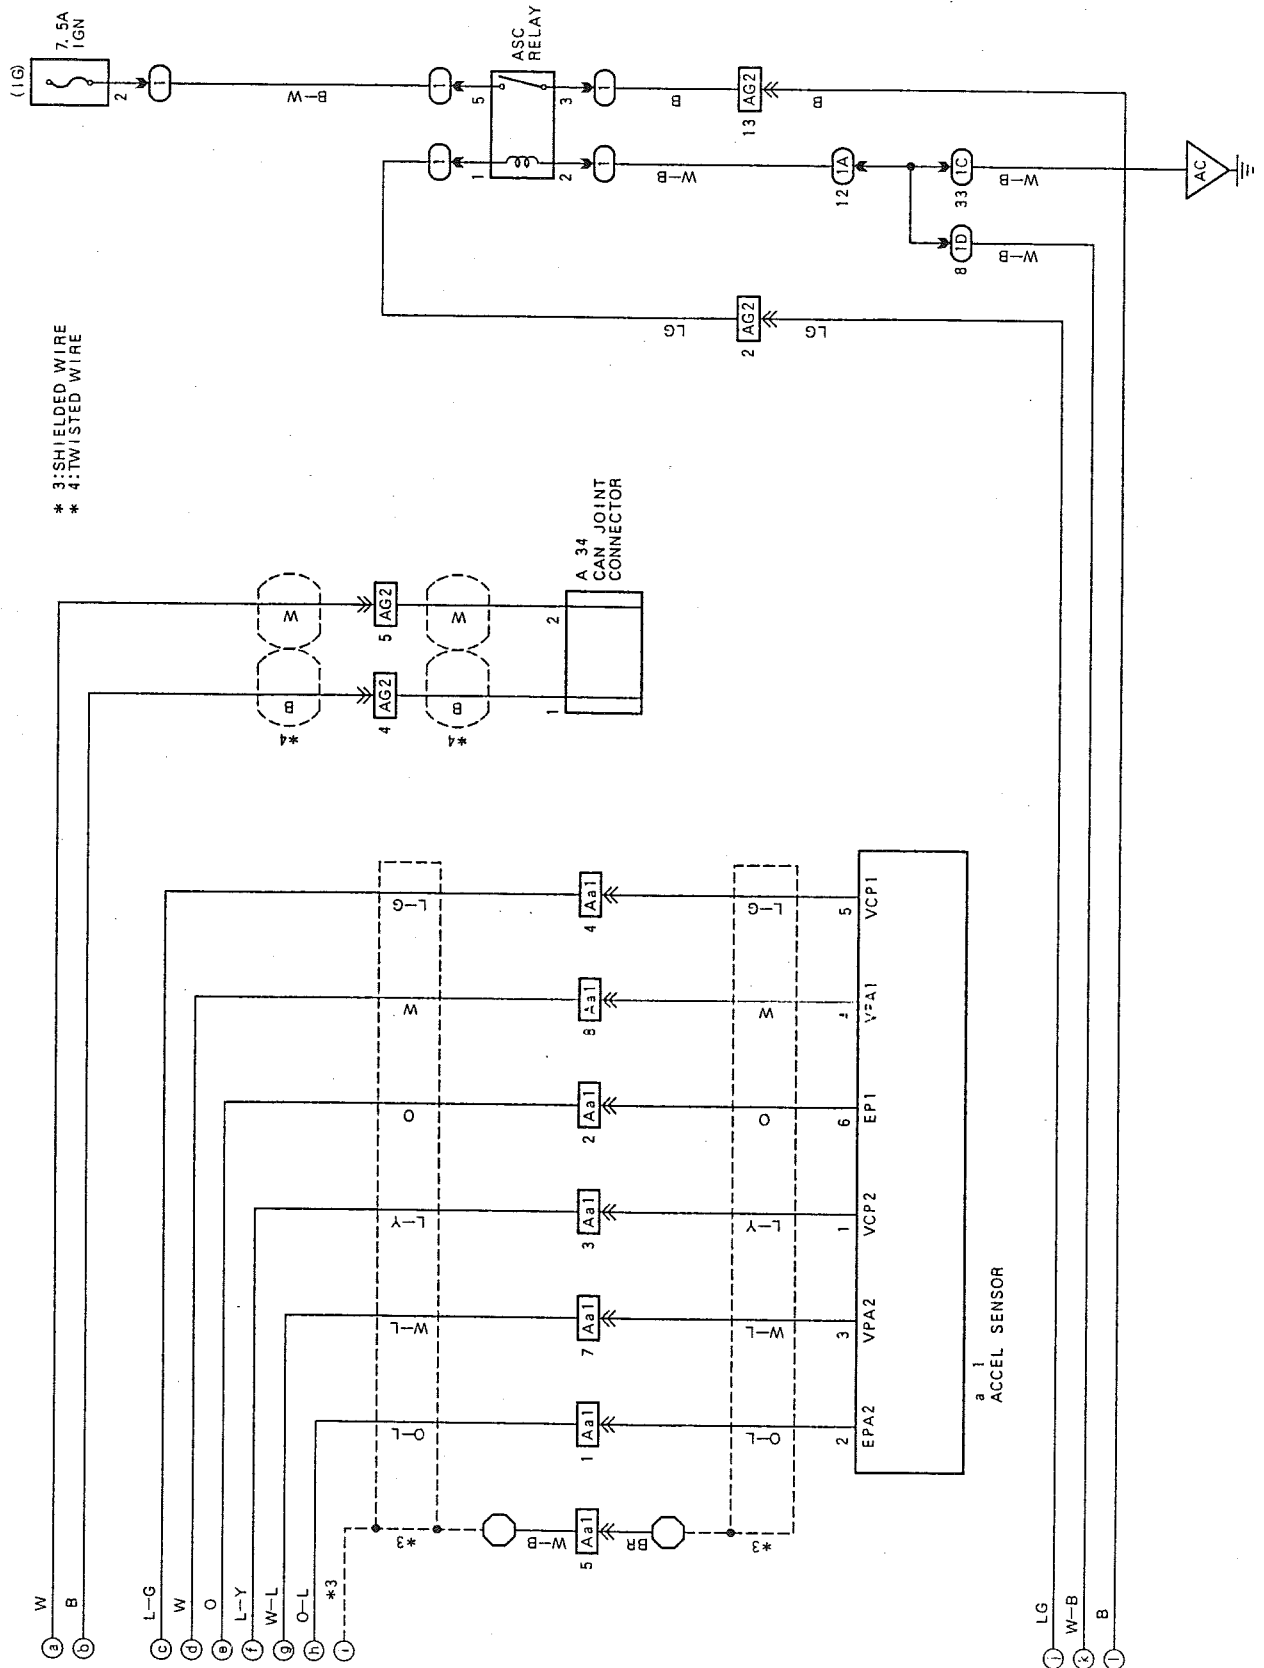

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 34	E2-12,23	G 37	E2-6,8	G 43	E2-12	a 1	E2-10
G 31	E2-6,8	G 38	E2-12	G 69	E2-6,8		
G 36	E2-6,8	G 39	E2-12	G 70	E2-8		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
AG2	E2-12	BODY MAIN WIRE to ENGINE WIRE
Aa1	E2-10	BODY MAIN WIRE to SUB ACCEL WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
GJ	E2-6,8	JUNCTION BLOCK IN FRONT INSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

MEMO

LPG SYSTEM (4Y-M)

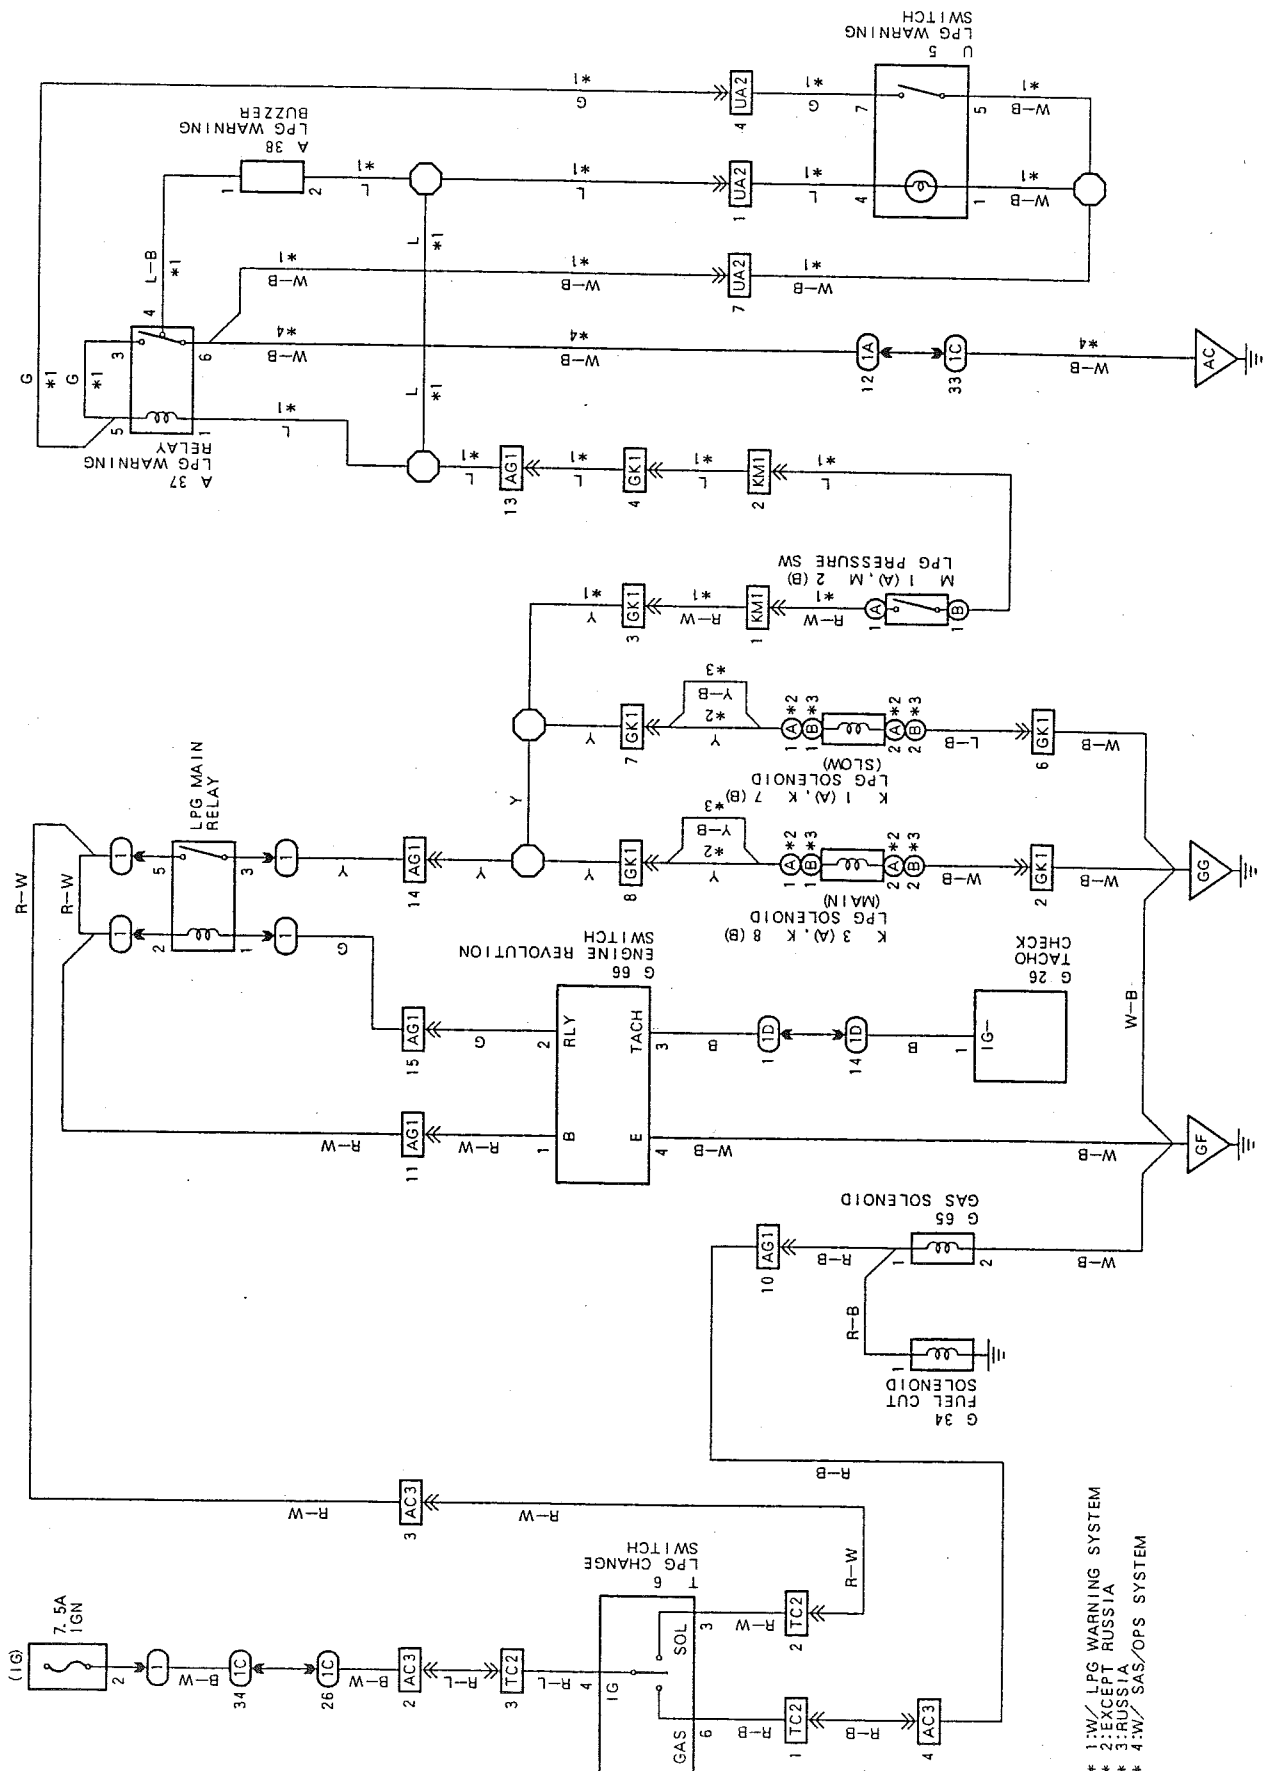

LPG SYSTEM (4Y-M)

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 37	E2-12	G 65	E2-2	K 7	E2-2	T 6	E2-18
A 38	E2-12	G 66	E2-12	K 8	E2-2	U 5	E2-14
G 26	E2-2	K 1	E2-2	M 1	E2-2		
G 34	E2-2	K 3	E2-2	M 2	E2-2		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
AC3	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
GK1	E2-2	ENGINE WIRE to ENGINE SUB WIRE
KM1	E2-2	ENGINE SUB WIRE to LPG PRESSURE SWITCH WIRE
TC2	E2-18	RR UPR SUB RH WIRE to SIDE RH WIRE
UA2	E2-14	HEAD GUARD SW WIRE to BODY MAIN WIRE

EARTH


Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
GF	E2-2	ENGINE UPPER EARTH
GG	E2-2	ENGINE UPPER EARTH

LPG WARNING SYSTEM (4Y-E)

* 1: LPG CONVERTIBLE
* 2: LPG

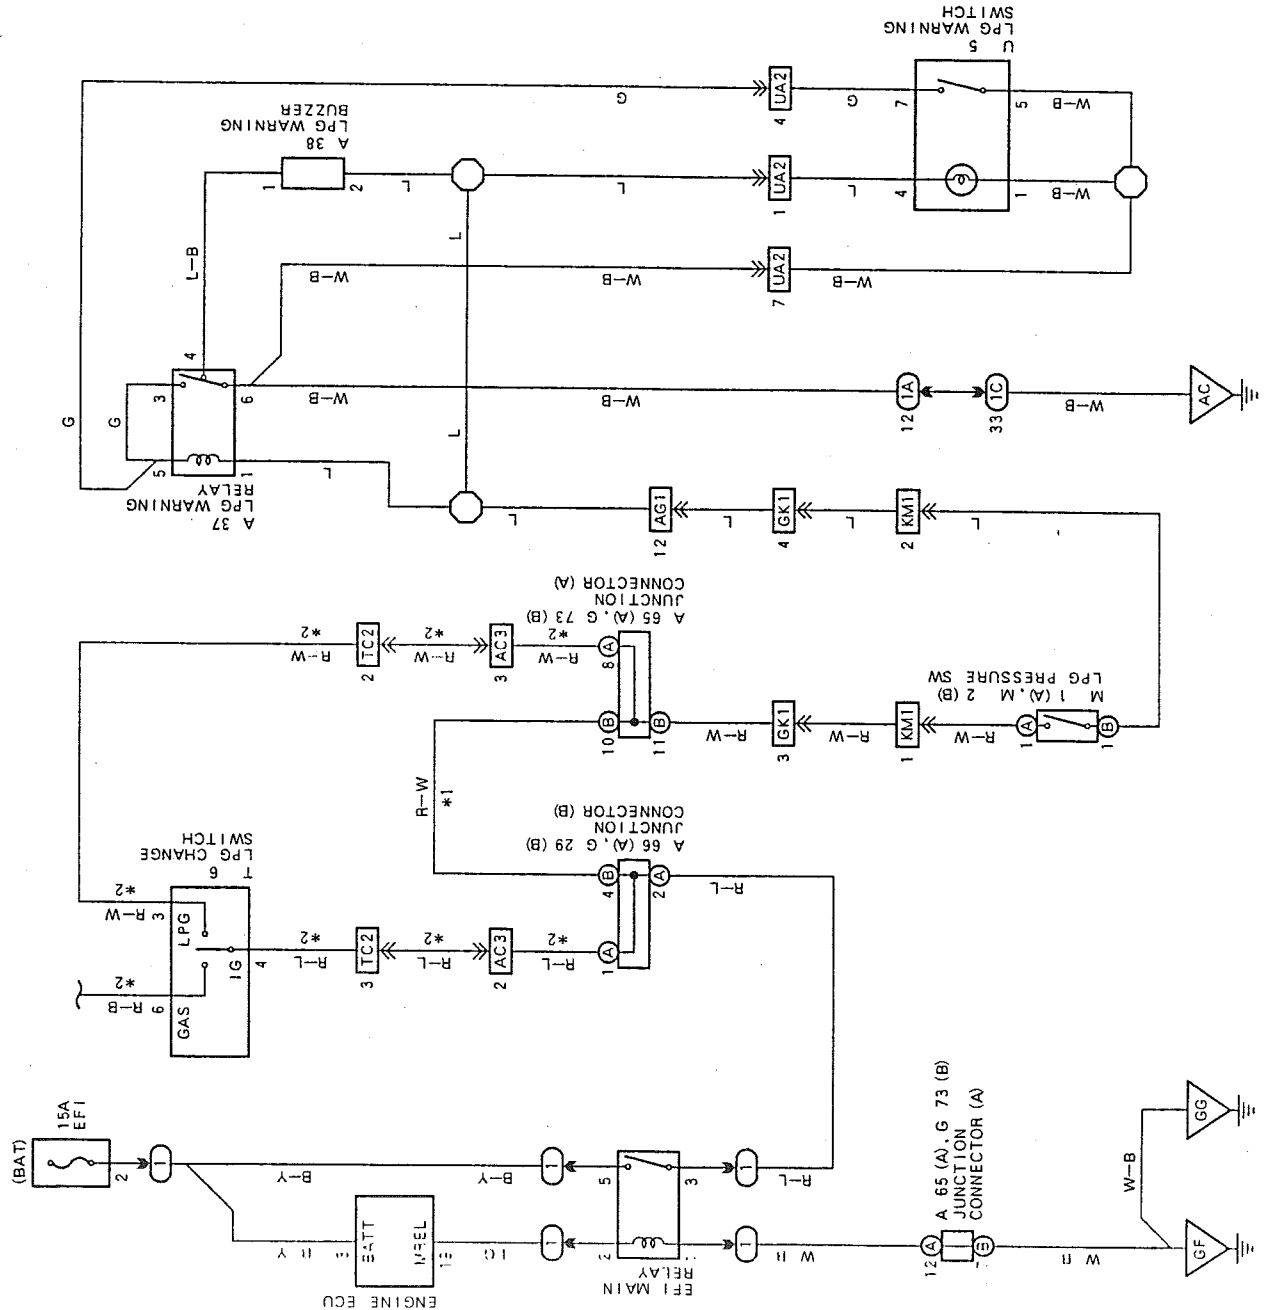

POWER SHIFT TRANSMISSION

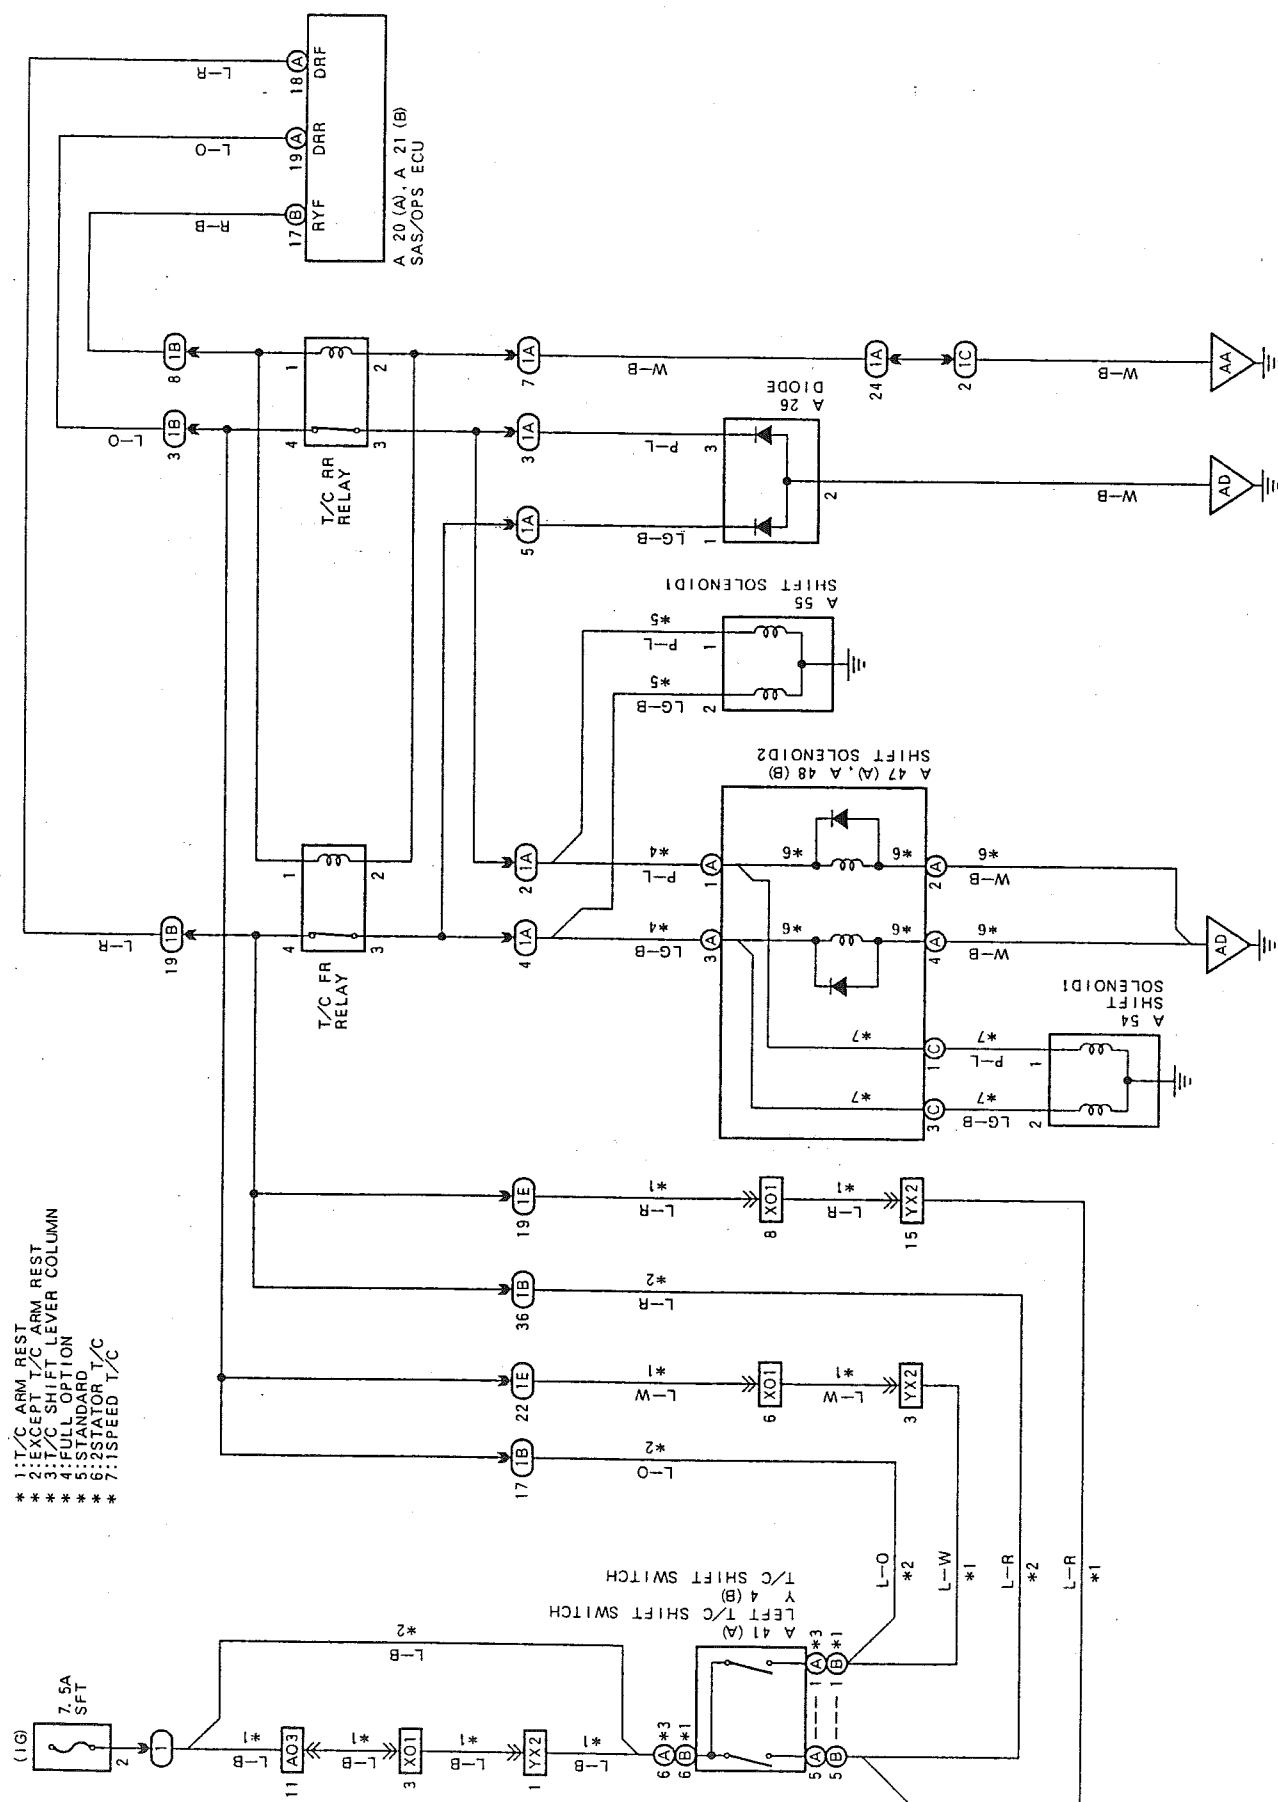

LPG WARNING SYSTEM (4Y-E)

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 36	E2-12	A 65	E2-12	G 73	E2-12	T 6	E2-18
A 37	E2-12	A 66	E2-12	M 1	E2-4	U 5	E2-14
A 38	E2-12	G 29	E2-12	M 2	E2-4		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AC3	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
GK1	E2-4	ENGINE WIRE to ENGINE SUB WIRE
KM1	E2-4	ENGINE SUB WIRE to LPG PRESSURE SWITCH WIRE
TC2	E2-18	RR UPR SUB RH WIRE to SIDE RH WIRE
UA2	E2-14	HEAD GUARD SW WIRE to BODY MAIN WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
GF	E2-4	ENGINE UPPER EARTH
GG	E2-4	ENGINE UPPER EARTH

POWER SHIFT TRANSMISSION

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 20	E2-10	A 41	E2-10	A 54	E2-12		
A 21	E2-10	A 47	E2-12	A 55	E2-12		
A 26	E2-12	A 48	E2-12	Y 4	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX2	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
AD	E2-12	TRANSMISSION UPPER EARTH

WET BRAKE

PARTS


Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 68	E2-10	A 70	E2-10	G 4	E2-2,4,6,8		
A 69	E2-10	A 71	E2-12				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B

EARTH

Code	See Page	Name
AB	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

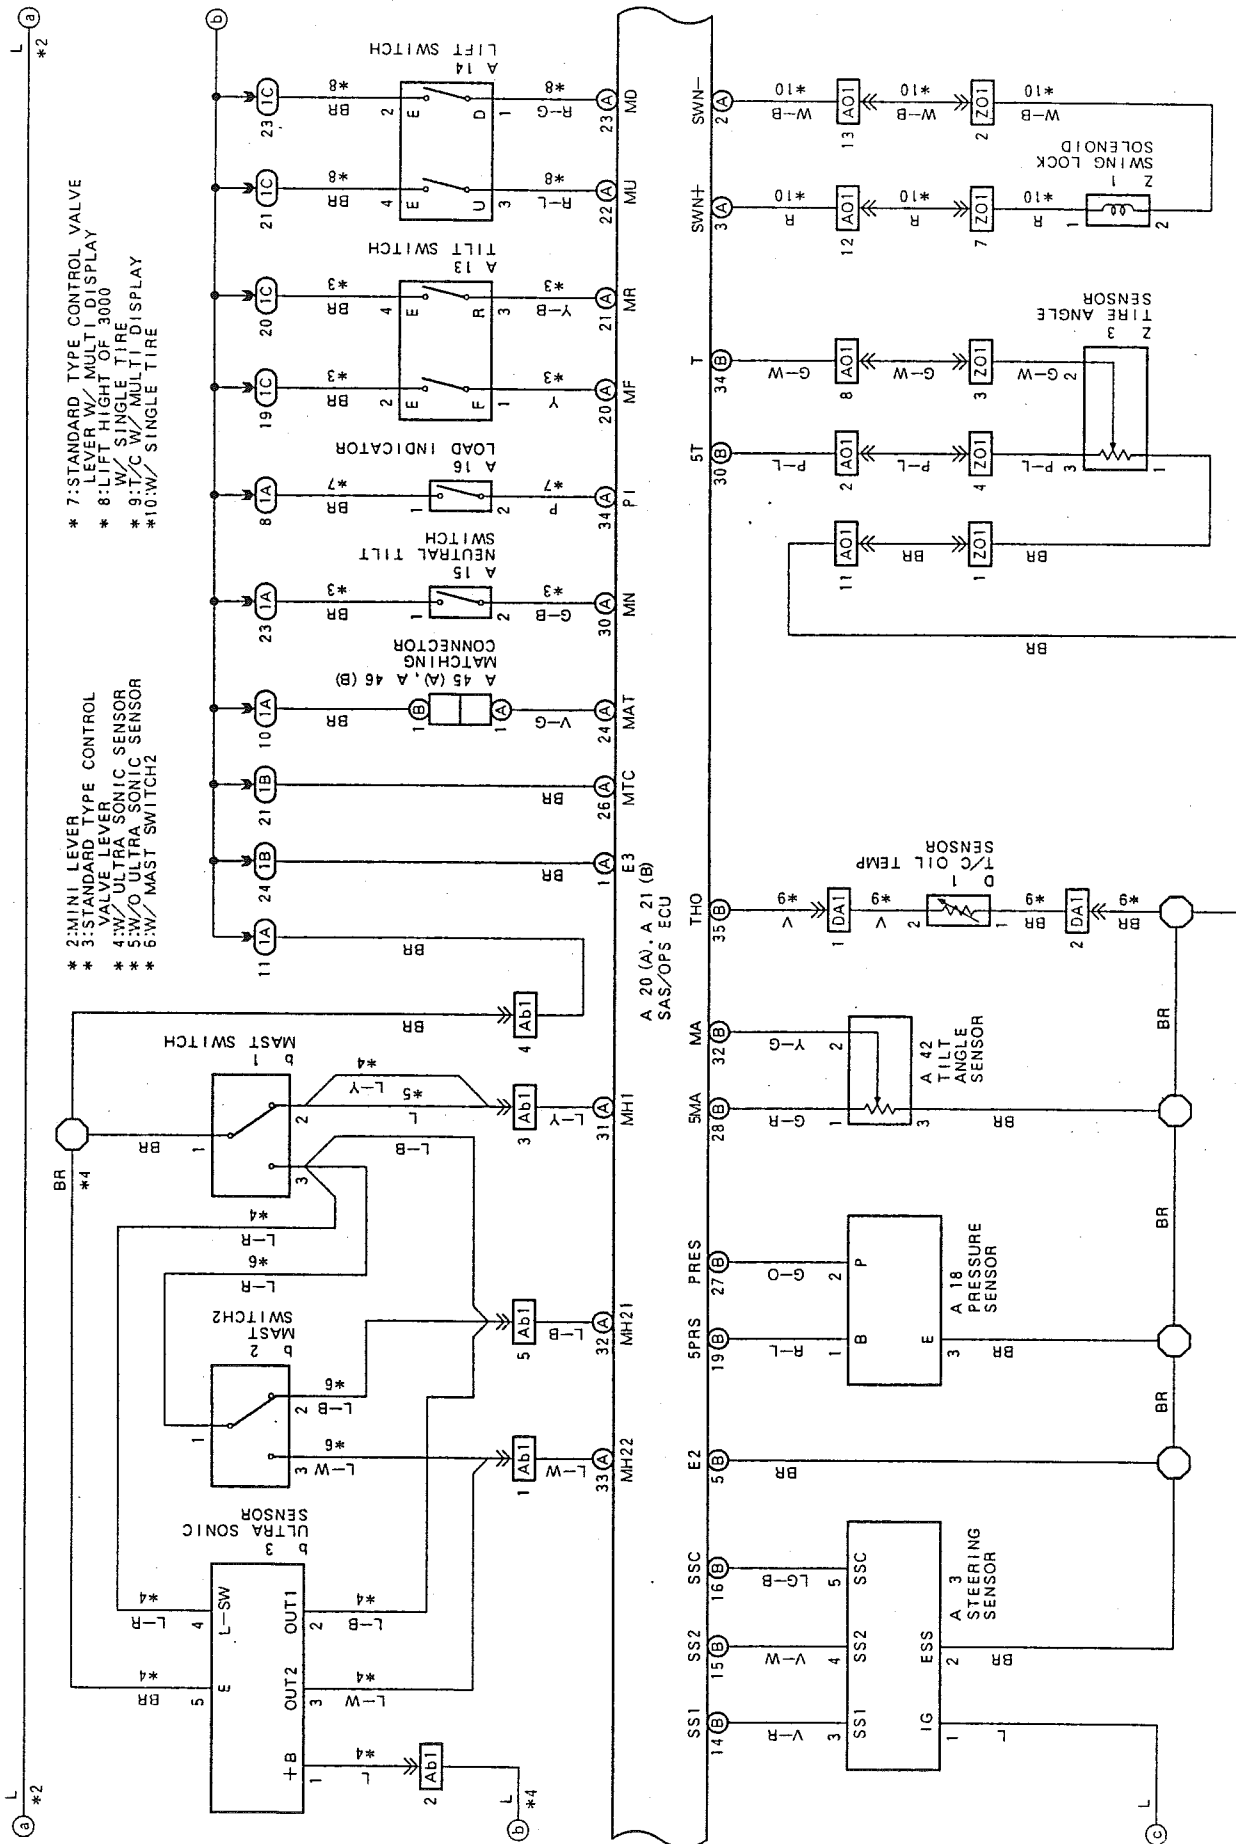



SAS/OPS SYSTEM

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 3	E2-10	A 15	E2-10	A 45	E2-12	Y 9	E2-16
A 5	E2-10	A 16	E2-10	A 46	E2-12	Z 1	E2-16
A 6	E2-10	A 18	E2-10	A 56	E2-10	Z 2	E2-16
A 8	E2-10	A 19	E2-10	D 1	E2-12	Z 3	E2-16
A 9	E2-10	A 20	E2-10	O 1	E2-16	b 1	E2-14
A 10	E2-10	A 21	E2-10	Q 1	E2-10	b 2	E2-14
A 11	E2-10	A 23	E2-10	X 1	E2-16	b 3	E2-14
A 12	E2-10	A 27	E2-12	Y 1	E2-16		
A 13	E2-10	A 29	E2-12,23	Y 7	E2-16		
A 14	E2-10	A 42	E2-10	Y 8	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO1	E2-12	BODY MAIN WIRE to LH SIDE WIRE
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
Ab1	E2-14	BODY MAIN WIRE to MAST SENSOR WIRE
DA1	E2-12	T/C HEAT GAUGE WIRE to BODY MAIN WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
XO3	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
XO4	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX2	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE
ZO1	E2-16	RR LWR WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
AB	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

OPS SYSTEM

