

OPS SYSTEM

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 8	E2-10	A 12	E2-10	A 22	E2-10	Q 1	E2-10
A 10	E2-10	A 13	E2-10	A 25	E2-12	X 1	E2-16
A 11	E2-10	A 14	E2-10	A 56	E2-10		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO1	E2-12	BODY MAIN WIRE to LH SIDE WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
XO4	E2-16	HOOD MAIN WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

MEMO

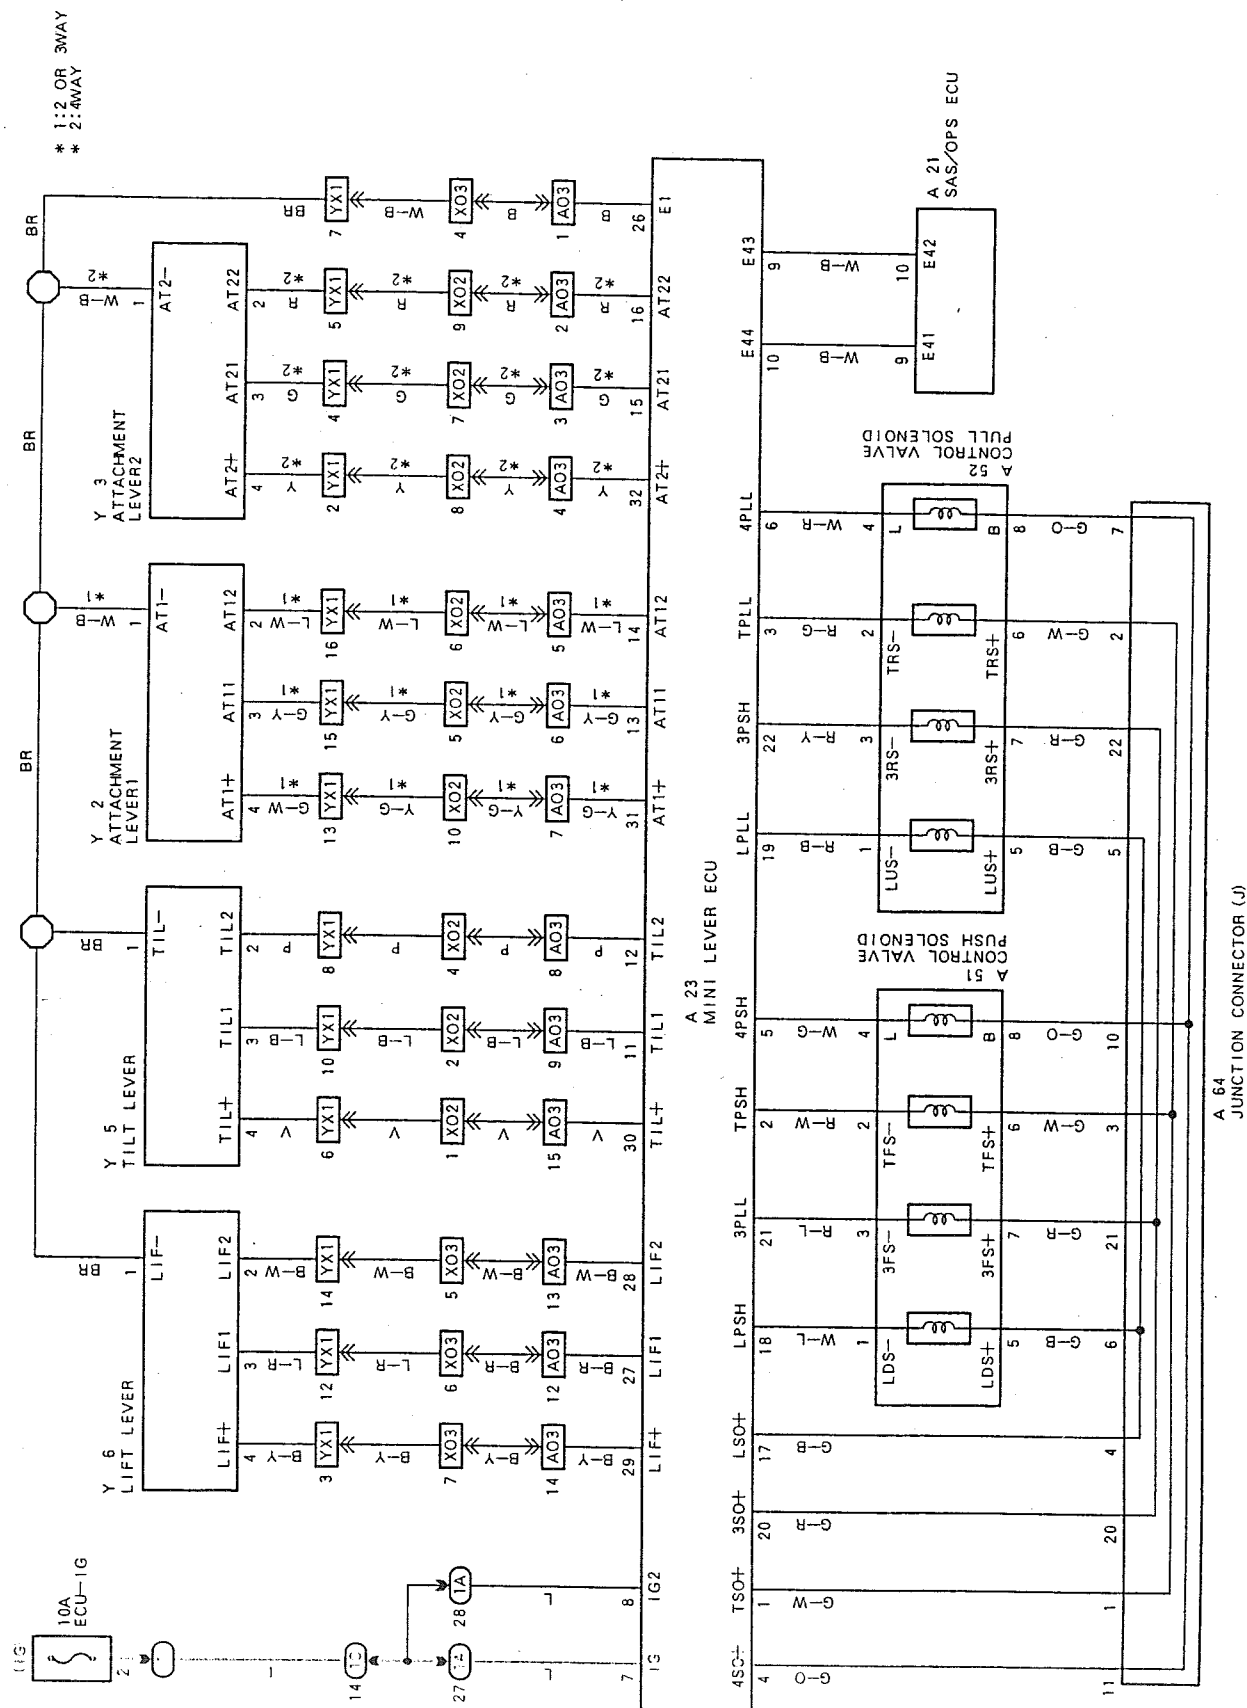

MINI LEVER

PARTS


Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 21	E2-10	A 52	E2-10	Y 3	E2-16		
A 23	E2-10	A 64	E2-12	Y 5	E2-16		
A 51	E2-10	Y 2	E2-16	Y 6	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO3	E2-12	BODY MAIN WIRE to LH SIDE WIRE
XO2	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
XO3	E2-16	HOOD MAIN WIRE to LH SIDE WIRE
YX1	E2-16	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE

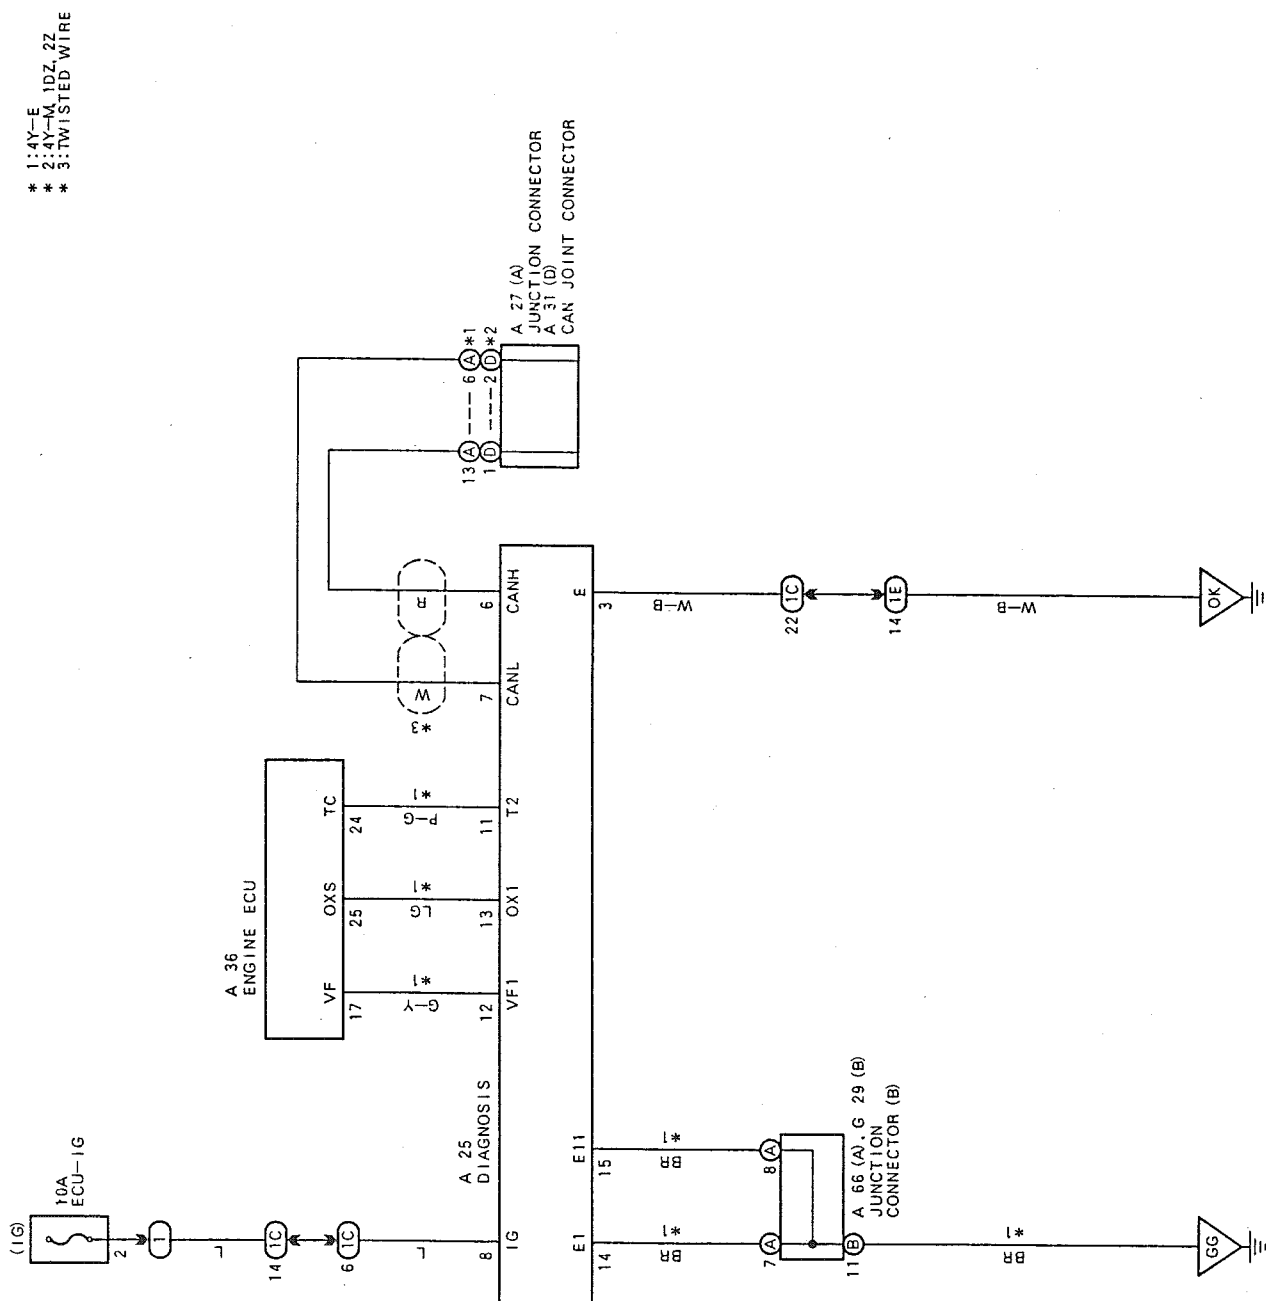

DIAG

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 25	E2-12	A 31	E2-12,23	A 66	E2-12		
A 27	E2-12	A 36	E2-12	G 29	E2-12		


RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

EARTH

Code	See Page	Name
GG	E2-4	ENGINE UPPER
OK	E2-16	REAR PILLER LEFT UNDER EARTH

REAR WORKING LAMP

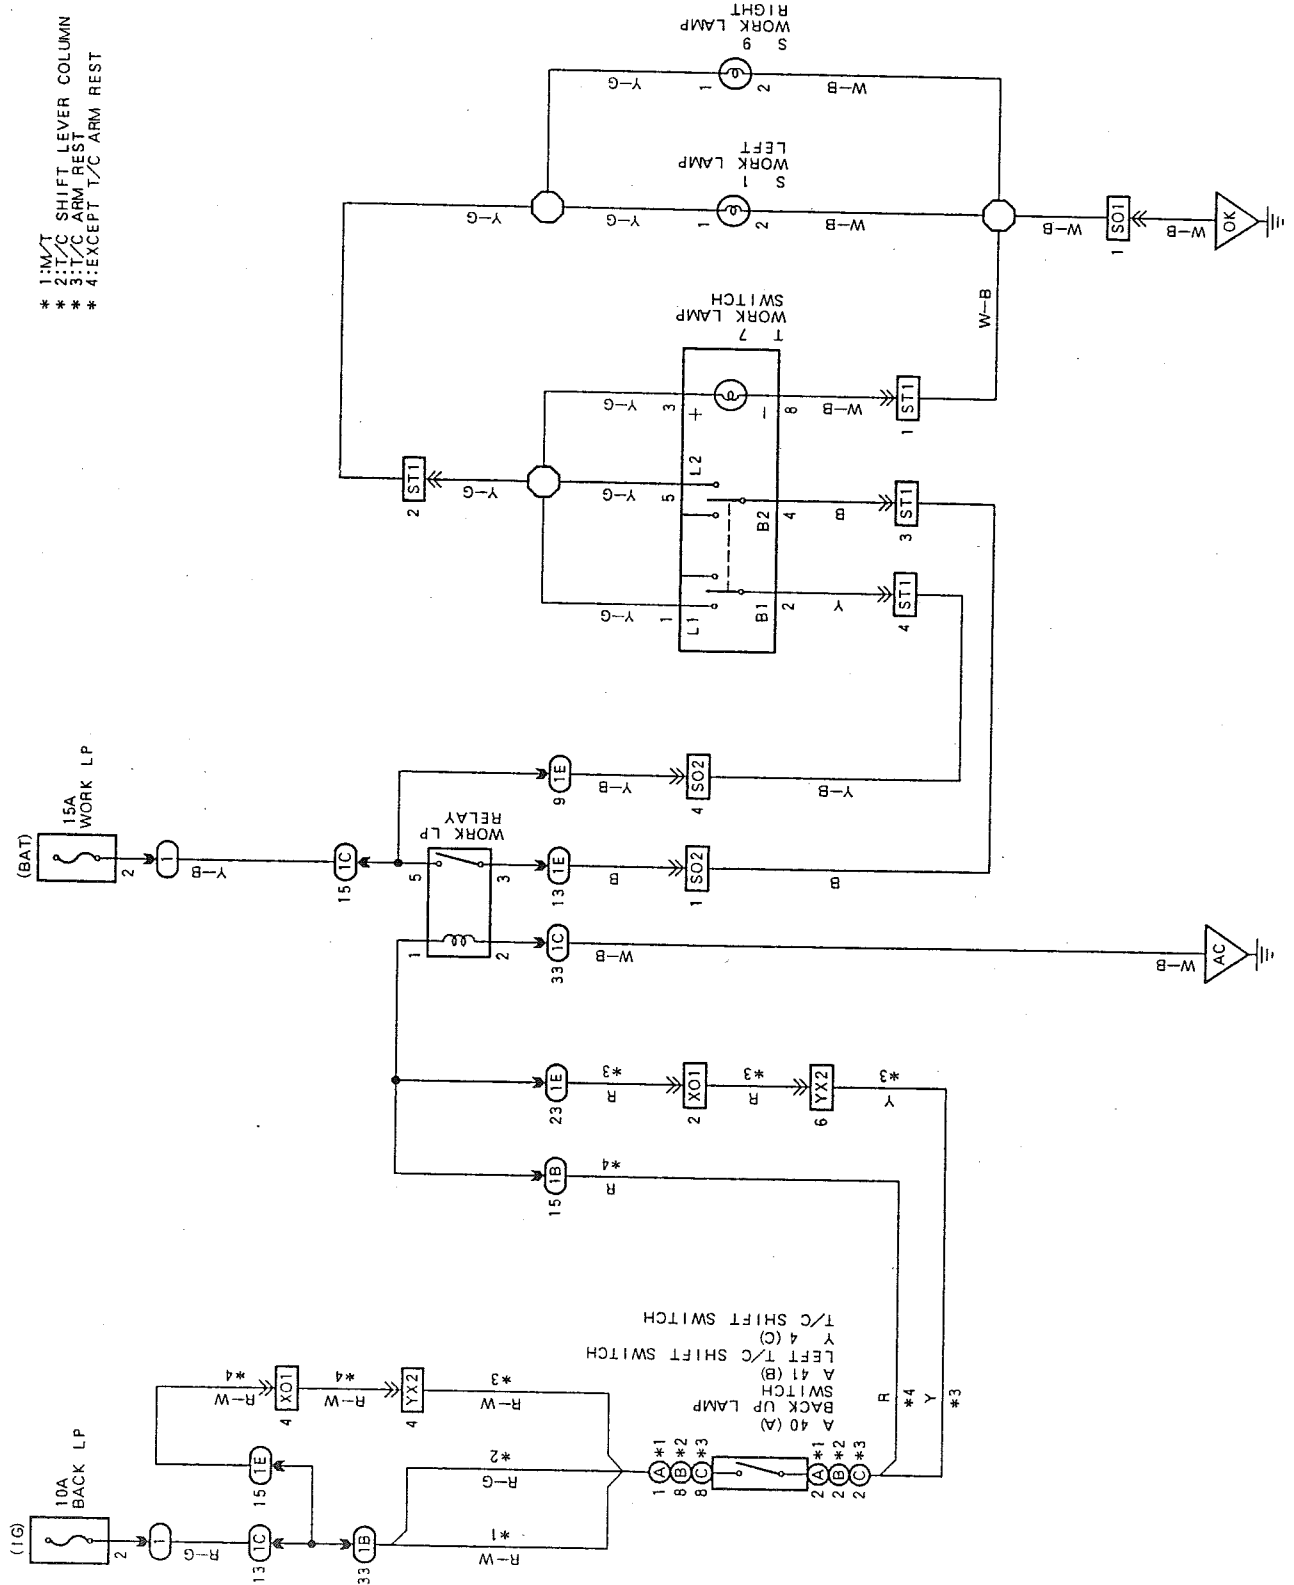

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 40	E2-12	S 1	E2-16	T 7	E2-18		
A 41	E2-10	S 9	E2-16	Y 4	E2-16		

RELAY BLOCK , JUNCTION BLOCK


Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
SO2	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
ST1	E2-18	RR UPR MAIN WIRE to RR UPR SUB RH WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

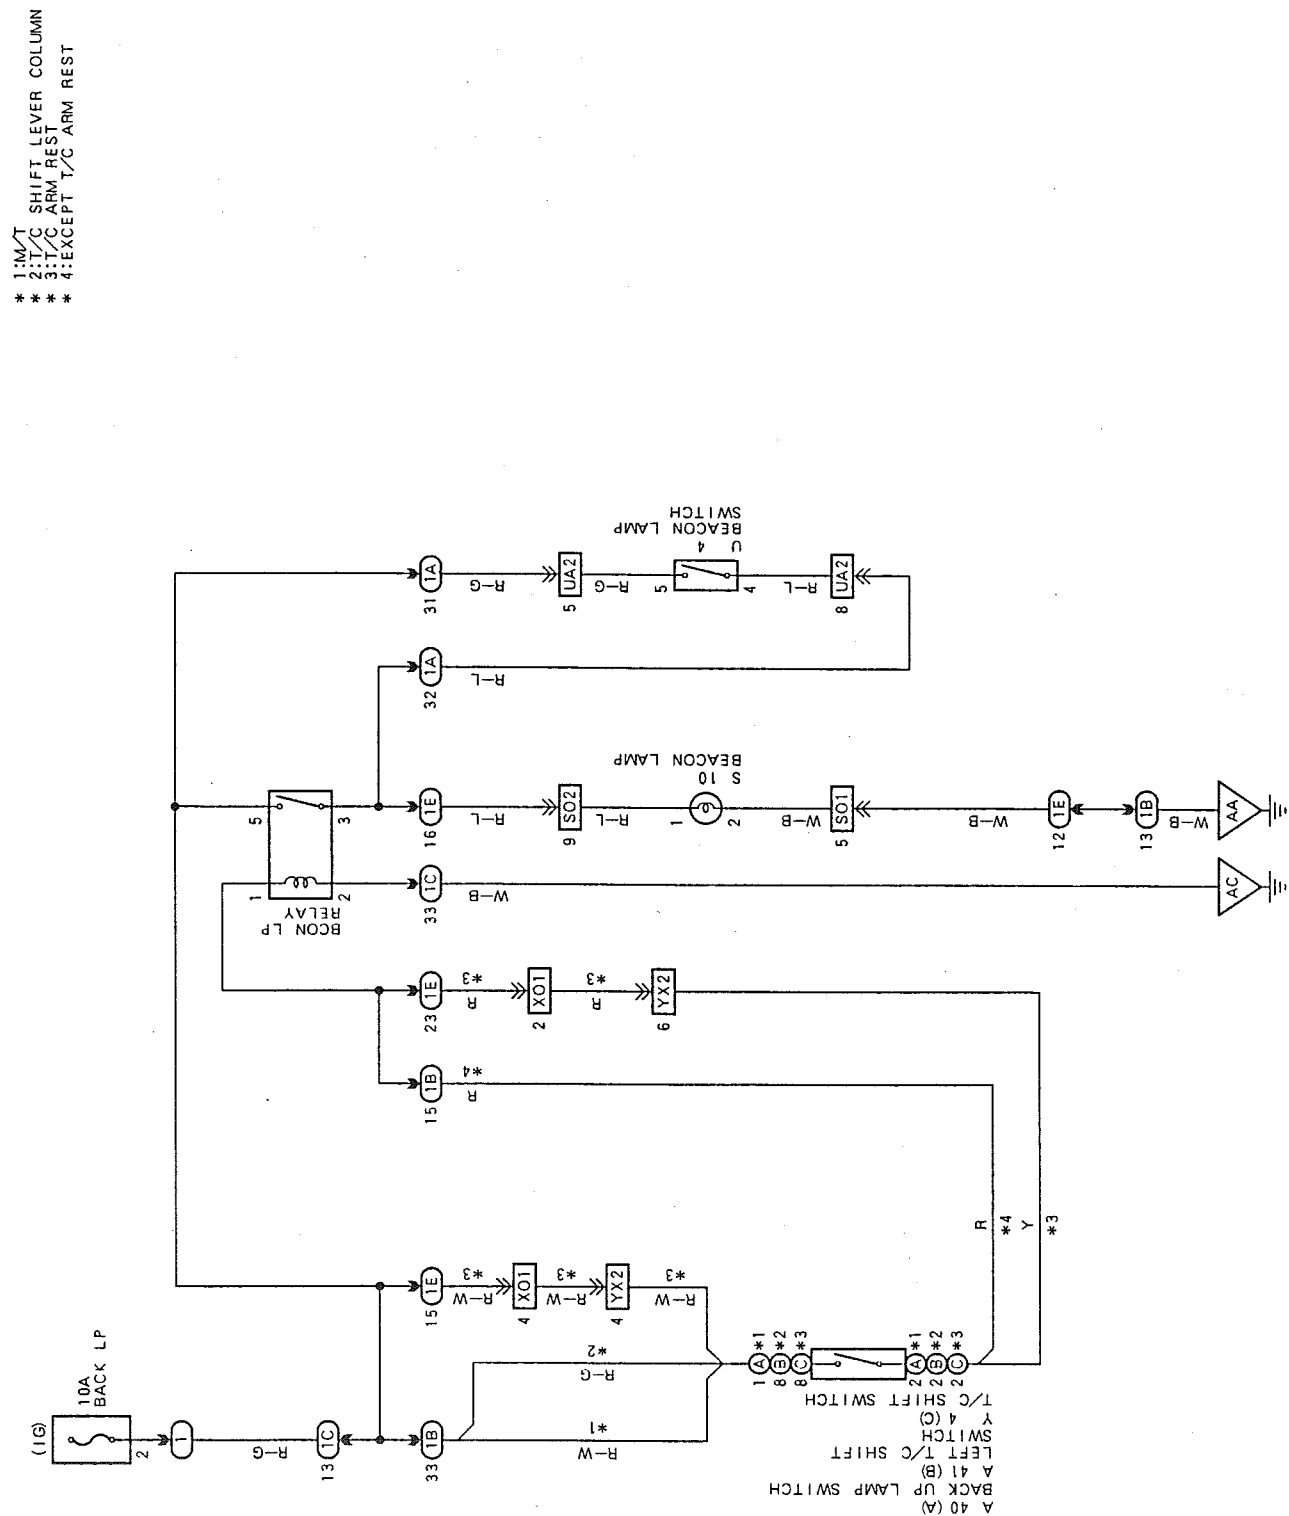

STROBE LIGHT

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 40	E2-12	S 10	E2-16	Y 4	E2-16		
A 41	E2-10	U 4	E2-14				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
SO2	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
UA2	E2-14	HEAD GUARD SW WIRE to BODY MAIN WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE

EARTH


Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

COMBINATION METER

- ** 1:W/ OK MONITOR
- ** 2:1DZ, 2Z
- ** 3:4Y-E
- ** 4:T/C W/ MULTI DISPLAY OR OK MONITOR
- ** 5:M/T W/ MULTI DISPLAY OR OK MONITOR
- ** 6:W/ MULTI DISPLAY OR OK MONITOR
- ** 7:W/O SAS/OPS SYSTEM

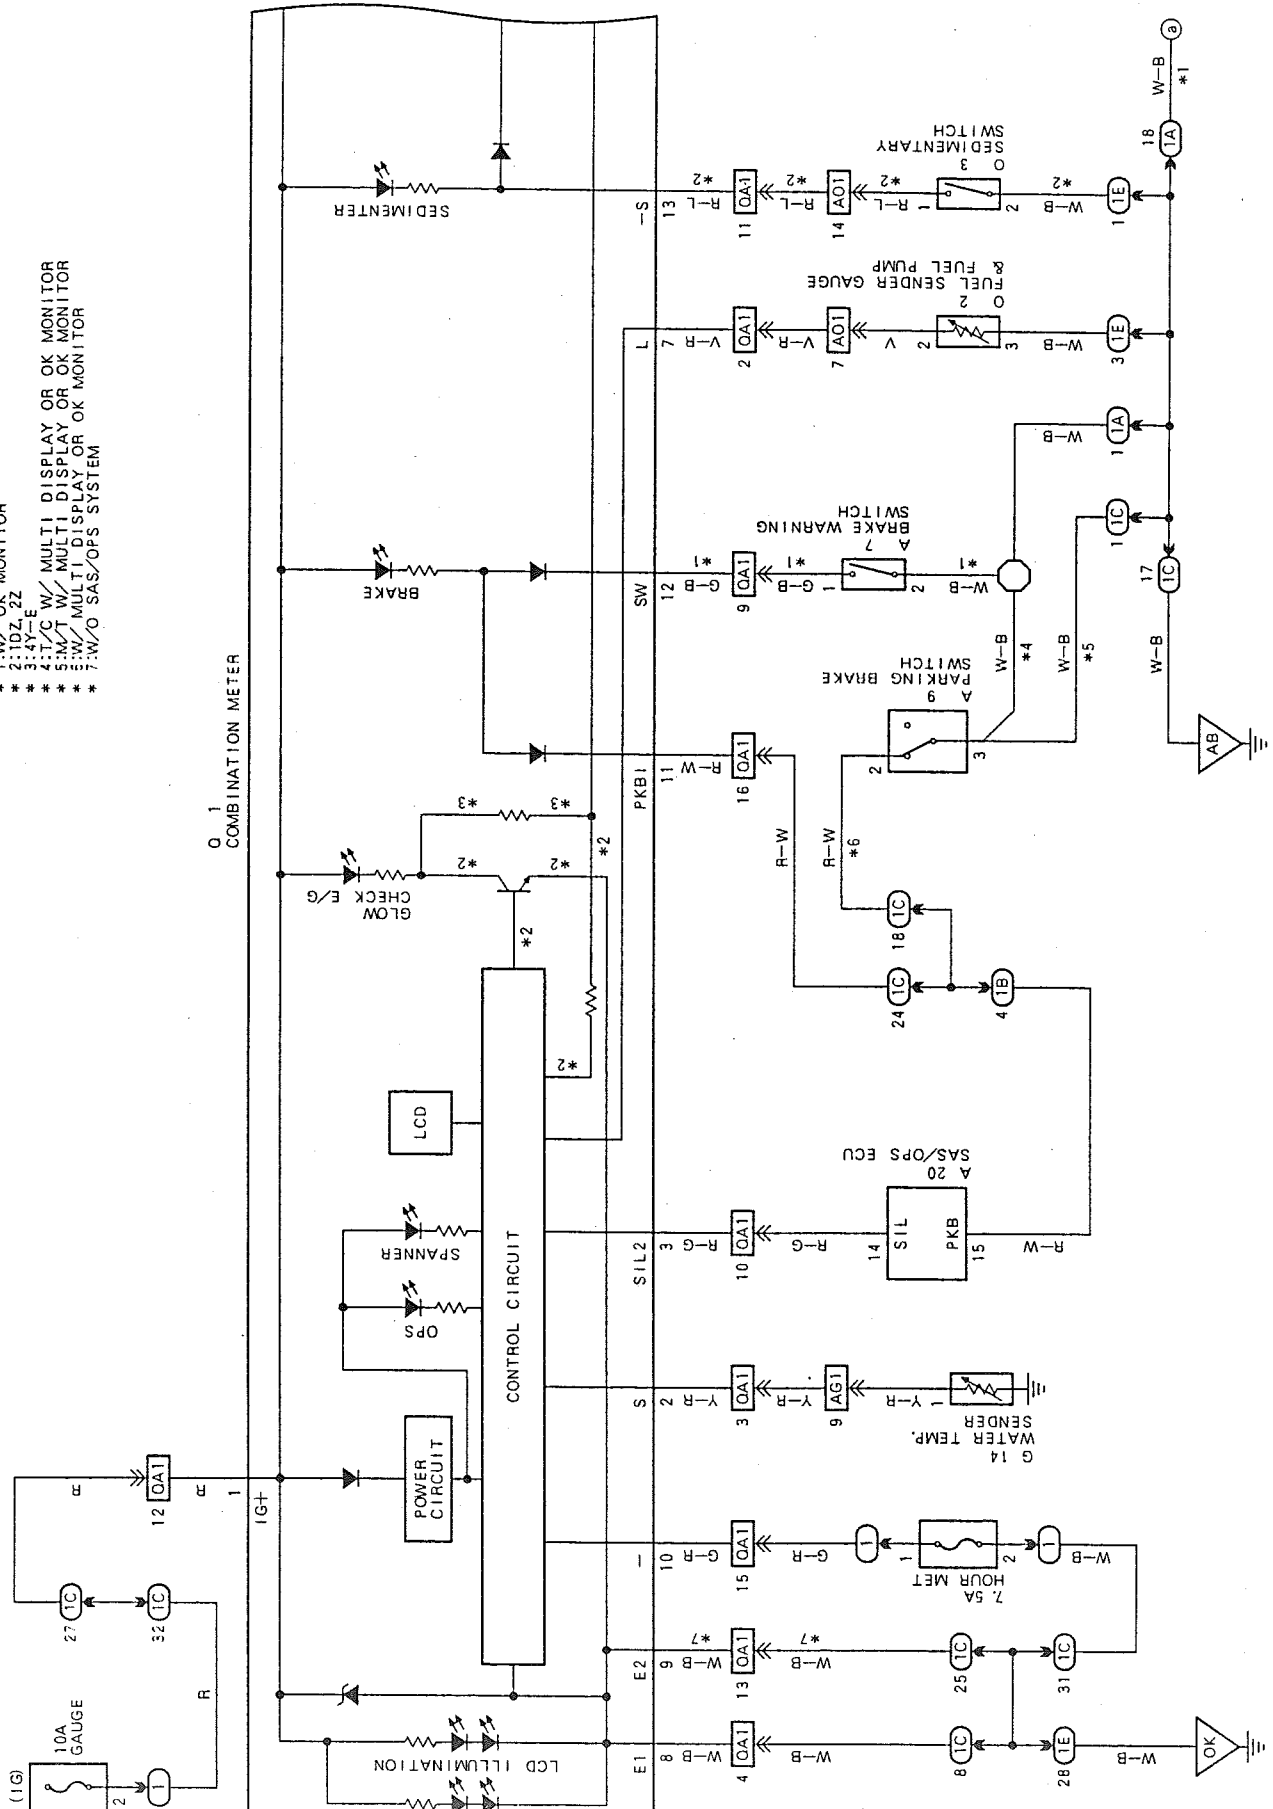

* 1:W/ OK MONITOR
 * 2:10Z 2Z
 * 3:4Y-E
 * 8:EXCEPT 4Y-E
 * 9:1DZ
 * 10:2Z

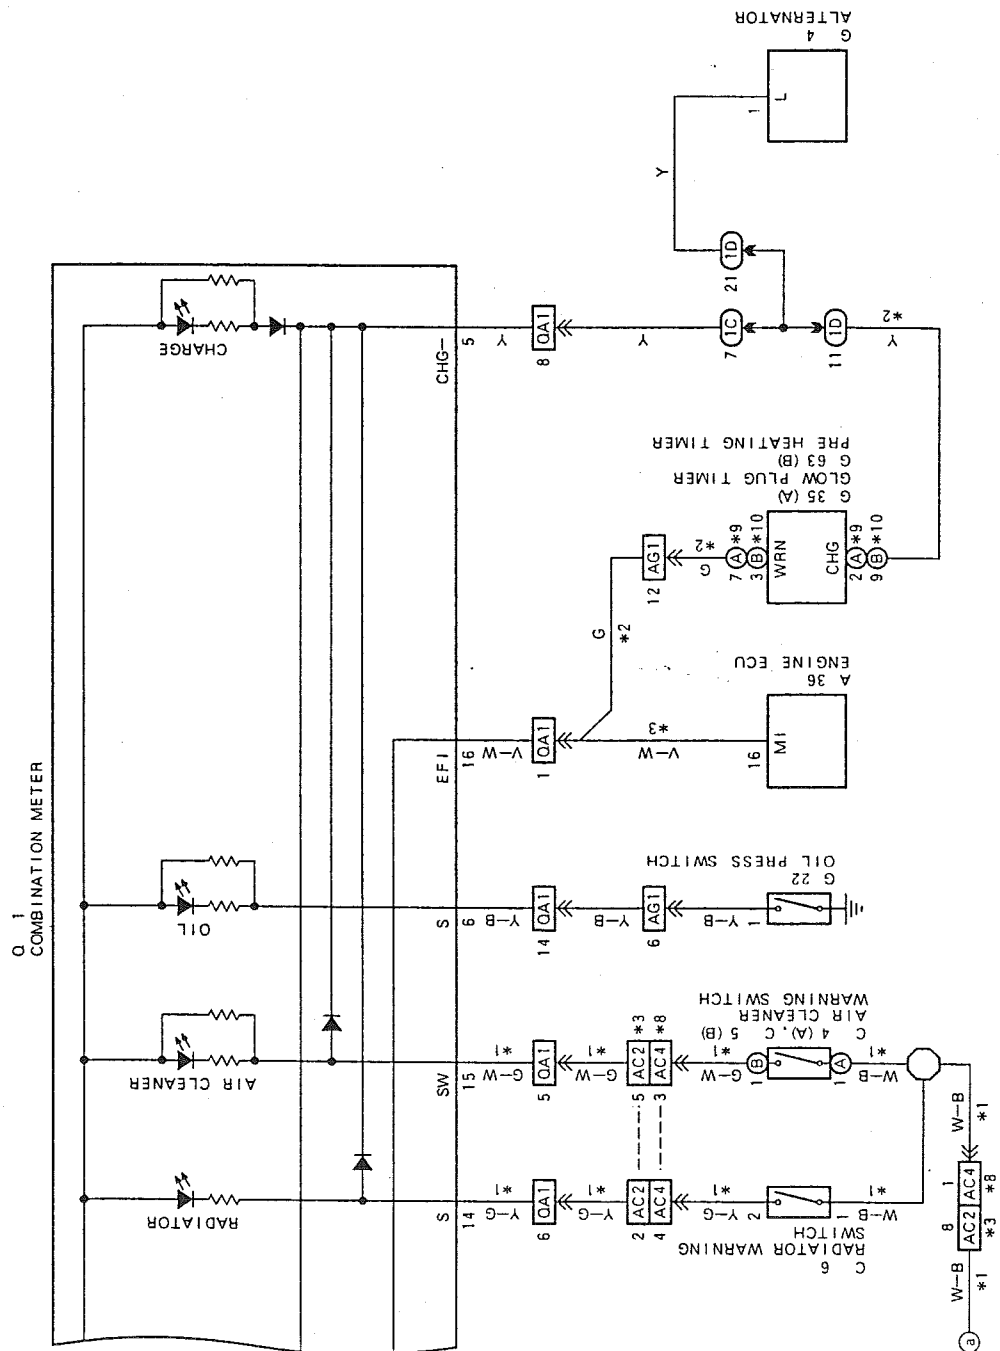

COMBINATION METER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 7	E2-10	C 4	E2-18	G 14	E2-2,4,6,8	O 2	E2-16
A 9	E2-10	C 5	E2-18	G 22	E2-2,4,6,8	O 3	E2-16
A 20	E2-10	C 6	E2-18	G 35	E2-12	Q 1	E2-10
A 36	E2-12	G 4	E2-2,4,6,8	G 63	E2-12		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
AC2	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AC4	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
AO1	E2-12	BODY MAIN WIRE to LH SIDE WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE

EARTH

Code	See Page	Name
AB	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

MEMO

SPEED METER

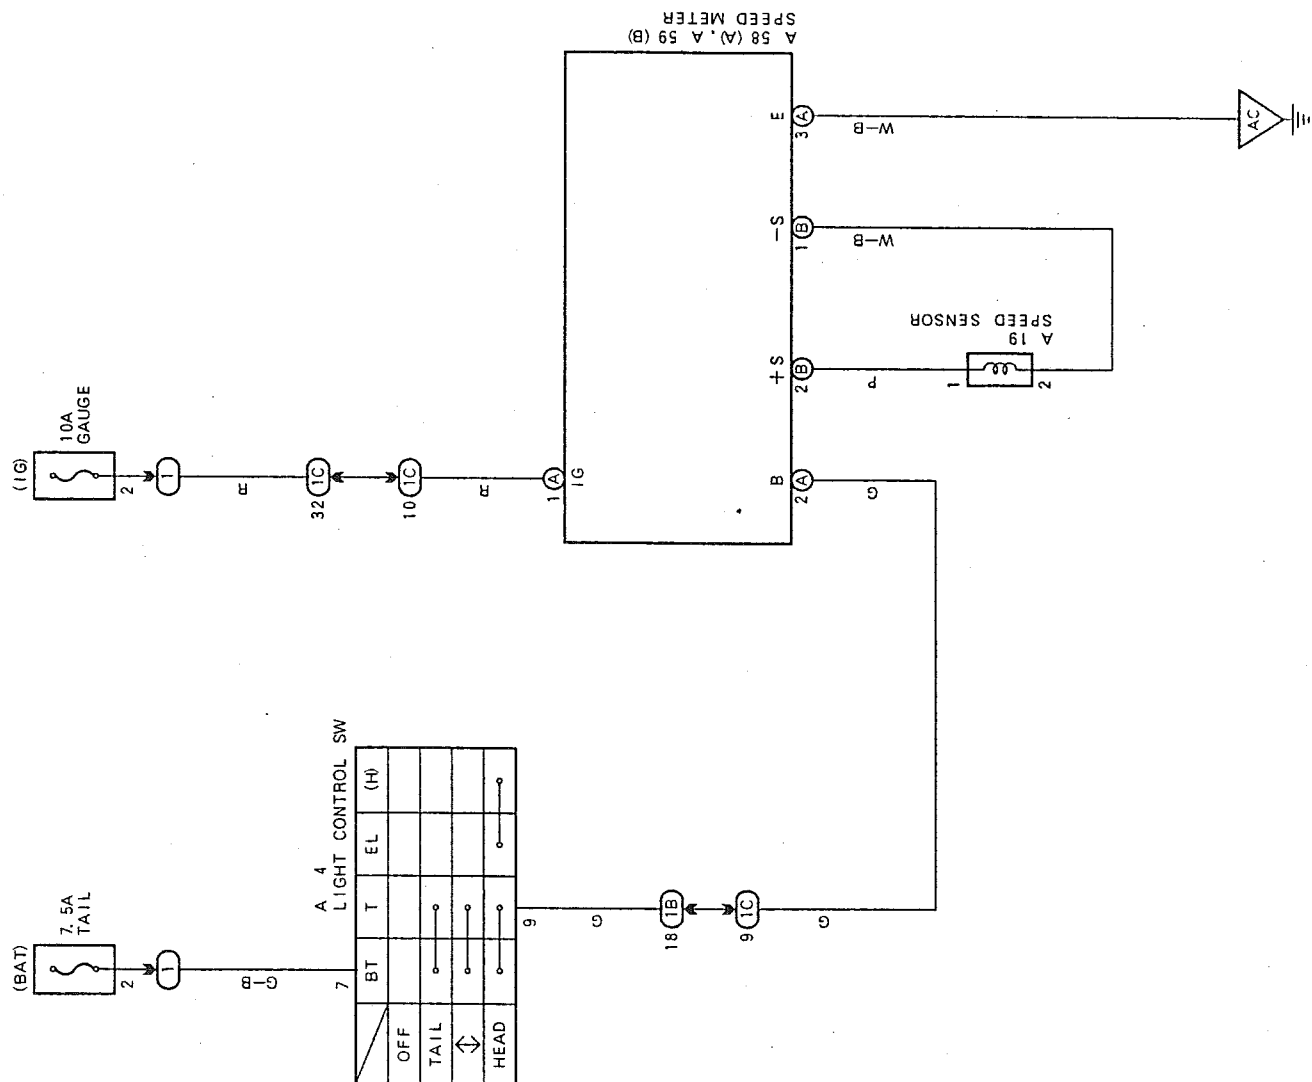

SPEED METER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 4	E2-10	A 19	E2-10	A 58	E2-10	A 59	E2-10


RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

MULTI DISPLAY

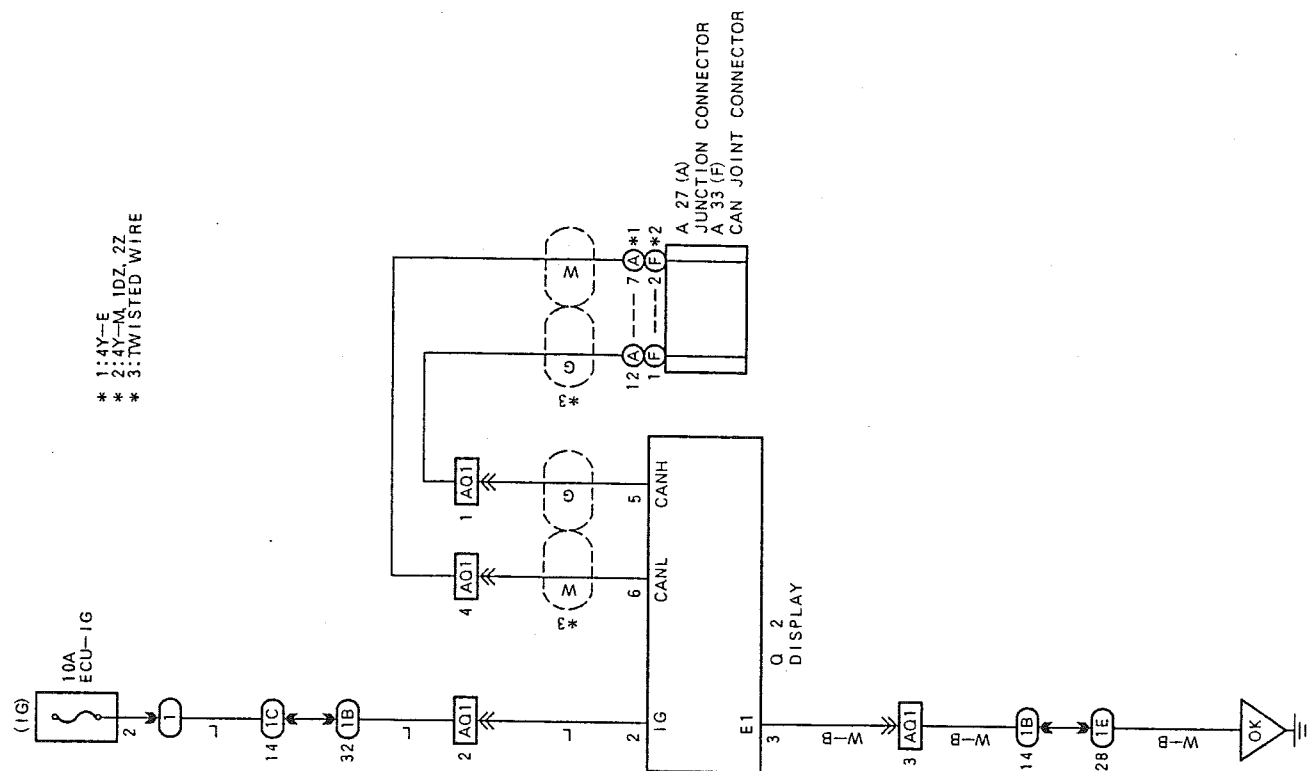

MULTI DISPLAY

E 3 00

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 27	E2-12	A 33	E2-12,23	Q 2	E2-10		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AQ1	E2-10	BODY MAIN WIRE to INSTRUMENT PANEL WIRE

EARTH

Code	See Page	Name
OK	E2-16	REAR PILLER LEFT UNDER EARTH

FRONT WIPER & WASHER

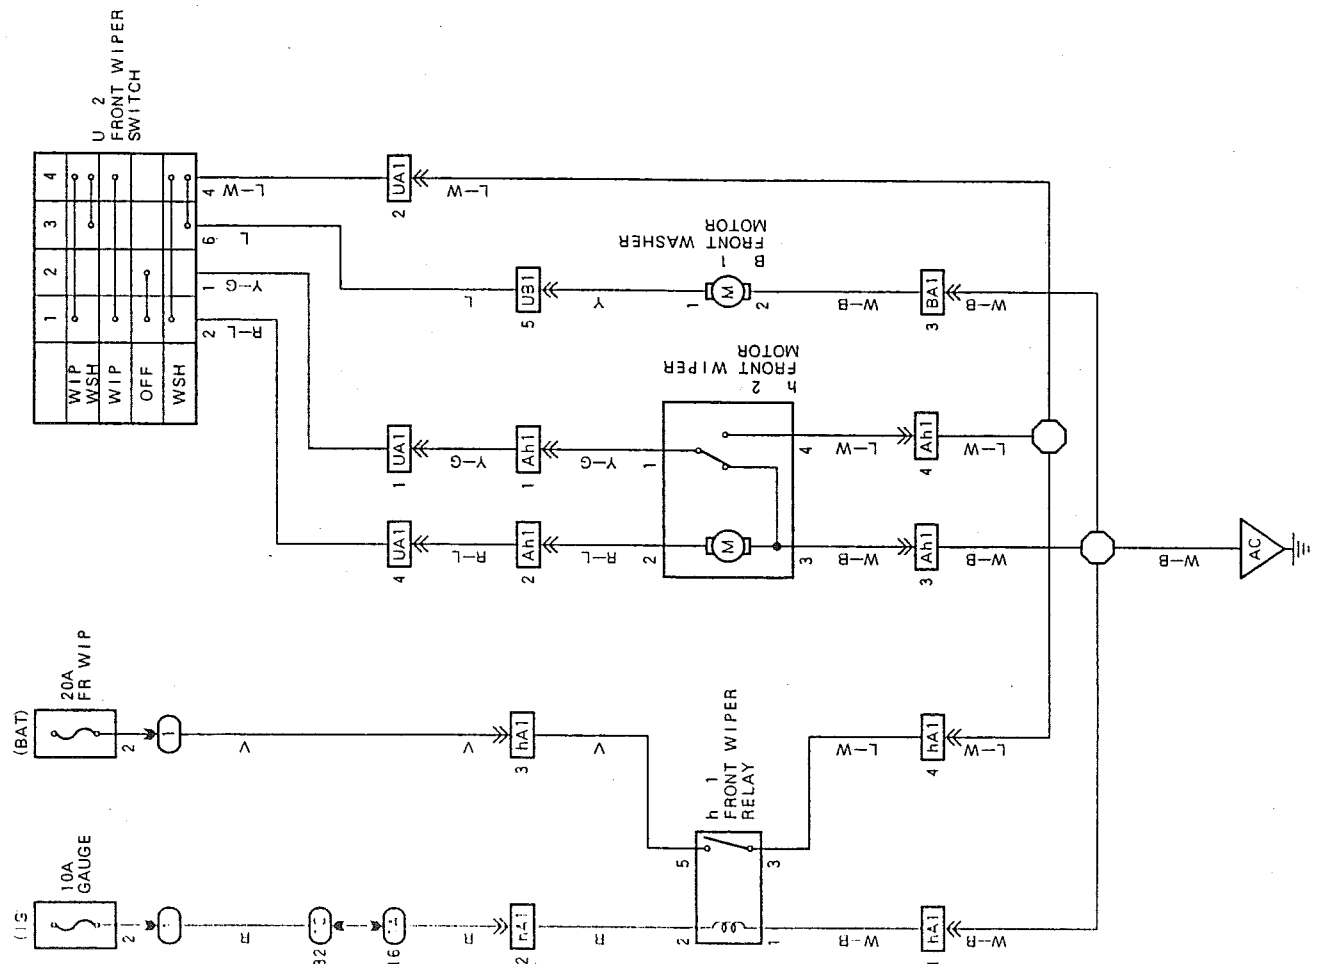

FRONT WIPER & WASHER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
B 1	E2-18	U 2	E2-14	h 1	E2-10	h 2	E2-10

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B

WIRE TO WIRE


Code	See Page	Joining Wire Harness and Wire Harness
Ah1	E2-10	BODY MAIN WIRE to WIPER SUB WIRE
BA1	E2-14	BODY SUB NO.1 WIRE to BODY MAIN WIRE
UA1	E2-14	HEAD GUARD SW WIRE to BODY MAIN WIRE
UB1	E2-14	HEAD GUARD SW WIRE to BODY SUB NO.1 WIRE
hA1	E2-10	WIPER SUB WIRE to BODY MAIN WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

REAR WIPER & WASHER

1:DX CABIN
2:EXCEPT DX CABIN

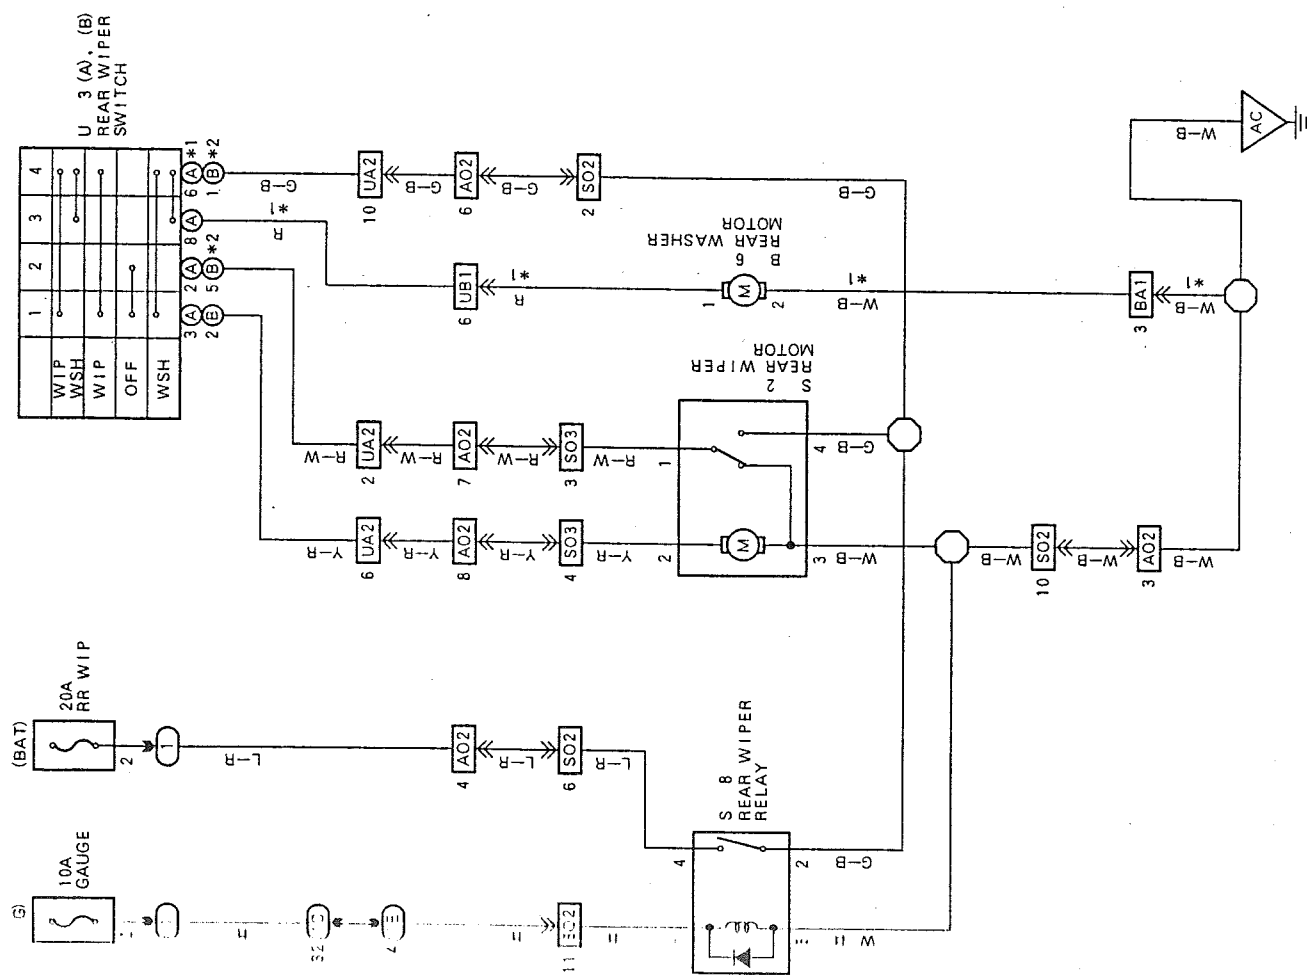

REAR WIPER & WASHER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
B 6	E2-18	S 2	E2-16	S 8	E2-16	U 3	E2-14

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO2	E2-12	BODY MAIN WIRE to LH SIDE WIRE
BA1	E2-14	BODY SUB NO.1 WIRE to BODY MAIN WIRE
SO2	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
SO3	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
UA2	E2-14	HEAD GUARD SW WIRE to BODY MAIN WIRE
UB1	E2-14	HEAD GUARD SW WIRE to BODY SUB NO.1 WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

HORN

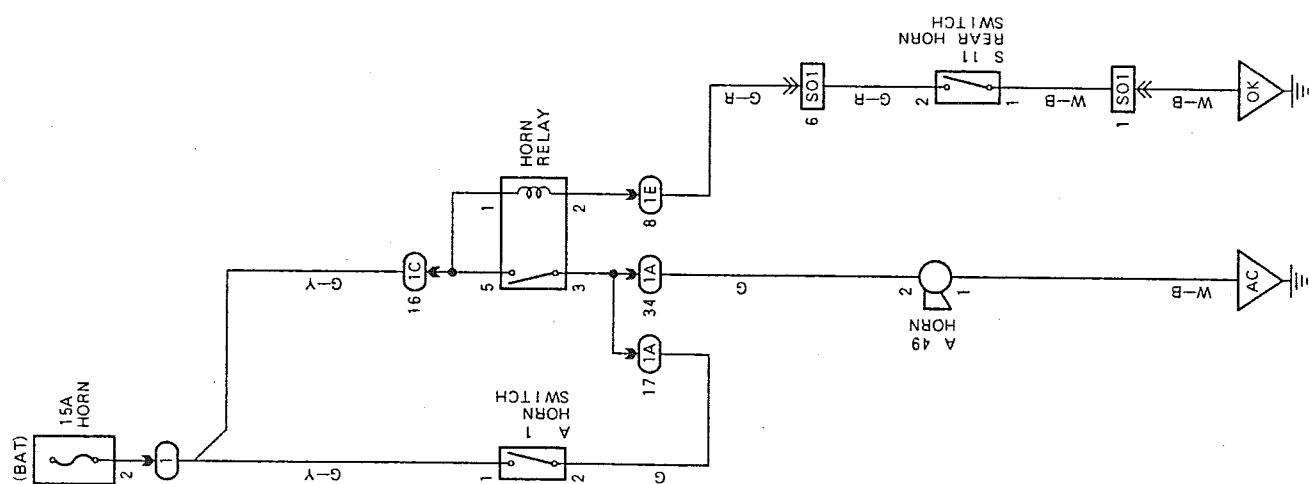

HORN

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 1	E2-10	A 49	E2-10	S 11	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
OK	E2-16	REAR PILLER LEFT UNDER EARTH

HEAD LAMP

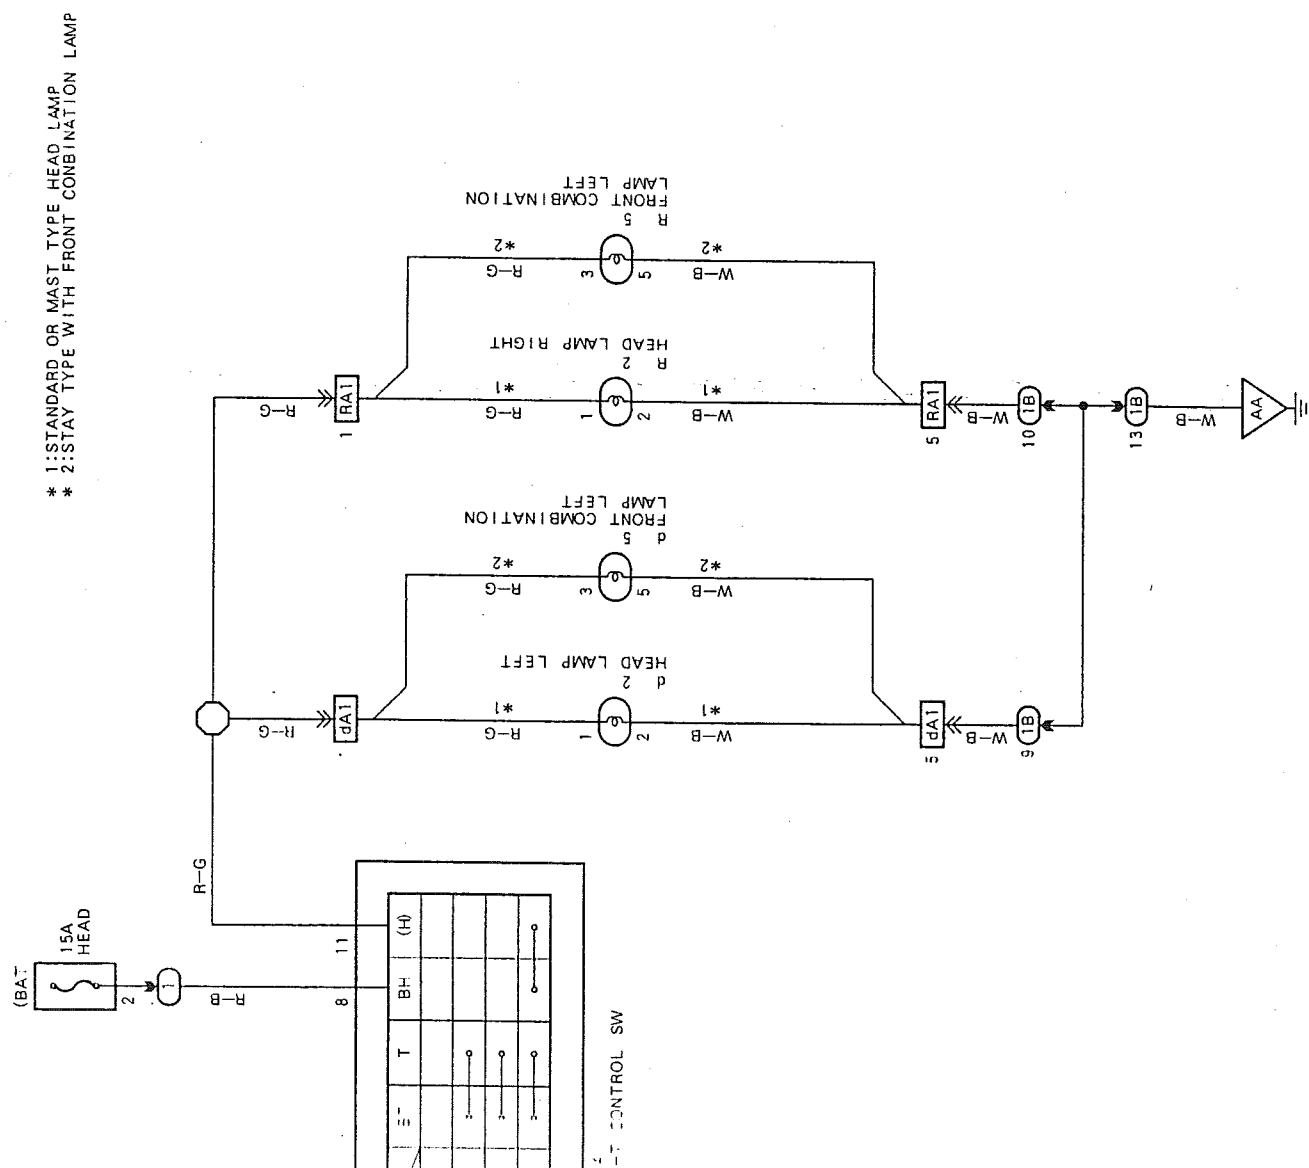

HEAD LAMP

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 4	E2-10	R 5	E2-14	d 5	E2-14		
R 2	E2-14	d 2	E2-14				

RELAY BLOCK , JUNCTION BLOCK


Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
RA1	E2-14	FR STAY WIRE RH to BODY MAIN WIRE
dA1	E2-14	FR STAY WIRE LH to BODY MAIN WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

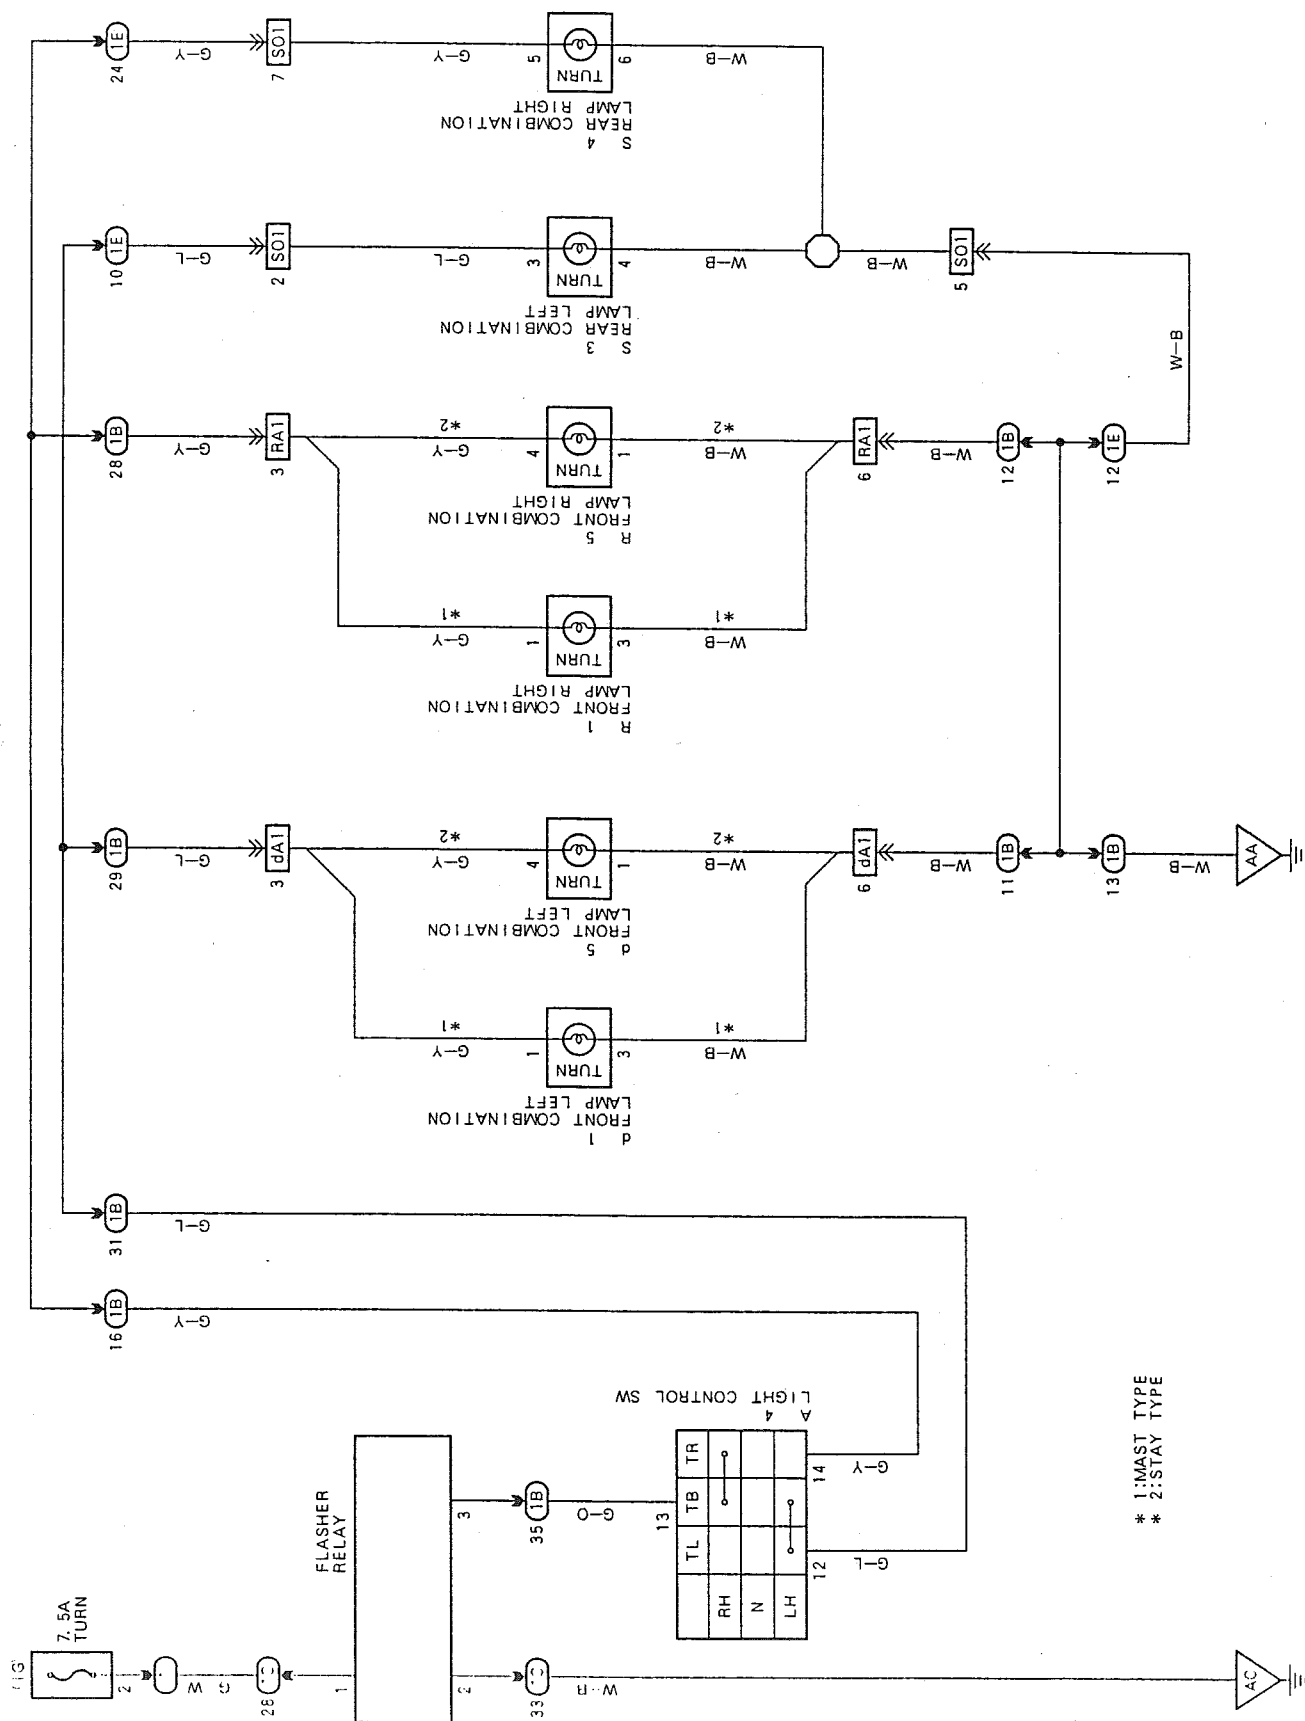

TURN SIGNAL LAMP

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 4	E2-10	R 5	E2-14	S 4	E2-16	d 5	E2-14
R 1	E2-14	S 3	E2-16	d 1	E2-14		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
RA1	E2-14	FR STAY WIRE RH to BODY MAIN WIRE
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
dA1	E2-14	FR STAY WIRE LH to BODY MAIN WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

CLEARANCE LAMP

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 4	E2-10	S 3	E2-16	c 4	E2-16		
R 1	E2-14	S 4	E2-16	d 1	E2-14		
R 5	E2-14	c 3	E2-16	d 5	E2-14		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
RA1	E2-14	FR STAY WIRE RH to BODY MAIN WIRE
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
Sc1	E2-16	RR UPR MAIN WIRE to LICENCE LAMP WIRE
dA1	E2-14	FR STAY WIRE LH to BODY MAIN WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

BACK UP LAMP BUZZER

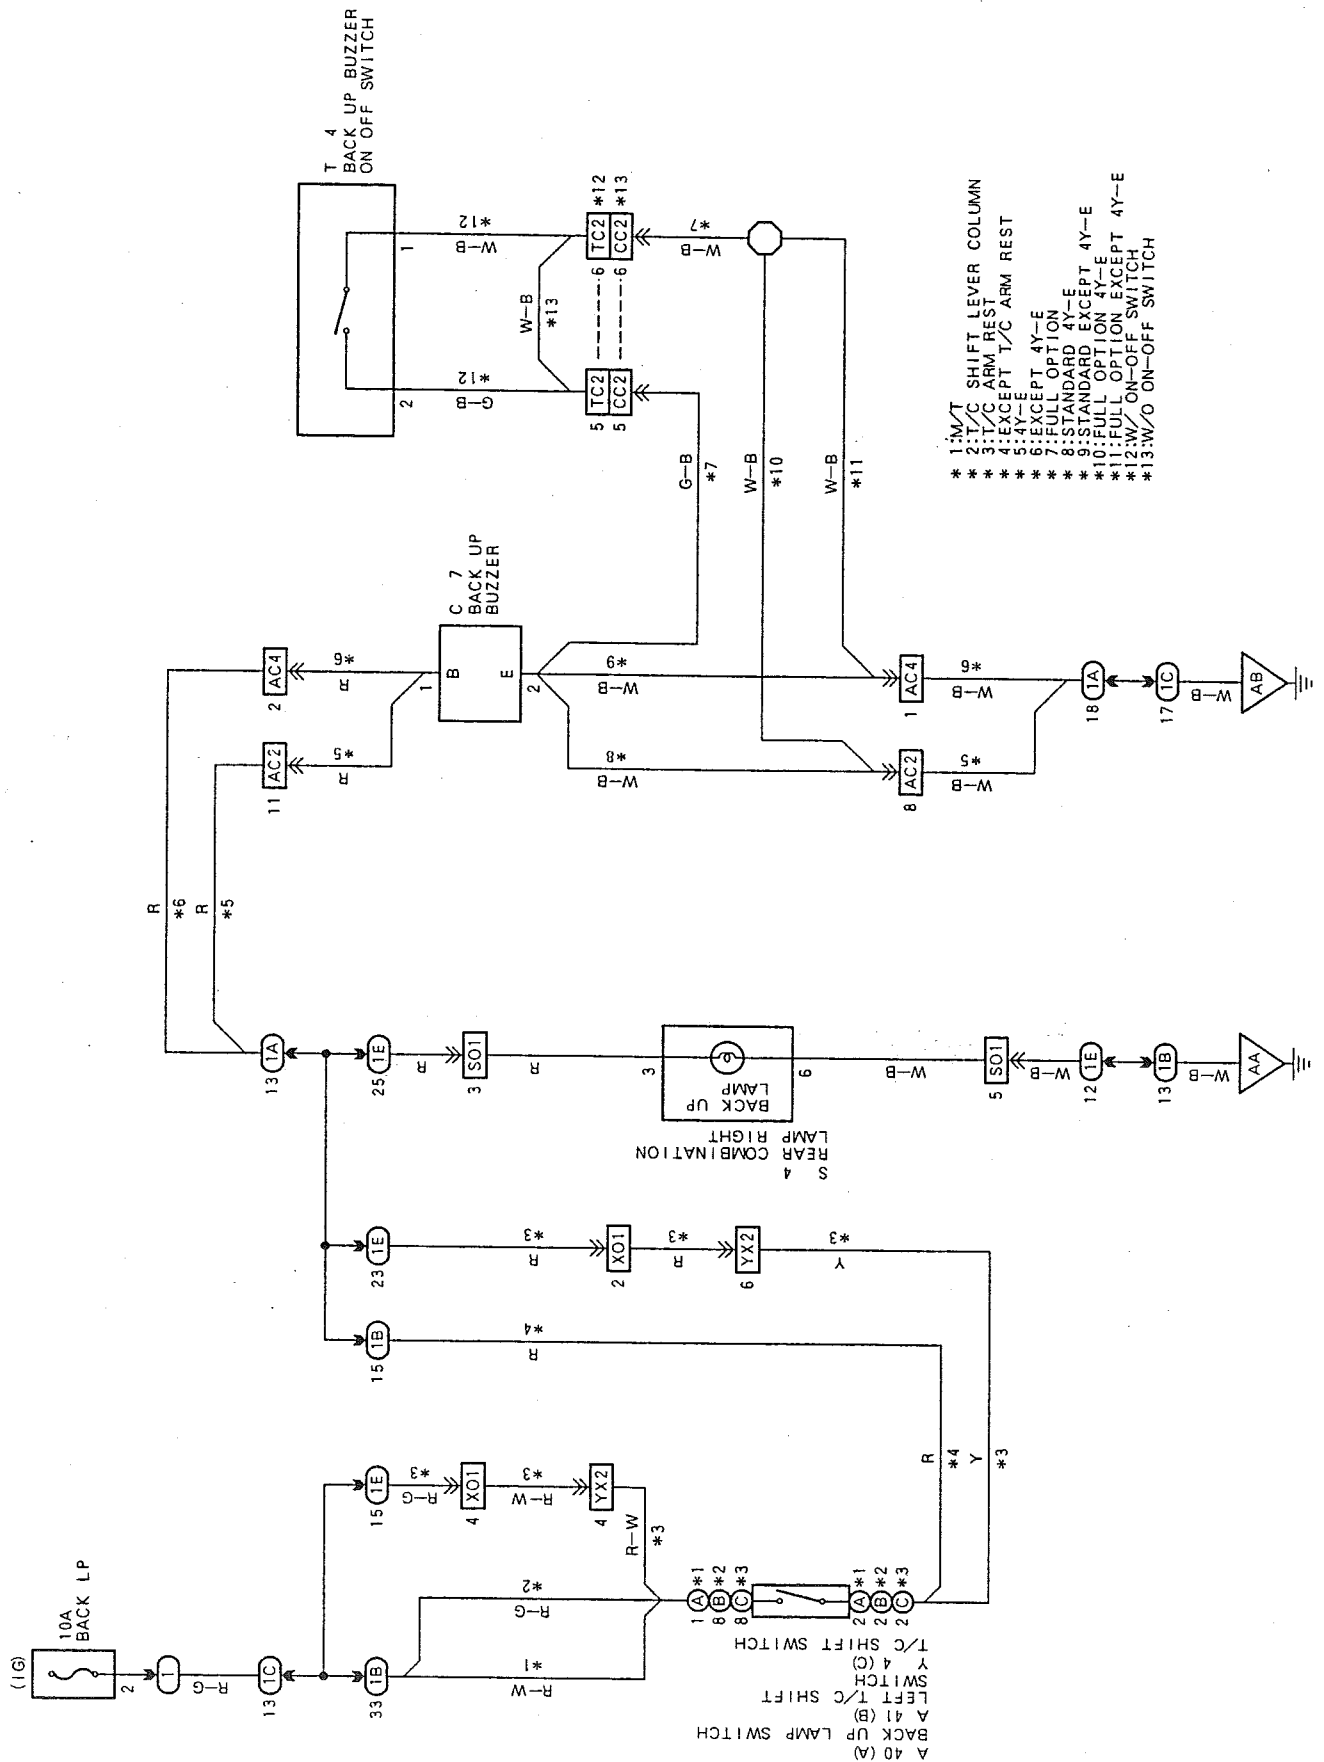

BACK UP LAMP BUZZER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 40	E2-12	C 7	E2-18	T 4	E2-18		
A 41	E2-10	S 4	E2-16	Y 4	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AC2	E2-12	BODY MAIN WIRE to SIDE RH WIRE
AC4	E2-12	BODY MAIN WIRE to SIDE RH WIRE
CC2	E2-18	SIDE RH WIRE to SIDE RH WIRE
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
TC2	E2-18	RR UPR SUB RH WIRE to SIDE RH WIRE
XO1	E2-16	HOOD MAIN WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
AB	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

STOP LAMP

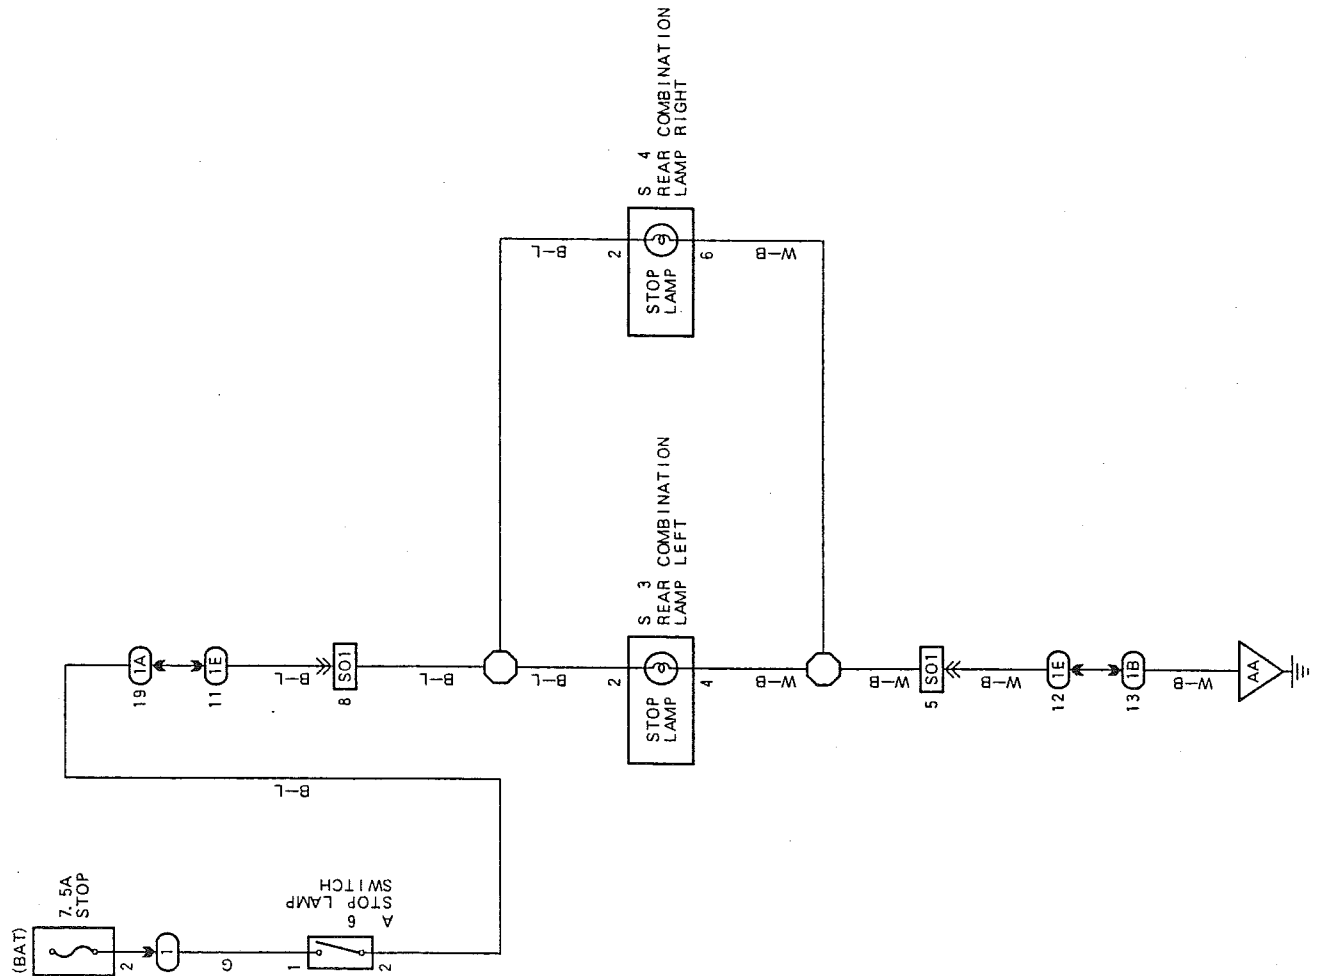

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 6	E2-10	S 3	E2-16	S 4	E2-16		

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1A	E2-12,22	BODY MAIN WIRE to J/B
1B	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
SO1	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE

EARTH

Code	See Page	Name
AA	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

HEATER

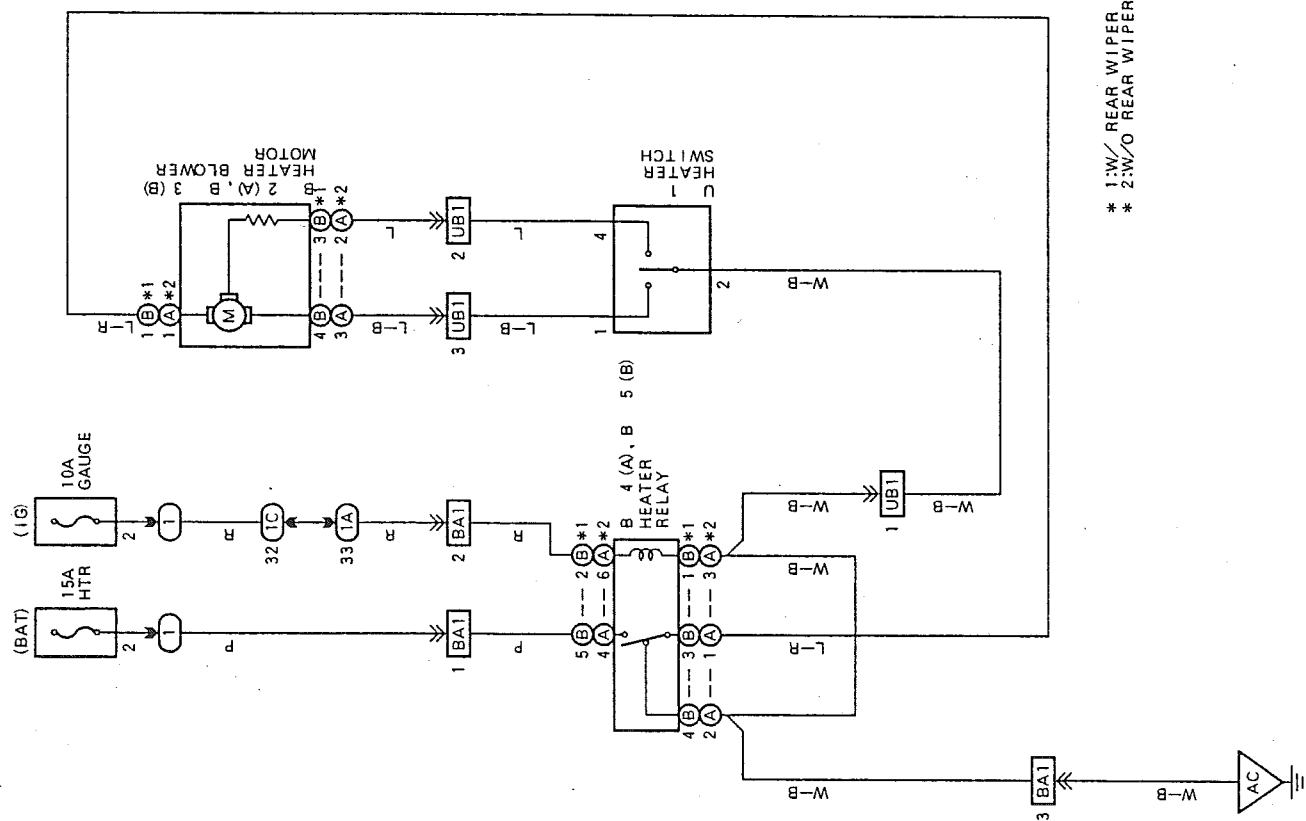

* 1:W/ REAR WIPER & WASHER
* 2:W/O REAR WIPER & WASHER

HEATER

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
B 2	E2-18	B 4	E2-18	U 1	E2-14		
B 3	E2-18	B 5	E2-18				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12.21	ENGINE ROOM R/B
1A	E2-12.22	BODY MAIN WIRE to J/B
1C	E2-12.22	BODY MAIN WIRE to J/B


WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
BA1	E2-14	BODY SUB NO.1 WIRE to BODY MAIN WIRE
UB1	E2-14	HEAD GUARD SW WIRE to BODY SUB NO.1 WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH

* 1:W/ ASC
 * 2:W/ MULTI DISPLAY
 * 3:4Y-E
 * 4:4Y-M, ID2, 2Z
 * 5:TWISTED WIRE

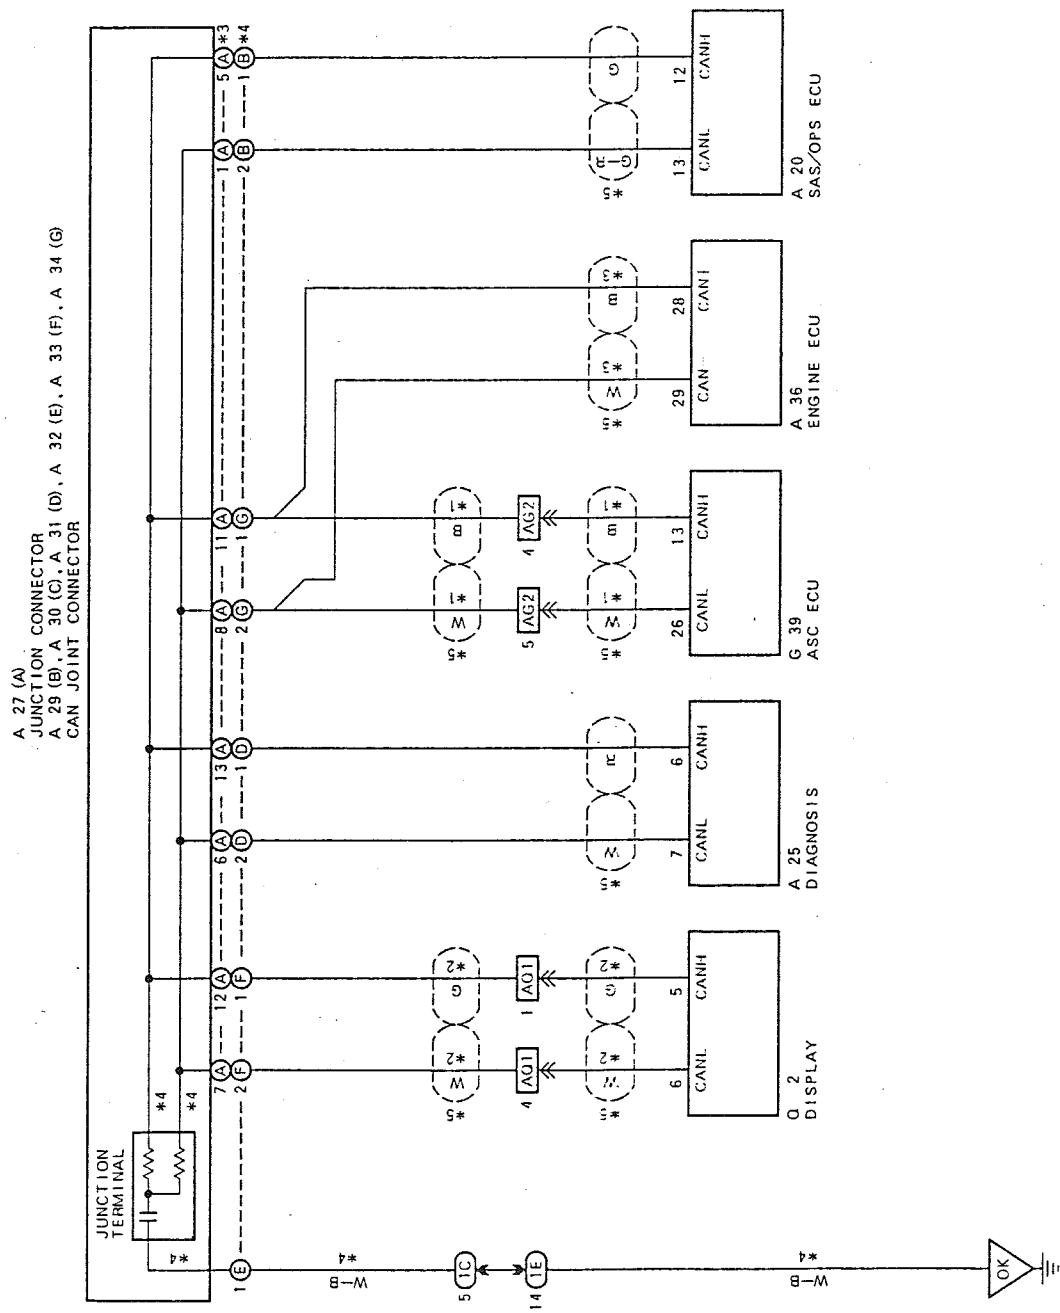

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 20	E2-10	A 29	E2-12,23	A 32	E2-12,23	A 36	E2-12
A 25	E2-12	A 30	E2-12,23	A 33	E2-12,23	G 39	E2-12
A 27	E2-12	A 31	E2-12,23	A 34	E2-12,23	Q 2	E2-10

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1E	E2-12,22	LH SIDE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AG2	E2-12	BODY MAIN WIRE to ENGINE WIRE
AQ1	E2-10	BODY MAIN WIRE to INSTRUMENT PANEL WIRE

EARTH

Code	See Page	Name
OK	E2-16	REAR PILLER LEFT UNDER EARTH

DOME LAMP

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
V 3	E2-16	V 4	E2-16				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AO2	E2-12	BODY MAIN WIRE to LH SIDE WIRE
SO2	E2-16	RR UPR MAIN WIRE to LH SIDE WIRE
SV2	E2-16	RR UPR MAIN WIRE to RR UPR SUB LH WIRE

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH