


Chapter 6 CONNECTOR LIST CONNECTOR LIST

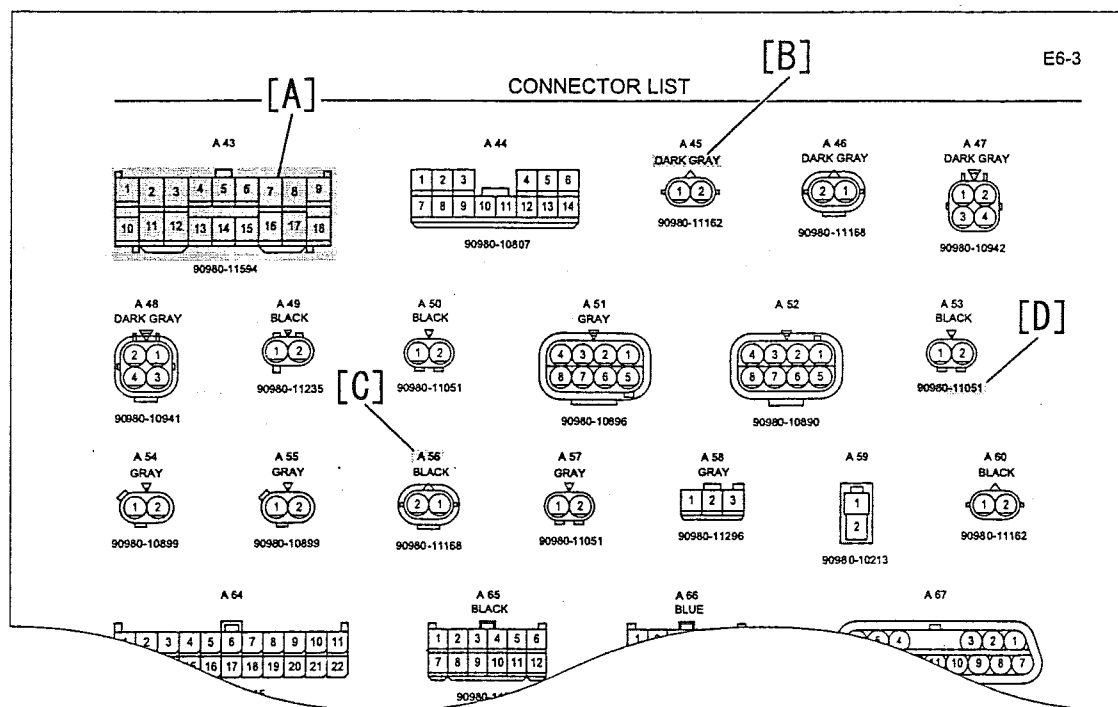

[A] Forma de conector y número de terminal

Indica la forma del conector en el lado del mazo de cables, que está conectado a una parte.
Los números indican números de terminales que se emplean en los diagramas de circuitos.

[B] Color de conector

Indica un color de conector.

[C] Conector de parte


Indica un número de conector conectado a una parte.

El código es el mismo que se utiliza en la ruta de conexiones eléctricas.

[D] Número de parte de conector

Indica el número de parte de un conector.

HARNESS TO HARNESS CONNECTOR

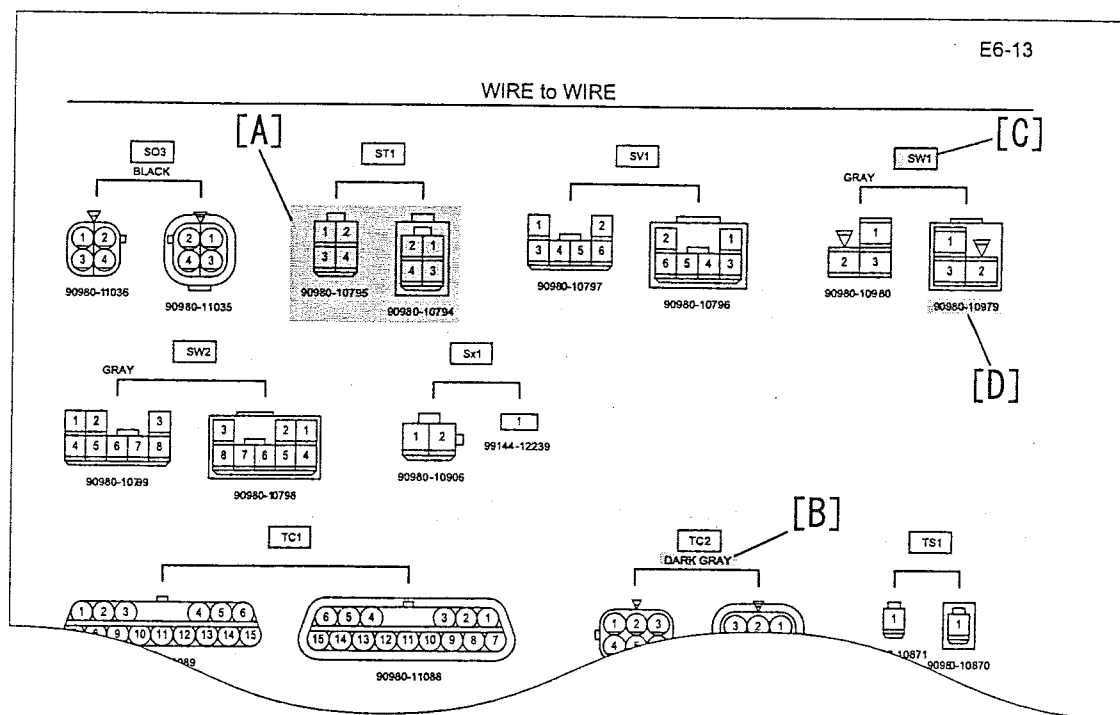**[A] Forma de conector y número de terminal**

Indica la forma del conector que conecta dos mazos de cables.

A la izquierda: Forma de conector hembra*1 (este ejemplo indica un conector para el cable G)

A la derecha: Forma de conector macho*2 (este ejemplo indica un conector para el cable K)

*1: Un conector hembra tiene un terminal hembra.

*2: Un conector macho tiene un terminal macho.

[B] Color de conector

Indica un color de conector.

[C] Conector de mazo de cables a mazo de cables

Indica un código de conector que conecta dos mazos de cables.

El código es el mismo que se utiliza en la ruta de conexiones eléctricas y el diagrama de conexiones.

[D] Número de parte de conector




















Indica el número de parte de un conector.

ABBREVIATIONS

En esta sección se utilizan las siguientes abreviaturas.

Abbreviations	Explicación (Explanation)
ASC	Control automático de la velocidad (Auto Speed Control)
ASSY	Conjunto (Assembly)
CNG	Gas natural comprimido (Compressed Natural Gas)
DPF	Filtro de partículas diésel (Diesel Particulate Filter)
ECU	Unidad de control electrónico (Electronic Control Unit)
FR	Delantera (Front)
J/B	Bloque de enlaces (Junction Block)
LH	Lado izquierdo (Left-Hand)
LPG	Gas licuado de petróleo (Liquified Petroleum Gas)
M/T	Transmisión manual (Manual Transmission)
OPS	Detección de la presencia de operadores (Operator Presence Sensing)
PS	Dirección asistida (Power Steering)
R/B	Bloque de relés (Relay Block)
RH	Lado derecho (Right-Hand)
RR	Parte trasera (Rear)
SAS	Sistema de estabilidad activa (System of Active Stability)
SOL	Solenoido (Solenoid)
T/C	Convertidor de par y transmisión (Torque Converter & Transmission)
W/	Con (With)
W/O	Sin (Without)

GLOSSARY OF TERMS AND SYMBOLS

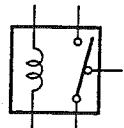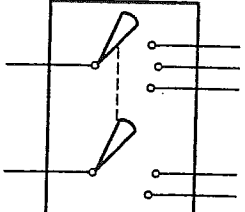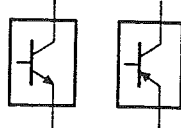BATERIA 	TIERRA 	RELE 1. NORMAL- MENTE CERRADO  2. NORMAL- MENTE ABIERTO 	INTERRUPTOR, MANUAL 1. NORMAL- MENTE ABIERTO  2. NORMAL- MENTE CERRADO 
CAPACITOR (Condensador) 	FAROS 1. FILAMENTO SENCILLO  2. FILAMENTO DOBLE 	RELE, DOBLE CODO 	INTERRUPTOR, DOBLE CODO 
ENCENDEDOR 		RESISTOR, DERIVADO 	INTERRUPTOR, ENCENDIDO 
DIODO 	BOCINA 	SENSOR (Termistor) 	
DIODO, ZENER 	LUZ 	SENSOR 	INTERRUPTOR, POSICION DE REPOSO DE LIMPIAPARABRISAS 
LED (diodo emisor de luz) 	CONTADOR, ANALOGICO 	PASADOR CORTO 	CABLES 1. SIN CONECTAR  2. EMPALMADO 
FOTODIODO 	CONTADOR, DIGITAL 	FUSIBLE 	
MOTOR 	RESISTENCIA 	SOLENOIDE 	CABLE DE ALTA TENSION 
ALTAVOZ 	RESISTENCIA, VARIABLE o REÓSTATO 		
TRANSISTOR 			

MEMO

CHAPTER 2 ELECTRICAL WIRING ROUTINGS AND RELAY LOCATIONS

E2

ELECTRICAL WIRING ROUTINGS



ENGINE ROOM (4Y-M)	E2-2
ENGINE ROOM (4Y-E)	E2-4
ENGINE ROOM (1DZ)	E2-6
ENGINE ROOM (2Z)	E2-8
INSTRUMENT PANEL	E2-10
FRONT BODY	E2-12
MAST AREA	E2-14
REAR BODY (NO.1)	E2-16
REAR BODY (NO.2)	E2-18

RELAY LOCATIONS

JUNCTION BLOCK (J/B) / RELAY BLOCK (R/B)	E2-20
--	-------

SYMBOLS	WIRE NAME	SYMBOLS	WIRE NAME
A	BODY MAIN WIRE	Q	INSTRUMENT PANEL WIRE
B	BODY SUB NO.1 WIRE	R	FR STAY WIRE RH
C	SIDE RH WIRE	S	RR UPR MAIN WIRE
D	T/C HEAT GAUGE WIRE	T	RR UPR SUB RH WIRE
E	DPF AC WIRE	U	HEAD GUARD SW WIRE
F	DPF HEATER WIRE	V	RR UPR SUB LH WIRE
G	BATTERY STARTER WIRE	X	HOOD MAIN WIRE
H	BATTERY STARTER WIRE	Y	HOOD SUB NO.1 WIRE
I	BATTERY EARTH WIRE	Z	RR LWR WIRE
J	ENGINE EARTH WIRE	a	SUB ACCEL WIRE
K	ENGINE SUB WIRE	b	MAST SENSOR WIRE
L	BATTERY WIRE	c	LICENCE LAMP WIRE
M	LPG PRESSURE SWITCH WIRE	d	FR STAY WIRE LH
N	BATTERY EARTH WIRE	h	WIPER SUB WIRE
O	LH SIDE WIRE		


ENGINE ROOM(4Y-M)

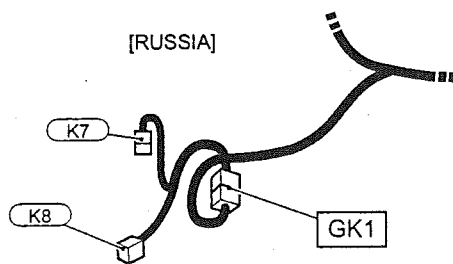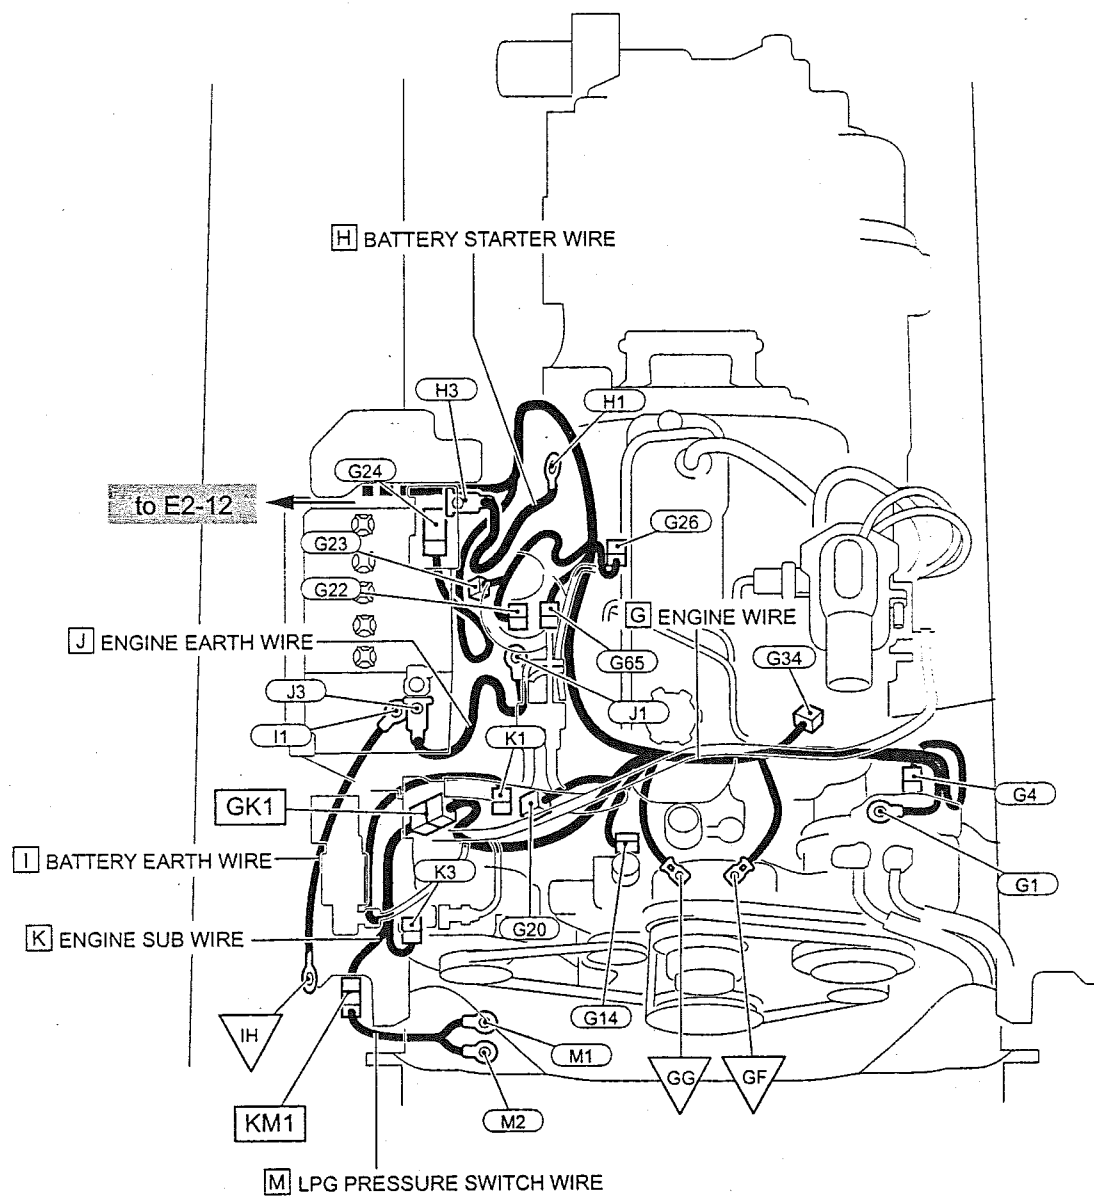

ELECTRICAL WIRING ROUTINGS

G1	ALTERNATOR
G4	ALTERNATOR
G14	WATER TEMP SENDER
G20	DISTRIBUTOR
G22	OIL PRESS SWITCH
G23	STARTER
G24	FUSIBLE LINK BLOCK ASSY
G26	TACHO CHECK
G34	FUEL CUT SOLENOID
G65	GAS SOLENOID
H1	STARTER
H3	BATTERY
I1	BATTERY
J1	STARTER
J3	BATTERY
K1	LPG SOLENOID(SLOW)
K3	LPG SOLENOID(MAIN)
K7	LPG SOLENOID(SLOW)
K8	LPG SOLENOID(MAIN)
M1	LPG PRESSURE SW
M2	LPG PRESSURE SW
GK1	ENGINE WIRE to ENGINE SUB WIRE
KM1	ENGINE SUB WIRE to LPG PRESSURE SWITCH WIRE
GF	ENGINE UPPER EARTH
GG	ENGINE UPPER EARTH
IH	REAR PILLER LEFT UNDER EARTH

ENGINE ROOM(4Y-E)

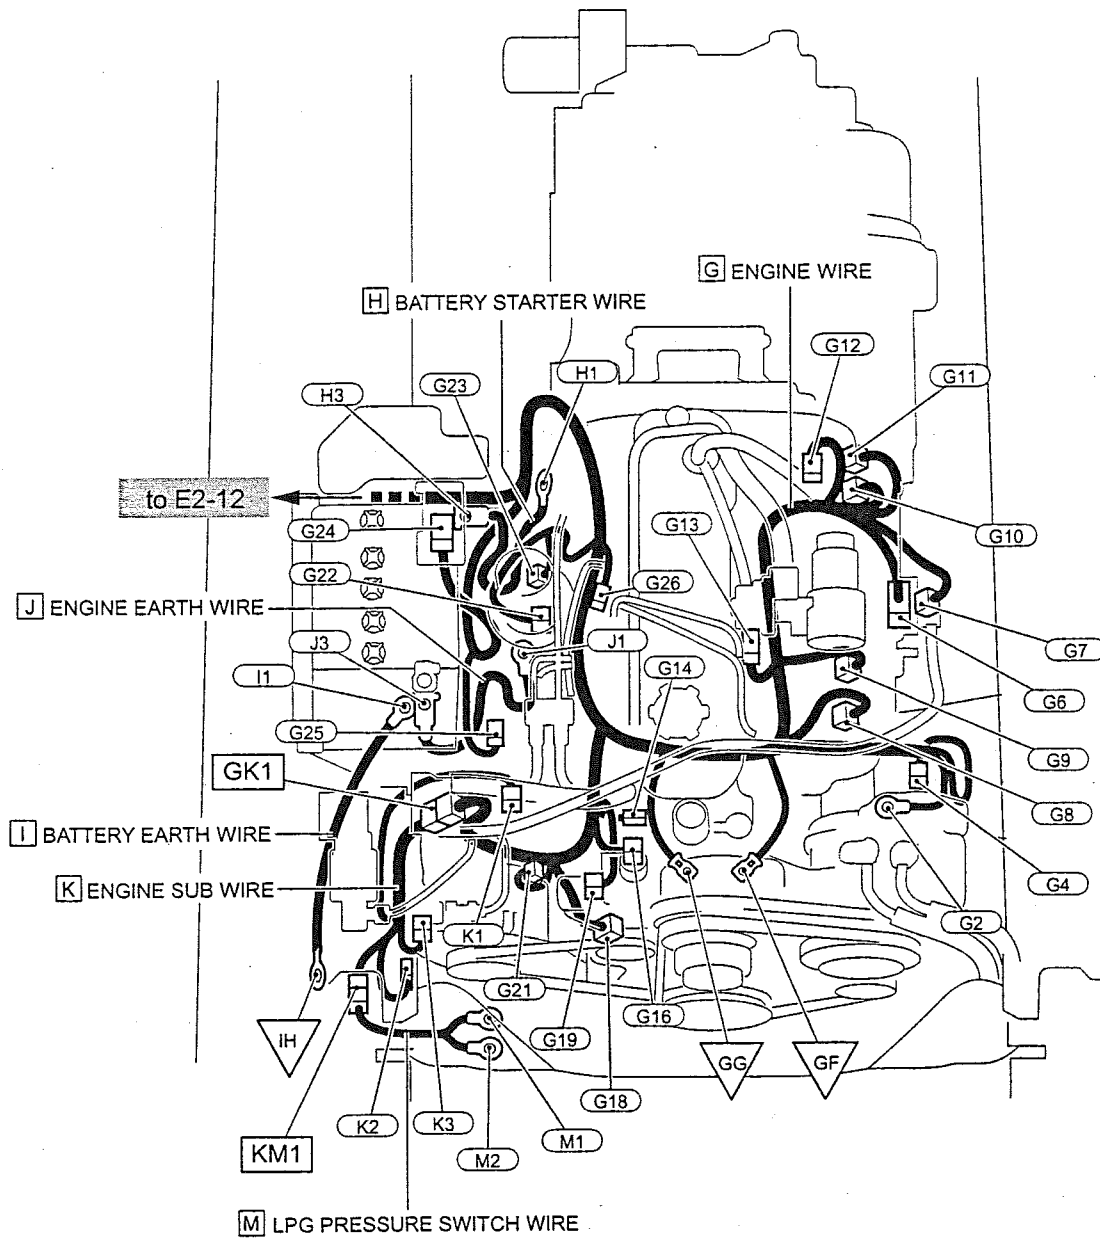


ELECTRICAL WIRING ROUTINGS

G2	ALTERNATOR	GF	ENGINE UPPER EARTH
G4	ALTERNATOR		
G6	THROTTLE POSITION SENSOR (WITH MOTOR)	GG	ENGINE UPPER EARTH
G7	LPG INJECTOR		
G8	INJECTOR NO.1	IH	REAR PILLER LEFT UNDER EARTH
G9	INJECTOR NO.2		
G10	INJECTOR NO.3		
G11	INJECTOR NO.4		
G12	VACUUM SENSOR		
G13	FCM STEP MOTOR		
G14	WATER TEMP SENDER		
G16	WATER TEMPERATURE SENSOR		
G18	G2 SENSOR		
G19	DISTRIBUTOR		
G21	IGNITION COIL		
G22	OIL PRESS SWITCH		
G23	STARTER		
G24	FUSIBLE LINK BLOCK ASSY		
G25	IGNITER		
G26	TACHO CHECK		
H1	STARTER		
H3	BATTERY		
I1	BATTERY		
J1	STARTER		
J3	BATTERY		
K1	LPG SOLENOID(SLOW)		
K2	LPG RESISTOR		
K3	LPG SOLENOID(MAIN)		
M1	LPG PRESSURE SW		
M2	LPG PRESSURE SW		

GK1	ENGINE WIRE to ENGINE SUB WIRE
KM1	ENGINE SUB WIRE to LPG PRESSURE SWITCH WIRE

ENGINE ROOM(1DZ)

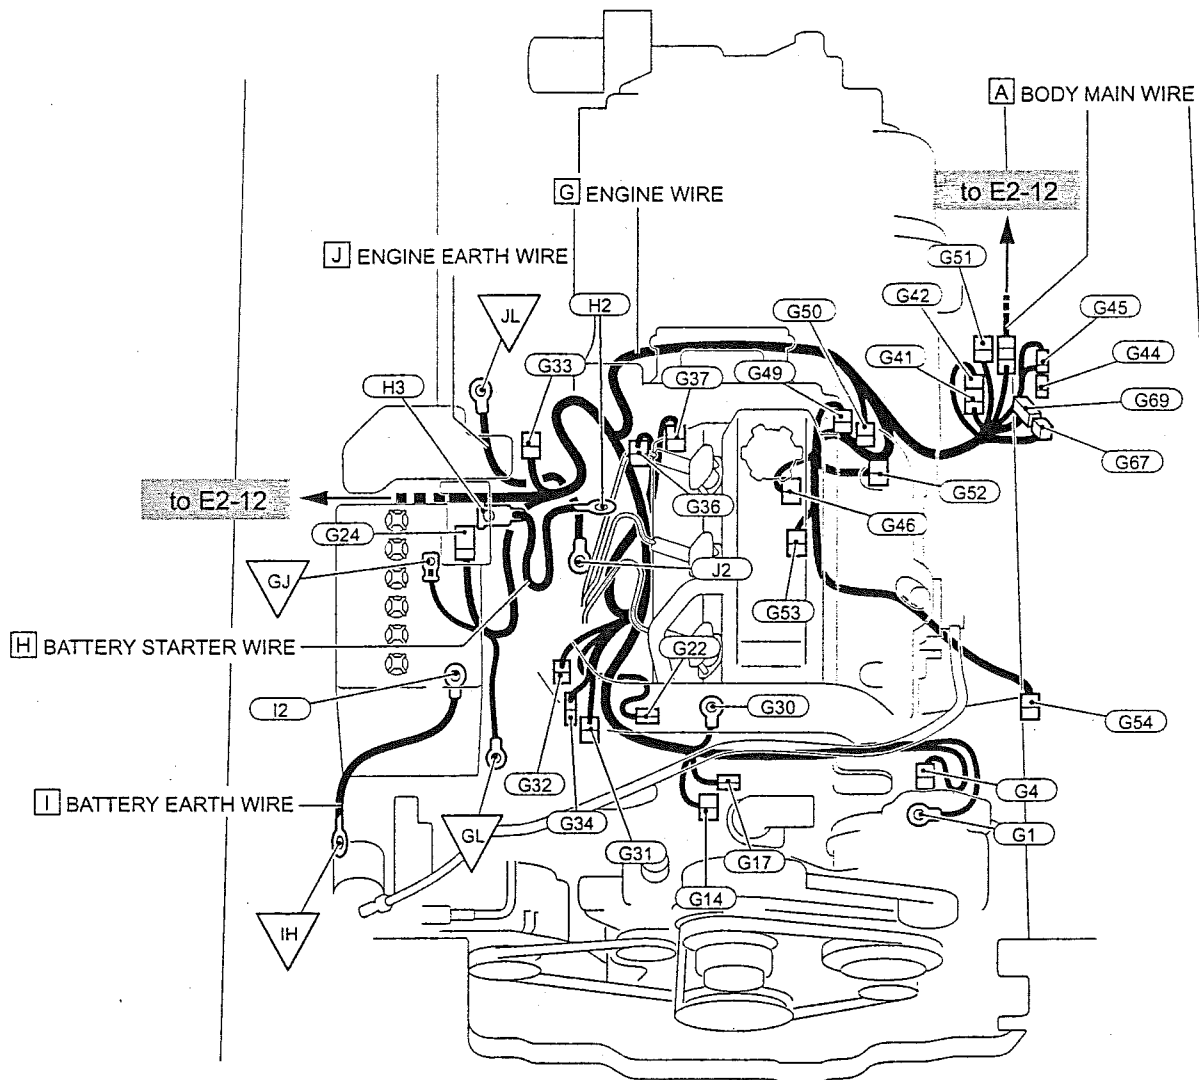

ELECTRICAL WIRING ROUTINGS

G1	ALTERNATOR
G4	ALTERNATOR
G14	WATER TEMP SENDER
G17	WATER TEMPERATURE SENSOR
G22	OIL PRESS SWITCH
G24	FUSIBLE LINK BLOCK ASSY
G30	GLOW PLUG
G31	INJECTOR PUMP
G32	STARTER
G33	GLOW PLUG RELAY
G34	FUEL CUT SOLENOID
G36	OPEN CLOSE SWITCH
G37	STEP MOTOR
G41	JUNCTION CONNECTOR(G)
G42	JUNCTION CONNECTOR(H)
G44	AC RELAY
G45	AC RELAY
G46	DPF CHECKER
G49	DPF VALVE
G50	DPF BLOWER
G51	DPF BUZZER
G52	AIR FLOW SENSOR
G53	PRESS SENSOR
G54	TEMP SENSOR
G67	DPF ECU
G69	DPF ECU
H2	STARTER
H3	BATTERY
I2	BATTERY
J2	STARTER

 GJ JUNCTION BLOCK IN FRONT INSIDE EARTH

 GL JUNCTION BLOCK IN FRONT INSIDE EARTH


 IH REAR PILLER LEFT UNDER EARTH

 JL FRONT PLATE LEFT INSIDE EARTH

ENGINE ROOM(22)

Diagram illustrating the wiring connections for the engine room (22). The diagram shows the engine, battery, and various electrical components connected by wires. Key components and their connections are labeled:

- ENGINE WIRE (G):** Connects to the engine.
- ENGINE EARTH WIRE (J):** Connects to the engine's ground.
- BATTERY WIRE (L):** Connects to the battery.
- BATTERY EARTH WIRE (I):** Connects to the battery's ground.
- BODY MAIN WIRE (A):** Connects to the main body wiring.
- to E2-12:** Two arrows point to specific connection points on the left and right sides of the diagram.
- Other labeled components:** G1, G2, G3, G4, G5, G6, G7, G8, G9, G10, G11, G12, G13, G14, G15, G16, G17, G18, G19, G20, G21, G22, G23, G24, G25, G26, G27, G28, G29, G30, G31, G32, G33, G34, G35, G36, G37, G38, G39, G40, G41, G42, G43, G44, G45, G46, G47, G48, G49, G50, G51, G52, G53, G54, G55, G56, G57, G58, G59, G60, G61, G62, G63, G64, G65, G66, G67, G68, G69, G70, G71, G72, G73, G74, G75, G76, G77, G78, G79, G80, G81, G82, G83, G84, G85, G86, G87, G88, G89, G90, G91, G92, G93, G94, G95, G96, G97, G98, G99, G100, G101, G102, G103, G104, G105, G106, G107, G108, G109, G110, G111, G112, G113, G114, G115, G116, G117, G118, G119, G120, G121, G122, G123, G124, G125, G126, G127, G128, G129, G130, G131, G132, G133, G134, G135, G136, G137, G138, G139, G140, G141, G142, G143, G144, G145, G146, G147, G148, G149, G150, G151, G152, G153, G154, G155, G156, G157, G158, G159, G160, G161, G162, G163, G164, G165, G166, G167, G168, G169, G170, G171, G172, G173, G174, G175, G176, G177, G178, G179, G180, G181, G182, G183, G184, G185, G186, G187, G188, G189, G190, G191, G192, G193, G194, G195, G196, G197, G198, G199, G200, G201, G202, G203, G204, G205, G206, G207, G208, G209, G210, G211, G212, G213, G214, G215, G216, G217, G218, G219, G220, G221, G222, G223, G224, G225, G226, G227, G228, G229, G230, G231, G232, G233, G234, G235, G236, G237, G238, G239, G240, G241, G242, G243, G244, G245, G246, G247, G248, G249, G250, G251, G252, G253, G254, G255, G256, G257, G258, G259, G260, G261, G262, G263, G264, G265, G266, G267, G268, G269, G270, G271, G272, G273, G274, G275, G276, G277, G278, G279, G280, G281, G282, G283, G284, G285, G286, G287, G288, G289, G290, G291, G292, G293, G294, G295, G296, G297, G298, G299, G300, G301, G302, G303, G304, G305, G306, G307, G308, G309, G310, G311, G312, G313, G314, G315, G316, G317, G318, G319, G320, G321, G322, G323, G324, G325, G326, G327, G328, G329, G330, G331, G332, G333, G334, G335, G336, G337, G338, G339, G340, G341, G342, G343, G344, G345, G346, G347, G348, G349, G350, G351, G352, G353, G354, G355, G356, G357, G358, G359, G360, G361, G362, G363, G364, G365, G366, G367, G368, G369, G370, G371, G372, G373, G374, G375, G376, G377, G378, G379, G380, G381, G382, G383, G384, G385, G386, G387, G388, G389, G390, G391, G392, G393, G394, G395, G396, G397, G398, G399, G400, G401, G402, G403, G404, G405, G406, G407, G408, G409, G410, G411, G412, G413, G414, G415, G416, G417, G418, G419, G420, G421, G422, G423, G424, G425, G426, G427, G428, G429, G430, G431, G432, G433, G434, G435, G436, G437, G438, G439, G440, G441, G442, G443, G444, G445, G446, G447, G448, G449, G450, G451, G452, G453, G454, G455, G456, G457, G458, G459, G460, G461, G462, G463, G464, G465, G466, G467, G468, G469, G470, G471, G472, G473, G474, G475, G476, G477, G478, G479, G480, G481, G482, G483, G484, G485, G486, G487, G488, G489, G490, G491, G492, G493, G494, G495, G496, G497, G498, G499, G500, G501, G502, G503, G504, G505, G506, G507, G508, G509, G510, G511, G512, G513, G514, G515, G516, G517, G518, G519, G520, G521, G522, G523, G524, G525, G526, G527, G528, G529, G530, G531, G532, G533, G534, G535, G536, G537, G538, G539, G540, G541, G542, G543, G544, G545, G546, G547, G548, G549, G550, G551, G552, G553, G554, G555, G556, G557, G558, G559, G560, G561, G562, G563, G564, G565, G566, G567, G568, G569, G570, G571, G572, G573, G574, G575, G576, G577, G578, G579, G580, G581, G582, G583, G584, G585, G586, G587, G588, G589, G590, G591, G592, G593, G594, G595, G596, G597, G598, G599, G600, G601, G602, G603, G604, G605, G606, G607, G608, G609, G610, G611, G612, G613, G614, G615, G616, G617, G618, G619, G620, G621, G622, G623, G624, G625, G626, G627, G628, G629, G630, G631, G632, G633, G634, G635, G636, G637, G638, G639, G640, G641, G642, G643, G644, G645, G646, G647, G648, G649, G650, G651, G652, G653, G654, G655, G656, G657, G658, G659, G660, G661, G662, G663, G664, G665, G666, G667, G668, G669, G670, G671, G672, G673, G674, G675, G676, G677, G678, G679, G680, G681, G682, G683, G684, G685, G686, G687, G688, G689, G690, G691, G692, G693, G694, G695, G696, G697, G698, G699, G700, G701, G702, G703, G704, G705, G706, G707, G708, G709, G710, G711, G712, G713, G714, G715, G716, G717, G718, G719, G720, G721, G722, G723, G724, G725, G726, G727, G728, G729, G730, G731, G732, G733, G734, G735, G736, G737, G738, G739, G740, G741, G742, G743, G744, G745, G746, G747, G748, G749, G750, G751, G752, G753, G754, G755, G756, G757, G758, G759, G760, G761, G762, G763, G764, G765, G766, G767, G768, G769, G770, G771, G772, G773, G774, G775, G776, G777, G778, G779, G780, G781, G782, G783, G784, G785, G786, G787, G788, G789, G790, G791, G792, G

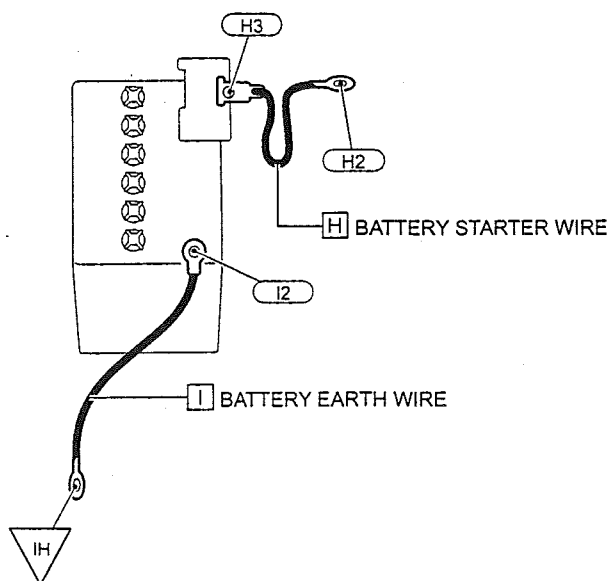

ELECTRICAL WIRING ROUTINGS


G1	ALTERNATOR	GJ	JUNCTION BLOCK IN FRONT INSIDE EARTH
G4	ALTERNATOR	GL	JUNCTION BLOCK IN FRONT INSIDE EARTH
G14	WATER TEMP SENDER	IH	REAR PILLER LEFT UNDER EARTH
G17	WATER TEMPERATURE SENSOR	JL	FRONT PLATE LEFT INSIDE EARTH
G22	OIL PRESS SWITCH		
G24	FUSIBLE LINK BLOCK ASSY		
G31	INJECTOR PUMP		
G32	STARTER		
G34	FUEL CUT SOLENOID		
G36	OPEN CLOSE SWITCH		
G37	STEP MOTOR		
G41	JUNCTION CONNECTOR(G)		
G42	JUNCTION CONNECTOR(H)		
G44	AC RELAY		
G45	AC RELAY		
G46	DPF CHECKER		
G49	DPF VALVE		
G50	DPF BLOWER		
G51	DPF BUZZER		
G52	AIR FLOW SENSOR		
G53	PRESS SENSOR		
G56	INTAKE HEATER		
G57	INTAKE HEATER RELAY		
G58	INTAKE HEATER RELAY		
G59	INTAKE HEATER RELAY		
G60	INTAKE HEATER RELAY		
G61	INTAKE HEATER RELAY		
G68	DPF ECU		
G69	DPF ECU		
G70	DPF ECU		
G72	TEMP SENSOR		
H2	STARTER		
H3	BATTERY		
I2	BATTERY		
I3	BATTERY		
J2	STARTER		
L1	BATTERY		
L2	BATTERY		
N1	BATTERY		
N2	BATTERY		

INSTRUMENT PANEL


A BODY MAIN WIRE	R FR STAY WIRE RH	b MAST SENSOR WIRE
B BODY SUB NO.1 WIRE	U HEAD GUARD SW WIRE	d FR STAY WIRE LH
Q INSTRUMENT PANEL WIRE	a SUB ACCEL WIRE	h WIPER SUB WIRE

*1:T/C


*2:M/T

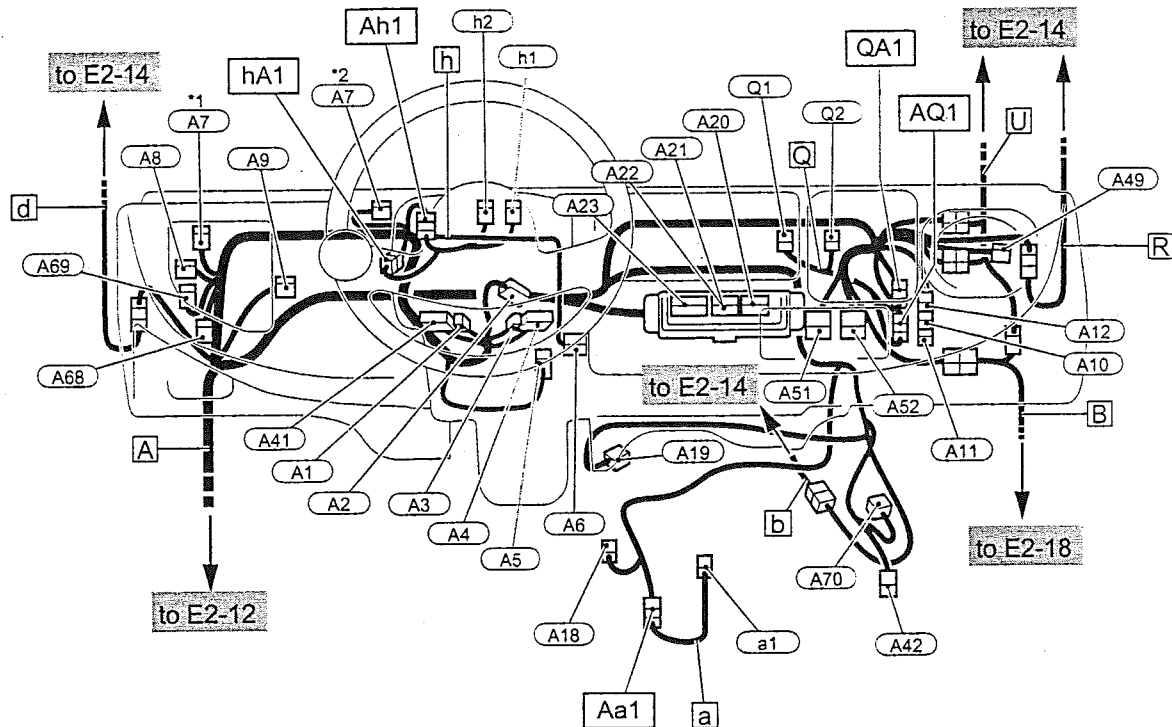

[W/O SAS/OPS SYSTEM]

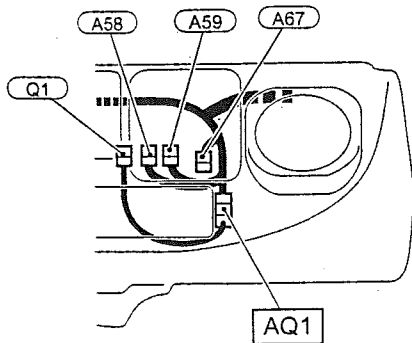


[W/ SAS/OPS SYSTEM]

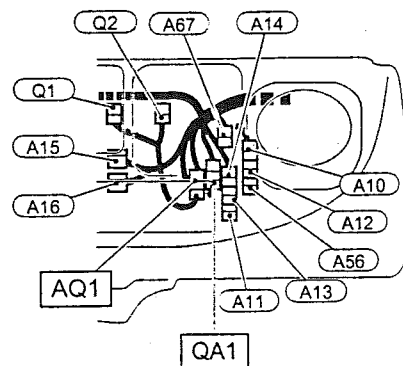

ELECTRICAL WIRING ROUTINGS

A1	HORN SWITCH	AQ1	BODY MAIN WIRE to INSTRUMENT PANEL WIRE
A2	IGNITION SWITCH	Aa1	BODY MAIN WIRE to SUB ACCEL WIRE
A3	STEERING SENSOR	Ah1	BODY MAIN WIRE to WIPER SUB WIRE
A4	LIGHT CONTROL SW	QA1	INSTRUMENT PANEL WIRE to BODY MAIN WIRE
A5	STEERING SOLENOID	hA1	WIPER SUB WIRE to BODY MAIN WIRE
A6	STOP LAMP SWITCH		
A7	BRAKE WARNING SWITCH		
A8	OPS WARNING BUZZER		
A9	PARKING BRAKE SWITCH		
A10	TILT SOLENOID		
A11	LIFT SOLENOID		
A12	UNLOAD SOLENOID		
A13	TILT SWITCH		
A14	LIFT SWITCH		
A15	NEUTRAL TILT SWITCH		
A16	LOAD INDICATOR		
A18	PRESS SENSOR		
A19	SPEED SENSOR		
A20	SAS/OPS ECU		
A21	SAS/OPS ECU		
A22	OPS ELECTRONIC CONTROL UNIT		
A23	MINI LEVER ECU		
A41	LEFT T/C SHIFT SWITCH		
A42	TILT ANGLE SENSOR		
A49	HORN		
A51	CONTROL VALVE PUSH SOLENOID		
A52	CONTROL VALVE PULL SOLENOID		
A56	BACK TILT SOLENOID		
A58	SPEED METER		
A59	SPEED METER		
A67	TO DPF DISPLAY		
A68	WET BRAKE BUZZER		
A69	WET BRAKE LAMP		
A70	PRESSURE SW		
Q1	COMBINATION METER		
Q2	DISPLAY		
a1	ACCEL SENSOR		
h1	FRONT WIPER RELAY		
h2	FRONT WIPER MOTOR		

FRONT BODY

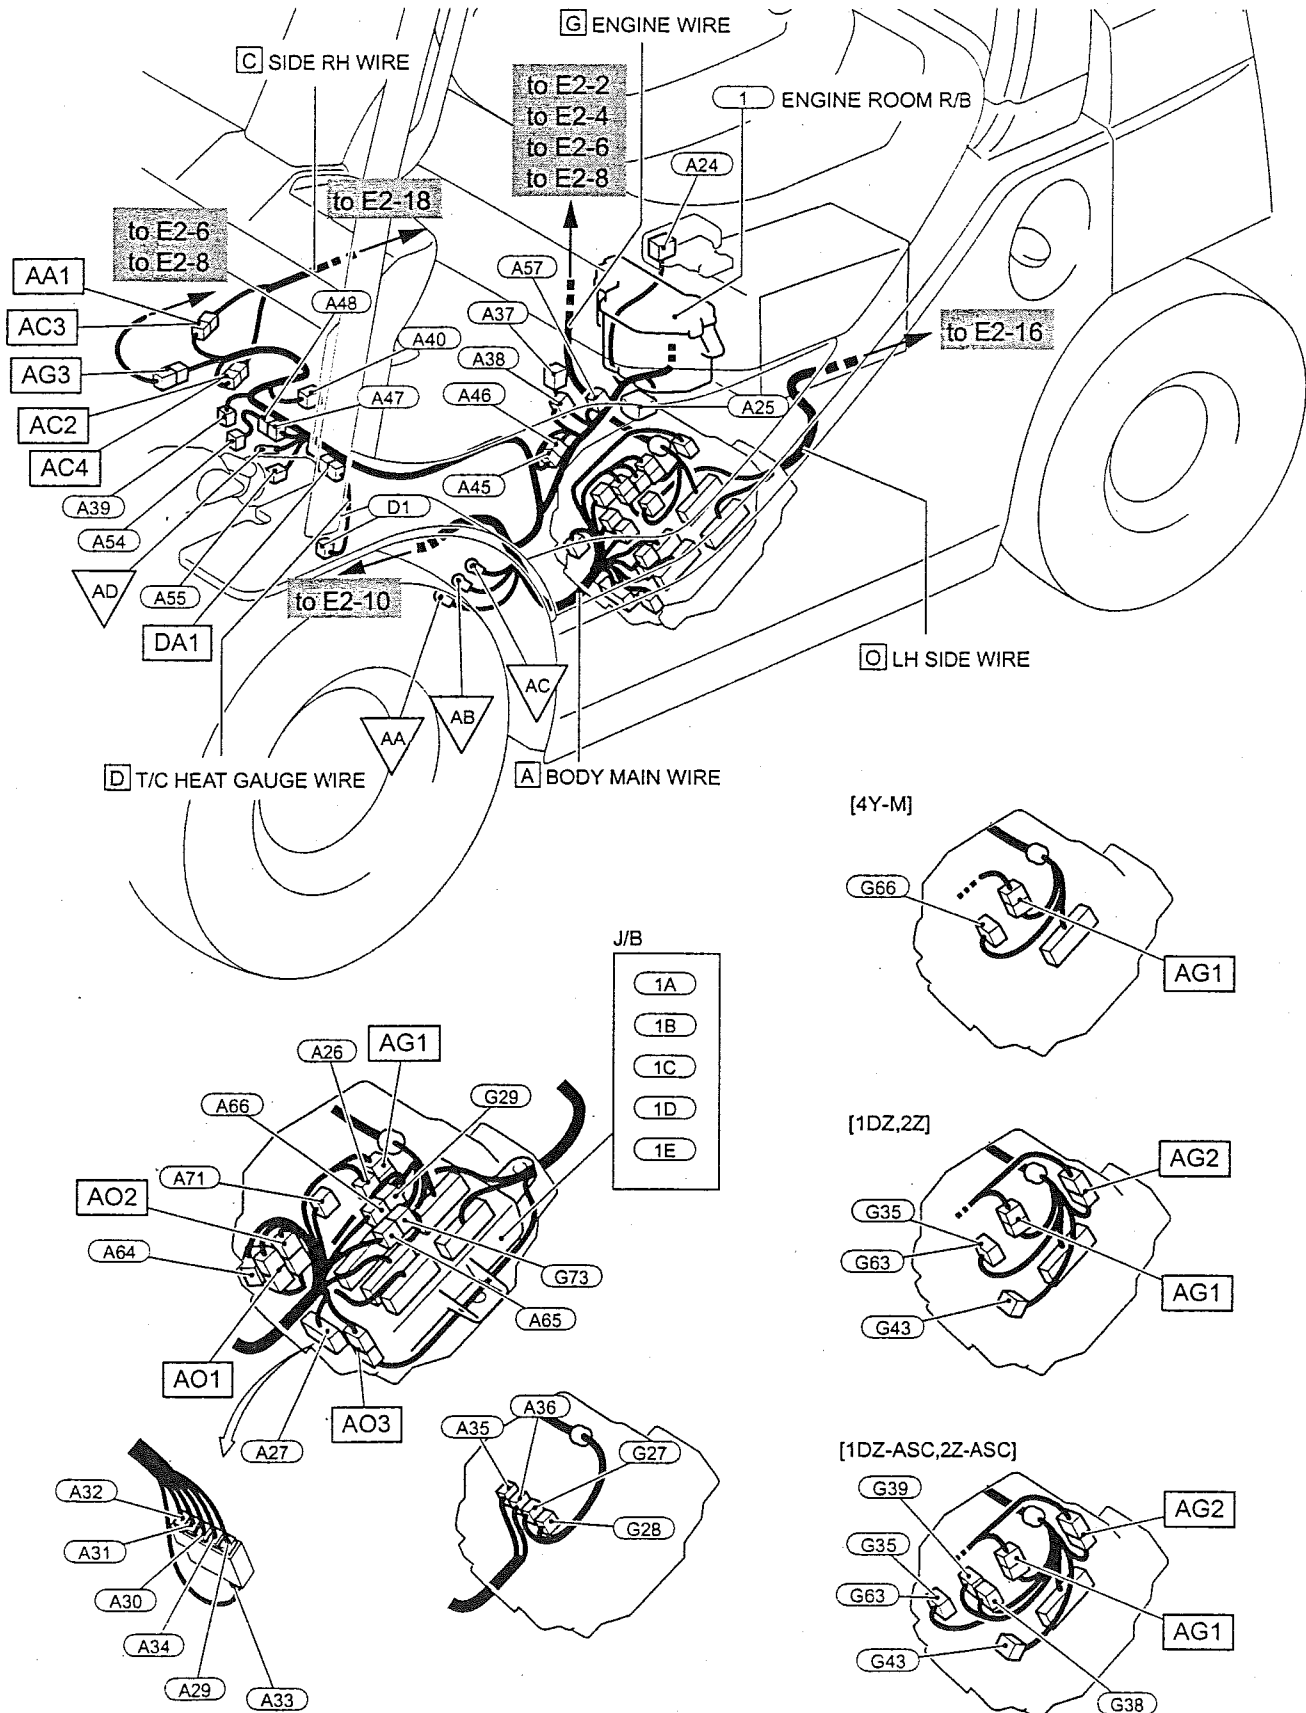


ELECTRICAL WIRING ROUTINGS

A24	FUSIBLE LINK BLOCK ASSY	AA1	BODY MAIN WIRE to BODY MAIN WIRE
A25	DIAGNOSIS	AC2	BODY MAIN WIRE to SIDE RH WIRE
A26	DIODE	AC3	
A27	JUNCTION CONNECTOR	AC4	
A29	CAN JOINT CONNECTOR	AG1	BODY MAIN WIRE to ENGINE WIRE
A30	CAN JOINT CONNECTOR	AG2	
A31	CAN JOINT CONNECTOR	AG3	
A32	CAN JOINT CONNECTOR	AO1	BODY MAIN WIRE to LH SIDE WIRE
A33	CAN JOINT CONNECTOR	AO2	
A34	CAN JOINT CONNECTOR	AO3	
A35	ENGINE ECU	DA1	T/C HEAT GAUGE WIRE to BODY MAIN WIRE
A36	ENGINE ECU		
A37	LPG WARNING RELAY	AA	FRONT PLATE LEFT OUTSIDE EARTH
A38	LPG WARNING BUZZER	AB	FRONT PLATE LEFT OUTSIDE EARTH
A39	NEUTRAL START SWITCH	AC	FRONT PLATE LEFT OUTSIDE EARTH
A40	BACK UP LAMP SWITCH	AD	TRANSMISSION UPPER EARTH
A45	MATCHING CONNECTOR		
A46	MATCHING CONNECTOR		
A47	SHIFT SOLENOID(2)		
A48	SHIFT SOLENOID(2)		
A54	SHIFT SOLENOID(1)		
A55	SHIFT SOLENOID(1)		
A57	TO PUSH/PULL RLY		
A64	JUNCTION CONNECTOR(J)		
A65	JUNCTION CONNECTOR(A)		
A66	JUNCTION CONNECTOR(B)		
A71	DIODE (WET BRAKE)		
D1	T/C OIL TEMP SENSOR		
G27	ENGINE ECU		
G28	ENGINE ECU		
G29	JUNCTION CONNECTOR(B)		
G35	GLOW PLUG TIMER		
G38	ASC ECU		
G39	ASC ECU		
G43	JUNCTION CONNECTOR(E)		
G63	PRE HEATING TIMER		
G66	ENGINE REVOLUTION SWITCH		
G73	JUNCTION CONNECTOR(A)		
1A			
1B	BODY MAIN WIRE to J/B		
1C			
1D	ENGINE WIRE to J/B		
1E	LH SIDE WIRE to J/B		

MAST AREA

- *1:V MAST
- *2:FSV MAST
- *3:W/ STAY
- *4:W/ MAST

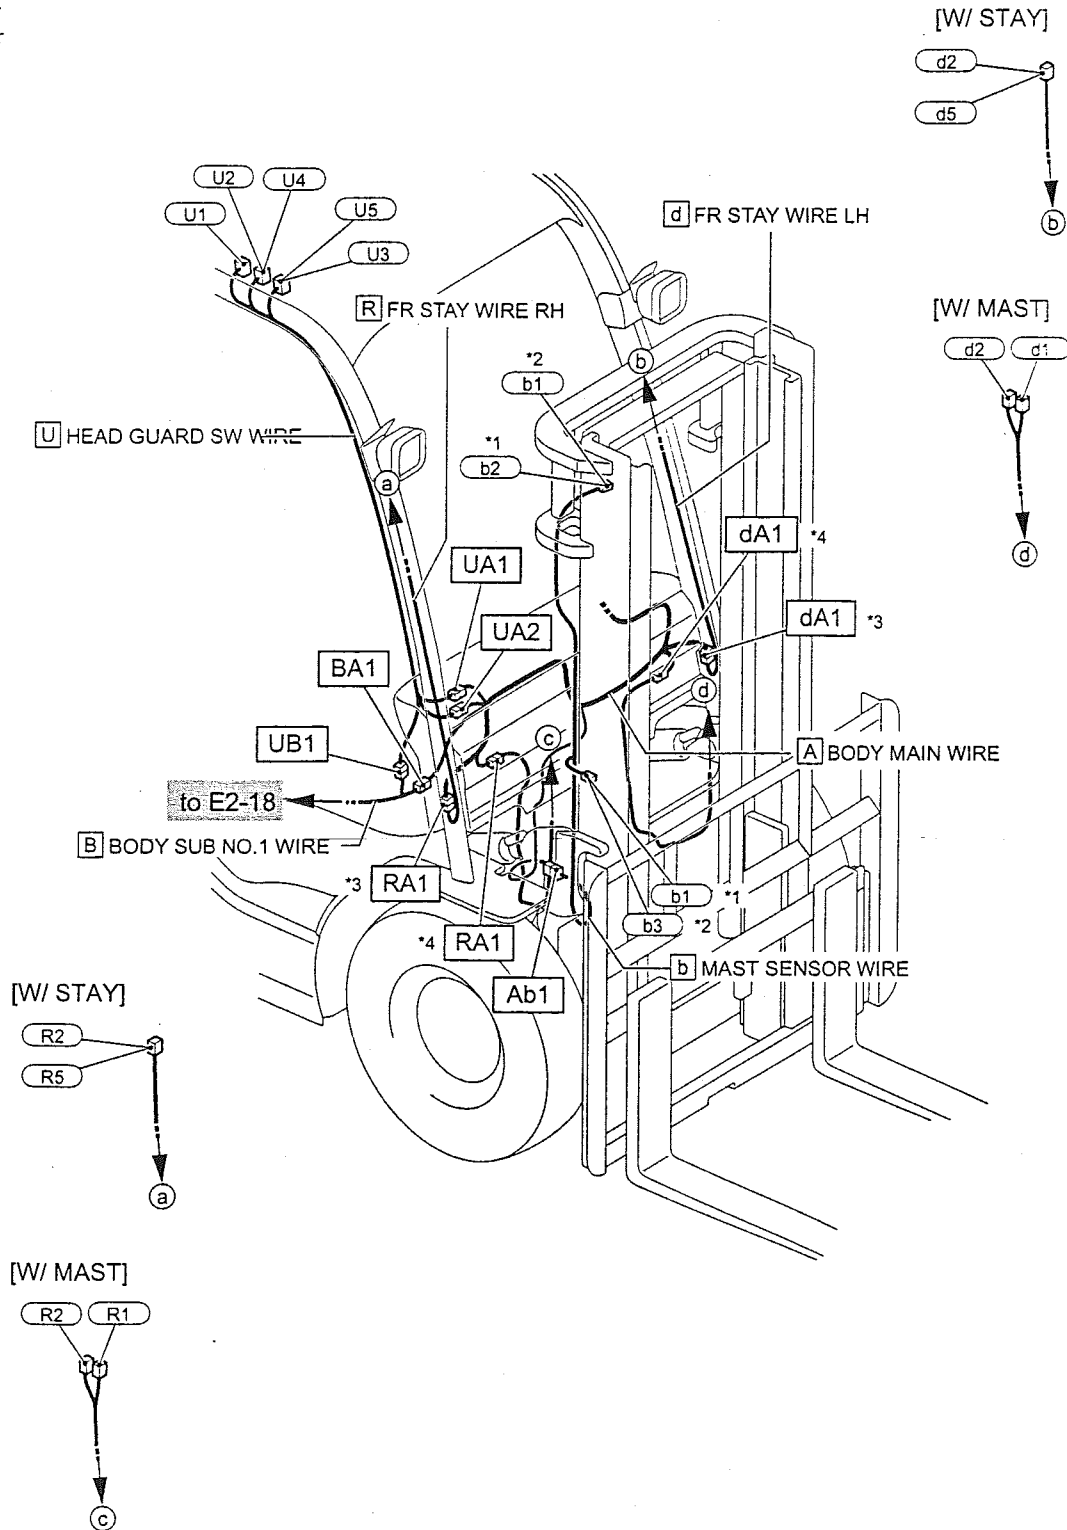

ELECTRICAL WIRING ROUTINGS

R1	FRONT COMBINATION LAMP RIGHT
R2	HEAD LAMP RIGHT
R5	FRONT COMBINATION LAMP RIGHT
U1	HEARTER SWITCH
U2	FRONT WIPER SWITCH
U3	REAR WIPER SWITCH
U4	BEACON LAMP SWITCH
U5	LPG WARNING SWITCH
b1	MAST SWITCH
b2	MAST SWITCH2
b3	ULTRA SONIC SSR
d1	FRONT COMBINATION LAMP LEFT
d2	HEAD LAMP LEFT
d5	FRONT COMBINATION LAMP LEFT

Ab1	BODY MAIN WIRE to MAST SENSOR WIRE
BA1	BODY SUB NO.1 WIRE to BODY MAIN WIRE
RA1	FR STAY WIRE RH to BODY MAIN WIRE
UA1	HEAD GUARD SW WIRE to BODY MAIN WIRE
UA2	
UB1	HEAD GUARD SW WIRE to BODY SUB NO.1 WIRE
dA1	FR STAY WIRE LH to BODY MAIN WIRE

ELECTRICAL WIRING ROUTINGS

O1	YAW RATE SENSOR
O2	FUEL SENDER GAUGE & FUEL PUMP
O3	SEDIMENTARY SWITCH
S1	WORK LAMP LEFT
S2	REAR WIPER MOTOR
S3	REAR COMBINATION LAMP LEFT
S4	REAR COMBINATION LAMP RIGHT
S8	REAR WIPER RELAY
S9	WORK LAMP RIGHT
S10	BEACON LAMP
S11	REAR HORN SWITCH
V3	DOVE LAMP
V4	DOVE LAMP
X1	SEAT SWITCH
Y1	NEUTRAL TILT SWITCH
Y2	ATTACHMENT LEVER1
Y3	ATTACHMENT LEVER2
Y4	T/C SHIFT SWITCH
Y5	TILT LEVER
Y6	LIFT LEVER
Y7	LOAD INDICATOR SWITCH
Y8	CONTROL VALVE LEVER 3,4SELECT SWITCH
Y9	SHORT CONNECTOR
Z1	SWING LOCK SOLENOID
Z3	TIRE ANGLE SENSOR
c3	LICENSE LAMP
c4	LICENSE LAMP

SO1	
SO2	RR UPR MAIN WIRE to LH SIDE WIRE
SO3	
SV2	
Sc1	RR UPR MAIN WIRE to LICENCE LAMP WIRE
XO1	
XO2	HOOD MAIN WIRE to LH SIDE WIRE
XO3	
XO4	
YX1	
YX2	HOOD SUB NO.1 WIRE to HOOD MAIN WIRE
ZO1	RR LWR WIRE to LH SIDE WIRE



REAR PILLER LEFT UNDER EARTH


ELECTRICAL WIRING ROUTINGS

B1	FRONT WASHER MOTOR
B2	HEATER BLOWER MOTOR
B3	HEATER BLOWER MOTOR
B4	HEATER RELAY
B5	HEATER RELAY
B6	REAR WASHER MOTOR
C1	O2 SENSOR
C3	IN AIR SENSOR
C4	AIR CLEANER WARNING SWITCH
C5	AIR CLEANER WARNING SWITCH
C6	RADIATOR WARNING SWITCH
C7	BACK UP BUZZER
E1	AC RELAY
E2	AC PLUG
E3	AC PLUG
F1	DPF HEATER
F2	AC PLUG
F3	AC RELAY
T4	BACK UP BUZZER ON OFF SWITCH
T6	LPG CHANGE SWITCH
T7	WORK LAMP SWITCH
CC2	SIDE RH WIRE to SIDE RH WIRE
ST1	RR UPR MAIN WIRE to RR UPR SUB RH WIRE
TC2	RR UPR SUB RH WIRE to SIDE RH WIRE

 FRONT PLATE RIGHT OUTSIDE EARTH


FUSIBLE LINK BLOCK ASSY (INNER CIRCUIT : SEE PAGE E2-25)

[FRONT]

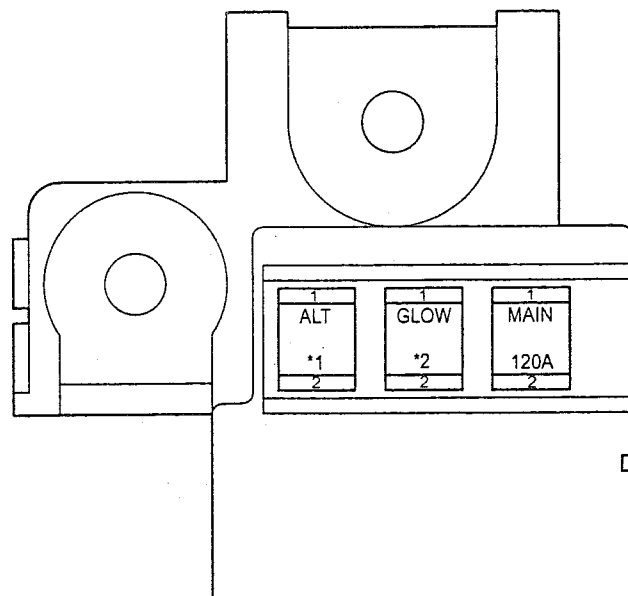


- * 1:80A (2Z)
100A (4Y-M, 4Y-E, 1DZ)
- * 2:120A (2Z)
60A (1DZ)

[REAR]

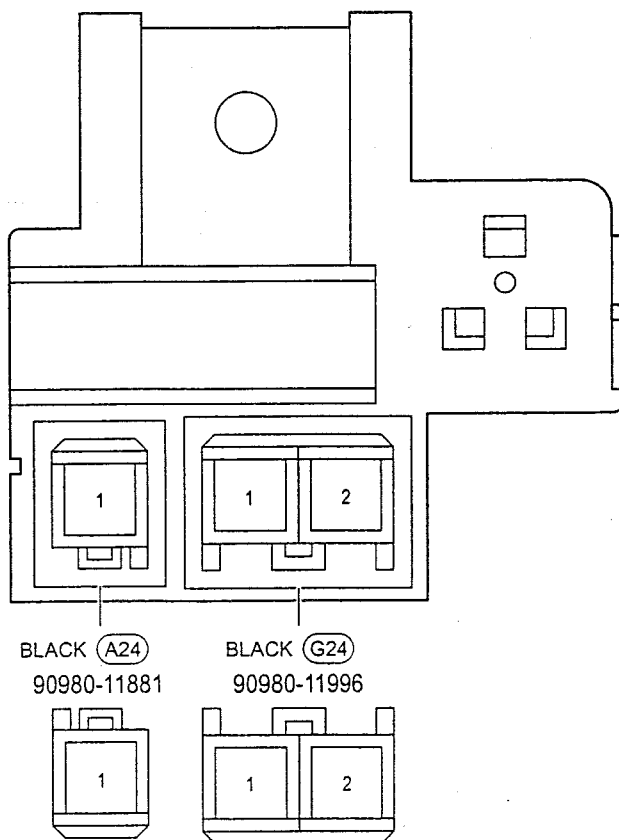


① ENGINE ROOM R/B : ENGINE ROOM LEFT

- * 1: 15A E-THRO (4Y-E)
7.5A ECU-B2 (4Y-M, 1DZ, 2Z)
- * 2: 7.5A (4Y-M, 1DZ, 2Z)
15A (4Y-E)
- * 3: DPF RELAY (1DZ, 2Z)
EFI MAIN RELAY (4Y-E)
- * 4: C/OPN RELAY (4Y-E)
ASC RELAY (1DZ, 2Z)
DPF (1DZ, 2Z)
- * 5: EFI (4Y-E)

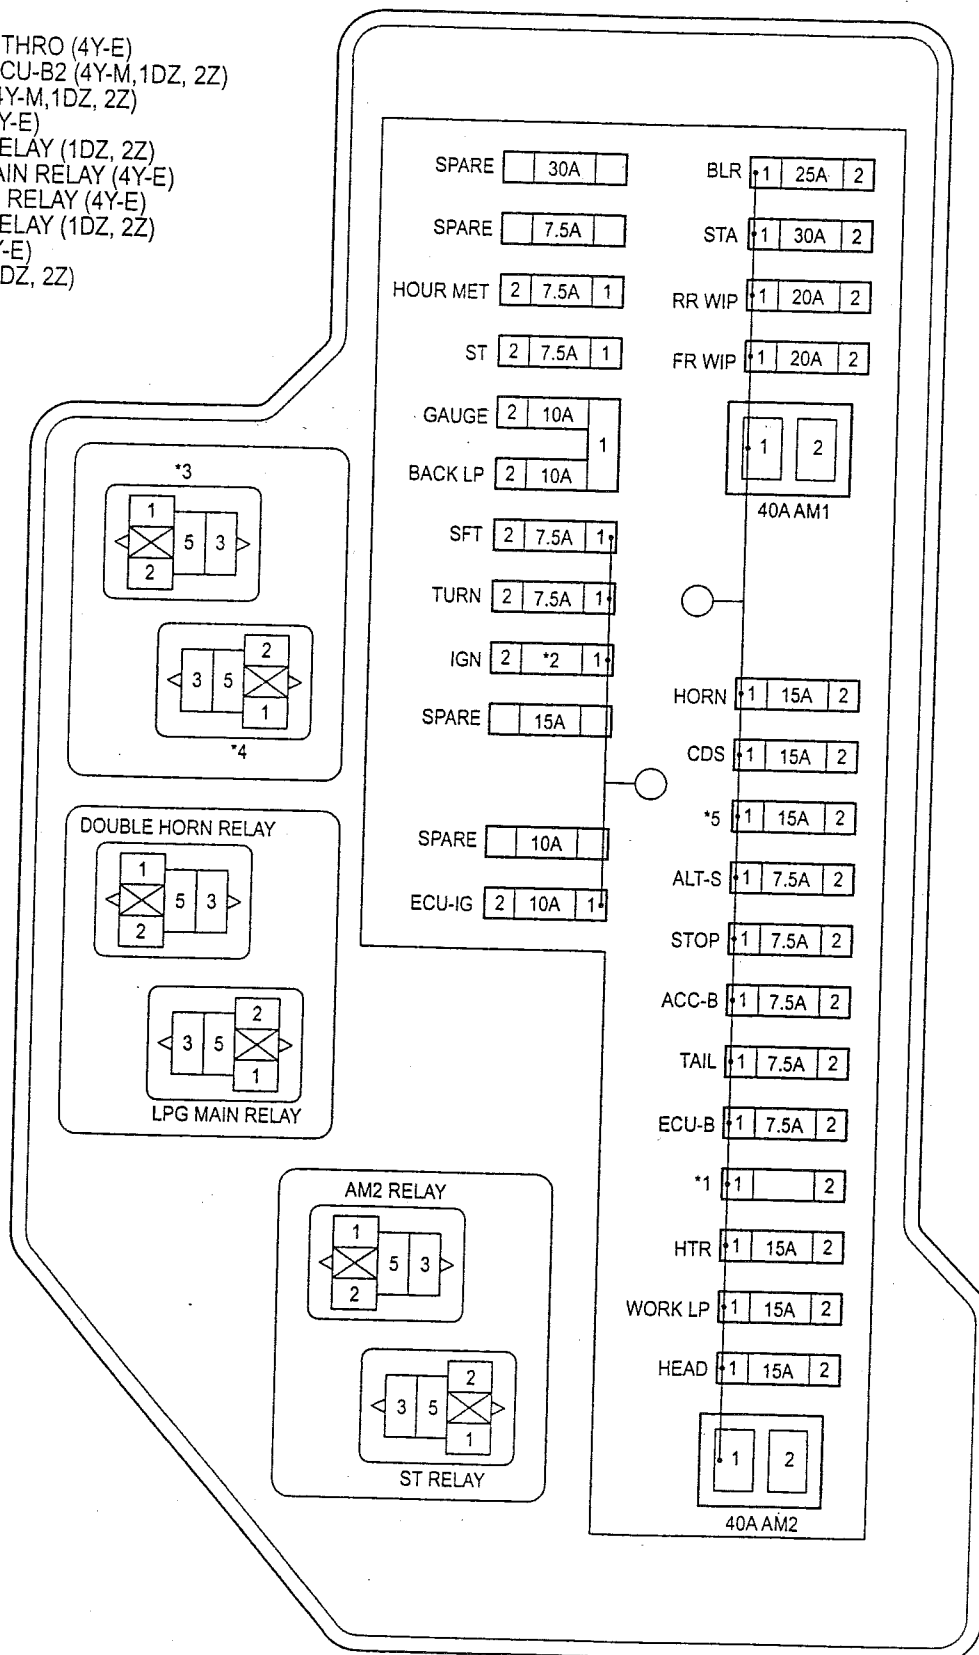


○ J/B : LEFT STEP (INNER CIRCUIT : SEE PAGE E2-26)


1A
90980-12506




1B
90980-12383





1C
90980-12320



1D
90980-12308




1E
90980-12311

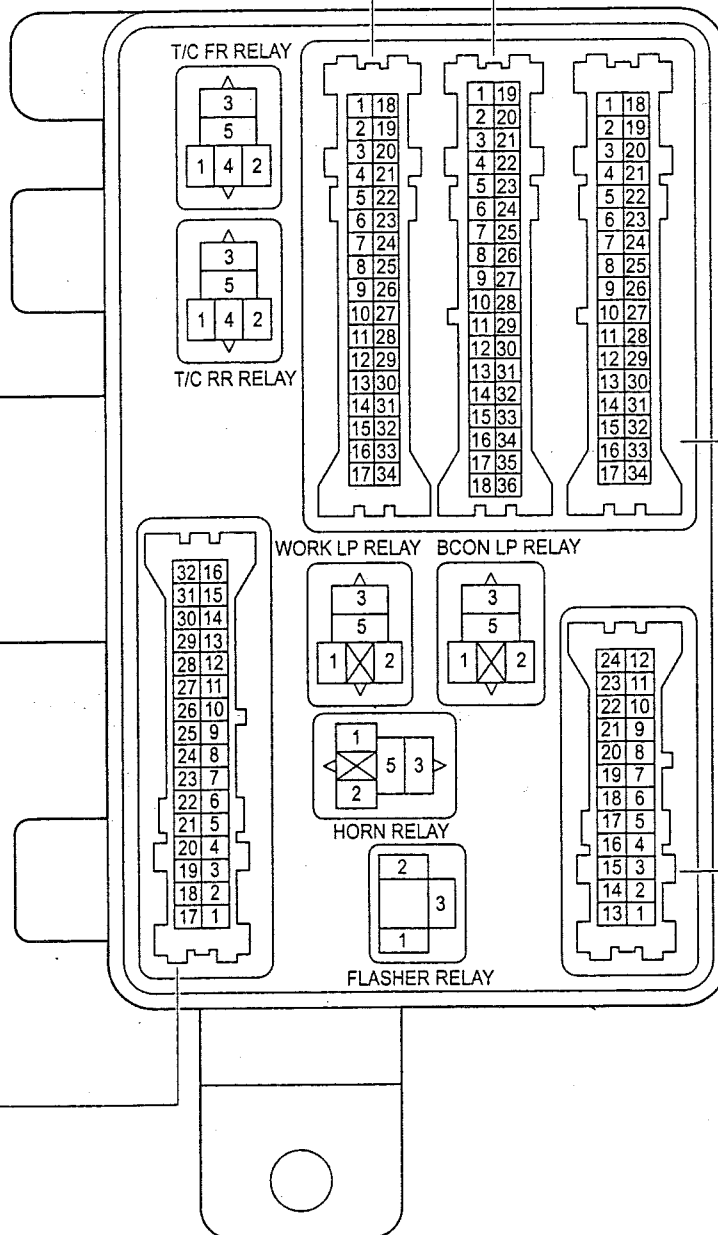


RELAY LOCATIONS

CAN JOINT CONNECTOR : INSIDE OF THE ECU BOX
(INNER CIRCUIT : SEE PAGE E2-29)

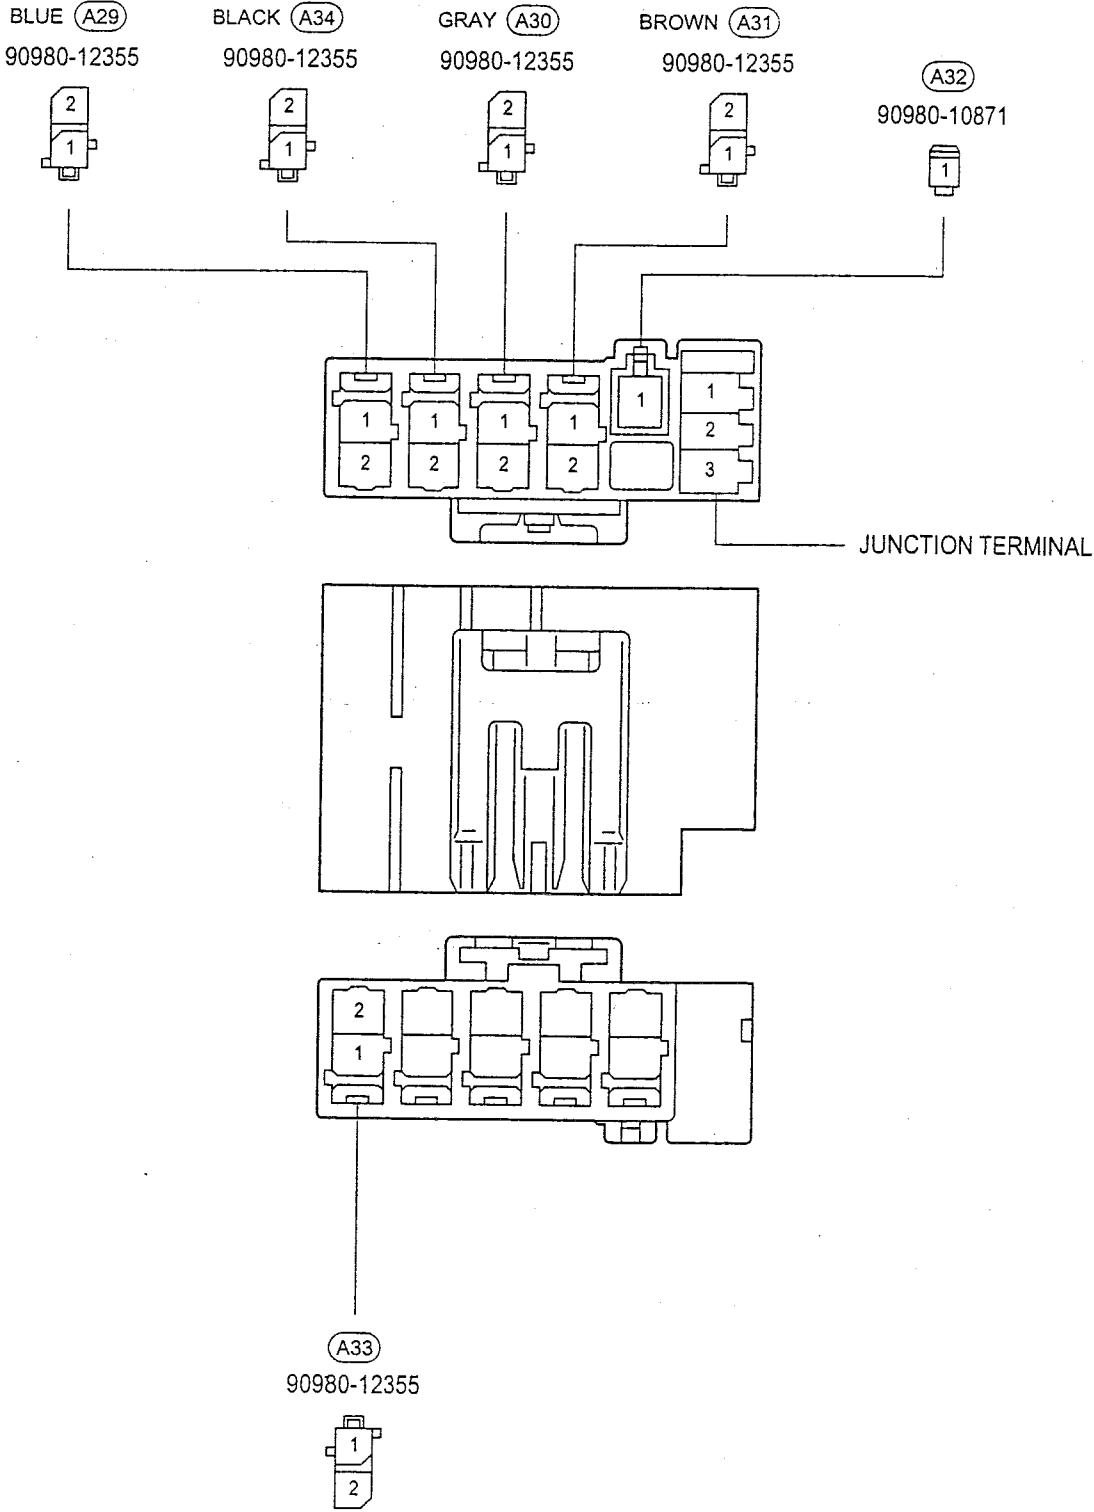


JUNCTION CONNECTOR


BLACK (A65) ----- JUNCTION CONNECTOR (A) ----- BLACK (G73)

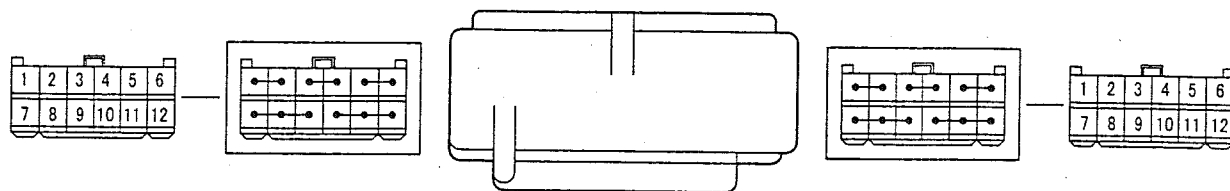


BLUE (A66) ----- JUNCTION CONNECTOR (B) ----- BLUE (G29)

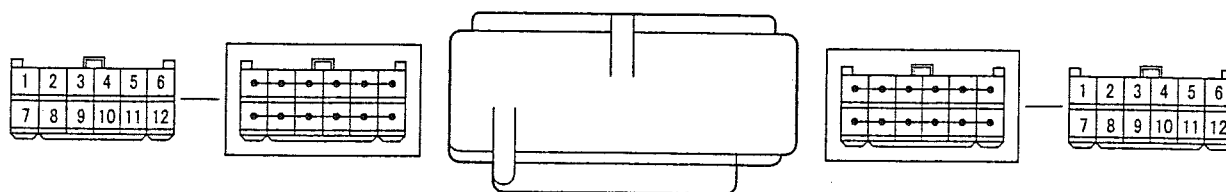


GRAY (G41) JUNCTION CONNECTOR (G)
GRAY (G42) JUNCTION CONNECTOR (H)

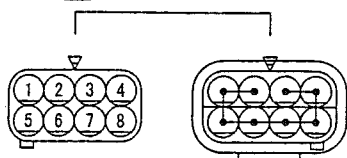

GRAY (A27) JUNCTION CONNECTOR
GRAY (G43) JUNCTION CONNECTOR (E)

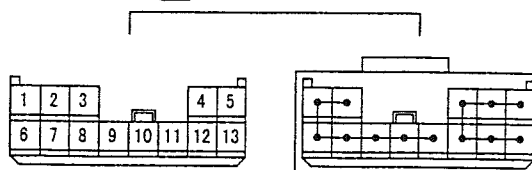


(A64) JUNCTION CONNECTOR (J)

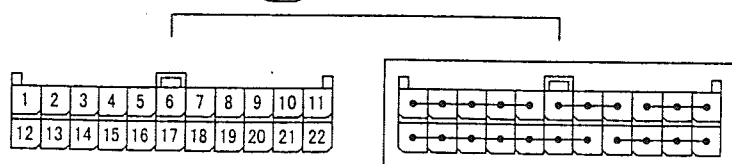


RELAY LOCATIONS

[FUSIBLE LINK BLOCK ASSY INNER CIRCUIT]

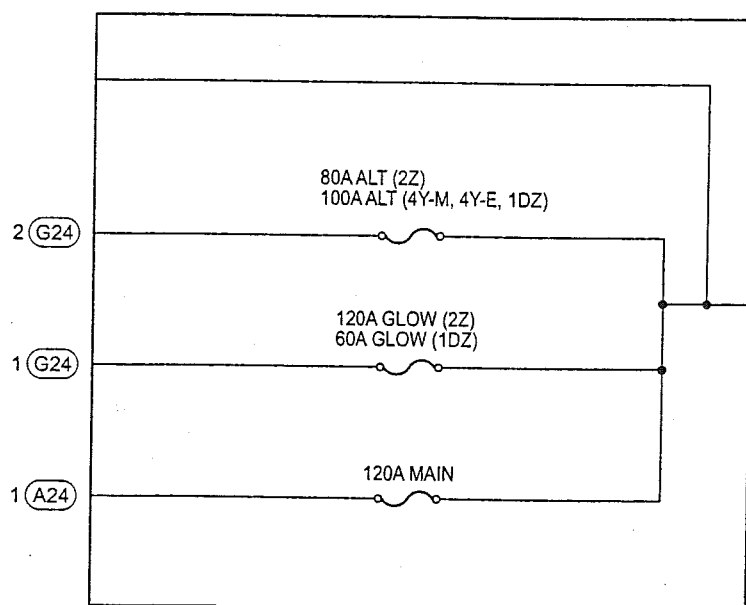


[J/B INNER CIRCUIT (1/3)]

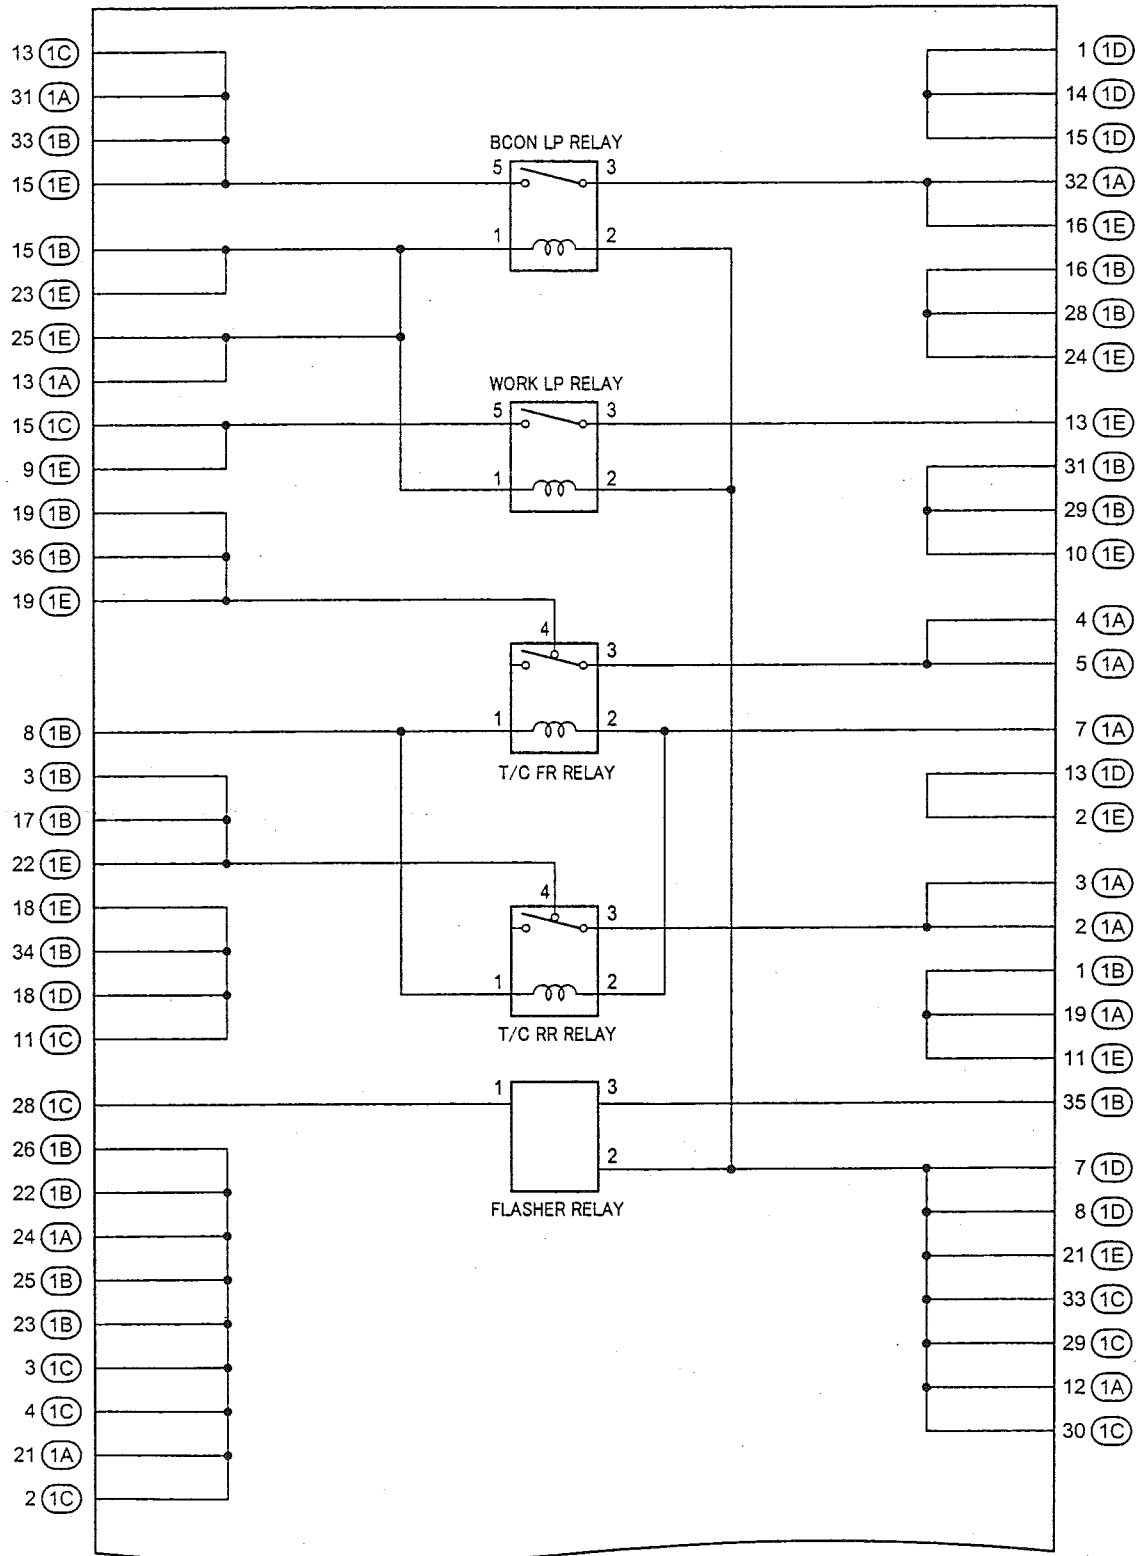


RELAY LOCATIONS


[J/B INNER CIRCUIT (2/3)]

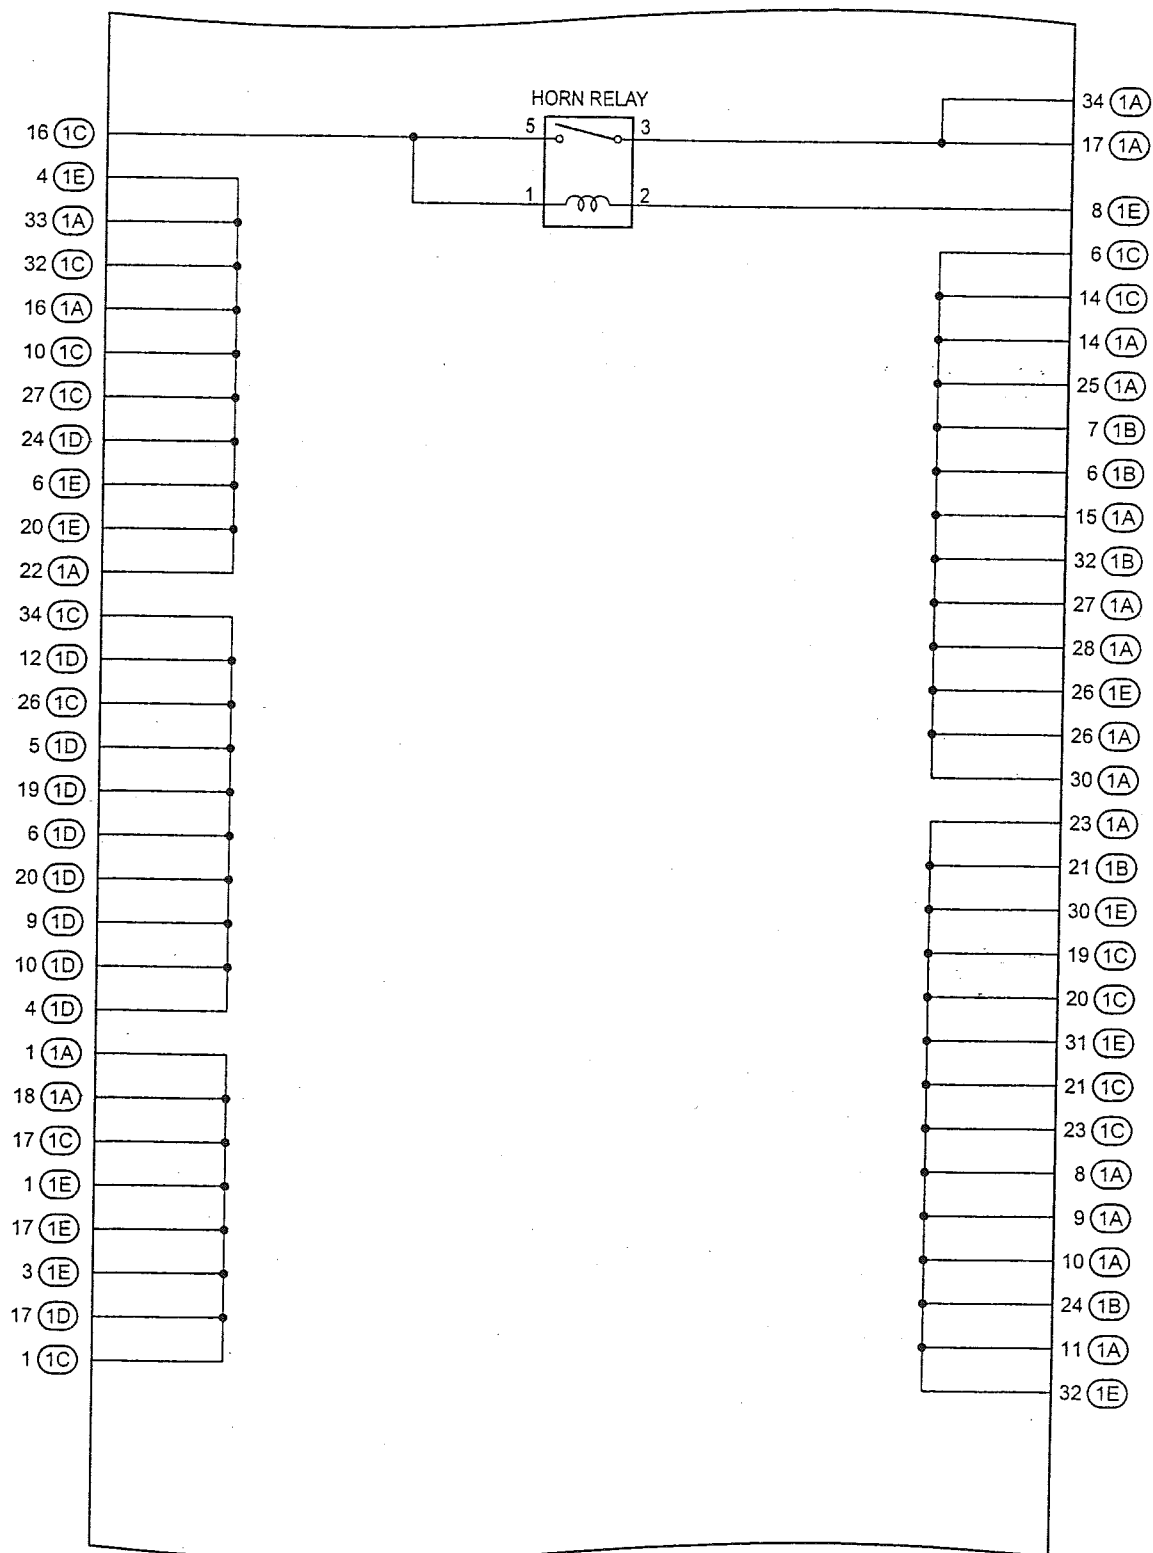

[J/B INNER CIRCUIT (3/3)]

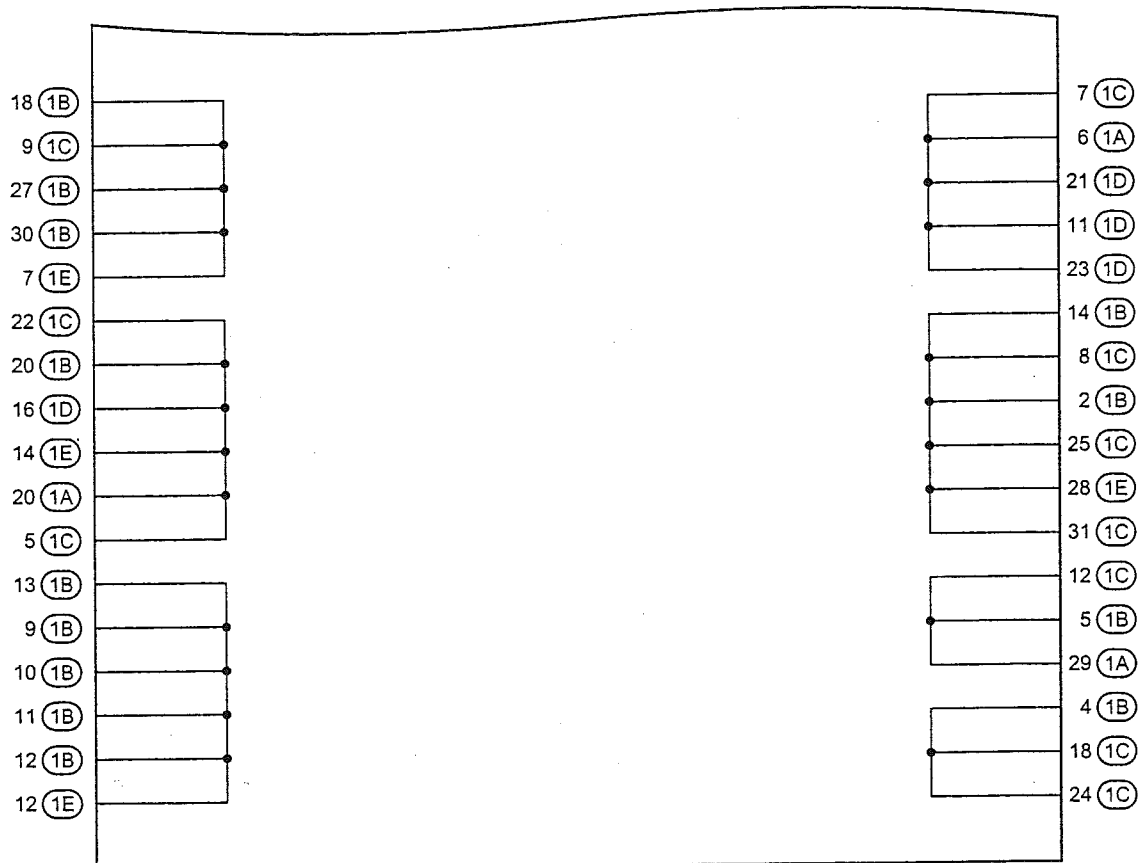

[CAN JOINT CONNECTOR INNER CIRCUIT]

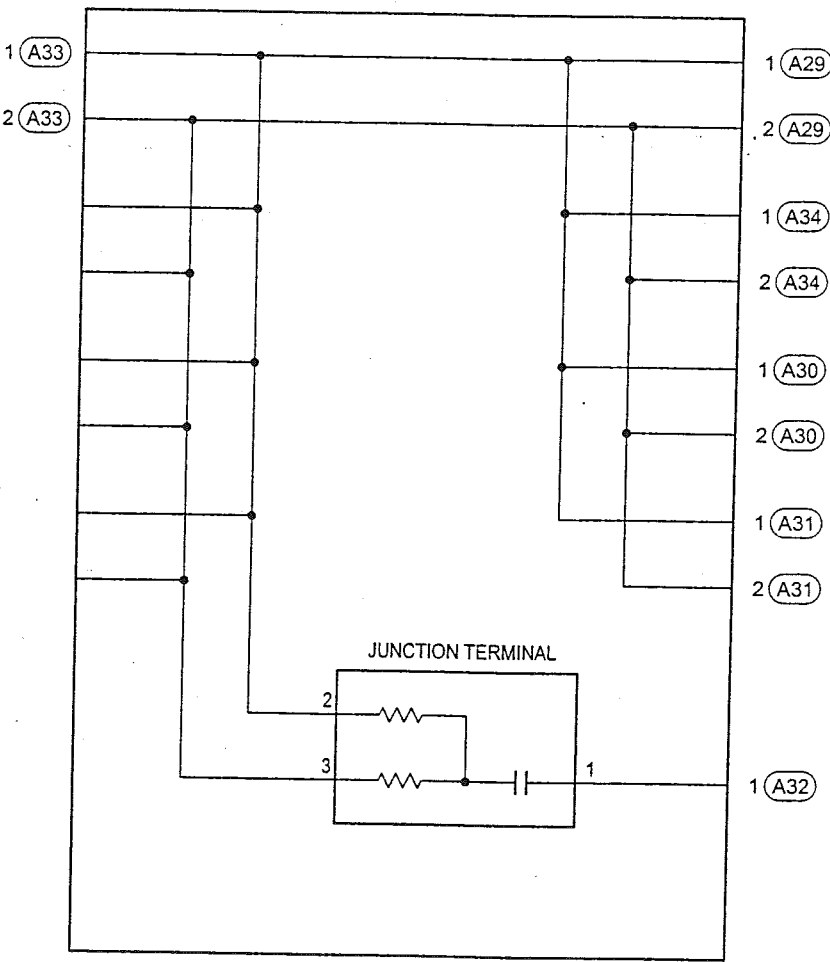


MEMO

CHAPTER 3 SYSTEM CIRCUITS

POWER SOURCE	
POWER SOURCE	E3-1
CHARGING	E3-4
STARTING	E3-6
ENGINE	
IGNITION	E3-8
FUEL	E3-10
ENGINE CONTROL (4Y-E)	E3-16
GLOW	E3-20
INTAKE HEATER	E3-24
DPF-2	E3-28
ASC	E3-30
LPG SYSTEM (4Y-M)	E3-34
LPG WARNING SYSTEM (4Y-E)	E3-36
CHASSIS	
POWER SHIFT TRANSMISSION	E3-38
WET BRAKE	E3-40
BODY	
SAS/OPS SYSTEM	E3-42
OPS SYSTEM	E3-46
MINI LEVER	E3-50
DIAG	E3-52
REAR WARNING LAMP	E3-54
STROBE LIGHT	E3-56
INSTRUMENT PANEL	
COMBINATION METER	E3-58
SPEED METER	E3-62
MULTI DISPLAY	E3-64
FRONT WIPER & WASHER	E3-66
REAR WIPER & WASHER	E3-68
HORN	E3-70
LIGHTING SYSTEM	
HEAD LAMP	E3-72
TURN SIGNAL LAMP	E3-74
CLEARANCE LAMP	E3-76
BACK UP LAMP BUZZER	E3-78
STOP LAMP	E3-80
HEATER SYSTEM	
HEATER	E3-82
COMMUNICATION SYSTEM	
CAN	E3-84
OTHER	
DOME LAMP	E3-86
EARTH TO EARTH	E3-88

POWER SOURCE

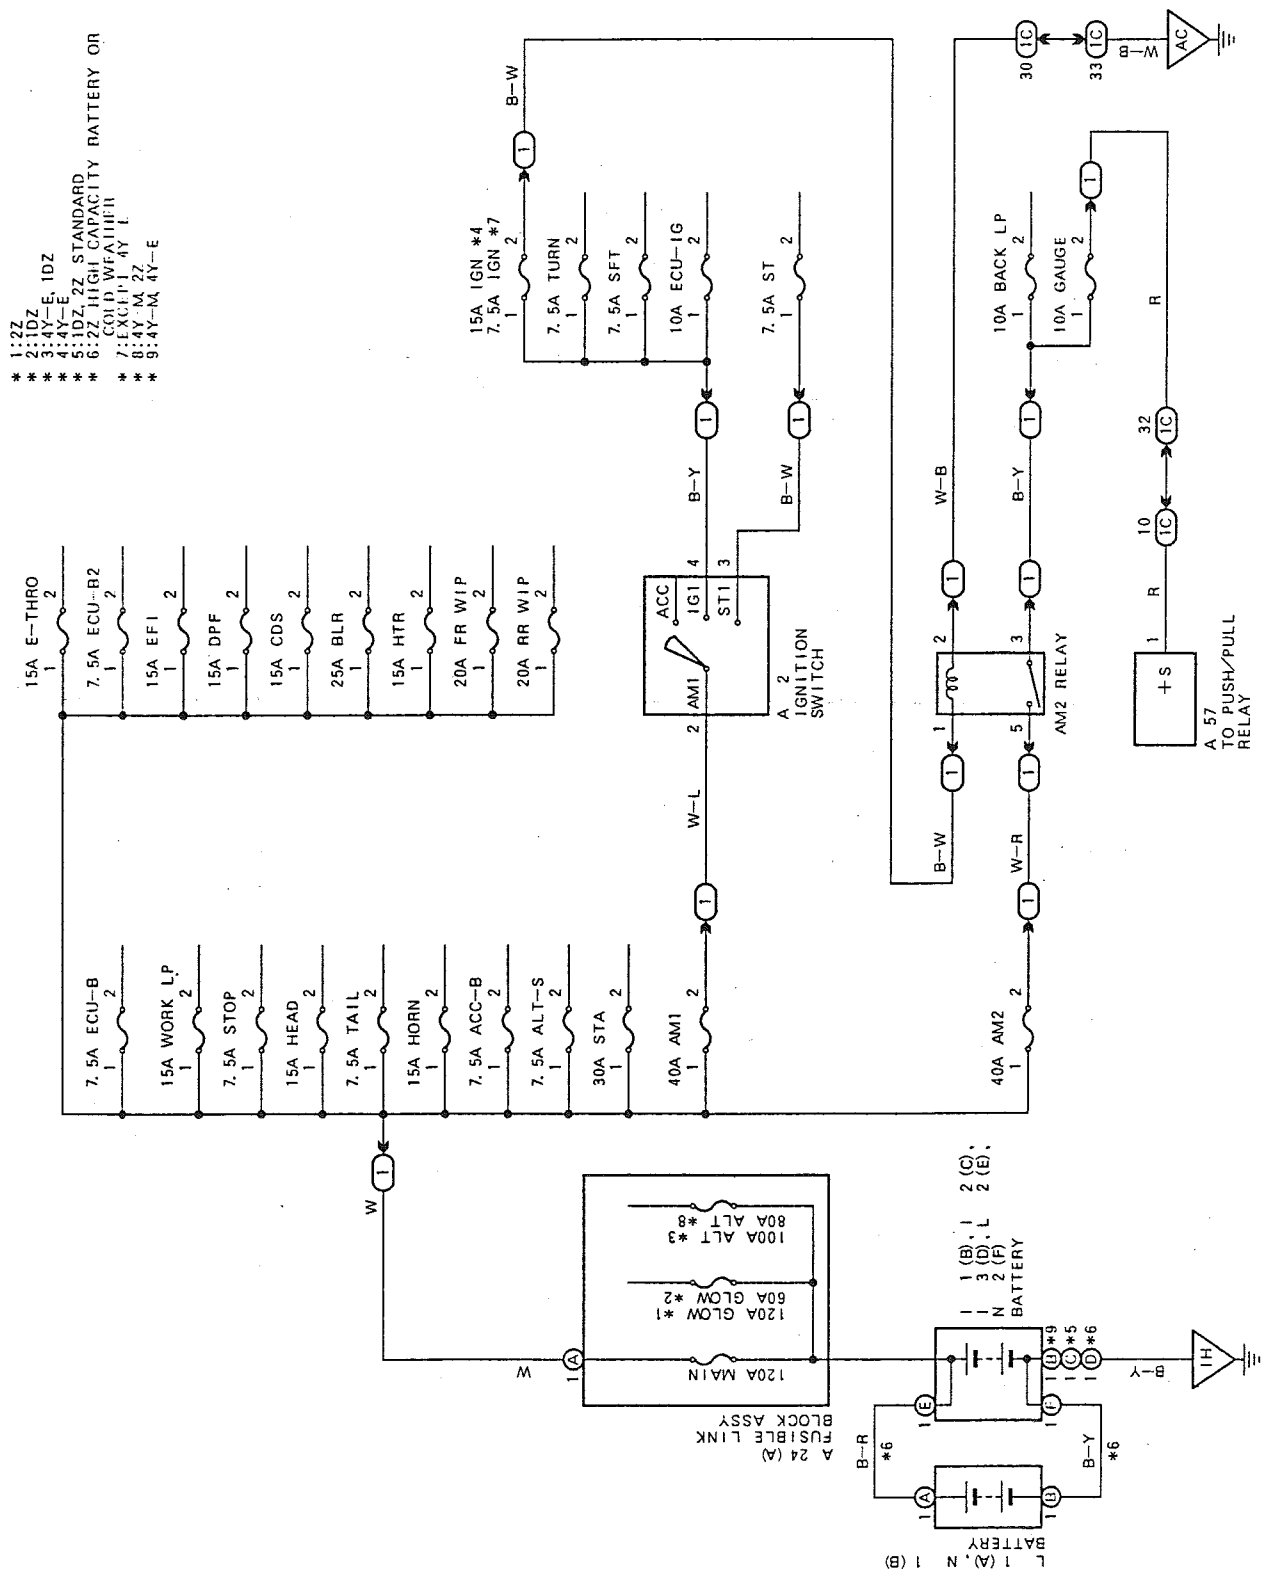

POWER SOURCE

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
A 2	E2-10	I 1	E2-2,4	L 1	E2-8	N 2	E2-8
A 24	E2-12	I 2	E2-6	L 2	E2-8		
A 57	E2-12	I 3	E2-8	N 1	E2-8		


RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B

EARTH

Code	See Page	Name
AC	E2-12	FRONT PLATE LEFT OUTSIDE EARTH
IH	E2-2,4,6,8	REAR PILLER LEFT UNDER EARTH

* 1: 4V-E, 1DZ
 * 2: 4V-M, 2Z
 * 3: 4V-M, 1DZ, 2Z
 * 4: 4V-E

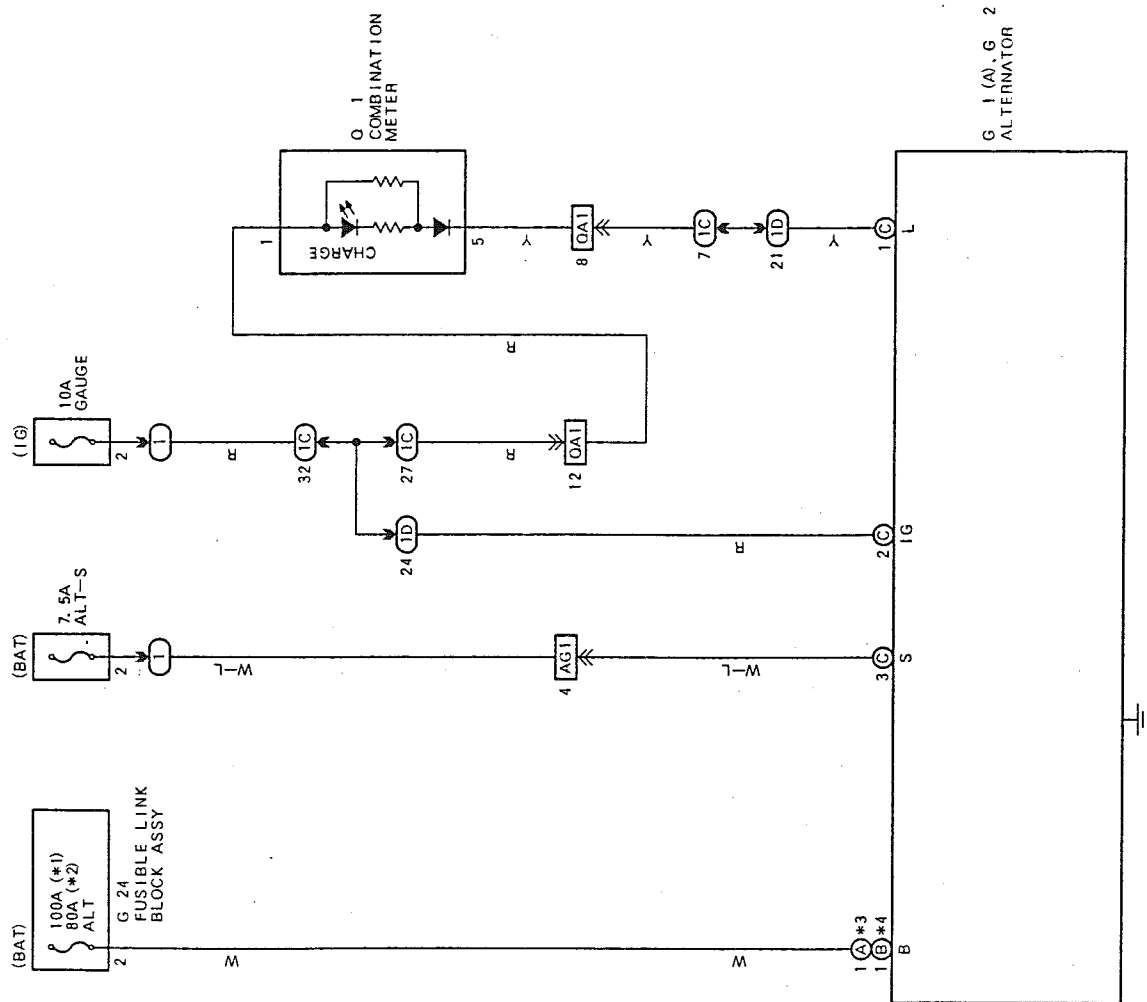

CHARGING

PARTS

Code	See Page	Code	See Page	Code	See Page	Code	See Page
G 1	E2-2,6,8	G 4	E2-2,4,6,8	Q 1	E2-10		
G 2	E2-4	G 24	E2-2,4,6,8,20				

RELAY BLOCK , JUNCTION BLOCK

Code	See Page	Relay Block Name or Joining Wire Harness to J/B
1	E2-12,21	ENGINE ROOM R/B
1C	E2-12,22	BODY MAIN WIRE to J/B
1D	E2-12,22	ENGINE WIRE to J/B

WIRE TO WIRE

Code	See Page	Joining Wire Harness and Wire Harness
AG1	E2-12	BODY MAIN WIRE to ENGINE WIRE
QA1	E2-10	INSTRUMENT PANEL WIRE to BODY MAIN WIRE