


Key	Part Number	Qty	Description
65	02250228-036	6	CABLE STRAP
66		6	RIVET Ø3,5
67	02250227-763	1	CABINET LEFT
68		4	BOLT M6x15
69	02250226-124	1	CABINET TOP
70	02250227-953	1	CABLE GLAND PG11
71	02250227-973	1	POWER CABLE
72		2	1 / 4" NIPPLE
73	02250226-360	1	SOLENOID VALVE COIL
74		3	1 / 4" - 6mm FITTINGS

REFERENCE TABLE		230V/1Ph/60Hz	230V/1Ph/50Hz	QTY
		02250225-554	02250225-580	
5	FAN MOTOR	02250222-524	02250226-366	1
11	COMPRESSOR	02250206-968	02250206-967	1
12	COMPRESSOR ELECTRICAL BOX	02250207-440	02250226-308	
13	COMPRESSOR START CAPACITOR	02250226-320	02250226-319	1
22	COMPRESSOR OVERLOAD PROTECTOR	02250226-313	02250226-312	1
24	COMPRESSOR START RELAY	02250226-327	02250226-326	1

8.7 ED/SPARE PARTS—RF-A-125

Key	Part Number	Qty	Description	Key	Part Number	Qty	Description
1	02250226-103	1	CABINET BASE	33	02250221-199	1	ELBOW 2
2	02250226-184	1	CONDENSER	34	02250228-078	1	ROTOLOCK ADAPTOR2
3	02250226-249	1	FAN BLADE	35	02250226-209	1	EXPANSION VALVE
4	02250226-247	1	FAN GRILL	36	02250207-668	1	DRYER-DEHYDRATOR
5	SEE. REF TABLE	1	FAN MOTOR	37		1	COPPER T2
6		4	BOLT M6x30	38	02250228-094	1	ADAPTOR T
7		4	NUT M4	39	02250222-539	1	HIGH PRESSURE SWITCH
8		1	BOLT M4x14mm	40	02250222-534	1	FAN ON/OFF SWITCH
9		1	WASHER Ø20xØ4,3x1,5	41	02250226-261	1	CONNECTION CIT1
10		30	BOLT M4x12	42		5	ORING
11	SEE. REF TABLE	1	COMPRESSOR	43	02250226-216	1	COMPRESSED AIR FILTER KIT (X)
12	SEE. REF TABLE	1	COMPRESSOR ELECTRICAL BOX	44	02250226-222	1	COMPRESSED AIR FILTER KIT (Y)
13	SEE. REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR	45	02250193-569	1	COMPRESSED AIR FILTER ELEMENT (X)
14	02250228-092	1	SETTING THE CONNECTION	46	02250193-591	1	COMPRESSED AIR FILTER ELEMENT (Y)
15	02250226-250	1	ROTOLOCK ADAPTOR1	47	02250228-016	5	COUPLING CLAMP
16	02250207-887	1	BY-PASS VALVE	48	02250228-008	2	CONNECTION CIT2
17		2	COPPER T1	49	02250226-109	1	CABINET INSIDE
18		4	BOLT M8x40	50	02250226-147	1	CABINET REAR TOP
19		4	WASHER Ø22xØ8,5x2,5	51		8	BOLT M6x10
20	02250228-403	1	CHECK VALVE	52	02250226-284	1	BALL VALVE
21	02250226-356	1	ELECTRICAL BOX LOWER SUPPORT	53		2	REDUCTION 1/2" - 1/4"
22	SEE. REF TABLE	1	COMPRESSOR START CAPACITOR	54	02250228-067	1	GASKET FOR DRAIN
23	02250226-351	1	THERMINAL BLOCK	55	02250226-142	1	CONTROLLER PANEL
24	SEE. REF TABLE	1	COMPRESSOR START RELAY	56	02250226-359	1	PLASTIC CONTROL PANEL
25		1	90° 1/4" - 6mm ELBOW	57	02250226-353	1	DIGITAL CONTROLLER
26		2	RIVET Ø4	58		1	REDUCTION 3/8" - 1/4"
27	02250222-484	8	CABINET STUD AND NUT	59		1	1/4" T CONNECTOR
28	02250226-195	1	HEAT EXCHANGER	60		4	RIVET NUT M8
29	02250226-200	1	INSULATION OF HEAT EXCHANGER	61	02250226-162	1	CABINET RIGHT
30	02250226-253	1	ROTOLOCK ADAPTOR2	62	02250222-059	4	CABINET HANDLE
31	02250222-783	1	SOLENOID VALVE	63	02250227-931	2	CABINET STRIPPING
32	02250221-199	1	DRAIN BALL VALVE	64	02250222-070	8	CABINET FASTENER

8.7 ED/SPARE PARTS—RF-A-125

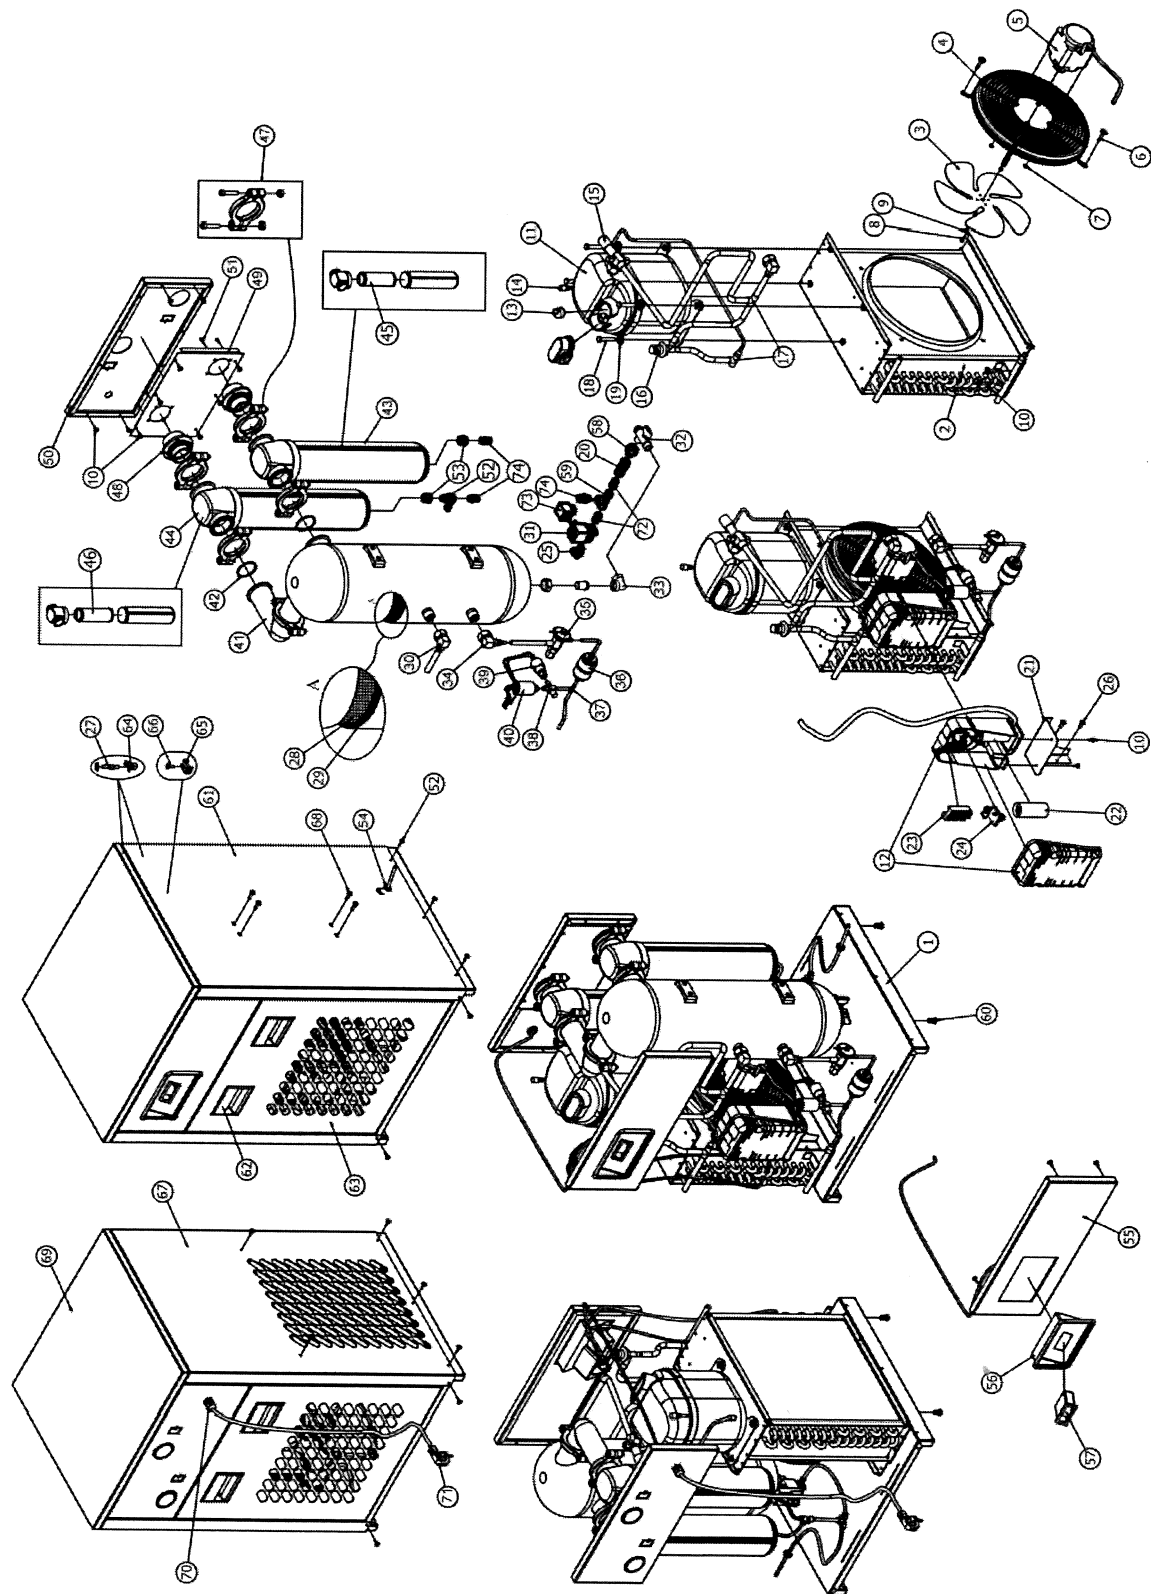


REFERENCE TABLE		230V/1Ph/60Hz	230V/1Ph/50Hz	QTY
		02250225-554	02250225-580	
5	FAN MOTOR	02250222-524	02250226-366	1
11	COMPRESSOR	02250226-965	02250226-964	1
13	COMPRESSOR START CAPACITOR	02250226-318	02250226-317	1
14	COMPRESSOR OVERLOAD PROTECTOR	02250227-946	02250226-311	1
15	COMPRESSOR START RELAY	02250226-325	02250226-324	1

8.6 ED/SPARE PARTS—RF-A-100

Key	Part Number	Qty	Description
1	02250226-102	1	CABINET BASE
2	02250226-183	1	CONDENSER
3	02250226-249	1	FAN BLADE
4	02250226-247	1	FAN GRILL
5	SEE REF TABLE	1	FAN MOTOR
6		4	BOLT M6x30
7		4	NUT M4
8		1	BOLT M4x14mm
9		1	WASHER Ø20xØ4,3x1,5
10		9	RIVET Ø3,5
11	SEE REF TABLE	1	COMPRESSOR
12	02250226-335	1	COMPRESSOR ELECTRICAL BOX COVER
13	SEE REF TABLE	1	COMPRESSOR START CAPACITOR
14	SEE REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR
15	SEE REF TABLE	1	COMPRESSOR START RELAY
16		4	BOLT M8x40
17		4	WASHER Ø22xØ8,5x2,5
18	02250226-194	1	HEAT EXCHANGER
19	02250226-199	1	INSULATION OF HEAT EXCHANGER
20	02250226-252	1	ROTOLOCK ADAPTOR2
21	02250222-783	1	SOLENOID VALVE
22	02250221-199	1	DRAIN BALL VALVE
23	02250226-278	1	ELBOW 2
24	02250228-078	1	ROTOLOCK ADAPTOR3
25	02250207-887	1	EXPANSION VALVE
26	02250207-668	1	DRYER-DEHYDRATOR
27		1	COPPER T1
28	02250222-534	1	FAN ON/OFF SWITCH
29	02250228-094	1	ADAPTOR T
30	02250222-539	1	HIGH PRESSURE SWITCH
31	02250226-260	1	CONNECTION CIT1
32	02250226-215	1	COMPRESSED AIR FILTER KIT (X)
33	02250226-221	1	COMPRESSED AIR FILTER KIT (Y)
34	02250226-284	1	BALL VALVE

Key	Part Number	Qty	Description
35	02250228-015	5	COUPLING CLAMP
36		5	ORING
37	02250228-007	2	CONNECTION CIT2
38	02250226-108	1	CABINET INSIDE
39	02250226-146	22	CABINET REAR TOP
40		8	BOLT M4x12
41		2	BOLT M4x8
42	02250222-484	8	CABINET STUD AND NUT
43	02250228-403	1	CHECK VALVE
44	02250228-067	1	GASKET FOR DRAIN
45		1	90° 1 / 4" - 6mm ELBOW
46		2	REDUCTION 1 / 2" - 1 / 4"
47	02250226-141	1	CONTROLLER PANEL
48	02250226-359	1	PLASTIC CONTROL PANEL
49	02250226-353	1	DIGITAL CONTROLLER
50	02250193-567	1	COMPRESSED AIR FILTER ELEMENT (X)
51	02250193-589	1	COMPRESSED AIR FILTER ELEMENT (Y)
52		1	RIVET NUT M8
53	02250227-762	4	CABINET LEFT
54	02250222-059	4	CABINET HANDLE
55	02250227-930	2	CABINET STRIPPING
56	02250222-070	8	CABINET FASTENER
57	02250228-036	1	CABLE STRAP
58	02250226-161	1	CABINET RIGHT
59	02250226-123	4	CABINET TOP
60		1	BOLT M6x15
61	02250227-953	1	CABLE GLAND PG11
62	02250227-973	1	POWER CABLE
63		1	REDUCTION 3/8" - 1/4"
64		1	1 / 4" T CONNECTOR
65		2	1 / 4" NIPPLE
66	02250226-360	1	SOLENOID VALVE COIL
67		3	1 / 4" - 6mm FITTINGS

8.6 ED/SPARE PARTS—RF-A-100

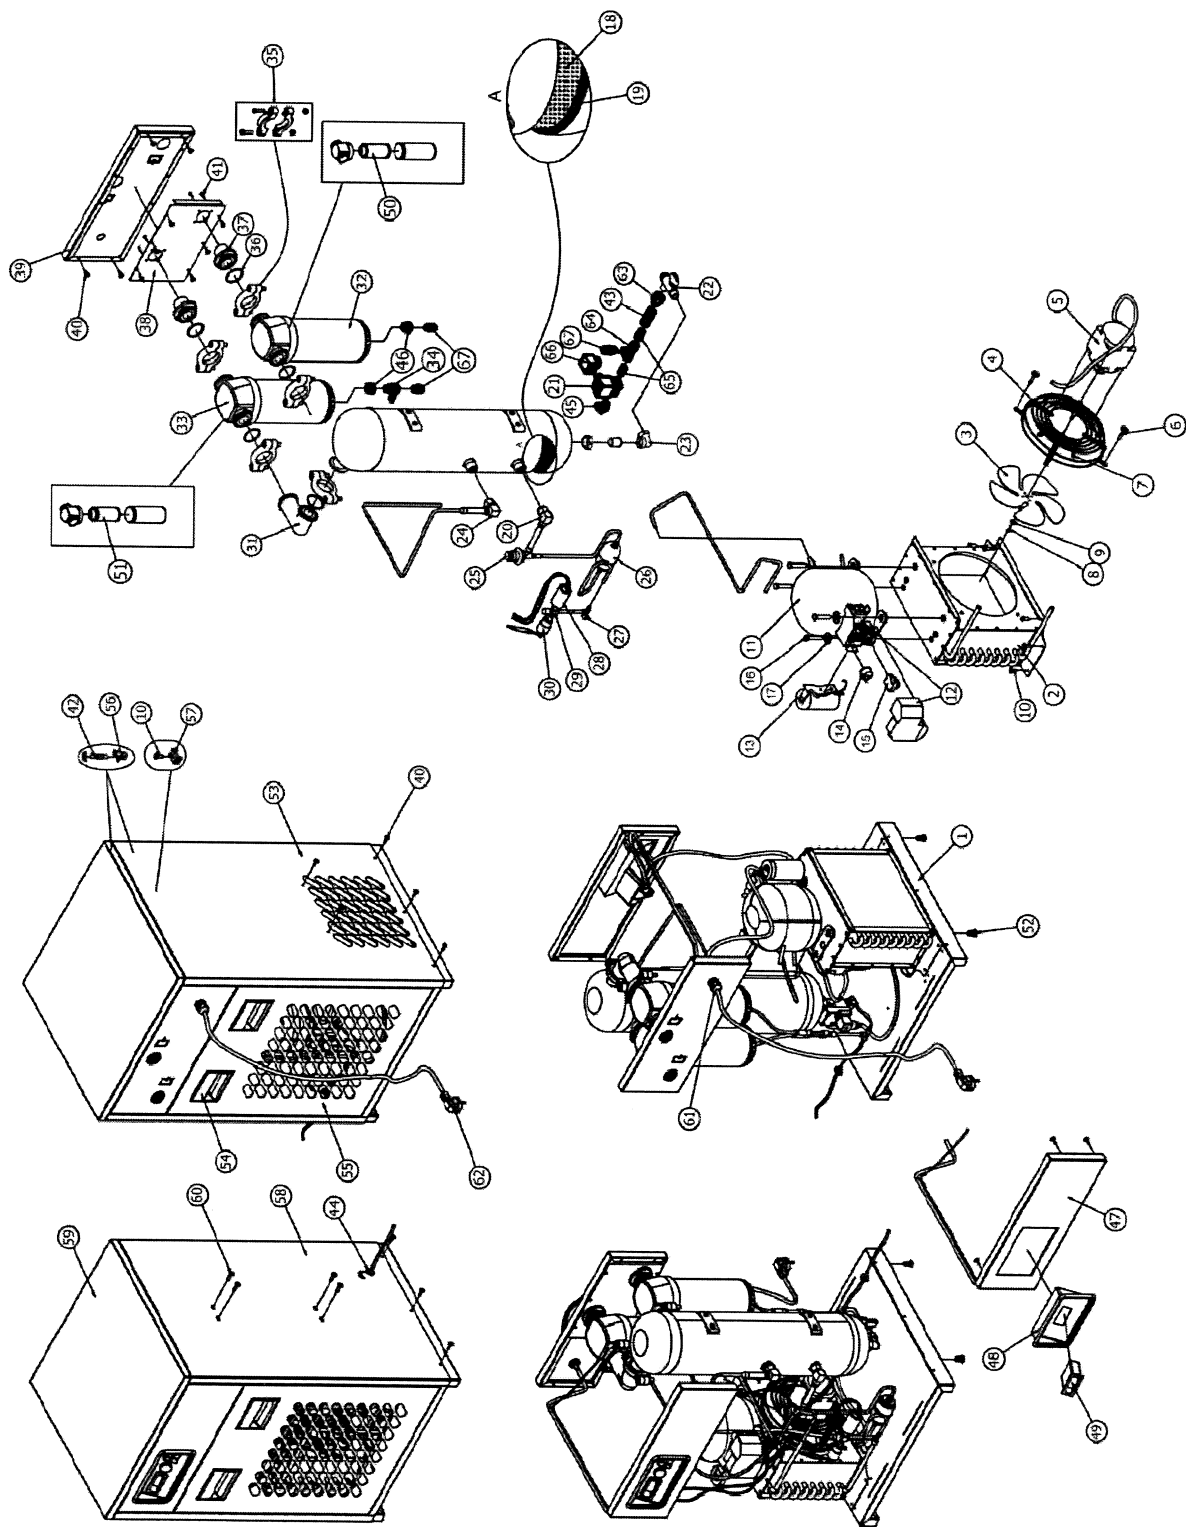


REFERENCE TABLE		230V/1Ph/60Hz	230V/1Ph/50Hz
		02250225-553	02250225-579
5	FAN MOTOR	02250222-524	02250226-366
11	COMPRESSOR	02250226-080	02250226-079
13	COMPRESSOR START CAPACITOR	02250226-341	02250226-342
14	COMPRESSOR OVERLOAD PROTECTOR	02250226-364	02250226-363
15	COMPRESSOR START RELAY	02250226-347	02250226-346

8.5 ED/SPARE PARTS—RF-A-75

Key	Part Number	Qty	Description
1	02250226-102	1	CABINET BASE
2	02250226-183	1	CONDENSER
3	02250226-249	1	FAN BLADE
4	02250226-247	1	FAN GRILL
5	SEE REF TABLE	1	FAN MOTOR
6		4	BOLT M6x30
7		4	NUT M4
8		1	BOLT M4x14mm
9		1	WASHER Ø20xØ4,3x1,5
10		9	RIVET Ø3,5
11	SEE REF TABLE	1	COMPRESSOR
12	02250226-334	1	COMPRESSOR ELECTRICAL BOX COVER
13	SEE REF TABLE	1	COMPRESSOR START CAPACITOR
14	SEE REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR
15	SEE REF TABLE	1	COMPRESSOR START RELAY
16		4	BOLT M8x40
17		4	WASHER Ø22xØ8,5x2,5
18	02250226-194	1	HEAT EXCHANGER
19	02250226-199	1	INSULATION OF HEAT EXCHANGER
20	02250226-252	1	ROTOLOCK ADAPTOR2
21	02250222-783	1	SOLENOID VALVE
22	02250221-199	1	DRAIN BALL VALVE
23	02250226-278	1	ELBOW 2
24	02250228-078	1	ROTOLOCK ADAPTOR3
25	02250207-887	1	EXPANSION VALVE
26	02250207-668	1	DRYER-DEHYDRATOR
27		1	COPPER T1
28	02250222-534	1	FAN ON/OFF SWITCH
29	02250228-094	1	ADAPTOR T
30	02250222-539	1	HIGH PRESSURE SWITCH
31	02250226-260	1	CONNECTION CIT1
32	02250226-215	1	COMPRESSED AIR FILTER KIT (X)
33	02250226-221	1	COMPRESSED AIR FILTER KIT (Y)
34	02250226-284	1	BALL VALVE

Key	Part Number	Qty	Description
35	02250228-015	5	COUPLING CLAMP
36		5	ORING
37	02250228-007	2	CONNECTION CIT2
38	02250226-108	1	CABINET INSIDE
39	02250226-146	22	CABINET REAR TOP
40		8	BOLT M4x12
41		2	BOLT M4x8
42	02250222-484	8	CABINET STUD AND NUT
43	02250228-403	1	CHECK VALVE
44	02250228-067	1	GASKET FOR DRAIN
45		1	90° 1 / 4" - 6mm ELBOW
46		2	REDUCTION 1 / 2" - 1 / 4"
47	02250226-141	1	CONTROLLER PANEL
48	02250226-359	1	PLASTIC CONTROL PANEL
49	02250226-353	1	DIGITAL CONTROLLER
50	02250193-567	1	COMPRESSED AIR FILTER ELEMENT (X)
51	02250193-589	1	COMPRESSED AIR FILTER ELEMENT (Y)
52		1	RIVET NUT M8
53	02250227-762	4	CABINET LEFT
54	02250222-059	4	CABINET HANDLE
55	02250227-930	2	CABINET STRIPPING
56	02250222-070	8	CABINET FASTENER
57	02250228-036	1	CABLE STRAP
58	02250226-161	1	CABINET RIGHT
59	02250226-123	4	CABINET TOP
60		1	BOLT M6x15
61	02250227-953	1	CABLE GLAND PG11
62	02250227-973	1	POWER CABLE
63		1	REDUCTION 3/8" - 1/4"
64		1	1 / 4" T CONNECTOR
65		2	1 / 4" NIPPLE
66	02250226-360	1	SOLENOID VALVE COIL
67		3	1 / 4" - 6mm FITTINGS

8.5 ED/SPARE PARTS—RF-A-75

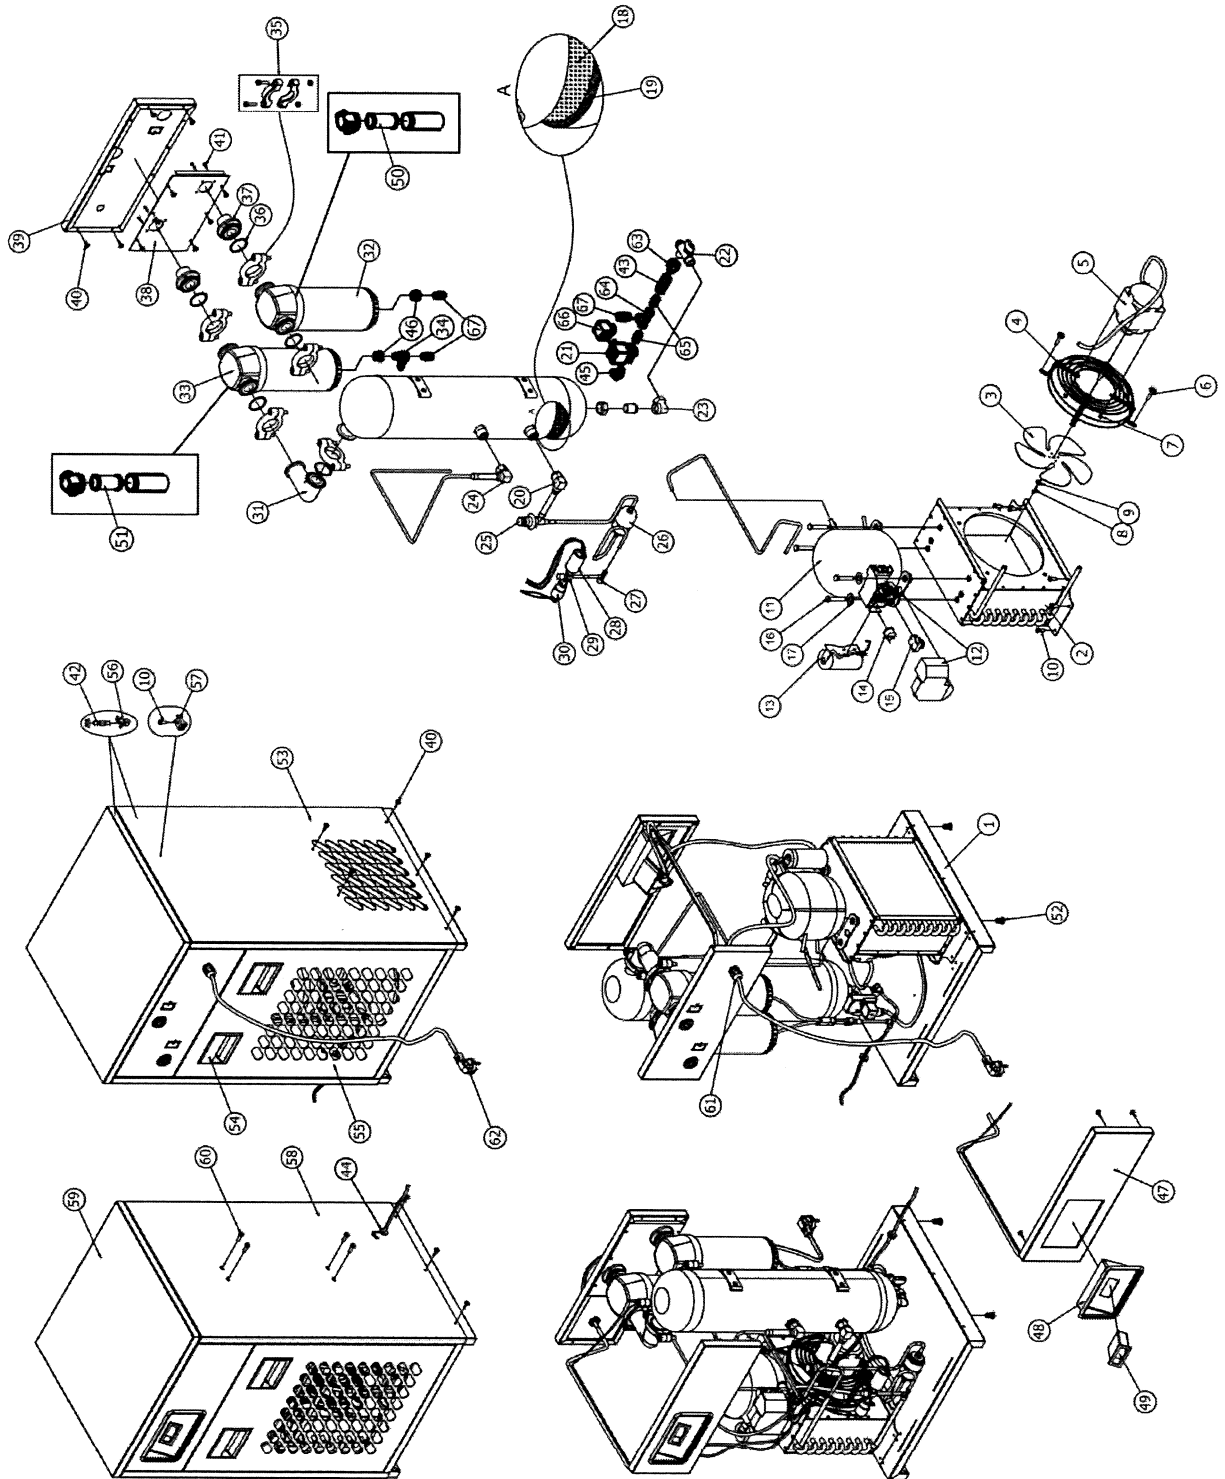


REFERENCE TABLE		230V/1Ph/60Hz	230V/1Ph/50Hz	QTY
		02250225-552	02250225-578	
5	FAN MOTOR	02250226-328	02250226-365	1
11	COMPRESSOR	02250206-958	02250206-957	1
13	COMPRESSOR START CAPACITOR	02250226-316	02250226-315	1
14	COMPRESSOR OVERLOAD PROTECTOR	02250226-310	02250226-310	1
15	COMPRESSOR START RELAY	02250226-323	02250226-322	1

8.4 ED/SPARE PARTS—RF-A-50

Key	Part Number	Qty	Description	Key	Part Number	Qty	Description
1	02250226-102	1	CABINET BASE	35	02250228-015	5	COUPLING CLAMP
2	02250226-182	1	CONDENSER	36		5	ORING
3	02250226-248	1	FAN BLADE	37	02250228-007	2	CONNECTION CIT2
4	02250226-246	1	FAN GRILL	38	02250226-108	1	CABINET INSIDE
5	SEE REF TABLE	1	FAN MOTOR	39	02250226-146	22	CABINET REAR TOP
6		4	BOLT M6x30	40		8	BOLT M4x12
7		4	NUT M4	41		2	BOLT M4x8
8		1	BOLT M4x14mm	42	02250222-484	8	CABINET STUD AND NUT
9		1	WASHER Ø20xØ4,3x1,5	43	02250228-403	1	CHECK VALVE
10		9	RIVET Ø3,5	44	02250228-067	1	GASKET FOR DRAIN
11	SEE REF TABLE	1	COMPRESSOR	45		1	90° 1 / 4" - 6mm ELBOW
12	02250226-333	1	COMPRESSOR ELECTRICAL BOX COVER	46		2	REDUCTION 1 / 2" - 1 / 4"
13	SEE REF TABLE	1	COMPRESSOR START CAPACITOR	47	02250226-141	1	CONTROLLER PANEL
14	SEE REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR	48	02250226-359	1	PLASTIC CONTROL PANEL
15	SEE REF TABLE	1	COMPRESSOR START RELAY	49	02250226-353	1	DIGITAL CONTROLLER
16		4	BOLT M8x40	50	02250193-567	1	COMPRESSED AIR FILTER ELEMENT (X)
17		4	WASHER Ø22xØ8,5x2,5	51	02250193-589	1	COMPRESSED AIR FILTER ELEMENT (Y)
18	02250226-194	1	HEAT EXCHANGER	52		1	RIVET NUT M8
19	02250226-199	1	INSULATION OF HEAT EXCHANGER	53	02250227-762	4	CABINET LEFT
20	02250226-252	1	ROTOLOCK ADAPTOR2	54	02250222-059	4	CABINET HANDLE
21	02250222-783	1	SOLENOID VALVE	55	02250227-930	2	CABINET STRIPPING
22	02250221-199	1	DRAIN BALL VALVE	56	02250222-070	8	CABINET FASTENER
23	02250226-278	1	ELBOW 2	57	02250228-036	1	CABLE STRAP
24	02250228-078	1	ROTOLOCK ADAPTOR3	58	02250226-161	1	CABINET RIGHT
25	02250207-887	1	EXPANSION VALVE	59	02250226-123	4	CABINET TOP
26	02250207-668	1	DRYER-DEHYDRATOR	60		1	BOLT M6x15
27		1	COPPER T1	61	02250227-953	1	CABLE GLAND PG11
28	02250222-534	1	FAN ON/OFF SWITCH	62	02250227-973	1	POWER CABLE
29	02250228-094	1	ADAPTOR T	63		1	REDUCTION 3/8" - 1/4"
30	02250222-539	1	HIGH PRESSURE SWITCH	64		1	1 / 4" T CONNECTOR
31	02250226-260	1	CONNECTION CIT1	65		2	1 / 4" NIPPLE
32	02250226-215	1	COMPRESSED AIR FILTER KIT (X)	66	02250226-360	1	SOLENOID VALVE COIL
33	02250226-221	1	COMPRESSED AIR FILTER KIT (Y)	67		3	1 / 4" - 6mm FITTINGS
34	02250226-284	1	BALL VALVE				

8.4 ED/SPARE PARTS—RF-A-50

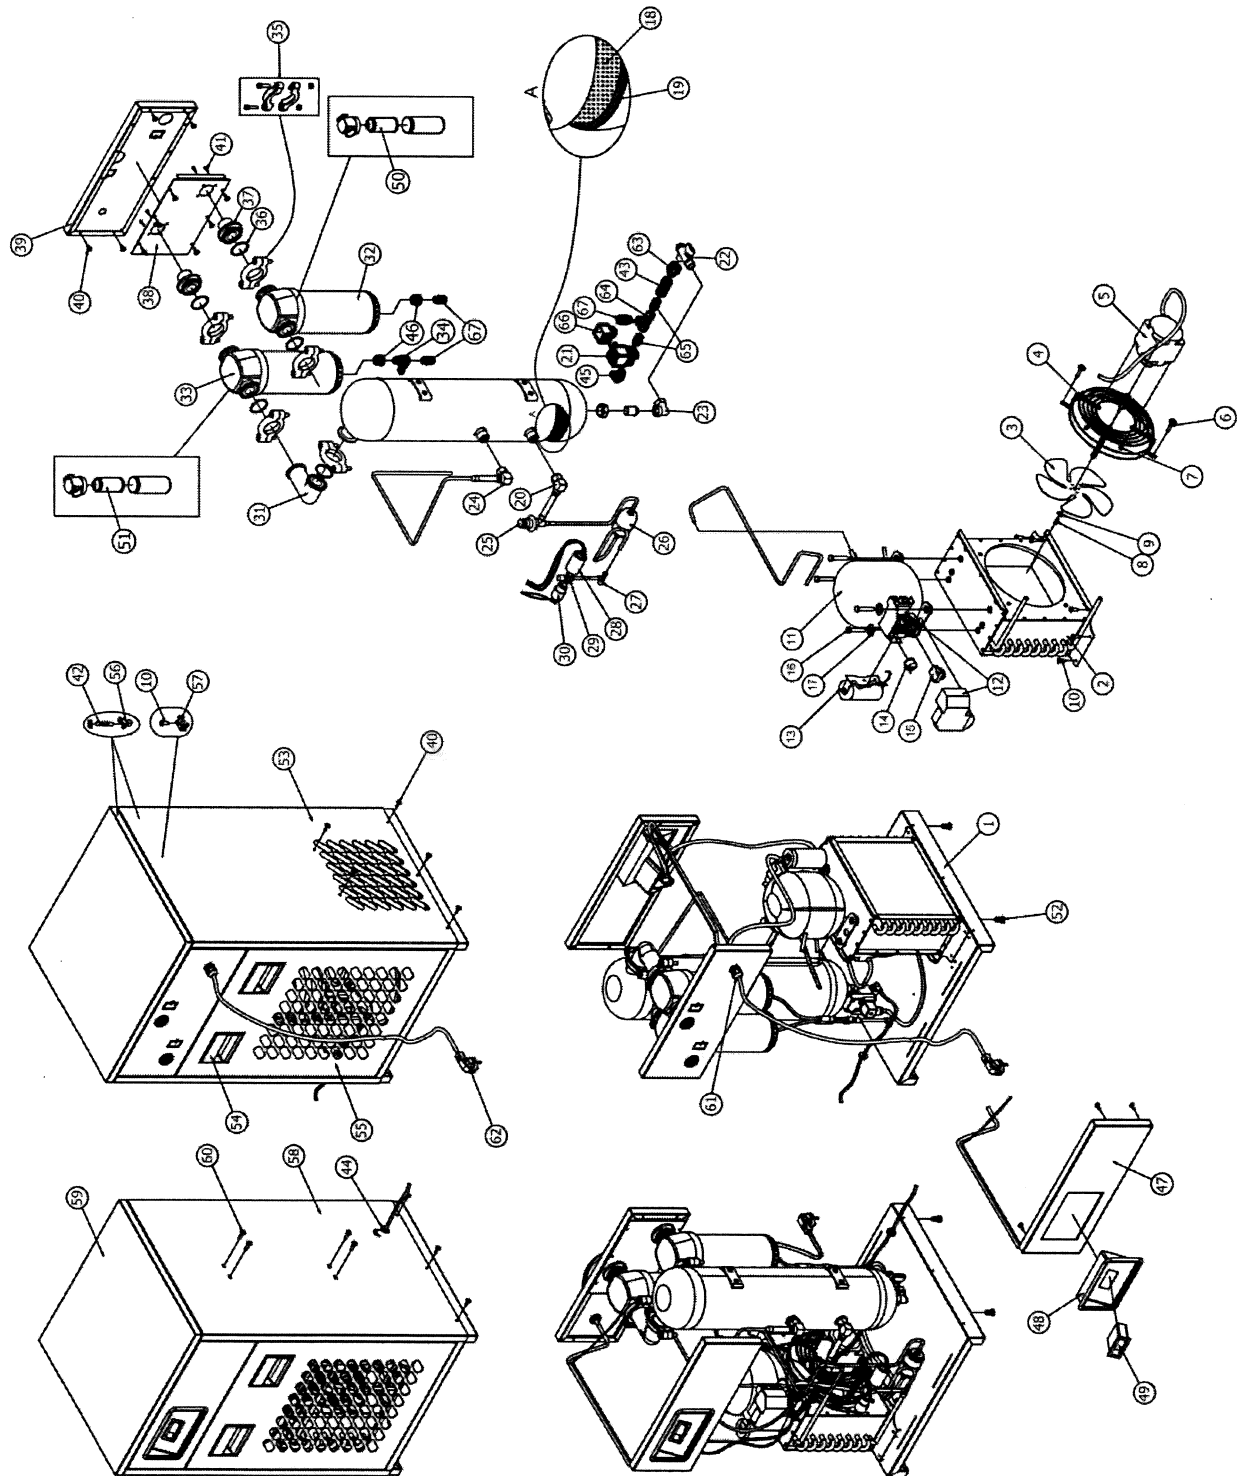


REFERENCE TABLE		230V/1Ph/60Hz	230V/1Ph/50Hz	QTY
		02250225-551	02250225-577	
5	FAN MOTOR	02250226-328	02250226-365	1
21	COMPRESSOR	02250206-958	02250206-957	1
23	COMPRESSOR START RELAY	02250226-323	02250226-322	1
24	COMPRESSOR OVERLOAD PROTECTOR	02250226-310	02250226-310	1
25	COMPRESSOR START CAPACITOR	02250226-316	02250226-315	1

8.3 ED/SPARE PARTS—RF-A-30

Key	Part Number	Qty	Description
1	02250226-101	1	CABINET BASE
2	02250226-180	1	CONDENSER
3	02250226-248	1	FAN BLADE
4	02250226-246	1	FAN GRILL
5	SEE REF TABLE	1	FAN MOTOR
6		8	BOLT M6x30mm
7		4	NUT M4
8		1	BOLT M4x14mm
9		1	WASHER 20x4,3x1,5
10	02250226-192	1	HEAT EXCHANGER
11	02250226-198	1	INSULATION OF HEAT EXCHANGER
12	02250226-278	1	ELBOW 2
13	02250221-199	1	DRAIN BALL VALVE
14		1	REDUCTION 3/8" - 1/4"
15	02250228-403	1	CHECK VALVE
16		1	1 / 4" T CONNECTOR
17		2	1 / 4" NIPPLE
18		3	1 / 4" - 6mm FITTINGS
19	02250222-783	1	SOLENOID VALVE
20	02250226-360	1	SOLENOID VALVE COIL
21	SEE REF TABLE	1	COMPRESSOR
22	02250226-333	1	COMPRESSOR ELECTRICAL BOX COVER
23	SEE REF TABLE	1	COMPRESSOR START RELAY
24	SEE REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR
25	SEE REF TABLE	1	COMPRESSOR START CAPACITOR
26		4	WASHER 18x7x1mm
27		4	NUT M6
28	02250226-220	1	COMPRESSED AIR FILTER KIT (Y)
29	02250226-214	1	COMPRESSED AIR FILTER KIT (X)
30		1	90° 1 / 4" - 6mm ELBOW
31	02250228-014	4	COUPLING CLAMP
32	02250228-012	2	CONNECTION CIT

Key	Part Number	Qty	Description
33		4	ORING
34	02250228-406	1	HEAT EXCHANGER SUPPORT STEEL
35		2	REDUCTION 1 / 2" - 1 / 4"
36	02250228-067	1	GASKET FOR DRAIN
37	02250193-565	1	COMPRESSED AIR FILTER ELEMENT (X)
38	02250193-587	1	COMPRESSED AIR FILTER ELEMENT (Y)
39	02250226-145	1	CABINET REAR TOP
40	02250226-107	22	CABINET INSIDE
41		8	BOLT M4x12
42		8	BOLT M4x8
43	02250228-092	1	SETTING THE CONNECTION
44	02250207-887	1	EXPANSION VALVE
45	02250207-668	1	DRYER-DEHYDRATOR
46	02250222-534	1	FAN ON/OFF SWITCH
47	02250226-359	1	PLASTIC CONTROL PANEL
48	02250226-353	1	DIGITAL CONTROLLER
49	02250222-484	8	CABINET STUD AND NUT
50	02250226-284	1	BALL VALVE
51	02250226-140	1	CONTROLLER PANEL
52	02250227-953	1	CABLE GLAND PG11
53		4	RIVET NUT M8
54	02250227-761	1	CABINET LEFT
55	02250226-160	1	CABINET RIGHT
56	02250222-059	2	CABINET HANDLE
57	02250227-929	2	CABINET STRIPPING
58	02250226-122	1	CABINET TOP
59	02250222-070	8	CABINET FASTENER
60	02250228-036	3	CABLE STRAP
61		3	RIVET Ø3,5
62	02250227-973	1	POWER CABLE

8.3 ED/SPARE PARTS—RF-A-30

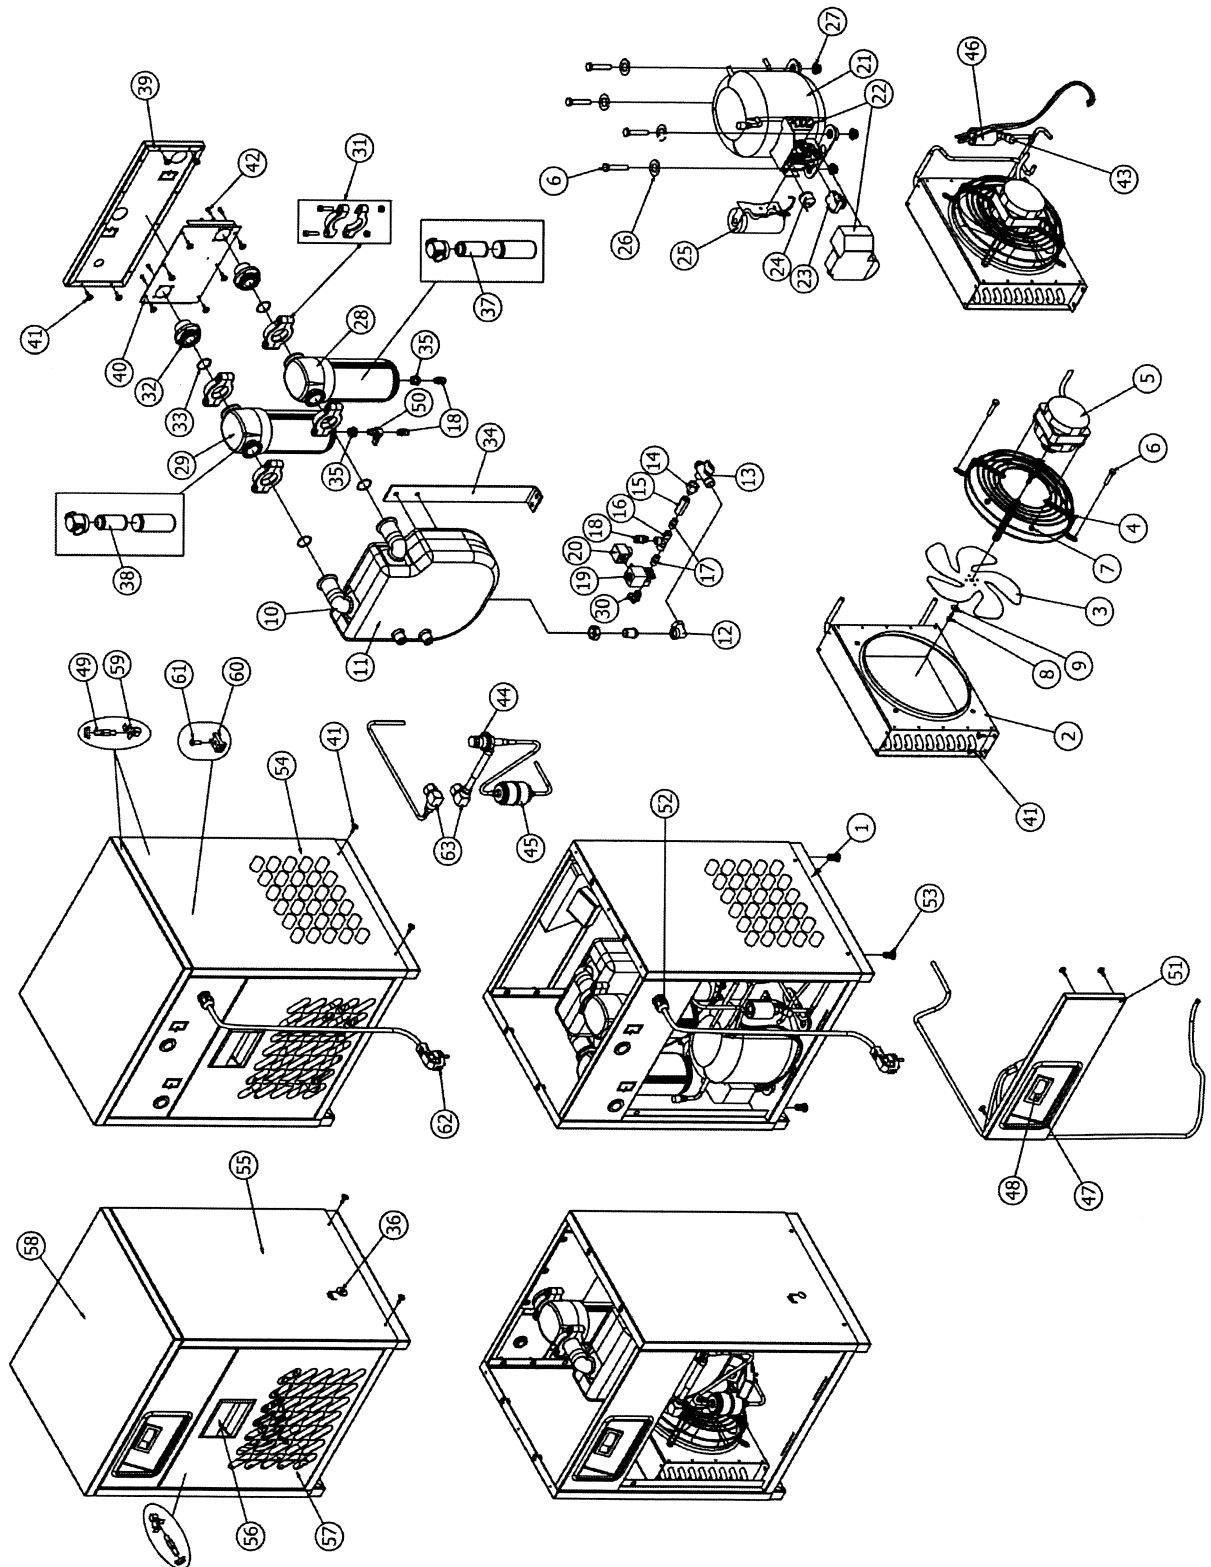


REFERENCE TABLE		230V/1Ph/60Hz	230/1Ph/50Hz	QTY
		02250225-549	02250225-576	
5	FAN MOTOR	02250226-328	02250226-365	1
21	COMPRESSOR	02250226-078	02250206-955	1
23	COMPRESSOR START RELAY	02250226-345	02250226-321	1
24	COMPRESSOR OVERLOAD PROTECTOR	02250226-362	02250226-309	1
25	COMPRESSOR START CAPACITOR	02250226-340	02250226-314	1

8.2 ED/SPARE PARTS—RF-A-20

Key	Part Number	Qty	Description
1	02250226-101	1	CABINET BASE
2	02250226-180	1	CONDENSER
3	02250226-248	1	FAN BLADE
4	02250226-246	1	FAN GRILL
5	SEE.REF TABLE	1	FAN MOTOR
6		8	BOLT M6x30mm
7		4	NUT M4
8		1	BOLT M4x14mm
9		1	WASHER 20x4,3x1,5
10	02250226-192	1	HEAT EXCHANGER
11	02250226-198	1	INSULATION OF HEAT EXCHANGER
12	02250226-278	1	ELBOW 2
13	02250221-199	1	DRAIN BALL VALVE
14		1	REDUCTION 3/8" - 1/4"
15	02250228-403	1	CHECK VALVE
16		1	1 / 4" T CONNECTOR
17		2	1 / 4" NIPPLE
18		3	1 / 4" - 6mm FITTINGS
19	02250222-783	1	SOLENOID VALVE
20	02250226-360	1	SOLENOID VALVE COIL
21	SEE.REF TABLE	1	COMPRESSOR
22	02250226-333	1	COMPRESSOR ELECTRICAL BOX COVER
23	SEE.REF TABLE	1	COMPRESSOR START RELAY
24	SEE.REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR
25	SEE.REF TABLE	1	COMPRESSOR START CAPACITOR
26		4	WASHER 18x7x1mm
27		4	NUT M6
28	02250226-220	1	COMPRESSED AIR FILTER KIT (Y)
29	02250226-214	1	COMPRESSED AIR FILTER KIT (X)
30		1	90° 1 / 4" - 6mm ELBOW
31	02250228-014	4	COUPLING CLAMP
32	02250228-012	2	CONNECTION CIT

Key	Part Number	Qty	Description
33		4	ORING
34	02250228-406	1	HEAT EXCHANGER SUPPORT STEEL
35		2	REDUCTION 1 / 2" - 1 / 4"
36	02250228-067	1	GASKET FOR DRAIN
37	02250193-565	1	COMPRESSED AIR FILTER ELEMENT (X)
38	02250193-587	1	COMPRESSED AIR FILTER ELEMENT (Y)
39	02250226-145	1	CABINET REAR TOP
40	02250226-107	22	CABINET INSIDE
41		8	BOLT M4x12
42		8	BOLT M4x8
43	02250228-092	1	SETTING THE CONNECTION
44	02250207-887	1	EXPANSION VALVE
45	02250207-668	1	DRYER-DEHYDRATOR
46	02250222-534	1	FAN ON/OFF SWITCH
47	02250226-359	1	PLASTIC CONTROL PANEL
48	02250226-353	1	DIGITAL CONTROLLER
49	02250222-484	8	CABINET STUD AND NUT
50	02250226-284	1	BALL VALVE
51	02250226-140	1	CONTROLLER PANEL
52	02250227-953	1	CABLE GLAND PG11
53		4	RIVET NUT M8
54	02250227-761	1	CABINET LEFT
55	02250226-160	1	CABINET RIGHT
56	02250222-059	2	CABINET HANDLE
57	02250227-929	2	CABINET STRIPPING
58	02250226-122	1	CABINET TOP
59	02250222-070	8	CABINET FASTENER
60	02250228-036	3	CABLE STRAP
61		3	RIVET Ø3,5
62	02250227-973	1	POWER CABLE
63	02250226-252	2	ROTOLOCK ADAPTOR2

8.2 ED/SPARE PARTS—RF-A-20

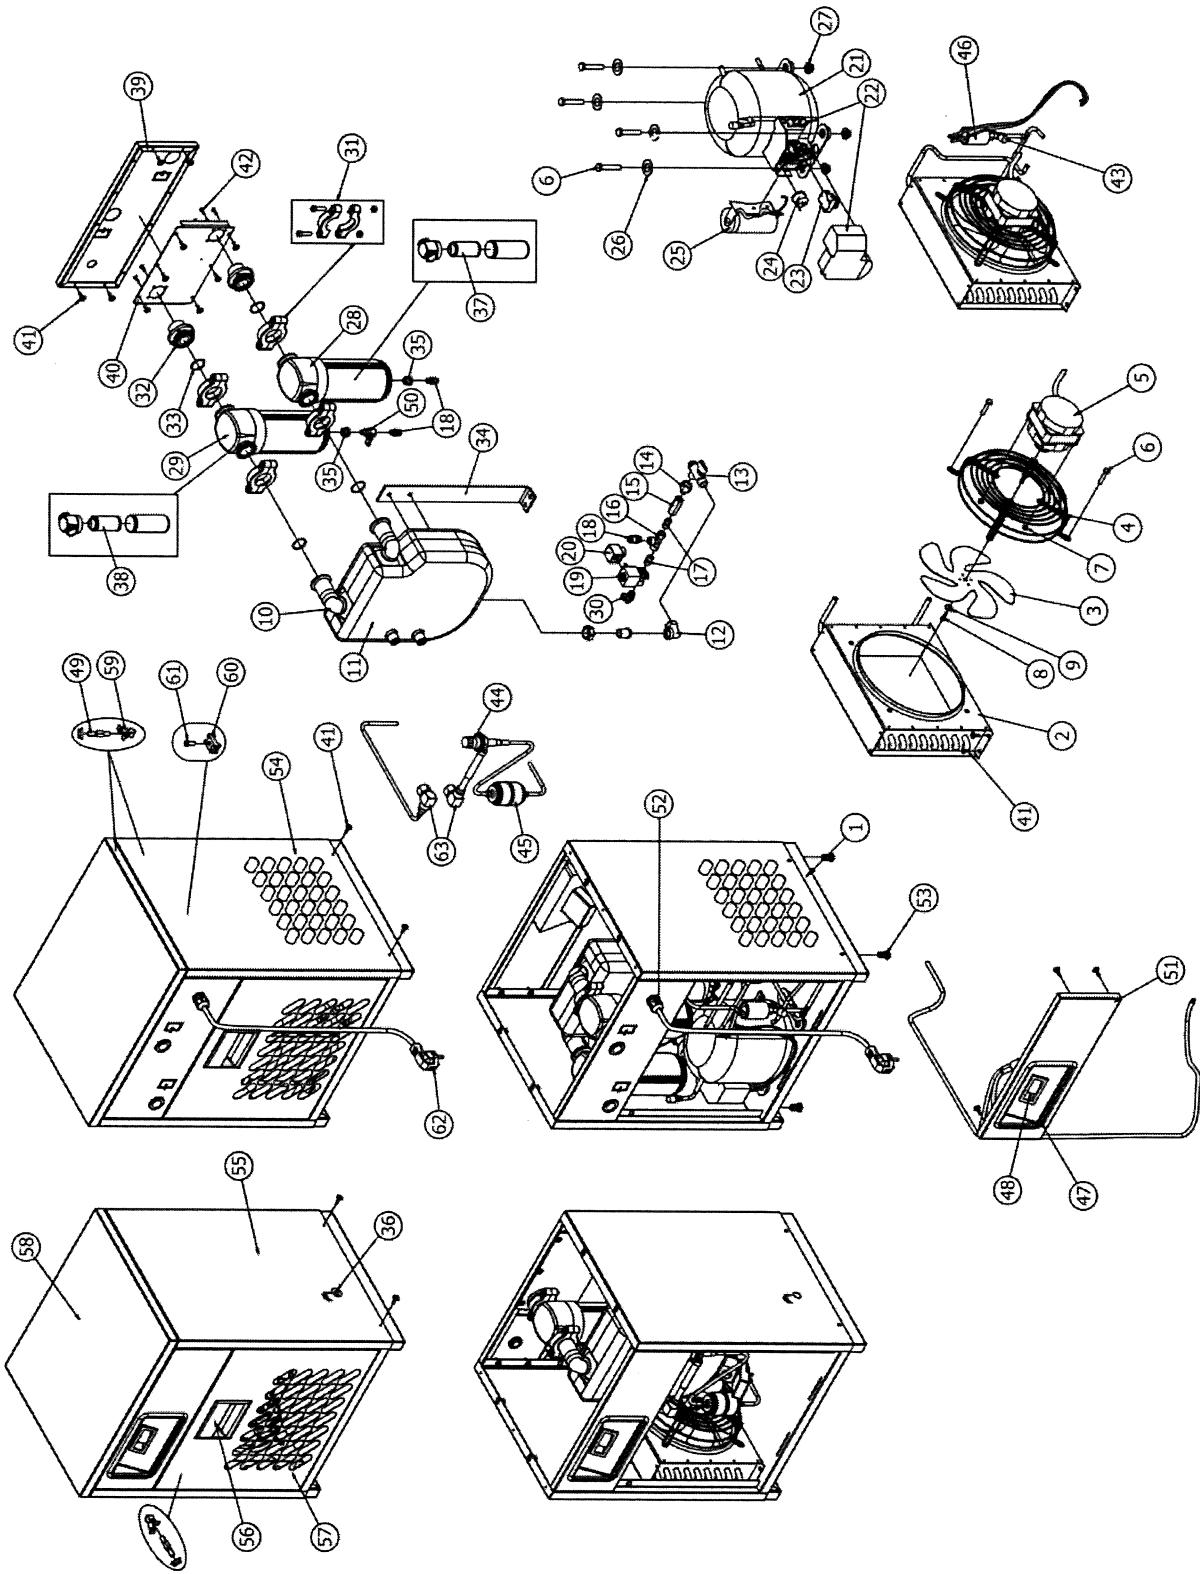

REFERENCE TABLE		230V/1Ph/60Hz	230/1Ph/50Hz	QTY
		02250225-548	02250225-575	
5	FAN MOTOR	02250226-328	02250226-365	1
21	COMPRESSOR	02250226-078	02250206-955	1
23	COMPRESSOR START RELAY	02250226-345	02250226-321	1
24	COMPRESSOR OVERLOAD PROTECTOR	02250226-362	02250226-309	1
25	COMPRESSOR START CAPACITOR	02250226-340	02250226-314	1

8.1 ED/SPARE PARTS—RF-A-10

Key	Part Number	Qty	Description
33		4	ORING
34	02250228-406	1	HEAT EXCHANGER SUPPORT STEEL
35		2	REDUCTION 1 / 2" - 1 / 4"
36	02250228-067	1	GASKET FOR DRAIN
37	02250193-565	1	COMPRESSED AIR FILTER ELEMENT (X)
38	02250193-587	1	COMPRESSED AIR FILTER ELEMENT (Y)
39	02250226-145	1	CABINET REAR TOP
40	02250226-107	22	CABINET INSIDE
41		8	BOLT M4x12
42		8	BOLT M4x8
43	02250228-092	1	SETTING THE CONNECTION
44	02250207-887	1	EXPANSION VALVE
45	02250207-668	1	DRYER-DEHYDRATOR
46	02250222-534	1	FAN ON/OFF SWITCH
47	02250226-359	1	PLASTIC CONTROL PANEL
48	02250226-353	1	DIGITAL CONTROLLER
49	02250222-484	8	CABINET STUD AND NUT
50	02250226-284	1	BALL VALVE
51	02250226-140	1	CONTROLLER PANEL
52	02250227-953	1	CABLE GLAND PG11
53		4	RIVET NUT M8
54	02250227-761	1	CABINET LEFT
55	02250226-160	1	CABINET RIGHT
56	02250222-059	2	CABINET HANDLE
57	02250227-929	2	CABINET STRIPPING
58	02250226-122	1	CABINET TOP
59	02250222-070	8	CABINET FASTENER
60	02250228-036	3	CABLE STRAP
61		3	RIVET Ø3,5
62	02250227-973	1	POWER CABLE
63	02250226-252	2	ROTOLOCK ADAPTOR2


Key	Part Number	Qty	Description
1	02250226-101	1	CABINET BASE
2	02250226-180	1	CONDENSER
3	02250226-248	1	FAN BLADE
4	02250226-246	1	FAN GRILL
5	SEE.REF TABLE	1	FAN MOTOR
6		8	BOLT M6x30mm
7		4	NUT M4
8		1	BOLT M4x14mm
9		1	WASHER 20x4,3x1,5
10	02250226-192	1	HEAT EXCHANGER
11	02250226-198	1	INSULATION OF HEAT EXCHANGER
12	02250226-278	1	ELBOW 2
13	02250221-199	1	DRAIN BALL VALVE
14		1	REDUCTION 3/8" - 1/4"
15	02250228-403	1	CHECK VALVE
16		1	1 / 4" T CONNECTOR
17		2	1 / 4" NIPPLE
18		3	1 / 4" - 6mm FITTINGS
19	02250222-783	1	SOLENOID VALVE
20	02250226-360	1	SOLENOID VALVE COIL
21	SEE.REF TABLE	1	COMPRESSOR
22	02250226-333	1	COMPRESSOR ELECTRICAL BOX COVER
23	SEE.REF TABLE	1	COMPRESSOR START RELAY
24	SEE.REF TABLE	1	COMPRESSOR OVERLOAD PROTECTOR
25	SEE.REF TABLE	1	COMPRESSOR START CAPACITOR
26		4	WASHER 18x7x1mm
27		4	NUT M6
28	02250226-220	1	COMPRESSED AIR FILTER KIT (Y)
29	02250226-214	1	COMPRESSED AIR FILTER KIT (X)
30		1	90° 1 / 4" - 6mm ELBOW
31	02250228-014	4	COUPLING CLAMP
32	02250228-012	2	CONNECTION CIT

02250201-297 R01

Subject to EAR, ECCN EAR99 and related export control restrictions."



8.1 ED/SPARE PARTS—RF-A-10

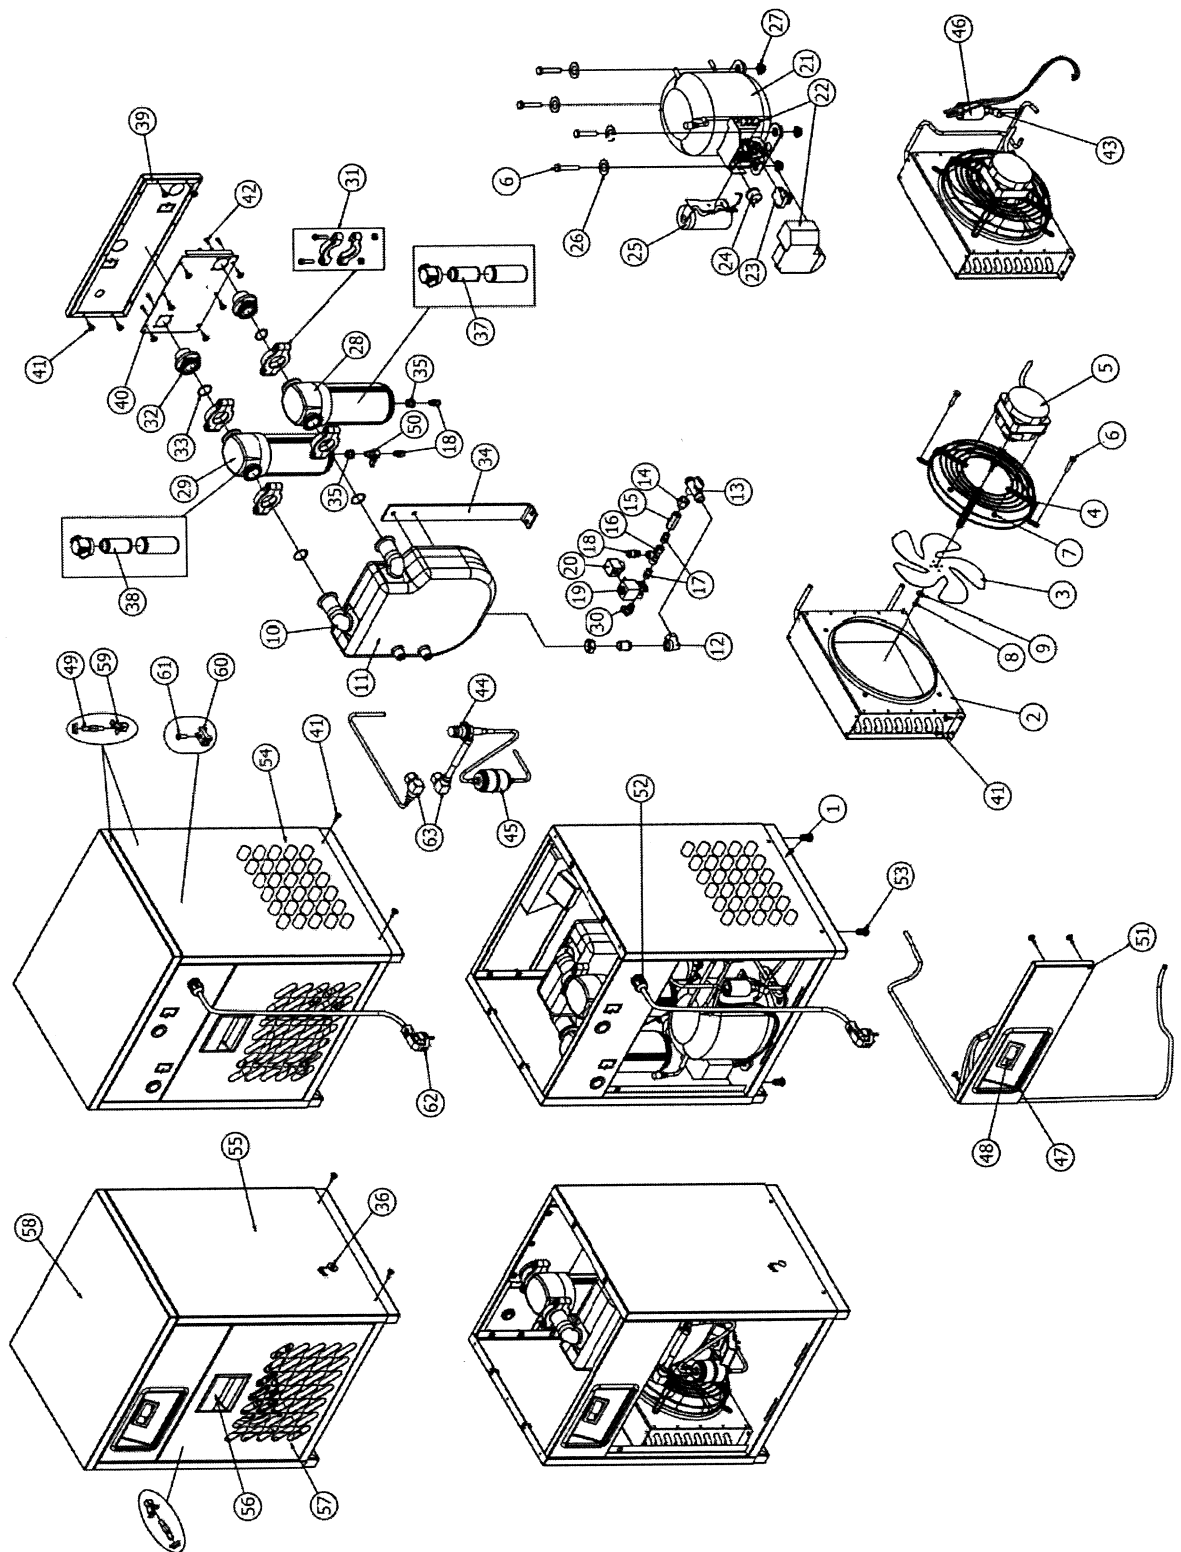

TECHNICAL DRAWINGS

7.3 SETTINGS

No	Temperature Set Points Page	What does it show?	Set Points (°C / °F)	Ideal value that should be seen (°C/°F)
1-	Inlet Air Temp. - Low Alarm Setpoint	The bottom limit of the Dryer air inlet temperature	0 / 32	35 / 95
2-	Inlet Air Temp. - High Alarm Setpoint	The top limit of the Dryer air inlet temperature	55 / 131	
3-	Exchanger Temp. - Low Alarm Setpoint	The bottom limit of the refrigerant gas temperature in the Evaporator	(-)3 / 26,6	2-10 / 36-50
4-	Exchanger Temp. - High Alarm Setpoint	The top limit of the refrigerant gas temperature in the Evaporator	20 / 68	
5-	Low Pressure Line Temp. - Low Alarm Setpoint	The bottom limit of the refrigerant gas temperature in the Low pressure side of the refrigerant circuit	(-)5 / 23	7-20 / 45-68
6-	Low Pressure Line Temp. - High Alarm Setpoint	The top limit of the refrigerant gas temperature in the Low pressure side of the refrigerant circuit	45 / 113	
7-	High Pressure Line Temp. - Low Alarm Setpoint	The bottom limit of the refrigerant gas temperature in the High pressure side of the refrigerant circuit	0 / 32	40-80 / 104-176
8-	High Pressure Line Temp. - High Alarm Setpoint	The top limit of the refrigerant gas temperature in the High pressure side of the refrigerant circuit	90 / 194	
9-	Ambient Temperature - Low Alarm Setpoint	The bottom limit of the Ambient air temperature (Dryer room temperature)	0 / 32	25 / 77
10-	Ambient Temperature - High Alarm Setpoint	The top limit of the Ambient air temperature (Dryer room temperature)	55 / 131	
11-	Exchanger Temp. - ECO Start Setpoint	Dryer stops automatically when the evaporation temperature goes below that temperature	2 / 36	
12-	Exchanger Temp. - ECO End Setpoint	Dryer starts automatically when the evaporation temperature goes above that temperature	8 / 46	
13-	Condenser Temp. - Dif. Setpoint	Temperature between refrigerant inlet and outlet of the condenser	5 / 5	

No	Time Parameters Page	Set Points
1-	Exchanger Temp. - Alarm Delay (Minute)	When the dryer is turned on Controller does not read evaporator temperature for sometime until the refrigerant circuit stabilizes 20
2-	ECO Start Delay (Minute)	Controller does not stop the dryer during that time after the evaporation temperature goes below the set temperature 10
3-	Low Pressure Line Temp. - High Alarm Delay (Minute)	When the dryer is turned on the controller does not measure Low and High temperatures for a period of time 10
4-	Restart Delay (Second)	When the dryer stops it does not re-start for some seconds because of safety 30
5-	Drain Off Time (Minute)	Timer drain is "off" during that time 3
6-	Drain On Time (Second)	Timer drain is "on" during that time 5
7-	Filter Change Period (Hour)	Warning to the customer to replace the elements of their filters 6000
8-	General Maintenance Period (Hour)	Warning to the customer to get a service from Sullair 20000

Problem	Possible Cause	Repair	Comments
The unit will not run or cycles off and on.	Excessive compressed air inlet temperature.	Design conditions and correction factors are described in this manual. Be sure that dryer is working in ambient temperatures below design conditions.	The dryer is designed for working into calculated design conditions. Should the conditions be exceeded, the dryer will be over-flowed, dew point will go up and protecting devices may trip.
	Excessive ambient temperature	Designed conditions and correction factors are described in dryer . Be sure that dryer is working lower than design conditions.	A high ambient temperature may cause the refrigerant system to operate at higher than normal pressures. Results will be a higher than normal evaporator temperature. Important: there should be adequate air circulation around the dryer, and proper ventilation in the equipment room should guarantee a low enough ambient temperature.
	Clogged condenser fins	Clear fins of all obstructions.	The clogged fins in the condenser will restrict the air passage and reduce the refrigeration capacity, causing high temperature in the evaporator. Fins should be periodically checked and cleaned.
	Shortage of refrigerant	Fix the leak and add a charge of refrigerant.	Loss of refrigerant will cause improper functioning. Dryers are equipped with a temperature switch which maintains the amount of refrigerant to maintain proper cooling of the compressor. A shortage of refrigerant may cause suction line to become very hot, causing the temperature switch to trip. A qualified refrigeration specialist should perform the necessary repairs.
Error sign occurs on digital temperature control device	The dew point is too low or too high.	Check refrigerant gas and make sure that the working conditions are within the correct range.	If there is not enough refrigerant-gas or if the working temperature and inlet temperatures are very high, the dew point will increase.

Problem	Possible Cause	Repair	Comments
High pressure drop	Excessive compressed air flow or too low air inlet pressure.	Check actual pressure and flow through the dryer.	This dryer is designed for a maximum air flow. If too much air is pumped into the dryer, water removal capacity may not be sufficient, resulting in liquid carry-over downstream. Check the rated flow of the air compressor.
	Freeze up	Check that compressor room ambient is above 41°F.	Frosting of the lines is an indication that controls are set too low. The following should be done by an experienced refrigeration technician.
		Fan switch could have failed in closed position keeping fan on.	Controls may be adjusted in the fields by means of the hot gas bypass valve. This is to be done by a qualified refrigerant technician.
The unit will not run or cycles off and on.	Clogged heat exchanger	Clean heat exchanger with a reverse air flow.	Dryer are supposed to be used with compressed air free of any aggressive contaminants. Some contamination may require extra maintenance of the heat exchanger. Contact your Sullair Distributor.
	Line disconnect switch is open.	Close the start or disconnect switch.	If the dryer is not operating, check the disconnect switch or circuit breaker to be certain it is on.
	Fuse or breaker is open	Replace fuse or reset breaker.	The fuse to the power line should be checked and replaced if needed. Never replace a burnt fuse with an oversized fuse.
	Faulty refrigerant compressor or controls.	Determine the cause and make correction	Failure of compressor to run may be caused by several factors. A qualified refrigeration specialist should check all electrical and refrigeration controls, or factory should be contacted if unit is in warranty.

Problem	Possible Cause	Repair	Comments
Water in system	Excessive free moisture	Check the separator and drain system and compressor after cooler ahead of the dryer.	In some system there may be an accumulation of free moisture in the line ahead of the dryer. If this moisture is pumped into the dryer intermittently, the water removal capacity may not be sufficient. A water separator should be installed in the line before the dryer.
	Excessive compressed air inlet temperature.	Be sure that dryer is working lower than design conditions	The dryer is designed to work for calculated design conditions. Should the conditions be exceeded, the dryer will be over-flowed, dew point will go up and protecting devices can switch off.
	Clogged condenser fins	Clear fins of all obstructions	The clogged fins in the condenser will restrict air passage and reduce refrigerant capacity causing water downstream. Fins should be periodically checked and cleaned.
	Shortage of refrigerant	Fix the leak and add a charge of refrigerant.	Loss of refrigerant will cause improper functioning. A qualified, refrigeration specialist should perform the necessary repairs, or factory should be contacted if the unit is in warranty.
	Refrigeration system is not functioning	Check to be certain refrigerant compressor is running	To check if the compressor is running, check compressor-on light. It is possible for the fan to be operating but not the compressor. Compressor not running can be caused by several factors. A qualified refrigeration technician should check all refrigerant and electrical controls
	Excessive pressure dew point	Readjust refrigerant evaporating pressure	The refrigerant pressure adjustment should be done by a qualified refrigeration engineer. This is a very sensitive device and incorrect settings may create other failures.

Problem	Possible Cause	Repair	Comments
Water in system	Compressed Air Inlet and outlet connections are reversed.	Check inlet and outlet connections.	This dryer is designed for air flow in one direction only. Inlet and outlet directions are identified on the dryer.
	Drain system is clogged or inoperative.	Restore a free flow of water condensate. Check water evacuation.	Drain system is timed solenoid valve, pneumatically assisted which has to be adjusted in accordance with values listed in this manual. The Solenoid valve includes a strainer that has to be periodically checked and cleaned. Membranes of pneumatically assisted drain have to be checked or replaced every 6 months.
	Bypass system is open	Check the valves	Important: Bypass piping should be installed around the dryer so the dryer can be isolated for service without shutting down the air supply. During dryer operation, valves must be set so all air goes into the system. Check tightness of the bypass system.
	Free moisture remains in pipe lines.	Blow out the system	Before the dryer is first started all free moisture should be blown out of the system.
	Excessive air flow	Check actual flow through the dryer.	This dryer is designed for a maximum air flow. If too much air is pumped into the dryer, water removal capacity may not be sufficient, resulting in liquid Carry-over downstream. Check the rated flow of the air compressor.

Problem	Possible Cause	Repair	Comments
Dryer is switched on but the refrigerant compressor does not turn on.	Clogged condenser fins or clogged water condenser.	Clear fins or water condenser of all obstructions.	The clogged fins in the condenser will restrict the air passage and reduce the refrigeration capacity, causing high temperature in the evaporator. Same will occur if water condenser is clogged with mud or dirt. Air condenser and water condenser should be periodically checked and cleaned. Protect water circuit by an adapted filter.
	Too much compressed air flow.	Check actual flow through the dryer.	This dryer is designed for a maximum air flow at design conditions. If too much air is pumped into the dryer, water removal capacity may not be sufficient, resulting in liquid carryover downstream. Check the rated output the air compressor.
	Faulty electrical wiring	Inspect the circuit	The compressor-on light should be wired into the refrigerant compressor circuit. See wiring diagrams in this manual.
	The electrical protection has tripped.	Reset the protection or replace the blown fuse.	The dryer is protected against high amp draw by fuse and/or overload relay that can trip in case of need. Reset or replace fuse once, but do not persist if it trips again, request assistance from a qualified refrigeration contractor.
Dryer is switched on but fan is not running.	Fan has to run if refrigerant high pressure reaches upper set point.	Check that compressed air flows through the dryer. Check that fan blades are free to move. Check the fan pressure switch.	Fan operates automatically to keep refrigerant pressure below the maximum value. The fan can stop if pressure is under the recommended setting.
When compressor starts, it vibrates a lot and makes mechanical noise.	Compressor is slugging liquid refrigerant at start-up.	Be sure the pre-heating period of at least 2 hours is respected	Refrigerant may move between receivers when refrigerant compressor is stopped and not heated, especially if stopped for a long time. This migration may cause liquid shock (slugging) in valves specially on large dryers containing more refrigerant.

7.2 TROUBLESHOOTING

Problem	Possible Cause	Repair	Comments
Dryer is switched on, indicator light is lit but the refrigerant compressor does not turn on.	The connection has inverted phases	Invert two phases	3-phase dryers are equipped with a phase controller to avoid the fans from turning in the opposite direction.
	Refrigeration unit is not functioning	Check refrigeration compressor	Several factors can cause compressor failure. A qualified refrigeration technician needs to check all the electrical and refrigerant circuit and controls.
	The refrigerant high pressure protection has tripped	The refrigerant safety high pressure switch has tripped.	The dryer is protected against excessively high refrigerant pressure. If the condenser efficiency has reduced, the switch will trip. Manually reset the switch
		In case of water cooled condensers, check the water control valve	
	Excessive ambient temperature	Be sure that dryer is working in temperatures lower than the design conditions. Designed conditions and correction factors are described in this manual .	A high ambient temperature may cause the refrigerant system to operate at higher than normal pressures. Results will be higher than normal evaporator temperature. Important: adequate air circulation around the dryer, and proper ventilation in the equipment room should guarantee a low enough ambient temperature.
Dryer is switched on but the refrigerant compressor does not turn on.	Excessive temperature on crankcase of compressor.	Allow time to compressor to cool down. Reason may be a possible incorrect adjustment of hot gas bypass valve or shortage of refrigerant	Compressor is protected against overly high temperatures of the crankcase by a thermal switch.
	Excessive compressed air inlet temperature.	Be sure that dryer is working in temperatures lower than design conditions.	The dryer is designed for working in calculated conditions (see description in this manual). If conditions are exceeded, the dryer will be overflowed, dew point will go up and protecting devices can switch off.

MAINTENANCE

7.1 MAINTENANCE

7.1.1 MAINTENANCE BY AN ENGINEER/TECHNICIAN

1. Maintenance and repairs should only be performed when the air dryer is shut down and depressurized and when the main power switch is turned OFF.
2. Use only the appropriate tools for maintenance and repair.
3. Before dismantling any part that has been pressurized, disconnect the pressure sources and depressurize the system completely. Shut off all valves and isolate the dryer.
4. Proceed carefully during maintenance and repair. Prevent dirt from entering by covering parts and orifices with a clean cloth, paper or tape.
5. Receiver tanks should never be welded or modified in any way.
6. Never leave tools, loose parts or cleaning rags in or on the air dryer.
7. Before connecting the dryer back online, check the setting of the control and safety devices as well as the pressure and the temperature of the compressed air circuit.
8. For dryers with water-cooled condensers—End caps of water condenser can be disassembled for cleaning with help of a water jet.

7.1.2 MAINTENANCE BY THE USER

1. Keep the dryer clean.
2. In case of more than 4 pounds of refrigerant, the dryer should be regularly checked to be leak free by qualified refrigerant engineer. Refer to section "Environmental protection" of this manual.
3. Every six months - check the correct operation of the condenser drain trap. Replace timer or solenoid valve in case of clogging or malfunctioning.
4. Every six months - check and clean the drain strainer by undoing the access screw and rinsing the filter with tap water to remove the trapped dirt from the inside.
5. Every month clean the air condenser with a brush or compressed air as soon as it's dirty or clogged. Take extra care not to bend the fins of the condenser heat exchanger.
6. Check the troubleshooting list in case of maintenance issues.
7. Check operating pressures, temperatures and time settings after maintenance. If operating and safety devices function properly, the air dryer may be used.
8. For water-cooled condensers—Use only clean water when cleaning the condenser. Water should be jet-streamed from the outlet side to the inlet side.

Table 7-1: Recommended Maintenance

Recommended Maintenance Activity	Weekly	Monthly	Semi-Annual	Annual
Air Condenser Cleaning		X		
Water condenser cleaning			X	
Replacement of Filter Element				X
Refrigerant Gas Leak (for dryers containing more than 4 lb / 1.49 kg of gas)				X
Refrigerant Gas Leak (for dryers containing more than 66 lb / 24.63 kg of gas)			X	
Drain control			X	
Cleaning drain strainer inside drain ball valve			X	
Cleaning or replacing drain MEMBRANE valve (250CFM / 7.08 CMM and larger models)			X	
Monitoring working conditions	X			

ANALOG INPUT PARAMETERS PAGE

1. 1. Channel Offset
2. 2. Channel Offset
3. 3. Channel Offset
4. 4. Channel Offset
5. 5. Channel Offset
6. 6. Channel Offset
7. 7. Channel Offset
8. 8. Channel Offset
9. 1. Channel Input Type
10. 2. Channel Input Type
11. 3. Channel Input Type
12. 4. Channel Input Type
13. 5. Channel Input Type
14. 6. Channel Input Type
15. 7. Channel Input Type
16. 8. Channel Input Type

CALIBRATION PAGE

1. 50mV Cal (Channel 1)
2. 0°C Cal. (Channel 1)
3. Ambient Temp. Cal. (Channel 1)
4. 1. RT Cal. (390 ohm)
5. 2. RT Cal. (390 ohm)
6. 3. RT Cal. (390 ohm)
7. 4. RT Cal. (390 ohm)
8. 5. RT Cal. (390 ohm)
9. 6. RT Cal. (390 ohm)
10. 7. RT Cal. (390 ohm)
11. 8. RT Cal. (390 ohm)

The 7th and 8th Parameters in the "Time Parameters Page" (Filter Change Period and Maintenance Period) and all the parameters in "Calibration Page" can not be edited unless the Digital Input 10 is activated (Configuration Enable).

While 'Filter Change Period' parameter is selected, pressing the buttons and simultaneously, resets the FILTER TIME to 0.0.

While 'Maintenance Period' parameter is selected, pressing the buttons and simultaneously, resets the RUN TIME to 0.0.

6.4 CONFIGURATION MODE

In order to enter into configuration mode,  button must be pressed at least 3 second duration. After this operation security code is asked. Security code is

adjusted by  and  buttons. After adjusting the security code and pressing  button, accesses the "General Parameters Page". Here,  and  buttons can be used to select the other pages. When a page is selected, pressing  button accesses the first parameter in that page. Successively pressing  button will display the other parameters in that page. After the last parameter or pressing button more than two seconds, reverts to the top of that page where a different page can be selected. When a parameter is

selected, its value can be edited by  and  buttons. In anywhere in the configuration pages, pressing  button quits the configuration mode and reverts to the normal operation.

If the entered security code is not correct, all the parameters except "Security Code" parameter in the "General Parameters Page" can be accessed but no modification is allowed.

The value of the security code is determined by the parameter "Security Code" in the "General Parameters Page". The factory setting of the security code is "10".

The Configuration Pages and the parameters in the configuration pages are given below.

GENERAL PARAMETERS PAGE

1. Language
2. Communication Address
3. Baud Rate
4. Parity
5. Message Text
6. Security Code

TEMPERATURE SET POINTS PAGE (FACTORY SETTINGS)

1. Inlet Air Temp. / Low Alarm Setpoint (32°F/0°C)

2. Inlet Air Temp. / High Alarm Setpoint (131°F/55°C)
3. Exchanger Temp. / Low Alarm Setpoint (27°F/-3°C)
4. Exchanger Temp. / High Alarm Setpoint (68°F/20°C)
5. Low Pressure Line Temp. / Low Alarm Setpoint (23°F/-5°C)
6. Low Pressure Line Temp. / High Alarm Setpoint (113°F/45°C)
7. High Pressure Line Temp. / Low Alarm Setpoint (32°F/0°C)
8. High Pressure Line Temp. / High Alarm Setpoint (194°F/90°C)
9. Ambient Temperature / Low Alarm Setpoint (32°F/0°C)
10. Ambient Temperature / High Alarm Setpoint (131°F/55°C)
11. Exchanger Temp. / ECO Start Setpoint (36°F/2°C)
12. Exchanger Temp. / ECO End Setpoint (46°F/8°C)
13. Condensor Temp. Diff. Set Point (5°F/5°C)

TIME PARAMETERS PAGE

1. Exchanger Temp. / Alarm Delay (Minute)
2. ECO Start Delay (Minute)
3. Low Pressure Line Temp. / High Alarm Delay (Minute)
4. Restart Delay (Second)
5. Drain Off Time (Minute)
6. Drain On Time (Second)
7. Filter Change Period (Hour)
8. General Maintenance Period (Hour)

DATE-TIME ADJUST PAGE

1. Minutes
2. Hours
3. Date
4. Month
5. Year
6. Confirm (Y/N)